

Gigaset

DE410 IP PRO

Gigaset pro

INSPIRING CONVERSATION.

Gigaset DE410 IP PRO – More than just a telephone

Your Gigaset DE410 IP PRO is an IP phone designed for professional use.

◆ **Easy to set up**

Use the automatic configuration via the Gigaset phone system or the default settings for approx. 200 preconfigured VoIP providers.

◆ **Web user interfaces for telephony and configuration**

Operate and configure your telephone from your PC with ease.

◆ **High Definition Sound Performance – HDSP**

Make phone calls with brilliant sound quality.

◆ **Phone functions for the professional user**

Use the call divert, conference call, automatic ringback, call reject and Do Not Disturb (DND) functions.

◆ **Multiple directories**

Manage your personal directory with up to 200 entries. Use an LDAP directory or online directories on the Internet.

◆ **Connection to a Gigaset T500 PRO or Gigaset T300 PRO Gigaset phone system**

Connect your telephone to a Gigaset phone system and make use of a shared line with colleagues and central management of your call lists or call switching, for example.

◆ **Network connection**

Connect your telephone to the local network via Ethernet. Connect a PC using your telephone as a 100 MBit Ethernet switch.

◆ **Protect the environment**

Reduce environmental pollution with the power-saving power adapter.

◆ **Individual settings**

Load your own ring tones.

Assign functions or frequently used numbers to the keys.




Further information about your phone can be found at

www.gigaset.com/pro/gigasetDE410ippro

Phone overview

Keys


 






- | | | | |
|----|---------------------------|---|--|
| 1 | Mute key | Activate/deactivate microphone (mute) | → page 35 |
| 2 | Headset key | Make call via headset | → page 33 |
| 3 | Speaker key | Activate/deactivate speaker | → page 35 |
| 4 | Volume key | Depending on the operating mode: Adjust the volume of the speaker, receiver, headset or ringer | → page 34 |
| 5 | Display keys | Activate display functions | → page 23 |
| 6 | Message Centre | Open call and message lists | → page 56 |
| 7 | Do Not Disturb key | Do Not Disturb (DND) function | → page 35 |
| 8 | Navigation key | Scroll through lists and entries. In idle status: | → page 25 |
| | |  Open redial list. | → page 43 |
| | |  Confirm or start action, select entry | → page 25 |
| | |  Open directory | → page 47 |
| 9 | End call/back key | End/reject call; cancel function; go back one menu level (press briefly); return to idle status (press and hold) | → page 26
→ page 25 |
| 10 | Consultation key | Initiate/end consultation call, put participant on hold | → page 38 |
| 11 | Conference key | Initiate conference call | → page 38 |


Phone overview

- 12 **Transfer key** Transfer call to another party → [page 39](#)
- 13 **Function keys** Programmable keys → [page 106](#)

Understanding Light Emitting Diodes (LEDs)





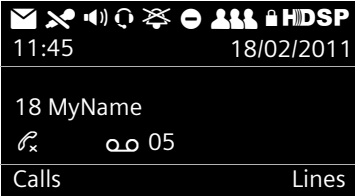





-  Flashes Incoming call. → [page 33](#)
- Lights up Call is being made via the speaker. → [page 35](#)
-  Lights up Call is being made via the headset. → [page 33](#)
-  Lights up The microphone is muted. → [page 35](#)
-  Flashes New message in the Message Centre. → [page 56](#)
-  Lights up "Do Not Disturb" function is activated. → [page 35](#)
-  Flashes Incoming call on the number programmed to this key. → [page 31](#)
- Lights up Call is being made on the number programmed to this key.

Understanding the display

- Display symbols (→ below) 
- Time 11:45 18/02/2011 ← Date
- Own number / Name 18 MyName ← Application area
- Missed calls (→ [page 43](#))  05 ← New Messages (→ [page 56](#))
- Display functions (→ [page 23](#)) Calls Lines

You set the time and date format using the Web configurator (→ [page 110](#)).

Understanding the display symbols

-  New message in the Message Centre. → [page 56](#)
-  The microphone is muted. → [page 35](#)
-  Call is being made via the speaker. Flashing: Incoming call. → [page 30](#)
-  Headset connected → [page 18](#)
-  Ringer deactivated. → [page 59](#)
-  "Do Not Disturb" function is activated. → [page 35](#)
-  Telephone in conference call. → [page 38](#)
-  Secure connection. → [page 34](#)
- HDSP** HDSP quality connection. → [page 34](#)
-  New messages on the network mailbox. The number is displayed to the right. → [page 54](#)
-  Missed calls. → [page 43](#)

Other icons may appear depending on the function. These are displayed alongside the corresponding description.

Contents

Gigaset DE410 IP PRO – More than just a telephone	2
Phone overview	3
Keys	3
Understanding Light Emitting Diodes (LEDs)	4
Understanding the display	4
Following safety precautions	7
Using the phone in different scenarios	8
First steps	10
Check the package contents	10
Setting up and connecting the device	11
Wall mounting	17
Connecting a headset	18
Setting up the device (for the first time)	19
Proceeding	22
Using the phone	23
Operating via the keypad and display menu	23
Menu tree	28
Operating via the PC	29
Making calls	30
Calling	30
Receiving incoming calls	33
Ending a call	34
Using functions when making a telephone call	34
Making a call to multiple participants	36
Setting up call divert (CD)	40
Using the call lists	43
Viewing entries	43
Dialling a number from a list	45
Copying an entry from the call list to the directory	45
Deleting an entry or list	46
Using directories	47
Using the local directory	47
Using an LDAP directory	50
Using online directories	51
Managing messages	54
Managing voice mails on the network mailbox	54
Accessing messages via the Message Centre	56
Operating door interphones	57

Contents

Configuring basic settings	58
Setting the date and time	58
Setting the ringer	59
Activating/deactivating advisory tones	61
Renaming or deleting ring tones	61
Setting the display	62
Setting the language	63
Resetting the device to the default settings	64
Showing information on the device	64
Configuring settings for the local network	65
LAN settings	66
Web configurator – configuring the phone on a PC	72
Starting the Web configurator	72
Understanding the Web configurator menu tree	73
Running the setup assistant	75
Configuring phone settings via the Web configurator	80
Network and connectors	80
Telephony	90
Messaging	100
Services	101
Function keys	106
System settings	109
Checking the status of the phone	119
Service (Customer Care)	121
Questions and answers	121
Protecting our environment	122
Appendix	123
Caring for your telephone	123
Contact with liquid	123
Authorisation	123
Using insert strips	123
Using Gigaset QuickSync – additional functions for the PC interface	124
Key combinations for phone system functions	124
Specifications	126
Open Source Software	126
Accessories	133
Glossary	134
Index	148

Following safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone.



Use only the power adapter indicated on the device.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical Data").



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



If you give your phone to a third party, make sure you also give them the user guide.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.

Please note


The Ethernet cable supplied is intended for connecting a PC. To connect the telephone to the local network use shielded cables exclusively.

Using the phone in different scenarios

Using your phone in a professional environment with phone system and server structure

If you use your Gigaset DE410 IP PRO in a corporate network with a telephone infrastructure, your phone incorporates functions and data from the phone system and servers.

In a corporate environment, the VoIP accounts and most of the settings are configured centrally by the phone system.

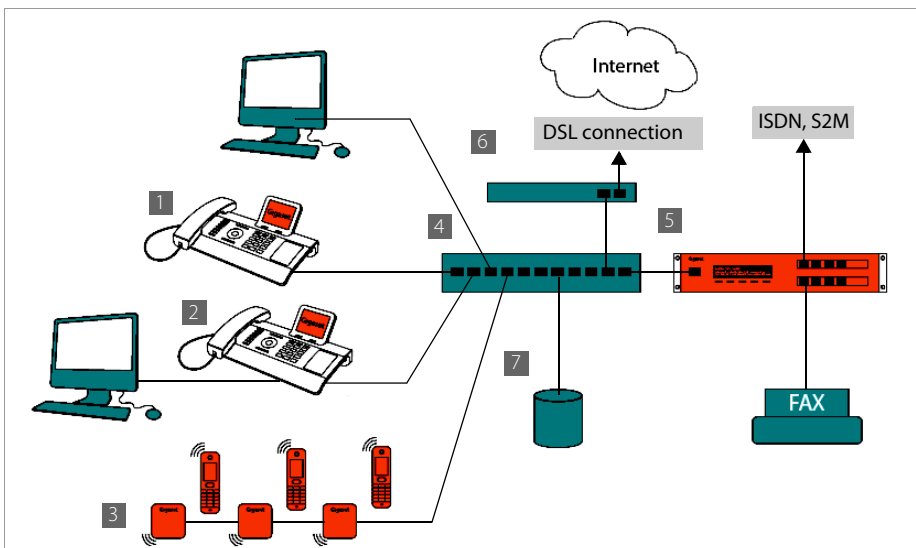


- 1 Gigaset IP telephone
- 2 Gigaset IP telephone with integrated switch (Gigaset DE410 IP PRO).
Your PC is connected directly to the phone, providing you with an additional LAN connection in your network.
- 3 DECT IP bases for connection to DECT handsets
- 4 Ethernet switch
Supports Quality of Service (QoS), 100 Mbit or Gigabit Ethernet and PoE (Power over Ethernet).
- 5 Phone system (e.g., Gigaset T500 PRO)
Forms Internet telephony, ISDN or S2M connections. Analogue devices can be connected. A network connection is established using Ethernet.
- 6 Acts as a gateway to the Internet for the connected devices. Routes VoIP calls from the phone system to the Internet.

- 7 File, e-mail and workgroup servers, or NAS systems, can be seamlessly integrated into the phone system architecture. As a result:
- Invitations to conference calls can be organised via the phone system
 - The phone system can be backed up to a server or the system can be started via the network
 - Online directories (LDAP) can be managed centrally

Using your phone in a simplified environment without a phone system

You can also use your Gigaset DE410 IP PRO without a phone system.

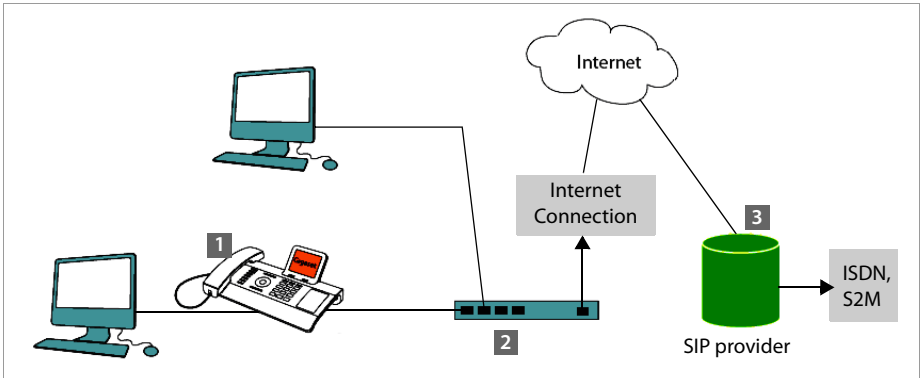

- 1 Gigaset IP telephone with integrated switch (Gigaset DE410 IP PRO). Your PC is connected directly to the phone, providing you with an additional LAN connection in your network.
- 2 Acts as a gateway to the Internet for the connected devices. Routes VoIP calls from the phone to the Internet.
- 3 The SIP provider transfers calls from the Internet and establishes a connection with the standard telephone network.

In this scenario, you must **manually configure** the VoIP accounts for your phone. You can create up to 6 VoIP accounts on your phone.

First steps

Check the package contents



Telephone: Gigaset DE410 IP PRO



Receiver with cable for connection to the phone



Ethernet cable for connecting a PC




Wall bracket
and

Tool for fixing the handset retainer when
mounting the device on the wall.



Insert strips for labelling
the function keys (with protective film)

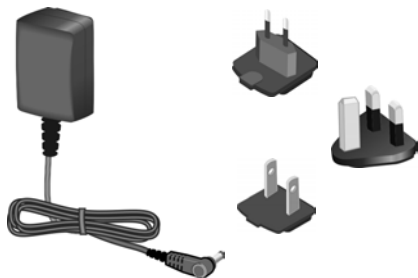**Optional:**

Power adapter for connecting the phone to the mains power supply (if required) with three different plug-in modules (Europe, Great Britain, USA)

The device is powered by PoE (Power over Ethernet) if it is connected to a switch with PoE-functionality (→ [page 15](#)).

Firmware update

Whenever there are new or improved functions for your Gigaset, firmware updates are made available for you to download to your phone ([page 117](#)). If this results in operational changes to your phone, a new version of this user guide or the necessary amendments are published on the Internet at www.gigaset.com/pro.

Select the product to open the relevant product page for your telephone, where you will find a link to the user guide.

To find out what version of firmware is currently loaded on your phone, see [page 119](#).

Setting up and connecting the device

The phone is designed for use in dry rooms in a temperature range of $\pm 0^{\circ}\text{C}$ to $+45^{\circ}\text{C}$.

► Set up the phone at a central point where a connection to the local network is available.


Warning

- ◆ Never expose the Gigaset DE410 IP PRO to the following:
heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Please note

You can also mount your Gigaset DE410 IP PRO on the wall (→ [page 17](#)).

Connecting the receiver

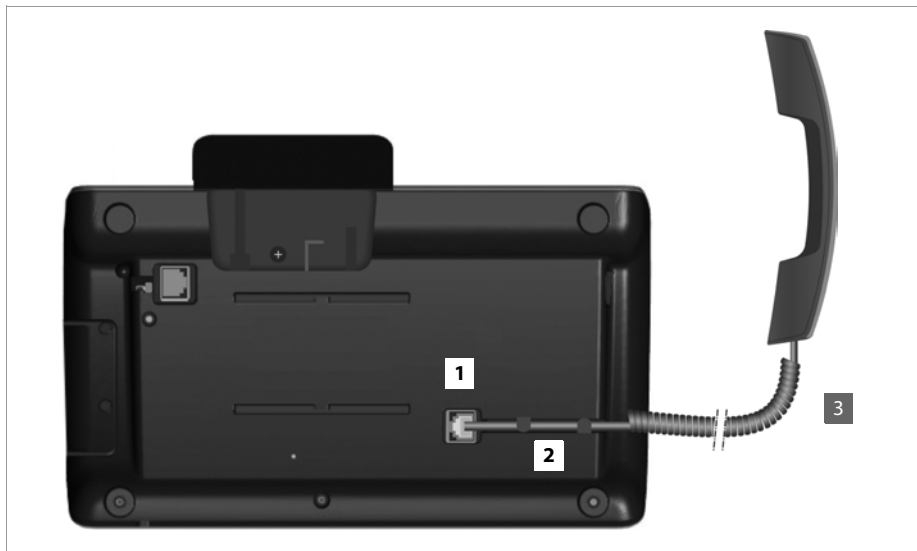


- 1** Insert the connector, which can be found on the longer straight end of the connection cable, into the connection port on the bottom of the phone.
- 2** Place the straight part of the cable in the cable recess provided.
- 3** Insert the other jack on the connection cable into the port on the receiver.

Connecting the network cable

To make calls via VoIP, your phone must have Internet access. This connection is established in the local network via a gateway.

You connect your phone to the same local network as the gateway. See the **Using the phone in different scenarios** section on **page 8** for an overview of the different options.

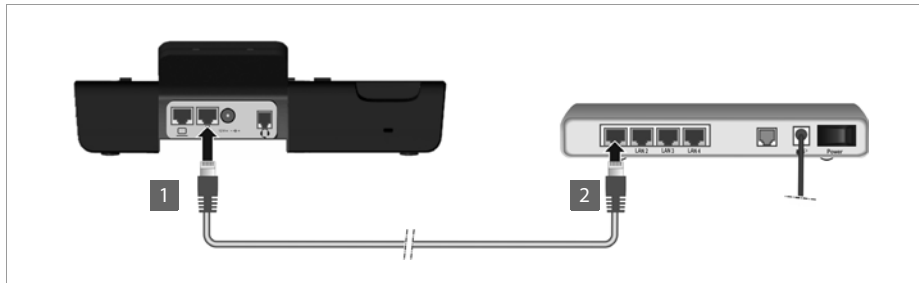

- 1** Attach one end of the Ethernet cable to the right-hand LAN port on the rear of the phone.
- 2** Attach the other end of the Ethernet cable to a LAN port on your network Ethernet switch or on the router itself.




Please exclusively use a shielded cable for the connection.

Warning

If you connect your Gigaset DE410 IP PRO to a PoE-capable Ethernet switch (PoE class IEEE802.3af), it will be supplied with power via PoE (Power over Ethernet). The PoE network must not exceed the premises boundaries.

Connecting the PC

Your phone has an integrated two-port switch. This allows you to connect your PC to the local network via the phone and avoid using additional connection ports on the switch or router. The Ethernet cable supplied is intended for this connection. Do not use this cable to connect the telephone to the local network (→ [page 13](#)).

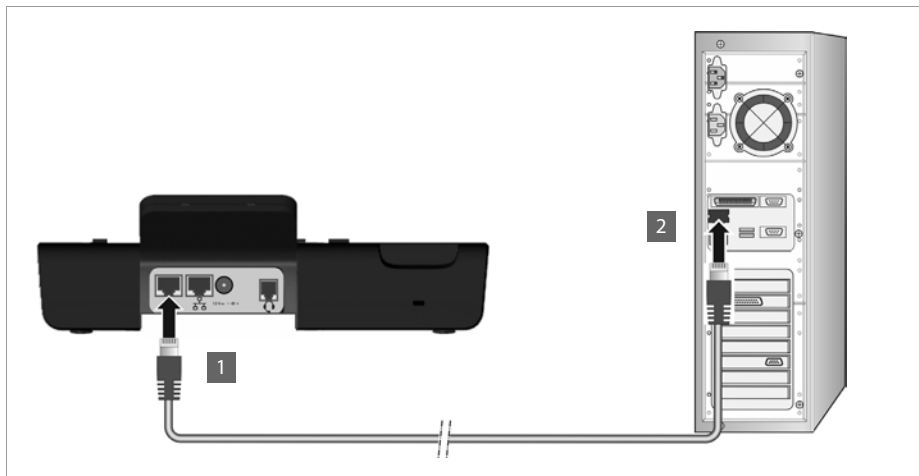

- 1 Connect an Ethernet cable to the left-hand LAN port on the rear of the phone.
- 2 Connect the other end of the Ethernet cable to a LAN port on the PC.




— **Please note** —

You can operate and configure your Gigaset DE410 IP PRO using this or any other PC within the local network. For more information please see the chapter [Web configurator – configuring the phone on a PC](#), → [page 72](#).


Connecting a device to the mains power supply (if required)

Your Gigaset DE410 IP PRO is supplied with sufficient power by PoE (Power over Ethernet) and does not need to be connected to the mains power supply. **Prerequisite:** The device is connected to an Ethernet switch with PoE functionality (PoE class IEEE802.3af) (→ [page 13](#)).

To connect your device to the mains power supply, if required, a power adapter is supplied with three different plug-in modules for Europe, Great Britain and the USA. First attach the appropriate plug-in module to the power supply unit.

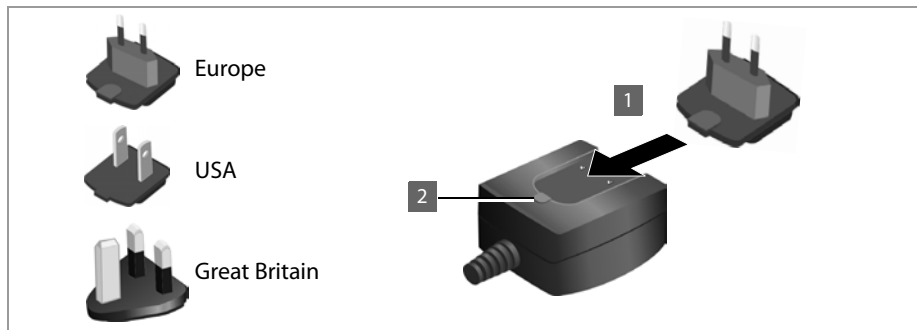

- 1 Slide the required plug-in module into the recess on the underside of the power supply unit until it clicks into place.
- 2 To remove the plug-in module again, press on the button marked **Push** and pull the plug-in module out of the power supply unit.

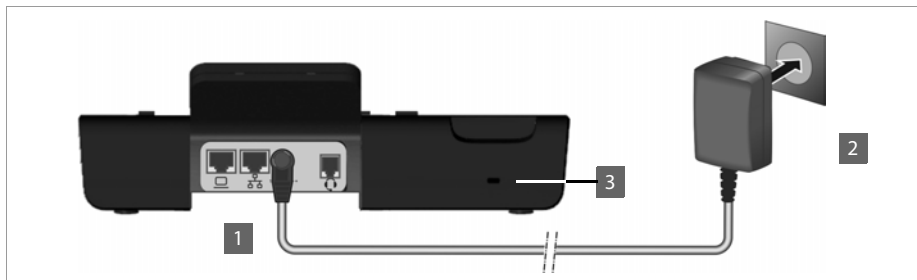

- 1 Connect the power adapter to the port on the rear of the phone.
- 2 Then insert the plug into the mains socket.

12V \equiv $--$ \ominus $+$

Warning

Use only the power adapter **supplied**.

Please note

You can safeguard your device against theft by fitting a Kensington lock. The corresponding hole can be found on the rear of the device (3).

First steps

Connecting extension modules (optional)


You can increase the number of programmable keys using extension modules (max. two; can be ordered as accessories → [page 133](#)). Each module includes 14 additional programmable keys. The function keys can be programmed using the Web configurator (→ [page 106](#)).



Extension module

The package contains:

- ◆ One extension module
- ◆ One connection frame with four fastening screws
- ◆ One connection cable
- ◆ Insert strips

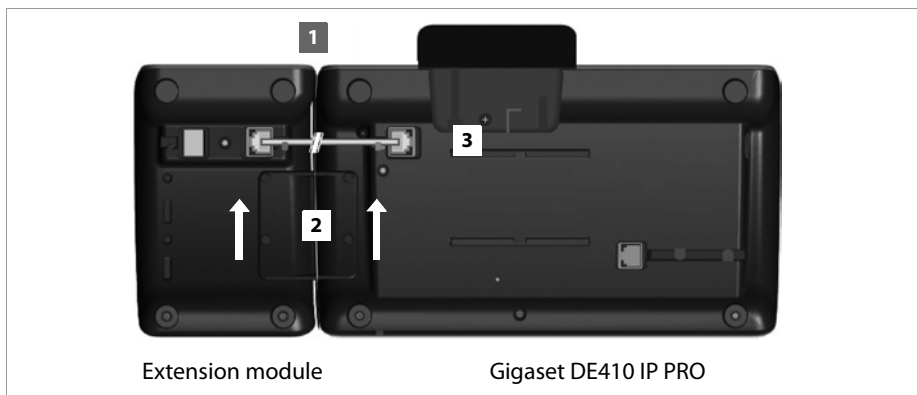

Extension module

Gigaset DE410 IP PRO

- 1** Position the extension module to the right of the phone (on left when viewed from below), so that the module and phone are the same height and meet in the centre.
- 2** Insert the clasps on the connection frame into the respective notches on the phone and module and push the connection frame upwards until it clicks into place. Secure the connection frame with the screws provided.
- 3** Establish the connections using the cable supplied.

Please Note


If the extension module does not work after installation, restart your device (disconnect it from the mains power supply and reconnect it).

Wall mounting

It is also possible to mount the Gigaset DE410 IP PRO on the wall using the supplied wall bracket.

- ▶ Unplug the cables from the phone before you begin.

1

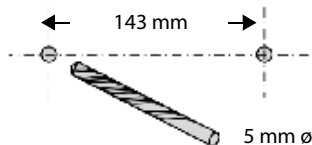


- ▶ Drill two dowel holes and insert dowels. You can use the wall bracket as a drilling template.

2



- ▶ Thread the cables through the cable guides on the back of the bracket and screw it to the wall.

3

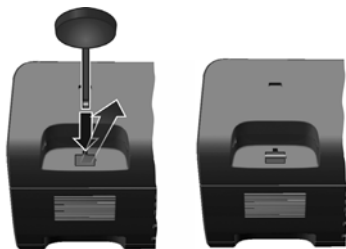

- ▶ Remove the handset retainer from the cradle using the tool provided, and replace it with the ridge pointing upwards.


4



- ▶ Attach the phone to the wall bracket by first hooking it onto the hooks at the bottom and then tilting the top back towards the wall and pushing it downwards.
- ▶ Reconnect the cables.

Connecting a headset

You can connect a headset via the RJ9 connector of your Gigaset DE410 IP PRO.

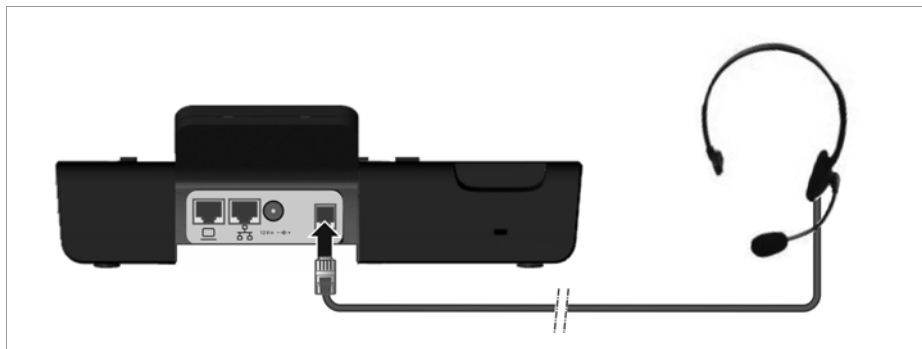

- ▶ Connect the cable for the headset to the RJ9 connector on the phone.




Setting up the device (for the first time)

Your device will start **automatically** as soon as it is connected to the mains power supply. Please be aware that the device is powered by PoE (Power over Ethernet). This means that it is supplied with power as soon as it is connected to an Ethernet switch with PoE-functionality. The first time you use the device, an installation wizard will start automatically and guide you through the necessary installation steps.

Configuring language and time zone settings



- ▶ Use the navigation key to select the required language. To do this, press up or down on the navigation key (⤿). Further information about the navigation key can be found on → [page 25](#).
- ▶ Press the display key under **OK** to confirm your selection. You can also use the OK function on the navigation key (by pressing ✓ in the centre of the key).

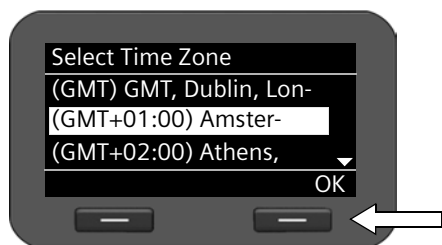

- ▶ Use the navigation key to select the required time zone.
- ▶ Press the display key under **OK** to confirm your selection.
- ▶

When you have made your selection, press the end key (⏪) to return to the last entry screen. You can correct your selection if necessary.

Please note

The date and time are automatically set by a time server. You can select a time server using the Web configurator or deactivate this function (→ [page 110](#)).

Establishing a connection to the local network

Your phone must be connected to the local network before it can connect to the Internet and before you can operate it from a PC.

The device checks to see if a network connection already exists. The network connection is automatically established if the phone has automatically been assigned an IP address from a DHCP server in the network. If this is the case, the following screen will not appear and you can skip to → [page 21](#).

Please note


The following network configuration is the default setting on your device: LAN with IP protocol version 4 (IPv4) and DHCP.

If your phone has no network connection, you will need to configure the network manually. Depending on the type of network, you will need the following information about the configuration:

- ◆ If the network uses IP protocol version 4 (IPv4) with a static IP address, you will need:
The device IP address, the network subnet mask, the IP addresses of the standard gateway and DNS server.
- ◆ If the network uses IP protocol version 6 (IPv6):
IP addresses automatically: select **IPv6 as Network Type**. The connection is then established automatically.
IP addresses statically: the device IP address, the address prefix length and the DNS server IP address.

If there is still no network connection, you will then be asked whether you wish to configure the connection manually.

- ▶ Select **Yes** if you have the required information.
- ▶ Select **No** if you want to use the display menu to configure the network at a later date (→ [page 65](#)).

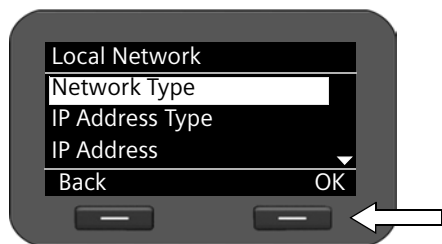

If you selected **Yes**, you can configure the network immediately.

Depending on your selection, additional screens may be displayed so you can enter the required information.

More detailed information on LAN configuration can be found on → [page 65](#).

- ▶ Once you have configured all settings, press the display key under **OK**. Your settings are saved.

Your device is now connected to the local network and can be configured for Internet telephony.

Configuring Internet telephony

Before you can use the Internet to phone anyone over the Internet, the fixed line network or the mobile phone network, you need the services of a VoIP provider.

Prerequisite:

- You have a phone system in your network that provides VoIP accounts for your device, or
- You have registered with a VoIP provider (e.g., via your PC) and set up a VoIP account.

The device searches the network for a provisioning file and checks whether VoIP accounts already exist. If the telephone has existing VoIP accounts, these accounts are configured automatically. You can now make calls with your phone via the Internet.

If the telephone has no existing VoIP accounts, you must configure them manually. The Web configurator's installation wizard will help you with this (→ [page 75](#)).

Proceeding

Now you have successfully set up your phone, you can adapt it to your personal requirements. Use the following guide to quickly locate the most important topics.

If you are unfamiliar with menu-driven devices such as other Gigaset telephones, you should first read the section entitled **Using the phone** on **page 23**.

Operating the phone via the keypad and display menu → **page 23**

Operating the phone via the PC → **page 29**

Making calls → **page 30**

Setting up and using directories → **page 47**

Setting ring tones → **page 59**

Setting up VoIP accounts → **page 75**

Loading your own sounds → **page 116**

If you have any questions about using your phone, please contact our Customer Care team (→ **page 121**).

Using the phone

You have a **range of options** for operating and configuring your Gigaset DE410 IP PRO in a way that is convenient for you.

- ◆ The keypad and display allow quick and clear access to your phone's features.
- ◆ The Web user interface provides access from a PC and helps you easily configure your phone (→ [page 29](#)).
- ◆ If your phone is connected to a Gigaset T300 PRO or Gigaset T300 PRO phone system, you can also use the capabilities of the phone system, such as Call Manager, centrally-stored call lists, conference scheduling and function key assignment.

The option you choose will depend on the situation.

Operating via the keypad and display menu


Display and display keys

The display gives you quick access to all the functions on your phone, particularly the menu functions.

In idle status, icons on the display indicate the status of your phone (→ [page 4](#)). In addition, the time is displayed.

Use the display keys to activate the phone's functions and to navigate through the menu. Different functions are available depending on the operating situation. These functions are displayed at the bottom of the screen.

Example

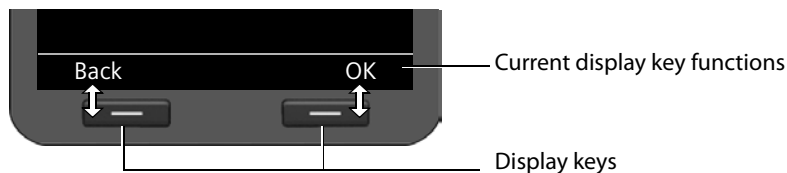


Some important display keys:


- | | |
|----------------|--|
| Options | Open a menu for further functions. |
| OK | Confirm selection. |
| < C | Delete key: Delete one character at a time from right to left. |
| Back | Skip back one menu level or cancel the operation. |
| Save | Save entry. |
| → □ | Copy the displayed entry to the directory. |



Using the phone


Writing and editing text

A text editor is provided for entering text via the keypad.

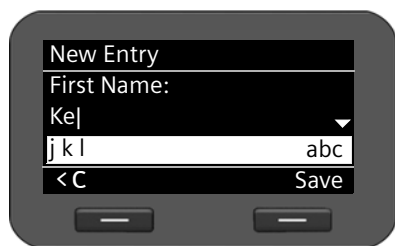


 Enter the text.

   Each key between  and  is assigned several letters and digits. Press the relevant key a certain number of times to enter a particular character.

For example $k = 2 \times$ the  key.

The characters available are shown in the editor field. The highlighted character is inserted to the left of the cursor.

Deleting/correcting characters

 Press the display key. The **character** to the left of the cursor is deleted. Press and **hold** to delete the **word** to the left of the cursor.

Entry mode

 
A range of entry modes are available depending on the operating situation. The current mode is displayed on the right-hand side of the editor field.

Abc Letters, first letter upper case, others lower case, e.g., for entering names.

abc Lower case only, e.g., for entering e-mail addresses.

123 Digits only for entering numbers.


Switching entry mode

 Press the hash key. The text entry mode will change.

Moving the cursor


 Press the navigation key **briefly**: moves the cursor **one character at a time**.

Press and **hold** the navigation key: moves the cursor **word by word**.

 Press the navigation key: moves the cursor **line by line**. The cursor stays in a horizontal position.

Entering special characters

 Press the star key. The table of special characters is displayed.

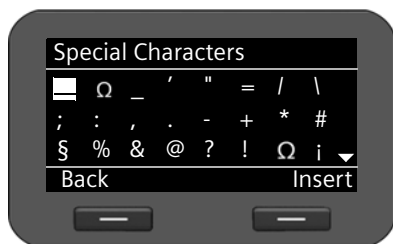

Insert

Select the required character.

Press the display key. The selected character is inserted at the cursor position.

Navigation key



The navigation key enables you to access important telephone functions quickly. You can use it to scroll through lists and directories with ease.

In idle status



Open redial list



Open main menu



Open directory

In menus and lists



Depending on the operating situation:

OK, **Yes**, **Save**, **Select** or **Change**.

Copy a number that has been entered or is shown in the display into the directory.

Press **briefly**:

Navigate to the line above/below.

Press and **hold**:

Scroll up/down the list one line at a time.

In input fields



Move the cursor up/down line by line



Press **briefly**:

Move the cursor to the left/right **one character at a time**.

Press and **hold**:

 
Move the cursor to the left/right quickly.

Understanding the navigation key

The following illustrations demonstrate how to use the navigation key:



Press the centre of the navigation key.



Press down/up/left/right on the navigation key.


Using the phone

Using the menus

Your telephone's functions are accessed using a menu that has a number of levels.

Opening the main menu

- ▶ When the phone is in idle status, press the centre of the navigation key ✓.

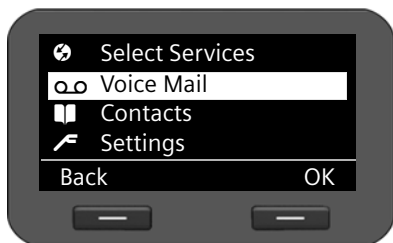

The display menu functions are shown as a list with the respective icons.

The selected function is highlighted via inverse display.

Accessing a function or opening the corresponding submenu

- ▶ Navigate to the required entry using the navigation key (⊙) and press the **OK** display key or the ✓ navigation key.

Back to the previous level

- ▶ Press the **Back** display key or **briefly** press the end key (←).

The current operation is cancelled and you will return to the previous menu level.

You can revert to idle status from the main menu.

Reverting to idle status

You can revert to idle status from anywhere in the display menu as follows:


- ▶ Press and **hold** the end key (←).

Or:

- ▶ Do not press any key: After 3 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display keys **OK**, **Yes**, **Save** or **Change** or the navigation key ✓ are lost.

Scrolling through lists

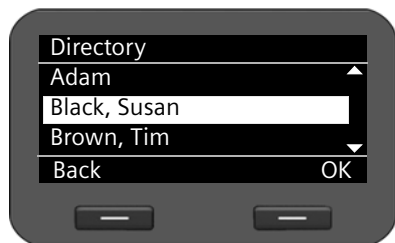

If it is not possible to view all of the functions/list entries at the same time (list is too long), arrows appear on the right-hand side. The arrows indicate the direction in which you need to scroll to view the rest of the entries in the list.


Understanding the operating steps

The operating steps used to navigate through the display menu are shown in abbreviated form.


For example, setting the ringer volume

✓ → Settings → Audio Settings → Ringer Settings → Volume

means:

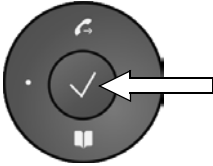




- ▶ Press the centre of the navigation key to open the main menu.

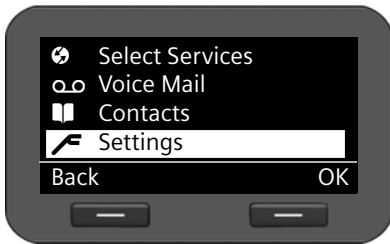

- ▶ Navigate up/down using the navigation key (⌂) until the **Settings** submenu is selected.
- ▶ Press the display key **OK** to confirm your selection.



- ▶ Continue to navigate through the menu using the navigation and display key until you reach the **Volume** submenu.

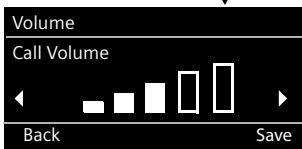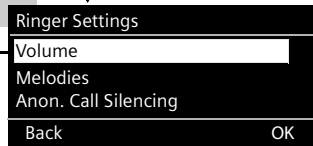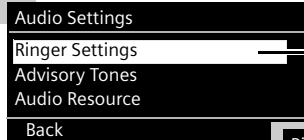

Menu tree

The following menu tree shows all the components of the display menu.

Select Services	Next Call anonymous			→ page 36
	All Calls anonymous			→ page 36
	Call Divert			→ page 40
	Call Waiting			→ page 37
	Active Ringbacks			→ page 33
Voice Mail				→ page 54
Contacts	Directory			→ page 47
	LDAP Directory			→ page 50
	Online directories			→ page 51
Settings	Date / Time			→ page 58
	Audio Settings	Ringer Settings	Volume	→ page 59
			Melodies	→ page 60
			Anon. Call Silencing	→ page 60
		Advisory Tones	→ page 61	
		Audio Resource	→ page 61	
	Display	Backlight	→ page 62	
		Contrast	→ page 63	
	Language	→ page 63		
	Local Network	→ page 66		
	Reset	→ page 64		
Info	→ page 64			

You can choose any name

The name of these menu entries depends on Web configurator settings
→ page 102.

Operating via the PC

You can operate the main functions of your phone from your PC by using the Web configurator.

Starting the Web configurator

To start the Web configurator, you need the IP address of your phone. You will find this via the display menu of the telephone in the LAN settings for the device:

✓ → **Settings** → **Local Network** (→ [page 66](#)).

Please note

The IP address for your device can sometimes change, depending on the settings of the DHCP server in your network.

Accessing the Web configurator:

- ▶ Open the Internet browser on your PC.
- ▶ Enter the IP address in the address field:

Example: 

The login screen appears.

- ▶ Select the appropriate language.
- ▶ Select **User** as the user type and enter the corresponding password.
The default setting for the password is **user**, but this can be changed.
- ▶ Click on **OK**.

In **User** mode the following functions are available:

- ◆ Manage your contacts in the local directory and dial numbers directly (→ [page 113](#))
- ◆ View your call lists (→ [page 115](#))
- ◆ Forward incoming calls to another phone number (→ [page 96](#))
- ◆ Block individual phone numbers and/or all anonymous calls (→ [page 99](#))
- ◆ Decide on the assignment of the directory key and programme the function keys (→ [page 106](#))
- ◆ Download ring tones from the PC to your phone (→ [page 116](#))
- ◆ Select different ring tones for your VoIP connections (→ [page 95](#))
- ◆ Change the password for the user login (→ [page 111](#))
- ◆ Configure settings for your phone display (→ [page 112](#))


All Web configurator functions – user and administrator mode – are described in the chapter **Web configurator – configuring the phone on a PC** on [page 72](#).

Making calls

Calling

You make your calls using the default account if you do not make another selection. The first account that is created is used as the default account. You can change this using the Web configurator (→ [page 91](#)).

Selecting the VoIP account

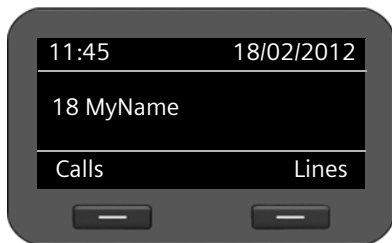

If there are several VoIP accounts available on your device, you can select the account you wish to use for the call.

Lines

Press the display key.



Select the required account.

OK

Press the display key to confirm the selection.

Entering a number using the keypad

You make a call using the phone's receiver, speaker kit or a connected headset (→ [page 69](#)).



Enter the phone number.



Lift the receiver.

Or



Lift the receiver.



Enter the phone number.

Dial

Press the display key.

The number is dialled.

The duration of the call is shown while the call is in progress.




Instead of putting the receiver to your ear:



Press the speaker key to make a call via the speaker.

 


Press the headset key to make a call via the headset.

You can also switch at any time during the call. Throughout the whole of this section, the  icon can always represent either  or .

When entering the phone number:

 Press the display key to delete incorrectly entered figures to the left of the cursor.

 Press the display key to copy entered phone numbers to the local directory (→ [page 47](#)).

 Press the end key to cancel dialling.

Dialling a number from the directory


You can save up to 200 entries in the local directory. You can create directory entries and manage them quickly and easily using the Web configurator (→ [page 113](#)) or the phone's display menu (→ [page 47](#)).


To dial a number proceed as follows:


 Open the directory using the navigation key .

Or use the display menu

✓ → **Contacts** → **Directory**

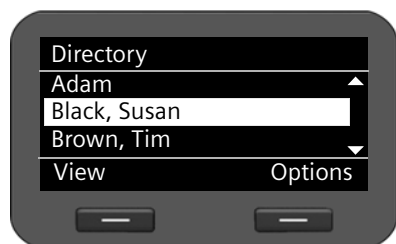

 Scroll through the list to the required name.


 Lift the receiver.
The default number is dialled (→ [page 49](#)).

Please note

You can also dial a phone number from the directory via the Web configurator (→ [page 113](#)).

Dialling a number using a function key

You can assign phone numbers to up to 7 function keys; you then only need to press a key once to dial the number. You can increase the number of function keys by connecting extension modules. Use the Web configurator to assign numbers to the function keys (→ [page 106](#)).

 Press the function key.
The number assigned to the function key is dialled.

Making calls



Dialling a number from the call lists

The following calls are saved:

- ◆ Outgoing calls (redial list)
- ◆ Accepted calls
- ◆ Missed calls

The last 60 numbers are stored in each of the call lists. The name will appear on the display if you have saved the number in the directory.



You can browse through the entries and dial directly from within the record.

If there are new entries in the missed calls list, the Message Centre key  **flashes** and the  icon is displayed.

To save numbers from a list in the directory, see (→ [page 43](#)).


Viewing call lists and dialling numbers

Open the required call list:

 Open the redial list using the navigation key .

 Open the list of missed calls in the Message Centre.

Or use the **Calls** display key

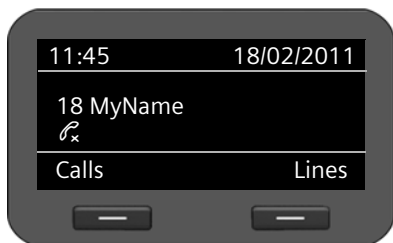


Call Press display key to show the call lists.


 Select list:


All Calls
Outg. Calls
Accept. Calls
Missed Calls

OK Press the display key to open the selected call list.

The last (most recent) call or dialled phone number is shown on the display.

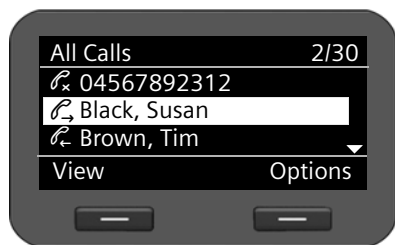

 Select another entry if necessary.

 Lift the receiver.
The number is dialled.

Please note

You can also access the call lists using the Web configurator (→ [page 115](#)).

Initiating ringback

You can initiate a ringback if the number you have called is busy. **Prerequisite:** This function is supported by your phone system or your provider.

Ringback Press the display key to initiate a ringback.

Ringback is initiated as soon as the line is free again.

Deactivating ringback

You can deactivate the ringback for all of the VoIP accounts configured on your phone or just for certain VoIP accounts.

✓ → **Select Services** → **Active Ringbacks**


Accounts for which ringback is permitted are marked.


⊙ Select the required entry.

Change Press the display key to deactivate the ringback.

Receiving incoming calls

You hear the ringer and the speaker key  flashes.

If the call is received on one of the phone numbers programmed on a function key, this function key  flashes.

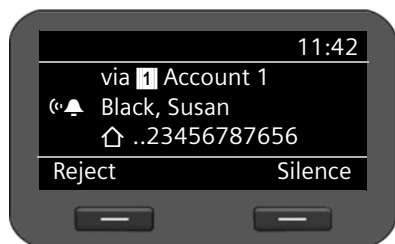

The display shows the caller's number (where calling line identification is permitted → [page 36](#)) and their name, if they are saved in the directory.

The account that the call is received on is also shown.



Lift the receiver. You can speak to the caller.

 
Please note

When you receive a call, the phone first of all searches for a corresponding entry in the local directory. If the number doesn't appear there, the other directories are searched (if configured) (→ [page 102](#)).

Deactivating the ringer


Silence Press the display key to deactivate the ringer. You can then decide whether to accept or reject the call.

Rejecting a call

Reject Press the display key or the end key  to reject the call.

 
Ending a call



Put down the receiver or press the end key .



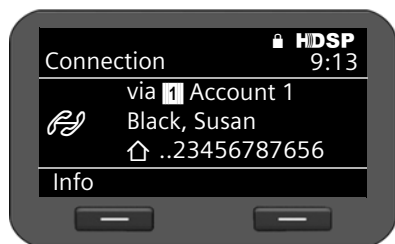


Using functions when making a telephone call

Display when establishing a connection or during a call




The display shows

- ◆ The VoIP account you are using to make the call.
- ◆ The caller's number (where calling line identification is permitted → [page 36](#)) and their name, if they are saved in the directory.

-  Connection icon. This indicates the status of the connection.
- | | | | |
|---|---------------------------|---|------------------------|
|  | Establishing a connection |  | Connection interrupted |
|  | Connection established |  | Conference call |

HDSP indicates a connection with the highest voice quality.


 indicates that it is an encrypted connection.


09:13 shows the duration of the call.

Info Press the display key to view technical information about the phone. This function is helpful when calling the Service Hotline, for example.

Adjusting the volume

You can adjust the volume of the receiver, speaker kit or headset during a call. You can adjust the volume of the ringer while the phone is ringing.

 To decrease the volume press the left side of the key and to increase the volume press the right side of the key. Each time you press the key, the volume will increase or decrease by one level.

 There are five volume settings available. The current setting is shown.

The last setting is saved when you change the ringer volume.

 

Use the display menu to permanently configure the ringer melody and volume (→ [page 59](#)).

Muting

You can deactivate the microphone for the receiver, the speaker kit and the headset. The other party can then no longer hear you.



 Press the mute key during the phone call.



Press the key again to reactivate the microphone.

The  key is lit up while the function is activated and the  icon is displayed.

Activating/deactivating speaker mode

Activating via the receiver during a call:

  Press the speaker key and put down the receiver.

The  key is lit up while the function is activated and the  icon is displayed.

In speaker mode, you hear the caller via the speaker.

Deactivating speaker mode during a call:

 Lift the receiver. Continue the call via the receiver.

Please note

You should tell your caller if you have activated the speaker.

 

Do not disturb

You can activate the Do Not Disturb (DND) function if you do not want to receive any calls and you do not want the phone to ring.

You can still make calls when this function is activated.

 Press the Do Not Disturb key.

Press the same key again to deactivate the function.

The  key is lit up while the function is activated and the  icon is displayed.

Please note

- ◆ You can permanently deactivate the ringer for anonymous calls (→ [page 60](#)).
 - ◆ You can use the Web configurator to create a blacklist of unwanted names and numbers (→ [page 99](#)). Once you activate the blacklist function, calls from these numbers will not be put through.
 - ◆ If your phone is connected to a Gigaset phone system you can also control this function using the phone system's function keys.
-

Making calls

Anonymous calling – withholding caller ID

You can make anonymous calls (CLIR = Calling Line Identification Restriction). Your phone number will not be displayed when making outgoing calls. You are calling anonymously.

Prerequisite: Anonymous calls are only possible via VoIP connections through providers that support the "anonymous calling" function. You may have to ask your VoIP provider to activate this function.

Making an anonymous call

Select:

✓ → Select Services → Next Call anonymous

Then proceed as normal:



Enter the phone number.



Lift the receiver.

The number is dialled. Your number is not transferred.

Activating/deactivating "anonymous calling" for all calls

You can permanently activate/deactivate the anonymous call function for all of the VoIP accounts configured on your phone or just for certain accounts.

✓ → Select Services → All Calls anonymous

Accounts for which anonymous calling is permitted are marked with a tick.



Select the required entry.

Change

Press the display key to tick the box.

Press the display key again to remove the tick.

Making a call to multiple participants

Initiating a consultation call

During a call, you want to consult a second participant.




Press the consultation call key during the call.

The call is placed on hold. You can make another call to a second participant. Once the call has ended, press the consultation key again. You are reconnected to the first participant.

Accepting/rejecting call waiting

You hear the call waiting tone during a phone call.

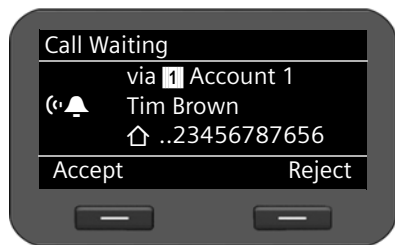


The display shows the caller's number (where calling line identification is permitted → **page 36**) and their name, if they are saved in the directory.


The display also shows the subscriber number used to receive the call and indicates whether this is a ringback.

Accepting a call:

Accept Press the display key to accept the call.

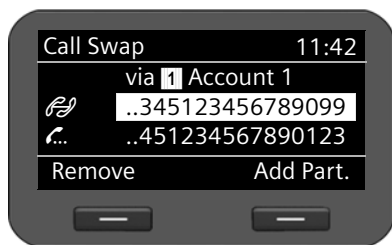

You are connected to the waiting participant.

The first participant hears music on hold. The number is displayed and the  icon identifies it as the waiting participant.

 Select the connection.

Remove Press the display key to end the selected connection.

Rejecting a call:


Reject Press the display key to reject the waiting call.

Activating/deactivating call waiting

You can deactivate call waiting during a call for all of the accounts configured on your phone or just for certain accounts.

✓ → **Select Services** → **Call Waiting**

Accounts for which call waiting is permitted are marked with a tick. Callers via other accounts hear the busy tone.

 Select the required entry.

Change Press the display key to tick the box.

Press the display key again to remove the tick.

Making calls

Call swapping

You are speaking to one participant and a second is on hold; this may be because you have accepted a waiting call or have placed one caller on hold.



Press the consultation key to swap from one caller to the other.

Initiating a consultation call with a third participant:

Add Part.



Press the display key. Both participants are placed on hold.

Enter the phone number for the third participant.

Dial

Press the display key. The number is dialled.

To speak to one of the participants on hold again after you have finished the ringback:



Select the relevant participant.



Press the consultation key.

Initiating a conference

You are speaking to one participant while another is on hold.



Select the participant who is on hold.



Press the conference key to add the waiting participant to a conference.

Or

You are speaking to one or more participants and you wish to add an additional participant.



Press the conference key.




Enter the phone number for the additional participant.

Dial

Press the display key. The number is dialled.

As soon as the participant answers, they are automatically connected to the conference call.

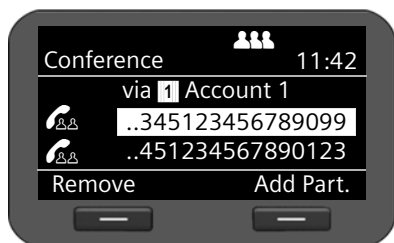

The participants in the conference are listed on the display.

Removing a participant from the conference call:




Select the participant.

Remove

Press the display key to end the conference for the highlighted participant.

Add Part.

Press the display key to begin a consultation call with another participant. In contrast to conference call , the conference participants are put on hold.

Please note

Only participants who share the same VoIP account can participate in a conference call.

Transferring a call to another number

You are speaking to one participant and you want to transfer the call to a third participant.

Transfer without consultation:



Press the transfer key. The call is placed on hold.



Enter the phone number for the participant to whom you want to transfer the call.



Press the transfer key again. The call is transferred to the number you have dialled. Your connection to the participant is ended.

Transfer with consultation:

Use this function to ensure that the connection is actually established.



 
Press the transfer key. The call is placed on hold.



Enter the phone number for the participant to whom you want to transfer the call.



Press the display key. The number is dialled.

When you call the third participant you can wait for them to answer and speak to them, for instance to tell them you are forwarding a call. Then press the transfer key .

Transfer to participants on hold:

You are speaking to one participant and there are others on hold. You can transfer the current call to one of the participants on hold.



Select one of the participants on hold.



Press the transfer key. The chosen participant is connected to the person you are currently speaking to.

Setting up call divert (CD)


When you divert a call, the call is forwarded to another connection. Your call divert settings can be specific to a particular connection (i.e., settings for each configured VoIP account).

Prerequisite: Your VoIP provider supports call divert or the service is provided by a phone system.

Call divert using the provider's network services

✓ → Select Services → Call Divert

The list contains the accounts configured on your telephone.

 Select the required account.

OK Press the display key to confirm the selection.



 Select when the call divert is to apply.

OK Press the display key to confirm the selection.


All Calls All calls are diverted.

No Answer Calls are diverted if no one accepts the call within several rings.

When Busy Calls are diverted if your line is busy.

Off No calls are diverted.



 Enter the phone number to which the call should be diverted.

Save Press the display key to save the settings for this account.

Note

Please refer also to:

- ◆ Setting up call divert using the web configurator (→ [page 96](#)).
 - ◆ Assigning a call divert to a function key (→ [page 108](#)).
-

Call divert using the phone system

If your Gigaset DE410 IP PRO is connected to a Gigaset phone system, call divert is saved to the phone system and not the phone. In this case you can setup the call divert easily via the Gigaset phone system. You can set up call divert for each number assigned to your phone. The idle display indicates if a call divert is activated.

✓ → **Select Services** → **Call Divert**

The list contains the accounts configured on your telephone.


⊙ Select the desired account.

OK Press the display key to confirm the selection.

If there are multiple numbers assigned to the account on the phone system, these are displayed.

⊙ Select the number for which you wish to set up a divert.

OK Press the display key to confirm the selection.

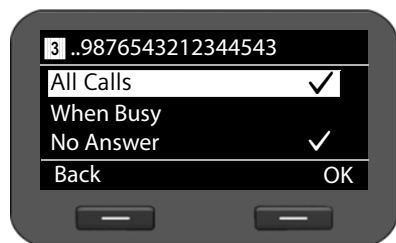

The account and number selected are shown in the top right of the display. Active call diverts are marked with a ✓.

⊙ Select the call divert you wish to edit.

All Calls

All calls are diverted.

When Busy

Calls are diverted if your line is busy.




No Answer

Calls are diverted if no one accepts the call within several rings. The also applies to calls in call waiting that are not accepted.

OK

Press the display key to edit the call divert.

Making calls

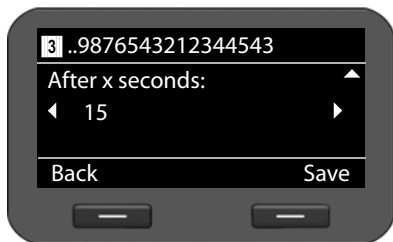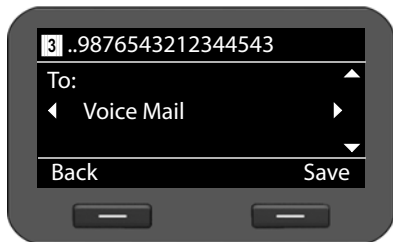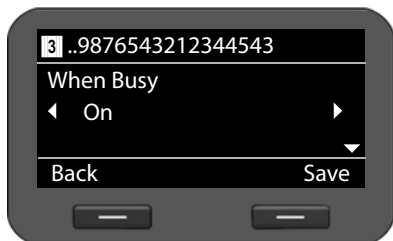


 Activate/disactivate call divert.

 Select **To**.

You can divert calls to a voice mailbox or to a number.

 Select **Voice Mail** or **Target Number**.

 Enter the number of the voice mailbox or the number to which the call should be diverted.

For a call divert of the type **No Answer**, select a length of time after which the call should be diverted.

 Select the desired length of time.

You can choose from values ranging from 5 to 120 seconds.


Save

Press the display key to save the settings for this account.

Using the call lists

The following call lists are available:

All Calls	All outgoing, accepted and missed calls.
Outg. Calls	Last dialled numbers (redial list).
Accept. Calls	Calls that were accepted.
Missed Calls	Calls that were not answered.

 If the list contains entries that you have not yet viewed, the display shows the  icon and the number of new entries. You can also access the list via the Message Centre (→ [page 56](#)).

A maximum of 60 entries is saved in the lists. The next entry overwrites the oldest one. You can access all of the lists via the display menu.

Please note


You can also manage the call lists via the Web configurator (→ [page 115](#)).

If your telephone is connected to a Gigaset T500 PRO or Gigaset T300 PRO phone system, calls are managed by the phone system rather than locally using the telephone and are transferred to all phones assigned to it.

Viewing entries

You can open a list when the telephone is in idle status.

Calls Press the display key to show the call lists.

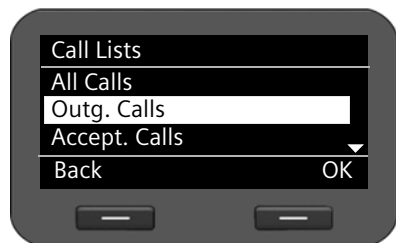




 Select list.

OK Press the display key to open the selected list.



The calls are displayed in chronological order, from the most recent through to the oldest.

   The number of the selected entry and the total number of entries in the list (e.g., 1/30) is displayed in the top right corner.

An icon is shown in front of each entry to indicate whether it is an outgoing () , accepted () or missed () call.

Using the call lists

Information on the entry:


- ◆ Phone number of the caller/called party. If the number is saved in the directory, the name is displayed instead.
- ◆ VoIP account on which the call was made/received.
- ◆ Date and time of the call. Outgoing calls also include the duration of the connection.

The information displayed is determined by the information transferred by the caller and whether or not the caller appears in the directory.

If the caller has activated CLIP (Calling Line Identification Presentation), the caller's phone number is identified. The caller can then be identified by this number if he or she is already saved in the directory. **Prerequisite:** The feature is activated for the VoIP account.

Displaying detailed information

View Press the display key. The information available is displayed, with the phone number as a minimum.

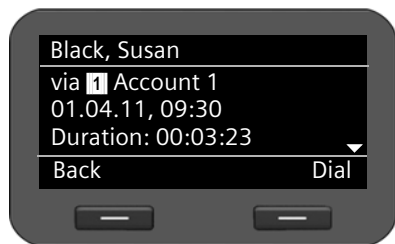


If the number is saved in the directory, the directory entry is displayed (→ [page 47](#)).



Please note

When you receive a call, the phone first of all searches for a corresponding entry in the local directory. If the number doesn't appear there, the other directories are searched (if configured) (→ [page 102](#)).


Dialling a number from a list

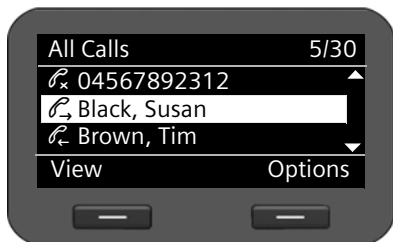




You have the following options for dialling a phone number from a list:

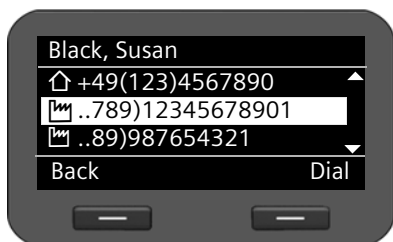


-  Scroll through the list to the required name.
 -  Lift the receiver.
- The number is dialled.





Or

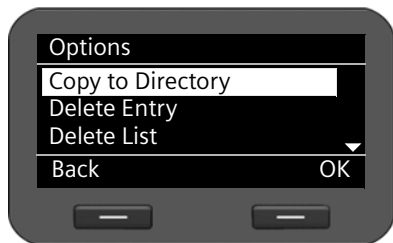


-  Scroll through the list to the required name.
 - View**  Press the display key to show the entry.
 -  Select the number if multiple numbers are available
 -  Lift the receiver.
- Or
- Dial**  Press the display key.
- The number is dialled.

Copying an entry from the call list to the directory



-  Scroll through the list to the required name.
- Options**  Press the display key.
-  Select the **Copy to Directory** entry.
- OK**  Press the display key to confirm the action.

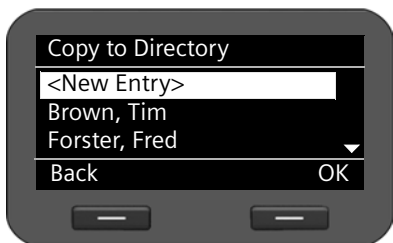

- The directory is opened.
- You can create a new entry in the directory or edit an existing one.
- See directory → [page 48](#).

Deleting an entry or list



Options



Press the display key.

Select the required action:

Delete Entry or **Delete List**

OK

Press the display key to confirm the action.


You must confirm the action again.

Using directories

The options are:

- ◆ Local directory
- ◆ LDAP directory → [page 50](#)
- ◆ Personal or public online directory → [page 51](#)

Please note

- ◆ The local directory can also be accessed via the Web configurator (→ [page 113](#)).
 - ◆ The default directory is the local directory. This is the directory that you can open with the  key and the directory to which entries are saved using the "Copy to Directory" function.
 - ◆ You can set a different directory as the default directory via the Web configurator (→ [page 106](#)).
-


Using the local directory

You can save a total of 200 entries in the local directory.

Please note




You can handle the local directory also via the Web configurator (→ [page 113](#)).

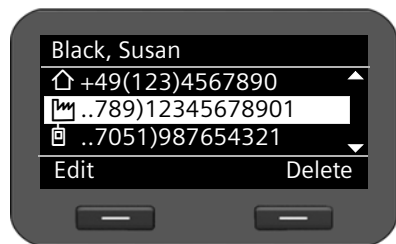Directory entries



A directory entry contains the following information:

- ◆ First name, surname
- ◆ Up to six phone numbers

An icon in front of a phone number indicates whether it is a home () , office () or mobile number () .

Opening the directory


Open the directory in idle status with the  key (navigation key )

Or use the display menu

✓ → **Contacts** → **Directory**

Using directories

Displaying an entry

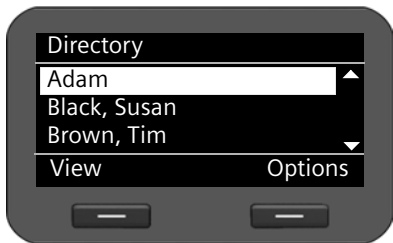

Scroll through the list to the required name.


View

Press the display key. The entry is shown as in the figure on [page 47](#).

Creating a new entry

Options Press the display key.

OK Press the display key to start the **New Entry** action.

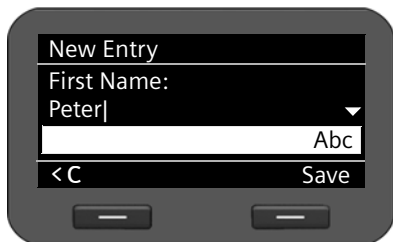

An entry consists of:

- **First Name and Name**,
- **2 x Phone (Home)**,
- **2 x Phone (Mobile)**,
- **2 x Phone (Office)**.




Enter the name and the phone numbers. For information on entering text → [page 24](#).



Scroll from line to line.

Save Save the directory entry if you have entered all the data.

Editing entries

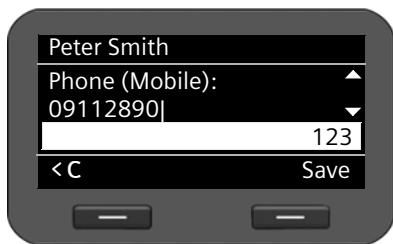

Scroll to the required directory entry.

Options

Press the display key




Select **Edit Entry**.

Directory entry fields can be edited. The procedure is the same as for [Creating a new entry](#).

Changing the default number

The default phone number is the first number in the list and is dialled first. You can change the default phone number.

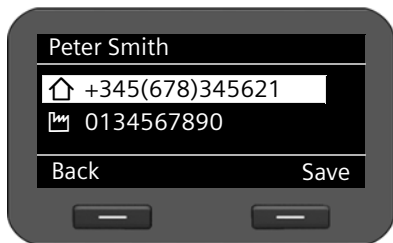

Scroll to the required directory entry.



Press the display key.



Select **Change Default No..**



Confirm the selection.



Select the required number.



Press the display key to save the change.

Deleting a directory entry or the entire directory

Deleting a selected entry from the list:



Scroll to the required entry.



Press the display key



Select **Delete Entry.**



Confirm the selection.

Or

View → **Delete** Press the display keys in sequence.



Confirm the deletion.

Deleting the entire list:



Press the display key



Select **Delete List.**



Confirm the deletion.

Dialling a number from the directory



Scroll to the required entry.



Lift the receiver.

The default number of the directory entry is dialled (→ [page 49](#)).

Using an LDAP directory

If your corporate network provides a directory via an LDAP server, you can access this on your phone (LDAP = Lightweight Directory Access Protocol). **Prerequisite:** You have set up this function via the Web configurator (→ [page 103](#)).


You can give the LDAP directory a name in the Web configurator. This will then appear in the display in place of **LDAP Directory**.

Opening an LDAP directory


You can open the LDAP directory in idle status via the display menu


✓ → **Contacts** → **LDAP Directory**

Or

📖 Press and hold (navigation key )

Searching for and displaying an entry

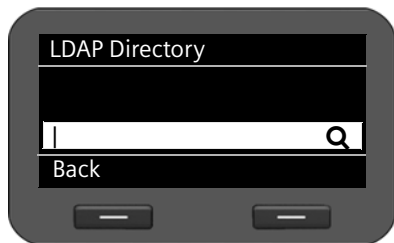



 Enter the name (or first few letters).


For information on entering text → [page 24](#)

The search will automatically start as soon as you stop inputting characters.

All matching entries are displayed. The search field is displayed again if no matching entries are found. You can start a new search.

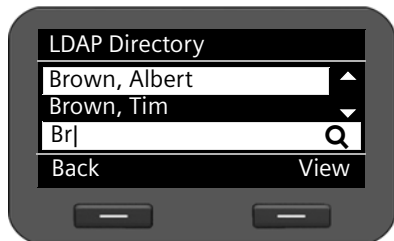


 Scroll to the required entry.


 **View** Press the display key.


The entry will be displayed.

Dialling from the LDAP directory

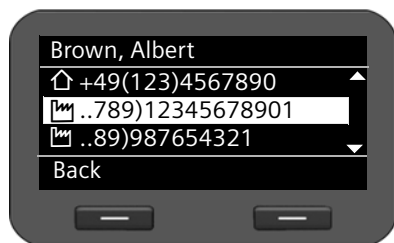

Display the entry.

 Select the number.

 Lift the receiver.

The number is dialled.

Using online directories

Online directories are available on the Internet. You can:

- ◆ Use public online directories that are available on the Internet, such as KlickTel or the Yellow Pages and
- ◆ Create a personal online directory if your provider permits this.

Select which public online directory you want to use via the Web configurator (→ [page 102](#)).

◆ White Pages

a public directory provided on the Internet

◆ Yellow Pages

yellow pages provided on the Internet

◆ Private NetDirectory

Some providers offer users the option of creating and managing a personal online directory on the Internet.

You can use the personal online directory on your phone.

Prerequisite:

- You enter the data for the provider of your personal online directory in the Web configurator (→ [page 102](#))
- You must create and manage your personal online directory using your PC's Web browser.

Opening a online directory

You can open a online directory in idle status via the display menu


✓ → **Contacts** → **Name of directory**

Select the required public or private online directory. The directory name depends on the settings for the directory in the Web configurator. It can be the name the provider uses for their directory or a name you have chosen yourself.

Searching for an entry in the online directory

You can search for a phone number or a name.

Searching for a number

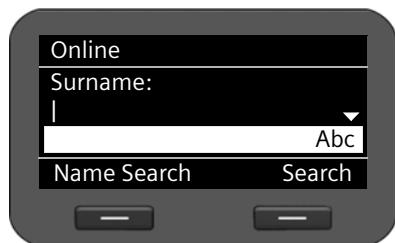


Enter the surname and city of the subscriber you are looking for. For information on entering text, → [page 24](#)



Scroll from line to line.



Press the display key to start the search.

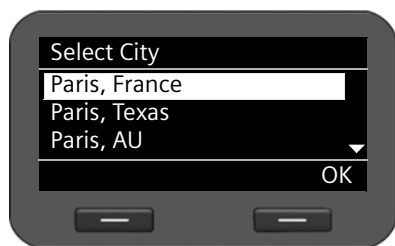


Select city.



Start search.

Please note: The **City** field is not available in the private directory.

Searching for a name

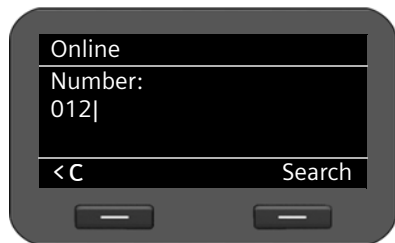

Press display key.



Enter the number for the entry you are searching for.



Press the display key to start the search.




A message is displayed if no entry is found. You can then:

Change Press the display key to change your search request.

Or

New Press the display key to start a new search.

Search results

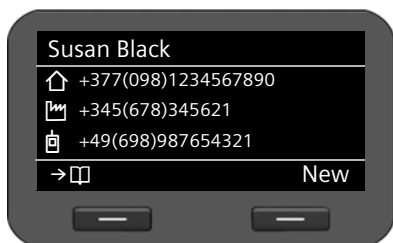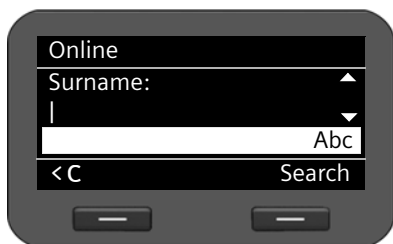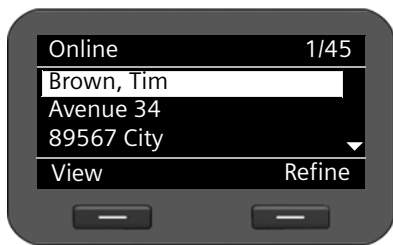

Transferring a number to the local directory



The search results are displayed as a list.

The first entry found is displayed with the name and available address information. The number of the displayed entry is shown in the top right corner along with the total number of entries found.

If more than 99 entries are found, a message including the number of results found is displayed. You can then refine the search or request for the entire list to be displayed.

Refining a search:


Refine Press the display key.

Specify your search request in the various fields.

Surname, First Name, Category / Name, City or Street.

Search Press the display key to restart the search.

Displaying entry details:


 Scroll to the required entry.

View Press the display key.

The entry contains the available phone numbers.

Dialling a number:

 Select the number.

 Lift the receiver.

You can transfer entries from a online directory to your local directory.

→  Press the display key.

You can create a new entry in the directory or edit an existing one.

See directory → [page 48](#).

Managing messages


You can access your voice mails on network mailboxes via the display menu.



The Message Centre also allows you to access voice mails and missed calls at the press of a key (→ [page 56](#)).

Managing voice mails on the network mailbox

You can listen to your messages that have been recorded on a network mailbox. Each network mailbox accepts incoming calls on the corresponding VoIP phone number. Network mailboxes are provided by a Gigaset T500 PRO or Gigaset T300 PRO phone system, for example, or you can use a network mailbox offered by an Internet provider.

Prerequisite: Voice mail boxes must be set up for your VoIP accounts on the phone system. You can set up internet provider network mailboxes in the Web configurator (→ [page 99](#)).

If there are new messages on the network mailbox, these are indicated by the  icon. The number of messages is displayed to the right.

You can also access your network mailbox via the Message Centre (→ [page 56](#)). The  key flashes if a new message has been received on the network mailbox and the  icon is displayed.


Playing voice mails

Play recorded messages via the display menu:


✓ → Voice Mail


Play recorded messages via the Message Centre:

 → Voice Mail

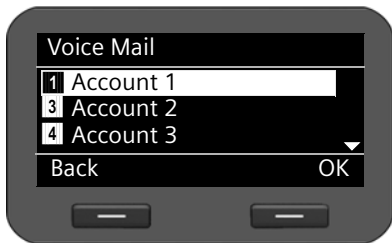

A list of available network mailboxes arranged in order of VoIP accounts is displayed along with the number of new and old messages.

  Scroll through the list to the required network mailbox.

 Press the display key to connect to the network mailbox.


Voice mails are displayed in the following categories:

Inbox: Newly received voice mails.

Private: Voice mails from numbers marked as private in the directory.

Old: Messages that have already been played, or which have been moved to the "Old" folder on the Gigaset telephone system.


 Select the desired category and confirm by pressing **OK**.

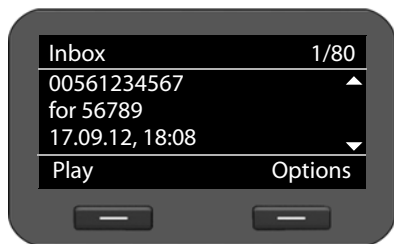


The stored messages are listed in chronological order.

The number of the selected message and the number of entries in the list are shown in the top right corner.


 
The sender's and the receiver's number are shown along with the date and time when the message received.


 Scroll from message to message.

 Scroll through the information about a message or scroll to the next message.

Playing a message


Play Press the display key to listen to the message.


The message is played via the loudspeaker. Alternatively, you can start playback with  or .

Or
 Lift the receiver to start playback over the receiver.

Ending playback

Stop Press the display key to end playback.

Alternatively, press the speaker key  or replace the receiver.

 Select another voice mail with the navigation key. Current playback is ended and playback of the newly selected message is started.


Note

An incoming call ends playback.

Accessing messages via the Message Centre

The Message Centre gives you quick access to newly-received messages at the press of a key. It provides centralised access to the following messages:


- ◆ Voice mails (→ [page 54](#))
- ◆ Missed calls (→ [page 43](#))


 

The message key  flashes if a new entry is received for one of these message types. A new entry is classed as anything that has been received since the corresponding list was last opened.

You use the Web configurator to specify which message types can be accessed via the Message Centre (→ [page 100](#)).

Opening the Message Centre

You open the Message Centre with the  key.

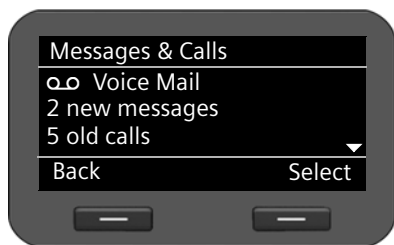

-  Toggle between the display of  Voice Mail and  Missed Calls.

The number of stored new and old messages or missed calls is shown.

- Select** Press the display key to display the voice mail or missed calls list. Voice mails → [page 54](#), missed calls → [page 43](#).

Note

The Gigaset T500 PRO and Gigaset T300 PRO phone systems do not distinguish between old and new missed calls. If your phone is connected to this type of phone system, this information is not available.


Operating door interphones

You can operate one or more door interphones using the phone.

Prerequisite: The door interphone must have been configured on the Web configurator or the Gigaset phone system. You will need the the DTMF code of the door opener for configuration.

- ◆ Web configurator: use the following Web page for configuration **Settings → Services → Door Interphone** (→ [page 101](#)).
- ◆ Gigaset T500 IP PRO or T300 IP PRO phone system: the door interphone is setup during phone configuration. If automatic configuration is permitted, configuration is carried out automatically on your phone.


If someone rings the door interphone, this is displayed as an incoming call on the phone. In addition, **Door Interphone** is displayed.

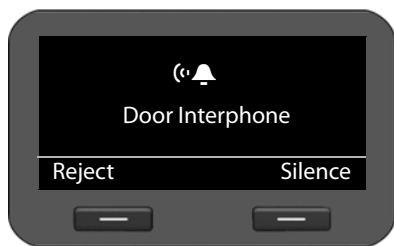




Switching the ringer off

 - Silence** Press the display key to switch off the ringer. You can then decide whether or not to open the door.

Ending the connection to the door interphone

- Reject** Press the display key or end key  to reject the request.

Conduct a call over the door interphone

-  Pick up the receiver to talk with the person at the door. Alternatively you can conduct the call using the speaker key  or the headset .

- Open Door** Press the display key to operate the door opener.

- End** Press the display key to end the call without opening the door.

Note

- ◆ If you are carrying out a telephone call at the same time, the ring at the door is signalled by Call Waiting (→ [page 37](#)). You can either reject the call or accept and open the door. When the connection to the door interphone is ended, the previous connection is restored. Toggling between calls is not possible.
- ◆ An incoming call is signalled as a Call Waiting if you are already connected to the door interphone. If you accept the call the connection to the door interphone is ended.

Configuring basic settings

Your telephone is preconfigured, but you can change the settings to suit your individual requirements.

Setting the date and time

The time is displayed, for example, on the idle display as well as for incoming calls. The date and time must therefore be set accurately.


Please note

The address of a time server on the Internet or the local network is saved on your phone. The date and time are taken from this time server provided that the phone is connected to the network and synchronisation with the time server is activated. Manual settings are overwritten in this case.

The settings for the time server should be made via the Web configurator (→ [page 110](#)).

You use the display menu to manually set the date and time:

✓ → Settings → Date / Time

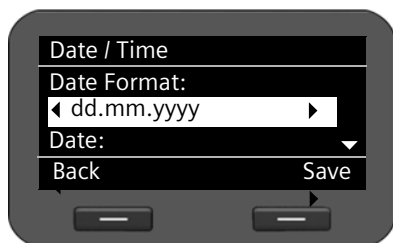


Date format:



Select the date format:

dd.mm.yyyy: day, month, year

mm.dd.yyyy: month, day, year

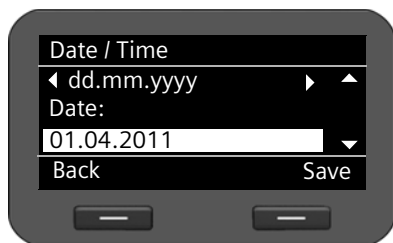



Date:




Enter the day, month and year in eight-digit format, e.g., for 14 January 2011:


For the date format **dd.mm.yyyy:**
14012011

For the date format **mm.dd.yyyy:**
01142011

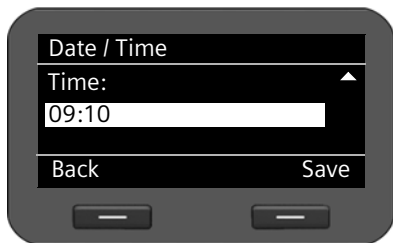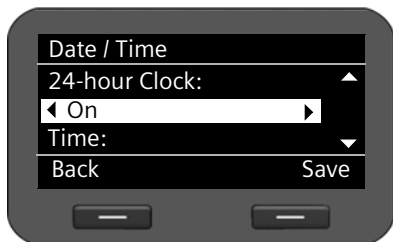**Time format:**

-  Select the time format:
 - On:** 24-hour format
 - Off:** 12-hour format

Time:

-  Enter the time in four-digit format, e.g., 0715 for 07:15.
 - Time display for this setting in **24-hour format:** 07:15
 - Time display for this setting in **12-hour format:** 07:15 AM

Save Press the display key to save your settings.

Setting the ringer


You can set the volume and melody of the ringer and completely silence the ringer for anonymous calls.


Setting the volume

The volume of the ringer for incoming calls can be adjusted over five levels.

Setting the volume in idle status


✓ → Settings → Audio Settings → Ringer Settings → Volume

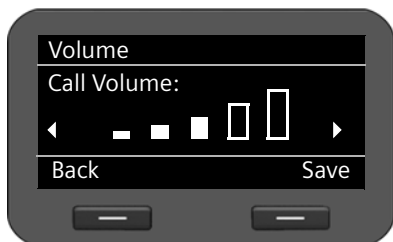

-  Select the required volume. The volume is adjusted immediately. You can test the setting by playing back the ringer with the melody set at the selected volume level.

Save Press the display key to save the settings.

Setting the volume while the phone is ringing


You can adjust the volume while the phone is ringing using the  key. Each time you press the key, the volume will increase or decrease by one level. The last setting is saved.

Configuring basic settings

Selecting a ringer melody

You can choose various ringer settings from the resource directory (→ [page 116](#)) and configure different ringer settings for each VoIP account.

✓ → Settings → Audio Settings → Ringer Settings → Melodies

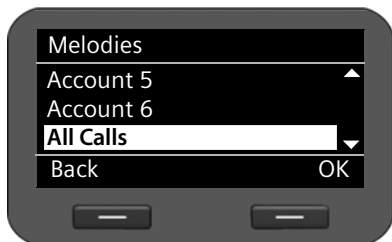


Each configured VoIP account is listed.



Select the VoIP account you want to set the ringer for. Select **All Calls** if you want to set the same melody for all accounts.

OK

Press the display key to confirm the selection.

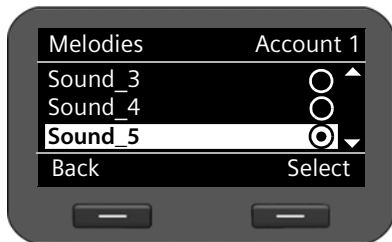

All of the melodies from the resource directory are displayed.

At the top right-hand corner of the screen, you can see which VoIP account you are editing or **All Calls**.



Choose the melody.
The selected melody is played at the set volume.

Select

Press the display key to confirm the selection.


Note

The same melody is set for all accounts by default. If you select another melody for any account, **All Calls** is automatically set to **Individual**.

Silencing the ringer for anonymous calls

You can silence the ringer for external calls where the caller has withheld their number.

✓ → Settings → Audio Settings → Ringer Settings → All Calls anonymous

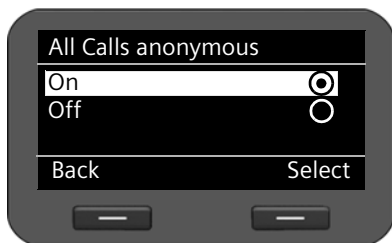

If this function is activated, the phone will not ring if an anonymous call is received. The call is still shown on the display.



Select the desired option.

Select

Press the display key to confirm the selection.


The change is made immediately.

Activating/deactivating advisory tones

Your phone uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key Tones:** Each key press is signalled acoustically.
- ◆ **Confirmations:** After completing an entry/setting and when a new entry appears in the network mailbox or call list, when you make an incorrect entry or when you scroll to the top of a menu.

✓ → Settings → Audio Settings → Advisory Tones

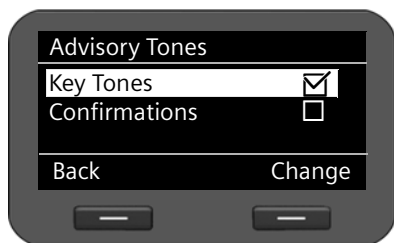

Change


Select **Key Tones** or **Confirmations**.

Press the display key to activate or deactivate the selected function.

Renaming or deleting ring tones

You can rename or delete ring tones which have been loaded via the Web configurator (→ [page 116](#)).

✓ → Settings → Audio Settings → Audio Resource

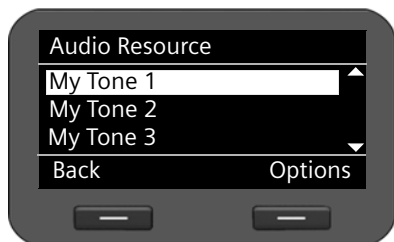


Options

All available ring tones are listed. You can only change those which you loaded yourself.


Select the desired ring tone.


Press the display key to revise the ring tone.


Configuring basic settings

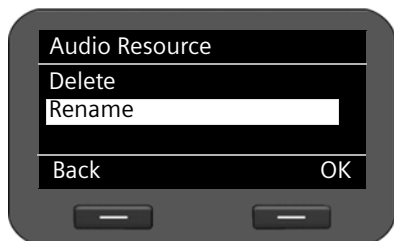

Renaming ring tone


 Select the **Rename** option and press the **OK** display key.

 Delete existing characters.

 Enter the new name.
For information on entering text
→ [page 24](#).

OK Press the display key to save the changed name.

Deleting ring tones

 Select the **Delete** option.

OK Press the display key to delete the ring tone.

Setting the display

When setting the display, you can configure the backlight and the contrast.


Setting the backlight

The brightness of the backlight for the display can be set to one of three levels.

If the display backlight is deactivated, it can be reactivated by pressing any key or by an incoming call. In this situation, pressing the key has no further function.

✓ → **Settings** → **Display** → **Backlight**




 Select the required brightness level. Your setting is activated immediately so that you can check it and correct it if necessary.


Save Press the display key to save the settings.

Setting the contrast

The contrast of the display can be set to one of six levels.

✓ → Settings → Display → Contrast

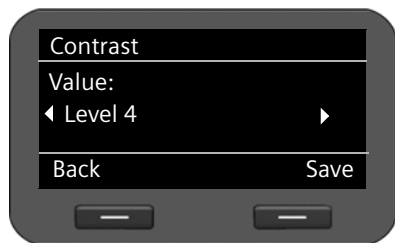

 Select the required contrast level 1-6. Your setting is activated immediately so that you can check it and correct it if necessary.


Save Press the display key to save the settings.


Setting the language

You can view the display texts in different languages.

✓ → Settings → Language



The current language is indicated by a .

 Select the required language.

Select Press the display key to activate the selected language.

The language is changed.

Resetting the device to the default settings

If you give your device to a third party or change workstation, you can delete your individual settings and data by resetting the device to the factory settings. All system settings are reset to the default settings. User-specific data is deleted.

This means that network configurations, VoIP accounts, directories, call lists, data in the resource directory and all of your individual settings are deleted or reset to the factory settings.

You need the administrator password before you can use this function (→ [page 111](#)).

✓ → Settings → Reset



Enter the administrator password.

OK

Press the display key. The password is verified.

If the password is correct, you must now confirm the operation.

Yes

Press the display key. The device is reset to the factory settings.

Resetting via device button

You can also reset the device by using the reset button on the underside of the device.



Reset Button

The reset button is located behind the small opening labelled **Reset**. Use a pointed item, e.g., a paper clip.

- ▶ Reset: Press and hold the button for at least 5 seconds to return all settings to the factory settings.

Showing information on the device

The **Info** menu provides information on important settings of your phone.

✓ → Info

SW Version

Version of the firmware currently loaded on the phone. You can download updates of the firmware to your phone (→ [page 117](#)).

Country Version

Language currently set (→ [page 63](#))

MAC Address LAN

The phone's device address.

IP Address

The phone's current IP address within the local network. The IP address is usually set automatically by a DHCP server within the network (→ [page 66](#)).

For further information on the phone's settings and state please refer to the status display of the Web configurator (→ [page 119](#)).

Configuring settings for the local network

All of the settings for connecting your phone to the local network must be correct to enable communication with other devices in the network and phone calls via the Internet.

Your phone can be connected to the local network using an Ethernet cable. When you first set up the phone, the device will automatically try to connect to the local network (→ [page 20](#)).

This will work, if:

- You have connected the device to the network using an Ethernet cable (→ [page 13](#))
- The gateway automatically assigns network IP addresses using DHCP
- The network uses IP protocol version 4 (IPv4).

The phone is then automatically assigned an IP address and is connected to the local network. You can then continue configuring your phone via the Web configurator at a PC (→ [page 72](#)).

If the network connection is not established automatically, you will initially not be able to access the Web configurator. If this is the case, you will have to establish the network connection manually via the display menu:

- ◆ If your device is assigned a static IP address, your network administrator must tell you the IP address of your device. You then assign this address to your phone (→ [page 66](#)).
- ◆ If your network uses IPv6, you have to set your phone to Internet protocol version 6 (IPv6) (→ [page 68](#)). The connection is established if the address is assigned automatically. If a static IP address should be assigned to your phone, your network administrator must inform you of this. You then assign this to your phone.

Whether you configure the network settings when you initially set up the phone (→ [page 20](#)) or you start configuration via the display menu – the settings are the same.

Warning

The connection may be interrupted if you change the configuration for a functioning network connection. You will then **no longer be able to access** the local network or the Web configurator and you **will no longer be able to make calls via the Internet**.

LAN settings


You start network configuration via the display menu:

✓ → Settings → Local Network

Please note:

To get access to network configuration you need to enter the administrator password. The default setting is **admin**.

Selecting the network type

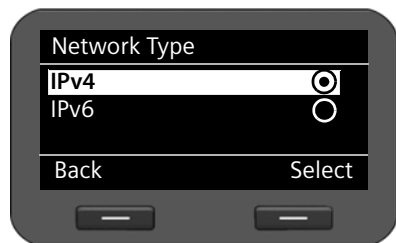

OK

Select **Network Type**.

Press the display key to confirm the selection.



Select

Select the IP protocol that is used in your network (**IPv4** or **IPv6**).


Press the display key to confirm the selection.

You may be asked to configure additional settings depending on your selection.

IPv4 configuration → below, **IPv6 configuration** → **page 68**

Back Press the display key to return to the **Local Network** menu from where you select the next network configuration step.

IPv4 configuration

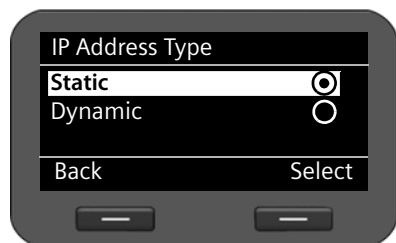

OK

Select **IP Address Type**.


Press the display key to confirm the selection.



Select **Dynamic** if your device receives the IP address via a DHCP server. Select **Static** if your device receives a fixed IP address.

Select Press the display key to confirm the selection.

If the **Dynamic** setting is selected, all further settings are automatically configured. They are displayed and cannot be changed.

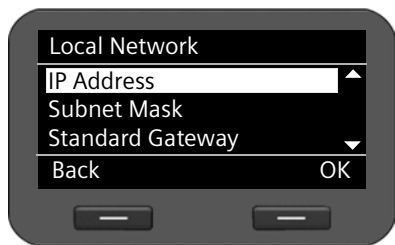

If you have selected **Static** as the address type, you must now create the following settings:

- **IP Address**
- **Subnet Mask**
- **Standard Gateway**
- **Pref. DNS Server** and
- **Altern. DNS Server**

IP Address

Enter an IP address for your phone. This IP address allows your phone to be reached by other subscribers in your local network (e.g., PC).

The IP address comprises four individual groups of numbers with decimal values from 0 to 255 that are separated by a dot, e.g., 192.168.2.1.

Please note:

- The IP address must be included in the address block used by the router for the local network. The valid address block is defined by the router's IP address and the subnet mask (see example).
- The IP address must be unique in the local network, which means that it must not be used by another device connected to the router.
- The static IP address must not belong to the address block that is reserved for the router's DHCP server.

Check the settings on the router or ask your network administrator.

Example:

Router IP address:	192.168.2.1
Network subnet mask	255.255.255.0
DHCP server address block	192.168.2.101 – 192.168.2.255
Possible IP addresses for the phone	192.168.2.2 – 192.168.2.100

Subnet Mask:

The subnet mask specifies how many parts of an IP address the network prefix must comprise.

For example, 255.255.255.0 means that the first three parts of the IP address must be the same for all devices in the network, while the last part is specific to each device. In subnet mask 255.255.0.0, only the first two parts are reserved for the network prefix. Enter the subnet mask that is used by your network.

Standard Gateway

Enter the IP address for the standard gateway through which the local network is connected to the Internet. This is generally the local (private) IP address for your router (e.g., 192.168.2.1). Your phone requires this information to be able to access the Internet.

Configuring settings for the local network

Pref. DNS Server

Enter the IP address for the preferred DNS server. DNS (Domain Name System) allows you to assign public IP addresses to symbolic names. The DNS server is required to convert the DNS name into the IP address when a connection is being established to a server.

You can specify the IP address for your router/gateway here. This forwards address requests from the phone to its DNS server.


There is no default setting for a DNS server.

Altern. DNS Server

Enter the IP address for the alternate DNS server that should be used in situations where the preferred DNS server cannot be reached.


- ▶ Once all the settings are complete, press the display key **Back** to save the configuration settings.

IPv6 configuration

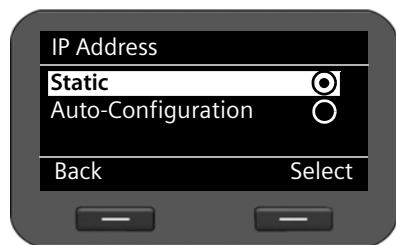

- ⊙ Select **IP Address Type**.
- OK** Press the display key to confirm the selection.
- ⊙ Select **Auto-Configuration** if your device receives the IP address via a DHCP server. Select **Static** if your device receives a fixed IP address.

If the **Auto-Configuration** setting is selected, all further settings are automatically configured. They are displayed here and cannot be changed.

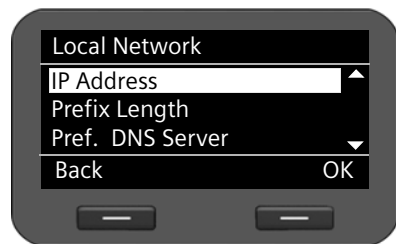

If you have selected **Static** as the address type, you must now create the following settings:

- **IP Address**
- **Prefix Length** and
- **Pref. DNS Server**
- **Altern. DNS Server**

Ask your network administrator for your network settings.

IP Address

Enter an IP address for your phone. This IP address allows your phone to be reached by other subscribers in your local network (e.g., PC).

The IP address comprises 128 bits and is represented by eight blocks of hexadecimal figures from 0 to FFFFFFFF that are separated by a colon, e.g., 2001:b021:189:0:205:5dff:fe6b:87.

The IP address comprises a prefix and an interface identifier. The length of the prefix (usually 64 bits) is determined by the **Prefix Length** value.

Prefix Length

The prefix length stipulates how many bits of the IP address are used for the network prefix. Enter the prefix length that is used in your network.

Pref. DNS Server:

Enter the IP address for the preferred DNS server. DNS (Domain Name System) allows you to assign public IP addresses to symbolic names. The DNS server is required to convert the DNS name into the IP address when a connection is being established to a server.

You can specify the IP address for your router/gateway here. This forwards address requests from the phone to its DNS server.

There is no default setting for a DNS server.

Altern. DNS Server:

Enter the IP address for the alternate DNS server that should be used in situations where the preferred DNS server cannot be reached.

- ▶ Once all the settings are complete, press the display key **Back** to save the configuration settings.

VLAN tagging

A local network can be divided into logical subnetworks, so-called VLANs (Virtual Local Area Network, standard IEEE 802.1Q). Multiple VLANs share a physical network and its components, e.g., switches. Data packets of a VLAN are not forwarded to another VLAN. VLANs are often used to separate the data traffic of different services (Internet telephony, Internet TV, ...) and to define different priorities for the data traffic.




You can operate your phone and a PC connected to your phone's PC port in two different VLANs. You enter the VLAN identifiers (VLAN tag) here, which you get from your network operator.



Warning


- ◆ If you operate the PC and the phone in different VLANs, you can no longer access the phone's Web configurator directly from the PC.
 - ◆ If you enter an incorrect value here, you must reset the phone to its default settings (→ [page 64](#)). After this you must re-establish phone access to the local network.
-

Configuring settings for the local network

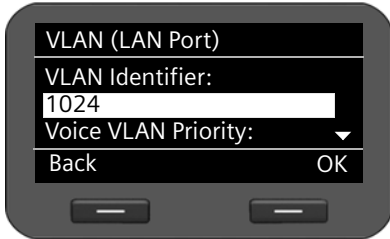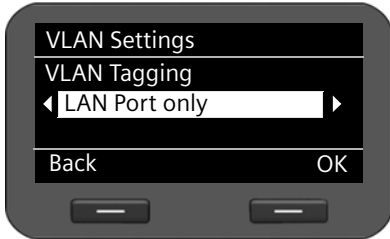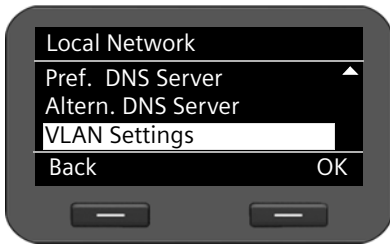✓ → Settings → Local Network



 Select **VLAN Settings**.
 Press the display key to confirm the selection.


 Select the required setting:
No If you do not use VLAN (default).



LAN Port only

If you operate the phone and the PC within the same VLAN.



LAN and PC Port

If you operate the phone and the PC within different VLANs.


 Press the display key to confirm the selection.

 Enter the **VLAN Identifier** and confirm with .

Value range: 1 – 4094

 Define the priority for the different services and confirm with .

Values: 1 – 7

 Press the display key to confirm the settings.

Priorities

Data packets from VLANs can be prioritised. The priority determines whether the data traffic from a VLAN is given preferential treatment by the network components. For the LAN port you can define the priority for voice and data separately. In the case of a local network with a lot of data traffic, you can achieve better-quality phone connections by giving a high priority to voice data.

LAN port: ► For **Voice VLAN Priority** and **Data VLAN Priority**, select the priorities you want for the transfer of voice and data.

PC port: ► For **VLAN Priority**, select the priority you want for the transfer of PC data.

Range of values and their Class of Service assignments (according to IEEE 802.1p):

0 No priority (Best Effort)

1 Background services, e.g., News Ticker (Background)

2 Not defined

3 General data services (Excellent Effort)

4 Control services, e.g., routing (Controlled Load)

5 Video

6 Voice data (Voice)

7 Top priority for network control software (Network Control)

► Once all the settings are complete, press the display key **Back** to save the configuration settings.

Please note

Further options for optimising the voice quality are available in the Web configurator under **QoS settings (Quality of Service)** → **page 87**.

Web configurator – configuring the phone on a PC

The Web configurator provides you with a user interface that you can use to operate and configure your Gigaset DE410 IP PRO on the PC. The setup assistant makes it easier for you to set your device up for the first time.

Prerequisite: Your phone is connected to the local network.

In most cases, this connection is established automatically as soon as you connect the device with a network cable (→ [page 13](#)). If this is not the case, you establish the connection to the local network via the display menu when you set the device up for the first time (→ [page 20](#)).

Please note

The Web configurator supports the following browsers:

- Mozilla Firefox, version 3.6 or higher
 - Internet Explorer, version 7 or higher
 - Apple Safari, version 5 or higher
-

Starting the Web configurator

You will need the IP address for your phone. You will find this via the phone's display menu, in the LAN settings:

✓ → **Settings** → **Local Network** (→ [page 66](#)).

Please note

The IP address can sometimes change, depending on the settings of the DHCP server in your network.

Accessing the Web configurator:

- ▶ Launch the Internet browser on your PC.
- ▶ Enter the IP address in the browser's address field:

Example: 

The login screen appears.

- ▶ Select the appropriate language.
- ▶ Select the desired user type and enter the corresponding password:

User If you want to operate your phone on the PC.
Default password: **user**

Administrator If you want to configure your phone.
Default password: **admin**

- ▶ Click on **OK**.

The Web configurator will now start.

In the following all functions of the Web configurator are described. Please note that in **User** mode not all functions are available.

Please note

For your security, you should change the default passwords (→ [page 111](#)).

Launching the Web configurator

In administrator mode: If you have not set up a VoIP account yet, the setup assistant screen will appear (→ [page 75](#)).

If you have already set up a VoIP connection, select the function that you wish to use.

- ◆ Use the **Settings** tab to set or change individual functions on your phone (→ [page 80](#)).
- ◆ Open the **Status** tab to obtain information about the status of your phone (→ [page 119](#)).

Understanding the Web configurator menu tree

The following illustration shows the Web configurator menu tree. Functions that are available in user mode are marked by an asterisk (*).

Web configurator – configuring the phone on a PC


Configuration Assistant	→ page 75			
Settings *	Network and Connections	LAN Settings	→ page 81	
		Server and Phone Systems	→ page 86	
		QoS Settings	→ page 87	
		VoIP Settings	→ page 88	
		Security Settings	→ page 89	
	Telephony *	Connections	→ page 91	
		Audio	→ page 93	
		Ring Tones *	→ page 95	
		Call Divert *	→ page 96	
		Local Settings *	→ page 96	
		Dialling Plans	→ page 98	
		Do Not Disturb *	→ page 99	
		Voice Mail Services	→ page 99	
		Messaging	MWI Light	→ page 100
		Services	Door Interphone	→ page 101
	Online Directory		→ page 102	
		LDAP	→ page 103	
	Function Keys *	→ page 106		
	System *	Date and Time	→ page 110	
		Security *	→ page 111	
		Display *	→ page 112	
		Local Contacts *	→ page 113	
		All Calls *	→ page 113	
Upload Tones *		→ page 116		
Reboot and Reset		→ page 116		
Save and Restore		→ page 116		
Firmware Update		→ page 117		
Status		Device	→ page 119	
		System Log	→ page 119	
	SIP Protocol	→ page 119		
	PCAP Logging	→ page 120		

Running the setup assistant

Only available in administrator mode.

This assistant helps you to configure your phone. It will guide you through all the important steps involved in:

- Configuring your phone connections
- Configuring your e-mail account

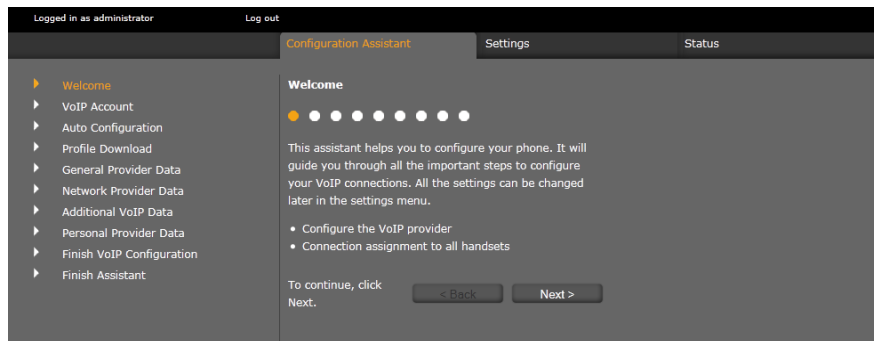

Afterwards, you will be able to change all the settings that you create using the setup assistant in the **Settings** tab (→ [page 80](#)).

When you have completed the fields on a screen, click on **Next >**. If you want to go back a screen to change something, click on **< Back**. Use **Cancel** to close the setup assistant.


- ▶ Make sure that you have the registration data for your VoIP provider to hand before you begin the configuration.
- ▶ Click on **Next >** to begin the configuration.

Configuring a VoIP account

You have the following options for configuring a VoIP account:

Auto Configuration	Configuration is completed without you needing to enter any information. Your VoIP provider must permit this for your account.
Profile Download	Your provider's default settings are used. You only have to enter your personal registration data.
Manual configuration	You create all the settings yourself.

Automatic configuration

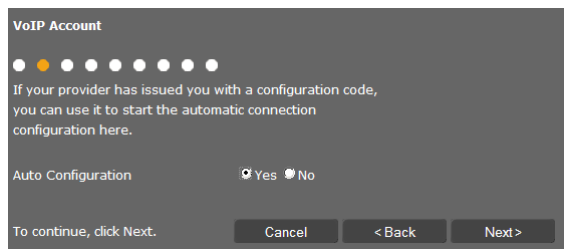

- ▶ Select **Yes** if your provider permits automatic configuration for your account and click on **Next >**.

The automatic configuration is now carried out. This may take a few minutes. Once the process is complete, the → **Completing configuration** screen will appear.

Configuration via provider profile

If your provider does not enable automatic configuration, your Gigaset DE410 IP PRO offers a range of provider profiles that make it easy for you to configure your VoIP accounts. Each profile contains the most important configuration settings for the provider concerned.

- ▶ Click on **No** if automatic configuration is not permitted and then click on **Next >**.
- ▶ The **Auto Configuration** screen will guide you through the rest of the process. Click on **Next >**.

The **Profile Download** screen will appear.

- ▶ Click on **Next >** to start the configuration.
- ▶ Select your **Country** and click on **Next >**.
- ▶ Select your **Provider** and click on **Next >**.

The most important configuration settings will now be loaded.

- ▶ Click on **Next >**.

The next step is for you to enter → **Personal provider data**.

Configuration without provider profile

If your provider is not on the list, select **Other Provider**.

- ▶ Select the required settings for your VoIP account on the following screens. Your provider will supply you with this data.

General provider data

Domain

Specify the last part of your SIP address (URI).

Example: For the SIP address **987654321@provider.com** you would enter **provider.com**.

Proxy Server Address

The SIP proxy is your VoIP provider's gateway server. Enter the IP address or the DNS name of your SIP proxy server.

Example: **myprovider.com**.

Proxy Server Port

Enter the number of the communication port that the SIP proxy uses to send and receive signalling data (SIP port). Port 5060 is used by most VoIP providers.

Registration Server

Enter the IP address or the DNS name of your registrar server. The registrar is needed when the phone is registered. It assigns your SIP address (username@domain) to the public IP address/port number your phone uses to log in. With most VoIP providers, the registrar server is identical to the SIP server.

Example: **reg.myprovider.de**.

Registration Server Port

Enter the communication port used on the registrar. Port 5060 is used in most cases.

Registration Refresh Time [sec]

Enter the time intervals at which the phone should repeat the registration with the VoIP server (SIP proxy) (a request will be sent to establish a session). The repeat is required so that the phone's entry in the tables of the SIP proxy is retained and the phone can therefore be reached. The repeat will be carried out for all activated VoIP phone numbers. The default is 120 seconds.

If you enter 0 seconds, the registration will not be repeated periodically.

▶ Click on **Next** >.

Network provider data

The phone needs to know its public address in order to receive caller voice data.

The SIP protocol recognises the following options:

- ◆ The phone requests the public address from a STUN server on the Internet (Simple Transversal of UDP over NAT). STUN can only be used with asymmetric NATs and non-blocking firewalls.
- ◆ The phone does not direct the connection request to the SIP proxy but to an outbound proxy on the Internet that supplies the data packets with the public address.

The STUN server and outbound proxy are used alternately to work around the NAT/firewall in the router/gateway.

▶ Enter the required data for the STUN server **or** outbound proxy:

STUN enabled

Click on **Yes** if you want your phone to use STUN as soon as it is used on a router with asymmetric NAT.

STUN Server Address

Enter the DNS name or the IP address of the STUN server on the Internet. If you have selected **Yes** in the **STUN enabled** field, then you must complete this field.

STUN Server Port

Enter the number of the communication port on the STUN server.
The default port is 3478.

Web configurator – configuring the phone on a PC

STUN Refresh Time [sec]

Enter the time intervals (seconds) at which the phone should repeat the registration with the STUN server. The repeat is required so that the phone's entry in the tables of the STUN server is retained. The repeat will be carried out for all activated VoIP phone numbers. Ask your VoIP provider for the STUN refresh time if necessary. The default setting is 30 seconds.

NAT Refresh Time [sec]

Specify the intervals at which you want the phone to update its entry in the NAT routing table. Specify an interval in seconds that is a little shorter than the NAT session timeout. As a rule you should not change the default value for the NAT update. The default setting is 20 seconds.

Outbound Proxy Mode

Specify when the outbound proxy should be used.

Always All signalling and voice data sent by the phone is sent to the outbound proxy.

Automatically Data sent by the phone is only sent to the outbound proxy when the phone is connected to a router with symmetric NAT or a blocking firewall. If the phone is behind an asymmetric NAT, the STUN server is used. If you have set **STUN enabled** to **No**, or if you have not entered a STUN server, the outbound proxy will be used in all cases.

Never The outbound proxy is not used.

If you leave the **Outbound Server Address** field empty, the phone does not respond to the selected mode and operates as if **Never** were selected.

Outbound Server Address

Enter the DNS name or the IP address of your provider's outbound proxy. With many providers, the outbound proxy is identical to the SIP proxy.

Outbound Proxy Port

Enter the number of the communication port used by the outbound proxy. The default port is 5060.

Automatic Negotiation of DTMF Transmission

DTMF signalling is required, for example, for querying and controlling certain network mailboxes via digit codes or for remote operation of the local voice mail. Select whether the setting should be made automatically. If you select **No**, you must determine the setting for the DTMF transfer yourself.

Send Settings for DTMF Transmission

To send DTMF signals via VoIP, you must define how the key codes are to be converted to DTMF signals and sent:

- | | |
|-----------------|--|
| Audio | As audible information in the voice channel, i.e., it is not known which key has been pressed. |
| RFC 2833 | As a value (= key pressed) in an RTP packet. |
| SIP Info | As an "SIP Info" message.
The value (= key pressed) is sent as an SIP data packet. |

Ask your VoIP provider which type of DTMF transmission it supports.

- ▶ Click on **Next** >.

Personal provider data

In both cases of manual configuration, with and without a provider profile, you now enter the personal registration data that you have received from your VoIP provider.

- ▶ Enter the following data:
 - **Authentication Name**
 - **Authentication Password**
 - **Username**
 - **Display Name**

You can also enter a name of your choice for this phone connection. This is advisable if you use multiple VoIP accounts.

- ▶ Enter a **Connection Name**.
- ▶ Click on **Next** > to finish configuring the VoIP account.

Completing configuration

The data for the configured VoIP account is displayed.

- ▶ To change the settings, click on < **Back**.
- ▶ If you want to configure another VoIP account, check the relevant box. In this case, the Web configurator will return to the start screen when you press **Next** > (→ **Configuring a VoIP account**).
- ▶ Click on **Finish** to end the setup assistant.
- ▶ Click on **Next** > to configure another VoIP account.

Closing the assistant

You have now successfully configured your phone using the Web configurator. The following data is displayed once again:

- The number of VoIP accounts configured
- The name of the default account for outgoing calls
- ▶ Click on **Finish** to close the assistant and apply the settings.
- ▶ Click on < **Back** if you want to make changes to your settings.

Configuring phone settings via the Web configurator

The **Settings** menu of the Web configurator allows you to change settings that you have already made using the phone's display menu or the assistant, or that were the default settings when the phone was delivered. You also have further configuration options.

The menu offers the following functions:

◆ **Network and Connections** (→ [page 80](#))

Configure the settings for the local network, server and phone system, set up other VoIP accounts and create the security settings.

◆ **Telephony** (→ [page 90](#))

Edit your configured VoIP accounts, optimise the quality of the voice connections, configure phone functions such as call divert and dialling plans and set up blacklists and voice mail services.

◆ **Messaging** (→ [page 100](#))

Configure the Message Centre (MWI) for your device.

◆ **Services** (→ [page 101](#))

Create settings for using directories and set up a door interphone .

◆ **Function Keys** (→ [page 106](#))

Assign frequently used functions to the programmable keys on your phone.

◆ **System** (→ [page 109](#))

Change the basic settings on your phone, e.g., date/time or display settings. You can also restart the system or add new firmware.

Network and connectors

Only available in administrator mode.

All of the settings for connecting your phone to the local network must be correct to enable communication with other devices in the network and phone calls via the Internet.

If you use the Web configurator, your phone is already connected to the local network. You can use the **Network and Connections** menu to change and extend these settings. You can also configure additional VoIP accounts and create settings for phone connections:

◆ LAN settings (→ [page 81](#))

◆ Server and phone systems (→ [page 86](#))

◆ QoS settings (Quality of Service (→ [page 87](#))

◆ VoIP settings (→ [page 88](#))

◆ Security settings (→ [page 89](#))

LAN settings

Warning

If an error occurs when you are changing the LAN settings, the PC connection to the phone may be cancelled and you will no longer have access to the Web configurator.

If this happens, you must re-establish phone access to the local network via the display menu (→ [page 66](#)).

Settings → Network and Connections → LAN Settings

Assigning the network address

Network Type

- ▶ Select the IP protocol that is used in your network (**IPv4** or **IPv6**).

You may be asked to configure additional settings depending on your selection.

IPv4 configuration

- ▶ Select **Dynamic** if your device receives the IP address via a DHCP server.
- ▶ Select **Static** if your device receives a fixed IP address.

If the **Dynamic** setting is selected, all further settings are configured automatically. They are displayed and cannot be changed.

If you selected **Static** as the address type, you must create the following settings:

The screenshot shows a configuration screen with a dark background. At the top, 'IP Address Type' is set to 'Static' in a dropdown menu. Below are several rows of settings, each with a label on the left and a set of four input fields on the right. The 'IP Address' row shows 192, 168, 2, and 101. The 'Subnet Mask' row shows 255, 255, 255, and 0. The 'Standard Gateway' row shows 192, 168, 2, and 1. The 'Preferred DNS Server' and 'Alternate DNS Server' rows each have four empty input fields.

IP Address Type	Static			
IP Address	192	168	2	101
Subnet Mask	255	255	255	0
Standard Gateway	192	168	2	1
Preferred DNS Server				
Alternate DNS Server				

IP Address

Enter an IP address for your phone. This IP address allows your phone to be reached by other subscribers in your local network (e.g., PC).

The IP address comprises four individual groups of numbers with decimal values from 0 to 255 that are separated by a dot, e.g., 192.168.2.1.

Configuring phone settings via the Web configurator

Please note:

- The IP address must be included in the address block used by the router/gateway for the local network. The valid address block is defined by the IP address for the router/gateway and the subnet mask (see example).
- The IP address must be unique across the network, which means that it must not be used by another device connected to the router/gateway.
- The fixed IP address must not belong to the address block that is reserved for the DHCP server for the router/gateway.

Check the settings on the router or ask your network administrator.

Example:

Router IP address:	192.168.2.1
Network subnet mask	255.255.255.0
DHCP server address block	192.168.2.101 – 192.168.2.255
Possible IP addresses for the phone	192.168.2.2 – 192.168.2.100

Subnet Mask

The subnet mask specifies how many parts of an IP address the network prefix must comprise.

For example, 255.255.255.0 means that the first three parts of an IP address must be the same for all devices in the network, while the last part is specific to each device. In subnet mask 255.255.0.0, only the first two parts are reserved for the network prefix. Enter the subnet mask that is used by your network.

Standard Gateway

Enter the IP address for the standard gateway through which the local network is connected to the Internet. This is generally the local (private) IP address for your router/gateway (e.g., 192.168.2.1). Your phone requires this information to be able to access the Internet.

Preferred DNS Server

Enter the IP address for the preferred DNS server. DNS (Domain Name System) allows you to assign public IP addresses to symbolic names. The DNS server is required to convert the DNS name into the IP address when a connection is being established to a server.

You can specify the IP address for your router/gateway here. This forwards address requests from the phone to its DNS server.

There is no default setting for a DNS server.

Alternate DNS Server

Enter the IP address for the alternate DNS server that should be used in situations where the preferred DNS server cannot be reached.

IPv6 configuration

IP Address Type

- ▶ Select **Auto Configuration** if your device receives the IP address via a DHCP server.
- ▶ Select **Static** if your device receives a fixed IP address.

If **Auto Configuration** is selected, all further settings are made automatically. They are displayed here and cannot be changed.

If you selected **Static** as the address type, you must create the following settings:

The screenshot shows a configuration interface with the following elements:

- IP Address Type:** A dropdown menu currently showing 'Static'.
- IP Address:** An empty text input field.
- Prefix Length:** A text input field containing the value '64'.
- Preferred DNS Server:** An empty text input field.
- Alternate DNS Server:** An empty text input field.

IP Address

Enter an IP address for your phone. This IP address allows your phone to be reached by other subscribers in your local network (e.g., PC).

The IP address comprises 128 bits and is represented by eight blocks of hexadecimal figures from 0 to FFFFFFFF that are separated by a colon, e.g., 2001:b021:189:0:205:5dff:fe6b:87.

The IP address comprises a prefix and an interface identifier. The length of the prefix (usually 64 bits) is determined by the **Prefix Length** value.

Prefix Length

The prefix length stipulates how many bits of the IP address are used for the network prefix. Enter the prefix length that is used in your network.

Preferred DNS Server

Enter the IP address for the preferred DNS server. DNS (Domain Name System) allows you to assign public IP addresses to symbolic names. The DNS server is required to convert the DNS name into the IP address when a connection is being established to a server.

You can specify the IP address for your router/gateway here. This forwards address requests from the phone to its DNS server.

There is no default setting for a DNS server.

Alternate DNS Server

Enter the IP address for the alternate DNS server that should be used in situations where the preferred DNS server cannot be reached.

Configuring phone settings via the Web configurator

VLAN tagging

A local network can be divided into logical subnetworks, so-called VLANs (Virtual Local Area Network, standard IEEE 802.1Q). Multiple VLANs share a physical network and its components, e.g., switches. Data packets of a VLAN are not forwarded to another VLAN. VLANs are often used to separate the data traffic of different services (Internet telephony, Internet TV, ...) and to define different priorities for the data traffic.

You can operate your phone and a PC connected to your phone's PC port in two different VLANs. You enter the VLAN identifiers (VLAN tag) here. You get them from your network operator.

Warning

If you operate the PC and the phone in different VLANs you cannot longer access the phone's Web configurator directly from the PC.

► Select

- No** If you don't use VLAN (default).
- LAN Port only** If you operate the phone and the PC within the same VLAN.
- LAN and PC Port** If you operate your phone and the PC within different VLANs.

VLAN Tagging

You should receive the tagging values of a virtual LAN from your provider. Wrong settings will require hardware reset.

Use VLAN Tagging

VLAN LAN Port

VLAN Identifier (1..4094)

Voice Priority

Data Priority

VLAN PC Port

VLAN Identifier (1..4094)

VLAN Priority

- ▶ Enter the VLAN tag of your virtual network in the **VLAN Identifier (1..4094)** field.
If you have selected **LAN and PC Port** enter the different VLAN identifiers under **VLAN LAN Port** and **VLAN PC Port**.
Value range: 1 – 4094

Warning

If you enter an incorrect value here, you must reset the phone to its default settings (→ [page 64](#)). After this you must re-establish phone access to the local network (→ [page 66](#)).

- ▶ On the menus **Voice Priority** and **Data Priority**, select the priorities you want for the transfer of voice and data of the LAN port.
- ▶ If you selected **LAN and PC Port** additionally select the **VLAN Priority** for PC data transfer.

VLAN priority

Data packets from VLANs can be prioritised. The priority determines whether the data traffic from a VLAN is given preferential treatment by the network components. You can define the priority for voice and data separately. In the case of a local network with a lot of data traffic, you can achieve better-quality phone connections by giving a high priority to voice data.

Range of values and their Class of Service assignments (according to IEEE 802.1p):

- 0 No priority (Best Effort)
- 1 Background services, e.g., News Ticker (Background)
- 2 Not defined
- 3 General data services (Excellent Effort)
- 4 Control services, e.g., routing (Controlled Load)
- 5 Video
- 6 Voice data (Voice)
- 7 Top priority for network control software (Network Control)

Please note

Further options for optimising the voice quality are available under **QoS settings (Quality of Service)** → [page 87](#).

Saving settings

- ▶ Click on **Save** to save your settings on the **LAN Settings** screen.

Server and phone systems

If you operate a separate HTTP server or a phone system in your local network, use this screen to configure access to your phone.

Settings → **Network and Connections** → **Server and Phone Systems**

Configure HTTP proxy

- ▶ Select whether you want to release a separate proxy server in the network for your phone.
- ▶ If **Yes**, enter the IP address for the proxy server in the **Proxy Server Address** field.
- ▶ The **Proxy Server Port** is preset to 80. Change this if your server uses a different port.

Own HTTP server settings

- ▶ If you operate your own HTTP server, enter the communication data.

HTTP Port

Enter the number for the port to be used for communication by the HTTP server. The default setting is 80

HTTPS Port

Enter the number for the port to be used for secure connections by the HTTP server. The default setting is 443

HTTP Connection Type

Select which connections can be established:

HTTP Unsecured connection

HTTPS Secure connection

HTTP + HTTPS Both secure and unsecured connections

Automatic logout [min]

Enter the time (minutes) after which an HTTP connection should automatically end if no entries are made.

Phone systems

If your phone is connected to a phone system, select what type of phone system it is.

Connected with phone system (sample selection)

Gigaset T500/300 The phone is connected to a Gigaset T500 PRO or a Gigaset T300 PRO. These are the recommended phone systems to achieve an optimum support of the telephone features.

Standard The phone is connected to any phone system.

Asterisk

...

Call Manager

If the phone is connected to a Gigaset phone system:

- ▶ Select how you want to accept calls that you initiate via the call manager of the phone system. The following options are available:

via Headset You make the call via the headset connected to the phone.

via Handsfree You make the call via the phone's speaker.

Note: Use this setting if you want to allow broadcast messages (e.g. announcements) of the phone system to be output via your phone.

No If a call is initiated via the call manager your own phone will ring. Lift the receiver to make the call.

Saving settings

- ▶ Click on **Save** to save your settings on the **Server and Phone Systems** screen.

QoS settings (Quality of Service)

On this screen you can optimise the voice quality of your IP telephone.

The voice quality depends on the priority of the voice data in the IP network. Prioritising the VoIP data packets is done using the QoS protocol DiffServ (Differentiated Services). DiffServ defines a number of classes for the quality of service and, within these classes, various priority levels for which specific prioritisation procedures are defined.

You can specify different QoS values for SIP and RTP packets. SIP packets (Session Initiation Protocol) contain the signalling data, while RTP (Real-time Transport Protocol) is used for the voice transfer.

Settings → **Network and Connections** → **QoS Settings**

VoIP Quality of Service (QoS)

Type of Services / Differentiated Services

SIP ToS/Diffserv (0..63)

RTP ToS/Diffserv (0..63)

- ▶ Enter your chosen QoS values in the **SIP ToS/Diffserv (0..63)** and **RTP ToS/Diffserv (0..63)** fields. Value range: 0 - 63.

Common values for VoIP (default setting):

SIP 34 High service class for fast switching of the data flow (Expedited Flow)

RTP 46 Highest service class for fast forwarding of data packets (Expedited Forwarding)

Warning

Do not change these values without consulting your network operator first. A higher value does not necessarily mean a higher priority. The value determines the service class, not the priority. The prioritisation procedure used in each case meets the requirements of this class and is not necessarily suitable for transferring voice data.

Detailed information on the Diffserv protocol can be found in [RFC 2474](#) and [RFC 3168](#).

Saving settings

- ▶ Click on **Save** to save your settings on the **QoS Settings** screen.

VoIP settings

On this screen you configure the ports for establishing VoIP connections.

Settings → **Network and Connections** → **VoIP Settings**

"Listen ports" for VoIP connections

"Listen ports" for VoIP connections

Use random ports Yes No

SIP port

RTP port

ICE enabled Yes No

- ▶ Select the ports on which your phone expects incoming VoIP connections.

Use random ports

- ▶ Select **Yes** if the phone should use any available ports for the SIP port and RTP port instead of fixed ports.

The use of random ports is advisable if you want multiple phones to be operated on the same router/gateway with NAT. The phones must then use different ports so that the NAT for the router/gateway is only able to forward incoming calls and voice data to one (the intended) phone.

- ▶ If you click on **No**, the phone uses the ports specified in **SIP port** and **RTP port**.

SIP port

Specify the local communication port that the phone should use to send and receive signalling data. Specify a number between 1024 and 49152. The default port number for SIP signalling is 5060.

RTP port

Specify the local communication port that the phone should use to receive voice data. Enter an even number between 1024 and 49152. The port number must not be the same as the port number in the SIP port field. If you enter an odd number, the next lowest even number will be selected automatically (e.g., if you enter 5003, then 5002 is set automatically). The default port number for voice transmission is 5004.

ICE enabled

Choose whether or not to use ICE (Interactive Connectivity Establishment). ICE is similar to STUN (→ [page 77](#)), a Session Initiation Protocol (SIP) method for overcoming NAT firewalls.

Saving settings

- ▶ Click on **Save** to save your settings on the **VoIP Settings** screen.

Security settings

This screen is where you create security settings for your phone.

Settings → **Network and Connections** → **Security Settings**

Remote management

- ▶ Select whether you want to **Allow access from other networks to the WEB configurator** (**Yes**) or not (**No**).

If you permit **Remote Management**, this increases the risk of unauthorised access to your device settings.

- ▶ Select the network protocol to be used for the communication:
 - **TLS** (Transport Level Security)
 - **UDP** (User Datagram Protocol)
 - **TCP** (Transmission Control Protocol)

Security settings

On this screen you can download server certificates onto your phone, delete downloaded certificates and specify how invalid certificates should be handled.

Server certificates allow a server to be digitally identified via SSL (Secure Sockets Layer). Operating a server with SSL requires a server certificate both for one-way authentication (server to the client) and for two-way authentication (between client and server). A server certificate has to be downloaded onto your device so that the device can carry out authentication.

The **Server Certificates** and **CA Certificates** lists contain all downloaded certificates.

- ▶ Select a certificate from one of the lists.
- ▶ Click on **Remove** to delete the certificate from the list.
- ▶ Click on **Details** to display information about the certificate.

Configuring phone settings via the Web configurator

Import a local certificate

In order for a certificate to be downloaded to your phone, it must be available in your network.

- ▶ Click on **Browse** to search for the file on your PC or in your network. Select the required file.
- ▶ Click on **Upload** to download the file onto the device.

Invalid Certificates

The list contains all invalid certificates.

- ▶ Select a certificate from the list.
- ▶ Click on **Accept** to accept the certificate anyway.
- ▶ Click on **Reject** to reject the certificate.

Secure Real Time Protocol (SRTP)

The Secure Real-time Transport Protocol (SRTP) allows voice data transferred with the Real-time Transport Protocol (RTP) to be encrypted.

- ▶ Activate or deactivate the **Secure Real Time Protocol (SRTP)**.
- ▶ Select whether you want to **Accept Non-SRTP Call** or not. If this function is activated, you also accept incoming calls from a number that does not use SRTP.

Saving settings

- ▶ Click on **Save** to save your settings on the **Security Settings** screen.

Telephony

The **Telephony** menu provides the following setting options:

- ◆ **Connections** (→ [page 91](#))
This is where you can configure your VoIP connections and establish new connections.
- ◆ **Audio (Voice quality)** (→ [page 93](#))
On this screen you can optimise the voice quality of your VoIP connections.
- ◆ **Ring tones** (→ [page 95](#))
This screen is only available in user mode. This is where you can configure the ringtones for your connections. In administrator mode, this setting can be found with the configuration data for the connection (**Telephony** → **Connections**).
- ◆ **Call divert** (→ [page 96](#))
On this screen you can define options for call divert and activate or deactivate this function.
- ◆ **Dialling plans** (→ [page 98](#))
The Dialling Plans screen is where you can define the use of area codes and VoIP connections for outgoing phone calls and enter the international and local area code for your phone connection.
- ◆ **Do not disturb (DND)** (→ [page 99](#))
You can use the blacklists to block incoming calls from selected numbers and also to block all anonymous calls.
- ◆ **Voice mail services** (→ [page 99](#))
On this screen you can configure your network mailbox.

Connections

Only available in administrator mode.

You can establish up to 6 telephony connections (VoIP accounts) for your phone.

Settings → Telephony → Connections

On this screen you can

- Set up a new connection via **Auto Configuration**
- See the status of the configured connections
- Activate or deactivate individual connections
- Define which of the connections are used by default for outgoing calls
- Change the configuration of connections or establish new connections
- Delete existing connections.

Setting up a new connection via Auto Configuration

- ▶ If you want to set up a new connection and your provider allows automatic configuration for the account, click on **Start**.

When the process is complete, the connection is displayed in the list.

Name/Provider	Status	Active	Default	Send Account	
01. Account_001 sipgate	Enabled	<input checked="" type="checkbox"/>	<input type="radio"/>	<input type="checkbox"/>	Edit
02. IP2 Other Provider	Disabled	<input type="checkbox"/>	<input type="radio"/>	<input type="checkbox"/>	Edit

Connections for the Gigaset DE410 IP PRO

The following information is shown for each configured connection:

Name/ Provider Name or number of the VoIP connection / Name of the VoIP provider

Status Status of the connection. The following statuses are possible:

Registered The connection is registered with the provider.

Not registered The connection is not registered with the provider.

Registration failed An error occurred during registration.

Server not accessible The registrar server specified during configuration is not available.

Disabled The connection is deactivated.

Configuring phone settings via the Web configurator

Activating/deactivating connections

Only activated connections can be used for Internet telephony.

- ▶ To use a configured connection, select **Active**.

Specifying a default line for outgoing calls

- ▶ Select **Default Send Account** for the connection that you want to use as the default line for your phone calls. Only one can be selected.

Establishing new connections or editing existing ones

- ▶ Click on **Edit** in the row of a configured connection to change its configuration.
 - ▶ Click on **Edit** in a row without a configured connection to establish a new connection.
- Only one connection can be configured at a time for mobile phones.

Configuring the connections

To do this you need the relevant information about your provider for Internet telephony.

- ▶ In the **Connection Name or Number** field enter a name of your choice or the phone number for this connection.
- ▶ Click on **Start Profile Download** to load a provider profile.

An assistant opens to guide you through the next steps.

- ▶ Select your **Country** and in the next step your **Provider**.
- ▶ If your provider is not in the list, select **Other Provider**.
- ▶ Click on **Finish**.

The selected provider profile is loaded.

Entering personal provider data

Now enter your personal login data that you received from your VoIP provider.

- ▶ Enter the following data:
 - **Authentication Name**
 - **Authentication Password**
 - **Username**
 - **Display Name**

Advanced settings

You can find further parameters for configuring your VoIP connection under **Advanced Settings**.

- ▶ Click on **Show** next to **Advanced Settings**.

You will find detailed information on configuring a VoIP account in the section entitled **Configuring a VoIP account** on [page 75](#).

Counting missed and accepted calls

Missed and accepted calls for this VoIP account are recorded in the call lists for the phone if this function is activated (→ [page 43](#)).

- ▶ Open the **Advanced Settings** area.

- ▶ Select **Yes** for **Missed/accepted calls count** if you want to deactivate this function. The default setting is **Yes**.

Please note

If your telephone is connected to a Gigaset T500 PRO or Gigaset T300 PRO phone system, calls are managed by the phone system rather than locally using the telephone and are transferred to all phones assigned to it.

Allowing or blocking Call Waiting

If you receive another incoming call during a call, this is indicated by Call Waiting by default. For each connection, it is possible to set whether or not Call Waiting is permitted.

- ▶ Open the **Advanced Settings** area.
- ▶ Select **No** for **Call Waiting** if you wish to deactivate this function. Default setting: **Yes**

Settings for the ringer

For each connection, you can define the ring tone.

- ▶ Open the **Advanced Settings** area.
- ▶ Select a **Melody**.
- ▶ Click on **Test** to play back the selected melody.

Saving settings

- ▶ Click on **Save** to save your settings for the connection.

Deleting a connection

- ▶ Click on **Delete connection** to delete the displayed connection.

Audio (Voice quality)

Only available in administrator mode.

The voice quality of your VoIP calls is determined by the codec used for the transmission. To increase the quality, more data must be transmitted. Depending on the bandwidth of your Internet connection, this can then lead to problems with the volume of data – especially if two VoIP calls are made simultaneously – so that the transmission no longer takes place smoothly. The following settings allow you to adjust your Gigaset to your individual Internet connection.

Settings → Telephony → Audio

Configuring phone settings via the Web configurator

You can set the following parameters for the voice quality:

The screenshot shows a web configurator interface with the following elements:

- Packed time for RTP packages [ms]:** A dropdown menu set to 20.
- Voice Quality:** Three radio buttons: Optimised for high bandwidth, Optimised for low bandwidth, and Own Codec preference.
- Selected codecs:** A list box containing G.722, G.711 a-law, and G.711 μ-law.
- Available codecs:** A list box containing G.726, iLbc, and G.729A.
- Buttons:** <Add, Remove>, Down, and Up.
- Silence Suppression:** Radio buttons for Yes (selected) and No.

Packed time for RTP packages

- ▶ Select the interval for sending RTP packets (20 or 30 ms).

RTP (Real-time Transport Protocol) is a protocol for the continuous transmission of audio-visual data (streams) via IP-based networks.

Voice quality

- ▶ Select the voice quality that matches the bandwidth of your DSL connection.
 - **Optimised for high bandwidth**
 - **Optimised for low bandwidth**
 - Select **Own Codec preference** if you want to determine the codecs yourself.

Both parties involved in a phone connection (caller/sender and recipient) must use the same voice codec. The voice codec is negotiated between the sender and the recipient when establishing a connection. You can influence the voice quality by selecting (bearing in mind the bandwidth of your Internet connection) the voice codecs your phone is to use, and specifying the order in which the codecs are to be suggested when a VoIP connection is established.

- ▶ Select the required codecs and define the sequence in which they should be used.

The following voice codecs are supported by your phone:

G.722 The broadband voice codec G.722 works at the same bit rate as G.711 (64 kbit/s per voice connection) but at a higher sampling rate (16 kHz) and therefore provides excellent sound quality.

G.711 a law/G.711 μ law

Excellent voice quality (comparable with ISDN). The necessary bandwidth is 64 kbit/s per voice connection.

- G.726** Good voice quality (inferior to that with G.711 but better than with G.729). Your phone supports G.726 with a transmission rate of 32 kbit/s per voice connection.
- iLbc** Average voice quality. This codec works with 30-ms or 20-ms blocks. The data rate is 13.33 kbit/s (30-ms blocks) or 15.2 kbit/s (20-ms blocks).
- G.729A** Average voice quality. The necessary bandwidth is less than or equal to 8 kbit/s per voice connection.

Silence suppression

Silence suppression means that no data packets are sent during a pause in speaking. This means a lower data volume but call participants may interpret it as an interruption to the connection.

- ▶ Select **No** if you do not want silence suppression. The default setting is **Yes**.

Saving settings

- ▶ Click on **Save** to save your settings on the screen.

Ring tones

Only available in user mode. In administrator mode you set the ring tones when configuring the connection (→ [page 93](#)).

You can set an individual ring tone for each configured VoIP connection.

Settings → Telephony → Ring Tones

An entry exists for each VoIP connection.

- ▶ Select a **Melody** from the list.
- ▶ Click on **Test** to play back the selected melody.

Saving settings

- ▶ Click on **Save** to save your settings on the screen.

Please note

You can upload further ring tones from the PC to your telephone (→ [page 116](#)).

Call divert

For each configured VoIP account you can automatically forward incoming calls to another phone number.

Settings → Telephony → Call Divert

Connection	When	Phone Number
IP 1	<input type="text" value="Off"/>	<input type="text"/>
IP 2	<input type="text" value="Off"/>	<input type="text"/>

- ▶ Specify for each VoIP account in which cases a call should be diverted.

None No call divert

All Call divert for all incoming calls

No Answer Call divert if you do not answer the call

In the **Waiting time for no answer (value range: 1 - 600 sec)** field enter the time in seconds after which call divert is to be activated.

When Busy Call divert if you are currently speaking to another participant

- ▶ Enter the **Phone Number** to which calls are to be forwarded.
- ▶ Click on **Save** to save your settings on the screen.

Local settings

On this screen, you provide details about the location of your phone. These are used to determine the international and local area dialling codes as well as country-specific tones (e.g., dialling tone or ringback tone).

Settings → Telephony → Local Settings

Area Codes	
Country	<input type="text" value="Germany"/>
International	
Prefix	<input type="text" value="00"/>
Code Number	<input type="text" value="49"/>
Local	
Prefix	<input type="text" value="0"/>
Code Number	<input type="text"/>

Selecting the country

The time zone is determined automatically based on the country you select.

- ▶ Select the **Country** in which you are using your phone from the list.

Setting dialling codes

Depending on your country selection, the international and (if relevant for that country) national dialling codes are entered in the **Prefix** and **Code Number** fields automatically.

If your country is not offered in the list of countries enter the dialling code yourself. Save the complete area code (with international code) for the area in which you are using the phone. In general, you must always dial the area code for VoIP calls – even for local calls. To avoid having to dial the area code for local calls, your phone prefixes all VoIP calls in the local area with the area code entered, i.e., all numbers that do not begin with 0 – even when dialling numbers from the directory and other lists.

Exceptions: Numbers for which you have set dialling plans.

- ▶ Select **Other Country** from the end of the **Country** list.
- ▶ Enter the full prefix for the country in which you use your phone. Otherwise errors may occur with phone connections or during data exchange (e.g., between a fixed line network and a mobile network).

The prefix consists of the international prefix (**International: Prefix and Code Number**, e.g. 00 49 for Germany) and, if applicable, the prefix used for calls within the country (**Local: Prefix and Code Number**, e.g. 0 for national long-distance calls in Germany).

Setting country-specific ringback and dialling tones

Tones, e.g. dialling tone, ringback tone, busy tone or call waiting tone, vary from one country or region to another. You can choose from various tone groups for your phone.

The **Tone Scheme** is automatically determined on the basis of the country selected above. You can change the setting.

- ▶ Select the country or region whose tone scheme should be used for your phone.

Saving settings

- ▶ Click on **Save** to save your settings on the screen.

Dialling plans

Only available in administrator mode.

You can use dialling plans to define which phone numbers should be called using which configured VoIP account and whether an area code should be dialled first.

Settings → Telephony → Dialling Plans

Phone Number	Use Area Codes	Connection	Comment		Active
<input type="text"/>	<input type="checkbox"/>	<input type="text" value="IP3"/>	<input type="text"/>	<input type="button" value="Delete"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="text" value="IP7"/>	<input type="text"/>	<input type="button" value="Delete"/>	<input type="checkbox"/>
<input type="text"/>	<input type="checkbox"/>	<input type="text" value="IP5"/>	<input type="text"/>	<input type="button" value="Add"/>	

- ▶ Enter the **Phone Number** that the dialling plan is to apply to.
- ▶ Select **Use Area Codes** if you want to call this number with an area code.
- ▶ Select the connection that should be used to call this phone number.
- ▶ Enter a name for this dialling plan in the **Comment** field.
- ▶ Click on **Add** to add the rule to the list.
- ▶ Click on **Delete** to delete a rule from the list.
- ▶ Select **Active** if you want to activate the rule.

Access code

The prefix is automatically added to numbers during dialling.

- ▶ Define when it should be used:
 - **None** (if you do not use an access code)
 - With numbers from **Directory & Call lists**
 - With **All** numbers

Saving settings

- ▶ Click on **Save** to save your settings on the **Dialling Plans** screen.

Do not disturb (DND)

Block individual phone numbers and/or all anonymous calls. You will then be unavailable for these calls; your phone will not ring.

Settings → Telephony → Do Not Disturb

- ▶ Select **Yes** to activate the **Do Not Disturb** function.
- ▶ Enter the **Name** and **Phone Number** for the call.
- ▶ Click on **Add** to save the entry to the do not disturb list.
- ▶ Click on **Delete** to delete an entry.
- ▶ Click on **Delete all** to delete all entries.
- ▶ Activate the **Block anonymous caller** option to block all anonymous calls.
- ▶ Click on **Save** to save your settings on this screen.

Voice mail services

Only available in administrator mode.

Some VoIP providers offer answering machines on the network – network mailboxes. These accept incoming calls on the corresponding VoIP phone number. You can access voice mails on the network mailbox via the display menu (→ [page 54](#)) or the Message Centre (→ [page 56](#)).

To record all calls, set up a network mailbox for each of your VoIP accounts.

Settings → Telephony → Voice Mail Services

- ▶ Enter the **Mailbox Number** for the VoIP connection and activate the network mailbox.
- ▶ Click on **Save** to save the settings.

Messaging

Only available in administrator mode.

The **Messaging** menu provides the option to configure the behaviour of the Message Centre key (MWI = Message Waiting Indication).

MWI light

The Message Centre allows you to access your voice mails, missed calls, e-mails and missed alarms at the press of a key (☒) (→ [page 56](#)). This key flashes if a new message has been received. You can switch the flashing on or off for every message type. (MWI = Message Waiting Indication)

Settings → Messaging → MWI Light

Missed Calls	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Voice Mail	<input checked="" type="radio"/> Yes	<input type="radio"/> No
MWI notification	<input checked="" type="radio"/> silent	<input type="radio"/> beep

- ▶ Select the message type for which the receipt of a new message should be indicated by a flashing Message Centre key.
 - **Missed Calls**
 - **Voice Mail**
- ▶ Select whether the **MWI notification** (the receipt of a new message) should also be indicated by a beep (**beep**) or only by flashing (**silent**).
- ▶ Click on **Save** to save the settings.

Services

Only available in administrator mode.

The **Services** menu offers the following functions:

- ◆ Setting up door interphones
- ◆ Assigning an online directory (→ [page 102](#))
- ◆ Assigning an LDAP directory (→ [page 103](#))

Door interphone

You can operate one or more door interphones with video surveillance using the phone → [page 57](#). Enter the data for the door interphone on this page.

Note

The door interphone can also be set up for your phone using the Gigaset phone system. If automatic configuration is permitted, configuration is carried out automatically on your phone.

Settings → Services → Door Interphone

Name	SIP ID	DTMF code	
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="button" value="Add"/>


- ▶ Enter a name and the SIP ID for the camera.
- ▶ Enter the code for the door opener in the **DTMF code** field. This MFV code is required to operate the door opener from the phone. The MFV code can be found in the description of your door interphone.
- ▶ Click on **Add** to add a camera to the list.
- ▶ Click on **Delete** if you want to remove a camera from the list.
- ▶ Click on **Save** to save your settings.

Online directory

If you want to use an online directory (→ [page 51](#)), select the provider on this screen who supplies the directory on the Internet. Also specify which service you want to use.

Settings → Services → Online Directory

The available provider directories are displayed.

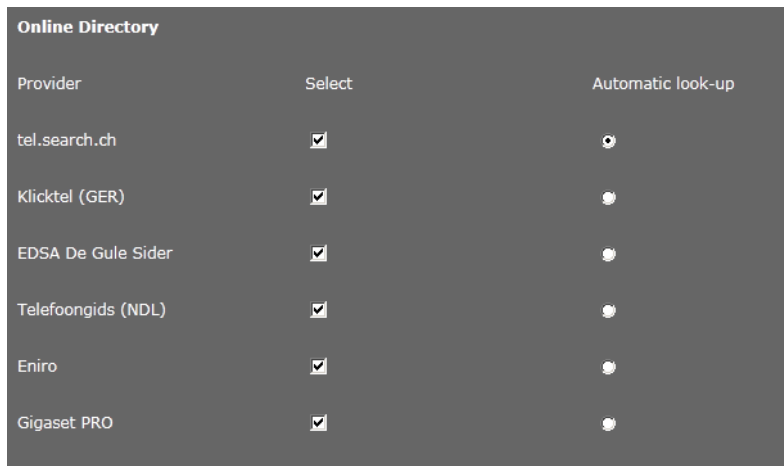

Provider	Select	Automatic look-up
tel.search.ch	<input checked="" type="checkbox"/>	<input type="radio"/>
Klicktel (GER)	<input checked="" type="checkbox"/>	<input type="radio"/>
EDSA De Gule Sider	<input checked="" type="checkbox"/>	<input type="radio"/>
Telefoongids (NDL)	<input checked="" type="checkbox"/>	<input type="radio"/>
Eniro	<input checked="" type="checkbox"/>	<input type="radio"/>
Gigaset PRO	<input checked="" type="checkbox"/>	<input type="radio"/>

- ▶ Select the providers whose online directories you want to use by selecting the check boxes under **Select**.
- ▶ If you select the **Automatic look-up** option, when a call comes in the online service automatically looks up the name of the caller in the online directory. This function must be available for the provider directory.

Configuring an additional provider

- ▶ To use the online services of another provider, enter the access data under **Settings for additional provider**:
 - **Provider Name**
 - **Server Address**
 - **Username**
 - **Password**

- ▶ Select the service(s) you want to use:
 - **White Pages**
public directory supplied on the Internet by the provider entered above
 - **Yellow Pages**
yellow pages supplied on the Internet by the provider entered above
 - **Private NetDirectory**
directory managed by yourself, if enabled by your provider

You can enable one, two or all three services.



The screenshot shows a dark grey interface with two elements: a text input field labeled "Name of directory" and a checkbox labeled "Enable 'White Pages'". The checkbox is currently unchecked.

- ▶ Enter a name for each of the selected services in the **Name of directory** field. This is the name under which the directory will be displayed on your device (→ [page 51](#)).

Saving settings

- ▶ Click on **Save** to save your settings on the **Online Directory** screen.

LDAP directory

If your corporate network provides a directory via an LDAP server, you can access this on your phone (LDAP = Lightweight Directory Access Protocol). You can set up the function on this screen. You will need information about the configuration of the LDAP server to do this.

Settings → Services → LDAP




- ▶ Enter a name in the **Name of directory** field. This is the name under which the directory will be displayed on your device (→ [page 50](#)).
- ▶ Enter all the data for your LDAP server and the directory:

Attributes

A range of attributes are defined in the LDAP database for a directory entry, e.g. surname, first name, telephone number, address, company, etc. The quantity of all attributes, which can be saved in one entry, is saved in the relevant LDAP server scheme. In order to be able to access attributes or define search filters, you must know the attributes and their designation in the LDAP server. The majority of attribute designations are standardised, however specific attributes can also be defined.

Configuring phone settings via the Web configurator

The Gigaset DE410 IP PRO supports the following attributes:

Attribute name	Name in the phone	Meaning
cn sn	Name with which the entry is listed (cn = common name, sn = surname)	
company or o	Company	Company name
telephoneNumber		Office number
mobile		Mobile number
homePhone		Private number
mail	E-mail	E-mail address
postalAddress	Street	Street
postalCode	ZIP	Post code
l (location)	City	City or town
c (country)	Country	Country

LDAP Name Attributes

Defines which information should be delivered as the search result for the search by name, e.g., surname only, surname and first name etc.

LDAP Number Attributes

Defines which telephone numbers are made available for an entry from the database, e.g. the office number (telephoneNumber), the mobile number (mobile).

Filter

Using the filter, you can define criteria against which specific entries can be searched in the LDAP database. One filter consists of one or more search criteria. A search criterion contains the query for an LDAP attribute, e. g. sn=%. The percent symbol (%) is a placeholder for the user entry.

LDAP Name Filter

The name filter decides which attribute is used for the search.

Example: (sn=%)

The percent symbol (%) is replaced by the name or part of the name entered by the user. If a user enters the letter "A" for example, all entries in which the attribute **sn** begins with "A" are searched for in the LDAP database. If the user then enters a "b", entries are searched in which the **sn** attribute begins with "Ab".

LDAP Number Filter

The number filter stipulates the criteria for the automatic completion of telephone numbers.

Example: `((telephoneNumber=%)(mobile=%))`

The percent symbol (%) is then replaced by the part of the telephone number entered by the user. When dialling, if a user enters the numbers "123" for example, all telephone numbers (office and mobile) that begin with "123" are searched for in the LDAP database. The telephone number is completed with the addition of information from the database.

Multiple criteria can be connected using logical AND (&) and/or OR (|) operators. The logical operators "&" and "|" are placed before the search criteria. The search criterion must be placed in brackets and the whole expression must be terminated with a bracket again. AND and OR operations can also be combined.

Examples:

AND operation: `(& (givenName=%) (mail=%))`

Searches for entries in which the first name **and** mail address begin with the letters entered by the user.

OR operation: `(| (cn=%) (sn=%))`

Searches for entries in which the common name **or** surname begin with the letters entered by the user.

Combined operation: `((& (givenName=%) (mail=%))(& (sn=%) (mail=%)))`

Searches for entries in which the first name **and** mail address **or** the surname **and** mail address begin with the letters entered by the user.

Other parameters

LDAP Display Name

Defines how the search result is displayed on the handset. Here, you can enter combinations of different name and number attributes and special characters. For the attribute value to be shown for the required attribute, the attribute name must be preceded by a percent symbol (%).

Note: The LDAP Display Name attribute is preset with %sn, %cn and cannot be changed.

Example

Entry data on the LDAP server:

cn	Administrator	telephoneNumber	0891234567890
sn	Black	mobile	012398765432
...		homePhone	09876543123

Attribute definition in the web UI:

LDAP Name Attributes cn sn mobile telephoneNumber homePhone

LDAP Number Attributes mobile telephoneNumber homePhone

LDAP Display Name %sn, %cn; %telephoneNumber / %homePhone / %mobile

The entry is shown on the handset as follows:

Black, Administrator; 0891234567890 / 09876543123 / 012398765432

Configuring phone settings via the Web configurator

Server Address

IP address for the LDAP server in your network.

Server Port

Port number that is used to provide the LDAP service. Default setting: 389

LDAP Search Base

Range in the hierarchical LDAP database where the search begins. All areas have defined designations.

Username

Access ID for the LDAP server.

Password

Password for the access ID to the LDAP server.

Max. Hits

Maximum number of search results to be displayed. Default setting: 50

- ▶ Select **Yes** for **LDAP lookup for incoming calls** if a search should be made for a caller in the LDAP directory instead of in the local directory.

Saving settings

- ▶ Click on **Save** to save your settings on this screen.

Function keys

On this screen you decide on the assignment of the directory key and programme the function keys.

Settings → Function Keys

Assigning the directory key

You can use the directory key **■** (navigation key **⊙**) to open the **local** directory by default (→ **page 47**). You can change this setting.


- ▶ Select which directory you want to access with the **Directory Key**:
 - **Local Directory** (local directory → **page 47**)
 - **LDAP** (corporate directory → **page 50**)
 - **Online directory** (→ **page 51**)
This entry is only shown if an online directory is configured (→ **page 102**). In this case the service name is displayed here.

Programmable keys

Your Gigaset DE410 IP PRO allows you to assign frequently used functions or phone numbers to up to 7 keys so that you can access them with one key press. You can increase the number of function keys by connecting extension modules (→ [page 16](#)). These are displayed under **Additional Program Keys**.

All available function keys are shown with the **Key setting**.

- ▶ Click on **Edit** to assign a phone number or function to a **Key**. The window for programming the selected key will open.

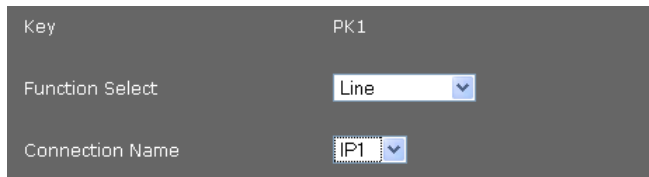

The screenshot shows a configuration window with a dark background. At the top, the label 'Key' is followed by 'PK1'. Below this, there are two dropdown menus. The first is labeled 'Function Select' and currently shows 'Line'. The second is labeled 'Connection Name' and currently shows 'IP1'. Both dropdown menus have a small blue arrow icon on the right side.

- ▶ Select the required function from the **Function Select** list.

Line Assigns a specific connection to the function key. You can use the key to make a call via this connection or to answer an incoming call for this connection. The key flashes if a call comes in and lights up if the line is busy.

- ▶ Select the required connection. All configured connections are displayed for you to choose from (→ [page 91](#)).

Park + Orbit

This function key is used to “park” a call. The participant hears the hold music. This function key allows you to transfer calls within a group, which share a common line. It will be configured on all extensions for the group. The “Park + Orbit” keys on all extensions flash if a call has been “parked” on an extension. The call can be picked up on any extension by pressing the key.

This function is only available if your telephone is connected to a Gigaset phone system and the number has been assigned to a group. The function key can also be assigned using the phone system.

- ▶ Enter the **Phone Number** of the shared line that is configured on the phone system as identifier.

Speed Dial

Assigns the speed dial for a phone number to the function key.

- ▶ Enter the phone number that is to be dialled using this function key.

Configuring phone settings via the Web configurator

BLF A function key that is configured as BLF (Busy Lamp Field) indicates the status of a specific line, e.g. of a colleague. The key lights up if a call comes in for the assigned number and flashes if the line is busy.

You can accept an incoming call if you have set the **Directed Call Pickup Code**.

This function is only available if your telephone is connected to a Gigaset phone system. The function key can also be assigned using the phone system.

- ▶ Enter the **Phone Number** of the line.
- ▶ If you wish you accept calls with the key, enter the **Directed Call Pickup Code**. For a Gigaset phone system this code is *8.

Call Divert

Assigns a call divert to the function key.

- ▶ Enter the connection for which you want the call divert to apply and enter the **Phone Number** to which the calls are to be diverted.

The call divert set up here applies to all calls. To configure different call-divert rules, use the screen **Settings** → **Telephony** → **Call Divert** (→ [page 96](#)).

DTMF

Assigns a number to the function key that is dialled using DTMF. This is required, for example, for querying and controlling certain network mailboxes via digit codes or for remote operation of the local answering machine.

- ▶ Enter the **Phone Number** that should be dialled using DTMF signalling.

Menu - Next call anonymous

Opens the **Select Services** → **Next Call anonymous** function in the telephone's display menu (→ [page 36](#)) to dial a call without transmitting the number.

Menu - Call Divert

Opens the **Select Services** → **Call Divert** function in the telephone's display menu (→ [page 40](#)) to activate/deactivate or set up a call divert.

None Nothing assigned

- ▶ Click on **Save** to accept the key assignment.

You will now be returned to the **Function Keys** screen, where you can programme more keys.

Saving settings

- ▶ Click on **Save** to save the settings on this screen.

Note

If your telephone is connected to a Gigaset T500 PRO or Gigaset T300 PRO phone system function keys assignments can also be downloaded to the phone's keys from the phone system, if automatic configuration is permitted.

The following phone system function keys are transferred to the telephone:

Speed Dial, Call Divert , BLF, Park + Orbit

In this way, various functions of the keys that can be configured on the phone system can be referred to. Further information on this can be found in the user guide for the phone system.

System settings

You can create the following settings in the **System** menu:

- ◆ Define the date and time or time server
- ◆ Change the security passwords for administrator and user identification (→ [page 111](#))
- ◆ Display – set brightness for the display as well as date and time format (→ [page 112](#))
- ◆ Edit your local directory (→ [page 113](#))
- ◆ Edit your call lists (→ [page 115](#))
- ◆ Load ring tones (→ [page 116](#))
- ◆ Restart the device and restore factory settings (→ [page 116](#))
- ◆ Save and restore telephone data (→ [page 117](#))
- ◆ Perform and configure a firmware update (→ [page 117](#))

Date and time


Only available in administrator mode.

On this screen you can specify a time server or enter the date and time manually.

Settings → **System** → **Date and Time**

Defining the time server

▶ Select **Yes** for **Automatic adjustment of system time with time server.**

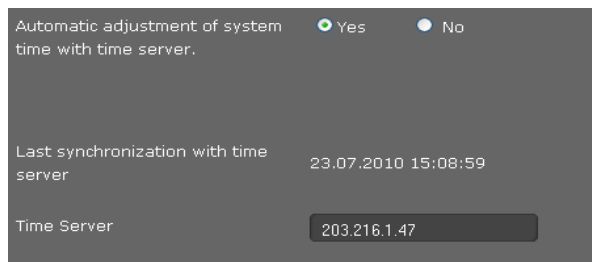

Automatic adjustment of system time with time server. Yes No

Last synchronization with time server 23.07.2010 15:08:59


Time Server 203.216.1.47

▶ Enter the IP address for the required time server in the **Time Server** field.

The most recent synchronisation carried out with the time server is shown.

Entering the date and time manually

▶ Select **No** for **Automatic adjustment of system time with time server.**

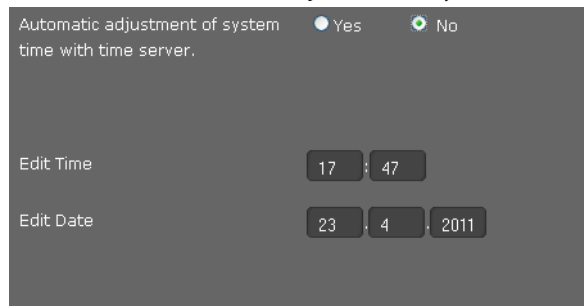

Automatic adjustment of system time with time server. Yes No

Edit Time 17 : 47

Edit Date 23 . 4 . 2011

▶ Enter the **Date and Time:**

- **Time format:** ss:mm
- **Date format:** dd.mm.yyyy

▶ Click on **Save** to save the settings.

If you have changed the date format in the **System** → **Display** menu, enter the date here as well in the **mm.dd.yyyy** format (→ [page 112](#)).

Setting the time zone

▶ Select your **Time Zone** from the list.

▶ Activate the **Automatically adjust clock to summer time changes** option if necessary.

Saving settings

- ▶ Click on **Save** to save the settings on this screen.

Security

Access to the Web configurator and administration functions on the phone is password-protected for security purposes.

Default settings:	User type	Password
	Administrator on Web configurator	admin
	User on Web configurator	user
	Administration on phone	admin

Settings → System → Security

On this screen you can change the passwords for administrator and use. For security reasons, you should always do this after getting started with your device and then at regular intervals.

- ▶ Enter new passwords:

Web Configurator	For access to the Web configurator in user mode
Web Configurator (Administrator)	For access to the Web configurator in administrator mode
Phone PIN	For access to administrator functions on the phone

- ▶ For security reasons, the passwords are not displayed. Select the option **Password visible**, to display the passwords in plain text.

Saving settings

- ▶ Click on **Save** to save the settings on this screen.

Display

On this screen you can configure a range of settings for your phone display.

Settings → System → Display

Setting the display brightness and contrast

You can set the display brightness to one of three levels and the contrast to one of six. These measures help to optimise the power consumption of your device.

- ▶ Select the **Brightness** of the display: 1, 2 or 3
- ▶ Select the **Contrast**: 1 - 6

Defining the format for the display screen

- ▶ Select your required setting:

Device Language	Language for the display screens
Web Interface Language	Language for the Web configurator
Tone Scheme	Different countries have different conventions for ringer settings, e.g., for the dialling tone, the busy tone etc. Select the country of the ringer schedule you want to use.
Date Format	The format that the date is shown in: dd.mm.yyyy e.g., 03.12.2011 for 3 December 2011 mm.dd.yyyy e.g., 02.17.2011 for 17 February 2011
24-hour clock	Select the format for the time display: On time is displayed in 24-hour format: e.g., 18:15 Off time is displayed in 12-hour format: e.g., 6:15 PM
Sort Criteria Directory	Select whether your local directory should be sorted by first names or surnames.

Saving settings

- ▶ Click on **Save** to save the settings on this screen.

Local contacts



This screen is for managing your local directory. All functions described here are also available via the phone's display menu (→ [page 47](#)).

Settings → System → Local Contacts




The entries in your local directory are displayed in alphabetical order with the contact name and the number you have defined as the default number.

Dialling a number from the directory

- ▶ Click on the phone symbol  next to the number. The number is dialled via the phone's handsfree function.
- ▶ Click on  to end the call or to interrupt the dialling.


Searching for an entry

- ▶ In the search field in the top right, enter a name or part of a name and click on the magnifier symbol . All entries beginning with the entered string are displayed.

Creating a new entry

- ▶ Click on the  button to create a new entry.


The screenshot shows a form for creating a new contact. It has a dropdown arrow on the left and a save icon on the right. The fields are: First Name (text input), Surname (text input), Phone (Home) (text input with a home icon and a plus sign), Phone (Work) (text input with a work icon and a plus sign), Phone (Mobile) (text input with a mobile icon and a plus sign), and Default Number (dropdown menu).

- ▶ Enter the **First name** and **Surname** as well as the numbers for the contact. You can enter two private, business and/or mobile numbers each.
- ▶ If you have entered multiple numbers, select one of them as the **Default Number**.
- ▶ Click on  to save the entry.

Configuring phone settings via the Web configurator

Displaying an entry

- ▶ Click on the arrow ▶ in front of the name to display the entry in full.

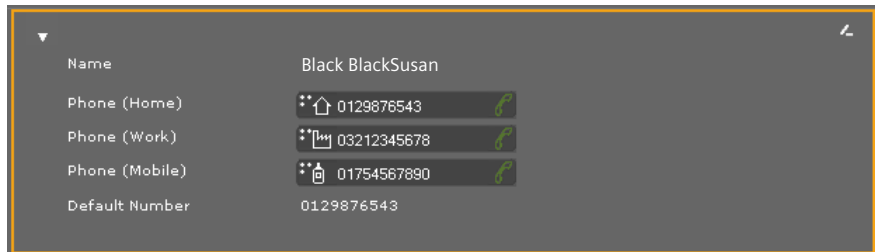

- ▶ Click on the arrow ▼ in the top left to hide the contact details and return to the list.

Editing the entry

- ▶ Click on  to edit the entry.

Deleting the entry

- ▶ First click on  and then on  to delete the entry.

All calls

This screen is for managing your call lists. All features described here are also available via the phone's display menu (→ [page 43](#)).

Calls(6)						
▲ Date	Time	Line	Caller		Duration	
10.03.2011	16:03	1	→ Black Susan	**🏠 089878970987	00:02:50	✕
28.03.2011	10:55	1	← Tim Brown	**🏠 08912121212@sipgate	00:01:04	✕
05.04.2011	15:22	1	→ Forster Fred	**🏠 68070085	00:00:00	✕
05.04.2011	15:22	1	→ unknown	**🏠 68000000	00:00:50	✕
05.04.2011	15:23	1	→ White Phil	**🏠 09876543	00:00:00	✕
05.04.2011	15:35	1	↔ 01222222222	**🏠 01222222222@sipga	00:00:40	✕

Date/Time

Time of the call/conference call.

Use ▼ ▲ to sort the list in ascending/descending order according to date.

Line

VoIP account used to make the call.



Outgoing call made by you



Accepted call



Missed call

Caller

Name, if known, and number of the caller.



Call participant.



End the call/conference call with this participant.

Duration

Time spent connected to this participant.




Delete entry.

Loading ringer tones

You can download ringer tones from the PC to the device's resource directory. The data on the PC must be in the following format:

Format	Size
WAV CCITT u-Law 8k mono	max. 40 KB

Settings → System → Upload Tones

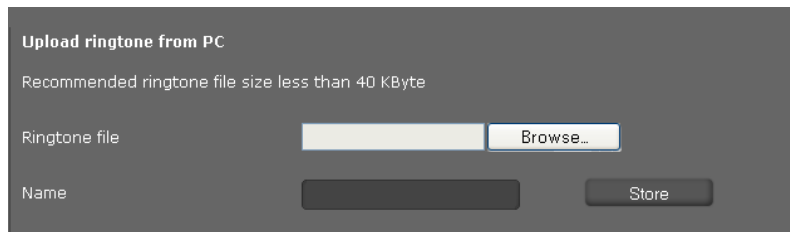

- ▶ Click on **Browse** next to **Ringtone file**. Navigate to the storage location of the sound files in the file system on the PC and select the required file.
- ▶ Enter a **Name** for the ringer and click on **Store**.

Note


You can change the ringtone for a connection directly on the telephone (→ [page 60](#)) or using the Web configurator (user mode → [page 95](#), administrator mode → [page 93](#)).

Rebooting and resetting to factory settings

Only available in administrator mode.

You may have to reboot your phone in certain operational situations, for instance to save changes you have made.

Settings → System → Reboot and Reset

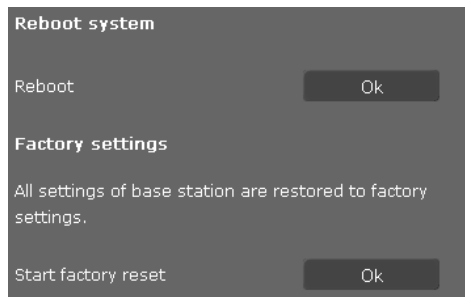

- ▶ Click on **OK** next to **Reboot** to reboot the system.

All phone settings can be reset to the **Factory settings**. This deletes all settings, lists and directory entries!

- ▶ Click on **OK** next to **Start factory reset** to reset the phone to the default settings.

Please note

You can also use the display menu or the reset button on the device's underside to reset the device (→ [page 64](#)).

Saving and restoring telephone data

Only available in administrator mode.

You can save data from your phone onto your PC and, if necessary, restore it back onto the phone.

Settings → **System** → **Save and Restore**

Save and Restore

You can save and restore the device data on your PC.

Resources for backup or restore:

Save data on PC:

The data transfer overwrites the existing directory content.

Transfer data from PC to device:

Transferring data from phone to PC

- ▶ Select which data you want to save:
 - **Directory**
 - **Ring Tones**
 - **Phone settings (Configfile)** (configuration file)
- ▶ Click **Save** to save the selected data to the PC and choose a storage location.

Transferring data from PC to phone

- ▶ Use the **Browse** button to select the file you want from your PC's file system, or enter the complete path name of the file in the **Transfer data from PC to device** field.
- ▶ Click on **Restore**.

Updating firmware

Only available in administrator mode.


Firmware updates are available from the Gigaset website www.gigaset.com/pro so you can ensure your phone is always up to date. You can find the current version of your firmware on the **Device** status screen ([page 119](#)). You can update your phone automatically or manually. Your provider for Internet telephony can also deliver updates for the phone firmware and/or for the profile of your VoIP account.

Configuring phone settings via the Web configurator

Any PC connected to the phone will not be able to access the local network and the Internet during the firmware update.

Settings → System → Firmware Update

Updating firmware automatically

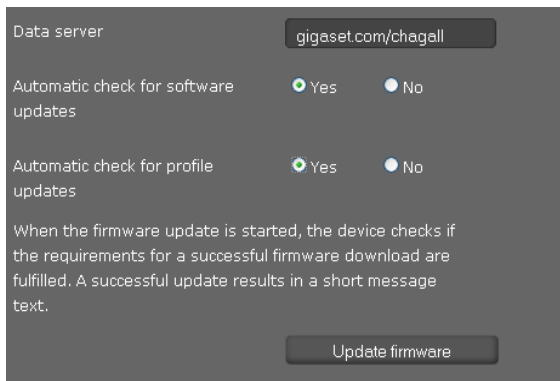

The screenshot shows a settings interface for automatic firmware updates. At the top, there is a 'Data server' field with a text input containing 'gigaset.com/chagall'. Below this are two radio button options: 'Automatic check for software updates' and 'Automatic check for profile updates'. Both have 'Yes' selected. At the bottom, there is an 'Update firmware' button and a paragraph of explanatory text.

Data server

Automatic check for software updates Yes No

Automatic check for profile updates Yes No

When the firmware update is started, the device checks if the requirements for a successful firmware download are fulfilled. A successful update results in a short message text.

- ▶ Select **Yes** for **Automatic check for software updates** and/or **Automatic check for profile updates**.
- ▶ Enter the Web address for the automatic update search in the **Data server** field.
- ▶ Click on **Update firmware** to start the search and to load the new firmware.

Updating manually

- ▶ Download the new **firmware** from the Internet onto your PC and then open the firmware update screen.



The screenshot shows a file selection interface. It has a label 'User-defined firmware file' followed by a text input field, a 'Browse...' button, and a 'Load' button.

User-defined firmware file

- ▶ Select **No** for **Automatic check for software updates** and/or **Automatic check for profile updates**.
- ▶ Click on **Browse** and select the file from the file system on your PC.
- ▶ Click on **Load** to start the update process.

When the firmware update is started, the device first checks whether the prerequisites are in place for successfully downloading the firmware. A successful update is indicated by an advisory message.

Saving settings

- ▶ Click on **Save** to save your settings on the screen.

Checking the status of the phone

Only available in administrator mode.

You will find information about the status of the phone and diagnostic information in the **Status** menu.

Device

Status → **Device**

This screen shows general information about your phone.

IP Configuration

IP Address	The phone's current IP address within the local network.
MAC Address LAN	The phone's device address.
MAC ID	The device identifier. This consists of the MAC address and a four character provider identifier. This identifier is used for the automatic configuration.

Software

Firmware Version Version of the firmware currently loaded on the phone. You can download updates of the firmware to your phone (→ [page 117](#)).

VoIP status

List of all configured VoIP connections with the **Name**, **Status** and which connection is configured as the **Default Send Account**.

Date and time

Current **Time** and **Date** in the device and the date of the last synchronisation with the time server.

System Log

Status → **System Log**

System events e.g., system start, assigning an IP address etc., are recorded in the system log. This screen shows the system log. The events are displayed with the **Date**, **Time** and **Message**. This information may be useful in the event of problems involving Customer Care.

- ▶ Click on **Reload** to update the display.
- ▶ Click on **Delete all entries** to delete the entries.

SIP protocol

Status → **SIP Protocol**

SIP logging stores information about the set-up and disconnection of phone connections and about registering your phone.

Checking the status of the phone

This information is useful for diagnosing errors and can be of use to Customer Care for problem solving.

- ▶ Click on **Reload** to update the display.
- ▶ Click on **Delete all entries** to delete the entries.

PCAP logging

Status → PCAP Logging

On this screen you can create a PCAP log file and save it for analysis at a later stage. PCAP (Packet Capture) analyses the data traffic in the network at the phone-Ethernet interface. This recording is carried out for diagnostic purposes and should only be made if requested by service personnel.

- ▶ Click on **Start**. Every incoming or outgoing data packet to or from your phone is recorded.
- ▶ Click on **Stop** to stop recording.
- ▶ To save the PCAP file (pcapdump.pcap), click on **Store** and select a directory in the file system on your PC where the file should be stored.

Please note

- ◆ The information is recorded in a ring buffer that has limited storage capacity. If the buffer is full, the first packets will be overwritten and lost. You should therefore attempt to record scenarios that are as short as possible.
 - ◆ This logging uses a lot of memory and CPU power and can negatively affect how the phone behaves (e.g., slowing the display screen, distorting the ringer etc.)
-

Service (Customer Care)

You have questions? You can find help quickly in this User Manual and at www.gigaset.com/pro. If you have further queries regarding your Gigaset Professional phone system please contact the dealer you bought your phone system from.

Questions and answers

If you have any queries about the use of your telephone, visit our website at www.gigaset.com/pro for assistance.

Protecting our environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Caring for your telephone

Wipe the unit with a **damp cloth** or an **antistatic cloth**. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug the power supply.**
- 2** Allow the liquid to drain from the device.
- 3** Pat all parts dry. Place the device (the keypad facing down) in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
- 4** Do not switch on the device again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

In rare cases, contact with chemical substances can cause changes to the telephone's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Authorisation

Voice over IP telephony is possible via the LAN interface (IEEE 802.3). Depending on your telecommunication network interface, an additional modem could be necessary. For further information please contact your Internet provider.

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:
www.gigaset.com/docs

CE 0682

Using insert strips


 
 
 

 
 

 

 
 

 
 

 
 

 
 
 
 
 
 
 
 
 
The phone is supplied with insert strips for the function keys. If you require more blank insert strips for the function keys, they are available as a PDF file at www.gigaset.com/pro.

Using Gigaset QuickSync – additional functions for the PC interface


 
 
 
 
 
You can synchronise your handset directory with Outlook. The **Gigaset QuickSync** program must be installed on your computer to do so. This program is available on the Internet at www.gigaset.com/pro.

Key combinations for phone system functions

To access the functions of Gigaset T300 PRO/Gigaset T500 PRO phone systems the following key combinations are available:

 	+ Phone number	Marking calls as private.
  	+ Group ID	Logging the user into the group.
  	+ Group ID	Logging the user out of the group.
 	+ Speed dial	Calling a number using speed dial.
  	+ Login ID	Logging on to the phone.
  	+ Login ID	Logging out of the phone.
  		Logging all users out of the phone.
 	+ Int. phone number	Picking up a call for the user with this phone number.
 		Randomly picking up a call.
 	+ Voicemail box ID	Checking for voicemail.
  	+ Number	Establishing a call via a line with corresponding line prefix.

During a call

 	Call2Go: Transferring a call to your other phones.
	Note: Only available from Gigaset T300 PRO/Gigaset T500 PRO software version 5 upwards.
 	Recording a call and sending as voicemail.
 	+ Phone number Transferring a call with inquiry function.

Additional service features

<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="1"/> <input type="text" value="1"/>	+ Target phone number	Activating the general redirect function for all calls (Always) to one target phone number.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="1"/> <input type="text" value="0..."/>		Deactivating the redirect function.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="2..."/> <input type="text" value="1"/>	+ Target phone number	Activating the redirect function for all calls to the target phone number when busy.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="2..."/> <input type="text" value="0..."/>		Deactivating the redirect function for all calls when busy.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="3..."/> <input type="text" value="1"/>	+ Target phone number	Activating the redirect function for all calls to the target phone number on timeout (no response).
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="3..."/> <input type="text" value="0..."/>		Deactivating the redirect function for all calls on timeout.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="7..."/> <input type="text" value="1"/>		Activating the callback function when the line is busy.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="7..."/> <input type="text" value="0..."/>		Deactivating the callback function when the line is busy.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="8..."/>	+00 to 99 (waiting ID)	Placing a held caller in a call queue or taking a caller from the queue.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="9..."/> <input type="text" value="1"/>		Activating the Do-Not-Disturb (DND) function for all phones.
<input type="text" value="*"/> <input type="text" value="0..."/> <input type="text" value="9..."/> <input type="text" value="0..."/>		Deactivating the Do-Not-Disturb (DND) function for all phones.

Managing conference calls

<input type="text" value="*"/>		Accessing the control options language menu.
<input type="text" value="*"/> <input type="text" value="1"/>		Activating and deactivating mute (microphone).
<input type="text" value="*"/> <input type="text" value="2..."/>		Requesting to speak if the moderator has activated the mute function.
<input type="text" value="*"/> <input type="text" value="3..."/>		Moderator: Blocking and unblocking conference calls.
<input type="text" value="*"/> <input type="text" value="4..."/> (... <input type="text" value="4..."/>) <input type="text" value="8..."/>		Gradually reducing the handset volume. <input type="text" value="8 TUV"/> = save.
<input type="text" value="*"/> <input type="text" value="6..."/> (... <input type="text" value="6..."/>) <input type="text" value="8..."/>		Gradually increasing the handset volume. <input type="text" value="8 TUV"/> = save.
<input type="text" value="*"/> <input type="text" value="7..."/> (... <input type="text" value="7..."/>) <input type="text" value="8..."/>		Gradually reducing the microphone volume. <input type="text" value="8 TUV"/> = save.
<input type="text" value="*"/> <input type="text" value="9..."/> (... <input type="text" value="9..."/>) <input type="text" value="8..."/>		Gradually increasing the microphone volume. <input type="text" value="8 TUV"/> = save.

Specifications

LAN	2 port LAN switch: 10 Mbit, 100 Mbit
Headset connections	corded
Power supply	100–240 V, ~50/60 Hz
Power over Ethernet	PoE, IEEE 802.3af, class 3
Power consumption (standby)	4.6 W
Environmental conditions in operation	±0°C to +45°C, 10% to 95% relative humidity
Language codecs	G.711 μ -law/a-law, G.722, G.726, G.729AB, iLbc
Quality of Service (QoS)	RSVP/DiffServ (RFC2474, RFC2475)
VoIP protocols	SIP (RFC3261, RFC2543), RTP
VoIP security	SRTP (RFC3711), TLS (RFC2246), SIPS
Internet protocols	IPv4 (RFC0791), IPv6(RFC2460)
Further protocols	STUN, ICE, TCP, DHCP

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form manufactured by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software.

Information on license rights and copyright

Your Gigaset device includes Open Source software that is subject to the GNU General Public License (GPL) /

the GNU Lesser General Public License (LGPL). The corresponding license conditions are shown at the end

of this section, in their original version. The appropriate source code can be downloaded from the internet at <http://www.gigaset.com/opensource/>. The appropriate source code can also be requested from Gigaset Communications GmbH within three years of purchasing the product. Please use the contact details provided at www.gigaset.com/service.

License texts

GNU General Public Licence (GPL)

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this licence document, but changing it is not allowed.

Preamble

The licences for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licence is intended to guarantee your freedom to share and change free software – to make sure the software is free for all its users. This General Public Licence applies to most of the Free Software Foundation's software and to any other program where the authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public Licence instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licences are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to impose restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate into certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this licence which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licences, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENCE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This Licence applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public Licence. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this Licence; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty, keep intact all the notices that refer to this Licence and to the absence of any warranty, and give any other recipients of the Program a copy of this Licence along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may, at your discretion, offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this Licence.
- c) If the modified program normally reads commands interactively when run, you must cause it, when running is commenced for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this Licence. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this Licence, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as

part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this Licence, in which the permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this Licence.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above, provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for non-commercial distribution and only if you received the program in object code or executable form with such an offer, in accordance with sub-section b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sub-license or distribute the Program except as expressly provided under this Licence. Any attempt otherwise to copy, modify, sub-license or distribute the Program is void, and will automatically terminate your rights under this Licence. However, parties who have received copies, or rights, from you under this Licence will not have their licences terminated so long as such parties remain in full compliance.

Appendix

5. You are not required to accept this Licence, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this Licence. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this Licence to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a licence from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this Licence.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this Licence, they do not excuse you from the conditions of this Licence. If you cannot distribute so as to satisfy simultaneously your obligations under this Licence and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent licence would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this Licence would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the remainder of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public licence practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this Licence.

8. If the distribution and/or use of the Program are restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this Licence may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such a case, this Licence incorporates the limitation as if written in the body of this Licence.

9. The Free Software Foundation may publish revised and/or new versions of the General Public Licence from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this Licence which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this Licence, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs for which the distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to apply these terms to your new programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the program's name and a brief idea of what it does.>
```

```
Copyright (C) <year> <name of author>
```

```
This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public Licence as published by the Free Software Foundation; either version 2 of the Licence, or (at your option) any later version.
```

```
This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public Licence for more details.
```

You should have received a copy of the GNU General Public Licence along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) <year> <name of author>
```

```
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.
```

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public Licence. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items – whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary.

Here is a sample; alter the names:

```
Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.
```

```
<signature of Ty Coon>, 1 April 1989, Ty Coon, President of Vice
```

This General Public Licence does not permit you to incorporate your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking of proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public Licence instead of this Licence.

Accessories

Extension module each with 14 additional programmable keys

For Gigaset DE410 IP PRO ZY700 PRO Product number: S30852-S2211-R701

Glossary

A

ADSL

Asymmetric Digital Subscriber Line
Special form of DSL.

ALG

Application Layer Gateway
NAT control mechanism of a router.

Many routers with integrated NAT use ALG. ALG lets the data packets in a VoIP connection pass and adds the public IP address of the secure private network.

The router's ALG should be deactivated if the VoIP provider offers a STUN server or an outbound proxy.

See also: **Firewall, NAT, Outbound proxy, STUN.**

Authentication

Restriction of access to a network/service by using an ID and password to log in.

Automatic redial

Several attempts to call are made automatically when the line is busy. The number is adjustable.

B

Block dialling

Enter the complete phone number, and correct it if necessary. Then pick up the receiver or press the speaker key to dial the phone number.

Broadband Internet access

See DSL.

Buddy

Subscriber with whom you exchange brief messages on the Internet in real time (chatting).

See also: **Instant messaging.**

C

Call divert

CD

Automatic diversion (CD) of a call to a different telephone number. There are three kinds of call divert:

- CDU, Call Divert Unconditional
- CDB, Call Divert Busy
- CDNR, Call Divert No Reply

Call swap

Call swap allows you to switch between two callers or between a conference and an individual caller without allowing the waiting caller to listen to the call.

Call waiting

= CW. VoIP provider feature. A beep during a call indicates that another caller is waiting. You can accept or reject the second call. You can activate/deactivate the feature.

CD**Call divert**

See **Call divert**.

Chatting

Form of communication on the Internet. During a chat, brief messages are exchanged between the communicating parties in real time. Chatting in this sense is understood to be a written form of communication.

Client

Application that requests a service from a server.

CLIP**Calling Line Identification Presentation**

Telephony feature. The number of the caller is transferred to the called party's phone display (if the caller activates this feature). The called party's phone must be compatible with CLIP and the feature must be enabled on the phone port.

Codec**Coder/decoder**

Codec is a procedure that digitalises and compresses analogue voice before it is sent via the Internet, and decodes – i.e., translates into analogue voice – digital data when voice packets are received. There are different codecs, with differing degrees of compression, for instance.

Both parties involved in the telephone connection (caller/sender and recipient) must use the same codec. This is negotiated between the sender and the recipient when establishing a connection.

The choice of codec is a compromise between voice quality, transmission speed and the necessary bandwidth. A high level of compression, for example, means that the bandwidth required for each voice connection is low. However, it also means that the time needed to compress/decompress the data is greater, which increases execution time for data in the network and thus impairs voice quality. The time required increases the delay between the sender speaking and the recipient hearing what has been said.

COLP/COLR**Connected Line Identification Presentation/Restriction**

Feature provided by a VoIP connection for outgoing calls.

COLP displays the phone number accepting the call on the calling party's display unit.

The number of the party accepting the call is different to the dialled number, e.g., if the call is diverted or transferred.

The called party can use COLR (Connected Line Identification Restriction) to prevent the number from appearing on the calling party's display.

Glossary

Consultation call

You are on a call. With a consultation call, you interrupt the conversation briefly to establish a second connection to another participant. If you end the connection to this participant immediately, then this was a consultation call. If you switch to and fro between the first and second participants, it is called **call swapping**.

CW

Call waiting

See **Call waiting**.

D

DHCP

Dynamic Host Configuration Protocol

Internet protocol that regulates the automatic assignment of **IP addresses** to **network subscribers**. The protocol is made available in the network by a server. A DHCP server can, for example, be a router.

The phone contains a DHCP client. A router that contains a DHCP server can assign the IP addresses for the phone automatically from a defined address block. This dynamic assignment means that several **network subscribers** can share one IP address, although they use it alternately and not simultaneously.

With some routers you can specify that the IP address for the phone is never changed.

Displayed name

VoIP provider feature. You can specify any name that is to be shown to the other party during a call instead of your phone number.

DMZ (Demilitarised Zone)

DMZ describes a part of a network that is outside the firewall.

A DMZ is set up, as it were, between a network you want to protect (e.g., a LAN) and a non-secure network (e.g., the Internet). A DMZ permits unrestricted access from the Internet to only one or a few network components, while the other network components remain secure behind the firewall.

DNS

Domain Name System

Hierarchical system that permits the assignment of **IP addresses** to **domain names** that are easier to remember. This assignment has to be managed by a local DNS server in each (W)LAN. The local DNS server determines the IP address, if necessary by enquiring about superordinate DNS servers and other local DNS servers on the Internet.

You can specify the IP address of the primary/secondary DNS server.

See also: **DynDNS**.

Domain name

Name of one (several) Web server(s) on the Internet (e.g., www.gigaset.com). The domain name is assigned to the relevant IP address by DNS.

DSCP

Differentiated Service Code Point

See **Quality of Service (QoS)**.

DSL

Digital Subscriber Line

Data transfer technology which allows Internet access over conventional phone lines. Prerequisites: DSL modem and the appropriate service offered by the Internet provider.

DSLAM

Digital Subscriber Line Access Multiplexer

The DSLAM is a switch cabinet in an exchange at which all subscriber connectors converge.

DTMF

Dual Tone Multi-Frequency

Another description for dual tone multi-frequency dialling (DTMF).

Dynamic IP Address

A dynamic IP address is assigned to a network component automatically via **DHCP**. The dynamic IP address for a network component can change every time it registers or at certain time intervals.

See also: **Fixed IP address**.

DynDNS

Dynamic DNS

DNS is used to assign domain names and IP addresses. For **dynamic IP addresses** this service is now enhanced with Dynamic DNS. This permits the use of a network component with a dynamic IP address as a **server** on the **Internet**. DynDNS ensures that a service can always be addressed on the Internet under the same **domain name** regardless of the current IP address.

E**ECT**

Explicit Call Transfer

Participant A calls participant B. The participant puts the connection on hold and calls participant C. Rather than connect everyone in a three-party conference, A now transfers participant B to C and hangs up.

EEPROM

Electrically Erasable Programmable Read-Only Memory

Memory building block in your phone with fixed data (e.g., default and customised settings) and data saved automatically (e.g., call list entries).

Ethernet network

Wired **LAN**.

Ethernet uses a base band cable for data transmission with a transmission rate of 10 or 100 Mbps or 1 Gbps.

Glossary

F

Firewall

You can use a firewall to protect your network against unauthorised external access. This involves combining various measures and technologies (hardware and/or software) to control the flow of data between a private network you wish to protect and an unprotected network (e.g., the Internet).

See also: **NAT**.

Firmware

Device software in which basic information is saved for the functioning of a device. To correct errors or update the device software, a new version of the firmware can be loaded into the device's memory (firmware update).

Fixed IP address

A fixed IP address is assigned to a network component manually during network configuration. Unlike a **dynamic IP address**, a fixed IP address never changes.

Flat rate

System of billing for an Internet connection. The Internet service provider charges a set monthly fee. There are no additional charges for the duration of the connection or number of connections.

Fragmentation

Data packets that are too big are split into smaller packets (fragments) before they are transferred. They are put together again when they reach the recipient (defragmented).

Full duplex

Data transmission is a mode in which data can be sent and received at the same time.

G

G.711 a law, G.711 μ law

Standard for a **codec**.

G.711 delivers a very good voice quality that corresponds to that in the ISDN fixed line. As there is little compression, the necessary bandwidth is around 64 kbit/s per voice connection, but the delay caused by coding/decoding is only approx. 0.125 ms.

"a law" describes the European standard and " μ law" describes the North American/Japanese equivalent.

G.722

Standard for a **codec**.

G.722 is a **broadband** language codec with a bandwidth of 50 Hz to 7 kHz, a net transmission rate of 64 kbit/s per language connection and integrated speech pause recognition and comfort noise generation (silence suppression).

G.722 delivers very good voice quality. A higher sampling rate provides clearer and better voice quality than other codecs and enables a speech tone in High Definition Sound Performance (HDSP).

G.726

Standard for a **codec**.

G.726 delivers a good voice quality. It is inferior to the quality with codec **G.711** but better than with **G.729**.

G.729A/B

Standard for a **codec**.

The voice quality is more likely to be lower with G.729A/B. As a result of the high level of compression, the necessary bandwidth is only around 8 kbit/s per voice connection, but the delay is around 15 ms.

Gateway

Connects two different **networks**, e.g., a router as an Internet gateway.

For phone calls from **VoIP** to the telephone network, a gateway has to be connected to the IP network and the telephone network (gateway/VoIP provider). It forwards calls from VoIP to the telephone network as required.

Gateway provider

See **SIP provider**.

Global IP address

See **IP address**.

GSM

Global System for Mobile Communication

Originally, a European standard for mobile networks. GSM can now be described as a worldwide standard. However, in the USA and Japan, national standards were previously more frequently supported.

H**Headset**

Combination of microphone and headphone. A headset makes using speaker mode more convenient. Headsets that can be connected to the telephone via a cable are available.

HTTP proxy

Server via which **network subscribers** can process their Internet traffic.

Hub

Connects several **network subscribers** in one **infrastructure network**. All data sent to the hub by one network subscriber is forwarded to all network subscribers.

See also: **Gateway, Router**.

I**IEEE**

Institute of Electrical and Electronics Engineers

International body that defines standards in electronics and electrical engineering, concerned in particular with the standardisation of LAN technology, transmission protocols, data transfer rate and wiring.

Infrastructure network

Network with central structure: All **network subscribers** communicate via a central **router**.

Glossary

Instant messaging

Service that uses a client program to allow chatting in real time, i.e., to send brief messages to other subscribers on the Internet.

Internet

Global **WAN**. A series of protocols known as TCP/IP have been defined for exchanging data.

All **network subscribers** are identifiable by an **IP address**. **DNS** assigns a **domain name** to the **IP address**.

Important services on the Internet include the World Wide Web (WWW), e-mail, file transfer and discussion forums.

Internet service provider

Enables access to the Internet for a fee.

Internet telephony

Voice over IP.

IP (Internet Protocol)

TCP/IP protocol on the **Internet**. IP is responsible for the addressing of subscribers in a **network** using **IP addresses**, and routes data from a sender to the recipient. IP determines the paths (routing) along which the data packets travel.

There are standard IPv4 and IPv6 protocols; the essential difference is the structure of the IP addresses.

IP address

A unique address for a network component within a network based on the TCP/IP protocols (e.g., LAN, Internet). On the **Internet**, domain names are usually assigned instead of IP addresses. **DNS** assigns the corresponding IP address to the domain name.

The IPv4 IP address has four parts (decimal numbers between 0 and 255) separated by full stops (e.g., 230.94.233.2).

The IP address is made up of the network number and the number of the **network subscriber** (e.g., phone). Depending on the subnet mask, the first, second or third part makes up the network number and the rest of the IP address addresses the network component. The network number of all the components in any one network must be identical.

IP addresses can be assigned automatically with DHCP (dynamic IP addresses) or manually (static IP addresses).

See also: **DHCP**.

IP pool range

Range of IP addresses that the DHCP server can use to assign dynamic IP addresses.

L

LAN

Local Area Network

Network with a restricted physical range. A LAN can be wireless (WLAN) and/or wired (Ethernet).

LDAP

Lightweight Directory Access Protocol

Service for managing directories across a network.

LDAP is used to store and access information about individuals who are part of an organisation (e.g., employees).

Local IP address

The local or private IP address is the address for a network component in the local network (LAN). The network operator can assign any address he or she wants. Devices that act as a link from a local network to the Internet (gateway or router) have a public and a private IP address.

See also **IP address**.

Local SIP port

See **SIP port/Local SIP port**.

M**MAC address**

Media Access Control address

Hardware address by means of which each network device (e.g., network card, switch, phone) can be uniquely identified worldwide. It consists of six parts (hexadecimal numbers) separated by a "-" (e.g., 00-90-65-44-00-3A).

The MAC address is assigned by the manufacturer and cannot be changed.

Mbps

Million bits per second

Unit of the transmission speed in a network.

MRU

Maximum Receive Unit

Defines the maximum user data volume within a data packet.

MTU

Maximum Transmission Unit

Defines the maximum length of a data packet that can be carried over the network at a time.

Music on hold

Music is played while you are making a **consultation call** or **call swapping**. The waiting participant hears music while on hold.

Glossary

N

NAT

Network Address Translation

Method for converting (private) **IP addresses** to one or more (public) IP addresses. With NAT, the IP addresses of **network subscribers** (e.g., VoIP phones) in a **LAN** can be hidden behind a joint IP address for the **router** in the **Internet**.

VoIP telephones behind a NAT router cannot be reached by VoIP servers (on account of the private IP address). To "bypass" NAT it is possible to either use **ALG** in the router, **STUN** in the VoIP telephone or an **outbound proxy** for the VoIP provider.

If an outbound proxy is made available you must allow for this in the VoIP settings for your phone.

Network

Group of devices. Devices can be connected in either wired or wireless mode.

Networks can also differ in range and structure:

- Range: Local networks (**LAN**) or wide-area networks (**WAN**)
- Structure: **Infrastructure network** or ad hoc network

Network subscriber

Devices and PCs that are connected to each other in a network, e.g., servers, PCs and phones.

O

Outbound proxy

Alternative NAT control mechanism to STUN and ALG.

Outbound proxies are implemented by the VoIP provider in firewall/NAT environments as an alternative to a **SIP proxy server**. They control data traffic through the firewall.

Outbound proxy and STUN servers should not be used simultaneously.

See also: **STUN** and **NAT**.

P

PIN

Personal Identification Number

Protects against unauthorised use. When the PIN is activated, a number combination has to be entered to access a protected area.

Port

Data is exchanged between two applications in a **network** across a port.

Port forwarding

The **Internet** gateway (e.g., your router) forwards data packets from the Internet to the **port** that the data is intended for. This allows servers in the **LAN** to offer services on the Internet without you needing a public IP address.

Port number

Indicates a specific application of a **network subscriber**. Depending on the setting in the **LAN**, the port number is permanently assigned or else it is newly assigned with each access.

The combination of **IP address/port** number identifies the recipient or sender of a data packet within a network.

Prepare dialling

See **Block dialling**.

Private IP address

See **Public IP address**.

Protocol

Describes the agreements for communicating within a **network**. It contains rules for opening, administering and closing a connection, about data formats, time frames and possible error handling.

Proxy/Proxy server

Computer program that controls the exchange of data between **client** and **server** in computer networks. If the phone sends a query to the VoIP server, the proxy acts as a server towards the phone and as a client towards the server. A proxy is addressed via the **IP address/domain name** and **port**.

Public IP address

The public IP address is the address for a network component on the Internet. It is assigned by the Internet service provider. Devices that act as a link from a local network to the Internet (gateway, router) have a public and a local IP address.

See also: **IP address, NAT**.

Q**Quality of Service (QoS)**

Describes the Quality of Service in communication networks. Differentiations are made between various Quality of Service classes.

QoS influences the flow of data packets on the Internet, e.g., by prioritising data packets, reserving bandwidth and optimising data packets.

In VoIP networks, QoS influences the voice quality. If the whole infrastructure (router, network server etc.) has QoS, the voice quality is better, i.e., fewer delays, less echoing, less crackling.

R**RAM****Random Access Memory**

Memory in which you have reading and storage rights. Items such as melodies and screen pictures are saved in the RAM after you have loaded them onto the phone via the Web configurator.

Glossary

Registrar

The registrar manages the **network subscribers'** current IP addresses. When you register with your VoIP provider, your current IP address is saved on the registrar. This means you can also be reached when on the move.

ROM

Read Only Memory

A type of memory that can only be read.

Router

Routes data packets within a network and between different networks via the quickest route. Can connect **Ethernet networks** and WLAN. Can be the **gateway** to the Internet.

Routing

Routing is the transfer of data packets to another subscriber in your network. On their way to the recipient, the data packets are sent from one router to the next until they reach their destination.

If data packets were not forwarded in this way, a network like the Internet would not be possible. Routing connects the individual networks to this global system.

A router is a part of this system; it transfers data packets both within a local network and from one network to the next. Transfer of data from one network to another is performed on the basis of a common protocol.

RSS feed

Really Simple Syndication (also Rich Site Summary)

Provision of data in RSS format. RSS is an Internet service that summarises an Internet page in a short paragraph and includes a link to the original page. Users can subscribe to an RSS feed and receive automatically updated information.

RTCP

Real-Time Control Protocol

Is used to control the RTP protocol. The RTCP protocol is a control protocol and therefore knows which of the transferred RTP sessions belong together.

RTCP port

(Local) **port** by means of which voice data packets are sent and received for VoIP.

RTP

Real-Time Transport Protocol

Global standard for transferring audio and video data. Often used in conjunction with UDP. In this case, RTP packets are embedded in UDP packets.

S

Server

Makes a service available to other **network subscribers (clients)**. The term can indicate a computer/PC or an application. A server is addressed via the **IP address/domain name and port**.

SIP (Session Initiation Protocol)

Signalling protocol independent of voice communication. Used for establishing and ending a call. It is also possible to define parameters for voice transmission.

SIP address

See **URI**.

SIP port/Local SIP port

(Local) **port** by means of which SIP signalling data is sent and received for VoIP.

SIP provider

See **VoIP provider**.

SIP proxy server

IP address of your VoIP provider's gateway server.

Static IP address

See **Fixed IP address**.

STUN

Simple Transversal of UDP over NAT

NAT control mechanism.

STUN is a data protocol for VoIP telephones. STUN replaces the private IP address in the VoIP telephone data packets with the public address of the secure private network. To control data transfer, a STUN server is also required on the Internet. STUN cannot be implemented with symmetric NATs.

See also: **ALG**, **Firewall**, **NAT**, **Outbound proxy**.

Subnet

Segment of a **network**.

Subnet mask

IP addresses consist of a fixed line network number and a variable subscriber number. The network number is identical for all **network subscribers**. The size of the network number part is determined in the subnet mask. In the subnet mask 255.255.255.0, for example, the first three parts of the IP address are the network number and the last part is the subscriber number.

Symmetric NAT

A symmetric NAT assigns different external IP addresses and port numbers to the same internal IP addresses and port numbers – depending on the external target address.

T**TCP**

Transmission Control Protocol

Transport protocol. Session-based transmission protocol: it sets up, monitors and terminates a connection between sender and recipient for transporting data.

TLS

Transport Layer Security

Protocol for encrypting data transmissions on the Internet. TLS is a superordinate **transport protocol**.

Transmission rate

Speed at which data is transmitted in the **WAN** or **LAN**. The transmission rate is measured in data units per unit of time (Mbit/s).

Glossary

Transport protocol

Controls data transport between two communication partners (applications).

See also: **UDP, TCP, TLS.**

U

UDP

User Datagram Protocol

Transport protocol. Unlike **TCP**, **UDP** is a non session-based protocol. UDP does not establish a fixed connection. The recipient is solely responsible for making sure the data is received. The sender is not notified about whether it is received or not.

URI

Uniform Resource Identifier

Character sequence for identifying resources (e.g., e-mail recipient, www.gigaset.com, files).

On the **Internet**, URIs are used as a unique identification for resources. URIs are also described as SIP addresses.

URIs can be entered in the phone as a number. By dialling a URI, you can call an Internet subscriber with VoIP equipment.

URL

Universal Resource Locator

Globally unique address of a domain on the **Internet**.

A URL is a subtype of the **URI**. URLs identify a resource by its location on the **Internet**. For historical reasons the term is often used as a synonym for URI.

User ID

See **User identification**.

User identification

Name/number combination for access, e.g., to your VoIP account.

V

Voice codec

See **Codec**.

VoIP

Voice over Internet Protocol

Calls are no longer established and transmitted via the telephone network, but via the **Internet** (or other IP networks).

VoIP provider

A VoIP, SIP or **gateway provider** is an Internet service provider that provides a **gateway** for Internet telephony. As the phone works with the SIP standard, your provider must support the SIP standard.

The provider routes calls from VoIP to the telephone network (analogue, ISDN and mobile) and vice versa.

W**WAN**

Wide Area Network

Wide-area network that is unrestricted in terms of area (e.g., **Internet**).

Index

Numerics

24-hour format 112

A

Accepting a call
 using function key 33

Acknowledge tones 61

Activating DTMF using a function key . 108

Adjusting the volume 34

Advisory tone
 confirmation..... 61
 key press 61

Advisory tones
 activating/deactivating..... 61

Anonymous calling..... 36

Anrufweilerschaltung
 bei Besetzt 41

Attributes
 LDAP database 103

Audio quality 93

Authorisation 123

Automatic configuration of VoIP
 accounts 76

B

Backlight
 brightness..... 62
 deactivating..... 62

BLF
 Directed Call Pickup Code 108

BLF (Busy Lamp Field) 108

C

Call

accepting via receiver 33, 57

anonymous..... 36

in call list 43

incoming..... 33

missed 43

outgoing..... 30

rejecting 33, 57

transferring..... 39

Call divert 40, 96, 108

no answer 40, 41

when busy 40, 41

Call duration..... 30

Call list 43

all calls 43

deleting 46

deleting an entry..... 46

dialling a number 32, 45

in Web configurator 115

missed calls..... 43

opening..... 32

outgoing calls 43

redial 32

saved information..... 44

transferring entry to directory..... 45

Call Manager, Gespräch annehmen 87

Call recording..... 99

Call records..... 99

Call swap 38

Call transfer..... 39

blind 39

secure..... 39

Call Waiting

blocking 93

Call waiting..... 37

accepting call..... 37

activating/deactivating..... 37

rejecting call..... 37

Caller

name on display 33

picture on display..... 33

Caller picture 33

Calling Line Identification 36, 44

withholding for all calls 36

withholding once 36

Caring for your telephone..... 121

Certificate

import 90

Characters

correcting 24

upper, lower case 24

CLIP (Calling Line Identification

Presentation) 44

CLIR (Calling Line Identification

Restriction)..... 36

Code for Call Pickup 108

- Codec
 - G.711 a law94
 - G.711 μ law94
 - G.72294
 - G.72695
 - G.72995
- Codec preference94
- Conference call38
 - adding callers on hold38
 - adding new participants38
- Conference key3, 38
- Confirmation tone61
- Connecting
 - extension module16
 - network cable13
 - PC14
 - power adapter15
 - receiver12
- Connecting the network cable13
- Connection frame for extension module 16
- Consultation call36
- Consultation key3, 36
- Contact with liquid123
- Contents10
- Contrast63
- Correcting
 - incorrectly entered characters24
 - incorrectly entered digit30
- Country97
- D**
- Date
 - setting via display menu58
- Date format112
- Deactivating the microphone35
- Default number in directory entry49
- Deleting a digit30
- Determining prefix length83
- DHCP65
- Diagnostic information
 - PCAP logging120
 - SIP logging119
 - system log119
- Dialling a number30
 - cancelling30
 - from call list (display)32
 - from call list (Web configurator)115
- Dialling a number
 - from directory (display)31
 - via function key31
- Dialling code97
- Dialling plans98
- Dialling see Dialling a number
- DiffServ (Differentiated Services)87
- Directories47
- Directory
 - accessing via key106
 - transferring from PC to phone117
 - transferring to PC117
- Directory entry47
 - changing default number49
 - deleting49
 - displaying48, 52
 - editing48, 49
- Directory key
 - programming106
- Directory, LDAP50, 103
 - dialling a number50
 - searching for an entry50
- Directory, local47
 - deleting49
 - entry47
 - opening47
- Directory, net51
 - displaying entry details53
 - opening51
 - personal51
 - public51
 - refining search53
 - search results53
 - searching for a name52
 - searching for a number52
 - transferring entry to directory53
- Display23, 112
 - backlight62
 - brightness112
 - Calling Line Identification33
 - display formats112
 - during call34
 - idle58
 - in idle status23
 - menu tree28
 - returning to idle status26
 - setting contrast63

Index

- Display
 - setting the language63
 - settings62
 - time-controlled deactivation..... 112
 - Display format, LDAP 105
 - Display functions..... 23, 112
 - Display icons..... 4
 - Display in idle status.....23
 - returning.....26
 - Display keys 3, 23
 - Display menu28
 - illustration in the user guide27
 - Disposal..... 122
 - DND (Do Not Disturb) see Do Not Disturb
 - DNS server
 - alternate68, 69, 82, 83
 - preferred68, 69, 82, 83
 - Do Not Disturb.....35
 - Do Not Disturb (DND) 99
 - Do Not Disturb key 3, 35
 - Door interphone57
 - Door opener.....57
 - DSL router..... 8
 - DTMF transfer.....78
- ## E
- E-mail server..... 9
 - Encryption.....90
 - End key 3, 30
 - Ending call
 - by hanging up34
 - with end call key34
 - Entering special characters.....24
 - Entering standard gateway67
 - Entering text.....24
 - Entry mode.....24
 - Environment..... 122, 126
 - Error tone61
 - Ethernet..... 8, 65
 - Ethernet cable14
 - Extension module.....16
 - connection frame16
- ## F
- Factory settings 64, 117
 - restoring 116
 - File server 9
 - Filter, LDAP 104
 - Firmware update..... 117
 - automatic 118
 - manual..... 118
 - Firmware version..... 64, 119
 - Function key
 - accessing menu function 108
 - DTMF 108
 - Function keys4
 - additional16
 - programming..... 106, 107
 - selecting functions 107
- ## G
- Getting started.....19
 - Gigaset QuickSync 124
 - Gigaset T500.....86
 - GNU General Public Licence (GPL) 127
 - GNU General Public License (GPL)
 - English..... 127
 - GNU Lesser General Public License_(LGPL),
 - English..... 127
 - GPL 126
- ## H
- Headset
 - adjusting the volume.....34
 - calling via 30
 - Headset key3
 - HTTP server
 - operating86
- ## I
- ICE (Interactive Connectivity Establishment).....89
 - Idle status (display)26
 - Information on device settings64
 - Insert strips 123
 - Installation wizard.....19
 - Internet telephony
 - configuring..... 21, 75

- IP address65
 - auto-configuration 68, 83
 - dynamic..... 66, 81
 - finding 29, 72
 - IPv4..... 67, 81
 - IPv6..... 68, 83
 - prefix 68, 83
 - static..... 65, 66, 68, 81, 83
- IP protocol..... 65, 66, 81
- IPv4.....65
- IPv6.....65
- K**
- Kensington lock.....15
- Key
 - conference 3, 38
 - consultation..... 3, 36
 - display 3
 - Do Not Disturb..... 3, 35
 - end 3
 - headset 3
 - Message Centre..... 3, 32, 56
 - mute..... 3, 35
 - navigation..... 3, 25
 - programmable.....4
 - speaker 3, 35
 - transfer 4, 39
 - volume..... 3, 34
- Key shortcuts for phone
 - system functions..... 124
- L**
- LAN port14
- LAN settings 66, 81
- Language
 - display64
 - for the display 112
 - for the Web configurator..... 112
- LDAP
 - display format 105
 - display name 105
 - name attributes..... 104
 - number attributes..... 104
 - number filter 105
 - search area 106
 - server address 106
 - server port 106
- LDAP (Lightweight Directory Access Protocol) 50, 103
- LDAP attributes 103
- LDAP contacts
 - in display..... 50, 103
- LDAP filter 104
- LDAP server 103
- LEDs see Light Emitting Diodes
- Licence, GPL 127
- License
 - GPL 127
 - LGPL 127
- Light Emitting Diodes4
- List
 - accepted calls.....43
 - all calls 43
 - missed calls.....43
 - redial43
 - scrolling through.....26
- Local contacts 113
 - in display menu.....47
- Local directory
 - creating entry via Web configurator 113
 - in Web configurator 113
- Looking after your telephone 123
- M**
- MAC address
 - display64
- Main menu26
- Making calls30
- Medical equipment7
- Memory keys31
- Menu26
 - navigation.....26
 - settings80
 - start tone.....61
 - using.....26
- Menu tree
 - display28
 - Web configurator73
- Message Centre..... 32, 56
 - icons56
 - opening.....56
 - opening message list.....56
- Message Centre key 3, 56

Index

- Messages
 - voice..... 54, 99
- Missed call
 - in call list.....43
 - in Message Centre.....56
- Move cursor.....24
- Mute key..... 3, 35
- Mute see Muting
- Muting.....35
- MWI (Message Waiting Indication) . 54, 100
- N**
- NAS system..... 9
- NAT.....77
 - refresh time.....78
- Navigation key..... 3, 25
- Network
 - setting up for the first time.....20
 - setting up via display menu.....65
 - setting up via Web configurator.....80
 - wired.....65
- Network configuration
 - default setting.....20
- Network mailbox..... 54, 99
 - new message.....54
- Network provider data.....77
- Network type..... 66, 68
- Number
 - dialling from call list.....45
 - dialling from LDAP directory.....50
 - dialling from the directory..... 113
 - entering via keypad.....30
 - searching for in directory..... 113
 - selecting from the directory.....49
 - showing on display.....33
 - transferring to local directory.....30
- Number filter, LDAP..... 105
- O**
- On hold.....36
- Online directory..... 102
 - selecting provider..... 102
- Online directory see
 - Directory, online
- Open listening.....35
- Operating the telephone
 - via display menu.....23
- Outbound proxy.....77
 - mode.....78
 - port.....78
- Outbound server
 - address.....78
- P**
- Park + Orbit
 - assigning a function key..... 107
- Password
 - displaying in readable form..... 111
- Password for Web configurator..... 111
- PC, connecting.....14
- PCAP log file..... 120
- Phone
 - factory settings..... 117
 - rebooting..... 116
- Phone system.....8
 - operating in the network.....86
 - type.....86
- PoE (Power over Ethernet)..... 8, 15
- Power adapter.....7
 - connecting.....15
- Prefix of the IP address..... 68, 83
- Priority of voice data..... 71, 85
- Programmable keys..... 107
- Protection against theft.....15
- Provider profile.....76
- Provisioning file.....21
- Proxy server
 - address.....76
 - port.....77
- Q**
- QoS (Quality of Service).....87
- Questions and answers..... 121
- R**
- Reboot..... 116
- Receiver
 - adjusting the volume.....34
 - connecting.....12
- Redial list..... 32, 43
- Registration server.....77
 - port.....77
- Remote management.....89
- Reset.....64
- Restarting..... 116

- Restoring the default settings 64
- Ringback 33
 - activating/deactivating function 33
- Ringer 59
 - adjusting the volume while phone
 - is ringing 34
 - deactivating 33
 - deleting ring tone 61
 - loading ring tone 116
 - renaming ring tone 61
 - setting melody 60
 - silencing for anonymous calls 60
 - volume for appointments 59
 - volume for incoming calls 59
- RTP (Realtime Transport Protocol) 87
- S**
- Safety precautions 7
- Security settings 89
 - server certificates 89
- Server certificates 89
- Setting language
 - for Web configurator 29, 72
- Setting the language 63
 - setting up for the first time 19
- Setting up the device via the display 19
- Settings
 - creating via Web configurator 80
- Settings via display menu
 - advisory tones 61
 - date and time 58
 - display backlight 62
 - display contrast 63
 - display language 63
 - ringers 59
- Setup assistant 75
 - closing 79
- Shared line
 - defining for function key 107
- Silence suppression 95
- Silences 95
- SIP address 76
- SIP logging 119
- SIP provider 9
- Speaker
 - activating/deactivating 35
- Speaker key 3, 30, 35
- Speaker mode
 - adjusting the volume 34
- Specifications 34, 126
- Speed dial 107
- SRTP (Secure Real-time Transport Protocol) 90
- Standard gateway 67, 82
- Standard VoIP account 30
- Status 119
- STUN
 - refresh time 78
- STUN server 77
 - address 77
 - port 77
- Subnet mask 67, 82
- Switch 8
- System log 119
- System settings 109
 - date/time 110
 - security 111
- T**
- Telephone PIN
 - changing 111
- Telephone settings
 - in display menu 58
 - in Web configurator 80
- Telephony 90
- Text editor 24
- Time
 - setting 59
- Time server 58
- Time zone 97
 - setting 19
- Tone scheme 97, 112
- Transfer key 4, 39
- Troubleshooting 121
- U**
- Usage scenario
 - professional environment with phone
 - system 8
 - without phone system 9
- User identification
 - Web configurator 29
- User interface
 - display 23

Index

V

- vCard47
- VLAN (Virtual Local Area Network)69
- VLAN priority 71, 85
- VLAN tagging69
- Voice mail 54, 99
 - ending playback55
 - in Message Centre56
 - playing 54, 55
- Voice quality 87, 94
- VoIP account
 - automatic configuration76
 - configuration via provider profile.76
 - DTMF transfer78
 - entering login data.92
 - entering registration data.....79
 - manual configuration76
 - personal provider data 79, 92
 - selecting30
 - setting up75
 - standard30
- VoIP status..... 119
- Volume for ringer59
- Volume key 3, 34

W

- Web configurator72
 - accessing 29, 72
 - changing password 111
 - login screen 29, 72
 - menu structure73
 - selecting language 29, 72
 - settings80
 - setup assistant75
 - starting 29, 72
 - user identification.....29
- when busy.....40
- Workgroup server9

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2012

Subject to availability.

All rights reserved. Rights of modifications reserved.

www.gigaset.com

A31008-M2219-L101-4-7619