

C530HX

Detailed information on the telephone system:

→ User guide of your Gigaset telephone
www.gigaset.com/manuals

→ Documentation relating to your base/router

User guide online on your
smartphone or tablet:
Download the Gigaset Help app





Gigaset HX – the universal handset

With your Gigaset HX handset, you have purchased a high-quality, multifunctional and future-proof device.

You can use your handset with several different DECT bases.

On a Gigaset base

Connect your HX handset to a Gigaset base and use the many features with the quality you would expect from Gigaset.

If your Gigaset base is IP-compatible, you can also make broadband calls using your HX handset with the highest voice quality (HDSP).

In this guide, all functions that are available for your HX handset are detailed/described. The complete functionality with Gigaset bases is described in the guide relevant to your Gigaset system.

All Gigaset user guides can be found at → www.gigaset.com/manuals

or online on your smartphone or tablet:

→ download the Gigaset Help app from  or 

On a DECT/GAP telephone or router from another manufacturer

The handset also functions with DECT/GAP telephones from other manufacturers, of course, as well as DECT routers. Additional information can be found at

→ www.gigaset.com/compatibility.

On DECT routers with CAT-iq 2.0

Your Gigaset HX handset is certified in accordance with the DECT/CAT-iq 2.0 standard. As a result, operation with a DECT router with CAT-iq functionality is possible.

Handset functions on a CAT-iq router (amongst others):

- full access to the central directory on the router as well as the local directory integrated in the handset,
- convenient calling and using of call lists,
- using several lines and call numbers^{*)},
- enjoy broadband calls in guaranteed/certified HD-Voice™ quality.

→ Details can be found in the relevant user guide for your router.

Additional information regarding your HX handset can be found at → www.gigaset.com/hx

Details regarding the functionality of the handset on various bases and routers can be found at → www.gigaset.com/compatibility

*) The relevant scope of the function is dependent on the country, network and router

Overview



- 1 **Display**
 2 **Status bar**
 Icons display current settings and operating status of the telephone

- 3 **Display keys**
 Various functions, depending on the operating situation
- 4 **Message key**
 Access to the call and message lists;
Flashes: new message or new call
- 5 **End call key, On/off key**
 End call; cancel function;
 Go back one menu level ▶ Press briefly
 Return to idle status ▶ Press and hold
- Switch the handset on/off (in idle status) ▶ Press and hold
- 6 **Hash key**
 Lock/unlock the keypad (in idle status) ▶ Press and hold
 Toggle between upper/lower case and digits (when inputting text) ▶ Press briefly
 Insert a dialling pause ▶ Press and hold
- 7 **Microphone**
- 8 **Recall key**
 Consultation call (flash) ▶ Press and hold
- 9 **Star key**
 Switch the ringtone on/off (in idle status) ▶ Press and hold
 Open special characters table (when inputting text) ▶ Press briefly
- 10 **Headset connection**
 (2.5 mm jack)
- 11 **Key 1**
 Select answer machine/network mailbox ▶ Press and hold
- 12 **Talk key / Handsfree key**
 Accept call; select displayed number
 Switch between earpiece and speaker mode
 Open the redial list ▶ Press briefly
 Start dialling ▶ Press and hold
- 13 **Control key / Menu key**
 Open a menu; navigate in menus and entry fields; access functions (depending on the situation)

Contents

Overview	3
Safety precautions	6
Getting started	7
Using the telephone	11
Getting to know your telephone	11
Making calls	15
Local answer machine	18
Local handset directory	19
Message lists	23
Call lists	24
Additional functions	25
Calendar	26
Alarm clock	28
Baby monitor	29
Protection against unwanted calls	31
Adjusting the telephone settings	33
Handset	33
Appendix	41
Customer Service & Assistance	41
Technical data	44
Display icons	45
Index	47



Not all functions described in the user guide are available in all countries or from all network providers.

Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

➔ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

➔ Documentation regarding your base/your router







You can obtain all Gigaset user guides

in PDF format: ➔ www.gigaset.com/manuals

 
 
 


 
 



 
 
 
online: ➔ **Gigaset Help** app for your smartphone or tablet



Illustration in the user guide






	Warnings, which, if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.




 





Keys

 or 	Talk key	 or 	Handsfree key
	End call key	 to 	Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		
OK, Back, Select, Change, Save, ...		Display keys	







 



Procedures

Example: Switching Auto answer on/off

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**  (= on)

Step	Follow this procedure
▶ 	When in idle status press the centre of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated  / deactivated  .

Safety precautions

	<p>Read the safety precautions and the user guide before use.</p> <p>The device cannot be used in the event of a power failure. In case of a power failure it is also not possible to make emergency calls.</p> <p>Emergency numbers cannot be dialled if the keypad/display lock is activated!</p>
	<p>Use only rechargeable batteries that correspond to the specification (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.</p>
	<p>The handset must not be operated if the battery cover is open.</p>
	<p>Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).</p>
	<p>The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.</p>
	<p>Use only the power adapter indicated on the device.</p> <p>Whilst charging, the power socket must be easily accessible.</p>
	<p>Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.</p>
	<p>Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.</p>
	<p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.</p> <p>The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p>
	<p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").</p>

Getting started

Contents of the package

- One handset
- One charging cradle including power adapter
- One battery cover
- Two batteries
- One belt clip
- One user guide



The charging cradle is designed for use in enclosed, dry rooms within a temperature range of +5 °C to +45 °C.


The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the mains unit into your power socket **2**.

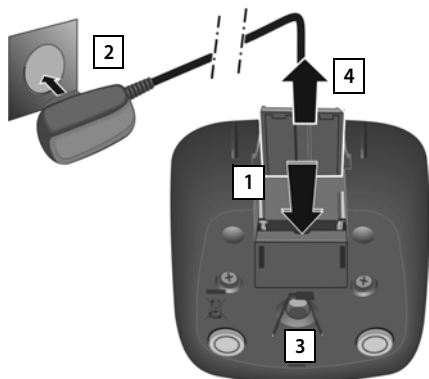

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**

Inserting the batteries




Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries (for correct +/- direction, see diagram).
- ▶ Fit the battery cover from the top.
- ▶ Press the cover until it clicks into place.
- To re-open the battery cover:
 - ▶ Insert a fingernail behind the notch at the top of the cover and slide it downwards.

Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle.

The batteries are fully charged when the power icon  disappears from the display.


 
 





Batteries may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ Press the centre of the control key .
- ▶ Press the keys  and  **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .



Registering the handset (depending on the base)







Registration must be initiated on the base station **and** on the handset.
Both must be carried out **within 60 secs.**

On the base / router



- Gigaset base: ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).
- Other base station/
router: ▶ Information regarding the registration procedure → Documentation regarding your base/your router

On the handset

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ... an available base is sought ▶ ... if required: enter system PIN (default setting on Gigaset bases: **0000**) ▶ **OK**


Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. INT 1. If not, repeat the procedure.

A handset can be registered to up to four base stations.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶

- Change of base: ▶ **Select Base** ▶ **OK** ▶ ... use  to select base or **Best Base** ▶ **Select**  = selected)

Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

- De-registering the handset (depending on the base): ▶ **De-register Handset** ▶ **OK** ... the handset being used is selected ▶ ... use  to select another handset if required ▶ **OK** ... enter system PIN if required ▶ **OK** ▶ ... Confirm de-registration with **Yes** If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls, and to enable the alarm to be used.



Date and time are set using the base. The date and time can also be set on an IP-compatible base via a time server on the network.

If the base permits it, you can set the date and time manually using the handset.

- ▶ Press the display key **Time**

or, if the date and time have already been set:

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**



The active cursor position flashes ▶ ... change cursor position with

▶ ... switch between cursor positions with

Enter date:


- ▶ ... using enter the day, month and year in 8-digit format.

Enter time:

- ▶ ... using enter hours and minutes in 4-digit format.

Save settings:

- ▶ Press the display key **Save**. ... **Saved** is shown in the display and a confirmation tone sounds.

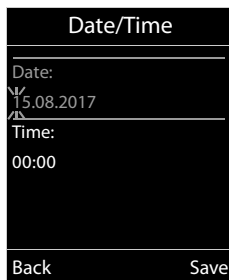

Return to idle status:

- ▶ Press and **hold** the End call key


The telephone is now ready for use.

Connecting the headset

- ▶ Connect the headset with 2.5 mm jack to the left side of the handset **1**.

For information on recommended headsets, refer to the relevant product page on → www.gigaset.com.

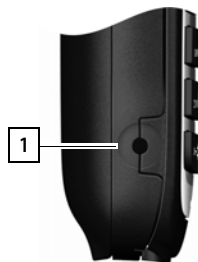

The headset volume corresponds with the setting for the receiver volume.



Using the telephone

 
Getting to know your telephone


Switching the handset on and off

- Switch on: ▶ When the handset is switched off, press and **hold** the End call key 
- Switch off: ▶ When the handset is in idle status, press and **hold** the End call key 

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶ Press and **hold** 

Keypad lock activated: The following icon appears in the display 





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished. It is not possible to call emergency numbers either when keypad lock is activated.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

In idle status



Open the directory

Press **briefly** 

Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

Press and **hold** 

Open the main menu

 or 

Open the list of handsets



Adjust the loudspeaker volume for receiver and handsfree mode



In submenus, selection and entry fields

Confirm a function



Getting to know your telephone

During a conversation

Open the directory



Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

Press and hold

Mute the microphone



Initiate an internal consultation call




Adjust the loudspeaker volume for receiver and handsfree mode



Display keys

The display keys perform a range of functions depending on the operating situation.

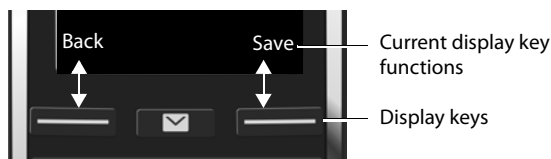

Display key icons → p. 45.

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.



The menu guidance depends on the base. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.

Examples: **Audio Settings** may be in the top-level menu or in the **Settings** submenu, while **Calendar** may be in the **Organiser** menu or the **Additional Features** menu.

Selecting/confirming functions

Confirm selection using

OK or press the centre of the control key

One menu level back using

Back

Change to idle status

Press and hold



Switch function on/off using

Change on / off

Activate/deactivate option using


Select activated / not activated

Main menu


In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ **OK**

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

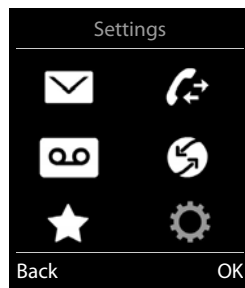


Example

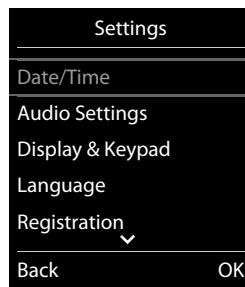

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**

or

▶ Press the End call key  **briefly**

Returning to idle status



▶ Press and **hold** the End call key 





If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Entering text

 
 
 
Input position

 


- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.


Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶ Press **briefly**  **C**
- Delete **words** to the left of the cursor: ▶ Press and **hold**  **C**

Entering letters/characters

Multiple letters and digits are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.


 
 


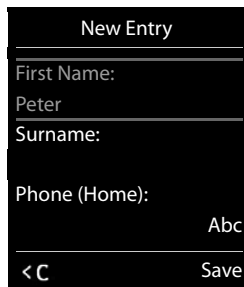- Select letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Enter special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the character set of the handset.

 


Making calls

Making a call

- ▶ ... use  to enter the number ▶ **briefly** press the Talk key 
 - or
 - ▶ press and **hold** the Talk key  ▶ ... use  to enter the number
- Cancel dialling: ▶ Press the End call key 

On a Gigaset GO-Box 100 or another IP-compatible Gigaset base


 
The connection is selected via the send connection (line) set for the handset. To use another line:

- ▶ press and **hold** the Talk key  ▶ ... use  to select the line ▶ **Dial** ▶ ... use  to enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Dialling a number from the local directory

- ▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:


- ▶ ... use  to select the number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from a public/central directory

 


Depending on the base to which the handset is connected to, you can dial from a public directory, the Gigaset.net directory (e.g. Gigaset GO-Box 100) or a central directory on a CAT-ig base.

- ▶ press and **hold** 

Further information → in the detailed user guide for your telephone

Dialling from the redial list

 






The redial list contains the 20 numbers last dialled with the handset.

- ▶ **Briefly** press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶ ... use  to browse numbers if necessary ▶ ... when the required number is reached press the Talk key 

Managing entries in the redial list






- ▶ Briefly press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶
Options ... possible options:
 - Copy an entry to the directory: ▶  **Copy to Directory** ▶ OK
 - Copy the number to the display:
 - ▶  **Display number** ▶ OK ▶ ... use **<C** to edit or add numbers if necessary ...
use  to save as a new entry in the directory
 - Delete the selected entry: ▶  **Delete entry** ▶ OK
 - Delete all entries: ▶  **Delete List** ▶ OK

Dialling from the call list

The call lists (→ p. 24) contain the most recent accepted, outgoing and missed calls.


- ▶  ▶ ... use  to select **Call Lists** ▶ OK ▶ ... use  to select a list ▶ OK ▶ ... use  to select an entry ▶ press the Talk key 

Example

 
All calls	
  Frank	14.02.17, 15:40
 089563795	13.02.17, 15:32
  Susan Black	11.02.17, 13:20
View	Options



The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key . Accepting a call:


- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶ 
- Accept a call on the headset

Switch off ringing: ▶ **Silence** ... the call can be accepted for as long as it is shown on the display

During a conversation



Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine :

- ▶ Press the handsfree key 

Call volume

Applies to the current mode, handsfree mode or handset (or headset when the handset has a headset connection):


-  ▶ ... Use  to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone







When the microphone is switched off, callers will no longer hear you.

- Switch the microphone on/off during a call: ▶ Press 



Local answer machine

(only on Gigaset bases with local answer machine)







Switching the answer machine on/off:

- ▶  ▶ ... use  to select  **Answer Machine** ▶ **OK** ▶  **Activation** ▶ **OK** ▶ ... use  to select an answer machine (if there are several) ▶ **Change** ▶ ... use  to select **On or Off** ▶ **Save**


Playing back messages:

- ▶ Press the Message key  ▶ ... use  to select an answer machine (if there are messages for several answer machines) ▶ **OK**

Recording a personal announcement/advisory message:

- ▶  ▶ ... use  to select  **Answer Machine** ▶ **OK** ▶  **Announcements** ▶ **OK** ▶ ... use  to select **Record Announcem.** or **Rec. Advisory Msg.** ▶ **OK** ▶ ... use  to select an answer machine (if there are several) ▶ **OK** ▶ **OK** ▶ ... record an announcement (at least 3 seconds) ... possible options

Complete the recording ▶ **End** ... the announcement is played back for you to check and save:

Cancel the recording: ▶ Press the End call key  or **Back**

Resume the recording: ▶ **OK**

Repeat the recording: ▶ **New**

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 21).



Information about online directories (e.g. on a Gigaset GO-Box 100) or central directories on CAT-iq bases → user guide of the base.

Opening the directory

- ▶ Briefly press in idle status

Directory entries

Number of entries: up to 200

Information: First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon

Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ ... use to switch between the entry fields and enter data for an entry:.

Names/numbers:

- ▶ ... use to enter first names and/or surnames, at least one number (personal, office, or mobile) and an e-mail address, if applicable

Anniversary:

- ▶ ... use to activate/deactivate **Anniversary** ▶ ... use to enter date and time ▶ ... use to select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP) :

- ▶ ... use to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the icon.

Save entry: ▶ **Save**

Example



The screenshot shows a 'New Entry' form with the following fields and values:

- First Name: Robert
- Surname: (empty)
- Phone (Home): (empty)
- Bottom right: Abc
- Bottom left: < C
- Bottom right: Save






The entry is only valid if it contains at least one number.

Searching for/selecting a directory entry

▶  ▶ ... use  to browse searched names

or



▶  ▶ ... use  to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use  to continue browsing to the desired entry, if needed

Scroll through directory: ▶  ▶ Press and hold 

Displaying/changing an entry

▶  ▶ ... use  to select entry ▶ View ▶ ... use  to select the field to be changed ▶ Edit

or

▶  ▶ ... use  to select an entry ▶ Options ▶ Edit entry ▶ OK

Deleting entries

Delete the **selected** entry: ▶  ▶ ... use  to select an entry ▶ Options ▶  Delete entry ▶ OK

Delete all entries: ▶  ▶ Options ▶  Delete all ▶ OK ▶ Yes

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ Options ▶  Sort by Surname / Sort by First Name

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶  ▶ Options ▶  Available Memory ▶ OK

Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or **Options** ▶  **Copy to Directory** ▶ **OK** ... possible options:

Create a new entry:

▶ **<New Entry>** ▶ **OK** ▶ ... use  to select number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:

▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select number type ▶ **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with **Yes/No** ▶ **Save**

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.

The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.






The recipient handset does not support vCards:

A separate entry is created and sent for each number.

The sending handset does not support vCards:


A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

- ▶  ▶ ... use  to select the desired entry ▶ **Options** ▶  **Copy Entry** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entry is copied


Copy the next entry after successful transfer: ▶ Press **Yes** or **No**

Copying the entire directory

- ▶  ▶ **Options** ▶  **Copy All** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entries are copied one after the other

Message lists

Notifications about missed calls, messages on the answer machine/network mailbox and missed alarms are saved in the messages list.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Activation from the handset is only possible on Gigaset bases. Use the web interface as required for CAT-iq routers. Information → user guide of the base/router.

Icons for message types and the number of new messages are shown on the idle display.


Notification for the following message types is available:


 on the answer machine/network mailbox

 in the missed calls list



 in the missed alarms list

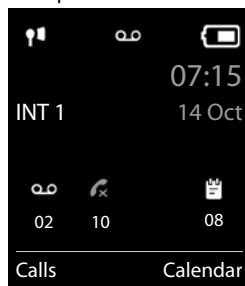Example




 The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed
An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.
An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.
- ▶ ... use  to select a list ▶ **OK** ... the calls or messages are listed
Network mailbox: The network mailbox number is dialled.

Example

Messages & Calls	
Missed Alarms:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Answer Mach.:	
Back	OK

 The message list contains an entry for every answer machine assigned to the handset, e.g. for the local answer machine on a Gigaset base / CAT-iq router or for a network mailbox.

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



The base/router to which the handset is registered provides information on call numbers.

Detailed information can be found at → www.gigaset.com/compatibility.

List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
 - Missed calls,
 - Accepted calls,
 - Outgoing calls,
 - Call on the answer machine
- Caller's number. If the number is stored in the directory, the name and number type (Phone (Home), Phone (Office), Phone (Mobile)) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls	
Frank	
Today, 15:40	[3]
089563795	
13.05.17, 18:32	
Susan Black	
12.05.17, 13:12	
View	Options

Opening the call list

Via the display key: ▶ **Calls** ▶ ... use to select the list ▶ **OK**

Via the menu: ▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select the list ▶ **OK**

Via the Message key (missed calls):

▶ Press the Message key ▶ **Missed Calls:** ▶ **OK**

Calling back a caller from the call list

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select list ▶ **OK** ▶ ... use to select entry ▶ Press the Talk key

Additional options

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select list ▶ **OK** ... possible options:

View an entry: ▶ ... use to select entry ▶ **View**

Copy the number to the directory:

▶ ... use to select entry ▶ **Options** ▶ **Copy to Directory**

Delete an entry: ▶ ... use to select entry ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete list: ▶ **Options** ▶ **Delete List** ▶ **OK** ▶ **Yes**

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The following description applies to a Gigaset GO-Box 100. The procedure required for your telephone may differ from the procedures described here.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

→ Documentation regarding your base/your router

You can obtain all Gigaset user guides

in PDF format: → www.gigaset.com/manuals

online: → **Gigaset Help** app for your smartphone or tablet



Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

September 2017						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
Back						OK

Saving appointments to the calendar



- ▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select desired day ▶ OK ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Enter date: ▶ **Date** ... the selected day has been pre-set ▶ ... use to enter new date
 - Enter time: ▶ **Time** ▶ ... use to enter hours and minutes of the appointment
 - Set name: ▶ **Text** ▶ ... use to enter a description of the appointment (e.g. evening meal, meeting)
 - Set alarm tone: ▶ **Signal** ▶ ... use to select the melody of the reminder alarm or deactivate the acoustic signal
- Enter information for the appointment:
 - ▶ ... use to successively select **Date**, **Time**, **Text** and **Signal** ▶ ... use or to set the relevant value ▶ **Save**
- Save appointment: ▶ **Save**

If an appointment has already been entered: ▶ **<New Entry>** ▶ OK ▶ ... Then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:





- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the Message key  ▶  Missed Alarms: ▶ OK ▶ ... use  to browse through the list of any appointments







or

- ▶  ▶ ... use  to select  Additional Features ▶ OK ▶  Missed Alarms ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

- Delete an appointment/anniversary: ▶ **Delete**

Displaying/changing/deleting stored appointments

- ▶  ▶ ... use  to select  Additional Features ▶ OK ▶  Calendar ▶ OK ▶ ... use  to select day ▶ OK ... the appointment list is displayed ▶ ... use  to select date ... possible options:

Display appointment details:

- ▶ **View** ... The appointment settings are displayed

Change appointment: ▶ **View** ▶ **Edit**


- or ▶ **Options** ▶  Edit entry ▶ OK

Activate/deactivate appointment:

- ▶ **Options** ▶  Activate/Deactivate ▶ OK

Delete appointment: ▶ **Options** ▶  Delete entry ▶ OK

Delete all appointments for a day:

- ▶ **Options** ▶  Delete all Appoints. ▶ OK ▶ **Yes**

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
- Setting the wake-up time:
 - ▶ **Time** ▶ ... use to enter hours and minutes
- Set days:
 - ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
- Set the volume:
 - ▶ **Volume** ▶ ... use to set volume in 5 levels or select **cre-scendo** (increasing volume)
- Set alarm:
 - ▶ **Melody** ▶ ... use to select a ringtone for the alarm
- Enter alarm data:
 - ▶ ... use to successively select **Time**, **Occurrence**, **Volume** and **Melody** ▶ ... use or to set the relevant value ▶ **Save**
- Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off /repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the ability to press the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Baby Monitor** ▶ **OK** ... then

Switch on/off:

- ▶ **Activation:** ... use to select **On** or **Off**

Enter destination:

- ▶ **Send alarm to** ▶ ... use to select **External** or **Internal**

External: ▶ **Number** ▶ ... use to select number or select a number from the directory: ▶

Internal: ▶ **Handset** ▶ **Change** ▶ ... use to select the handset ▶ **OK**

Activate/deactivate two-way talk:


- ▶ **Two Way Talk** ▶ ... use to select **On** or **Off**

Set microphone sensitivity:

- ▶ **Sensitivity** ▶ ... use to select **High** or **Low**

Save settings: ▶ **Save**


Baby Monitor activated

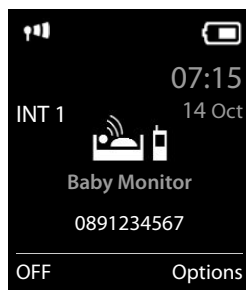

The destination number is displayed in idle display when the baby monitor is activated.

Deactivate baby monitor/cancel alarm

Deactivate the baby monitor: ▶ In idle status press the display key **OFF**



Cancel the alarm: ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

 
▶ Accept alarm call ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.

Reactivate baby monitor with the same number: ▶ ... **Activation** to switch back on (→ p. 29) ▶ **Save**

Protection against unwanted calls


Time control for external calls



Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Time Control** ▶ OK ▶ ... then
- Switch on/off: ▶ use to select **On** or **Off**
- Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format
- Save: ▶ **Save**

Example

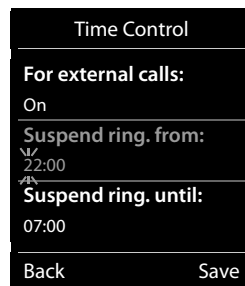

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

For one handset

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ **Edit** (= on) ... the call is only signalled on the display

For all handsets

(only on some Gigaset bases)

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Anonymous Calls** ▶ **Edit** (= on) ▶ ... use to select **Protection Mode**:

No Protection Anonymous calls are indicated in the same way as identified numbers

Silent Call The telephone will not ring and the incoming call will only appear in the display.

Block Call The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.








Save settings: ▶ **Save**

Black list






(only on some Gigaset bases: → www.gigaset.com/compatibility)

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.








Displaying/editing the black list

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Black List** ▶ **Edit** ▶ **Blocked Numbers** ▶ OK ... the list of blocked numbers is displayed ... possible options:
 - Create an entry: ▶ **New** ▶ ... use  to enter a number ▶ **Save**
 - Delete an entry: ▶ ... use  to select an entry ▶ **Delete** ... the entry is deleted

Transferring a number from a call list to the black list

- ▶  ▶ ... use  to select  **Call Lists** ▶ OK ▶ ... use  to select **Accepted calls/Missed calls** ▶ OK ▶ ... use  to select entry ▶ **Options** ▶ **Copy to Blacklist** ▶ OK







Setting the protection mode

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Black List** ▶ **Edit** ▶  **Protection Mode** ▶ OK ▶ ... use  to select desired protection:
 - No Protection** All calls are indicated, including from callers whose numbers are on the black list.
 - Silent Call** The telephone will not ring and the incoming call will only appear in the display.
 - Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
- Save settings: ▶ **Save**



Adjusting the telephone settings

Handset

Changing the language

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Language** ▶ OK ▶ ... use  to select language ▶ **Select** ( = selected)










If the handset has been set to an incomprehensible language:

- ▶  ▶ Press the keys **6** **5** **slowly** one after the other ▶ ... use  to select the correct language ▶ press the right display key

Display


Screensaver

A digital or analogue clock, info services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Screensaver** ▶ **Edit** ( = on) ... then
 - Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**
 - Select screensaver:
 - ▶  **Selection** ▶ ... use  to select a screensaver
(**Digital Clock / Analog Clock / Info Services / <Pictures>**)
 - View screensaver: ▶ **View**
 - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.

End screensaver

- ▶ Press the End call key  **briefly** ... the display changes to idle status

Display of info services as screensaver

(only on a Gigaset GO-Box 100 or other Gigaset-IP base)



Info Services are activated via the web configurator.

The telephone is connected to the Internet.

Example: Enable weather service as screensaver

Enable info services as screensaver:

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display** ▶ OK ▶ **Screensaver** ▶ **Edit** ▶ ... use to select **Activation: On** ▶ **Selection** ▶ ... select as screensaver with **Info Services** ▶ **Save**

Select locations:

- ▶ ▶ ... use to select **Additional Features** ▶ **Info Centre** ▶ **Weather** ▶ OK ▶ **Add locations** ▶ OK ▶ ... specify location names with ▶ OK... a list of locations with this name is displayed ▶ select location with ▶ OK ▶ **Save**

Multiple locations can be entered. Once you have entered all locations required: ▶ ... Use <- to go back

Enable screensaver:

- ▶ ▶ ... use to select **Additional Features** ▶ **Info Centre** ▶ **Screensaver** ▶ OK ▶ **Weather** ▶ OK ▶ ... select location with ▶ **Save**



The type of info service available to your phone is set on the Internet on the Gigaset.net server.

If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

(only on a Gigaset GO-Box 100 or other Gigaset-IP base)

The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display** ▶ OK ▶ **Info Ticker** ▶ **Edit** (= on)

The text appears as soon as the telephone changes to idle status. If a message is shown in idle status, the info text is not displayed.

Colour scheme






You can choose from a range of colour combinations for the display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display** ▶ OK ▶ **Colour Schemes** ▶ OK ▶ ... use to select the desired colour scheme ▶ **Select** (= selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.



Switch the display backlight on/off when in idle status:

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Backlight** ▶ OK ... then

Backlight when in the charging cradle:

- ▶ **In Charger:** ... use  to select **On** or **Off**

Backlight when not in the charging cradle:

- ▶  **Out of Charger** ▶ ... use  to select **On** or **Off**





Save selection: ▶ **Save**

 


The handset's standby time may be significantly reduced if the display backlight is switched on.

Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as it is removed from the charging cradle.



- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** = on)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

Changing the earpiece and handsfree volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.


During a conversation

- ▶  **Handset Volume** ▶ ... use  to select volume ▶ **Save** ... the setting is saved



Without saving, the setting is automatically saved after around 3 seconds.

In idle status

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then









For the earpiece: ▶ **Earpiece:** ... use  to set the volume

For the speaker: ▶  **Speaker** ▶ ... use  to set the volume

Save settings: ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Acoustic Profiles** ▶  **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ ... use  to select profile ▶ Select  = selected)








Earpiece Profiles: High or Low (default setting)

Handsfree Profiles: Profile 1 (default setting) or Profile 2


Ringtones

Ringtone volume

Volume can be set at 5 levels or crescendo (increasing volume).





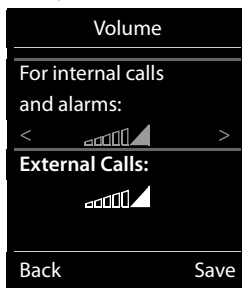

 

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ ... use  to select **For internal calls and alarms** or **External Calls** ▶ ... use  to set volume ▶ **Save**

Example




Ringtone melody

Set different ringtones for internal and external calls for every available receive connection of the telephone (**Landline, IP1**) or set the same ringtone for **All calls**.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Melodies** ▶ OK ▶ ... use  to select the connection ▶ ... use  to select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off


Switching the ringtone off permanently

- ▶ Press and hold  ... the following icon appears in the status bar 

Switching the ringtone on permanently

 

- ▶ Press and hold 

Switching the ringtone off for the current call

- ▶ Press **Silence** or the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Press and **hold** the star key  ▶ Press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ Press and **hold** the star key 



Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.


 
- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then

Tone when keys are pressed: ▶ **Key Tones:** ... use  to select **On** or **Off**



Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶ ... use  to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶ ... use  to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:** ... use  to select **On** or **Off**

Save settings: ▶ **Save**



There is no battery warning when the baby monitor is switched on.

Fast access to numbers and functions

Number keys: It is possible to assign a **number from the directory** to the keys  to .

Display keys: The left and right display keys have a **function** preset by default, but the keys can be re-assigned.

You can then dial the number or start the function by simply pressing a key.

Assigning a number to digit keys (quick dial)





A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.


Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately


or


- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:
Change the assignment: ▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**
Delete the assignment: ▶ **Clear Key**

Assigning display keys, changing assignments

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... use  to select function ▶ **OK** ... possible options:

Baby Monitor	Set and activate/deactivate baby monitor
Alarm Clock	Set and activate/deactivate the alarm clock
Calendar	Open calendar
Redial	Show redial list
More Functions...	▶ OK ▶ ... use  to select other function
Call Lists	Show call list
Call Divert	Activate/deactivate Call Divert











The availability of options depends on the base.

Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Changing the name of a connection (line)









(only on a CAT-iq router)

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ... all available connections (lines) are displayed ▶ ... use  to select connection ▶ OK ▶  **Connection Name** ▶ OK ▶ ... use  to change the name of the connection ▶ **Save**

Assigning handsets to a connection (line)

(only on a CAT-iq router)








Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Assigned Handsets** ... all registered handsets are displayed ▶ ... use  to select handset ▶ **Change** = handset is assigned)

Permit/prevent multiple calls

(only on a CAT-iq router)








If the function is activated, multiple calls can be made in parallel.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Multiple Calls** ▶ **Change** = on)

Permit/prevent internal listening in

(only on a CAT-iq router)

If the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Listening In** ▶ OK ▶ **Change** = on)

Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).



The base/router to which the handset is registered must also support this function (→ www.gigaset.com/compatibility)

If new firmware is available for the handset a message to this effect will be displayed.

- ▶ Start the firmware update with **Yes**.

Start the firmware update manually:

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Handset Update** ▶ **OK** ▶ **Update** ▶ **OK** ▶ **OK** ... if there is new firmware, the update will start



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Resetting the handset to the default settings

Reset any individual settings and changes that you have made.

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Handset Reset** ▶ **OK** ▶ **Yes** ... the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Appendix

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia	+61 1300 780 878	Jordan	00962 6 5625460/1/2
Austria	0043 1 311 3046	Kuwait	+965 22458737/22458738
Bahrain	31 73 11 173	Lebanon	+9611240259/
Belgium	07815 6679		+9611236110
Bosnia Herzegovina	033 276 649	Luxembourg	(+352) 8002 3811
Brazil		Malaysia	+603-8076 9696
Grandes Capitais e Regiões Metropolitanas:		Malta	+39 02360 46111 (0,10 €)
	4003 3020	Mexico	
	-(Preço de uma ligação local)		01800 999 4442738 (01800 999 GIGASET)
Demais localidades:		Netherlands	0900-3333102
	0800 888 3020	New Zealand	0800 780 878
	-(Gratuito)	Norway	+47 2231 0845
Bulgaria	+359 2 9710666	Oman	+968 70928 Ext. 49/21/75
Canada	1-866 247-8758	Poland	801 140 160
China	0 21 400 670 6007 (RMB 0.11)	Portugal	(+351) 308 804 760
Croatia	01 / 2456 555		-(custo de uma chamada local)
Czech Republic	233 032 727	Romania	+40 021 204 9130
Denmark	+45 43682003	Russia	8-800 333 4956
Finland	+358 (0)9725 19734	Serbia	0800 222 111
France	(0)1 57 32 45 22	Singapore	6735 9100
Germany	02871 / 912 912	Slovak Republic	044 5567 988
Greece	+30 2111 98 1778	Slovenija	+386 (1) 5466 511
Hong Kong	2763 0203	South Africa	0800 98 08 42
	2389 7285	Spain	902 103935
Hungary	06(1)267-2109	Sweden	+46 (0)8502 52347
India	Please refer to your	Switzerland	0848 212 000
	local warranty card	Taiwan	02 266 24343
Indonesia	(62-21) 5673813	Turkey	Son kullanıcı için +90 212 888 6346
	(62-21) 888856000		Bayi için +90 212 888 6347
Ireland	0818 200 033	Ukraine	+380-44-451-71-72
Italy	02.600.630.45	United Arab Emirates	+97144458255
(il numero è di tipo "urbano nazionale" e può essere			+97144458254
chiamato da qualunque operatore di rete fissa o		United Kingdom	020 36953111
mobile. Il costo della chiamata è inerente al proprio		USA	1-866 247-8758
piano tariffario definito con l'operatore telefonico, ad			tollfree
esempio in caso di un contratto con tariffa FLAT, non			
ci sono costi aggiuntivi per la chiamata a questo			
numero, in quanto si tratta di un numero urbano			
nazionale).			

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset C530HX is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
 - 2 **Remove the batteries and leave the battery compartment open.**
 - 3 Allow the liquid to drain from the device.
 - 4 Pat all parts dry.
 - 5 Place the device in a dry, warm place **for at least 72 hours (not** in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
 - 6 **Do not switch on the device again until it is completely dry.**
- When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	320/200 *
Talktime (hours)	14
Operating time with 1.5 hours of calls per day (hours)	130/100 *
Charging time in charging cradle (hours)	7.5

* No Radiation switched on/off, without display backlight in idle status

Power consumption of the handset in the charging cradle

When charging:	approx. 1.5 W
To maintain the charge status:	approx. 0.5 W








General specifications

DECT standard	Supported
CAT-iq standard	Certified in accordance with standard CAT-iq 2.0 with HD Voice www.dect.org/cat-iq-certification.aspx
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity

 

Display icons







The following icons are displayed depending on the settings and the operating status of your telephone.



 
Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator flashes: Answer machine is recording a message or is being operated by another internal participant
	ringtone switched off
	"Beep" ringtone activated

Display key icons

 

 
 

Icon	Meaning
	Last number redial
	Delete text






Icon	Meaning
	Keypad lock activated
	Battery charge status: White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status): 0% - 100%
	

Icon	Meaning
	Open the directory
	Copy number to the directory
	Divert a call to answer machine




Display icons




Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Index

-
- A**
- Advisory tones 37
 - Alarm 28
 - Alarm clock 28
 - switch on/off 28
 - Alert tone (beep) 37
 - Anniversary, see Appointment
 - Answer machine 18
 - calling back a caller 24
 - Appointment
 - display missed 27
 - missed 27
 - notification 27
 - setting 26
 - Assigning number key 37
 - Authorisation 42
 - Automatic
 - answer 35
-
- B**
- Baby monitor 29
 - activation 29
 - deactivation 30
 - Battery
 - charging 8
 - charging status 45
 - inserting 8
 - Beep (alert tone) 37
 - Best base station 9
 - Black list 32
 - Broken display 6
-
- C**
- Calendar 26
 - Call
 - external 15
 - Call block 32
 - Call list
 - copying a number to the directory 24
 - delete 24
 - delete an entry 24
 - dialling 16
 - entry 24
 - opening 24
 - Call lists 24
 - Call protection 31
 - Call, anonymous
 - protection from 31
 - Calling
 - external 15
 - Cancel the alarm (baby monitor) 30
 - Care 42
 - Care of the device 42
-
- Changing**
- display language 33
 - earpiece volume 35
 - handsfree volume 35
- Charge status of the batteries 45
- Charging cradle (handset)
- connecting 7
- Charging time of handset 44
- Colour scheme 34
- Connecting the headset 10
- Connection
- assigning handset 39
 - changing name 39
- Contact with liquid 43
- Contents of the package 7
- Control key 3, 11
- Correcting incorrect entries 14
- Customer Care 41
- Customer Service & Assistance 41
-
- D**
- Dialling
- from the call list 16
 - from the directory 15
 - from the redial list 15
 - using quick dial 38
- Directory 19
- copying numbers 21
 - dialling numbers 15
 - entry 19
 - memory 20
 - opening 19
 - order of entries 20
 - saving an entry 19
 - searching 20
 - selecting an entry 20
 - sending entry/list to handset 21
 - sending to handset 21
- Display
- backlight 35
 - broken 6
 - changing display language 33
 - colour scheme 34
 - directory memory 20
 - missed appointment/anniversary 27
 - network mailbox message 23
 - screensaver 33
 - setting 33
- Display icons 45
- Display keys 3, 12
- assigning 37
 - icons 45
- Disposal 42

Index

-
- E**
- Earpiece profile 36
 - Earpiece volume 17
 - Emergency numbers
 - not possible 6
 - End call key 3, 15
 - Entering numbers 14
 - Entering special characters 14
 - Entering text 14
 - Entering umlauts 14
 - Environment 42
-
- F**
- Firmware update 40
-
- G**
- Getting started 7
-
- H**
- Handset
- advisory tones 37
 - assigning connection 39
 - changing the settings 33
 - colour scheme 34
 - connecting the charging cradle 7
 - display backlight 35
 - display language 33
 - earpiece volume 35
 - handset volume 17
 - handsfree volume 17, 35
 - idle status 13
 - muting 17
 - overview 3
 - registering 9
 - restoring to default setting 37
 - set up 8
 - switching on/off 11
 - update 40
 - use as a baby monitor 29
- Handsfree key 3, 17
- Handsfree mode 17
- Handsfree profile 36
- Handsfree volume 17
- Hash key 3
- Headset socket 10
- Hearing aids 6
-
- I**
- Icons
- alarm clock 28
 - displaying new messages 23
 - indications 46
 - on display keys 45
 - status bar 45
- Idle status
- returning to 13
-
- Incorrect entries, correcting 14
- Indications, icons 46
- Internal listening in 39
-
- K**
- Key 1 3
 - Key, assigning 37
 - Keys
 - control key 11
 - display keys 3, 12
 - end call key 3, 15
 - handsfree 17
 - hash key 3
 - menu 11
 - message key 3
 - on/off key 3
 - recall key 3
 - star key 3
 - talk key 3
-
- L**
- Language
- display 9
- Language, display 33
- Line 39
- Liquid 43
- Lock/unlock the keypad 11
- Lower/upper case 14
-
- M**
- Making calls
- external 15
- Manufacturer's advice 42
- Medical equipment 6
- Melody
 - ringtone for internal/external calls 36
- Memory in the directory 20
- Menu key 3, 11
- Message key 3

Message lists 23

Microphone 3
 - switch on/off 17

Missed anniversaries/appointments 27

Multiple calls 39

Muting the handset 17

N

Number

 - copying to the directory 21
 - saving in the directory 19

O

 - On/off key 3
 - Operating time of handset 44
 - Overview 3

P	
Power adapter	6
Protection from calls	
anonymous	31
black list	32
time control	31
Q	
Quick dial	15
R	
Recall key	3
Redial list	15
Registering (handset)	9
Resetting the handset to the default	
settings	40
Resource Directory	37
Ring delay	35
Ringtone	36
changing	36
melody for internal/external calls	36
time control	31
volume	36
S	
Safety precautions	6
Screensaver	33
Searching in directory	20
Sending	
entire directory to handset	21
Setting the date	10
Setting the time	10
Setting up handset	8
Show new messages	23
Signal strength	45
Signal tone, see Advisory tones	
Snooze mode (alarm)	28
Speaker	17
Star key	3
Status bar	
icons	45
SUOTA	40
Switching the ringtone on/off	36
Symbols, see Icons	45
T	
Talk key	3
Technical data	44
Telephone	
operating	11
Time control for external calls	31
U	
Upper/lower case	14
V	
Viewing network mailbox message	23
VIP group, classify directory entry	19
VIP ringtone	19
Volume	
earpiece	35
handset handsfree volume	35
handset speaker/earpiece volume	17
speaker	35
W	
Warning tone, see Advisory tones	

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2017

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com

Apple, the Apple logo and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Google, Android, Google Play and other brands are trademarks of Google Inc.