

Gigaset


Dune

CL540


GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Overview Gigaset Dune (CL540)

Handset

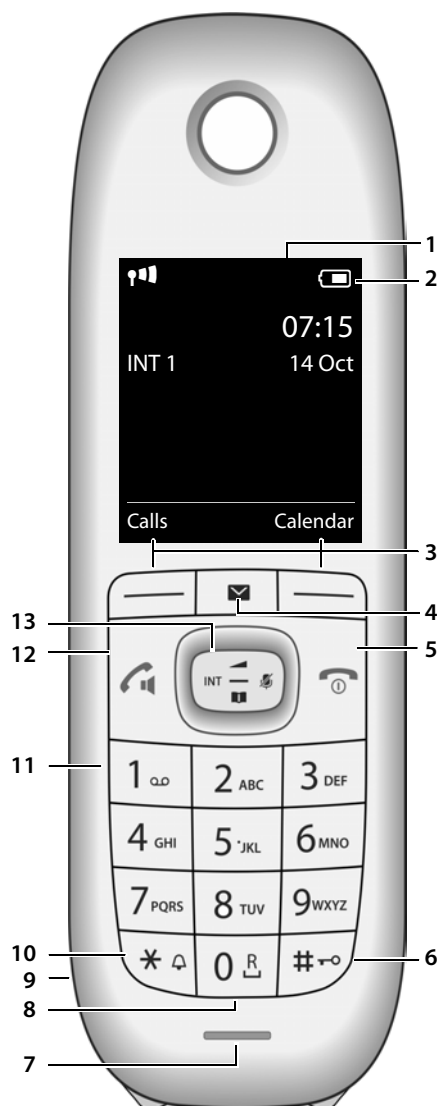

- 1 **Display in idle status**
- 2 **Status bar**
Icons display current settings and operating status of the phone
- 3 **Display keys**
- 4 **Message key**
Access to the calls and message lists;
Flashing: new message or new call
- 5 **End call key, On/off key**
End call;
Cancel function;
Go back one menu level (press **briefly**);
Back to idle status (press and **hold**);
Switch handset on/off (press and **hold** in idle status)
- 6 **Hash key**
Keypad lock on/off (press and **hold** in idle status);
Toggles between upper/lower case and digits;
Insert a dialling pause (press and **hold**)
- 7 **Microphone**
- 8 **Recall key**
Consultation call (flash) (press and **hold**)
- 9 **Connection socket for headset**
- 10 **Star key**
In idle status: Ringtone on/off (press and **hold**);
With an open connection: switch from pulse dialling to tone dialling (press **briefly**);
When inputting text: Open special characters table
- 11 **Key 1**
Select network mailbox (press and **hold**)
- 12 **Answer call key / Handsfree key**
Dial number displayed;
Accept call;
Switch from earpiece to handsfree mode;
Open the redial list (press **briefly**);
Start dialling (press and **hold**);
- 13 **Control key / Menu key**

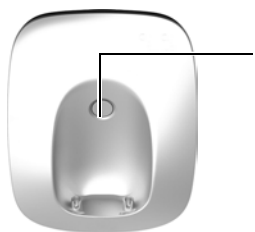

Registration/paging key

- ◆ Locate handsets ("Paging") (press **briefly**).
- ◆ Register handsets and DECT devices (press and **hold**) .

Contents

Overview Gigaset Dune (CL540)	1
Safety precautions	4
Getting started	6
Operating the phone	11
Making calls	14
Adjusting the telephone settings	16
Protection against unwanted calls	16
ECO DECT - Reducing transmission power (radiation)	17
Phonebook (Address book)	18
Call list	20
Contactability	21
Calendar	21
Alarm clock	22
Baby monitor	23
Display icons	24
Setting options	26
Customer Service & Assistance	27
Index	29










This quick user guide only describes a small proportion of your telephone's functions.
 For more details about your telephone functions, please refer to the user guide online at
www.gigaset.com or on the CD supplied (depending on the scope of delivery).

Safety precautions

Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the device to your children.

	Use only the power adapter indicated on the device.
	Use only rechargeable batteries that correspond to the specification (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).
	If you give your Gigaset to a third party, make sure you also give them the user guide.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



To prevent loss of hearing, avoid listening at high volume over long periods of time.

Please note

- ◆ The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.
- ◆ Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!

Getting started

Checking the contents of the package

- ◆ One **base station**,
- ◆ One power adapter for the base,
- ◆ One phone cord,
- ◆ One **handset**,
- ◆ One battery cover (rear cover for the handset),
- ◆ Two batteries,
- ◆ One rubber seal for the headset connection,
- ◆ One user guide and CD (depending on what is supplied).

If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover, a belt clip and a charging cradle with power adapter for each additional handset.

Setting up the base station and charging cradle (if included)

The base and charging cradle are designed for use in closed, dry rooms in a temperature range of +5°C to +45°C.


- ▶ Set up the base on a level, non-slip surface at a central point in the building or house, or mount the base on the wall.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

Notes

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.
- ◆ Pay attention to the range of the base. This is up to 50 m inside buildings and up to 300 m in unobstructed outdoor areas. The range is reduced when **Maximum Range** is deactivated.

Connecting the base station to the telephone network and the mains power supply

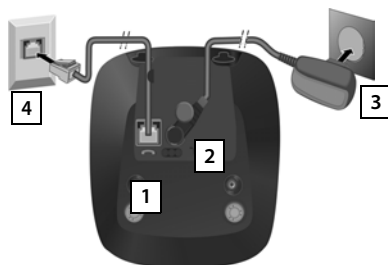


- ▶ Insert the phone cable into the connection socket **1** at the rear of the base until it clicks into place and feed under the cable protection.
- ▶ Insert the power cable for the power adapter into the connection socket **2** at the rear of the base and rotate the right-angle plug under the cable protection.
- ▶ Connect the power adapter **3**.
- ▶ Connect the phone jack **4**.

Notes

- ◆ The power adapter must **always be connected**, as the phone will not operate without a power supply.
- ◆ Use only the **supplied** power adapter and phone cord. Pin connections on telephone cables can vary.

Connecting the charging cradle (if included)

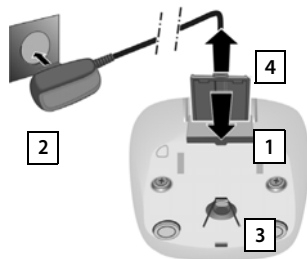

- ▶ Connect the flat plug to the charging cradle **1**.
- ▶ Plug the power adapter into the power socket **2**.

If you have to remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3** and disconnect the plug **4**.

Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film!**

Inserting the rubber seal for the headset plug socket


Open the battery cover and insert the rubber seal into the groove.



Insert battery

Caution

Use only rechargeable batteries recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

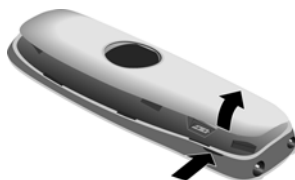

- Insert the batteries with the polarity in the right direction (for correct +/- direction, see diagram).

- First orientate the battery cover with the side tabs fitting into the slots on the inside of the casing.
- Then press the cover until it clicks into place.

If you have to **open the battery cover**:

- Grip the side hollows and slide the battery cover diagonally upwards.

Charging the batteries

The batteries are supplied partially charged. Please charge completely before use. (The batteries are fully charged when the power icon ⚡ disappears from the display.)

- ▶ Charge the handset in the base for **8.5 hours**.



Notes

- ◆ The handset may only be placed in the designated base/charging cradle.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.

Changing the display language

Change the display language if you do not understand the language currently set.

- ▶ 6 MNO 5 JKL ▶ Select language ▶ **Select** (● = selected)

Registering the handset

Handsets contained in the package have already been registered to the base.

If, however, a handset has not been registered (display "**Please register handset**" or "**Place handset in base**"), you must register it to the base.

◆ **Automatically registering the Gigaset CL540 handset to base station:**

- ▶ Place the handset in the base.

If automatic registration does not work, the handset will have to be registered manually.

◆ **Manually registering the handset:**

- ▶ **On the base:** Press and **hold** (min. 3 secs) the Registration/paging key.
- ▶ **On the CL540 handset,** press the display key **Register**.

Or:

 ▶  ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK**

Display shows: **Searching for a base in registration mode**. The connection to the base will be established; this may take some time.

- ▶ Enter the system PIN if required (factory setting: **0000**) ▶ **OK**

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

- ▶ Press the display key **Time**.

Or:

 ▶  ▶ **OK** ▶ **Date/Time** ▶ **OK**


- ▶ Setting the date and time:

- ▶ **Save**

 
Your phone is now ready for use.

Operating the phone

Switching the handset on/off


- ▶ Press and **hold** the End call key  in idle status to switch the handset on or off.

Locking/unlocking the keypad

- ▶ Press and hold the  key to lock or unlock the keypad.

If a call is signalled on the handset, the keypad automatically unlocks, and you can accept the call. It then locks again when the call is finished.






Control key

In the description below, the side of the control key (up, down, right, left, middle) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".




The control key allows you to navigate within menus and entry fields. In idle status or during an external call, it has the following functions:



When the handset is in idle status

-  Open the phonebook.
-  or  Open the main menu.
-  Open list of handsets.
-  Bring up the menu for setting the handset's call volume (→ page 15).

During an external call

-  Open the phonebook.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Functions when pressing the centre of the control key

The key has different functions, depending on the operating situation.


- ◆ **In idle status**, it opens the main menu.
- ◆ **In submenus, selection and entry fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

Display keys

The display keys have a function preset by default in idle status, but the keys can be re-assigned so that you can select the function desired by pressing and holding the display key.

The functions of the display keys change depending on the operating situation.

Example

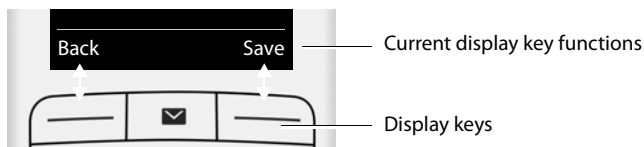

Overview of icons on the display keys (→ page 25).

Menu guidance

The functions of your telephone are displayed on a menu that consists of several levels.

Main menu (first menu level)

- ▶ When the handset is in idle status, press **right** on the control key to open the main menu.


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Use the control key to navigate to the required function and press the display key **OK**.

Returning to idle status: **Briefly** press the display key **Back** or End call key .

Example

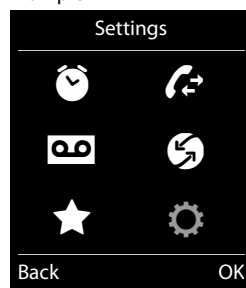

Submenus


The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function using the control key and press **OK**.

Returning to the previous menu level: **Briefly** press the display key **Back** or End call key .

Example

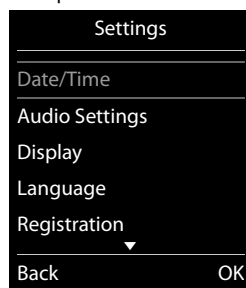




Returning to idle status

- ▶ Press and **hold** the End call key .

Message lists

Any messages you receive are saved in the message lists. An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes. Icons for message types and the number of new messages are shown on the idle display.

New messages available:

- ◆  On the network mailbox
- ◆  In the missed calls list
- ◆  In the missed alarms list


Open the message list by pressing the Message key .

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Opening the list:  Select required list. ► OK


Exception: If you select the **network mailbox**, the number of the network mailbox will be selected. Lists are not opened on the display.

Example

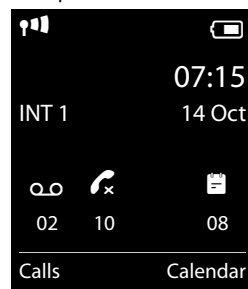



Entering numbers and text

If several number and/or text fields are displayed (e.g.

 
 



 
First Name and **Surname** in a phonebook entry), the field is automatically activated. The following fields must be activated by navigating with the control key . A field is activated when a cursor is blinking inside it.

Correcting incorrect entries

- ◆ Deleting **characters** before the cursor: press the display key  **briefly**.
- ◆ Deleting **words** before the cursor: press and **hold** the display key .




Entering text

- ◆ **Letters/Characters:** Multiple letters and characters are assigned to each key between  and . The characters are shown according to the key in a selection line at the bottom left of the display. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character.
- ◆ **Placing the cursor:** Letters/characters are inserted at the cursor position. You can insert the cursor by pressing the control key , or  in fields with multiple characters.
- ◆ **Typing lower case, upper case and numbers:** Press the hash key  to switch between lower case, upper case or numbers for the **following letters**. When editing a phonebook entry, the first letter and each letter following a space is automatically in upper case.
- ◆ **Special characters:** Press the star key  to open the special characters table. Navigate to the character desired using the star key and press the display key **Insert** to select it.
- ◆ **Special letters:** Umlauts or other marked/diacritic characters can be selected by pressing the corresponding letter several times.

Making calls




Making an external call

- ▶ Enter number, **briefly** press the Answer call key .

You can cancel the dialling process with the End call key .






Dialling with the redial list

The redial list contains the 20 numbers last dialled with the handset. You can manage this similarly to your phone's message lists (→ page 13).


- ▶ Press the Answer call key  **briefly** to open the redial list.
- ▶  Select entry. ▶ Press the Answer call key . The number is dialled.

When a name and corresponding phone number are displayed: Press the display key **View**.

Dialling from the call list

-  ▶  ▶ **OK** ▶  Select list. ▶ **OK**
- ▶  Select entry. ▶ 
- ▶ The number is dialled.






Notes

- ◆ You can also bring up the call list using the display key **Calls**, but you must assign a display key accordingly.
- ◆ You can also open the list **Missed calls** using the Message key .

Example








Dialling with the phonebook

-  ▶  Select entry. ▶ 
- ▶ If multiple numbers are entered: Select the number with  and press the Answer call key  or **OK**.
- ▶ The number is dialled.

 
 
One touch call

You can set up your phone so that you can dial a specific number when you press a **key of your choice**. This allows children, who are unable to enter a number, to call a certain number, for example.

-  ▶  ▶ **OK** ▶  **One Touch Call** ▶ **OK**
- ▶ **Activation:**  **On / Off**
- ▶ **Call to:** Enter or change the number that you wish to dial.
- ▶ **Save**


The activated One Touch Call appears on the idle display. The saved number is dialled by pressing any key. Press the End call key  to cancel dialling.

Ending one touch call:

- ▶ Press the display key **OFF**. ▶ Press and **hold** the  key.
- Or:
- ▶ Press and **hold** the  key.

Accepting a call

You have the following options:

- ▶ Press .
- ▶ If **Auto Answer** is switched on, remove the handset from the charging cradle.


Handsfree mode

If you are going to let someone listen in, you should tell the other party that this is happening.

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press .


Placing the handset in the charging cradle during a call:


- ▶ Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

Adjusting the loudspeaker volume

- ◆ Accessing the settings **via the menu**:

 ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK

- ▶ **Earpiece:**  Volume can be set at 5 levels for the earpiece and headset.

- ▶ **Speaker:**  Set the volume at 5 levels.

- ▶ **Save**


- ◆ Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece, headset):

- ▶ control key  ▶ .

- ▶ The setting is saved automatically after 2 seconds or press the display key **Save**. The screen reverts back to its previous display.


Switching the microphone on/off (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Press  to switch the microphone on/off.

Using provider-specific functions (network services)

Network services depend on and must be requested from your network provider (which may incur additional charges). Network services fall into two distinct groups

- ◆ Network services that are activated for the following call or all subsequent calls when no call is being made (e.g. calling anonymously (without Calling Line Identification)). You can easily activate/deactivate these network services via the menu .
- ◆ Network services that are activated during an external call, e.g., "consultation call", "swapping between two callers" and "setting up conference calls". These services are provided to you during an external call in the option slider (e.g. **Ext. Call, Conf.**).

You will find a general description of the features on your network provider's website or at one of their store branches.

For further details, please refer to the user guide online at www.gigaset.com or on the CD supplied (depending on what is supplied).

Adjusting the telephone settings

The handset and base station are preconfigured, but you can change the settings to suit your individual requirements.

The settings can be changed via the menu **Settings** (→ page 26) whilst in idle status.

Protection against unwanted calls

Setting time control for external calls

You can specify a time period when you do not want the telephone to ring.

- ☎ ▶ ⚙ ▶ OK ▶ ☎ ▶ **Audio Settings** ▶ OK
- ▶ ☎ ▶ **Ringtones (Handset)** ▶ OK ▶ ☎ ▶ **Time Control** ▶ OK
- ▶ **For external calls:** ☎ On / Off

If activated:

- ▶ **Suspend ring. from:** Enter the start of the period.
- ▶ **Suspend ring. until:** Enter the end of the period.
- ▶ **Save**

Example

Time Control	
For external calls:	
On	
Suspend ring. from:	
22:00	
Suspend ring. until:	
07:00	
Back	Save

Note

During this period, your phone will continue to ring for numbers to which you have assigned a VIP ringtone in the phonebook.

Protection from anonymous callers

You can set your phone so that it doesn't ring for anonymous calls (callers who have withheld Calling Line Identification). The call is only signalled on the display. The setting only applies to handsets for which the setting is configured.

- ☎ ▶ ⚙ ▶ OK ▶ ☎ ▶ **Audio Settings** ▶ OK ▶ ☎ ▶ **Ringtones (Handset)** ▶ OK ▶ ☎ ▶ **Anon. Calls Silent** ▶ **Change** ☒ = function activated)

ECO DECT - Reducing transmission power (radiation)

The default setting provides the optimum transmission setting. This device range is set to maximum. To reduce the transmission power:

Reducing the range – Lowers the transmission power by up to 80%

 ►  ► OK ►  ECO DECT ► OK ► Maximum Range ► Change (☐ = deactivated)

Fully deactivating DECT wireless module in idle status (Eco Mode+)

 ►  ► OK ►  ECO DECT ► OK ►  No Radiation ► Change (☒ = activated)



For further details, please refer to the user guide online at www.gigaset.com or on the CD supplied (depending on what is supplied).

Phonebook (Address book)


Opening phonebook

Press the key  in idle status or, depending on the situation, the display key .

Creating a new entry

- ▶ Open directory. ▶  <New Entry> ▶ OK
- ▶ Switch between the input fields using  and enter the relevant components of the entry (names, numbers, anniversary, ringtone).
Navigate downwards to display further components.
- ▶ Press the display key **Save**.



To create an entry, you must enter at least one number.

If you have assigned a caller melody, the entry in the phonebook is supplemented with the symbol .




Example

New Entry	
First Name:	Robert
Surname:	
Phone (Home):	Abc
< C	Save

Displaying/changing an entry

- ▶ Open phonebook. ▶  Select the desired entry.
 - ▶ **View** ▶ Display all components of the entry. ▶ **Edit**
- Or:
- ▶ **Options** ▶  Edit entry ▶ OK

Deleting an entry

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options** ▶  Delete entry ▶ OK
- Delete **all** entries in the directory:
- ▶ Open phonebook. ▶ **Options** ▶  Delete List ▶ OK

Defining the order of the contacts entries

You can define whether the entries are to be sorted by first name or surname.

- ▶ Open phonebook. ▶ **Options** ▶ Press **Sort by Surname** or **Sort by First Name**.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:





Space | Digits (0-9) | Letters (alphabetical) | Other characters

Transferring an entry/phonebook to another handset





Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.




Transferring individual entries

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options**
- ▶  **Copy Entry** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  Select the recipient handset. ▶ **OK**



Transferring the entire directory

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options**
- ▶  **Copy List** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  Select the recipient handset. ▶ **OK**

Transferring a displayed number to the phonebook





- ▶ The number is displayed or highlighted.
- ▶ Press display key  or **Options** ▶  **Copy to Directory.** ▶ **OK**
 - ▶ **<New Entry>** ▶ **OK** ▶  Select number type. ▶ **OK**
 - ▶ Complete the entry. ▶ **OK**

Or:

- ▶  Select entry. ▶ **OK** ▶  Select number type. ▶ **OK**
 - ▶ The number is entered or an existing number is overwritten (answer the prompt using **Yes/No**).
- ▶ **Save**

Call list


 
 
 
 


Your telephone stores calls in various lists. Opening the lists:

- ◆ **Missed calls list:** Message key  ► **Missed Calls:** ► OK
- ◆ **List selection:**  ►  ► OK ►  Select list. ► OK



The last 20 entries are displayed in the call list.

List entry

The following information is displayed in the list entries:


- ◆ The list type (in the header row)
- ◆ Icon for the type of entry:
 -  (Missed calls),  (Accepted calls),  (Outgoing calls)
- ◆ Caller's number. If the number is stored in the phonebook, name and number type are displayed instead ( Phone (Home),  Phone (Office),  Phone (Mobile)). For missed calls, the number of missed calls from this number is also shown in square brackets.
- ◆ Date and time of call (if set).
-  Select entry. ► **Options**
- **View:** All available information is displayed, e.g. the corresponding number when a name is displayed.
- **Options:** You can delete the entry or transfer the number to the phonebook (→ page 19).

Calling back a caller from the call list:

-  Select entry. ► Press the Answer call key .

For further details, please refer to the user guide online at www.gigaset.com or on the CD supplied (depending on what is supplied).

Example


All calls	
  James Foster	
Today, 18:35	
 01712233445566	
11.06.2013, 18:30	
 0168123477945	
10.06.2013, 17:13	
View	Options

Contactability

Call forwarding (CF)

You can forward calls to another number. No call forwarding is activated yet or you want to change the current setting:




 ►  ► OK ►  Call Divert ► OK

 
► **Status:**  On / Off

Unknown is always displayed when calling up the menu.

► **To Phone Number:** Enter the number to which the call is to be forwarded.

► **When:**

-  **All Calls:** Calls are forwarded immediately. No more calls are signalled on your phone.
-  **No Answer:** Calls are forwarded if no one accepts the call within several rings.
-  **When Busy:** Calls are forwarded if your line is busy. Call is forwarded without a call waiting tone.

► **Send** ► Your provider is called and the corresponding code is sent. If the call forwarding has been changed, you will hear a confirmation on the phone line. ► 

Please note


Forwarding calls to your phone number can result in **additional costs**. Please consult your provider.

Calendar

Saving appointments to the calendar

Prerequisite: Date and time are set .

 ►  ► OK ► Calendar ► OK

►  Select the desired day. ► OK

- ◆ Appointments that have already been stored are shown.
<New Entry> ► OK opens the window to enter an additional appointment.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

Displaying/changing/deleting stored appointments

 ►  ► OK ►  Calendar ► OK ►  Select the desired day. ► OK ► The appointment list is displayed. ►  Select the desired appointment.

► **View:** Display appointment settings, change, if required using **Edit**.

Or:

► **Options:** Change settings or delete appointments.

For further details, please refer to the user guide online at www.gigaset.com or on the CD supplied (depending on what is supplied).




Alarm clock

Prerequisite: Date and time are set .


You can activate/deactivate and set the alarm clock as follows:

 ►  ► **OK** ► **Activation:**  **On/Off**

► **Changing the settings:**

- **Time:** Set the hour and minute for the wake-up time.
- **Occurrence:**  **Daily/Monday-Friday**
- **Volume:**  Volume can be set at 5 levels or crescendo (increasing volume).
- **Melody:**  Select a ringtone for the alarm call.

► Press the display key **Save**.

When the alarm clock is activated, the icon  and the alarm time is displayed in idle status.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

Deactivating the alarm call/repeating after a pause (snooze mode)

Prerequisite: One alarm call sounds.

► **Deactivating until the next alarm call:** Press **OFF**.

Or:

► **Snooze mode:**

Press **Snooze** or any key. The wake-up call is deactivated and then repeated after 5 minutes.

Or:

Press nothing. The alarm call is deactivated after 60 seconds and then repeated after 5 minutes. After the fourth repetition, the alarm call is deactivated for 24 hours.

For further details, please refer to the user guide online at www.gigaset.com or on the CD supplied (depending on what is supplied).

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The baby monitor alarm to an external number is cancelled after approximately 90 seconds.

In baby monitor mode, incoming calls are only signalled on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and pressing the middle of the control key.

You can answer the baby monitor alarm using the **Two Way Talk** function. Deactivate/activate the speaker of the handset using this function.

Caution

Ensure the following points:

- ◆ The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- ◆ The baby monitor is activated 20 seconds after switching on.

Please always check the functionality when you switch on:

- ◆ Test the sensitivity.
- ◆ Check the connection if you are forwarding the baby monitor alarm to an external number.
- ◆ Make sure that the answer machine at the target number is switched off.

Activating/deactivating and setting the baby monitor

  ► OK ►  Baby Monitor ► OK

► **Activation:**  On/Off


► Setting the baby monitor:

- **Send alarm to:**  Internal (at least 2 handsets are registered)/ External

If **Internal** is selected:

► **Handset:** Press the **Change** display key. ►  Select handset. ► OK

If **External** is selected:

► **Number:** Enter the number directly or select from the phonebook (press the display key ).


- **Two Way Talk:**  On/Off

- **Sensitivity:**  High/Low

► **Save**

The target number is displayed in idle status when the baby monitor alarm is activated. The baby monitor is deactivated using the **OFF** display key.

Cancelling the baby monitor alarm










Cancelling during a baby monitor alarm: Press .










For further details, please refer to the user guide online at www.gigaset.com or on the CD supplied (depending on what is supplied).

Display icons


 

Icons in the status bar




The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (No Radiation off)
	76% - 100% 51% - 75% 26% - 50% 1% - 25% } White, if Maximum Range is on; Green, if Maximum Range is off
	
	
	
	Red: no connection to the base
	No Radiation activated: white, if Maximum Range is on; green, if Maximum Range is off
	Ringtone deactivated
	"Beep" ringtone activated
	Key lock

Icon	Meaning
	Battery charge status:
	White: charged over 66%
	White: charged between 34 and 66%
	White: charged between 11 and 33%
	Red: charged below 11%
	Flashes red: battery almost empty (approx. 5 minutes talktime remaining)
	Battery is charging (current charge status):
	0% - 10%
	11% - 33%
	34% - 66%
	67% - 100%

Menu icons

	Alarm Clock
	Call Lists
	Answer Machine

	Select Services
	Additional Features
	Settings

Display key icons

The following icons indicate the current function of the display keys according to the operating situation:

Icon	Action
	Last number redial
	Deleting text

Icon	Action
	Opening phonebook
	Copy number to the phonebook

Display icons for signalling of



Establishing a call
(outgoing call)



Connection
established



No connection
established/connection
terminated



External call



Internal call



Reminder call for
anniversary



Reminder call for
appointment



Alarm call

Other display icons



Information



(Security) prompt



Please wait...



Action complete
(green)



Action failed (red)

Setting options

Opening the main menu: Press  whilst the telephone is in idle status.

Note

Not all functions described in this user guide are available in all countries or with all network providers.



Settings

Date/Time	
Audio Settings	Handset Volume Earpiece Profiles Advisory Tones Ringtones (Handset) Music on hold
Display	Screensaver Colour Schemes Backlight
Language	
Registration	Register Handset De-register Handset Select Base
Telephony	Auto Answer Area Codes Listening In Access Code Dialling Mode Recall
System	Reset Handset Base Reset Encryption System PIN
ECO DECT	Maximum Range No Radiation

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia -----	+61 1300 780 878	Jordan -----	00962 6 5625460/1/2
Austria -----	0043 1 311 3046	Kuwait -----	+965 -22458737/22458738
Bahrain -----	-31 73 11 173	Lebanon -----	+9611240259/
Belgium -----	07815 6679	-----	+9611236110
Bosnia Herzegovina-----	033 276 649	Luxembourg -----	-(+352) 8002 3811
Brazil -----		Malaysia -----	+603-8076 9696
Grandes Capitais e Regiões Metropolitanas:		Malta -----	+39 02360 46111 (0,10 €)
-----	4003 3020	Mexico -----	
(Prezzo de uma ligação local)		-----	01800 999 4442738 (01800 999 GIGASET)
-----	Demais localidades:	Netherlands -----	0900-3333102
-----	0800 888 3020	New Zealand -----	-0800 780 878
(Gratuito)		Norway -----	+47 2231 0845
Bulgaria -----	+359 2 9710666	Oman -----	+968 70928 Ext. 49/21/75
Canada -----	1-866 247-8758	Poland -----	-801 140 160
China -----	0 21 400 670 6007 (RMB 0.11)	Portugal -----	-(+351) 808 788 877
Croatia -----	-01 / 2456 555	-----	-(custo de uma chamada local)
Czech Republic -----	-233 032 727	Romania-----	+40 021 204 9130
Denmark -----	+45 43682003	Russia-----	8-800 333 4956
Finland -----	+358 (0)9725 19734	Serbia-----	-0800 222 111
France -----	(0)1 57 32 45 22	Singapore -----	-6735 9100
Germany -----	01805 333 222	Slovak Republic -----	-044 5567 988
Greece -----	+30 2111 98 1778	Slovenija -----	-01 5466 511
Hong Kong -----	2763 0203	South Africa -----	-0800 98 08 42
-----	2389 7285	Spain -----	902 103935
Hungary-----	-01 267 2109	Sweden -----	+46 (0)8502 52347
India -----	Please refer to your	Switzerland -----	-0848 212 000
-----	local warranty card	Taiwan -----	-02 266 24343
Indonesia -----	(62-21) 5673813	Turkey -----	+90 216 223 01 57
-----	(62-21) 888856000	Ukraine -----	+380-44-451-71-72
Ireland -----	-0818 200 033	United Arab Emirates-----	+97144458255
Italy -----	02.600.630.45	-----	+97144458254

(Il numero è di tipo "urbano nazionale" e può essere chiamato da qualunque operatore di rete fissa o mobile. Il costo della chiamata è inerente al proprio piano tariffario definito con l'operatore telefonico, ad esempio in caso di un contratto con tariffa FLAT, non ci sono costi aggiuntivi per la chiamata a questo numero, in quanto si tratta di un numero urbano nazionale).

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs



Index

- A**
- Address book, see Phonebook
 - Alarm clock 22
 - Anonymous calls off 16
 - Answer call key 1
 - Authorisation 28
- B**
- Baby monitor 23
 - Base
 - connecting to power/
 - telephone network 7
 - setting up 6
 - Base station
 - changing the settings 16
 - Battery
 - charging 9
 - charging status 24
 - display 1
 - icon 1
 - inserting 8
 - Broken display 4
- C**
- Call
 - accepting 15
 - external 14
 - Call forwarding (CF) 21
 - Call lists 20
 - deleting an entry 20
 - Call protection 16
 - Call redirection 21
 - Calling
 - external 14
 - CF, see Call forwarding
 - Changing
 - display language 9
 - Changing the phone settings 16
 - Changing the settings 16
 - Charge status indicator 1
 - Charge status of the batteries 24
 - Charging cradle (handset)
 - setting up 6
 - Contactability 21
 - Contents of the package 6
 - Control key 1, 11
 - Correcting incorrect entries 13
 - Correction of incorrect entries 13
 - Customer Care 27
 - Customer Service & Assistance 27
- D**
- Deactivating wireless module 17
 - Dialling
 - from the call list 14
 - using the redial list 14
 - with directory 14
 - Directory
 - saving entry 18
 - Display
 - broken 4
 - changing display language 9
 - network mailbox message 13
 - Display icons 24
 - Display keys 1, 12
 - icons 25
- E**
- Earpiece volume 15
 - ECO DECT 17
 - Eco Mode+ (Radiation emission free) 17
 - Emergency numbers
 - not possible 5
 - End call key 1
 - End call/End key 14
 - Entering special characters 13
 - Entering special letters 13
 - Entering text 13
 - Entering umlauts 13
 - External calls
 - time control for ringtone 16

- F**
Field strength 24
- G**
Getting started 6
- H**
Headset
 changing the settings 16
 display language 9
 earpiece volume 15
 idle status 12
 list 11
 muting 15
 registering 10
 setting 16
 setting up 8
 speaker volume 15
 switching on/off 11
 use as a baby monitor 23
Handsfree mode 15
Handsfree volume 15
Hash key 1
headset connection, rubber seal 8
Hearing
 prevent loss of 5
Hearing aids 4
- I**
Icon
 alarm clock 22
Icons
 displaying new messages 13
 on display keys 25
 status bar 24
Idle status
 returning to 12
- K**
Key 1 (fast access) 1
Keys
 Answer call key 1
 control key 1, 11
 display keys 1, 12
 End call key 1
 End call/End key 14
 fast access 1
 Hash key 1
 Message key 1
 On/off key 1
 Recall key 1
 Star key 1
- L**
Language
 display 9
List
 accepted calls 20
 call lists 20
 handsets 11
 missed calls 20
 outgoing calls 20
List entry 20
Locking/unlocking the keypad 11
Loss of hearing 5
Lower/upper case 13

M

Making calls	
accepting a call	15
external	14
Managing the calendar	21
Marked characters	13
Medical equipment	4
Menu	
opening	11
tree	26
Message key	1
Message lists	13
Microphone	1
Missed call	20
Muting the handset	15

N

Network services	
provider-specific	15
Number	
copying to the phonebook	19
Numbers	
entering	13

O

On/off key	1
One touch call	14
Order in the phonebook	18

P

Phone	
setting	16
Phonebook	18
copying number from text	19
opening	11
order of entries	18
sending entry/list to handset	19
sending to handset	19
Power adapter	4
Protection against unwanted calls	16
Protection from anonymous callers	16

R

Range	6
reducing	17
Recall key	1
Redial list	14
Redirect, see Call forwarding	
Registering (handset)	10
Ringtone	
silencing for anonymous calls	16
time control for external calls	16
Rubber seal	8

S

Safety precautions	4
Saving a number in the directory	18
Sending	
phonebook entry to handset	19
Setting an appointment	21
Setting options	26
phone	16
Setting the date	10, 26
Setting the time	10, 26
Setting up the handset	8
Snooze mode (alarm)	22
Speaker	15
Star key	1
Status bar	1
icons	24
Switching microphone	
(handset) on/off	15

Index

- T**
Technical data, see Internet/CD
Telephone
 operating 11
Time control
 ringtone for external calls 16
- U**
Upper/lower case. 13
- V**
Viewing network mailbox message 13
Volume
 handset handsfree/earpiece volume. . . 15

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2014
Subject to availability.
All rights reserved. Rights of modifications reserved.
www.gigaset.com

This user guide is made from 100% recycled paper.



A31008-M2602-R601-1-TK43