

## How can you enter the prefix codes?

If you are using your base station telephone on a telephone system, then you have to dial a prefix code (access code SC) to access the public telephone network.

The operating instructions for the telephone system will explain the prefix codes.


The following inputs are required if the telephone system is connected as a satellite system to a main telephone system:

- the prefix code
- the main prefix code



You can enter up to four prefix codes (3 access codes and 1 main MSC code). The prefix code entered as access code 1 or MSC is automatically inserted in front of a call number, for example when a number is transferred to the calls list. This enables you to dial the call numbers directly from the calls list or directory.

### Entering prefix codes







1. Open the menu, press key .



2. Select "Settings" with display key . Confirm with display key .



3. Select "System settings" with display key . Confirm with display key .

4. Select "Access Code" with display key . Confirm with display key .

Select the required memory. Confirm with display key .




Enter the prefix code.



5. Open the supplementary menu.

Select display key  .



6. Select "Save entry" and confirm with display key  .

Pick up the handset on the base, then return it to its cradle, the phone is in standby.

When making new entries in the telephone directory and with call restriction, emergency numbers and hot key selection you must save the prefix manually before each call number.