
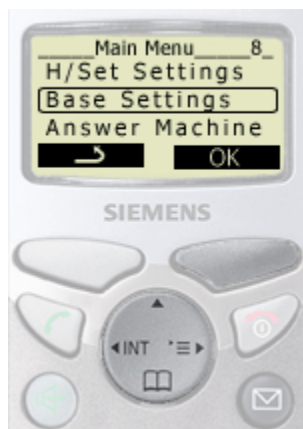 



How do I use Internal call forwarding?

 
Configuring a forwarding destination



1. Open the menu, press control key  (on the dark displayed side).



2. Select "Base Settings", press control key  and confirm with display key **OK**.

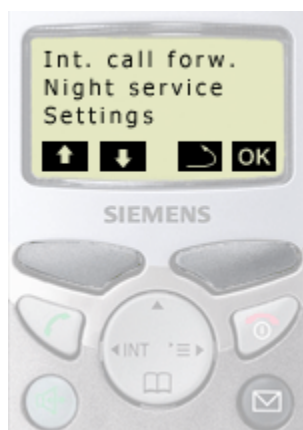

3. Select "Int. call forw." with display key **↓** or **↑**. Confirm with display key **OK**.

4. Select "Forward. dest." with display key **↓** or **↑**. Confirm with display key **OK**.



5. Select the internal subscriber with display key **↓** or **↑**. Confirm with display key **OK**.


Your choice will be marked with a check mark **✓**.


Only one forwarding destination can be selected for internal call forwarding.


Activating/deactivating internal call forwarding

Internal call forwarding can only be activated if a forwarding destination extension has been configured.



1. Open the menu, press control key  (on the dark displayed side).

2. Select "Base Settings", press control key  and confirm with display key **OK**.

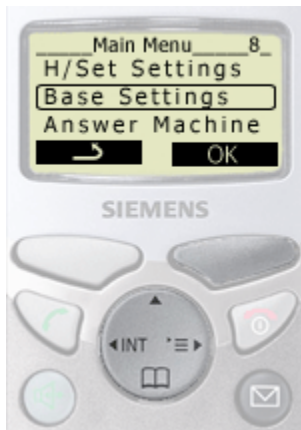

3. Select "Int. call forw." with display key **↓** or **↑**. Confirm with display key **OK**.




4. Select "Activate?" or "Deactivate?" with display key **↓** or **↑**. Confirm with display key **OK**.





Defining the number of ring cycles

Ring delay is used to define the number of ring cycles to be completed before a call is forwarded. Between 0 to 9 ring cycles can be configured.



1. Open the menu, press control key  (on the dark displayed side).

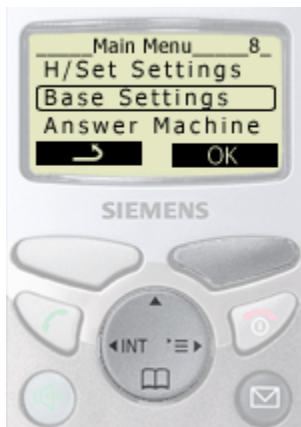

2. Select "Base Settings", press control key  and confirm with display key **OK**.



3. Select "Int. call forw." with display key **↓** or **↑**. Confirm with display key **OK**.

4. Select "No. of rings" with display key **↓** or **↑**. Confirm with display key **OK**.



5. Enter the number of ring cycles and confirm with display key **OK**.

