





## How do I transfer incoming calls (CD - Call Deflection)?

With CD you can transfer an incoming call to another call number while it is ringing. You do not need to answer the call.

### Transferring incoming external calls manually

You receive an external call:


- Open the menu, press control key  (on the dark displayed side).
- Select "Forward" with display key  or . Confirm with display key .


As well as using a predefined forwarding destination, you can also select a call number from the directory or enter a new number.



### Predefining the forwarding destination

You can define a forwarding destination for incoming calls. This destination call number is offered as a preset in the case of manual transfer.

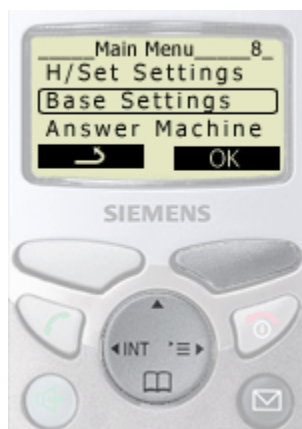

1. Open the menu, press control key  (on the dark displayed side).




2. Select "Base Settings", press control key  and confirm with display key .

3. Select "Settings" with display key  or . Confirm with display key .



4. Select "ISDN settings" with display key **↓** or **↑**. Confirm with display key **OK**.

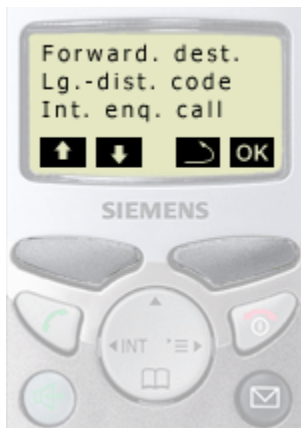

5. Select "Forward. dest." with display key **↓** or **↑**. Confirm with display key **OK**.



6. Enter the call number for the call forwarding destination and confirm with display key **⇒+**.



7. "Save entry". Confirm with display key **OK**.