


How do I delete external call forwarding?



1. Open the menu, press control key  (on the dark displayed side).

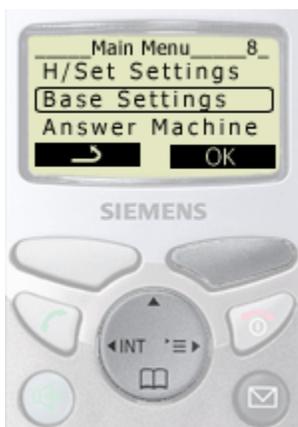

2. Select "Base Settings", press control key  and confirm with display key **OK**.



3. Select "Ext. call forw." with display key **↓** or **↑**. Confirm with display key **OK**.

4. Select the required call forwarding with display key **↓** or **↑**. Confirm with display key **≡+**.



5. Select "Delete entry" with display key **↓** or **↑**. Confirm with display key **OK**.

