


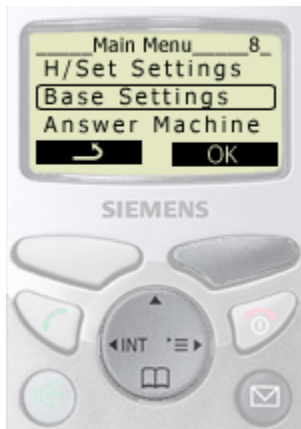
## How can I set ring delay?


Using the ring delay feature you can configure a handset for each individual incoming MSN to delay response to the call signal.

However, during this ring delay time the handset can **accept** the call using the "Accept?" function without a call signal queuing.



1. Open the menu, press control key  (on the dark displayed side).




2. Select "Base Settings", press control key  and confirm with display key **OK**.



3. Select "Settings" with display key **↓** or **↑**. Confirm with display key **OK**.

4. Select "Setup user" with display key **↓** or **↑**. Confirm with display key **OK**.

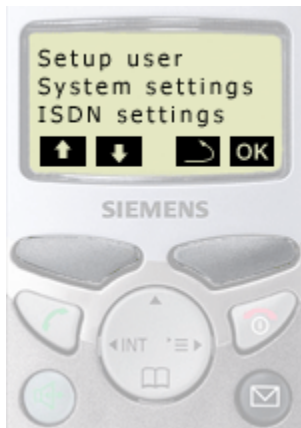

5. Confirm "Setup device" with display key **OK**.



6. Select the internal subscriber with display key **↓** or **↑**. Confirm with display key **≡+**



7. Select "Ring delay" with display key **↓** or **↑**. Confirm with display key **OK**.






8. Choose an MSN with display key **↓** or **↑**. Confirm with display key **→**.



9. Set No. of rings using key **1** - **9** (1 - 9), key **0** + (0) is off. Confirm with display key **OK**.

### Picking up calls during ring delay

A call is coming through to the assigned MSN. Press the off-hook key , the following appears in the display: "Accept?"

- Press display key **YES**: You can answer the call.
- Press display key **NO**: You can set up your own external or internal call.