 



How can I set up the codes for entrance telephone "Door type 2 (DTMF)"?

For entrance phones controlled by DTMF codes you can set various codes. Please read the instructions for this entrance phone!



 
1. Open the menu, press control key  (on the dark displayed side).

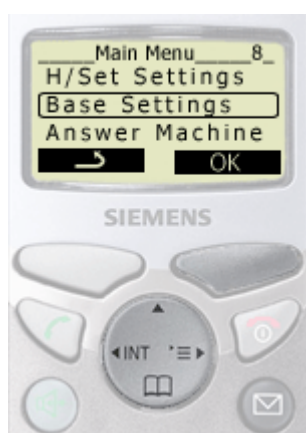

2. Select "Base Settings", press control key  and confirm with display key **OK**.



3. Select "Settings" with display key **↓** or **↑**. Confirm with display key **OK**.

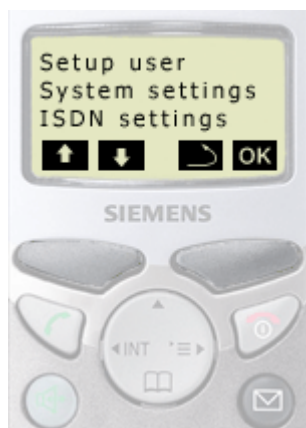

4. Select "Setup user" with display key **↓** or **↑**. Confirm with display key **OK**.

5. Confirm "Setup device" with display key **OK**.



6. Select the internal subscriber (21 or 22) with display key **↓** or **↑**. Confirm with display key **≡+**



- 7.
- Select "Door code" with display key **↓** or **↑**. Confirm with display key **OK**. Enter code (factory setting = #9) and confirm with display key **≡+**.
 - Select "Hunt group code" with display key **↓** or **↑**. Confirm with display key **OK**. Enter code (factory setting = 8) and confirm with display key **≡+**.
 - Select "Connection code" with display key **↓** or **↑**. Confirm with display key **OK**. Enter code (factory setting = 9) and confirm with display key **≡+**.
 - Select "Release code" with display key **↓** or **↑**. Confirm with display key **OK**. Enter code (factory setting = #0) and confirm with display key **≡+**.



8. "Save entry". Confirm with display key **OK**.

