



How do I assign internal users to the entrance telephone call group?




1. Open the menu, press control key  (on the dark displayed side).

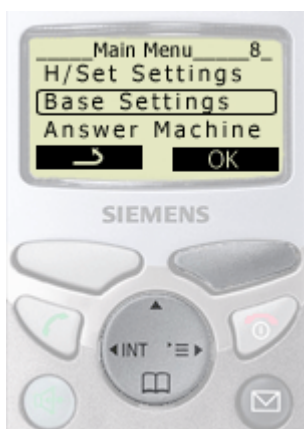

2. Select "Base Settings", press control key  and confirm with display key **OK**.





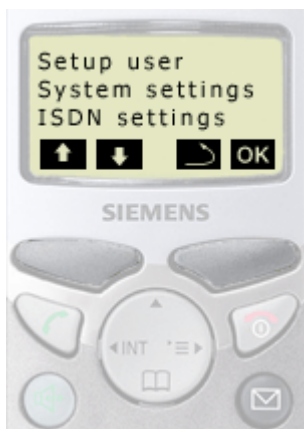


3. Select "Settings" with display key **↓** or **↑**. Confirm with display key **OK**.







4. Select "Setup user" with display key **↓** or **↑**. Confirm with display key **OK**.

5. Confirm "Setup device" with display key **OK**.



6. Select the internal subscriber with display key  or . Confirm with display key   



7. Select "Hunt group" with display key  or . Confirm with display key  

(With check mark (✓) in front of menu item = ON, no check mark = OFF)

