


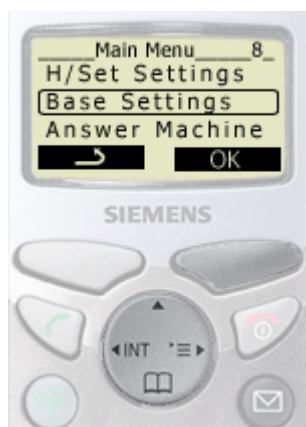 
How can I forward the entrance telephone externally?


All entrance telephone calls can be forwarded to an external call number.

Entering/modifying a destination call number for external call forwarding



 
1. Open the menu, press control key  (on the dark displayed side).



2. Select "Base Settings", press control key  and confirm with display key **OK**.



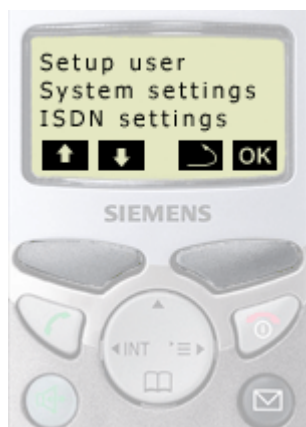


3. Select "Settings" with display key **↓** or **↑**. Confirm with display key **OK**.






4. Select "Setup user" with display key **↓** or **↑**. Confirm with display key **OK**.

5. Confirm "Setup device" with display key **OK**.

 


6. Select the configured entrance telephone (Int 21 or Int 22) with display key  or . Confirm with display key .




7. Select "Forw. door call" with display key  or . Confirm with display key .



8. Confirm "Dest. call no." with display key .

 


If a destination call number has not yet been stored, the entry <blank> is displayed.

 
9. Confirm "Change number" with display key .



10. Enter the new or modified destination call number and confirm with display key **≡+**.

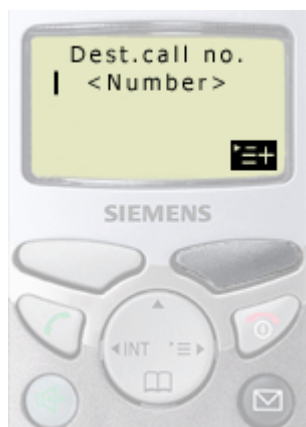

11. "Save entry". Confirm with display key **OK**.

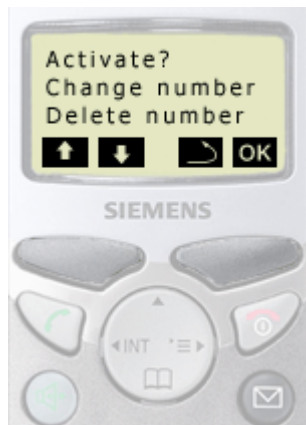

If a destination call number has been stored, the following is also possible:

Deleting a destination call number for external call forwarding

You can select "Delete number" by point 9.

Activating/deactivating call forwarding

You can select "Activate?" or "Deactivate?" by point 9.