



How do I configure the entrance telephone?



1. Open the menu, press control key  (on the dark displayed side).

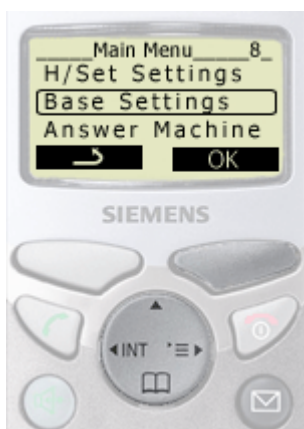

2. Select "Base Settings", press control key  and confirm with display key **OK**.



3. Select "Settings" with display key **↓** or **↑**. Confirm with display key **OK**.



4. Select "Setup user" with display key **↓** or **↑**. Confirm with display key **OK**.

5. Confirm "Setup device" with display key **OK**.



6. Select internal subscriber (21 or 22) with display key **↓** or **↑**. Confirm with display key **⇒**



7. Select a device type with display key **↓** or **↑**. Confirm with display key **OK**.



8. Select "Door type1 " or "Doortype2 (DTMF)" with display key **↓** or **↑**. Confirm with display key **OK**.



- Door type 1: this configuration is only applicable for entrance telephones in accordance with FTZ (door opener via ring current).
- Door type 2: E.g. Deutsche Telekom DoorLine products.