

Gigaset

AS690

You can find the most up-to-date
user guide at

www.gigaset.com/manuals



Contents

Overview	4
Safety precautions	7
Getting started	8
Package contents	8
Base	8
Handset	9
Using the phone	11
Switch the handset on and off	11
Lock/unlock the keypad	11
Control key	11
Display	12
Menu navigation	13
Making calls	14
Making a call	14
Accepting a call	15
Handsfree mode	15
Changing the receiver/speaker volume	15
Muting	15
Making internal calls	16
Calling Line Identification	17
Automatic network provider selection (preselection)	18
Call/message lists	19
Call list	19
Message list	20
Directory	20
Network mailbox	22
Entering a number	22
Playing messages	22
Additional functions	23
Alarm clock	23
ECO DECT	23
Protection from undesired calls	24
Extending the functionality of the phone	25
Multiple handsets	25
Repeater support	26
Operating the base on a router/PABX	26

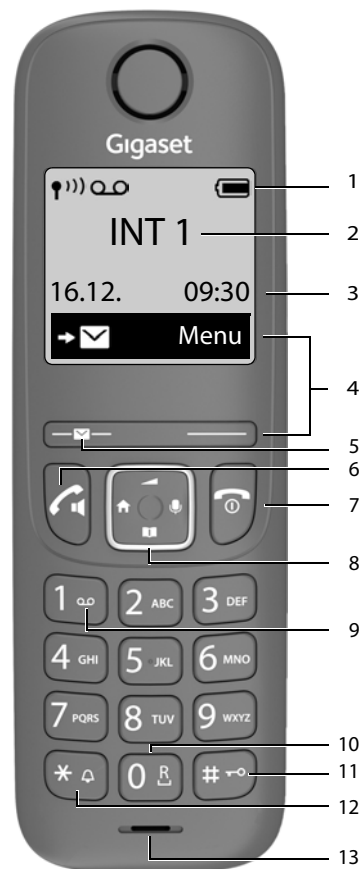
Phone settings	28
Date and time	28
Display language	28
Display	28
Audio	29
System	31
Customer Service & Assistance	32
Questions and answers	33
Dealer or local after-sales services (Southern Africa)	33
Manufacturer's advice	34
Authorisation	34
Data protection	34
Environment	34
Care	35
Contact with liquid	35
Technical data	35
Character set tables	38
Menu tree	39
Index	41



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

Handset



1 Status bar (→ p. 12)

Icons display current settings and operating status of the telephone

2 Name of the handset (→ p. 25)

3 Date and time (→ p. 28)

4 Display keys and functions (→ p. 12)

Various functions, depending on the operating situation

5 Message key

Access to the call and message lists;

flashes: new message or new call

New messages in the call list / network mailbox list are shown on the display by message **New messages.**

6 Talk key / Handsfree key

Accepting call; selecting displayed number; open redial list

▶ Press **briefly**

Start dialling

▶ Press and **hold**

7 End call key / On/Off key

End call; Cancel function; one level back

▶ Press **briefly**

Back to idle mode, switch handset on/off

▶ Press and **hold**

8 Control key (→ p. 11)

☐ Open menu; mute;

☐ Open directory;

☐ Adjust volume;

☐ Make internal calls;

☐ Navigate in menus and entry fields

9 Key 1

Call network mailbox

▶ Press and **hold**

10 Recall key

Consultation call (flash)

▶ Press and **hold**

11 Hash key / Lock key

Lock/unlock the keypad; enter a dialling pause

▶ Press and **hold**

Toggle between upper/lower case and digits

▶ Press **briefly**

12 Star key

Switching the ringtone on/off

▶ Press and **hold**

13 Microphone



If multiple functions are listed, the button function depends on the situation.

The colour and shape of your device may be different from the illustration.



Setting the display language (→ p. 10)

Base

Registration/paging key





Locate a handset (paging): ▶ Press **briefly**

Registering handsets: ▶ Press and **hold**

 




 
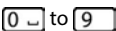
 


Symbols used in the user guide

Icons

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.







Buttons

	Talk/Handsfree key		Hash key
	End call key		Star key
	Control key		Recall key
	Digit/letter keys		Menu, OK Display keys













Procedures

Example: Enabling/disabling Auto Answer:

▶  **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Auto Answer** ▶ **OK** (✓ = enabled)

Symbols	Meaning
▶	Every arrow initiates an action.
▶ Menu	Press the Menu display key.
▶  Settings	Use the control key  to navigate to entry Settings .
▶ OK	Press OK to confirm. The Settings submenu is opened.
▶  Handset	Select the Handset entry using the control key  .
▶ OK	Press OK to confirm. The Handset submenu is opened.
▶  Auto Answer	Select the Auto Answer entry using the control key  .
▶ OK	Enable or disable it using OK . Function is enabled ✓.

Safety precautions

	Read the safety precautions and the user guide before use.
	The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls . Emergency numbers cannot be dialled if the keypad/display lock is activated!
	Use only rechargeable batteries that correspond to the specification (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.
	The handset must not be operated if the battery cover is open. Ensure that the batteries can not be short-circuited by objects in the battery compartment.
	Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Use only the power adapter indicated on the device. Whilst charging, the power socket must be easily accessible.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the Technical data of your Gigaset product see "Technical data").

Getting started

Package contents

- One base, one power adapter, one phone cable
- One handset, two batteries, one battery cover
- One user guide

Models with multiple handsets, per handset:

- One handset, one charging cradle with power adapter, two batteries and one battery cover



The base and charging cradle are designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Position the base on a level, non-slip surface at a central point in the flat or house. The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices. Protect your telephone from moisture, dust, corrosive liquids and vapours.

Base

Connecting the base to power supply and telephone network

- ▶ Connect the power adapter **1**.
- ▶ Connect the phone jack **2** and insert the cables into the cable channels.



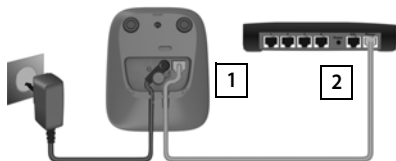
The power adapter must **always be connected** as the phone does not work without a power supply.



Connecting the base to the router

You can also operate the telephone on the analogue connection of a router.

- ▶ Connect the phone jack **1** and connect it to the analogue port of a router **2**.



Any **echoes** can be reduced by enabling **XES Mode** (→ p. 26).

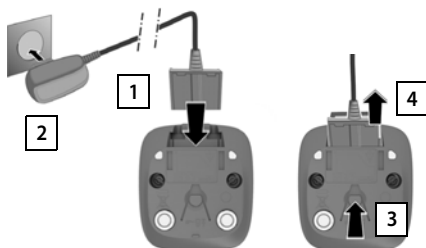
Handset

Connect the charging cradle (if included)

- ▶ Connect the flat plug of the power adapter **1**
- ▶ Plug the power adapter into the socket **2**

To remove the plug from the charging cradle again:

- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.



Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film.**

Inserting the batteries



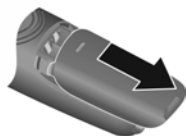
Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged beyond repair or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries with the polarity in the right direction (refer to the picture for +/- positions).




- ▶ Fit the battery cover from the top.
- ▶ Push the cover closed until it clicks into place.



- To re-open the battery cover:
 - ▶ Grip the notch on the cover and slide it downwards.

Charging the batteries

- ▶ Fully charge the batteries in the charging slot prior to initial use.

The batteries are fully charged when the battery icon  disappears from the display.



Batteries can heat up during the charge process. This is not dangerous.

Over time, the charging capacity of the batteries will decrease for technical reasons.

 

Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the batteries.

Handsets contained in the package have already been registered to the base. If a handset has not been registered however, please register it manually (→ p. 25).




Changing the display language


You can change the display language, if the phone has been set to an incomprehensible language.

- ▶ **Menu** ▶ Press the keys **4** **2** **1**  slowly in succession . . . the language set (e.g. **English**) is displayed
- ▶ Select a different language: ▶ Press the control key  until the language required is selected on the display, e.g. **Francais** ▶ **OK** (✓ = selected)

Setting date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ▶  Enter the date (day, month and year) in 6-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK** (Display: Saved)


Moving the input position to the left or right: ▶ Press the control key  to the left/right

Your phone is now ready for use

Using the phone

Switch the handset on and off

 
Switching on: ▶ When the handset is switched off, press and **hold** the End call key 

Switching off: ▶ When the handset is in idle mode, press and **hold** the End call key 

If you place a deactivated handset into the charging slot, it will automatically activate itself.

Lock/unlock the keypad

The keypad lock prevents any accidental use of the phone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock enabled: The  symbol is shown on the display




If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.





It is also not possible to call emergency numbers when keypad lock is enabled.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

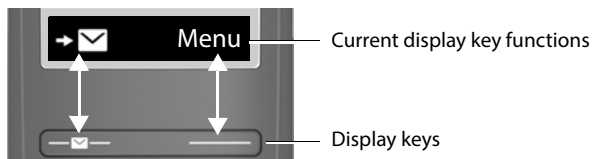
In the description below, the side of the control key is marked with an arrow (up, down, left, right) that must be pressed in the different operating situations, e.g.  for “press right on the control key”.

In idle mode	During a conversation
 Open the menu	Mute the microphone
 Select audio settings	Adjust the loudspeaker volume for receiver and handsfree mode
 Open the directory	Open the directory
 Make internal call / Open list of handsets	Initiate an internal consultation call






Display

Display keys







The display keys perform a range of functions depending on the operating situation.



► Press the display key . . . Function shown in display above.



 Menu	Open the main menu / submenu
 OK	Confirm menu function / save entry
 Menu	Back one menu level
 OK	Delete character by character to the left
 Menu	Access the call list / message list

Display functions accessed from the control key

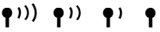


  Menu	Use  to scroll up/down and set the volume
  OK	Move the cursor left and right with 

Status bar


Icons display current settings and the status of the phone.


	Keypad lock activated
	Ringtone deactivated


Radio contact between the base and handset

	Good to poor
	No reception
	ECO DECT mode No Radiation enabled

Battery charge level

 0 - 10%	 11 - 33%	 34 - 66%	 > 66%
--	--	--	---



The  symbol is shown at the front during the charge process.

 Flashing	Battery almost flat (less than 10 minutes of talk time)
---	---


Menu navigation

The functions of your phone are displayed in a menu comprising several levels.

Menu overview: → p. 39

- ▶ When the phone is in **idle**, press the Display key **Menu** or the control key  (right) ... the menu opens
- ▶ Use the control key  to scroll to the function required ▶ Confirm with **OK**

Back one level: ▶ Press the  key or **briefly** press the End call key 

Return to idle: ▶ Press and **hold** the End call key 

 


The display automatically returns to idle mode after two minutes of inactivity.

Making calls

Making a call



 
▶  Enter the number ▶ Press the Talk key  ... The number is dialled

or




 
▶ Press and **hold** the Talk key  ... The dial tone can be heard ▶  Enter the number
Ending a call / cancelling dialling: ▶ Press the End call key 

You can automatically prefix every number with a network provider prefix (**Preselection**).

Dialling from the directory

▶ Open the directory with  ▶  Scroll to the required entry ▶ Press the Talk key 

or

▶ Open the directory with  ▶  Enter the first letter of the name ... The first entry matching the input is displayed ▶  Scroll as needed to the entry required ▶ Press the Talk key 

Dialling from the redial list

The list contains the 10 numbers last dialled with the handset.

▶ Press **briefly**  ▶  Select entry ▶ 


 
Managing entries in the redial list

▶ Press **briefly**  ▶  Select ▶ **Menu** ▶  Select function ▶ **OK**

Possible functions: **Use Number** / **Copy to Dir.** / **Delete Entry** / **Delete List**

Dialling from the call list

Open the call list: ▶ Press the Display key  ▶  CallsList ▶ **OK**

▶  Scroll to the required entry ▶ Press the Talk key 

Dialling with speed dial key



Entries from the directory are assigned to keys 2 to 9.

▶ Press and **hold** the quick dial key to which the required number is assigned

Accepting a call

The handset indicates an incoming call by ringing and by a display on the screen.

- ▶ Press the Talk key 

Function **Auto Answer** enabled: ▶ Simply take the handset out of the charging slot

Enabling function **Auto Answer**:


- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Auto Answer** ▶ **OK** (✓ = enabled)

Switch the ringtone off: ▶ **Menu** ▶ **Silent** ... The call can continue to be accepted whilst it is being shown on the display

Handsfree mode

In handsfree mode, you switch on the loudspeaker so that you can hear the caller without holding the handset to your ear.

Enabling/disabling handsfree mode during a call and when listening to the answer machine:

- ▶ Press the handsfree key 
-

Changing the receiver/speaker volume

To change the receiver/speaker volume during a call:

- ▶  ▶ Use  to set the volume
-

Muting

When the microphone is switched off, the people you are talking to can no longer hear you.

- ▶ During a call, press the control key  (right) ... The handset microphone is switched off

Making internal calls



Internal calls are free calls to other handsets registered to the same base.

Making internal calls

Calling a specific internal subscriber:

- ▶ ▶ when more than two handsets are registered: Use to select the internal subscriber ▶ OK or ... The handset selected is called

Calling all handsets ("group call"):

- ▶ Press and **hold** or ▶ ▶

or

- ▶ ▶ **Calling all HS** ▶ OK or ... All registered handsets are called. You speak to the first internal subscriber to pick up.

Ending the internal call: ▶ Press the End call key .

Making an internal consultation call / Forwarding a call

Call an **external** subscriber and transfer the call to an **internal** subscriber or hold a consultation call with him or her.

- ▶ ▶ Select as required the handset or **Calling all HS** ▶ OK ... The internal subscriber(s) is/are called, the external subscriber hears music on hold

Possible options:

Hold a consultation call: ▶ Speak to the internal subscriber

Return to the external call: ▶ Press the Display key

Transfer the external call when the internal subscriber has answered:

- ▶ Announce an external call ▶ Press the End call key

Transfer the external call before the internal subscriber answers:

- ▶ Press the End call key ... The external call is forwarded immediately

Listening in to an external call

You are holding an external call. An internal subscriber can listen in to this call and take part in the conversation (conference).




The **Listening in** function is enabled.

Enabling/disabling internal listening in


▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Listening in ▶ OK (✓ = enabled)


Initiating an internal conference call

You want to join an existing external call on a different handset.

▶ Press and **hold** the Talk key  ... All subscribers hear a signal tone

Ending a conference call:

▶ Press the End call key  ... All subscribers hear a signal tone

When the **first** internal subscriber presses the End call key , the handset which joined the conference call remains connected to the external subscriber.

Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and can be displayed on the recipient's display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously (CLIR = CLI Restriction).

If CNIP (Calling Name Identification Presentation) is available, the registered name is shown instead of the number.



You have authorised your network provider to show the number of the caller (CLIP) and their name (CNIP) on your display.

The caller has authorised the network provider to send the phone number (CLI).

Caller display for incoming calls

Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- **External Call:** No number is transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

Automatic network provider selection (preselection)

You can store a Call-by-Call number (preselection number), which **automatically** prefixes the number you dial. If you want to make calls abroad through a particular network provider for example, you can store its prefix here.

In the **With Preselect** list, enter the (initial digits of the) prefix numbers for which you want to use the preselection number.

In the **Without Presel.** list, enter the exceptions to the **With Preselect** list.

Example:

Presel. Number	0999
With Preselect	08
Without Presel.	081 084

All numbers beginning with **08**, with the exception of **081** and **084**, are dialled using preselection number **0999**.

Number	Selected number
07112345	▶ 07112345
08912345	▶ 0999 08912345
08412345	▶ 08412345

Entering a preselection number

- ▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Preselection ▶ OK ▶ Presel. Number ▶ OK ▶ Enter the number or use number from directory ▶ OK

Create list of prefix numbers with preselection

- ▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Preselection ▶ OK ▶ With Preselect ▶ OK ▶ Select the list entry (1 – 11) ▶ OK ▶ Enter (the initial digits of) the prefix number for which the preselection number is to be used ▶ OK ▶ Select different list entry as required and enter more numbers

Create list of prefix numbers without preselection

- ▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Preselection ▶ OK ▶ Without Presel. ▶ OK ▶ Select the list entry (1 – 11) ▶ OK ▶ Enter the exceptions for the With Preselect list ▶ OK ▶ Select another list entry as required and enter more numbers

Cancelling preselection for current call

- ▶ Press and hold ▶ Menu ▶ Preselect off ▶ OK ▶ Enter number or take number from directory ▶ ... The number is selected without preselection.

Disabling preselection permanently

- ▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Preselection ▶ OK ▶ Presel. Number ▶ OK ▶ Clear the preselection number with the Display key ▶ OK

Call/message lists

The phone saves information about various events in lists:

- Call list: Numbers of all incoming and missed calls
- Network mailbox list: Messages on the network mailbox

An advisory tone sounds as soon as a **new entry** appears on one of the lists. The default is the message key (on the left Display key) flashing and **New messages** being shown on the display.

Disabling the display of new messages

▶ Menu ▶ * # * 0 5 # * 7

97

Select the type of message:

- ▶ Press key 5 for missed calls
- ▶ Press key 7 for messages on the network mailbox

975 SET: [0]

Setting the actions for new messages:

- ▶ Press key 0 The presence of new messages is displayed (default).
- ▶ Press key 1 The presence of new messages is not displayed.

975 SET: [1]

Save setting: ▶ OK



A change to the setting only becomes effective once the next new message is received.

If calls are stored in the network mailbox, you receive a message when the setting is configured (dependent on the network provider).

Call list

Prerequisite: CLIP

Depending on the type of list set, all numbers for the last 25 incoming calls are saved, or only the missed calls are saved.

Setting the list type

▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Call list type ▶ OK ▶ Missed Calls / All Calls ▶ OK (✓ = selected)

Opening the call list

▶ Press the Display key [envelope icon]... The list selection is opened ▶ CallsList

The entry shows: number of new entries + number of old, read entries

CallsList 01+02

Open list: ▶ OK... The last incoming call is displayed

▶ Use [up/down arrow icon] to scroll through the list

Using other functions



▶  Select entry ▶ **Menu** ▶ Use  to select the function:

Delete Entry	Delete current entry
Copy to Dir.	Copy an entry to the directory
Copy to Blacklist	Copy a number to the black list
Date/Time	Show date and time of the call (if set)
Status	New Call: New missed call. Old Call: Entry already read
Show Name	If you have requested CNIP, you can view the name and place that are registered for this phone number with your network provider
Delete List	Delete all entries Note: All old and new entries are deleted

Message list

You can use the network mailbox list to listen to messages on the network mailbox.


Open the network mailbox list:

▶ Press the Display key  ... The list selection is opened ▶  **Net. MBX** ▶ **OK**

Directory


The local directory is unique to a handset. Entries can be sent to other handsets however (→ p. 21).

Up to 100 phone numbers (max. 22 digits) with associated names (max. 16 characters) can be stored.

Open the directory: ▶ Press down the control key 

Creating a directory entry



First entry:

▶  ... **New Entry?** ▶ **OK** ▶  Enter the phone number ▶ **OK** ▶  Enter the name ▶ **OK**

More numbers:

▶  ▶ **Menu** ▶ **New Entry** ▶ **OK** ▶  Enter the phone number ▶ **OK** ▶  Enter the name ▶ **OK**




Selecting/editing the directory entry

- ▶  Open the directory
- ▶ Use  to scroll to the entry until the required name is selected

or

- ▶ Enter the first character of the name ▶ Scroll as required with  to the entry


Display entry: ▶ **Menu** ▶  **Show Number / Show Name** ▶ **OK**

Change entry: ▶ **Menu** ▶  **Edit Entry** ▶ **OK** ▶ Delete characters with  ▶ change entry with  ▶ **OK**

Assigning quick-dial keys

- ▶  ▶  Select entry ▶ **Menu** ▶  **Shortcut** ▶ **OK**
- ▶  Select key ▶ **OK**

or

- ▶  Press the key for which the entry is to be saved

Clearing a key assignment:

- ▶  ▶  Select entry ▶ **Menu** ▶  **Shortcut** ▶ **OK** ▶  **No Shortcut** ▶ **OK**
(✓ = selected)

Deleting a directory (entry)

Deleting a directory entry

- ▶  ▶  Select entry ▶ **Menu** ▶  **Delete Entry** ▶ **OK**

Deleting a directory

- ▶  ▶ **Menu** ▶  **Delete List** ▶ **OK** ▶ Confirm deletion with **OK**


Transferring a directory (entry) to another handset



The sending and receiving handsets must both be registered with the same base.

The other handset and the base are able to send and receive directory entries.

Transferring a directory entry to another handset

- ▶  ▶  Select entry ▶ **Menu** ▶  **Send Entry** ▶ **OK** ▶  Select internal number of the recipient handset ▶ **OK**

Transferring a directory to another handset

- ▶  ▶ **Menu** ▶  **Send List** ▶ **OK** ▶  Select internal number of the recipient handset ▶ **OK**

Network mailbox



The network mailbox is **registered** with the network provider.

Entering a number

- ▶ Menu ▶ Answer Machine ▶ OK ▶ Net Mailbox ▶ OK ▶ Enter the number ▶ OK ... The network mailbox is enabled



To enable and disable the network mailbox, use the number and a function code from your network provider. Contact the network provider if you require any further information.

Playing messages

- From the menu:
- ▶ Menu ▶ Answer Machine ▶ OK ▶ Play Messages ▶ OK ▶ Net Mailbox ▶ OK

- Using key 1:
- ▶ Press and **hold** key

- From the message list:
- ▶ Press the Display key ... The list selection is opened ▶ Net. MBX ▶ OK

... The network mailbox is called and the voice menu of the network operator is used for subsequent use

Additional functions

Alarm clock



Date and time have been set.

Turning the alarm clock on and off

- ▶ Menu ▶ Alarm Clock ▶ OK ▶ Activation ▶ OK (✓ = turned on)
- ▶ Enter the wake-up time in hours and minutes ▶ OK

Alarm clock turned on: Instead of the date, the display shows the wake-up time and left of it the alarm clock symbol.

Setting/changing the wake-up time

- ▶ Menu ▶ Alarm Clock ▶ OK ▶ Wake-upTime ▶ OK ▶ Enter the wake-up time in hours and minutes ▶ OK

Turning off the wake-up call

A wake-up call is shown on the display and indicated by the ringtone melody selected.

- ▶ Press any key ... The alarm call is turned off for 24 hours

ECO DECT

The device range is set to maximum by default. This guarantees the best connection between handset and base. In idle mode, the handset does not transmit (it is radiation-free). Only the base maintains contact with the handset, using weak wireless signals. During a call, the transmit power automatically adapts to the distance between base and handset. The shorter the distance to the base, the lower the radiation.

Reducing radiation by up to 80%

Enabling/disabling the maximum range:




- ▶ Menu ▶ Settings ▶ OK ▶ Base ▶ OK ▶ ECO DECT ▶ OK ▶ Max. Range ▶ OK
(= range and radiation reduced)



It is not possible to use a repeater to increase the range.

Disabling radiation in idle mode

The wireless signals of the base are also disabled with the **No Radiation** setting.


- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  ECO DECT ▶ OK ▶ No Radiation ▶ OK (✓ = Radiation disabled)



All handsets registered must support this feature.

For speedy set-up of connections for incoming calls, the handset keeps switching to "ready to receive" momentarily. This increases the power consumption and so reduces the standby and talk times.

When **No Radiation** is enabled, there is no range display / range alarm on the handset. Contactability can be tested by attempting to establish a connection.




- ▶ Press and **hold** the Talk key  ... the ringing tone sounds.

Protection from undesired calls





Black list

You can enter up to 32 numbers in a black list. When the black list is enabled, calls from black list numbers are not signalled acoustically. These settings apply to all registered handsets.



Enabling/disabling the black list

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ Call Protection ▶ OK ▶ Activation ▶ OK (✓ = enabled)

Displaying/editing the black list

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ Call Protection ▶ OK ▶ Black List ▶ OK ... The list of blocked numbers is displayed ▶ Use  to scroll through the list

Create an entry: ▶ Menu ▶ New Entry ▶ OK ▶  Enter the number

Delete entry: ▶  Select the entry ▶ Press the display key 

Transferring a number from a call list to the black list

- ▶ Open the call list: Press the Display key  ▶  CallsList ▶ OK ▶  Select an entry ▶ OK ▶ Copy to Blacklist ▶ OK

Extending the functionality of the phone

Multiple handsets

Up to four handsets can be registered with the base.

Every device is assigned an internal name and internal number (INT 1 – INT 4). The assignment can be changed.

All internal numbers are already assigned: ▶ De-register any devices no longer needed

Registering a handset

Register HS or Put into base flashes on the display.

Registering by placing the handset in the base

- ▶ Place the handset in the base . . . **Registering** is shown on the display, the handset is registered automatically

Registering from the menu



Registration must be initiated **both** on the base **and** on the handset. Both must be **within 60 seconds**.

On the handset

- ▶ Menu ▶ Settings ▶ OK ▶ Handset ▶ OK ▶ Register HS ▶ Enter the system PIN of the base (default: 0000) ▶ OK ▶ The display shows **Registering**.

On the base

- ▶ Within **60 seconds** of entering the system PIN, press and **hold** the registration/paging key for a minimum of 3 seconds.



The registration process takes about 1 minute. Handsets are assigned the lowest available internal number (1 to 4). If internal numbers 1 to 4 are already assigned to other devices, number 4 is overwritten.

De-registering a handset

You can de-register any other registered handset from any registered Gigaset handset.

- ▶ Menu ▶ Settings ▶ OK ▶ Handset ▶ OK ▶ De-register HS ▶ OK
- ▶ Select the internal user to be de-registered. (The handset you are currently using is marked with <.) ▶ OK ▶ Enter the system PIN of the base (default: 0000) ▶ OK . . . the handset is registered. **Put into base** flashes on the display

Locating a handset (paging)

 

Locate a handset using the base.

- ▶ **Briefly** press the Register/Paging key on the base . . . all handsets registered ring at the same time even when their ringtones are turned off

Exit

- ▶ **Briefly** press the Register/Paging key on the base

or

- ▶ Press  or  on a handset

Repeater support

A repeater increases the receiving range between the Gigaset handset and base.

Enabling Repeater mode for the base:

Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ Repeater ▶ OK
(✓ = enabled)

Register repeater on the base: → User guide for the repeater






Repeater support and ECO DECT mode **No Radiation** are mutually exclusive.

Operating the base on a router/PABX

Operation with a router

When operating on the analogue connection of a router, any **echoes** occurring can be reduced by enabling **XES Mode** (XES = eXtended Echo Suppression).

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Additional ▶ OK ▶ XES Mode ▶ OK
(✓ = enabled)



If there are no problems with echoes, this function should be disabled.


Operation with a PABX

The following settings are only necessary when your PABX requires them (⇒ refer to the PABX user guide). Enter the digits **slowly** one after the other.

Setting the flash time

- ▶ **Menu** ▶ * 0 # 0 5 # 1 0 ▶ The digit for the current flash time flashes:
 1 = 80 ms; 2 = 100 ms; 3 = 120 ms; 4 = 180 ms; 5 = 250 ms; 6 = 300 ms; 7 = 400 ms;
 8 = 600 ms; 9 = 800 ms ▶ Enter digit ▶ **OK**

Changing pause after line seizure

You can set the length of the pause inserted between pressing the Talk key  and sending the phone number.

- ▶ **Menu** ▶ * 0 # 0 5 # 1 6 ▶ The digit for the current pause length
 flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. ▶ Enter digit ▶ **OK**

Changing pause after recall key




- ▶ **Menu** ▶ * 0 # 0 5 # 1 2 ▶ The digit for the current pause length
 flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms ▶ Enter digit ▶ **OK**

Phone settings

Date and time


 






Setting

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ▶  Enter the date (day, month and year) in 6-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK**

Using the network time

If date and time are also to be sent to your phone by your network operator (or a router/PABX) during calling line identification, you can specify whether and when these are accepted:

 
 
 

- ▶ **Menu** ▶        ... The digit for the current setting flashes:
 - 1 = **Never**
 - 2 = **Once**, if the date and time are not set on your phone or
 - 3 = **Always**
- ▶  Enter the required digit ▶ **OK**

Display language

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Language** ▶ **OK** ▶  Select the language ▶ **OK** (✓ = selected)



If you accidentally choose a language you do not understand:

- ▶ **Menu** ▶    Press keys one after the other ▶ Use  to select the language ▶ **OK**

Display

Large dial keys

Show large dial keys when dialling

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Big Dial Font** ▶ **OK** (✓ = enabled)

Contrast

Adjust the display contrast on 9 levels.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Contrast** ▶ **OK** ▶  Select the level ▶ **OK** (✓ = selected)

Audio

Call volume

Adjust the receiver volume or handsfree function on 5 levels.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Handset Volume ▶  Earpiece / Speaker ▶ OK
- ... The current setting is displayed ▶  Select the volume ▶ OK

Tone quality

Change the tone quality of the receiver to how you want it.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Handset Sound ▶  Low / High ▶ OK
- (✓ = selected)





Ringtone volume (ringer volume)

Adjust the volume of the ringtone on 5 levels.

 

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringer Volume ▶ OK ▶  Select volume or Crescendo ▶ OK (✓ = selected)

Ringtone melody

Set the ringtone melody for external calls, internal calls and/or the alarm.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringer Melody ▶ OK ▶  Select External Calls / Internal Calls / Alarm Clock ▶ OK ▶  Select ringtone required ▶ OK
- (✓ = selected)

Disabling/re-enabling the ringtone permanently

- ▶ When the phone is idle, press and **hold** the Star key . When the ringtone is disabled, symbol  is shown on the display.

Deactivating the ring tone for the current call

- ▶ Menu ▶ Silent ▶ OK

Enabling/disabling advisory and warning tones

The handset provides acoustic notification of different activities and statuses.

Advisory tone: e.g. keypress tones, error tone, a new message

 
 
 

 

Battery warning tone: The battery charge falls below a certain level during a call.

You can enable and disable advisory and warning tones separately.

▶ Menu ▶  Audio Settings ▶ OK ▶  Advis.Tones / Battery Low ▶ OK (✓ = enabled)

Music on hold

You can choose whether an external caller hears music on hold during an internal consultation or when a call is being forwarded.

▶ Menu ▶ *  #  0  5 #  1  7 ... The digit for the current setting flashes:
0 = disabled; 1 = enabled ▶  Enter required digit ▶ OK







Enabling/disabling ringtone with time control

Enter a time period during which the handset should **suspend** ringing to indicate external calls, such as during the night.

Enabling/disabling time control

▶ Menu ▶  Settings ▶ OK ▶  Handset ▶ OK ▶  Time Control ▶ OK ▶ Activation ▶ OK (✓ = enabled)

Setting the time period

▶ Menu ▶  Settings ▶ OK ▶  Handset ▶ OK ▶  Time Control ▶ OK ▶  Settings ▶ OK ▶ Off from:  Enter the 4-digit time ▶ OK ▶ Off until:  Enter the 4-digit time ▶ OK






Off for anonymous calls

You can set your **handset** so that it does not ring for calls where Calling Line Identification has been withheld. The call is only signalled on the display.

▶ Menu ▶  Settings ▶ OK ▶  Handset ▶ OK ▶  An.Call Silent ▶ OK (✓ = enabled)

System

Changing the system PIN

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  System PIN ▶ OK ▶  Enter the current 4-digit system PIN (default: 0000) ▶ OK ▶  Enter the new 4-digit system PIN ▶ OK

Resetting the system PIN: → p. 31

Resetting the handset

You can reset individual settings. Entries in the directory and call list, and the handset's registration to the base, are maintained.

- ▶ Menu ▶  Settings ▶ OK ▶  Handset ▶ OK ▶  Reset Handset ▶ OK ▶ Reset? ▶ OK

Resetting the base

A reset disables mode **No Radiation**, resets individual settings and deletes all lists.

The time and date are not affected.

Resetting the base from the menu

The handsets remain registered. The system PIN is **not** reset.

- ▶ Menu ▶  Settings ▶ OK ▶  Base ▶ OK ▶  Base Reset ▶ OK ▶ Reset? ▶ OK

Resetting the base using a key on the base

All handsets are de-registered. The system PIN is set back to the original code **0000**.

- ▶ Remove the power cable from the base ▶ Keep pressed the **Registration/paging key** on the base ▶ At the same time, reconnect the power cable to the base ▶ Keep the key pressed for at least another 5 seconds

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

In our constantly updated online service you can find:

- Extensive information about our products
- FAQ compilations
- Keyword search to help find topics quickly
- Compatibility database: Find out which base stations and handsets can be combined.
- Product comparison: Compare the features of several products with each other.
- Downloads for user manuals and current software updates
- E-mail contact form for customer service

In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.


Our representatives are also available on the telephone hotlines for consultation.

Australia	----- +61 1300 780 878	Jordan	----- 00962 6 5625460/1/2
Austria	-----0043 1 311 3046	Kuwait	----- +965 -22458737/22458738
Bahrain	-----31 73 11 173	Lebanon	-----+9611240259/
Belgium	-----07815 6679	-----	+9611236110
Bosnia Herzegovina	----- 033 276 649	Luxembourg	----- (+352) 8002 3811
Brazil		Malaysia	----- +603-8076 9696
Grandes Capitais e Regiões Metropolitanas:		Malta	----- +39 02360 46111 (0,10 €)
-----	4003 3020	Mexico	
-----	(Preço de uma ligação local)	-----	-01800 999 4442738 (01800 999 GIGASET)
Demais localidades:		Netherlands	-----0900-3333102
-----	0800 888 3020	New Zealand	-----0800 780 878
-----	(Gratuito)	Norway	-----+47 2231 0845
Bulgaria	-----+359 2 9710666	Oman	-----+968 70928 Ext. 49/21/75
Canada	----- 1-866 247-8758	Poland	-----801 140 160
China	----- 0 21 400 670 6007 (RMB 0.11)	Portugal	----- (+351) 308 804 760
Croatia	----- 01 / 2456 555	-----	(custo de uma chamada local)
Czech Republic	----- 233 032 727	Romania	-----+40 021 204 9190
Denmark	----- +45 43682003	Russia	----- 8-800 333 4956
Finland	-----+358 (0)9725 19734	Serbia	-----0800 222 111
France	----- (0)1 57 32 45 22	Singapore	----- 6735 9100
Germany	-----02871 / 912 912	Slovak Republic	-----0905 035 305
Greece	-----+30 2111 98 1778	Slovenija	-----+386 (1) 5466 511
Hong Kong	----- 2763 0203	South Africa	-----0800 98 08 42
-----	2389 7285	Spain	----- (+34) 910 920 931
Hungary	----- 06(1)267-2109	Sweden	-----+46 (0)8502 52347
India	----- Please refer to your	Switzerland	-----0848 212 000
-----	local warranty card	Taiwan	-----02 266 24343
Indonesia	----- (62-21) 5673813	Turkey	----- Son kullanıcı için +90 212 888 6346
-----	(62-21) 888856000	Bayi için	+90 212 888 6347
Ireland	----- 0818 200 033	Ukraine	-----+380-44-451-71-72
Italy	----- 02.600.630.45	United Arab Emirates	-----+971 44504288
(Il numero è di tipo "urbano nazionale" e può essere		United Kingdom	----- 020 36953111
chiamato da qualunque operatore di rete fissa o		USA	----- 1-866 247-8758
mobile. Il costo della chiamata è inerente al proprio		-----	-tollfree
piano tariffario definito con l'operatore telefonico,			
ad esempio in caso di un contratto con tariffa FLAT,			
non ci sono costi aggiuntivi per la chiamata a questo			
numero, in quanto si tratta di un numero urbano			
nazionale.)			

Please have your record of purchase ready when calling. After sales service is not offered in countries where our product is not sold by authorised dealers.

Questions and answers

If you have any questions about the use of your telephone, please go to www.gigaset.com/service where help is available at any time. The table below contains a list of common problems and possible solutions.

Problem	Nothing on the display.
Cause	The handset is not switched on. The batteries are flat.
Solution	Press the End call key  for about 5 seconds or place the handset into the base. Charge or replace the batteries.
Problem	No radio connection to the base.
Cause	The handset is outside the range of the base. Handset is not yet registered. The base is not switched on.
Solution	<ul style="list-style-type: none"> ▶ Move the handset closer to the base. ▶ Register the handset. ▶ Check the power plug on the base.
Problem	You cannot hear a ring or dial tone from the fixed line network.
Cause	The phone cable supplied has not been used or it has been replaced by a new cable with the wrong pin connections.
Solution	<ul style="list-style-type: none"> ▶ Please always use the telephone cable supplied or ensure that the pin connections are correct when purchasing from a retailer.
Problem	Error tone sounds after system PIN prompt. PIN forgotten.
Cause	You have entered the wrong system PIN.
Solution	<ul style="list-style-type: none"> ▶ Reset the system PIN to the default 0000. <p>All the handsets are de-registered. All settings are reset. All lists are deleted.</p>

Dealer or local after-sales services (Southern Africa)

In the event of an after-sales query/issue/claim please refer back to your point of purchase.

Proof of purchase (receipt) has to be submitted.

Manufacturer's advice

Authorisation

This device is intended for connection to analogue networks outside the European Economic Area (with the exception of Switzerland) depending on national type approval.

Country-specific requirements have been taken into consideration.

Gigaset Communications GmbH hereby declares that the following radio equipment types are in compliance with Directive 2014/53/EU: Gigaset AS690 – Gigaset AS690H

The full text of the EU declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	Nickel metal hydride (NiMH)
Size:	AAA (Micro, HR03)
Voltage:	1.2 V
Capacity:	400 - 1000 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximums).

Standby time (hours)	180 / 110*
Talktime (hours)	14
Operating time for 1.5 h of calls per day (hours)	70 / 65*
Charging time in charging cradle (hours)	4.5
Charging time in base (hours)	5

* **No Radiation** switched off / **No Radiation** switched on, without display backlight in idle status

Power consumption of the handset in the charging cradle

When charging:	approx. 2.10 W
To maintain the charge status:	approx. 1.30 W

Base power consumption

Standby:

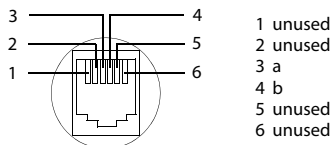
- Handset in the charging cradle (charging) approx. 2.00 W
- Handset in the charging cradle
 (sustained charge) approx. 0.60 W
- Handset away from the charging cradle approx. 0.55 W

During a call: approx. 0.65 W

General technical specifications

DECT standard	supported
GAP standard	supported
Radio frequency range	1880 - 1900 MHz
Range	up to 300 m outdoors, up to 50 m indoors
Power supply for base	230 V ~/50 Hz
Transmission power	10 mW average power per channel, 250 mW pulse power
Ambient conditions for operation	+5°C to +45°C, 20% to 75% relative humidity

Pin connections on the telephone jack



Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China
Model identifier	C705 (EU variant) C710 (UK variant)
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Power adapter for the base

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China
Model identifier	C707/C769 (EU variant) C771/C785 (UK variant)
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	6.5 V
Output current	0.3 A
Output power	1.95 W
Average active efficiency	> 71.5 %
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character set tables

The character set used on the handset is dependent on the language set.

Entering letters/characters

- ▶ Press the relevant key several times.
- ▶ **Briefly** press the Hash key **# ↔** to switch from mode "Abc" to "123", from "123" to "abc" and from "abc" to "Abc".

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
1	1	£	\$	¥	¤										
2	a	b	c	2	ä	á	à	ã	ä	ç					
3	d	e	f	3	ë	é	è	ê							
4	g	h	i	4	ï	í	ì	î							
5	j	k	l	5											
6	m	n	o	6	ö	ñ	ó	ò	ô	õ					
7	p	q	r	s	7	ß									
8	t	u	v	8	ü	ú	ù	û							
9	w	x	y	z	9	ÿ	ý	æ	ø	å					
0		¹⁾ .	,	?	!	0	+	-	:	¿	¡	"	'	;	_
* <	*	/	()	<	=	>	%							
# >		#	@	\	&	§									

1) Space

Menu tree



Not all functions described in the user guide are available in all countries or from all network providers.

Opening the main menu: ► Press the display key **Menu** when the handset is in the idle mode.



Alarm Clock

Activation	→ p. 23
Wake-upTime	→ p. 23



Audio Settings

Handset Volume	— Earpiece / Speaker	→ p. 29
Handset Sound	— Low / High	→ p. 29
Ringer Volume	— Loudsp. Volume 1-5	→ p. 29
Ringer Melody	— External Calls / Internal Calls / Alarm Clock	→ p. 29
Advis.Tones		→ p. 31
Battery Low		→ p. 31



Answer Machine

Play Messages	→ p. 22
Net Mailbox	→ p. 22



Settings

Date/Time				→ p. 28	
Handset	Language			→ p. 28	
	Big Dial Font			→ p. 28	
	Contrast			→ p. 28	
	Time Control	Activation / Settings		→ p. 31	
	An.Call Silent			→ p. 30	
	Auto Answer			→ p. 15	
	Register HS			→ p. 25	
	De-register HS			→ p. 25	
	Reset Handset			→ p. 31	
Base	Call list type	Missed Calls / All Calls		→ p. 19	
	System PIN			→ p. 31	
	Base Reset			→ p. 31	
	Additional	Repeater			→ p. 26
		XES Mode			→ p. 26
		Call Protection	Answ. Mach. / Black List		→ p. 24
	ECO DECT	No Radiation / Max. Range		→ p. 23	
	Listening in			→ p. 16	
	Preselection	Presel. Number / With Preselect / Without Presel.		→ p. 18	

Index

-
- A**
- Accepting a call 15
 - Adjusting the call volume (handset) 29
 - Adjusting the ringtone melody
 - handset 29
 - Answer 15
 - Authorisation 34
 - Automatic network provider
 - selection 18
-
- B**
- Base
 - connecting 8
 - connecting to the router 8
 - restore to defaults 31
 - Battery
 - charge level 12
 - charging 10
 - insert 9
 - recommended batteries 35
 - Black list 24
 - Broken display 7
-
- C**
- Call
 - external 14
 - internal 16
 - Call list 19
 - copy a number to the black list 24
 - functions 20
 - opening 19
 - set the list type 19
 - Call volume, see Ringtone volume
 - Calling
 - external 14
 - internal 16
 - Calls
 - making an external call 14
 - transferring (connecting) 16
 - Care 35
 - Care of the device 35
 - Changing the call volume
 - during a call 15
 - permanently 29
 - Changing the display language 10, 28
 - Character set (handset) 38
 - Charging time of handset 35
 - CLI, Calling Line Identification 17
 - CLIP, CLI Presentation 17
 - CLIR, CLI Restriction 17
 - CNIP, Calling Name Identification
 - Presentation 17
 - Connecting 16
 - Connecting the charger cradle 9
 - Consultation call (internal) 16
 - Contact with liquid 35
 - Control key 4, 11
 - accessing display functions 12
 - Customer Care 32
 - Customer Service & Assistance 32
-
- D**
- Data protection 34
 - Date and time
 - accept 28
 - Set 28
 - set 10
 - Dealer or local after-sales services 33
 - Directory 20
 - assign quick-dial key 21
 - delete 21
 - opening 20
 - saving the first number 20
 - selecting an entry 21
 - sending entry/list to handset 21
 - Directory entry
 - delete 21
 - Disabling wireless module 24
 - Display
 - adjust contrast 28
 - anonymous 17
 - broken 7
 - disable new messages 19
 - external call 17
 - icons 6
 - large dial keys 28
 - name (CNIP) 17
 - phone number (CLIP) 17
 - unknown 17
 - Display functions 12
 - Display keys 4
 - functions 12
 - Disposal 34
-
- E**
- ECO DECT 23
 - Emergency numbers
 - not possible 7
 - Enable/disable warning tones 30
 - Enabling/disabling advisory tones 30
 - Enabling/disabling music on hold 30
 - Enabling/disabling the battery tone 30
 - End call key 4, 11
 - Entering characters 38
 - Environment 34

-
- H**
- Handset
 - de-registering 25
 - display language 28
 - locating 26
 - registering 25
 - resetting 31
 - setting (personalisation) 28
 - setting up 9
 - switching on/off 11
 - transferring a call 16
 - using multiple 16, 25
 - Handsfree
 - key 4, 15
 - mode 15
 - volume 29
 - Hash key 4
 - Hearing aids 7
-
- I**
- Insert a dialling pause 4
 - Internal
 - consultation 16
 - consultation call 16
 - making calls 16
 - Internal call 16
 - Internal listening in 16
 - enable/disable 17
-
- K**
- Keys
 - control key 4, 11
 - end call key 4, 11
 - handsfree 4, 15
 - hash key 4
 - key 1 4
 - messages 4, 19
 - recall key 4
 - star key 4
 - talk key 4, 14
-
- L**
- Language
 - set for display 10
 - Last number redial 14
 - Liquid 35
 - List
 - calls 19
 - network mailbox 20
 - Listening in
 - call participant 16
 - Listening in to a call 16
 - Listening to a message (network mailbox) 22
 - Locating
 - handset 26
 - Lock/unlock the keypad 4, 11
-
- M**
- Mains unit
 - base 37
 - handset 37
 - Making calls
 - accepting a call 15
 - internal 16
 - Manufacturer's advice 34
 - Medical equipment 7
 - Menu
 - opening 11
 - tree 39
 - Menu navigation 13
 - Messages key 4, 19
 - Messages list 20
 - Microphone 4
 - Muting 15
-
- N**
- Name
 - displaying caller's name (CNIP) 17
 - Network mailbox 22
 - enable 22
 - listening to message 22
 - Network mailbox list 20
 - Network provider selection, automatic 18
 - Number
 - dialling from the directory 14
 - displaying caller's number (CLIP) 17
 - entering 14
-
- O**
- On/Off button 4
 - Operating time of handset 35
 - Overview
 - handset 4
-
- P**
- PABX
 - set pause after line seizure 27
 - set pause after R key 27
 - setting flash time 27
 - Package contents 8
 - Paging 26
 - Paging key
 - device without answer machine 5
 - Pause after line seizure 27
 - Pause after R key 27
 - Phone number
 - select from call list 14
 - select from redial list 14
 - Pin connections 36
 - Playing back
 - messages (network mailbox) 22
 - Power adapter 7, 37
 - base 37
 - handset 37

- Power consumption (base) 36
 Power consumption (handset) 35
 Preselection 18
 Problem solutions 33
 Protection from calls, black list 24
-
- Q**
- Quick dial number 14
 Quick-dial key
 assign 21
-
- R**
- Radiation-free 24
 Recall key 4
 Receiver
 change volume (during a call) 15
 change volume (permanently) 29
 tone quality 29
 Reception booster, see Repeater
 Reducing radiation 23
 Repeater 26
 Reset (base) 31
 Reset (handset) 31
 Ringtone
 enable/disable time control 30
 Ringtone (handset)
 disable for anonymous calls 30
 switch on/off from menu 29
 switch on/off with key 4, 29
 Ringtone volume 29
 Router, operation with 26
-
- S**
- Safety precautions 7
 Searching
 in the directory 21
-
- Sending a directory entry to a handset 21
 Setting flash time (PABX) 27
 Setting the list type 19
 Setting the wake-up time 23
 Setting up handset 9
 Speed dial key 14
 Star key 4
 Status bar 4, 12
 Switching off
 handset 11
 Switching on
 handset 11
 Symbol 6
 battery charge level 12
 keypad lock 11
 keys 6
 procedures 6
 radio contact 12
 ringtone 29
 System PIN
 changing 31
-
- T**
- Talk key 4, 14
 Telephone jack, pin connections 36
 Three-party conference 17
 Tone quality (receiver) of the handset 29
 Turning off the wake-up call 23
 Turning the alarm clock on and off 23
-
- U**
- Upper/lower case and digits 4
-
- X**
- XES mode 26

All rights reserved. Rights of modification reserved.

Issued by

Gigaset Communications GmbH
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2022

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com