

# Gigaset

## BASIC 100 – BASIC 100A

You can find the most up-to-date  
user guide at  
[www.gigaset.com/manuals](http://www.gigaset.com/manuals)



# Contents

 
<b>Overview of the handset</b> .....	<b>4</b>
<b>Overview of the base</b> .....	<b>5</b>
<b>Illustration in the user guide</b> .....	<b>6</b>
<b>Safety precautions</b> .....	<b>7</b>
<b>Package contents</b> .....	<b>8</b>
<b>Connecting the base station</b> .....	<b>9</b>
Connecting the base to power supply and telephone network .....	9
Connecting the base to the router .....	9
Connecting the charger .....	10
Setting up the handset for use .....	10
<b>Operating the handset</b> .....	<b>12</b>
<b>Making calls</b> .....	<b>13</b>
Making a call .....	13
Accepting a call .....	14
Share a call .....	14
Place a call on hold .....	14
<b>Direct memory</b> .....	<b>14</b>
<b>Directory</b> .....	<b>15</b>
Saving a number to the directory .....	15
Selecting a directory entry .....	15
Editing a directory entry .....	16
Checking the number of directory entries .....	16
Deleting a directory entry .....	16
Deleting all directory entries .....	17
Adding an entry to VIP list .....	17
Reviewing the VIP list .....	17
Removing a VIP entry .....	18
Removing all VIP entries .....	18
<b>Redial list</b> .....	<b>19</b>
Reviewing entries in the redial list .....	19
Storing a redial number into the directory .....	19
Deleting a redial list entry .....	19
Deleting all redial list entries .....	19
<b>Message/call lists</b> .....	<b>20</b>
Call list .....	20
Deleting all redial list entries .....	22
Answer machine list (BASIC 100A only) / network mailbox list .....	22

<b>Block list</b> .....	<b>22</b>
Setting block mode .....	22
Setting the type of calls to be blocked .....	23
Adding a block list entry .....	24
Reviewing the block list entries .....	24
Editing a block list entry .....	24
Deleting a block list entry .....	25
Deleting all block list entries .....	25
<b>Local answer machine (BASIC 100A only)</b> .....	<b>26</b>
Setting up the answer machine .....	26
Operation using the handset .....	29
Operation when on the move (remote operation) .....	30
<b>Network mailbox</b> .....	<b>31</b>
<b>Using handsets</b> .....	<b>31</b>
Registering a handset .....	31
Delete handset .....	32
Making internal calls .....	32
<b>Additional functions</b> .....	<b>34</b>
Alarm clock .....	34
ECO DECT .....	34
<b>Telephone settings</b> .....	<b>35</b>
Ringtones .....	35
Display language .....	37
Rename handset .....	37
Dial mode .....	37
Flash time .....	37
System PIN .....	38
Resetting the handset .....	38
<b>Service (Customer Care)</b> .....	<b>39</b>
Guarantee Certificate .....	39
Authorisation .....	40
Environment .....	41
Care .....	41
Contact with liquid .....	42
<b>Technical Data</b> .....	<b>44</b>
Entering letters/characters .....	45



Not all functions described in the user guide are available in all countries or from all network providers.

## Overview of the handset

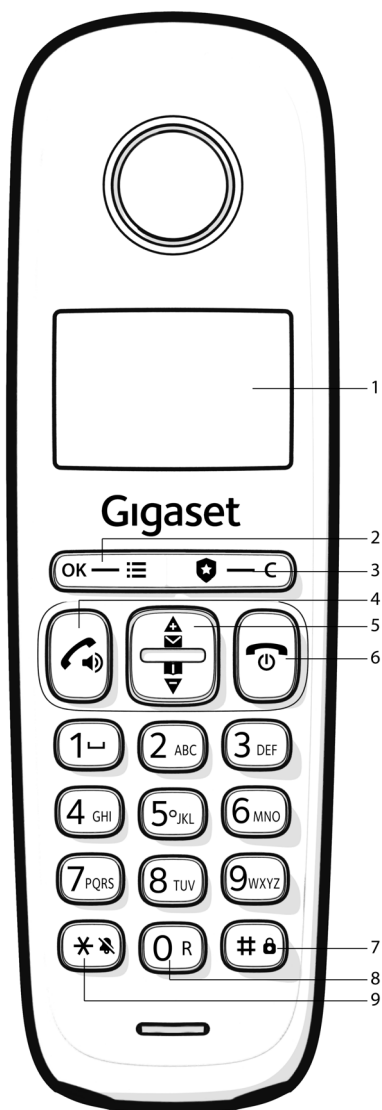




- 1 Display
- 2 OK/Menu key
- 3 Block list/back key
- 4 Talk key
- 5 Phonebook/Navigation/Calls-list key
- 6 End call/Off key
- 7 Key lock/Hash key
- 8 R key
- 9 Ringer off/Star key

## Overview of the base



 


 
 
 


- A Registration/paging key
- B Delete message
- C Volume keys
- D Go to previous/next message
- E Play/stop key
- On/Off key

## Illustration in the user guide

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Additional helpful information.







### Keys

	Talk key		
	End call key	 to 	Digit/letter keys
	Control key		Recall key
	Hash key		Star key
MENU, OK, INT		Display keys	














### Procedures

**Example:** Switching Auto answer on/off:

- ▶ **MENU** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Auto Answer** ▶ **OK**  
 (✓ = enabled)

Step	Follow this procedure
▶ <b>MENU</b>	Press the display key <b>MENU</b> .
▶  <b>Settings</b>	Use the control key  to navigate to entry <b>Settings</b> .
▶ <b>OK</b>	Press <b>OK</b> to confirm. The submenu <b>Settings</b> opens.
▶  <b>Handset</b>	Select the <b>Handset</b> entry using the control key  .
▶ <b>OK</b>	Press <b>OK</b> to confirm. The submenu <b>Handset</b> opens.
▶  <b>Auto Answer</b>	Select the <b>Auto Answer</b> entry using the control key  .
▶ <b>OK</b>	Enable or disable it using <b>OK</b> . Function is enabled ✓.

## Safety precautions

	Read the safety precautions and the user guide before use.
	The device cannot be used in the event of a power failure. In case of a power failure it is also <b>not</b> possible to make <b>emergency calls</b> . Emergency numbers <b>cannot</b> be dialled if the <b>keypad/display lock</b> is activated!
	Use only <b>rechargeable batteries</b> that correspond to the <b>specification</b> (see list of permitted batteries → <a href="http://www.gigaset.com/service">www.gigaset.com/service</a> ). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.
	The handset must not be operated if the battery cover is open. Ensure that the batteries can not be short-circuited by objects in the battery compartment.
	Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Use only the power adapter indicated on the device. Whilst charging, the power socket must be easily accessible.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.
	To prevent loss of hearing, avoid listening at high volume over long periods of time.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

# Getting started

## Package contents

- one base station
- one power adapter
- one handset
- one phone cable
- two batteries
- one battery cover
- one user guide



Position the base on a level, non-slip surface at a central point in the flat or house. You can also fit the base to a wall.

The range of the base is 300 metres outdoors and 50 metres indoors.

The base and the charging cradle are designed for use in enclosed, dry rooms within a temperature range of +5 °C to +45 °C.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.


## Connecting the base station

### Connecting the base to power supply and telephone network

- ▶ Connect the power adapter **[1]**.
- ▶ Connect the phone jack **[2]** and insert the cables into the cable channels.

Device without answering machine

Device with answering machine

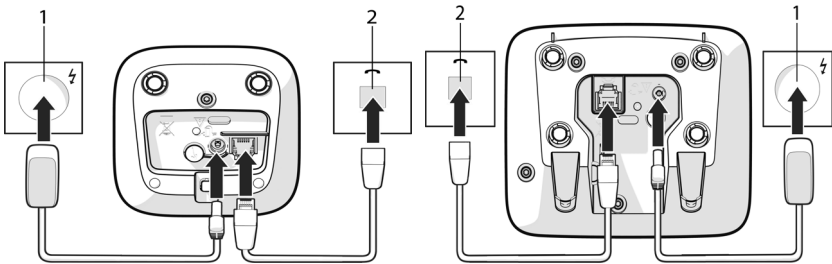

The power adapter must **always be connected** as the phone does not work without a power supply.

The answer machine (A170A/A270A only) will not be ready for operation until approximately 30 seconds after the base has been connected.


### Connecting the base to the router

You can also operate the telephone on the analogue connection of a router.

- ▶ Connect the phone jack **[1]** and connect it to the analogue port of a router **[2]**.

Device without answering machine


Device with answering machine

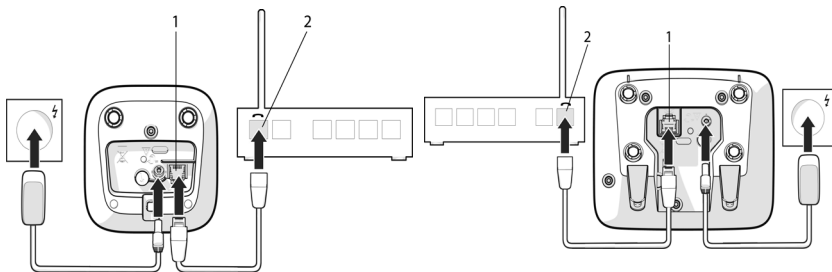

## Connecting the charger

- ▶ Connect the flat plug of the power adapter **2**.
- ▶ Plug the power adapter into the power socket **3**.

If you have to remove the plug from the charging cradle again: ▶ Press the release button **1** and disconnect the plug.

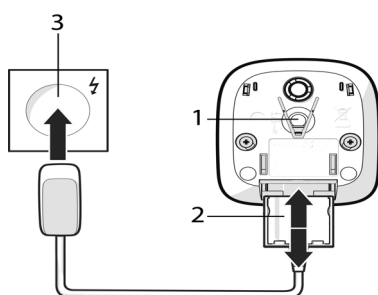


## Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film!**

## Inserting the batteries




Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

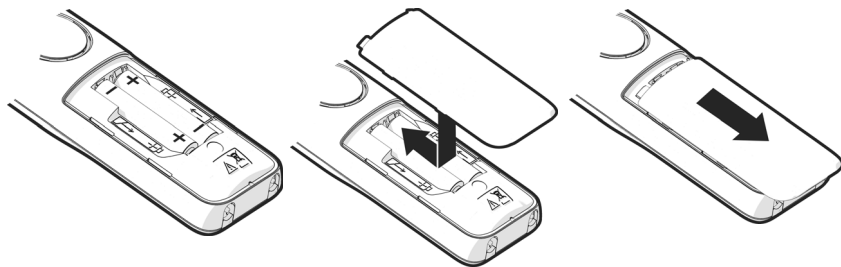


- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in the battery compartment.
- ▶ Insert the battery cover from the top.
- ▶ Then slide the cover upwards until it clicks into place.
- ▶ To open the battery cover, for instance to replace the batteries:
  - ▶ Reach into the notch at the top of the cover and slide the cover downwards.

## Charging the batteries

- ▶ Charge the batteries fully prior to first use in the base or the charging cradle.

The batteries are fully charged when the battery icon  on the display stops flashing.

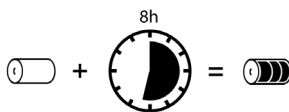

Batteries may heat up during charging. This is not dangerous.

After a time, the charging capacity of the batteries will decrease for technical reasons.

Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (**Register HS** or **Put into base** is displayed), please register it manually (→ p. 31).

## Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **HS SETTINGS**.
  - 3 Press **OK**.
  - 4 Navigate to **LANGUAGE**.
  - 5 Press **OK**.
  - 6 Select the language.
  - 7 Press **OK**.
- ▶ You set the language of your handset.

## Setting time and date

Set the date/time so that the correct date and time can be assigned to incoming calls, and to enable the alarm to be used.

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **DATE & TIME**.
- 5 Press **OK**.
- 6 Navigate to **SET TIME**.
- 7 Press **OK**.
- 8 Enter the time.
- 9 Press **OK**.
- 10 Navigate to **SET YEAR**.
- 11 Enter the year.
- 12 Press **OK**.
- 13 Navigate to **SET DATE**.
- 14 Enter the date.

15 Press **OK**.

▶ You set the date and time.


Moving the input position to the left or the right: ▶ Press up or down on the control key .

---

## Operating the handset

---

### Switching the handset on and off

 
▶ Press and **hold** the End call key .

When you place a switched-off handset into the base or the charging cradle, it switches on automatically after about 30 seconds.

When the handset is removed from the base/charging cradle, the display switches off briefly.

---

### Locking/unlocking the keypad

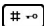
▶ Press and **hold** the hash key .

---

### Menu navigation

Your phone has many functions, and they are available to you from menus.

Select menu function:

- 1 Press **OK** to enter the menu.
- 2 Navigate to the desired submenu using .
- 3 Press **OK** to select.


Return to idle status: ▶ Press and **hold** the key .

---


# Making calls

---


## Making a call

- 1 Enter the number.
- 2 Press the Talk key .
- ▶ The number is dialled.


or

- 1 Press and **hold** the Talk key .
- ▶ The dial tone can be heard.
- 2 Enter the number.

To change the receiver volume during a call:




- 1 Use  to set the volume.

To end call / cancel dialling:

- 1 Press the End call key .



 
---

## Dialling from the directory

- 1 Open the directory with .
- 2 Use  to scroll to the desired entry.
- 3 Press the Talk key .

---

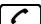

## Dialling from the call list

- 1 Open the call list with .
- 2 Use  to scroll to the desired entry.
- 3 Press the Talk key .

---

## Dialling from the redial list

The list contains the 10 numbers last dialled with the handset.


- 1 Press the Talk key  **briefly**.
- 2 Select the entry.
- 3 Press the Talk key .

---

## Dialling from a direct memory key

- 1 Press and hold the direct memory key (1, 2 or 3).

## Accepting a call

- 1 Press the Talk key .

With function **AUTO ANSWER** enabled:

- 1 Take the handset out of the base/charging cradle.


Enabling function **AUTO ANSWER**:

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **AUTO ANSWER**.
- 5 Press **OK**.
- 6 Select **ON** or **OFF**.
- 7 Press **OK**.

---

## Share a call

You can initiate a 3-way conversation on an active call.

- 1 Press **OK** during a call.
  - 2 Navigate to **INTERCOM**.
  - 3 Press the Talk key .
  - 4 Press and hold the star key.
- ▶ **CONFERENCE** displays on the handset.

---

## Place a call on hold

- 1 Press the R key to put the current call on hold.
- 2 Press the R key to switch between calls.

---

## Direct memory


There are three direct memory keys on the handset: dialling keys 1, 2 and 3. You can store a phone number into each of these keys and dial them directly when the phone is not in use.

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **DIRECT MEM..**
- 5 Press **OK**.
- 6 Choose the **KEY**.
- 7 Press **OK**.
- 8 Enter the number.
- 9 Press **OK**.

---

## Directory

To open the directory:

- 1 Press down on the control key .

Phone numbers (max. 22 digits) with associated names (max. 14 characters) can be stored.

---

## Saving a number to the directory

Entering letters/characters (→ p. 45).

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **PHONEBOOK**.
  - 3 Press **OK**.
  - 4 Select **ALL CONTACTS**.
  - 5 Press **OK**.
  - 6 Press **OK**.
  - 7 Select **ADD**.
  - 8 Press **OK**.
  - 9 Enter the name.
  - 10 Press **OK**.
  - 11 Enter the phone number.
  - 12 Press **OK**.
  - 13 Select the **MELODY**.
  - 14 Press **OK**.
- ▶ You added a new entry.
- 

## Selecting a directory entry

- 1 Open the directory with .

or

- 1 Press **OK** to enter the menu.
- 2 Navigate to **PHONEBOOK**.
- 3 Press **OK**.
- 4 Select **ALL CONTACTS**.
- 5 Press **OK**.
- 6 Navigate to the desired entry.
- 7 Press **OK**.
- 8 Navigate to **VIEW**.
- 9 Press **OK**.

## Editing a directory entry

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **PHONEBOOK**.
  - 3 Press **OK**.
  - 4 Select **ALL CONTACTS**.
  - 5 Press **OK**.
  - 6 Navigate to the desired entry.
  - 7 Select **EDIT**.
  - 8 Change the entry as desired.
  - 9 Press **OK**.
- ▶ You hear a confirmation tone.
- 

## Checking the number of directory entries

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **PHONEBOOK**.
  - 3 Press **OK**.
  - 4 Select **ALL CONTACTS**.
  - 5 Press **OK**.
  - 6 Navigate to **PB STATUS**.
  - 7 Press **OK**.
- ▶ The number of directory entries displays.
- 

## Deleting a directory entry

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **PHONEBOOK**.
  - 3 Press **OK**.
  - 4 Select **ALL CONTACTS**.
  - 5 Press **OK**.
  - 6 Navigate to the desired entry.
  - 7 Press **OK**.
  - 8 Navigate to **DELETE**.
  - 9 Press **OK**.
  - 10 Press **OK**.
- ▶ You hear a confirmation tone.



---

## Deleting all directory entries

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **PHONEBOOK**.
  - 3 Press **OK**.
  - 4 Select **ALL CONTACTS**.
  - 5 Press **OK**.
  - 6 Navigate to the desired entry.
  - 7 Press **OK**.
  - 8 Navigate to **DELETE ALL**.
  - 9 Press **OK**.
  - 10 Press **OK**.
- ▶ You hear a confirmation tone.

---

## Adding an entry to VIP list

- 1 Open the directory with .
- or
- 1 Press **OK** to enter the menu.
  - 2 Navigate to **PHONEBOOK**.
  - 3 Press **OK**.
  - 4 Select **ALL CONTACTS**.
  - 5 Press **OK**.
  - 6 Navigate to the desired entry.
  - 7 Press **OK**.
  - 8 Navigate to **ADD TO VIP**.
  - 9 Press **OK**.
- ▶ VIP entries are marked with .

---

## Reviewing the VIP list

- 1 Press **OK** to enter the menu.
- 2 Navigate to **PHONEBOOK**.
- 3 Press **OK**.
- 4 Select **VIP**.
- 5 Press **OK**.
- 6 Navigate to the desired entry.
- 7 Press **OK**.
- 8 Navigate to **VIEW**.
- 9 Press **OK**.

## Removing a VIP entry

### Method 1:

- 1 Press **OK** to enter the menu.
- 2 Navigate to **PHONEBOOK**.
- 3 Press **OK**.
- 4 Select **ALL CONTACTS**.
- 5 Press **OK**.
- 6 Navigate to the desired entry.
- 7 Press **OK**.
- ▶ **ADD** displays.
- 8 Navigate to **DEL FROM VIP**.
- 9 Press **OK**.
- ▶ The VIP entry will be removed from the VIP list but will remain in the directory.

### Method 2:

- 1 Press **OK** to enter the menu.
- 2 Navigate to **PHONEBOOK**.
- 3 Press **OK**.
- 4 Select **VIP**.
- 5 Press **OK**.
- 6 Navigate to the desired entry.
- 7 Press **OK**.
- 8 Navigate to **DELETE**.
- 9 Press **OK**.
- ▶ The VIP entry will be removed from the VIP list but will remain in the directory.

---

## Removing all VIP entries


- 1 Press **OK** to enter the menu.
- 2 Navigate to **PHONEBOOK**.
- 3 Press **OK**.
- 4 Select **VIP**.
- 5 Press **OK**.
- 6 Navigate to the desired entry.
- 7 Press **OK**.
- ▶ **VIEW** displays.
- 8 Navigate to **DELETE ALL**.
- 9 Press **OK**.
- 10 Press **OK**.
- ▶ All VIP entries will be removed from the VIP list but will remain in the directory.

---

## Redial list


---

### Reviewing entries in the redial list

- 1 Press the Talk key .
- 2 Navigate to the desired entry.


---

### Storing a redial number into the directory

- 1 Press the Talk key .
- 2 Navigate to the desired entry.
- 3 Press **OK**.
- 4 Navigate to **ADD TO PB**.
- 5 Press **OK**.
- 6 Enter the name.
- 7 Press **OK**.
- 8 Enter the number.
- 9 Press **OK**.
- 10 Select the **MELODY**.
- 11 Press **OK**.

 
---

### Deleting a redial list entry

- 1 Press the Talk key .
- 2 Navigate to the desired entry.
- 3 Press **OK**.
- 4 Navigate to **DELETE**.
- 5 Press **OK**.
- 6 Press **OK**.

---

### Deleting all redial list entries

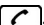- 1 Press the Talk key .
- 2 Navigate to the desired entry.
- 3 Press **OK**.
- 4 Navigate to **DELETE ALL**.
- 5 Press **OK**.
- 6 Press **OK**.

## Message/call lists

The telephone saves information about various events in lists:

- Call list: numbers of all incoming or missed calls
- Answer machine list (BASIC 100A): messages on the answer machine
- Network mailbox list: messages on the network mailbox



If calls are stored in the network mailbox, you receive a message when the setting is configured (dependent on the network provider).



### Call list

Depending on the list type setting, the call list contains the numbers of the most recent incoming or missed calls. If the call list is full, a new call will replace the oldest entry stored.



#### Setting the list type

- 1 Press **OK** to enter the menu.
- 2 Navigate to **CALL LIST**.
- 3 Press **OK**.
- 4 Press **OK**.
- 5 Navigate to **CATEGORY**.
- 6 Press **OK**.
- 7 Select **ALL CALLS** or **MISSED CALLS**.
- 8 Press **OK**.



 
#### Opening the call list

- 1 Open the call list with .
- 2 Select entries with .

#### Reviewing call list entries



- 1 Open the call list with .
- 2 Select the entry with .
- 3 Press **OK**.
  - ▶ **DETAILS** displays.
- 4 Press **OK**.
  - ▶ The screen displays the caller's name and the date and time of the call.
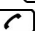
#### Calling back a caller from the call list

- 1 Open the call list with .
- 2 Select the entry with .
- 3 Press the Talk key .



---

## Saving a call list entry to the directory

- 1 Open the call list with .
- 2 Select the entry with .
- 3 Press **OK**.
  - ▶ **DETAILS** displays.
- 4 Navigate to **ADD TO PB**.
- 5 Press **OK**.
  - ▶ Name and number display.
- 6 Edit the name and number as desired.
- 7 Press **OK**.
- 8 Select the **MELODY**.
- 9 Press **OK**.
  - ▶ You hear a confirmation tone.



---

## Saving a call list entry to the block list



- 1 Open the call list with .
- 2 Select the entry with .
- 3 Press **OK**.
  - ▶ **DETAILS** displays.
- 4 Navigate to **ADD TO BLIST**.
- 5 Press **OK**.
- 6 Enter the name.
- 7 Press **OK**.
  - ▶ Name and number display.
- 8 Press **OK**.
  - ▶ You hear a confirmation tone.

---

## Deleting a call list entry

- 1 Open the call list with .
- 2 Select the entry with .
- 3 Press **OK**.
- 4 Navigate to **DELETE**.
- 5 Press **OK**.
- 6 Press **OK**.
  - ▶ You hear a confirmation tone.

## Deleting all redial list entries

- 1 Open the call list with .
  - 2 Select the entry with .
  - 3 Press **OK**.
  - 4 Navigate to **DELETE ALL**.
  - 5 Press **OK**.
  - 6 Press **OK**.
- ▶ You hear a confirmation tone.
- 

## Answer machine list (BASIC 100A only) / network mailbox list

You can use the answer machine list/network mailbox list to play back messages stored on the answer machines.

Open the answer machine list:

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.

Answer machine (→ p. 26)

Open the network mailbox list:

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **MAILBOX**.
- 5 Press **OK**.

Network mailbox (→ p. 31)

---

## Block list

---

### Setting block mode

- 1 Press **OK** to enter the menu.
- 2 Navigate to **CALL BLOCKER**.
- 3 Press **OK**.
- 4 Navigate to **SETTINGS**.
- 5 Press **OK**.
- 6 Navigate to **BLOCK MODE**.
- 7 Press **OK**.

- 8 Choose between **BLOCK ALL** / **ALLOW VIP** / **BLOCK BLIST** / **OFF**.

**BLOCK ALL:** Blocks all unknown calls except numbers stored in the directory or VIP list.

**ALLOW VIP:** Blocks all calls not stored in the VIP list.

**BLOCK BLIST:** Blocks only numbers stored in the block list.

- 9 Press **OK**.

- 10 Choose between **ALWAYS ON** and **TIMED**.

**ALWAYS ON:** Block mode will be always on.

**TIMED:** Calls will only be blocked within the set time frame.

- 11 Enter the time to set the block mode.

- 12 Press **OK**.

- 13 Enter the time to turn off the block mode.

- 14 Press **OK**.

---

## Setting the type of calls to be blocked

- 1 Press **OK** to enter the menu.

- 2 Navigate to **CALL BLOCKER**.

- 3 Press **OK**.

- 4 Navigate to **SETTINGS**.

- 5 Press **OK**.

- 6 Navigate to **CALL TYPE**.

- 7 Press **OK**.

- 8 Choose between **WITHHELD** / **INTERNAT'L** / **UNAVAILABLE** / **PAYPHONE**.

**WITHHELD:** Blocks all calls that hide its caller ID.

**INTERNAT'L:** Blocks all international calls.

**UNAVAILABLE:** Blocks all calls without a caller ID.

**PAYPHONE:** Blocks all calls made from payphones.

- 9 Press **OK**.

- 10 Select **ON** or **OFF**.

- 11 Press **OK**.



You can set any or all of the four types of calls to be blocked.

## Adding a block list entry

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **CALL BLOCKER**.
  - 3 Press **OK**.
  - 4 Navigate to **BLOCK LIST**.
  - 5 Press **OK**.
    - ▶ If there are no entries, **EMPTY** displays. If you have entries, they will be displayed.
  - 6 Press **OK**.
    - ▶ **ADD** displays.
  - 7 Press **OK**.
  - 8 Enter the name.
  - 9 Press **OK**.
  - 10 Enter the number.
  - 11 Press **OK**.
- 

## Reviewing the block list entries

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **CALL BLOCKER**.
  - 3 Press **OK**.
  - 4 Navigate to **BLOCK LIST**.
  - 5 Press **OK**.
  - 6 Navigate to the desired entry.
- 

## Editing a block list entry

- 1 Press **OK** to enter the menu.
- 2 Navigate to **CALL BLOCKER**.
- 3 Press **OK**.
- 4 Navigate to **BLOCK LIST**.
- 5 Press **OK**.
- 6 Navigate to the desired entry.
- 7 Press **OK**.
- 8 Navigate to **EDIT**.
- 9 Edit the entry as desired.
- 10 Press **OK**.
  - ▶ You hear a confirmation tone.

---

## Deleting a block list entry

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **CALL BLOCKER**.
  - 3 Press **OK**.
  - 4 Navigate to **BLOCK LIST**.
  - 5 Press **OK**.
  - 6 Navigate to the desired entry.
  - 7 Press **OK**.
  - 8 Navigate to **DELETE**.
  - 9 Press **OK**.
  - 10 Press **OK**.
- ▶ The entry is deleted and you hear a confirmation tone.

---

## Deleting all block list entries

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **CALL BLOCKER**.
  - 3 Press **OK**.
  - 4 Navigate to **BLOCK LIST**.
  - 5 Press **OK**.
  - 6 Navigate to the desired entry.
  - 7 Press **OK**.
  - 8 Navigate to **DELETE ALL**.
  - 9 Press **OK**.
  - 10 Press **OK**.
- ▶ The entries are deleted and you hear a confirmation tone.

---

## Local answer machine (BASIC 100A only)

Either the handset or the keys on the base are used to personalise settings on and operate the answer machine (→ p. 5).

---

### Setting up the answer machine

The answer machine has been preset with default settings. You can change the settings.

---

#### Recording your own announcement

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.
- 4 Navigate to **TAM SETTINGS**.
- 5 Press **OK**.
- 6 Navigate to **OGM SETTINGS**.
- 7 Press **OK**.
- 8 Choose between **ANS & REC** and **ANSWER ONLY**.
- 9 Press **OK**.
- 10 Navigate to **RECORD MESS**.
- 11 Press **OK**.
- ▶ The recording starts.
- 12 During **RECORDING**, press **OK** to stop and save the recording. Press the back key to return without saving.



The maximum recording length is 3 minutes.

---

#### Playing back the announcement

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.
- 4 Navigate to **TAM SETTINGS**.
- 5 Press **OK**.
- 6 Navigate to **OGM SETTINGS**.
- 7 Press **OK**.
- 8 Choose between **ANS & REC** and **ANSWER ONLY**.
- 9 Press **OK**.
- 10 Navigate to **PLAYBACK**.
- 11 Press **OK**.
- ▶ The playback starts.

12 During **PLAYING**, press **OK** to stop the playback. Press the back key to delete the announcement.



The default announcement cannot be deleted.

---

## Recording a memo

Regardless the answering machine is on or off, you can record memos as reminders for yourself.

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.
- 4 Navigate to **MEMO**.
- ▶ The recording starts.
- 5 Press **OK** to end and save the recording or press the back key to stop the recording without saving.

---

## Changing the settings

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.
- 4 Navigate to **TAM SETTINGS**.
- 5 Press **OK**.
- 6 Navigate to the setting you want to change:

### Answer Mode

- 1 Navigate to **ANSWER MODE**.
- 2 Press **OK**.
- 3 Choose between **ANS & REC** and **ANSWER ONLY**.
- 4 Press **OK**.

### Language

- 1 Navigate to **TAM LANGUAGE**.
- 2 Press **OK**.
- 3 Choose the language.
- 4 Press **OK**.

### Answer Delay

- 1 Navigate to **ANSWER DELAY**.
- 2 Press **OK**.
- 3 Choose between **2 RINGS / 4 RINGS / 6 RINGS / 8 RINGS / TIME SAVER**.
- 4 Press **OK**.

**Recording time:**

- 1 Navigate to **RECORD TIME**.
- 2 Press **OK**.
- 3 Choose between **60 S / 120 S / 180 S / UNLIMITED**.
- 4 Press **OK**.

**Call screening:**

- 1 Navigate to **BS SCREENING**.
  - 2 Press **OK**.
  - 3 Select **ON** or **OFF**.
  - 4 Press **OK**.
- ▶ You hear a confirmation tone.

**Remote access:**

- 1 Navigate to **REMOTE ACC.**
  - 2 Press **OK**.
  - 3 Select **ON** or **OFF**.
  - 4 Press **OK**.
- ▶ You hear a confirmation tone.


**Change remote access PIN:**

- 1 Navigate to **CHANGE PIN**.
  - 2 Press **OK**.
  - 3 Enter the old PIN (default is 0000).
  - 4 Press **OK**.
  - 5 Enter the new PIN.
  - 6 Re-enter the new PIN.
  - 7 Press **OK**.
- ▶ You hear a confirmation tone.

## Operation using the handset

### Activating/deactivating the answer machine

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.
- 4 Navigate to **TAM ON/OFF**.
- 5 Select **ON** or **OFF**.
- 6 Press **OK**.

If the answer machine is switched on, the display shows the icon .



If the memory is full, the display shows **TAM FULL** and the answer machine switches off automatically. Delete old messages so that it switches on again automatically.

### Playing back messages



 
 
 

 
Time and date are set.

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.
- 4 Select **MSG PLAYBACK**.
- 5 Press **OK**.
- 6 Choose between **STOP / FORWARD / PREVIOUS / DELETE**.




If there are new messages, playback starts with the first new message, otherwise with the first old message.

### Actions during playback


Stop playback:	▶ 
Go to the next message:	▶ 
Go to the start of the current message:	▶ 
Change volume:	▶ 
Delete a single message:	▶ 

### Picking up a call from the answer machine

Even if the answer machine has already answered or is recording a call, you can still take it:

- 1 Press the Talk key .

or

- 1 Remove the handset from the base/charging cradle ( **AUTO ANSWER** is activated → p. 14).

Recording stops and you can speak to the caller.

---

## Deleting all messages

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ANS. MACHINE**.
- 3 Press **OK**.
- 4 Navigate to **DELETE ALL**.
- ▶ **CONFIRM?** displays.
- 5 Press **OK**.

---

## Operation when on the move (remote operation)

You can check and activate your answer machine from any other telephone (hotel, pay phone etc.).



The system PIN is not 0000 (→ p. 38).  
The other telephone has tone dialling (DTMF).  
Remote access is turned on.

---

## Switching on the answer machine

- 1 Call the telephone connection and let it ring until the **ANSWER ONLY** announcement.
- 2 Press the star key.
- 3 Enter the remote access PIN.
- ▶ The answer machine is switched on and messages are played back.

---

## Checking the answer machine



The answer machine is activated.

- 1 Call the telephone connection and let it ring until the announcement.
- 2 Press the star key while the announcement is still playing.
- ▶ The message will stop.
- 3 Enter the remote access PIN.
- ▶ You will hear a single confirmation beep if the PIN is accepted.
- 4 Press the key 5.
- ▶ You can check your messages.

The answer machine is operated using the following keys:

---

During message playback: Delete current message.

2

---

During message playback: Press once to repeat the current message from the beginning.

4

---

Press twice to skip back to the previous message.

---

While no message is playing: Start playing messages.

5

---

During message playback: Stop the current message playback.

---

During message playback: Skip to play the next message.	6
While no message is playing: Turn off the answering machine.	7
During message playback: Stop the current message playback.	8
While no message is playing: Turn off the answering machine.	9

## Network mailbox




The network mailbox has been **requested** from the network provider.

### Entering the number of the network mailbox

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **MAILBOX**.
- 5 Press **OK**.
- 6 Enter the number.
- 7 Press **OK**.

### Playing back messages

When you received a voicemail, the handset displays . Contact your network provider for instructions on how to configure the voicemail settings and listen to messages.



The network mailbox has been **requested** from the network provider.

- 1 Dial the access number provided by your network provider.
- 2 Enter the security code you received from your network provider.

## Using handsets

### Registering a handset

Handsets supplied with a base are already registered to that base. **Each additional** handset must be registered to the base.

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **REGISTRATION**.
- 5 Enter the system PIN for the base (default setting: 0000).

- 6 Press **OK**.
- 7 Within **60 seconds** after entering the system PIN press and **hold** the Registration/paging key (→ p. 5) for 5 seconds.
  - ▶ **PLEASE WAIT** displays.
  - ▶ You hear a beep when the registration process is successful.



The registration process takes approximately 1 minute. The handsets are assigned the lowest free internal number.

---

## Delete handset

You can delete any other registered handset from any registered Gigaset handset.

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **BS SETTINGS**.
  - 3 Press **OK**.
  - 4 Navigate to **DELETE HS**.
  - 5 Press **OK**.
  - 6 Enter the system PIN for the base (default setting: 0000).
  - 7 Press **OK**.
  - 8 Select the handset.
  - 9 Press **OK**.
- ▶ The handset will be removed from the registered handsets list and **REGISTER** displays.

---

## Making internal calls




---

### Making internal calls




Internal calls are cost-free calls to other handsets registered to the same base.


Calling a specific internal participant:

- 1 Press and hold **OK**.
  - 2 If more than two handsets are registered: Use  to select an internal participant or use  to enter the internal number of a handset.
  - 3 Press **OK** or .
- ▶ The handset selected is called.

Calling all handsets ("group call"):

- 1 Press and hold **OK**.
  - 2 Select **CALL ALL HS**.
  - 3 Press **OK** or .
- ▶ All registered handsets are called. You speak to the first internal participant to pick up.

Ending the internal call:

- 1 Press the End call key .

---

## Making an internal consultation call / transferring a call

Call an **external** participant and transfer the call to an **internal** participant or hold a consultation call with him or her.

- 1 Press and hold **OK**.
  - 2 If necessary, select a handset or **CALL ALL HS**.
  - 3 Press **OK**.
- ▶ The internal participant(s) is/are called, the external participant hears music on hold. Possible options:


Hold a consultation call:

- 1 Speak to the internal participant.


Return to the external call:

- 1 Press the Display key .

Transfer the external call when the internal participant has answered:

- 1 Announce an external call.
- 2 Press the End call key .


Transfer the external call before the internal participant answers:

- 1 Press the End call key .
- ▶ The external call is forwarded immediately.


---


## Initiating an internal conference call

You want to join an existing external call.

- 1 Press and **hold** the Talk key .
- ▶ All participants hear a signal tone.

Ending a conference call:

- 1 Press the End call key .
- ▶ All participants hear a signal tone.

When the **first** internal participant presses the End call key , the handset which joined the conference call remains connected to the external participant.

## Additional functions

### Alarm clock



Date and time have been set.

### Switching the alarm clock on and off

- 1 Press **OK** to enter the menu.
- 2 Navigate to **ALARM**.
- 3 Press **OK**.
- 4 Select **ON** or **OFF** (☰ = activated).
- 5 Press **OK**.
- 6 Set the alarm time in hours and minutes.
- 7 Press **OK**.

Alarm clock enabled: the alarm clock icon  and wake-up time are displayed instead of the date.

### Deactivating the wake-up call

An alarm is shown on the display and indicated by the selected ringtone melody (→ p. 36).

- ▶ Press any key . . . The alarm call is deactivated for 24 hours

## ECO DECT

During a call, the wireless power automatically adjusts to the distance between the handset and the base. The shorter the distance, the lower the wireless power (radiation).

When the phone is in idle status, the wireless power of the handset is switched off. The base maintains contact with the handset with only low wireless signals.

- 1 Press **OK** to enter the menu.
- 2 Navigate to **BS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **ECO MODE**.
- 5 Press **OK**.
- 6 Select **ON** or **OFF** (☰ = activated).
- 7 Press **OK**.

---

# Telephone settings

---

## Ringtones

---

### Activating/deactivating the ringtone

1 Press the Star key long.

or

1 Press **OK** to enter the menu.

2 Navigate to **HS SETTINGS**.

3 Press **OK**.

4 Navigate to **RING SETUP**.

5 Press **OK**.

6 Navigate to **RING VOLUME**.

7 Press **OK**.

8 Select **VOLUME OFF**.

9 Press **OK**.

---

### Ringtone volume (ringer volume)

Adjust the volume of the ringtone on 5 levels or off.

#### For the Handset:

1 Press **OK** to enter the menu.

2 Navigate to **HS SETTINGS**.

3 Press **OK**.

4 Navigate to **RING SETUP**.

5 Press **OK**.

6 Navigate to **RING VOLUME**.

7 Press **OK**.

8 Choose the desired ring volume (**VOLUME 1-5**).

9 Press **OK**.

#### For the Base:

1 Press **OK** to enter the menu.

2 Navigate to **BS SETTINGS**.

3 Press **OK**.

4 Navigate to **RING VOLUME**.

5 Press **OK**.

6 Choose the desired ring volume: **VOLUME 1-5** or **VOLUME OFF**

7 Press **OK**.

## Ringtone melody

Set the ringtone melody for external calls and internal calls.

### For the Handset:

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **RING SETUP**.
- 5 Press **OK**.
- 6 Choose between **EXT. RING** and **INT. RING**.
- 7 Press **OK**.
- 8 Select the desired melody (:⌘: = selected).
- 9 Press **OK**.

### For the Base:

- 1 Press **OK** to enter the menu.
- 2 Navigate to **BS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **BS RINGER**.
- 5 Press **OK**.
- 6 Select the desired ringtone (:⌘: = selected).
- 7 Press **OK**.

---

## Enabling/disabling key tones and alert tones

The handset provides acoustic notification of different activities and statuses.

**Key tone:** The handset indicates any keypress.

**Battery warning tone:** The battery charge status falls below a certain level during a call.

**Out of range tone:** The handset is out of range of the base.


You can activate or deactivate the key tone, battery warning tone and out of range tone separately.

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **TONE SETUP**.
- 5 Press **OK**.
- 6 Choose between **KEY TONE / BATTERY TONE / OUT OF RANGE**.
- 7 Press **OK**.
- 8 Select **ON** or **OFF** (:⌘: = activated).
- 9 Press **OK**.

---

## Display language

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **LANGUAGE**.
- 5 Press **OK**.
- 6 Select language.
- 7 Press **OK**.

The current language is marked with .

---

## Rename handset

- 1 Press **OK** to enter the menu.
- 2 Navigate to **HS SETTINGS**.
- 3 Press **OK**.
- 4 Navigate to **RENAME HS**.
- 5 Press **OK**.
- 6 Rename the handset as desired.
- 7 Press **OK**.

---

## Dial mode

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **BS SETTINGS**.
  - 3 Press **OK**.
  - 4 Navigate to **DIAL MODE**.
  - 5 Press **OK**.
  - 6 Choose between **TONE** and **PULSE**.
  - 7 Press **OK**.
- ▶ You hear a confirmation tone.

---

## Flash time

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **BS SETTINGS**.
  - 3 Press **OK**.
  - 4 Navigate to **FLASH TIME**.
  - 5 Press **OK**.
  - 6 Choose between **SHORT / MEDIUM / LONG**.
  - 7 Press **OK**.
- ▶ You hear a confirmation tone.

## System PIN

---

### Changing the system PIN

- 1 Press **OK** to enter the menu.
  - 2 Navigate to **BS SETTINGS**.
  - 3 Press **OK**.
  - 4 Navigate to **CHANGE PIN**.
  - 5 Press **OK**.
  - 6 Enter the current 4-digit system PIN (default setting: 0000).
  - 7 Press **OK**.
  - 8 Enter the new 4-digit system PIN.
  - 9 Press **OK**.
  - 10 Re-enter the new 4-digit system PIN.
  - 11 Press **OK**.
- 

### Resetting the handset

- 1 Press **OK** to enter the menu.
- 2 Navigate to **DEFAULT**.
- 3 Press **OK**.
- 4 Enter the 4-digit system PIN.
- 5 Press **OK**.
- 6 Press **OK**.

## Service (Customer Care)



### Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



### Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... **online:**

via our contact form on the customer service page

... **by telephone:**

**United Kingdom**

**Service Hotline: 020 36953111**

(local call cost charge)

**Ireland**

**Service Hotline: 0818 200 033**

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

## Guarantee Certificate

Unless otherwise specified, the guarantor (hereinafter referred to as "Gigaset Technologies") grants the consumer (customer) a durability warranty under the following conditions (warranty conditions), without prejudice to the consumer's statutory rights relating to defects. The customer's warranty rights are not limited by this warranty. Warranty rights can be asserted free of charge. This warranty represents an obligation on the part of the guarantor in addition to the statutory warranty rights that can be asserted free of charge for defect claims.

### Warranty conditions:

- In the case of new devices (telephones, smartphones) and their components exhibiting defects within 24 months of purchase, Gigaset Technologies shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. This durability warranty applies for 12 months from the date of purchase for parts subject to wear (all moving parts that can be replaced by the customer itself, e.g. spare parts, batteries, keyboards, housing).

- This warranty does not apply in the event a defect to devices is attributable to improper treatment and/or a failure to follow the operating guides.
- This warranty does not cover any services provided by the appointed dealer or by the customer himself (e.g. installation, configuration, software downloads). Manuals and, where applicable, accompanying software on a separate data carrier are also excluded from the warranty.
- Proof of purchase plus date of purchase are required as evidence of a valid warranty. Warranty claims must be asserted within two (2) months of the awareness of a warranty event.
- Replaced devices or their components returned to Gigaset Technologies during the course of an exchange are transferred to the ownership of Gigaset Technologies.
- This warranty applies to new devices acquired within the European Union. These will be exchanged free of charge for a technologically current device or repaired by Gigaset Technologies. The warrantor is Gigaset Technologies GmbH, Frankenstraße 2, D-46395 Bocholt.
- No further or different claims arising from this manufacturer's warranty will be accepted. Gigaset Technologies accepts no liability for operational interruptions, loss of profit and loss of data, software additionally installed by the customer or other information. The customer is responsible for safeguarding these. The liability disclaimer does not apply if liability is mandatory, for example under the Product Liability Act, in cases of wilful intent, gross negligence, injury to life, limb and health or breach of material contractual obligations. Claims for damages in respect of breach of material contractual obligations are however limited to foreseeable losses typical for the contract, unless liability is as a result of wilful intent, gross negligence, injury to life, limb and health or under the Product Liability Act.
- Successful assertion of a warranty claim does not extend the term of the warranty.
- Unless there is a warranty event, Gigaset Technologies reserves the right to charge the customer for an exchange or repair. Gigaset Technologies will inform the customer of this in advance.
- Any change to the rules governing burden of proof to the detriment of the customer is not connected with the above rules.
- Federal German law applies to this warranty, to the exclusion of the United Nations Convention on Contracts for the International Sale of Goods (CISG). This choice of law does not deprive the consumer of the protection he/she would have been granted under provisions that cannot be derogated from by agreement, according to the law of the country in which he/she has her habitual residence ("favourability principle").

Please contact the warrantor's customer services to redeem and assert this warranty. You can find the relevant telephone number in our Service Portal at [www.gigaset.com/service](http://www.gigaset.com/service).

---

## Authorisation

This device is intended for analogue phone lines in the UK and on the Irish network.

Country-specific requirements have been taken into consideration.

Gigaset Technologies GmbH hereby declares that the following radio equipment types are in compliance with Directive 2014/53/EU:

BASIC 100

The full text of the EU declaration of conformity is available at the following internet address:  
[www.gigaset.com/docs](http://www.gigaset.com/docs).

**If this product will as well be imported into the UK:**

Gigaset Technologies GmbH hereby declares that the following radio equipment types are in compliance with the Radio Equipment Regulations 2017:

BASIC 100

The full text of the UK declaration of conformity is available at the following internet address:  
[www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

---

## Environment

---

### Environmental management system

Further information on environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).



Gigaset Technologies GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since 13/0/2024 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 13/0/2024 by TÜV SÜD Management Service GmbH.

---

### Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

---

## Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

---

## Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Technical Data

### Batteries

Technology:	Nickel metal hydride(NiMH)
Size:	AAA (Micro, HR03)
Voltage:	1.2 V
Capacity:	400 - 1000 mAh

### Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used (all times are maximums).

Time in idle mode (hours)	up to 190
Talktime (hours)	up to 11
Operating time for 1.5 h of calls per day (hours)	70
Charging time in charging cradle (hours)	8

### Power consumption of the handset in the charging cradle

When charging:	<0.8 W
To maintain the charge status:	<0.2 W
Off the charging cradle:	<0.1 W

### Base power consumption

Idle mode:	Without an answer machine	With an answer machine
- Handset in charging cradle	1.2 W	1.5 W
- Handset outside charging cradle	0.58 W	0.82 W
- Trickle charge	0.74 W	0.88 W
During a call:	0.78 W	1.0 W

### General technical specifications

DECT standard	supported
GAP standard	supported
Radio frequency range	1880 - 1900 MHz
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Power supply to base	230 V ~/50 Hz
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity

## Power adapter

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China	
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China	
	LEADER ELECTRONICS Commercial registration number: 913211007039359372 8F, No.138 Ln. 235 Baoqio Rd. Xindian Dist. New Taipei City 23145, Taiwan	
	Dongguan City Gangqi Electronics Co. Ltd. Commercial registration numberr: 914419007929512928 Privately Operated Industrial District, ShiYong, 523600 Heng Li Town, Dong Guan, Guangdong, People's Republic of China	
	<b>Handset</b>	<b>Base</b>
Model identifier	C705 (EU version) C710 (UK version)	C707/C769 (EU version) C771/C785 (UK version)
Input voltage	230 V	230 V
Input AC frequency	50 Hz	50 Hz
Output voltage	4 V	6,5 V
Output current	0,15 A	0,3 A
Output power	0,6 W	1,95 W
Average active efficiency	> 46 %	> 71,5 %
Efficiency at low load (10%)	not relevant – only at output power > 10 W	not relevant – only at output power > 10 W
No-load power consumption	< 0,10 W	< 0,10 W

## Entering letters/characters

### Standard characters

Press the relevant key several times.

**Briefly** press the Hash key # to switch from mode "Abc" to "123"; from "123" to "abc" and from "abc" to "Abc".

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
1	1	£	§	¥	¤										
2	a	b	c	2	ä	á	à	â	ã	ç					
3	d	e	f	3	ë	é	è	ê							
4	g	h	i	4	ï	í	ì	î							
5	j	k	l	5											
6	m	n	o	6	ö	ñ	ó	ò	ó	õ					
7	p	q	r	7	ß										
8	t	u	v	8	ü	ú	ù	û							
9	w	x	y	9	ÿ	ý	æ	ø	å						
0	← <sup>1)</sup>	.	,	?	!	0	+	-	:	¿	¡	"	'	;	_
* 0	*	/	(	)	<	=	>	%							
# →	#	@	\	&	§										

1) Space

## Cyrillic

Press the relevant key several times.

**Briefly** press the Hash key # to switch from mode "Abc" to "123"; from "123" to "abc" and from "abc" to "Abc".

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x
1	1	S											
2	A	Б	В	Г	2	A	B	C					
3	Д	Е	Ё	Ж	3	3	D	E	F				
4	И	Й	К	Л	4	G	H	I					
5	М	Н	О	5	J	K	L						
6	П	Р	С	6	M	N	O						
7	Т	У	Ф	Х	7	P	Q	R	S				
8	Ц	Ч	Ш	Щ	Ъ	8	T	U	V				
9	Ы	Ь	Э	Ю	Я	9	W	X	Y	Z			
0	.	,	?	!	0	+	-	:	"	'	;	_	
*	*	/	(	)	<	=	>	%					
#	#	@	\	&	\$								

1) Space

## Greek

Press the relevant key several times.

**Briefly** press the Hash key # to switch from mode "Abc" to "123"; from "123" to "abc" and from "abc" to "Abc".

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x
1	1	£	§										
2	A	B	2	A	B	C							
3	Δ	E	Φ	3	D	E	F						
4	Г	H	I	4	G	H	I						
5	K	Λ	5	J	K	L							
6	M	N	O	Ω	6	M	N	O					
7	Π	P	Σ	Ψ	7	P	Q	R	S				
8	Θ	T	8	T	U	V							
9	Z	Ξ	Y	X	9	W	X	Y	Z				
0	.	,	?	!	0	+	-	:	"	'	;	_	
*	*	/	(	)	<	=	>	%					
#	#	@	\	&	\$								

## Turkish

Press the relevant key several times.

Briefly press the Hash key # to switch from mode "Abc" to "123", from "123" to "abc" and from "abc" to "Abc".

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x
1 ∞	1												
2	a	b	c	ç	2	ä	á	à	â	ã			
3	d	e	f	3	ë	é	è	ê					
4	g	ğ	h	ı	ı	4	ï	í	ì	î			
5	j	k	l	5									
6	m	n	o	ö	6	ñ	ó	ò	ô	õ			
7	p	r	s	ş	7	q	ß						
8	t	u	ü	v	8	ú	ù	û					
9	y	z	9	w	x	ý	æ	ø	å				
0 -	␣	.	,	?	!	0	+	-	:	"	'	;	_
* 0	*	/	(	)	<	=	>	%					
# -			#	@	\	&	§						

1) Space

# Index

- 
- A**
- Accepting a call ..... 14
  - Activating
    - answer machine ..... 29
    - answer machine (remote operation) ..... 31
  - Alarm clock ..... 34
    - switch on ..... 34
  - Answer ..... 14
  - Answer machine
    - Delete all messages ..... 30
    - remote operation ..... 30
  - Answer machine list ..... 22
  - Authorisation ..... 40
  - Automatic network provider selection ..... 15
- 
- B**
- Base
    - connecting ..... 9
    - connecting to the router ..... 9
    - setting ..... 38
  - Battery
    - charging ..... 11
    - insert ..... 10
  - Block list ..... 22
    - add entry ..... 24
    - blocked calls ..... 23
    - delete all entries ..... 25
    - delete entry ..... 25
    - edit entry ..... 24
    - review entries ..... 24
    - set block mode ..... 22
  - Broken display ..... 7
- 
- C**
- Call
    - internal ..... 32
  - Call list ..... 20
    - delete all entries ..... 22
    - delete entry ..... 21
    - open ..... 20
    - review entries ..... 20
    - saving entry ..... 21
    - saving entry to block list ..... 21
    - set list type ..... 20
  - Call on hold ..... 14
  - Call screening during recording ..... 29
  - Calling
    - external ..... 13
    - internal ..... 32
  - calling back ..... 20
  - Calls
    - making an external call ..... 13
    - transferring (connecting) ..... 33
- 
- Care ..... 41
  - Care of the device ..... 41
  - Change AM settings ..... 27
  - Changing ringtone melody ..... 36
  - Changing the call volume
    - during a call ..... 13
  - Changing the display language ..... 11
  - Changing the receiver volume ..... 13
  - Changing the ringer volume ..... 35
  - Changing the system PIN ..... 38
  - Checking number of entries ..... 16
  - Conference ..... 33
  - Consultation call (internal) ..... 33
  - Contact with liquid ..... 42
  - Contents of the package ..... 8
  - Customer Care ..... 39
- 
- D**
- Deactivating
    - answer machine ..... 29
  - Deleting
    - in the directory ..... 16
  - Dial mode ..... 37
  - Direct memory keys ..... 14
  - Directory
    - adding entry to VIP ..... 17
    - deleting all entries ..... 17
    - deleting an entry ..... 16
    - editing an entry ..... 16
    - opening ..... 15
    - saving the first number ..... 15
    - selecting an entry ..... 15
  - Display
    - broken ..... 7
    - changing the display language ..... 37
  - Display functions ..... 13
  - Display keys ..... 13
    - functions ..... 13
  - Display language ..... 37
  - Disposal ..... 41
- 
- E**
- Editing
    - in the directory ..... 16
  - Enabling/disabling key tones ..... 36
  - Enabling/disabling the battery tone ..... 36
  - Enabling/disabling the out of range tone ..... 36
  - Environment ..... 41
- 
- F**
- Flash time ..... 37

- 
- G**  
 Guarantee Certificate ..... 39
- 
- H**  
 Handset  
   display language ..... 37  
   internal calls ..... 32  
   restoring to default setting ..... 38  
   setting (personalisation) ..... 35  
   setting up ..... 10  
   switching on/off ..... 11  
   transferring a call ..... 33  
 Handsfree mode ..... 15  
 Hearing  
   prevent loss of ..... 7  
 Hearing aids ..... 7
- 
- I**  
 Idle status ..... 12  
 Internal  
   consultation ..... 33  
   making calls ..... 32  
 Internal call ..... 32
- 
- K**  
 Keys  
   key 1 (speed dialling the network mailbox) .. 31  
   speed dialling the network mailbox ..... 31
- 
- L**  
 Liquid ..... 42  
 List  
   caller list ..... 20  
   redial list ..... 20  
 Listening to message on the network mailbox .. 31  
 Loss of hearing ..... 7
- 
- M**  
 Making calls  
   internal ..... 32  
 Medical equipment ..... 7  
 Menu  
   opening ..... 12  
   return to idle status ..... 12  
   tree ..... 12  
 Menu guidance ..... 12  
 Message  
   delete ..... 29  
   play back ..... 29
- 
- N**  
 Network mailbox  
   listening to message ..... 31  
 Network provider selection, automatic ..... 15  
 Number
- dialling from direct memory key ..... 13  
 dialling from the call list ..... 13  
 dialling from the directory ..... 13  
 dialling from the redial list ..... 13  
 entering ..... 13
- 
- P**  
 Picking up  
   a call from answer machine ..... 29  
 Play back announcement ..... 26  
 Play messages ..... 29  
 Playing back  
   messages (answer machine) ..... 29  
   messages (network mailbox) ..... 31  
 Power adapter ..... 7  
 Preselection ..... 15
- 
- R**  
 Record announcement ..... 26  
 Record memo ..... 27  
 Redial list ..... 19  
   delete all entries ..... 19  
   delete entry ..... 19  
   review entries ..... 19  
   store entry in directory ..... 19  
 Remote access  
   check messages ..... 30  
   switch on ..... 30  
 Remote operation ..... 30  
 Remove all entries from VIP list ..... 18  
 Remove entry from VIP list ..... 18  
 Rename handset ..... 37  
 Reviewing VIP list ..... 17  
 Ringtone volume ..... 35  
 Ringtones ..... 35
- 
- S**  
 Safety precautions ..... 7  
 Searching  
   in the directory ..... 15  
 Service ..... 39  
 Setting the default settings  
   handset ..... 38  
 Setting the language ..... 11  
 Setting up  
   handset ..... 10  
 Sharing a call ..... 14  
 Special character ..... 45  
 Speed dialling  
   network mailbox ..... 31
- 
- T**  
 Transferring ..... 33
- 
- V**  
 VIP list  
   add entry ..... 17

delete all entries.....	18
delete entry.....	18
review entry .....	17

All rights reserved. Rights of modification reserved.

Issued by

Gigaset Technologies GmbH  
Frankenstr. 2, D-46395 Bocholt

© Gigaset Technologies GmbH 2026

Subject to availability.

All rights reserved. Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)