


Gigaset

COMFORT 600 SIM

You can find the most up-to-date
user guide at
www.gigaset.com/manuals



Overview

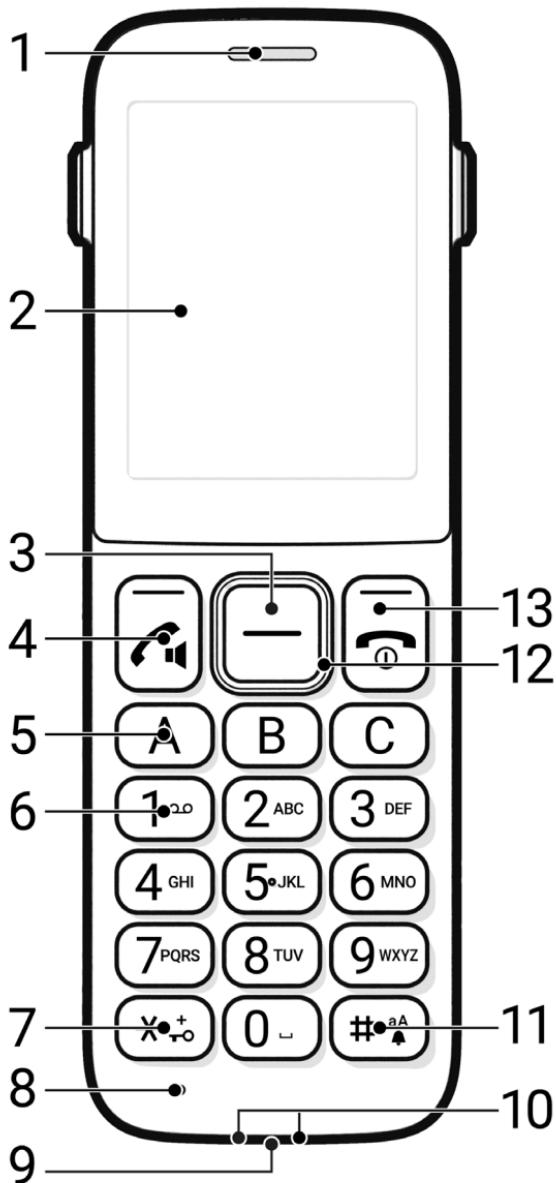

1	Receiver	
2	Display	
3	Centre of the control key:	Open the menu; select submenu; confirm the selection
4	Left display key:	Select function, depends on the screen display; take call; dial number
5	Direct dialling keys:	Speed dialling numbers
6	Key 1:	Start network answering machine playback (press longer)
7	Star key:	Enter * or + (for international calls); lock keypad (press longer)
8	Microphone	
9	USB connection port:	Connect a USB cable
10	Pogo-Pins	
11	Hash key:	Enter #; switch input mode (text); switch between vibration, silent and standard modes (press longer)
12	Control key rim:	 Open the menu call lists  Change audio profile  Open the menu  Open the phone book  Navigate through menus and lists
13	Right display key:	End the call; cancel the function; return to the menu; switching the device on/off

Notation in the user guide

This chapter describes the various forms of notation used in the user guide and the respective significance.

Icons

	Warnings, which, if not observed, can result in personal injury or damage to equipment.
	Important information regarding the function and proper handling or functions that could generate costs.
	Condition which must be fulfilled in order to carry out the following action.
	Additional helpful information.

Working steps

- 1 First working step.
- 2 Further working step.

► Result of the series of working steps.

Display texts

Display texts are texts which appear on the display of the mobile phone. Display texts are displayed in **bold print** in this guide.

Example:

Press the **Menu** display key.

Control key

Display of the Control key in the user guide:

-  Press the Navigate Left key.
-  Press the Navigate Up key.
-  Press the Navigate Right key.
-  Press the Navigate Down key.
-  Press the Centre of the Control key.
-  Press on either side of the Control key.
-  Press the Navigate Left or Right key.
-  Press the Navigate Up or Down key.

Contents

Overview	2
Notation in the user guide	4
Safety instructions	6
First steps	9
Operating the mobile phone	12
Making/taking calls	16
Additional functions	24
SMS (text messages)	24
Bluetooth	32
Speed dial	33
Alarm clock	34
Calendar	35
World clock	38
File manager	39
Settings	40
Call settings	40
Phone settings	43
Display settings	46
Security settings	47
Connections	53
Battery life	54
Changing the menu layout	54
Tones and signals	54
Appendix	59
Customer service	59
Technical data	62
Index	64

Safety instructions

Please read the following instructions carefully. Failure to comply with these instructions may result in personal injury and damage to the device, as well as violations of applicable laws.

Please explain the content of this document as well as the potential risks involved when using the device to your children.

General information

- The mobile phone is splashproof according to the IP44 standard. If your mobile phone has been exposed to water, dry it and the device openings (microphone/loudspeaker/USB Type-C port) with a lint-free cloth to remove any water droplets.
- Permissible temperature range for charging and operation: -10°C to $+60^{\circ}\text{C}$. High temperatures could reduce the service life of electronic devices, damage the battery or deform and melt plastic parts. If the mobile phone is to be used or stored in freezing areas, condensation could develop inside the phone and damage the electronic circuitry.
- Switch off your mobile phone in potentially explosive atmospheres and observe all warnings. Potentially explosive atmospheres also include those locations for which it is normally recommended that vehicle engines be switched off. In such places, flying sparks can cause explosions or fires resulting in personal injury and possibly death. These areas include: Petrol stations, chemical plants, transport or storage areas for hazardous chemicals, areas below deck on ships, areas in which the air contains chemical substances or fine particles (e.g. particles of dust or metal powder).
- Short-circuiting or modifying the mobile phone is prohibited – there is a risk of personal injury, electric shock, fire or damage to the charger.

Battery and charging process

- To avoid battery fluid leakage, overheating, explosion or fire, never incinerate or heat batteries and never dispose of them in a fire or explosion-prone environment. Do not disassemble, weld or modify the battery. Do not store the battery in an environment subject to strong mechanical influences.
- Do not use sharp objects, such as screwdrivers, to touch or puncture the battery. There is a risk of battery fluid leaking, the battery overheating, exploding or catching fire and burning. Crushing, heating or incinerating batteries is strictly prohibited.
- Eye contact with the battery electrolyte can cause blindness. If electrolyte enters the eyes, do not rub the eye with your hand. Immediately flush the affected eye completely with clean water and seek medical attention. There is a risk of skin burns if the electrolyte comes into contact with the skin (or clothing). Immediately rinse the skin or clothing completely with soap and clean water and seek medical attention if necessary.
- Never use the batteries for any purpose other than that specified. Never use a damaged battery. If the battery becomes hot, discoloured, deformed or leaks during use, charging or storage, you must replace the battery with a new one immediately for safety reasons.
- The temperature of the battery rises during charging. Do not store the battery in the same compartment as flammable products – there is a risk of fire.

- The electrical socket must be easily accessible during charging.
- There is a risk of electric shock during a thunderstorm.
- To extend the lifespan of your battery, avoid very high and very low temperatures; the range between 15 and 35°C is optimal.
- It is harmful to keep the battery at 100 % charge for long periods of time.
- Activated wireless connections, such as Bluetooth, increase the power consumption of the device. You can switch them off if they are not needed. Furthermore, the brightness of the display has a significant influence on power consumption. If you set your display to a low brightness level and switch off any wireless connections that are not needed, the device will operate for longer.
- Do not use the charger if the power cable is damaged or there is no battery in the mobile phone – there is a risk of electric shock or a risk of fire in such cases.

Use in hospitals / Medical devices

- The function of medical devices could be impaired if used in the vicinity of your product. Observe the technical conditions in your environment, e.g. in medical practices.
- If you use a medical product (e.g. a pacemaker), consult with the product manufacturer prior to use. They can provide information on the sensitivity of the device with regard to external, high-frequency power sources.
- **Pacemakers, implanted cardioverter defibrillators:**
When switching on the mobile phone, please pay attention that the distance between the mobile phone and implant is at least 152 mm. To reduce potential interference, use the mobile phone on the opposite side to the implant. In the event of possible interference, please switch the mobile phone off immediately. Do not carry the mobile phone in a shirt pocket.
- **Hearing aids, cochlea implants:**
Some digital, wireless devices can cause interference in hearing aids and cochlea implants. If interference occurs, please contact the manufacturer of such products.
- **Other medical devices:**
If you and the people in your environment use other medical devices, please contact the relevant manufacturer as to whether such devices are protected from radio frequency signals in the environment. You can also contact your doctor with regard to this.

Children and pets

- Keep the mobile phone, batteries, chargers and accessories out of reach of children and pets. Children and/or pets may swallow small parts and suffer choking and other hazards. Children may only use the mobile phone when supervised by an adult.

Aircraft, vehicles and road safety

- Switch the mobile phone off in an aircraft.
Please observe the applicable restrictions and regulations.
Wireless devices can interfere with the functionality aeronautical equipment. It is essential to follow instructions from aircraft personnel regarding using the mobile phone on an aircraft.
- As the driver of a vehicle, the main priority is: Safety in road traffic and for road users
Using the mobile phone while driving could distract your attention leading to dangerous situations. In addition, it contravenes current, applicable laws.

SIM card and data connection cables

- Do not remove the card from the mobile phone while sending or receiving data: Doing so increases the risk of loss of data and damage to the mobile phone.

Defective devices

- Installation or repair of the product may only be performed by qualified service personnel.
- Dispose of defective devices or have them repaired by our customer service department; such devices could interfere with other wireless services.
- If the mobile phone is treated roughly, e.g. allowed to fall, the display could break and the electronic circuitry and sensitive interior parts could be damaged.
- Do not use the device if the display is cracked or broken. Glass or plastic splinters can injure the hands and face.
- If the mobile phone, battery or accessories malfunction, please contact your Gigaset Service Centre regarding an inspection.

Further important information

- If the device becomes hot, please put it to one side for a while and cancel any programmes which are being executed at the time. If you come into contact with a device which is hot, there is a risk of slight skin irritation, e.g. redness of the skin.
- Do not paint or varnish the mobile phone. Varnish/Paint could damage parts of the mobile phone and cause operational breakdowns.

First steps

This chapter describes the contents of the package and how to start operating the mobile phone for the first time.

Package contents


- Mobile phone Gigaset COMFORT 600 SIM including battery
- Charging cradle
- Charger with USB-C connection
- Belt clip
- Quick start guide

Check the package contents are complete prior to starting up the mobile phone. In case of doubt, contact our customer service.


Getting started

Inserting the SIM card

You can insert a nano-SIM card in the mobile phone.


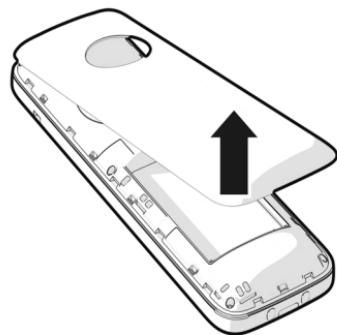


- 1 Insert your fingernail or a suitable aid into the recess in the left-hand corner of the rear side.
- 2 Prise the battery compartment cover upwards to open it.

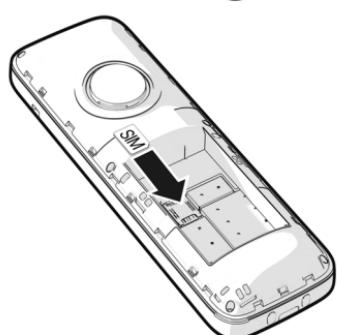

- 1 Insert the SIM card in the left-hand slot. Pay attention that the SIM card is inserted properly aligned.
- ▶ You have inserted a SIM card in the mobile phone.

Inserting the battery and closing the cover

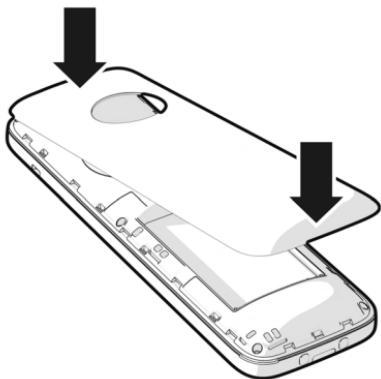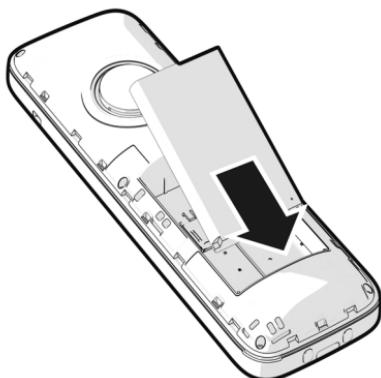


- 1 Insert the battery as illustrated. Pay attention that the battery is inserted properly aligned.

- 1 Replace the battery compartment cover as illustrated.
- 2 Press the cover down carefully to close it. The battery compartment locks in place with an audible click.

► You have inserted the battery in the mobile phone.

Charging the battery

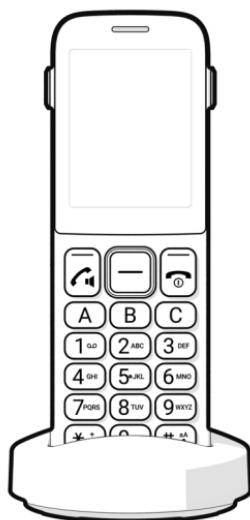

- 1 Insert the USB plug on the charging cable in the charger.
- 2 Place the mobile phone in the charger.

Ensure the battery is charged fully before starting to use the mobile phone for the first time.


The battery is fully charged when the charge icon  in the icon bar is completely filled.

 If you have set that the battery should only be charged to 80 %, the charge indicator remains with 4 bars and the battery only charges to 80 %.

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- 1 Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.

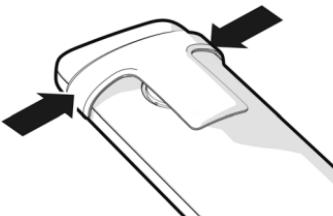

Removing the belt clip

- 1 Press the centre of the belt clip firmly with your right thumb.
- 2 Push the nail of your left thumb up between the clip and the casing.
- 3 Slide the clip upwards to remove.

Operating the mobile phone

This chapter describes the basic steps for operating the mobile phone.

Switching the mobile phone on/off

Switch the mobile phone on:

- 1 Press the right display key **longer**.
- 2 Enter the PIN related to the SIM card inserted using the keypad  on the mobile phone.

 The PIN was supplied together with the SIM card by your mobile phone provider. In case of doubt, contact your mobile phone provider.

- 1 Confirm the selection by pressing the **OK** key in the display.

► You have switched on the mobile phone.

Switch the mobile phone off:

- 1 Press the right display key **longer**.
- You have switched off the mobile phone.

Activating the display

The lighting in the display switches off automatically after 30 seconds (idle status). This function reduces the battery usage of the mobile phone.

- 1 Press any key on the mobile phone.
- You have switched on the display of the mobile phone.

Switching the keypad lock on/off

The keypad lock inhibits all input via the keys and prevents inadvertent operation of the mobile phone.

Switching on the keypad lock:

- 1 Press the **Star key** for 2 seconds.
- You have switched the keypad lock on: The  icon appears in the display.

Switching the keypad lock off:

- 1 Press the **left display key**.
- 2 Press the **Star key**.
- You have switched the keypad lock off: The  icon disappears.

 The keypad lock is deactivated when a call is received. You can accept the call. It then locks again when the call ends.

Please note that when the keypad lock function is activated, no call numbers can be entered.

Using the Control key (Navigation keys)




The control key enables you to navigate through the menus and input fields and also to confirm entries. The control key is located between the left display key and the right display key.

Functions of the Control key

In idle status:	Open the menu call lists Change audio profile Open the menu Open the phone book Open the menu
During a call	Raise caller volume for the receiver/handsfree function Lower caller volume for the receiver/handsfree function
In the menus:	Navigate through the menu Move upwards/downwards in the list of menu entries
During text input:	Move one text field upwards Move one text field downwards

Display keys

The display keys are used to execute the functions indicated in the display. The display functions are indicated at the bottom left and bottom right of the mobile phone display and are dependant on the menu currently displayed.

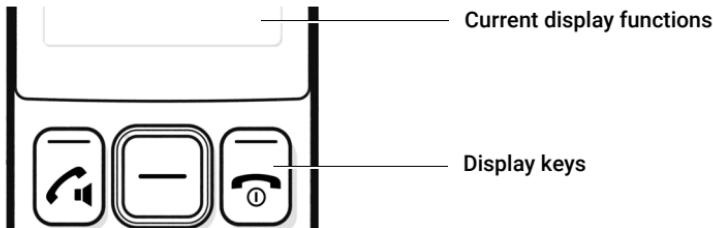

- 1 Press the left or right display key.

► You have executed the display functions indicated in the display.

Icons in the status bar

The icons in the status bar at the top edge of the display indicate current settings and the operating status of the mobile phone:



Vibration is activated, ringing tone is deactivated



Silent function is activated



Missed call in call list



Alarm clock is activated



Voice message missed

Wireless communication for SIM card



The number of bars in the icon indicates the quality of the current connection.

Battery charge status



Empty



Ca. 60%



Full

The bars in the indicator light up in succession during the charging process.

Menu guidance

The mobile phone menu is comprised of a main menu and several submenus.

Main menu

The functions in the main menu are indicated by an icon and a name.

Navigation in the main menu:

- 1 Press the **Menu** display key, the right control key or the centre of the control key.
- 2 Use the control key to select a submenu (e.g. **Settings**). The menu currently selected has a coloured background.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - You have opened the submenu.

Submenus

The functions in the submenus are displayed in list form.

The menu entry currently selected has a coloured background. If the name of the entry does not fit in one line, the text runs through.

If there are further entries, a scroll bar appears which indicates the position of the entry in the submenu.

Access a function:

- 1 Select a submenu (e.g. Settings).
- 2 Confirm the selection by pressing the **OK** key in the display.

► You have opened the submenu selected.

Switch to previous menu level:

- 1 Press the right display key or the **Back** display key.
- The previous menu level appears.

Entering text

Press the corresponding button once for each letter (e.g. "Hello" 4 3 5 5 6). The software recognises the word automatically. Use the control keys  /  to switch between the word suggestions.

With "New word" you can select letters by pressing the key with the desired letter several times.

Right display key:

1 Correct entry.

Left display key:

2 Apply word.

 key:

3 Apply word + space.

Press hash key:

4 Select upper/lower case, input mode, number input or language.

5 Confirm with the left display key.

Enter special characters in edit mode (when writing text messages) ► Press the Star key .



There are several options available for writing a text (SMS).

Making/taking calls

This chapter describes the options available with which to use the mobile phone. This includes the various ways to make and take calls. It also includes the description of functions which can be used during a call.

Making calls using the keypad

You can make national and international calls directly using the dialling keys on the mobile phone keypad.

Dial a national phone number:

- 1 Enter the relevant phone number of the contact required, including access code, using the keypad 
- 2 Press the Options display key.
- 3 Select Call.

► You have dialled a phone number using the dialling keypad.

Dial an international phone number:

- 1 Press the Star key  twice, until the + sign is inserted.
- 2 Enter the relevant phone number of the contact required, including access International dialling code (e.g. +43), using the keypad 

► You have dialled an international phone number.

You can delete digits or cancel dialling a phone number:

Delete digits:	1 Press the Delete display key.
Cancel dialling	1 Press the Back display key.

Making calls from the phone book

- 1 Press the Contacts key in the display.
- 2 Select the entry required.
- 3 Press the Options display key.
- 4 Select Call.

► You have dialled a phone number from the phone book.

Making calls from a call list

The call lists contain the last calls taken, rejected and missed.

- 1 Press the Menu key in the display.
- 2 Select Call lists.
- 3 Select the required call list.
- 4 Select the entry required.
- 5 Press the Options display key.
- 6 Select Call.

► You have dialled a phone number from the call list.

Making calls with the direct dialling keys

Dialling a phone number using a direct dialling key

1 Press the required direct dialling key A, B or C longer.

► You have dialled the phone number assigned to the direct dialling key.

Taking calls

An incoming call is indicated by a ringtone from the mobile phone. The display of the mobile phone shows the phone number of the caller (if transmitted). If the caller is in the phone book, the name assigned appears.

Take a call:

1 Press the left display key.

or

1 Press the Answer display key.

► You have taken an incoming call.

Rejecting a call:

1 Press the right display key.

or

1 Press the Reject display key.

► You have rejected an incoming call.

Ending a call in progress:

1 Press the right display key.

► You have ended a phone call which was in progress.

If you do not take an incoming call, it is recorded in the **Missed calls** call list.

During a phone call

The functions described here are available while a phone call is in progress.

Handsfree mode

You can use the loudspeaker of the mobile phone for to make calls (handsfree). This means that you have both hands free during the conversation.

Activate Handsfree mode:

1 Press the Menu key in the display.

2 Select **Hands-free**.

3 Confirm the selection by pressing the **OK** key in the display.

► You have switched Handsfree mode on.

The caller can be heard via the loudspeaker.

Deactivate Handsfree mode:

- 1 Press the **Menu** key in the display.
- 2 Select **Earpiece**.
- 3 Confirm the selection by pressing the **OK** key in the display.

► You have switched Handsfree mode off.
The caller can be heard via the receiver.

Adjusting the loudspeaker during a phone call

The volume of the caller can be adjusted to different levels. The setting adjustment applies for the receiver and loudspeaker for Handsfree mode.

Adjust the volume during a phone call:

- 1 Press the **Control** key  to raise the volume.
- 2 Press the **Control** key  to lower the volume.

or

- 1 Press the **Menu** key in the display.
- 2 Select **Adjust volume**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Control** key  to raise the volume.
- 5 Press the **Control** key  to lower the volume.
- 6 Select **Back**.

 The setting is automatically saved after about 3 seconds if you have not dialled **Back**.

► You have set the volume for the phone call.

Muting the microphone

If the microphone is muted, the caller can no longer hear you.

Mute the microphone:

- 1 Press the **Menu** key in the display.
- 2 Select **Mute**.
- 3 Confirm the selection by pressing the **OK** key in the display.

► You have muted the microphone.
The caller can no longer hear you.

Switch the microphone back on:

- 1 Press the **Menu** key in the display.
- 2 Select **Cancel mute**.
- 3 Confirm the selection by pressing the **OK** key in the display.

► You have switched the microphone on.
The caller can hear you again.

Call lists

The mobile phone saves different types of calls (missed, accepted and outgoing calls) in call lists.

Opening a call list

- 1 Press the **Menu** key in the display.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.

► You have opened an overview of the call lists.

The overview of the call lists indicates submenus for every type of call:

- All calls
- Missed calls
- Received calls
- Dialed calls
- Rejected calls

The **All calls** menu contains a summary of the calls of all types of call.

Beside the name of the list is the number of respective entries contained in the list.

- 1 Select the required call list (e.g. missed calls).
- 2 Confirm the selection by pressing the **OK** key in the display.

► You have opened the required call list.

Information on a call

- Phone number or name if the contact is contained in the phone book
- Date and time

Managing the entries in the call lists

- 1 Press the **Menu** key in the display.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the call list required.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the entry required.
- 7 Press the **Options** key in the display.

Dial a number

► Select Call.

Show information regarding the call:

► Select Details.

Copy number in phone book:

► Select Add to contacts.

Write a text message (SMS):

► Select Write message.

Copy number in block list:

► Select Add to Blocklist.

Copy number in allow list

► Select Add to Allowlist.

Delete an entry:

► Select Delete.

Delete the list:

► Select Delete all.

Deleting a call list

- 1 Press the **Menu** key in the display.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Delete all**.
- 5 Select the required call list.
- 6 Press **OK**.
- 7 Confirm the selection by pressing the **OK** key in the display.

► You have deleted the call list.

Call timer

- 1 Press the **Menu** key in the display.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call timers**.
- 5 Confirm the selection by pressing the **OK** key in the display.

► The following information is shown:

Last call:	Shows you the call duration of the last call.
Received calls:	Shows you the call duration of the calls received.
Dialed calls:	Shows you the call duration of the dialled calls.
Call history:	Shows you the duration of all calls.

Resetting the call timer

- 1 Press the **Menu** key in the display.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call timers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Reset** key in the display.
- 7 Confirm the selection by pressing the **OK** key in the display.

► You have reset the call timer.

Phone book

The phone book can contain up to 500 entries. Entries can be stored in the internal phone memory or on the SIM card.

You can create phone book entries manually, transfer them from a call list or transfer a phone number to the phone book when dialling it.

Opening the phone book

1 Press the **Contacts** key in the display.

or

1 Press the **Menu** key in the display.

2 Select **Contacts**.

3 Confirm the selection by pressing the **OK** key in the display.

The **Contacts** display key is always used in the following description.

Phone book entries

The phone book contains all the phone book entries. They are sorted alphabetically.

An entry contains the following information:

- Name

Information on contacts

An icon indicates where the phone book entry is stored:



On the mobile phone



On a SIM card

Creating a phone book entry

1 Press the **Menu** key in the display.

2 Select **Contacts**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Press the **Options** key in the display.

5 Select **New**.

6 Confirm the selection by pressing the **OK** key in the display.

7 Select where the new phone book entry should be stored (SIM card or phone memory).

8 Confirm the selection by pressing the **OK** key in the display.

9 Select **Name**.

10 Confirm the selection by pressing the **Control** key .

11 Enter the name using the keypad .

12 Confirm the selection by pressing the **OK** key in the display.

13 Select **Mobile** or **Home** number.

- 14 Confirm the selection by pressing the Control key .
- 15 Enter the phone number using the keypad .
- 16 Confirm the selection by pressing the OK key in the display.
- 17 Select **Save**.

► You have created a phone book entry.

Searching for a phone book entry

- 1 Enter a letter, numbers or a name using the keypad .
- Entries which correspond to the input are displayed.

or

- 1 Scroll through the list using the Control key .

Making calls from the phone book

- 1 Press the Menu key in the display.
- 2 Select **Contacts**.
- 3 Select the entry required.
- 4 Press the Options key in the display.
- 5 Select **Call**.

► You have dialled the number from the phone book.

Editing/Managing phone book entries

- 1 Select **Contacts**.
- 2 Select the entry required.
- 3 Press the Options key in the display.
- 4 Select one of the following options:

Call contact:	► Select Call.
Display contact:	► Select View contact.
Write a text message (SMS):	► Select Write message.
Add contact:	► Select New.
Delete a contact	► Select Delete.
Delete multiple contacts:	► Select Delete multiple.
Copy, import or export contact:	► Select Import/Export.
Send V-card:	► Select Send vCard.
Add to allow list:	► Select Add to Allowlist.
Add to block list:	► Select Add to Blocklist.
Group entry:	► Select Group.
Further options:	► Select Others.

Mailbox

If your phone provider provides you with a mailbox (answering machine), a caller can leave a message for you if you do not take the call.

In order to play and listen to voice messages in your mailbox, you need the phone number of the mailbox. If necessary, ask your mobile service provider with regard to the call number.

You can listen to the messages on the mailbox:

- 1 Press and hold the **1** key.
- ▶ You have listened to the messages on your mailbox.

Additional functions

SMS (text messages)

You can send and receive text messages (SMS).

- 1 Press the Menu key in the display.
- 2 Select Message.
- 3 Confirm the selection by pressing the OK key in the display.

The Control key  is used in the following description.

Writing and sending a text message

 A text message can contain up to 612 characters. In the case of more than 160 characters, the text (SMS) is sent as a chained SMS (up to 4 individual texts).

- 1 Press the Menu key in the display.
- 2 Select Message.
- 3 Confirm the selection by pressing the OK key in the display.
- 4 Select Write message.
- 5 Confirm the selection by pressing the Control key .
- 6 Select the recipient of the message 2 different ways:

Enter number:	1 Enter the phone number of the contact using the keypad 
or	
Using Contacts:	1 Press the Options key in the display. 2 Select Contacts. 3 Confirm the selection by pressing the OK key in the display. 4 Select the entry required. 5 Confirm the selection by pressing the Control key  .
	6 Press the Options key in the display. 7 Select OK. 8 Confirm the selection by pressing the OK key in the display.
- 7 Press the Control key .
- 8 Enter the text required using the keypad .
- 9 Confirm the selection by pressing the OK key in the display.
- 10 Press the Options key in the display.
- 11 Select Send.
- 12 Confirm the selection by pressing the OK key in the display.

► You have sent a text message.

Discarding a text written

If you want to discard a text which you have entered:

- 1 Select **Clear**.
- You have discarded the text entered.



If a text message cannot be sent, it is filed in the outbox.

Input methods

Each key between 2 and 9 and the 0 key are assigned several letters and digits.

Selecting letters/digits:

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **Control** key .
- 6 Press the **Hash** key .
- 7 Select **EN / en / En**.
- 8 Press the relevant key, briefly, several times in succession if necessary, until the required character is displayed.

Storing a text (SMS) temporarily (list of drafts)

You can store texts temporarily, to be changed and sent later.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **Control** key .
- 6 Enter the text required using the keypad .
- 7 Press the **Options** key in the display.
- 8 Select **Save as draft**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- You have stored the text as a draft in the list of drafts.

Editing drafts

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Drafts**.
- 5 Confirm the selection by pressing the **Control** key .

6 Select the draft required.

7 Press the Options key in the display.

8 Select one of the following options:

Delete draft:

1 Select Delete.

2 Press OK.

3 Confirm the selection by pressing the OK key in the display.

Delete all drafts:

1 Select Delete all.

2 Press OK.

3 Confirm the selection by pressing the OK key in the display.

Edit SMS:

1 Select Edit.

2 Confirm the selection by pressing the OK key in the display.

3 Delete the existing text by pressing the Clear key in the display.

4 Enter the text required using the keypad .

Lock/unlock SMS:

1 Select Lock/Unlock.

2 Press OK.

3 Confirm the selection by pressing the OK key in the display.

Move SMS:

1 Select Move.

2 Press OK.

3 Select Phone/SIM.

4 Confirm the selection by pressing the OK key in the display.

Mark SMS:

1 Select Mark.

2 Press OK.

3 Select one of the following options:

Mark/Mark all/Mark all by numbers/SIM storage SMS

4 Confirm the selection by pressing the OK key in the display.

Sort SMS:

1 Select Sort.

2 Select one of the following options:

Time/Contacts/Subject/Type

3 Confirm the selection by pressing the OK key in the display (● = selected).

Sent messages

Lists all the texts you have sent.



The Save sent messages function is activated.

- 1 Press the Menu key in the display.
- 2 Select Message.
- 3 Confirm the selection by pressing the OK key in the display.
- 4 Select Sentbox.
- 5 Confirm the selection by pressing the Control key .
- 6 Select the required text.
- 7 Press the Options key in the display.
- 8 Select one of the following options:
 - 1 Delete SMS:
 - 1 Select Delete.
 - 2 Press OK.
 - 3 Confirm the selection by pressing the OK key in the display.
 - 1 Delete all texts:
 - 1 Select Delete all.
 - 2 Press OK.
 - 3 Confirm the selection by pressing the OK key in the display.
 - 1 Send to other contacts:
 - 1 Select Forward.
 - 2 Press OK.
 - ▶ The text is displayed.
 - 3 Enter the phone number of the contact using the keypad .
 - 4 Press the Options key in the display.
 - 5 Select Send.
 - 6 Confirm the selection by pressing the OK key in the display.
 - 1 Lock/unlock SMS:
 - 1 Select Lock/Unlock.
 - 2 Press OK.
 - 3 Confirm the selection by pressing the OK key in the display.
 - 1 Move SMS:
 - 1 Select Move.
 - 2 Press OK.
 - 3 Select Phone/SIM.
 - 4 Confirm the selection by pressing the OK key in the display.

Mark SMS:

- 1 Select **Mark**.
- 2 Press **OK**.
- 3 Select one of the following options:
Mark/Mark all/Mark all by numbers/SIM storage SMS
- 4 Confirm the selection by pressing the **OK** key in the display.

Sort SMS:

- 1 Select **Sort**.
- 2 Select one of the following options:
Time/Contacts
- 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Outbox

All the texts which could not be sent, e.g. because no connection could be established or the call number was unknown, are stored on the outbox.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Outbox**.
- 5 Confirm the selection by pressing the **Control key** .
- 6 Select the required text.
- 7 Press the **Options** key in the display.
- 8 Select one of the following options:
 - Send SMS**
 - 1 Select **Resend**.
 - 2 Press **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Delete SMS:**
 - 1 Select **Delete**.
 - 2 Press **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Delete all texts:**
 - 1 Select **Delete all**.
 - 2 Press **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Lock/unlock SMS:**
 - 1 Select **Lock/Unlock**.
 - 2 Press **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.

Move SMS:

- 1 Select **Move**.
- 2 Press **OK**.
- 3 Select **Phone/SIM**.
- 4 Confirm the selection by pressing the **OK** key in the display.

Mark SMS:

- 1 Select **Mark**.
- 2 Press **OK**.
- 3 Select one of the following options:
Mark/Mark all/Mark all by numbers/SIM storage SMS
- 4 Confirm the selection by pressing the **OK** key in the display.

Sort SMS:

- 1 Select **Sort**.
- 2 Select one of the following options:
Time/Contacts/Subject/Type
- 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Template

The templates contain a selection of prescribed texts. This template can be edited or sent directly.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Templates**.
- 5 Confirm the selection by pressing the **Control** key .
- 6 Select the required SMS template.
- 7 Select **Edit**.
- 8 Enter the text required using the keypad .
- 9 Confirm the selection by pressing the **OK** key in the display.

Receiving texts (SMS)

Incoming texts are stored in the inbox. The receipt of a new text is indicated by a notification tone.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **Control** key .

If there are unread texts in the inbox, the  icon appears in the icon bar.

Editing the inbox

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Press the **Options** key in the display.
- 8 Select one of the following options:
 - Reply to SMS:
 - 1 Select **Reply**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Enter the text required using the keypad .
 - 4 Press the **Options** key in the display.
 - 5 Select **Send**.
 - 6 Press **OK**.
 - Call sender:
 - 1 Select **Call**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - The call number is dialled.
 - Delete SMS:
 - 1 Select **Delete**.
 - 2 Press **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Delete all texts:
 - 1 Select **Delete all**.
 - 2 Press **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Lock/unlock SMS:
 - 1 Select **Lock/Unlock**.
 - 2 Press **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Move SMS:
 - 1 Select **Move**.
 - 2 Press **OK**.
 - 3 Select **Phone/SIM**.
 - 4 Confirm the selection by pressing the **OK** key in the display.

Mark SMS:

- 1 Select **Mark**.
- 2 Press **OK**.
- 3 Select one of the following options:
Mark/Mark all/Mark all by numbers/SIM storage SMS
- 4 Confirm the selection by pressing the **OK** key in the display.

Sort SMS:

- 1 Select **Sort**.
- 2 Select one of the following options:
Time/Contacts/Subject/Type
- 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Add to blocklist:

- 1 Select **Add to Blocklist**.
- 2 Press **OK**.

Add to allowlist:

- 1 Select **Add to Allowlist**.
- 2 Press **OK**.

Text (SMS) settings

Show Memory status

The SMS memory status indicates the actual and possible number of texts on the SIM card and in the internal mobile phone memory.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Options** key in the display.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Message capacity**.
- 7 Confirm the selection by pressing the **OK** key in the display.

Saving the texts (SMS) sent

You can define whether the texts which you have sent should be stored in the list **Sentbox**.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SMS settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Save sent messages**.
- 7 Select **OK**.
- 8 Select one of the following options:
Prompt user, Save, Don't save

- 9 Confirm the selection by pressing **OK**.
- You have defined whether the sent texts should be saved.

Preferred memory location

You can define whether texts should be stored on the mobile phone or on the SIM card.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SMS settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Preferred storage**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Phone/SIM**.
- 9 Confirm the selection by pressing **OK** (● = selected).
- You have defined the memory location where texts should be saved.

Bluetooth

You can connect the mobile phone wirelessly to other devices using Bluetooth.

- 1 Press the **Menu** key in the display.
- 2 Select **Bluetooth**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select one of the following options:
 - Enabling/disabling Bluetooth: 1 Select **Bluetooth**.
2 Press the **Turn on/Turn off** key in the display.
 - Visibility of your mobile phone for other devices: 1 Select **Bluetooth visibility**.
2 Press the **Turn on/Turn off** key in the display.
 - Name of the mobile phone: 1 Select **Device name**.
2 Confirm the selection by pressing the **OK** key in the display.
3 Enter a new name for the mobile phone using the keypad

4 Confirm the selection by pressing the **OK** key in the display.

Pairing a Bluetooth device

- 1 Press the **Menu** key in the display.
- 2 Select **Bluetooth**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Bluetooth**.

5 Press the Turn on key in the display.

 Bluetooth is activated on your mobile phone if a tick is placed in the box next to Bluetooth.

- 1 Select Paired device.
- 2 Confirm the selection by pressing the OK key in the display.
- 3 Select Add new device.
- 4 Confirm the selection by pressing the OK key in the display.
- 5 Press the Add key in the display.
- 6 Wait until the search has been completed.
- 7 Select the required device for pairing.
- 8 Press the Pair key in the display.

► You have connected your mobile phone to the device.

Speed dial

You can assign important phone numbers to the keys A, B, C and the keys 2 to 9.

- 1 Press the Menu key in the display.
- 2 Select Speed dial.
- 3 Confirm the selection by pressing the OK key in the display.
- 4 Select ABC or 2-9 Number.
- 5 Press OK.
- 6 Select the required key.
- 7 Press the Options display key.
- 8 Select Edit.
- 9 Confirm the selection by pressing the OK key in the display.
- 10 Enter the number using the keypad .
- 11 Press OK.

or

- 1 Select the required key.
- 2 Select Options.
- 3 Select Edit.
- 4 Press the Contacts key in the display.
- 5 Press OK.
- 6 Select the entry required.
- 7 Confirm the selection by pressing the OK key in the display.

► You have assigned a phone number to a direct dialling key.

Alarm clock



The date and time are correct.

Setting the alarm clock

You can set 5 alarm times. A wake up alarm is issued at the times set:

- 1 Press the **Menu** key in the display.
- 2 Select **Alarm**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Confirm the selection by pressing the **Control** key .
- 5 Use the **Control** key  to move between the input fields:
 - Message: 1 Enter a name of the alarm using the keypad .
 - Time: 1 Enter the time, to four-digits, using the keypad .
 - Ringtone:
 - 1 Select **Ringtone**.
 - 2 Confirm the selection by pressing the **Control** key .
 - 3 Select **Fixed ringtones** or **More ringtones**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select the ringtone for the alarm clock.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - Repeat:
 - 1 Select **Repeat mode**.
 - 2 Confirm the selection by pressing the **Control** key .
 - 3 Use the control key  to select how often the event is to be repeated:
Once, Daily, Working days
 - 4 Confirm the selection by pressing the **OK** key in the display.

If an alarm clock is activated, the  icon appears in the icon bar in the mobile phone display.

Switching the alarm clock on and off

Switch a set alarm clock on or off:

- 1 Press the **Menu** key in the display.
- 2 Select **Alarm**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select a waking time required (00:00).
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **On or Off**.
- 9 Confirm the selection by pressing the **OK** key in the display.

► You have switched the alarm clock on/off.

Wake-up call

An alarm is shown in the display and indicated by the selected ringtone melody. The wake-up call sounds for 60 second. If no key is pressed, it is repeated after 5 minutes. After the second repetition, the alarm call is deactivated.



During a call, the alarm is only indicated by a short tone.

Wake up call deactivating/repeating after a pause (snooze mode):

To switch off the alarm:

- 1 Select Off.
- 2 You have deactivated the wake up call.

Repeat alarm (snooze mode):

- 1 Select Snooze.

or

- 1 Press any key.
- You have deferred the wake up call.
It will be repeated after 5 minutes.

Calendar

You can enter appointments (events) in the calendar and then be reminded of them.



The date and time are correct.

To open the calendar:

- 1 Press the Menu key in the display.
- 2 Select Tools.
- 3 Confirm the selection by pressing the OK key in the display.
- 4 Select Calendar.
- 5 Confirm the selection by pressing the OK key in the display.
- You have opened the calendar.

The current date has a blue background; the currently selected day has a green background. Days with events are marked with a triangle in the upper left corner.

Navigating in the calendar

Choosing the required date:

- 1 Navigate through the calendar using the Control keys.
- or
- 1 Press the Options display key.
- 2 Select Go to date.
- 3 Confirm the selection by pressing the OK key in the display.

- 4 Enter the date required, to eight digits, using the keypad .
- 5 Confirm the selection by pressing the OK key in the display.

► You have selected the required date.

Switching off the signal

An event is indicated at the specified time by an acoustic signal (when activated) and an indicator in the display.

Switch the acoustic signal off:

- 1 Confirm the selection by pressing the Exit key in the display.

► You have deactivated the alarm.

Creating a new event

- 1 Press the Menu key in the display.
- 2 Select Tools.
- 3 Confirm the selection by pressing the OK key in the display.
- 4 Select Calendar.
- 5 Confirm the selection by pressing the OK key in the display.
- 6 Press the Options key in the display.
- 7 Select Add a new schedule.
- 8 Use the Control key  to move between the input fields:

Naming an event: 1 Select Subject.

2 Enter a name for the event using the keypad .

Enter date: 1 Select Date.

2 Enter the date required, to eight digits, using the keypad .

Enter time: 1 Select Time.

2 Enter the date required, to eight digits, using the keypad .

Ringtone: 1 Select Ringtone.

2 Confirm the selection by pressing the Control key .

3 Select Fixed ringtones or More ringtones.

4 Confirm the selection by pressing the OK key in the display.

5 Select the ringtone for the alarm clock.

6 Confirm the selection by pressing the OK key in the display.

Repeat the event: 1 Select Repeat mode.

2 Confirm the selection by pressing the Control key .

3 Use the control key  to select how often the event is to be repeated:

Once, Daily repeat, Weekly repeat, Monthly, Yearly, No reminder

4 Confirm the selection by pressing the OK key in the display.

Save: 1 Confirm the selection by pressing the Save key in the display.

Displaying events

You can display events assigned to a specific day:

- 1 Press the **Menu** key in the display.
- 2 Select **Tools**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Use the **Control** key to scroll up  or down  to the required day.
- 7 Press the **Options** key in the display.
- 8 Select **View schedules**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select an event.
- 11 Press the **Options** key in the display.
- 12 Select **View**.
- 13 Confirm the selection by pressing the **OK** key in the display.

► You have opened the event selected. The details are displayed.

You can display all the events:

- 1 Press the **Menu** key in the display.
- 2 Select **Tools**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Options** key in the display.
- 7 Select **All schedules**.
- 8 Confirm the selection by pressing the **OK** key in the display.
- 9 Select an event.
- 10 Press the **Options** key in the display.
- 11 Select **View**.
- 12 Confirm the selection by pressing the **Options** key in the display.

► You have opened all the events. The details are displayed.

Deleting events

You can delete all events of a day or all events in the calendar.

- 1 Press the **Menu** key in the display.
- 2 Select **Tools**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Options** key in the display.
- 7 Select **Clear today's tasks** or **Clear all**.

- 8 Press **OK**.
- 9 Confirm the deletion by pressing the **OK** key in the display.

► You have deleted the events selected.

or

You can delete a specific event.

- 1 Press the **Menu** key in the display.
- 2 Select **Tools**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Use the **Control** key to scroll up  or down  to the required day.
- 7 Press the **Options** key in the display.
- 8 Select **View schedules/All schedules**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Press the **Options** key in the display.
- 11 Select **Delete**.
- 12 Press **OK**.
- 13 Confirm the deletion by pressing the **OK** key in the display.

► You have delete the event selected.

World clock

- 1 Press the **Menu** key in the display.
- 2 Select **Tools**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **World clock**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Options** key in the display.
- 7 Select one of the following options and press **OK**:

Add city:	1 Select Add city .
	2 Confirm the selection by pressing the OK key in the display.
Delete city:	1 Select Delete city .
	2 Confirm the selection by pressing the OK key in the display.
Set as local:	1 Select Set as local .
	2 Confirm the selection by pressing the OK key in the display.
	3 Select the time zone.
	4 Confirm the selection by pressing the Control key  .

Set daylight saving system: 1 Select **Set daylight saving system**.
2 Confirm the selection by pressing the **OK** key in the display.
3 Select the time zone.
4 Confirm the selection by pressing the **Control** key .

File manager

Your personal data, e.g. ringtones, call recordings are saved in the internal memory of the phone. The files can be accessed via the file manager:

- 1 Press the **Menu** key in the display.
- 2 Select **Tools**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **My files**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The files or folders stored in the memory are displayed.
- 6 Select the folder or file you require.
- 7 Press the **Options** key in the display.
- 8 Select one of the following options:
 - **New folder**
 - **Delete**
 - **Details**
 - **Edit**
 - **Search**
 - **Sort**
 - **Mark**
 - **Memory status**

Loading data in the mobile phone memory

You can also manage your personal data on a PC.

- 1 Connect the mobile phone to a PC using the USB cable.
- 2 Select **USB**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The internal memory of the mobile phone is displayed as a drive on the PC.

You can manage the folders and files on the mobile phone using the standard functions of your PC operating system.



As long as the mobile phone remains connected to the PC, the File Manager function is not available.

Settings

Call settings

Enabling call forwarding

You can change the call forwarding options.

- 1 Press the Menu key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call forwarding**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Choose the option you want to change:
Call forwarding unconditional, Call forwarding on no reply, Divert if unreachable, Call forwarding on busy
- 9 Confirm the selection by pressing the **Select** key in the display.
- 10 Select **Turn on/Off/Check status**.
- 11 Confirm the selection by pressing the **OK** key in the display.

► You have enabled the forwarding of calls.

Cancelling all call diverts

- 1 Press the Menu key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call forwarding**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Cancel all diverts**.
- 9 Confirm the selection by pressing the **Select** key in the display.

► You have cancelled all diverts.

Call waiting

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call waiting**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Turn on/Off/Check status**.
- 9 Confirm the selection by pressing the **OK** key in the display.

Call barring

You can change the call barring options.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call barred**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Choose the option you want to change:
All outgoing calls, **All incoming calls**, **Incoming calls when roaming**, **ISD calling**, **Dial when INTL roaming**
- 9 Confirm the selection by pressing the **Select** key in the display.
- 10 Select **Turn on/Off/Check status**.
- 11 Confirm the selection by pressing the **OK** key in the display.

► You have enabled the barring of calls.

Cancelling all call barring

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call barred**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Cancel all barring**.
- 9 Confirm the selection by pressing the **Select** key in the display.

► You have cancelled all diverts.

Hide ID

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Hide ID**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select one of the following options:
Hide ID, Show my number, Display ID by network
- 9 Confirm the selection by pressing the **OK** key in the display.

Others

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Others**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Call time minute reminder**.
- 9 Confirm the selection by pressing the **Select** key in the display.
- 10 Select a time frame or enter the desired time using the keypad .
- 11 Confirm the selection by pressing the **OK** key in the display.
- 12 Select **Auto redial**.
- 13 Activate/Deactivate the option by pressing the **Select** or **Cancel** key in the display.
- 14 Select **Vibration when connected**.
- 15 Activate/Deactivate the option by pressing the **Select** or **Cancel** key in the display.
- 16 Select **Reply SMS after reject**.
- 17 Activate/Deactivate the option by pressing the **Select** or **Cancel** key in the display.

Phone settings

Time and date

The date and time can be set manually.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Time & date**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Use the **Control key**  to move between the input fields.

Set time: 1 Use the keypad  to enter the time (format: HH:MM).

Set date: 1 Use the keypad  to enter the date (format: YYYY.MM.DD).

Time format: 1 Press the **Select** key in the display.

2 Select **12 hours/24 hours**.

3 Confirm the selection by pressing the **OK** key in the display.

Date format: 1 Press the **Select** key in the display.

2 Select **Year.month.day/Month.day.year/Day.month.year**.

3 Confirm the selection by pressing the **OK** key in the display.

Date separator: 1 Press the **Select** key in the display.

2 Select the required separator character.

3 Confirm the selection by pressing the **OK** key in the display.

Update time settings: 1 Press the **Select** key in the display.

2 Select **Auto update time**.

3 Press the **Select** key in the display.

4 Press the **Back** key in the display.

or

1 Select **Manual update time**.

2 Press the **Select** key in the display.

- 9 Confirm the selection by pressing the **Done** key in the display.

Language

You can define the languages for the display and for keypad input separately from each other.

Display language

The display language defines the language for displays, menus and messages on the mobile phone.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Language settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Display language**.
- 9 Press the **Select** key in the display.
- 10 Select the required language.
- 11 Confirm the selection by pressing the **OK** key in the display.

► You have selected the display language.

Writing language

The writing language defines the range of characters available for text input (e.g. When writing a text (SMS)).

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Language settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Writing language**.
- 9 Press the **Select** key in the display.
- 10 Select the required writing language.
- 11 Confirm the selection by pressing **OK** (● = selected).

► You have selected the writing language.

Shortcut settings

You can change the function for the right display key and the sides of the Control key.

- 1 Press the Menu key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Shortcut settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select the key you want to change.
- 9 Confirm the selection by pressing the **Select** key in the display.
- 10 Choose the desired option.
- 11 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have changed the shortcut.

Auto power on/off

You can set the time when the mobile phone will be automatically switched on and off.

- 1 Press the Menu key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Auto power on/off**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Enable the function by pressing the **On** key in the display.
- 9 Press the Control key  to open more options.
- 10 Select **Time**.
- 11 Enter the time when the mobile phone shall be switched on using the keypad .
- 12 Select **Repeat mode**.
- 13 Confirm the selection by pressing the Control key .
- 14 Select **Once/Daily/Working days**.
- 15 Confirm the selection by pressing the **OK** key in the display.

Resetting to the factory settings

If you want to hand the mobile phone over to a third party, you can reset it to the factory settings. All the individual settings are reset, the call lists and phone book entries in the phone's internal memory are deleted.



Attention!

On resetting the factory settings, all the data stored (e.g. photos) are deleted from the mobile phone. This process cannot be reversed.

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Restore factory settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Enter the phone pin using the keypad
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Confirm the resetting process by pressing **Yes**.

► You have reset the mobile phone to its factory settings.

Display settings

The mobile phone offers various setting options for the display.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Display**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select one of the following options:

Background image:

- 1 Select **Wallpaper settings**.
- 2 Press the **Select** key in the display.
- 3 Select **Static wallpaper/More pictures**.
- 4 Confirm the selection by pressing **OK** (● = selected).
- 5 Select the required image.
- 6 Confirm the selection by pressing the **OK** key in the display.

Start screen settings:

- 1 Select **Idle display settings**.
- 2 Press the **Select** key in the display.
- 3 Select **Time & date/SIM selection**.
- 4 Press the **Control** key
 to **Select** or **Cancel** the option.

- 5 Confirm the selection by pressing the **Back** key in the display.

Brightness:

- 1 Select **Contrast**.
- 2 Set the brightness using the **Control key** .
- 3 Confirm the selection by pressing the **Done key** in the display.

Duration:

- 1 Select **Backlight**.
- 2 Press the **Select key** in the display.
- 3 Select the duration using the **control key** .
- 4 Confirm the selection by pressing the **OK key** in the display.

Automatic key lock:

- 1 Select **Auto keypad lock**.
- 2 Press the **Select key** in the display.
- 3 Select the duration using the **control key** .
- 4 Confirm the selection by pressing the **OK key** in the display.

Security settings

Activating/deactivating the SIM card lock

- 1 Press the **Menu key** in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK key** in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK key** in the display.
- 6 Select **PIN**.
- 7 Confirm the selection by pressing the **Select key** in the display.
- 8 Activate/deactivate the **PIN** by pressing the **Select** or **Cancel key** in the display.
- 9 Enter the **PIN** using the **keypad** .

► You have activated/deactivated the SIM lock.

Modifying the SIM PIN

- 1 Press the **Menu key** in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK key** in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK key** in the display.
- 6 Select **PIN**.
- 7 Confirm the selection by pressing the **Select key** in the display.
- 8 Select **Modify PIN**.
- 9 Confirm the selection by pressing the **Select key** in the display.
- 10 Enter the **PIN** using the **keypad** .
- 11 Press **OK**.

12 Enter the new PIN using the keypad .

13 Press OK.

14 Confirm the new PIN by entering it again.

15 Confirm by pressing the OK key in the display.

► You have changed the SIM PIN.

Changing the PIN2

1 Press the Menu key in the display.

2 Select Settings.

3 Confirm the selection by pressing the OK key in the display.

4 Select Security.

5 Confirm the selection by pressing the OK key in the display.

6 Select Modify PIN2.

7 Confirm the selection by pressing the Select key in the display.

8 Enter the PIN using the keypad .

9 Press OK.

10 Enter the new PIN using the keypad .

11 Press OK.

12 Confirm the new PIN by entering it again.

13 Confirm by pressing the OK key in the display.

► You have changed the SIM PIN2.

Activating the phone password

1 Press the Menu key in the display.

2 Select Settings.

3 Confirm the selection by pressing the OK key in the display.

4 Select Security.

5 Confirm the selection by pressing the OK key in the display.

6 Select Phone locked.

7 Confirm the selection by pressing the Select key in the display.

8 Enter the phone password using the keypad .

9 Press OK.

► You have activated the phone password.

Changing the phone password



The default PIN is 0000.

- 1 Press the **Menu** key in the display.
- 2 **Select Settings.**
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 **Select Security.**
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 **Select Phone locked.**
- 7 Confirm the selection by pressing the **Select** key in the display.
- 8 Enter the phone password using the keypad
- 9 Press **OK**.
- 10 Enter the new phone password using the keypad
- 11 Confirm the new password by entering it again.
- 12 Confirm by pressing the **OK** key in the display.

▶ You have changed the phone password.

Allow list and block list

You can assign phone numbers to a allow list or block list. When the allow list is activated, calls from phone numbers not in the list are automatically rejected.

When the block list is activated, calls from phone numbers which are on the list are automatically rejected.

Allow list

The allow list used to enter number which are allowed to reach you.

Switch the allow list on/off:

- 1 Press the **Menu** key in the display.
- 2 **Select Settings.**
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 **Select Security.**
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 **Select Allowlist.**
- 7 Confirm the selection by pressing the **Select** key in the display.
- 8 **Select Allowlist settings.**
- 9 **Select Allow audio call or Allow Message.**
- 10 Press the **Select** key in the display.

▶ You have switched the allow list on/off.

Add phone numbers to the allow list:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Allowlist**.
- 7 Confirm the selection by pressing the **Select** key in the display.
- 8 Select **Allowlist numbers**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Press the **Options** key in the display.
- 11 Use the **Control** key  to move between the input fields.

Add contact:

- 1 Select **New**.
- 2 Press **OK**.
- 3 Select **Name**.
- 4 Enter the name using the keypad .
- 5 Select **Number**.
- 6 Enter the number using the keypad .
- 7 Confirm the selection by pressing the **Save** key in the display.

Edit contact:

- 1 Select **Edit**.
- 2 Press **OK**.
- 3 Select **Name**.
- 4 Enter the name using the keypad .
- 5 Select **Number**.
- 6 Enter the number using the keypad .
- 7 Confirm the selection by pressing the **Save** key in the display.

Delete a contact:

- 1 Select **Delete**.
- 2 Press **OK**.
- 3 Confirm the selection by pressing the **OK** key in the display.

Add from phonebook:

- 1 Select **Add from Phonebook**.
- 2 Press **OK**.
- 3 Select the required entry.
- 4 Press the **Options** key in the display.
- 5 Select **OK/Mark all**.
- 6 Confirm the selection by pressing the **OK** key in the display.

Import from call list:

- 1 Select **Call lists**.
- 2 Press **OK**.
- 3 Select the required entry.
- 4 Confirm the selection by pressing the **OK** key in the display.

Delete everything:

- 1 Select **Delete all**.
- 2 Press **OK**.
- 3 Confirm the selection by pressing the **OK** key in the display.

Block list

The block list is used to prevent calls from unwanted phone numbers.

Switch the block list on:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Blocklist**.
- 7 Confirm the selection by pressing the **Select** key in the display.
- 8 Select **Blocklist settings**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Audio call interception or Message interception**.
- 11 Press the **Select** key in the display.

► You have switched the block list on/off.

Add phone numbers to the block list:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Blocklist**.
- 7 Confirm the selection by pressing the **Select** key in the display.
- 8 Select **Blocklist numbers**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Press the **Options** key in the display.
- 11 Use the **Control** key  to move between the input fields.

Add contact:

- 1 Select **New**.
- 2 Press **OK**.
- 3 Select **Name**.
- 4 Enter the name using the keypad .
- 5 Select **Number**.
- 6 Enter the number using the keypad .
- 7 Confirm the selection by pressing the **Save** key in the display.

Edit contact:

- 1 Select **Edit**.
- 2 Press **OK**.
- 3 Select **Name**.
- 4 Enter the name using the keypad .
- 5 Select **Number**.
- 6 Enter the number using the keypad .
- 7 Confirm the selection by pressing the **Save** key in the display.

Delete a contact

- 1 Select **Delete**.
- 2 Press **OK**.
- 3 Confirm the selection by pressing the **OK** key in the display.

Add from phonebook:

- 1 Select **Add from Phonebook**.
- 2 Press **OK**.
- 3 Select the required entry.
- 4 Press the **Options** key in the display.
- 5 Select **OK/Mark all**.
- 6 Confirm the selection by pressing the **OK** key in the display.

Import from call list:

- 1 Select **Call lists**.
- 2 Press **OK**.
- 3 Select the required entry.
- 4 Confirm the selection by pressing the **OK** key in the display.

Delete everything:

- 1 Select **Delete all**.
- 2 Press **OK**.
- 3 Confirm the selection by pressing the **OK** key in the display.

Connections

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Connections**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select one of the following options:
 - APN settings:
 - 1 Select **APN settings**.
 - 2 Press **OK**.
 - 3 Select **Internet/IMS**.
 - 4 Press the **Options** key in the display.
 - 5 You have the following options:
 - New connection
 - Search
 - Delete
 - Edit
 - 1 Select **MMS data service**.
 - 2 Activate/Deactivate the option by pressing the **OK** key in the display.
 - MMS data service:
 - 1 Select **MMS data roaming**.
 - 2 Activate/Deactivate the option by pressing the **OK** key in the display.
 - MMS data roaming:
 - 1 Select **Network selection**.
 - 2 Choose between **Auto select** and **Manual select**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Network selection:
 - 1 Select **Network type**.
 - 2 Choose between the following options:
4G/3G/2G Multi Mode, **3G/2G Dual Mode**, **2G Only Mode**
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Network type:
 - 1 Select **VoLTE**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **SIM1**.
 - 4 Confirm the selection by pressing the **Control** key .
 - VoLTE:
 - 1 Select **VoLTE**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **SIM1**.
 - 4 Confirm the selection by pressing the **Control** key .

Battery life

You can extend the life of the mobile phone battery by activating this option. If activated the battery will only load until 80 % full.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Battery life+(max. 80%)**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **On** or **Off** to activate/deactivate the function.
- 7 Confirm the selection by pressing the **OK** key in the display.

Changing the menu layout

You can change how the main menu should be displayed.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Layout**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the desired layout.
- 7 Confirm the selection by pressing the **OK** key in the display.

► You have changed the layout of the menu.

Tones and signals

Selecting the acoustic profile

The mobile phone offers an acoustic profile with which you can adapt the phone's reaction to calls received according to the ambient conditions.

- 1 Press the **Menu** display key.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required profile.
- 5 Confirm the selection by pressing the **Control** key .

► You have selected the acoustic profile.

Defining the ringing tone

You can select one of the pre-installed ringtones as your ringtone. Individual ringtones (mp3 format) can be loaded in the phone's internal memory.

- 1 Press the **Menu** display key.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required audio profile.
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Ring settings**.
- 9 Confirm the selection by pressing the **Select** key in the display.
- 10 Select **Caller ringtone**.
- 11 Press the **Select** key in the display.
- 12 Select **Fixed ringtones**.
- 13 Confirm the selection by pressing the **OK** key in the display.
- 14 Select the ringtone required.
 - The ringtone is played as a test.
- 15 Confirm the selection by pressing **OK** (● = selected).
 - You have changed the ringtone.

Setting the ringtone volume

- 1 Press the **Menu** display key.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required audio profile.
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Adjust volume**.
- 9 Press the **Select** key in the display.
- 10 Select **Caller ringtone**.
- 11 Press the **Select** key in the display.
 - The current ringtone is played as a test.
- 12 Set the volume louder  or quieter  using the **Control** key.
- 13 Confirm the selection by pressing the **Done** key in the display.
 - You have set the volume of the ringtone.

Setting the alarm tone volume

- 1 Press the **Menu** display key.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required audio profile.
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Adjust volume**.
- 9 Press the **Select** key in the display.
- 10 Select **Alarm & calendar ringtone**.
- 11 Press the **Select** key in the display.
 - ▶ The current ringtone is played as a test.
- 12 Set the volume louder  or quieter  using the **Control** key.
- 13 Confirm the selection by pressing the **Done** key in the display.
 - ▶ You have set the volume of the ringtone.

Setting the ring type

- 1 Press the **Menu** display key.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required audio profile.
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Ring type**.
- 9 Press the **Select** key in the display.
- 10 Select **Call alert/Message alert/Alarm & calendar remind**.
- 11 Press the **Select** key in the display.
- 12 Select the required ring type.
- 13 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the ring type.

Message tone

The message tone indicates the receipt of a new text message (SMS). You can select a melody as a message tone.

Selecting the message tone

- 1 Press the **Menu** display key.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required audio profile.
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Ring settings**.
- 9 Confirm the selection by pressing the **Select** key in the display.
- 10 Select **Message ringtone**.
- 11 Press the **Select** key in the display.
- 12 Select **Fixed ringtones**.
- 13 Confirm the selection by pressing the **OK** key in the display.
- 14 Select the ringtone required.
 - ▶ The ringtone is played as a test.
- 15 Confirm the selection by pressing **OK** (● = selected).
 - ▶ You have changed the ringtone.

Setting the volume of the message tone

- 1 Press the **Menu** display key.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required audio profile.
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Adjust volume**.
- 9 Press the **Select** key in the display.
- 10 Select **Message ringtone**.
- 11 Press the **Select** key in the display.
 - ▶ The current ringtone is played as a test.
- 12 Set the volume louder  or quieter  using the **Control** key.
- 13 Confirm the selection by pressing the **Done** key in the display.
 - ▶ You have set the volume of the ringtone.

Other sounds

The mobile phone offers additional options for tones (e.g. key tones).

- 1 Press the **Menu** key in the display.
- 2 Select **Audio profiles**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the required audio profile.
- 5 Press the **Options** key in the display.
- 6 Select **Settings**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Other alert rings**.
- 9 Press the **Select** key in the display.
- 10 Select one of the following options:
 - Key tones:**
 - 1 Select **Key tone**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Silent/Ringtone1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.

► You have set the key tone.
 - Battery warning:**
 - 1 Select **Battery low alert**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Turn on/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.

► You have set the battery warning.
 - Dialling tone:**
 - 1 Select **Dial tone**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Turn on/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.

► You have set the battery warning.



The settings for **Other alert rings** can only be made in the audio profile **Standard**.

Appendix

Customer service

If you have any problems with your mobile phone, please contact a Gigaset dealer or the Gigaset Service Center.

You can also purchase original accessories (e.g. batteries, charger) there.

Help is available at www.gigaset.com/service

Guarantee Certificate

Unless otherwise specified, the guarantor (hereinafter referred to as "Gigaset Technologies") grants the consumer (customer) a durability warranty under the following conditions (warranty conditions), without prejudice to the consumer's statutory rights relating to defects. The customer's warranty rights are not limited by this warranty. Warranty rights can be asserted free of charge. This warranty represents an obligation on the part of the guarantor in addition to the statutory warranty rights that can be asserted free of charge for defect claims.

Warranty conditions:

- In the case of new devices (telephones, smartphones) and their components exhibiting defects within 24 months of purchase, Gigaset Technologies shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. This durability warranty applies for 12 months from the date of purchase for parts subject to wear (all moving parts that can be replaced by the customer itself, e.g. spare parts, batteries, keyboards, housing).
- This warranty does not apply in the event a defect to devices is attributable to improper treatment and/or a failure to follow the operating guides.
- This warranty does not cover any services provided by the appointed dealer or by the customer himself (e.g. installation, configuration, software downloads). Manuals and, where applicable, accompanying software on a separate data carrier are also excluded from the warranty.
- Proof of purchase plus date of purchase are required as evidence of a valid warranty. Warranty claims must be asserted within two (2) months of the awareness of a warranty event.
- Replaced devices or their components returned to Gigaset Technologies during the course of an exchange are transferred to the ownership of Gigaset Technologies.
- This warranty applies to new devices acquired within the European Union. These will be exchanged free of charge for a technologically current device or repaired by Gigaset Technologies. The warrantor is Gigaset Technologies GmbH, Frankenstraße 2, D-46395 Bocholt.
- No further or different claims arising from this manufacturer's warranty will be accepted. Gigaset Technologies accepts no liability for operational interruptions, loss of profit and loss of data, software additionally installed by the customer or other information. The customer is responsible for safeguarding these. The liability

disclaimer does not apply if liability is mandatory, for example under the Product Liability Act, in cases of wilful intent, gross negligence, injury to life, limb and health or breach of material contractual obligations. Claims for damages in respect of breach of material contractual obligations are however limited to foreseeable losses typical for the contract, unless liability is as a result of wilful intent, gross negligence, injury to life, limb and health or under the Product Liability Act.

- Successful assertion of a warranty claim does not extend the term of the warranty.
- Unless there is a warranty event, Gigaset Technologies reserves the right to charge the customer for an exchange or repair. Gigaset Technologies will inform the customer of this in advance.
- Any change to the rules governing burden of proof to the detriment of the customer is not connected with the above rules.
- Federal German law applies to this warranty, to the exclusion of the United Nations Convention on Contracts for the International Sale of Goods (CISG). This choice of law does not deprive the consumer of the protection he/she would have been granted under provisions that cannot be derogated from by agreement, according to the law of the country in which he/she has her habitual residence ("favourability principle").

Please contact the warrantor's customer services to redeem and assert this warranty. You can find the relevant telephone number in our Service Portal at www.gigaset.com/service.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1

 Signs of wear on the display and casing are excluded from the warranty.

Certain content and services which can be accessed using this device are the property of third parties and are protected by copyrights, patents, trademarks and/or other laws for the purpose of safeguarding intellectual property. Such content and services are provided solely for non-commercial, private usage.

You may not use content or services which has/have not been authorised by the owner of particular content or a service provider.

Without limiting the generality of the foregoing, except as expressly specified by the owner of the content or the service provider, the modification, reproduction, dissemination, uploading, publication, transmission, translation, sale, creation of derived works, distribution of content or services shown on this device are not permitted in any form and on any medium.

Approval

This appliance is intended for use within the European Economic Community.

Country-specific features are taken into account.

Gigaset Technologies GmbH hereby declares that the radio equipment type Gigaset COMFORT 600 SIM complies with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following web address: www.gigaset.com/docs.

In some cases, this declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Please therefore check all of these files.

Notice on the Disposal of Electrical and Electronic Equipment

For more information on environmentally friendly products and procedures, please visit www.gigaset.com.

Environmentally Responsible Disposal

(in accordance with the WEEE Directive and the EU Battery Directive)



The crossed-out wheeled bin symbol on the product, accessories (e.g. charger, headset, USB cable), battery, or accompanying documentation indicates that these components must not be disposed of with household waste.



Waste electrical and electronic equipment and batteries must be collected separately and returned to municipal collection points or retailers.

About radiation

Information on SAR (Specific Absorption Rate) certification

THIS DEVICE FULFILS THE INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device has been developed to ensure that it does not exceed the internationally recommended exposure limits for radio waves.

These guidelines were defined by an independent scientific organisation (ICNIRP) and contain a large safety margin to ensure the safety of all persons, regardless of their age and state of health. The guidelines on exposure to radio waves use a unit of measurement, known as the specific absorption rate or SAR. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR values within the ICNIRP guidelines for this device model are:

Highest SAR value for this phone model and coverage conditions:

SAR head	0.82 W/kg (10g)
SAR carried on the body	1.25 W/kg (10g)
SAR on the limbs (e.g., worn on the arm)	2.066 W/Kg (10g)

SAR values for carrying on the body were determined at a distance of 5 mm. To comply with the RF exposure guidelines for carrying on the body, the device should be positioned at least this distance away from the body.

Technical data

General technical data

Frequency	Band	Maximum power
GSM/2G	EGSM900: 880-915 MHz(TX), 925-960 MHz(RX)	32.59 dBm
	DCS1800: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	28.95 dBm
UMTS/	WCDMA 2100: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	22.32 dBm
	WCDMA 900: 880-915 MHz(TX), 925-960 MHz(RX)	22.44 dBm
LTE/FSS/4G	B1: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	23.86 dBm
	B3: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	23.86 dBm
	B7: 2500-2570 MHz(TX), 2620-2690 MHz(RX)	22.59 dBm
	B8: 880-915 MHz(TX), 925-960 MHz(RX)	23.74 dBm
	B20: 832-862 MHz(TX), 791-821 MHz(RX)	24.24 dBm
	B28: 703-748 MHz(TX), 758-803 MHz(RX)	23.72 dBm
BT	2402 MHz~2480 MHz	8.12 dBm

Operating times

Calling duration: approx. 9 hours

In idle status: approx. 300 hours

Idle mode

After the call has ended, the phone automatically returns to Idle mode after a maximum of 1 minute.

Accessories

Use only chargers, batteries and cables approved by Gigaset. Unauthorised accessories can cause damage to the device.

Plug-in power supply/charging cradle

 
Input: 100-240 V 50/60 Hz = 0.3 A
Output: 5 V ... 1000 mA

Power supply

USB-C adapter: DC 5V, min. 1 W, max. 5 W

Battery

Technology: Li-Ion
Capacity: 1000 mAh
Part number: V30145-K1310-X488



Power adapter

Manufacturer: Shenzhen Xin Chenming Technology Co., Ltd	
Commercial registration number: 91440300678568812C	
NO 6 Gem Three Street Community Tianliao Industrial Zone Gongming, Guangming New District, Shenzhen, Guangdong, PRC.	
Model identifier	C39280-Z4-C791 (EU version)
Input voltage	100 - 240 V
Input AC frequency	50/60 Hz
Output voltage	5.0 V
Output current	1.0 A
Output power	5 W
Average active efficiency	> 73.62 %
No-load power consumption	< 0.10 W

Index

A	
Acoustic profile	54
Alarm clock	34
Icon	14
Allow list	49
Appointment	
setting	35
Appointment, see Events	
B	
Background picture	
Using your own photo	32
Battery	
Charge status	14
charging	11
inserting	10
Belt clip	11
Block list	51
Bluetooth	32
C	
Calendar	35
Navigation	35
Call	
external	16
Information	19
International	16
Reject	17
Taking	17
Call list	19
delete	20
Open	19
Call number	
Assign to direct dialling key	33
Dialling	16
Incoming call	17
Call volume	18
Calling	
external	16
Calls	
From a call list	16
Chained	
SMS	24
Changing	
display language	44
Charging	
the battery	11
Control key	13
Creating	
events	36
D	
Date	
Set manually	43
Delete	
Events	37
Dialling	
from the directory	16
from the phone book	16
Direct dialling keys	33
Directory	
dialling numbers	16
Display	
changing display language	44
Idle status	12
setting	46
Display keys	13
Display language	44
E	
Enter text	15
Entering text	15
SMS	25
Exclusion of liability	60
F	
File manager	39
First steps	9
G	
Getting started	9
Guarantee Certificate	59
H	
Handsfree mode	17
Handsfree mode volume	18
I	
Icon	
Alarm clock	14
Battery charge status	14
Missed call	14
Silent	14
Vibration	14
Voice message (SMS)	14
Wireless communication	14
Icons	
Status bar	14
Inbox (SMS)	29
Input language	44
Input methods (SMS)	25

Inserting the battery	10, 11
Inserting the SIM card	9
Internal memory	
Manage through file manager.....	39
Management on a PC.....	39
K	
Keys	
control key.....	13
display keys.....	13
L	
Language	
Input	44
Phone settings	44
List of drafts (SMS)	25
Listen to a voice message	23
Lock/unlock the keypad	12
M	
Mailbox	23
Inquiry.....	23
Main menu	14
Making a call	
Using the direct dialling key	33
Making calls	
external.....	16
Memory status, SMS	31
Menu guidance	14
Missed call, icon	14
Mobile phone	
switch on/off.....	12
Mute the microphone.....	18
O	
Outbox (SMS).....	28
P	
Package contents	9
Phone book	21
Entries.....	21
opening.....	21
Phone book entries.....	21
Managing.....	22
Phone book entry	
Create	21
Delete	22, 50, 51, 52
Search.....	22
Photo	
Delete	32
Use as background	32
Preferred memory location (SMS)	32
Profile, acoustic	54
R	
Receiver volume.....	18
Receiving a	
text	29
Reset.....	46
Factory settings	46
Ringtone	
Melody.....	55
S	
Safety instructions	6
Sending a	
text (SMS)	24
Setting the message tone	57
Settings	
Allow list.....	49
Block list.....	51
Silent	
Icon	14
SMS.....	24
icon	14
input methods	25
Memory location.....	32
Memory status	31
Save	31
Sending not possible	28
Sent messages	27
Settings.....	31
SMS template	29
SMS templates	29
Status bar	14
Submenus	15
Switch microphone on/off.....	18
Switch off the wake-up call	35
Switch the microphone to mute	18
T	
Telephone	
operating.....	12
Telephoning	
Enter call number	16
Text	
Buffering.....	25
Text messages (SMS)	24
Texts	
Drafts.....	25
Time	
Set manually	43
Tones	
Messages	57
Ringing	55
U	
Use the loudspeaker when making a call	17

V	
Vibration	
Icon	14
W	
Wireless communication, quality.....	14
Writing a	
text (SMS)	24

All rights reserved. Rights of modification reserved.

Issued by

Gigaset Technologies GmbH
Frankenstr. 2, D-46395 Bocholt

© Gigaset Technologies GmbH 2025

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com