

Gigaset

GL40

The most up-to-date user guide
can be found at
www.gigaset.com/manuals

 


Contents

Overview	4
Menu overview	6
Safety information	11
First steps	16
Package contents	16
Getting started	17
Operating the cell phone	20
Switching the cell phone on/off	20
Activating the display	20
Using the Control key	21
Display keys	21
Icons in the status bar	22
Menu guidance	23
Entering text	24
Making/taking calls	25
Making calls using the keypad	25
Taking calls	27
Protection against unwanted calls (block list)	28
During a phone call	29
Call divert	30
Call lists	32
Phone book	34
Mailbox	36
Emergency calls (SOS)	37
SOS calls	37
SOS text message (SMS)	38
Activating the SOS alarm	39

Text messages (SMS)	40
Writing and sending a text message	40
Storing a text message temporarily (List of drafts)	43
Sent messages	44
Outbox	45
Templates	46
Receiving text messages	47
Text message settings	49
Further applications	51
Alarm clock	51
Calendar	53
Bluetooth	57
Camera and gallery	59
File manager	62
Settings	65
Date and time	65
Answering a call by folding open	66
Allow list and block list	67
Language	70
Display	71
Tones and signals	72
SIM cards and network operators	77
Resetting to the factory settings	79
Appendix	80
Customer support and warranty	80
Approval	80
Product care	80
Contact with liquid	81
Information on the disposal of electrical and electronic equipment	81
Technical data	81
Accessories	82

Overview

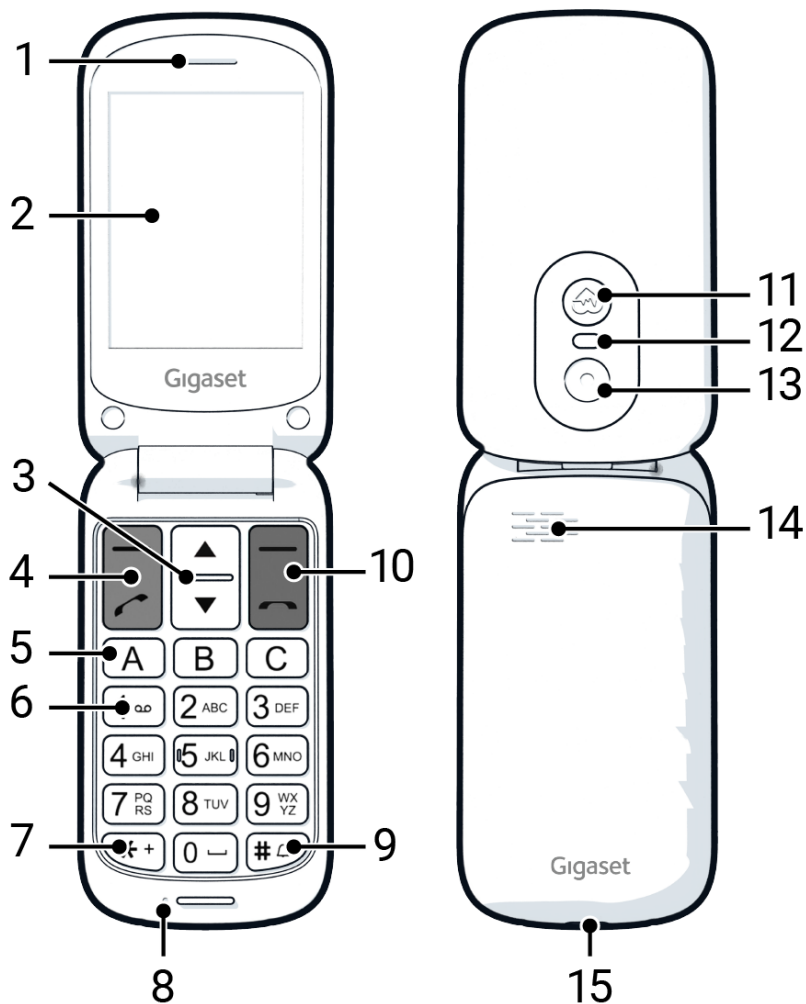

- 1 Receiver
- 2 Display
- 3 Navigation key:  Open menu
 Navigating through menus and lists
- 4 Left display key: Select function, depends on the screen display
Take call; dial number; open call list
- 5 Direct dialing keys: Speed dialing numbers
- 6 Key 1: Start network answering machine playback (press **longer**)
- 7 Star key: Enter * or + (for international calls)
- 8 Microphone
- 9 Hash key: Switch between vibration, silent and standard modes (press **longer**)
- 10 Right display key: End the call; cancel the function; return to the menu; switch device on/off
- 11 SOS key: Initiate SOS calls
- 12 Torch
- 13 Camera
- 14 Speaker
- 15 USB connection port: Connect a USB cable

Menu overview



Not all functions described in this user guide are available in all countries or with all network providers.

 
Open main menu:

- ▶ While the cell phone is in idle mode, press one of the control buttons




Contacts

Call lists




All calls
Missed calls
Dialed calls
Received calls
Rejected calls
Delete all
Call timers

 Message



Write message
Inbox
Outbox
Drafts
Sentbox
Templates
Broadcast message
Voice mail server
Delete all
SMS settings
Message capacity

 SOS



Status
SOS number list
SOS SMS On/Off
SOS SMS
Warning tone status

Gallery**Camera****Tools**

Calendar	
Alarm	
Bluetooth	Bluetooth
	Bluetooth visibility
	Paired device
	Transferring files
	Device name
	Bluetooth file storage
	Help
My files	Phone
	SD card
Torch	
Special	

Settings

Phone settings	Time & date	Set time
		Set date
		Time format
		Date format
		Date Separator
	Allowlist	Update time settings
		Status
		Allowlist
		Status
		Blocklist
	Blocklist	Display language
		Writing language
		Wallpaper settings
		Idle display settings
		Contrast
	Language settings	Backlight
		Keypad backlight time
		Ring settings
		Adjust volume
		Ring type
	Display	Other alert rings
		Torch for incoming call
	Audio	
	Auto power on/off	

Call settings	Flip to answer	
	Call forwarding	
	Call waiting	Turn on
		Cancel
		Check status
	Call barred	All outgoing calls
		All incoming calls
		Incoming calls when roaming
		ISD calling
		Dial when INTL roaming
		Cancel all barring
	Hide ID	
	Others	Call time minute reminder
		Auto redial
		Vibration when connected
		Reply SMS after reject

Layout

Audio profiles

Battery	Notification Status
	Notification number
	Notification SMS
	Battery life+(max.80%)

Speed dial

Security	PIN	PIN
		Modify PIN
	Modify PIN2	
	Phone locked	
	Modify the phone password	
	Fixed dialling number	Fixed dialling mode
		Fixed dialling number

Connections	APN settings
	Network selection
	Network type
	VoLTE

Restore factory settings

Notation in the user guide

This chapter describes the various forms of notation used in the user guide and the respective significance.

Icons

	Warnings, which, if not observed, can result in personal injury or damage to equipment.
	Important information regarding the function and proper handling or functions that could generate costs.
	Condition which must be fulfilled in order to carry out the following action.
	Additional helpful information.

Working steps

- 1 First working step.
 - 2 Further working step.
- Result of the series of working steps.
-

Display texts

Display texts are texts which appear on the display of the mobile phone. Display texts are displayed in **bold print** in this guide.

Example:

Press the **OK** display key.

Control key

Display of the Control key in the User Guide:

-  Press the Navigate Down key
-  Press the Navigate Up key
-  Press the Navigate Up or Down key

Safety information

Please read the following information and instructions carefully. Failure to comply with these instructions may result in personal injury and damage to the device, as well as violations of applicable laws.

Please explain the content of this document as well as the potential risks involved when using the device to your children.

General information

- For your own safety, only use original Gigaset accessories or those approved by Gigaset for the cell phone. The use of accessories which are not compatible could damage the cell phone and be the cause of hazardous situations. Original accessories can be obtained from Gigaset customer service (refer to Customer Service → p. 80).
- The cell phone is splashproof according to the IP54 standard. If your cell phone has been exposed to water, dry it and the device openings (microphone/loudspeaker/USB Type-C port) with a lint-free cloth to remove any water droplets.
- Permissible temperature range for charging and operation: 0 - 40° C. High temperatures could reduce the service life of electronic devices, damage the battery or deform and melt plastic parts. If the cell phone is to be used or stored in freezing areas, condensation could develop inside the phone and damage the electronic circuitry.
- The cell phone must not be used or stored in dusty or dirty locations. Dust can be the cause of malfunction of the cell phone.
- Switch off your cell phone in potentially explosive atmospheres and observe all warnings. Potentially explosive atmospheres also include those locations for which it is normally recommended that vehicle engines be switched off. In such places, flying sparks can cause explosions or fires resulting in personal injury and possibly death. These areas include: Petrol stations, chemical plants, transport or storage areas for hazardous chemicals, areas below deck on ships, areas in which the air contains chemical substances or fine particles (e.g. particles of dust or metal powder).
- Short-circuiting or modifying the cell phone is prohibited – there is a risk of personal injury, electric shock, fire or damage to the charger.

Battery and charging process

- To avoid battery fluid leakage, overheating, explosion or fire, never incinerate or heat batteries and never dispose of them in a fire or explosion-prone environment. Do not disassemble, weld or modify the battery. Do not store the battery in an environment subject to strong mechanical influences.
- Do not use sharp objects, such as screwdrivers, to touch or puncture the battery. There is a risk of battery fluid leaking, the battery overheating, exploding or catching fire and burning. Crushing, heating or incinerating batteries is strictly prohibited.
- Eye contact with the battery electrolyte can cause blindness. If electrolyte enters the eyes, do not rub the eye with your hand. Immediately flush the affected eye completely with clean water and seek medical attention. There is a risk of skin burns if the electrolyte comes into contact with the skin (or clothing). Immediately rinse the skin or clothing completely with soap and clean water and seek medical attention if necessary.
- Never use the batteries for any purpose other than that specified. Never use a damaged battery. If the battery becomes hot, discolored, deformed or leaks during use, charging or storage, you must replace the battery with a new one immediately for safety reasons.
- The battery temperature rises during charging. Do not store the battery in the same compartment as flammable products – there is a risk of fire.
- Do not charge the battery for more than 12 hours.
- Only charge the device indoors. During the charging process, do not hold any telephone conversations and do not dial any phone numbers.
- The electrical socket must be easily accessible during charging.
- There is a risk of electric shock during a thunderstorm.
- Do not use the charger if the power cable is damaged or there is no battery in the cell phone – there is a risk of electric shock or a risk of fire in such cases.

Headphones



High volumes can damage hearing.

Listening to music or conversations through headphones at high volumes can be uncomfortable and cause permanent hearing damage.

To prevent a loss of hearing, avoid listening at high volume levels for long periods of time.

Use in hospitals / Medical devices

- The function of medical devices could be impaired if used in the vicinity of your product. Observe the technical conditions in your environment, e.g. in medical practices.
- If you use a medical product (e.g. a pacemaker), consult with the product manufacturer prior to use. They can provide information on the sensitivity of the device with regard to external, high-frequency power sources.
- Pacemakers, implanted cardioverter defibrillators:
When switching on the cell phone, please pay attention that the distance between the cell phone and implant is at least 152 mm. To reduce potential interference, use the cell phone on the opposite side to the implant. In the event of possible interference, please switch the cell phone off immediately. Do not carry the cell phone in a shirt pocket.
- Hearing aids, cochlea implants:
Some digital, wireless devices can cause interference in hearing aids and cochlea implants. If interference occurs, please contact the manufacturer of such products.
- Other medical devices:
If you and the people in your environment use other medical devices, please contact the relevant manufacturer as to whether such devices are protected from radio frequency signals in the environment. You can also contact your doctor with regard to this.

Emergency calls

- Ensure that the cell phone is linked to the GSM network and switched on. If necessary, enter the emergency number and carry out your call.
- Inform the member of staff in the emergency call center with regard to your location.
- Only end the call when the member of staff in the emergency call center has permitted you to do so.

Children and pets

- Keep the cell phone, batteries, chargers and accessories out of reach of children and pets. Children and/or pets may swallow small parts and suffer choking and other hazards. Children may only use the cell phone when supervised by an adult.

Safety information

Aircraft, vehicles and road safety

- Switch the cell phone off in an aircraft.
Please observe the applicable restrictions and regulations.
Wireless devices can interfere with the functionality aeronautical equipment. It is essential to follow instructions from aircraft personnel regarding using the cell phone on an aircraft.
- As the driver of a vehicle, the main priority is: Safety in road traffic and for road users.
Using the cell phone while driving could distract your attention leading to dangerous situations. In addition, it contravenes current, applicable laws.

SIM cards, memory cards and data connection cables

- Do not remove the cards from the cell phone while sending or receiving data: Doing so increases the risk of loss of data and damage to the cell phone or memory cards.

Defective devices

- Dispose of defective devices or have them repaired by our customer service department; such devices could interfere with other wireless services.
- If the cell phone is treated roughly, e.g. allowed to fall, the display could break and the electronic circuitry and sensitive interior parts could be damaged.
- Do not use the device if the display is cracked or broken. Glass or plastic splinters can injure the hands and face.
- If the cell phone, battery or accessories malfunction, please contact your Gigaset Service Center regarding an inspection.

Further important information

- Never shine the flashlight directly into the eyes of people or animals. If the flashlight is pointed too close to a person's eye, there is a risk of temporary loss of vision or damage to eyesight.
- If the device becomes hot, please put it to one side for a while and cancel any programs which are being executed at the time. If you come into contact with a device which is hot, there is a risk of slight skin irritation, e.g. redness of the skin.
- Do not paint or varnish the cell phone. Varnish/paint could damage parts of the cell phone and cause operational breakdowns.

Radiation (SAR – Specific Absorption Rate)

SAR limit for mobile devices (EU limit based on ICNIRP guidelines):

on the head/body (when using the phone): 2.0 W/kg; on limbs (e.g. on the arm): 4.0 W/kg

Maximum SAR values for this model (averaged over 10 g of tissue):

on the head (when using the phone):	1.02 W/kg (10 g)
on the body (e.g. in your trouser pocket):	1.43 W/kg (10 g)
on limbs (e.g. on the arm):	2.51 W/kg (10 g)

When worn on the body, a minimum distance of 5 mm must be maintained.

First steps

This chapter describes the contents of the package and how to start operating the cell phone for the first time.

Package contents


- Cell phone Gigaset GL40 including battery
- USB-C to USB-C cable
- Charger
- Quick Start Guide

Check the package contents are complete prior to starting up the cell phone. In case of doubt, contact our customer service.


Getting started

Inserting the SIM and memory cards

You can insert a nano-SIM card and a micro-SD memory card into the cell phone.

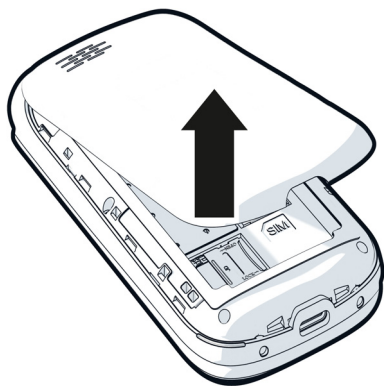


- 1 Insert a suitable tool into the recess in the left corner on the back.
- 2 Prise the battery compartment cover upwards to open it.

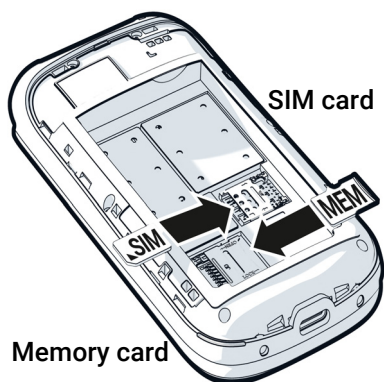


- 3 Open the safety bar.
 - 4 Insert the SIM card into the SIM card slot. Pay attention that the SIM card is inserted properly aligned.
 - 5 Close the safety bar.
 - 6 Secure the safety bar.
 - 7 If desired, insert a memory card into the memory card slot and secure the safety bar.
- You have inserted a SIM card and memory card in the cell phone.

Inserting the battery and closing the cover

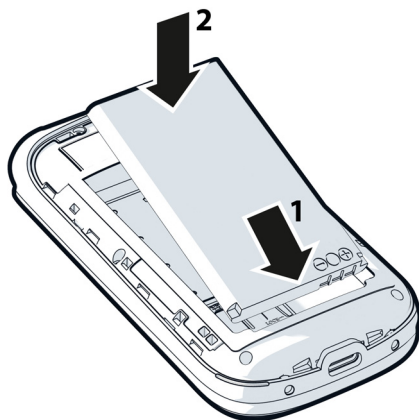


- 1 Insert the battery as illustrated. Pay attention that the battery is inserted properly aligned.

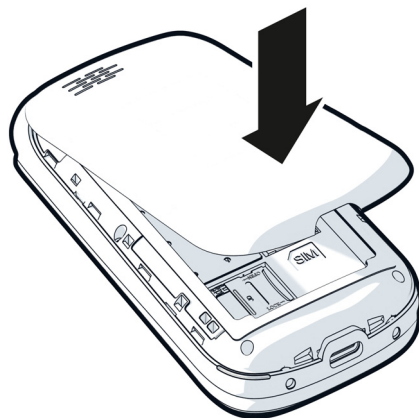


- 2 Replace the battery compartment cover as illustrated.
- 3 Press the cover down carefully to close it. The battery compartment locks in place with an audible click.
 - You have inserted the battery in the cell phone.

Charging the battery

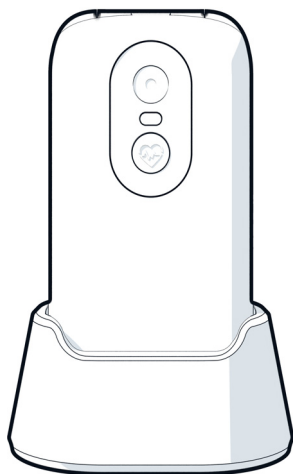

- 1 Insert the USB plug on the charging cable in the charger
- 2 Place the cell phone in the charger.

or

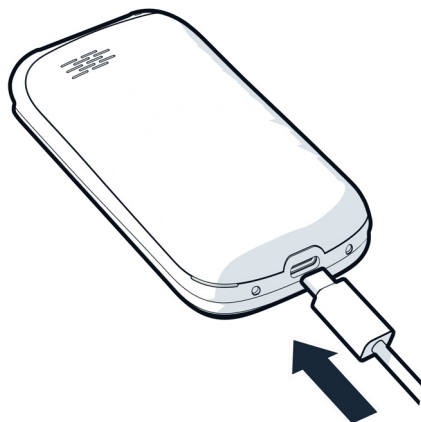

- 1 Insert the USB plug on the charging cable in the USB port on the bottom of the cell phone.
 - 2 Connect the free USB plug on the charging cable to a suitable plug-in power supply unit (not contained in the package supplied).
 - 3 Connect the plug-in power supply to a properly installed power socket.
- You have connected the cell phone to a power source. The battery is being charged.

Ensure the battery is charged fully before starting to use the cell phone for the first time.

The battery is fully charged when the charge icon  in the icon bar is completely filled.



If you have set that the battery should only be charged to 80 %, the charge indicator remains with 4 bars and the battery only charges to 80 %.

Operating the cell phone

This chapter describes the basic steps for operating the cell phone.

Switching the cell phone on/off

Switch the cell phone on:

- 1 Press the right-hand display key longer.
- 2 Enter the PIN related to the SIM card inserted using the keypad  on the cell phone.



The PIN was supplied together with the SIM card by your cell phone provider. In case of doubt, contact your cell phone provider.

- 3 Confirm the selection by pressing the **OK** (→ p. 21) key in the display.
 - ▶ You have switched on the cell phone.

Switch the cell phone off:

- 1 Press the right-hand display key longer.
 - ▶ You have switched off the cell phone.
-

Activating the display

The lighting in the display switches off automatically after the set time (→ p. 71) (idle status). This function reduces the battery usage of the cell phone.

Switch the display on:

- 1 Press any key or fold open the cell phone.
 - ▶ You have switched on the display of the cell phone.

Using the Control key




The Control key, also referred to as the Navigation key, serves to navigate through menus and input fields. The control key is located between the left display key and right display key.

Functions of the Control key

In idle status:		Open the menu
		Open the menu
During a call:		Raise caller volume for the receiver/hands-free function
		Lower caller volume for the receiver/hands-free function
In the menus:		Move upwards in the list of menu entries
		Move downwards in the list of menu entries
During text input:		Move one text field upwards
		Move one text field downwards

Display keys

The display keys are used to execute the functions indicated in the display. The display functions are indicated at the bottom left and bottom right of the cell phone display and are dependent on the menu currently displayed.

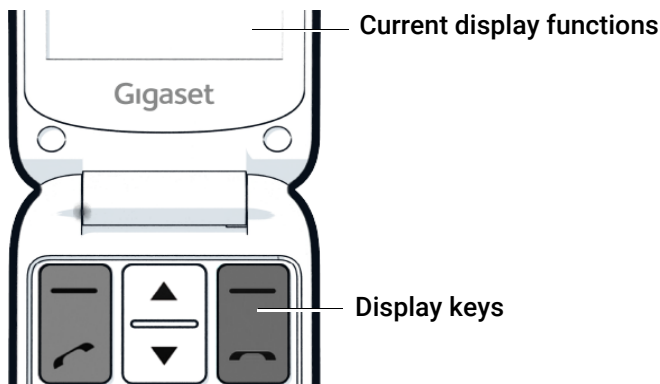

- 1 Press the left-hand or right-hand display key.
- You have executed the display functions indicated in the display.

Icons in the status bar

The icons in the status bar at the top edge of the display indicate current settings and the operating status of the cell phone:



Vibration is activated, ringing tone is deactivated



Silent function is activated



Missed call in call list



Alarm clock is activated



Text message or message received

Wireless communication for SIM card



The number of bars in the icon indicates the quality of the current connection. The current network speed is displayed next to the symbol.

 
Battery charge status



Empty



Approx. 60 %



Full

The bars in the indicator light up in succession during the charging process.

Menu guidance

The cell phone menu is comprised of a main menu and several submenus.

To provide a better orientation, the complete menu overview is depicted in this User Guide: → p. 6

Main menu

The functions in the main menu are indicated by an icon and a name.

Navigation in the main menu:

- 1 Press the one of the Control keys  to open the menu.
- 2 Use the Control key  to select a submenu (e.g. Settings).
 - ▶ The menu currently selected has a colored background.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the submenu.

Submenus

The functions in the submenus are displayed in list form.

The menu entry currently selected is highlighted in white. If the name of the entry does not fit in one line, the text runs through.

If there are further entries, a scroll bar appears which indicates the position of the entry in the submenu.

Access a function:

- 1 Select a submenu (e.g. Settings).
- 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the submenu selected.

Switch to previous menu level:

- 1 Press the **Back** display key.
 - ▶ The previous menu level appears.

Entering text

Press the corresponding key once for each letter (e.g. "Hello" 4 3 5 5 6). The software recognizes the word automatically. Use the arrow keys  /  to switch between the suggested words.

With "New word" you can select letters by pressing the key with the desired letter several times.

Right display key (red) : 1 Correct your entry.

Left display key (green) : 1 Apply the word.

 key: 1 Copy the word and space.

Press the hash key : 1 Select uppercase/lowercase, input mode, number input or language.
2 Confirm with the left display key (green) .

Enter special characters in edit mode (when writing text messages)

► Press the star key 

 In order to write a text (SMS) there are several options available (→ p. 41).

Making/taking calls

This chapter describes the options available with which to telephone using the cell phone. This includes the various ways to make and take calls.

It also includes the description of functions which can be used during a call.

Making calls using the keypad

You can make national and international calls directly using the dialing keys on the cell phone keypad.

Dial a national phone number:

- 1 Enter the relevant phone number of the contact required, including access code, using the keypad .
- 2 Press the **Options** display key.
- 3 Select **Call**.
- 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have dialed a phone number using the dialing keypad.

Dial an international phone number:

- 1 Press the star key  twice until the + character is inserted.
- 2 Use the keypad  to enter the desired phone number, including the international dialing code (e.g. +43).
 - ▶ You have dialed an international phone number.

You can delete digits or cancel dialing a phone number:

Delete digits: 1 Press the **Delete** display key.

Cancel dialing 1 Press the **Back** display key.

Making calls from the phone book

- 1 Press the **Contacts** key in the display.
- 2 Select the entry required.
- 3 Press the **Options** display key.
- 4 Select **Call**.
 - ▶ You have dialed a phone number from the phone book.

Detailed information on the phone book: → p. 34

Making calls from a call list

 
The call lists contain the last calls taken, rejected and missed.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Call lists**.
- 3 Select the required call list (e.g. missed calls).
- 4 Select the entry required.
- 5 Press the **Options** display key.
- 6 Select **Call**.
 - ▶ You have dialed a phone number from the call list.

Detailed information on the call lists: → p. 32

Making calls with the direct dialing keys

You can assign important phone numbers to the direct-dialing keys A, B and C.



Select a direct dialing key:

- 1 Press the required direct dialing key (A, B or C) **longer**.
- 2 Confirm the request using the display key **OK**.

or

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Speed dial**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required key A, B or C.
- 7 Press the **Options** display key.
- 8 Select **Edit**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Enter the phone number using the keypad .
- 11 Confirm the selection by pressing the **OK** key in the display.

or

- 1 Select the required key A, B or C.
- 2 Select **Options**.
- 3 Select **Import contacts**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select the entry required.
- 6 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have assigned a phone number to a direct dialing key.

Dialing a phone number using a direct dialing key

- 1 Press the required direct dialing key A, B or C longer.
- ▶ You have dialed the phone number assigned to the direct dialing key.

Taking calls

An incoming call is indicated by a ring tone from the cell phone. The display of the cell phone shows the phone number of the caller (if transmitted). If the caller is in the phone book, the name assigned appears.

Take a call:

- 1 Press the Call key .

or

- 1 Fold open the cell phone. This function must be enabled first (→ p. 66).
- ▶ You have taken an incoming call.

Rejecting a call:

- 1 Press the Hang Up key .

Ending a call in progress:

- 1 Press the Hang Up key .

or

- 1 Fold the cell phone closed. This function must be enabled first (→ p. 66).
- ▶ You have ended a phone call which was in progress.

If you do not take an incoming call, it is recorded in the **Missed calls** call list (→ p. 32).

Settings for incoming calls

Activating/deactivating ring tone and/or vibration: → p. 72

Protection against unwanted calls (block list)

You can add phone numbers to a block list.

Calls from these numbers are forwarded directly to the mailbox and not indicated by the cell phone. You can create entries in the block list manually or apply phone numbers from the phone book.

Adding phone numbers to the block list

You can add up to 50 phone numbers to the block list.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Blocklist numbers**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Blocklist numbers**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Press the **Options** key in the display.

Add phone numbers manually:

- 11 Select **New**.
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Use the keypad  to enter the name and phone number.
- 14 Press the **Save** display key.

or add a number from the phone book:

- 11 Select **Import contacts**.
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Select the entry required.
- 14 Press the **Options** display key.
- 15 Select **Mark**.
- 16 Press the **Options** display key.
- 17 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have assigned a phone number to the block list.



The block list is switched on for each new entry.

During a phone call

The functions described here are available while a phone call is in progress.

Handsfree mode

You can use the loudspeaker of the cell phone to make calls (hands-free). This means that you have both hands free during the conversation.

Activate Handsfree mode:

- 1 Press the **Options** key in the display.
- 2 Select **H-free**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have switched Handsfree mode on.
The caller can be heard via the loudspeaker.

Deactivate Handsfree mode:

- 1 Press the **Options** key in the display.
- 2 Select **Earpiece**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have switched Handsfree mode off.
The caller can be heard via the receiver.

Adjusting the loudspeaker during a phone call

The volume of the caller can be adjusted to different levels. The setting adjustment applies for the receiver and loudspeaker for Handsfree mode.

Adjust the volume during a phone call:

- 1 Press the Control key  to raise the volume.
 - 2 Press the Control key  to lower the volume.
- or
- 1 Press the **Options** key in the display.
 - 2 Select **Adjust volume**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Press the Control key  to raise the volume.
 - 5 Press the Control key  to lower the volume.

 The setting is automatically saved after around 3 seconds.

Mute the microphone

If the microphone is muted, the caller can no longer hear you.

Mute the microphone:

- 1 Press the **Options** key in the display.
- 2 Select **Mute**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have muted the microphone.
The caller can no longer hear you.

Switch the microphone back on:

- 1 Press the **Options** key in the display.
- 2 Select **Cancel mute**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have switched the microphone on.
The caller can hear you again.

Call divert

In the case of call divert, calls are forwarded to another phone number or to the mailbox.



Not all network providers support the call divert function.

Setting up call divert

Before the call divert function can be set up, the call divert function must be switched on.

Switch on the call divert function:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call forwarding**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select one of the available options.
- 9 Press the **Select** display key.
- 10 Select **Turn on**.
- 11 Select the destination for the diverted call.

Divert to a phone number:

- 1 Select **Divert to number**.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Enter the phone number using the keypad .
- 4 Only for **Call forwarding on no reply**:
Select one of the specified response times.
- 5 Confirm the selection by pressing the **OK** key in the display.

Divert to a mailbox:



The number of the mailbox is assigned to Key 1 (→ p. 36).

- 1 Select **Divert to voicemail**.
- 2 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have set up the call divert to another phone number or the mailbox.

Revoking call divert

Switch off the call divert function:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call forwarding**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Cancel all diverts**.
- 9 Confirm the selection by pressing the **Select** key in the display.
- ▶ You have switched the call divert function off.

Call lists

The cell phone saves different types of calls (missed, accepted and outgoing calls) in call lists.

Opening a call list

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened an overview of the call lists.

The overview of the call lists indicates submenus for every type of call:

- All calls
- Missed calls
- Dialed calls
- Received calls
- Rejected calls

The **All calls** menu contains a summary of the calls of all types of call.

Beside the name of the list is the number of respective entries contained in the list.

- 1 Select the required call list (e.g. missed calls).
- 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the required call list.

Information on a call

- Phone number or name if the contact is contained in the phone book
- Date and time



If there is at least one missed call, the  icon appears in the status bar.

Managing the entries in the call lists

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the call list required.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the entry required.
- 7 Select **Options**.

Dial a number:	▶ Select Call .
Show information regarding the call:	▶ Select Details .
Write a text message (SMS):	▶ Select Write message .
Copy number in phone book:	▶ Select Add to contacts .
Copy number in block list:	▶ Select Add to Blocklist .
Copy number in allow list	▶ Select Add to Allowlist .
Delete an entry:	▶ Select Delete .
Delete all entries from a call list:	▶ Select Delete all .

Deleting a call list

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Delete all**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have deleted the contents of the call lists.

Call timer

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Call lists**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call timers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The following information is shown:

Last call:	▶ Shows you the call duration of the last call.
Received calls:	▶ Shows you the call duration of incoming calls.
Dialed calls:	▶ Shows you the duration of the outgoing calls.
Call history:	▶ Shows you the duration of all calls.

Resetting the call timer

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Call lists**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Call timers**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Press the **Reset** key in the display.
 - 7 Confirm the selection by pressing the **OK** key in the display.
- You have reset the call timer.
-

Phone book

The phone book can contain up to 500 entries. Entries can be stored in the internal phone memory or on the SIM card.

You can create phone book entries manually, transfer them from a call list or transfer a phone number to the phone book when dialing it.

Opening the phone book

- 1 Press the **Contacts** key in the display.

or

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Contacts**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
-

Phone book entries

The phone book contains all the phone book entries. They are sorted alphabetically.

An entry contains the following information:

- Name

Information on contacts

An icon indicates where the phone book entry is stored:



On the cell phone



On a SIM card

Creating a phone book entry

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Contacts**.
- 3 Press the **Options** display key.
- 4 Select **New**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select where the new phone book entry should be stored (SIM card or phone memory).
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Name**.
- 9 Press the **Options** display key.
- 10 Press the **Edit** display key.
- 11 Enter the name using the keypad .
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Select **Mobile** or **Home number**.
- 14 Press the **Options** display key.
- 15 Select **Edit**.
- 16 Enter the phone number using the keypad .
- 17 Confirm the selection by pressing the **OK** key in the display.
- 18 Press the **Options** key in the display.
- 19 Press the **Save** display key.
 - You have created a phone book entry.

Further information on entering text: → p. 24

Searching for a phone book entry

- 1 Use the  keypad to enter the name or number.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - Entries which correspond to the input are displayed.
- or
- 1 Scroll through the list using the Control key .

Making calls from the phone book

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Contacts**.
 - 3 Select the entry required.
 - 4 Press the **Options** display key.
 - 5 Select **Call**.
- ▶ The contact selected is called.

Editing/Managing phone book entries

- 1 Select **Contacts**.
- 2 Select the entry required.
- 3 Select **Options**.
- 4 Select one of the following options:

Call contact:	▶ Select Call .
Display contact:	▶ Select View .
Write a text message (SMS):	▶ Select Write message .
Delete a contact:	▶ Select Delete .
Delete multiple contacts:	▶ Select Delete multiple .
Add contact:	▶ Select New .
Import/export contact:	▶ Select Import/Export .
Add to allow list:	▶ Select Add to Allowlist .
Add to block list:	▶ Select Add to Blocklist .
Send a business card:	▶ Select Send vCard .
View memory status:	▶ Select Others .
	▶ Select Memory status .

Mailbox

If your phone provider provides you with a mailbox (answering machine), a caller can leave a message for you if you do not take the call.

In order to play and listen to voice messages in your mailbox, you need the phone number of the mailbox. If necessary, ask your mobile service provider with regard to the call number.

You can listen to the messages on the mailbox:

- 1 Press and hold the  key.
- ▶ You have listened to the messages on your mailbox.

Emergency calls (SOS)

The cell phone offers the following SOS functions:

- SOS calls
- SOS SMS (text message)
- SOS alarm



Do not use local, national or international emergency numbers.

SOS calls

The SOS key provides a private emergency call function. By pressing the SOS key, you can call up to 5 phone numbers and/or send a text message.

Activating/Deactivating the SOS emergency call function

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **SOS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Status**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **On/Off**.
 - 7 Confirm the selection by pressing **OK** ( = selected).
- You have activated the SOS calls function.

Entering SOS numbers

Enter the phone numbers to be dialed when the SOS key is pressed. You can enter up to 5 phone numbers.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SOS number list**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select an empty memory location (<empty>).
- 7 Select **Options**.
- 8 Select **Edit**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Enter the phone number using the keypad .
- 11 Confirm the selection by pressing the **OK** key in the display.

or

- 1 Complete working steps 1 to 9.
- 2 Select **Import contacts**.
- 3 Select the entry required.
- 4 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have entered an emergency call number.

SOS text message (SMS)

In addition to the SOS calls, you can also send SOS text messages (SMS). There is a standard text already provided. You can change this text. When the function is activated, text messages are sent to the emergency call numbers set up.

Activating/Deactivating SMS emergency notifications

- 1 Press one of the Control keys  to open the menu.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SOS SMS On/Off**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **On/Off**.
- 7 Confirm the selection by pressing **OK** ( = selected).
- ▶ You have activate the SOS text message (SMS) function.

Changing the content of the SOS text message

You can change the pre-installed, standard SOS text message and enter your own individual text.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SOS SMS**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The standard text appears in the display.
- 6 Delete the existing text by pressing the **Delete** key in the display
- 7 Enter the text required using the keypad .
- 8 Select **Options**.
- 9 Select **Save**.
 - ▶ You have changed the content of the SOS text message.

Information on entering text for SMS text messages: → p. 41

Activating the SOS alarm

When the SOS alarm is activated, the cell phone issues a loud acoustic alarm signal after the SOS key has been pressed.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Warning tone status**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **On/Off**.
- 7 Confirm the selection by pressing **OK** ( = selected).
- ▶ You have activated the SOS alarm function.

Text messages (SMS)

You can send and receive text messages (SMS).

Writing and sending a text message



A text message can contain up to 612 characters. In the case of more than 160 characters, the text message is sent as a **chained** text message (up to 4 individual text messages).

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.

Enter number:

- 1 Enter the phone number of the contact using the keypad .
- 2 Press the Control key .

or

Using Contacts:

- 1 Select **Options**.
- 2 Select **Contacts**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the entry required.
- 5 Select **Options**.
- 6 Select **Mark**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Options**.
- 9 Select **OK**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Press the Control key .

- 6 Enter the text required using the keypad .
- 7 Select **Options**.
- 8 Select **Send**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- You have sent a text message.

Discarding a text written

If you want to discard a text which you have entered:

- 1 Select **Options**.
 - 2 Select **Exit**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Confirm the request **Exit without saving?** using the Display key **OK**.
- You have discarded the text entered.



If a text message cannot be sent, it is filed in the out box (→ p. 45).

Input methods

Each key between 2 and 9 and the 0 key are assigned several letters and digits. As soon as a key is pressed, the possible characters are shown at the bottom of the display. The selected character is highlighted.

The cell phone offers you two input methods. You can select the letters and numbers manually or the cell phone offers you a selection of words.

Text entry without input assistance:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the down  Control key.
- 7 Press the Hash key .
- 8 Select one of the options.
- 9 Press the relevant key **briefly** several times in succession if necessary, until the required character is displayed.

Text entry with input assistance:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the Hash key .
- 7 Press the down  Control key.
- 8 Select one of the options.

Text messages (SMS)

- 9 Press the desired letters.
- 10 Use the Control key  to select the required word.
- 11 Confirm the selection by pressing the **OK** key in the display.

Moving the cursor (left/right):

- 1 Press the up  or down  Control key.

Change between lower case and upper case or number entry as necessary:

- 1 Press the Hash key .
- 2 Press the down  Control key.
- 3 Select one of the options.
- 4 Confirm the selection by pressing the **OK** key in the display.

Entering special characters:

- 1 Press the Star key .
- 2 Select the special character required.
 - ▶ You have selected the special character required.

Changing the input language

The input language defines which characters are available for entering text.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the Hash key .
- 7 Press the down  Control key.
- 8 Select **Writing language**.
- 9 Select the input language required.
- 10 Confirm the selection by pressing **OK** ( = selected).
 - ▶ You have changed the input language.

Storing a text message temporarily (List of drafts)

You can store texts temporarily, to be changed and sent later.

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Write message**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Enter the text required using the keypad .
 - 7 Select **Options**.
 - 8 Select **Save as draft**.
 - 9 Press the **Options** display key.
 - 10 Confirm the selection by pressing the **OK** key in the display.
- You have saved the text message as a draft in the draft list.

Editing drafts

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Drafts**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
- The list of drafts appears in the display.
- 6 Select the draft required.
 - 7 Press the **Options** display key.
 - 8 Select one of the following options:
- | | |
|--------------------|---|
| View draft | <ol style="list-style-type: none"> 1 Select View. 2 Confirm the selection by pressing the OK key in the display. |
| Delete draft: | <ol style="list-style-type: none"> 1 Select Delete. 2 Confirm the selection by pressing the OK key in the display. |
| Delete all drafts: | <ol style="list-style-type: none"> 1 Select Delete all. 2 Confirm the selection by pressing the OK key in the display. |
| Edit text message: | <ol style="list-style-type: none"> 1 Select Edit. 2 Confirm the selection by pressing the OK key in the display. 3 Enter the text required using the keypad . |

Text messages (SMS)

- | | |
|-------------------------|---|
| Move text message: | 1 Select Move . |
| | 2 Select Phone/SIM . |
| | 3 Confirm the selection by pressing the OK key in the display. |
| Highlight text message: | 1 Select Mark . |
| | 2 Select one of the options. |
| | 3 Confirm the selection by pressing the OK key in the display. |
| Sort text messages: | 1 Select Sort . |
| | 2 Select one of the options. |
| | 3 Confirm the selection by pressing OK (● = selected). |

Sent messages

Sentbox lists all the texts you have sent.



The **Save sent messages** function is activated (→ p. 50).

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Sentbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 The list of sent message is displayed.
- 7 Select the required text.
- 8 Select **Options**.
- 9 Select one of the following options:

Read text message:	1 Select View .
Delete text message:	1 Select Delete .
	2 Confirm the selection by pressing the OK key in the display.
Delete all text messages:	1 Select Delete all .
	2 Confirm the selection by pressing the OK key in the display.

- | | |
|--------------------------|---|
| Send to another contact: | <ol style="list-style-type: none"> 1 Select Forward. ▶ The text message is displayed. 2 Enter the phone number of the contact using the keypad . 3 Select Options. 4 Select Send (→ p. 40). 5 Confirm the selection by pressing the OK key in the display. |
| Move text message: | <ol style="list-style-type: none"> 1 Select Move. 2 Select Phone/SIM. 3 Confirm the selection by pressing the OK key in the display. |
| Highlight text message: | <ol style="list-style-type: none"> 1 Select Mark. 2 Select one of the options. 3 Confirm the selection by pressing the OK key in the display. |
| Sort text messages: | <ol style="list-style-type: none"> 1 Select Sort. 2 Select one of the options. 3 Confirm the selection by pressing OK ( = selected). |

Outbox

All the texts which could not be sent, e.g. because no connection could be established or the phone number was unknown, are stored on the outbox.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Outbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 The list of messages not sent is displayed.
- 7 Select the required text message.
- 8 Select **Options**.
- 9 Select one of the following options:

- | | |
|--------------------|---|
| Read text message: | <ol style="list-style-type: none"> 1 Select View. |
|--------------------|---|

Text messages (SMS)

- | | |
|---------------------------|---|
| Send text message: | 1 Select Resend . |
| | 2 Confirm the selection by pressing the OK key in the display. |
| Delete text message: | 1 Select Delete . |
| | 2 Confirm the selection by pressing the OK key in the display. |
| Delete all text messages: | 1 Select Delete all . |
| | 2 Confirm the selection by pressing the OK key in the display. |
| Move text message: | 1 Select Move . |
| | 2 Select Phone/SIM . |
| | 3 Confirm the selection by pressing the OK key in the display. |
| Highlight text message: | 1 Select Mark . |
| | 2 Select one of the options. |
| | 3 Confirm the selection by pressing the OK key in the display. |
| Sort text messages: | 1 Select Sort . |
| | 2 Select one of the options. |
| | 3 Confirm the selection by pressing OK (● = selected). |

Templates

The templates contain a selection of suggested texts. This template can be edited or sent directly.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Templates**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - The list of text message templates appears in the display.
- 6 Select the required text message template.
- 7 Select **Edit**.
- 8 Select one of the following options:

Edit text message template:	1 Enter the text required using the keypad  .
-----------------------------	--

- | | |
|---------------------------------|---|
| Delete text message templates: | 1 Press the Delete display key. |
| Select a text message template: | 1 Confirm the selection by pressing the OK key in the display. |

Receiving text messages

Incoming texts are stored in the inbox. The receipt of a new text is indicated by a notification tone (→ p. 74) and a message **new message** in the display.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- ▶ The list of received messages is displayed.

If there are unread texts in the inbox, the  icon appears in the icon bar.

Reading text messages

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select **View**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have read the text received.

Editing text messages

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select one of the following options:

Reply to text message:	1 Select Answer. 2 Confirm the selection by pressing the OK key in the display. 3 Enter the text required using the keypad . 4 Select Options. 5 Select Send (→ p. 40).
Delete text message:	1 Select Delete. 2 Confirm the selection by pressing the OK key in the display.
Delete all text messages:	1 Select Delete all. 2 Confirm the selection by pressing the OK key in the display.
Call sender:	1 Select Call. 2 Confirm the selection by pressing the OK key in the display. ▶ The call number is dialed.
Move text message:	1 Select Move. 2 Select Phone/SIM. 3 Confirm the selection by pressing the OK key in the display.
Highlight text message:	1 Select Mark. 2 Select one of the options. 3 Confirm the selection by pressing the OK key in the display.
Sort text messages:	1 Select Sort. 2 Select one of the options. 3 Confirm the selection by pressing OK (● = selected).

- Add a sender:**
- 1 Select **Add sender to**.
 - 2 Select **Add to new contact/Add to existing contact**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- Delete duplicate numbers:**
- 1 Select **Delete repeated numbers**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The phone number is deleted.
- Add to block list:**
- 1 Select **Add to Blocklist**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The phone number is added to the block list.
- Add to allow list:**
- 1 Select **Add to Allowlist**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The phone number is added to the allow list.

Text message settings

Showing memory status

The text message memory status indicates the actual and possible number of texts on the SIM card and in the internal cell phone memory.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Message capacity**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have displayed the memory status.

Saving text messages sent

You can define whether the texts which you have sent should be stored in the list **Sentbox** (→ p. 44).

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SMS settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Save sent messages**.
- 7 Select **OK**.
- 8 Select **Prompt user, Save, Don't save**.
- 9 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have defined whether the sent text messages should be saved.

Preferred memory location

Specify whether text messages are stored on the cell phone or the SIM card.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SMS settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Preferred storage**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Phone, SIM**.
- 9 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have defined the memory location where text messages should be saved.

Further applications

This chapter describes further functions provided by the cell phone.

Alarm clock



The date and time are correct.

Setting the alarm clock

You can set multiple alarm times. A wake up alarm (→ p. 52) is issued at the times set:

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Alarm**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select an alarm time required (08:00).
- 8 Press the **Options** key in the display.
- 9 Select **Edit**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Use the Control key  to move between the input fields:
 - Messages:** 1 Enter a name of the alarm clock using the keypad .
 - Time:** 1 Enter the time, to four-digits, using the keypad .
 - Ring tone:** 1 Select **Ringtone**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Select**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **Fixed ringtones**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select the ring tone for the alarm clock.
 - 8 Confirm the selection by pressing the **OK** key in the display.

Further applications

- Repeat:
- 1 Select **Repeat mode**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Select**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Use the Control key  to select how often the event is to be repeated (**Once/Daily/Working days**).

If an alarm clock is activated, the  icon appears in the icon bar in the cell phone display.

Switching the alarm clock on and off

Switch a set alarm clock on or off:

- 1 Press one of the Control keys  to open the menu.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Tools**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **Alarm**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select a required alarm clock.
 - 8 Press the **Options** key in the display.
 - 9 Select **On/Off**.
 - 10 Confirm the selection by pressing the **OK** key in the display.
- You have switched the alarm clock on/off.

Wake-up call

An wake-up call is shown in the display and indicated by the selected ring tone melody. The wake-up call sounds for 60 second. If no key is pressed, it is repeated after 4 minutes. After the second repetition, the wake-up call is deactivated.

 During a call, the alarm is only indicated by a short tone.

Deactivating wake-up call/repeating after a pause (snooze mode)

To switch off the alarm:

- 1 Select **Off**.
- You have deactivated the wake-up call.

Repeat wake-up call (snooze mode):

- 1 Select **Snooze**.

or

- 1 Press any key.
- You have deferred the wake-up call.
It will be repeated after 5 minutes.

Calendar

You can enter appointments (events) in the calendar and then be reminded of them.



The date and time are correct.

To open the calendar:

- 1 Press one of the Control keys  to open the menu.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Tools**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **Calendar**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
- You have opened the calendar.

The current date is highlighted in green, and the currently selected day is highlighted in blue. Days with events are marked in red.

Navigating in the calendar

Choosing the required date:

- 1 Navigate up  and down  using the Control keys.

or

- 1 Press the **Options** key in the display.
 - 2 Select **Go to date**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Enter the date required, to eight digits, using the keypad .
 - 5 Confirm the selection by pressing the **OK** key in the display.
- You have selected the required date.

Displaying events

An event is indicated at a the specified time by an acoustic signal (when activated) and an indicator in the display.

Switch the acoustic signal off:

- 1 Confirm the selection by pressing the **Cancel** key in the display.
- ▶ You have deactivated the alarm.

Creating a new event

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Press the **Options** key in the display.
- 8 Select **Add a new schedule**.
- 9 Use the Control key  to move between the input fields:

Naming an event:	1 Select Subject .
	2 Enter a name for the event using the keypad  .
Enter date:	1 Select Date .
	2 Enter the date required, to eight digits, using the keypad  .
Enter time:	1 Select Time .
	2 Enter the required time, to four-digits, using the keypad  .
Ring tone:	1 Select Ringtone .
	2 Press the Options key in the display.
	3 Select Select .
	4 Confirm the selection by pressing the OK key in the display.
	5 Select the ring tone required.
	6 Confirm the selection by pressing OK ( = selected).

- Repeat the event:
- 1 Select **Repeat mode**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Select**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select how often the event is to be repeated (**Once/Daily repeat/Weekly repeat/Monthly/Yearly/No reminding**).
 - 6 Confirm the selection by pressing the **OK** key in the display.

- Save:
- 1 Press the **Save** key in the display.

Further information on entering text: → p. 24

Displaying events

You can display events assigned to a specific day:

- 1 Press one of the Control keys  to open the menu.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Tools**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **Calendar**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Use the Control keys to scroll up  or down  to the required day.
 - 8 Press the **Options** key in the display.
 - 9 Select **View schedules**.
 - 10 Confirm the selection by pressing the **OK** key in the display.
 - 11 Select an event.
 - 12 Press the **Options** key in the display.
 - 13 Select **View**.
 - 14 Confirm the selection by pressing the **OK** key in the display.
- You have opened the event selected. The details are displayed.

You can display all the events:

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.

Further applications

- 7 Press the **Options** key in the display.
- 8 Select **All schedules**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select an event.
- 11 Select **Options**.
- 12 Select **View**.
- 13 Confirm the selection by pressing the **OK** key in the display.
 - You have opened all the events. The details are displayed.

Deleting events

You can delete all events of a day or all events in the calendar.

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Press the **Options** key in the display.
- 8 Select **Clear today's tasks/Clear all**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Confirm the the deletion by pressing the **OK** key in the display.
 - You have deleted the event selected.

Or

You can delete a specific event:

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Use the Control keys to scroll up  or down  to the required day.
- 8 Press the **Options** key in the display.
- 9 Select **View schedules**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Select an event.
- 12 Press the **Options** key in the display.
- 13 Select **Delete**.

- 14 Confirm the selection by pressing the **OK** key in the display.
- 15 Confirm the deletion by pressing the **OK** key in the display.
- ▶ You have delete the event selected.

Bluetooth

You can connect the cell phone wirelessly to other devices using Bluetooth.

Enable Bluetooth

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Bluetooth**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select **Bluetooth**.
- 8 Press the **Turn on** key in the display.
- ▶ You have switched on Bluetooth.

Pairing a Bluetooth device

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Tools**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Bluetooth**.



Bluetooth is activated on your cell phone if a tick ☒ is placed in the box next to Bluetooth.

- 5 Select **Paired device**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select **Add new device**.
- 8 Press the **Add** key in the display.
- 9 Wait until the search has been completed.
- 10 Select the required device for pairing.
- 11 Press the **Pair** key in the display.
- ▶ You have connected your cell phone to the device.

Using Bluetooth

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Bluetooth**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select one of the following options:

- | | |
|--|--|
| Visibility of your cell phone for other devices: | <ol style="list-style-type: none">1 Select Bluetooth visibility.2 Press the Turn on/Power off key in the display. |
|--|--|

Files are being transferred:	This function can only be selected when files are being transferred.
------------------------------	--

- 1 Select **Transferring files**.

- | | |
|-------------------------|--|
| Name of the cell phone: | <ol style="list-style-type: none">1 Select Device name.2 Confirm the selection by pressing the OK key in the display.3 Enter a new name for the cell phone using the keypad .4 Confirm the selection by pressing the OK key in the display. |
|-------------------------|--|

- | | |
|---------------|---|
| Data storage: | <ol style="list-style-type: none">1 Select Bluetooth file storage.2 Confirm the selection by pressing the OK key in the display.3 Select Phone/SD card.4 Confirm the selection by pressing OK ( = selected). |
|---------------|---|

- | | |
|-------|---|
| Help: | <ol style="list-style-type: none">1 Select Help. |
|-------|---|

Camera and gallery

The cell phone is equipped with a camera (→ p. 4). The **Camera** application provides access to your photos and you can also adjust the camera settings.

Quick access to your photos is possible using the **Gallery** application.

Taking photos

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Point the camera lens at the image required.
- 5 Press the key .
- ▶ You have taken a photo of the image in front of the camera.

The cell phone automatically saves the photo. It will then be saved in JPG format in the cell phone's internal memory or on the memory card in the **Photos** folder.

If you want to delete the photo:

- 1 Press the **Options** key in the display.
- 2 Select **Delete**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have deleted the photo.

Viewing photos

You can view and manage photos taken via the camera or gallery.

Showing photos via the camera:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Opt.** key in the display.
- 5 Select **Gallery**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select the file required.
- 8 Press the **Options** key in the display.
- 9 Select **View**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have displayed a photo via the camera.

Further applications

Showing photos via the gallery:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Gallery**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the file required.
- 5 Press the **Options** key in the display.
- 6 Select **View**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have displayed a photo via the gallery.

Using photo

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Gallery**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the file required.
- 5 Press the **Options** key in the display.
- 6 Select **View**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Press the **Options** key in the display.
- 9 Select one of the following options:

- | | |
|---------------------------------|---|
| Using as a back-ground picture: | <ol style="list-style-type: none">1 Select Set as wallpaper.2 Confirm the selection by pressing the OK key in the display.
▶ The photo is used as a background. |
| Use as contact image: | <ol style="list-style-type: none">1 Select Set as contact icon.2 Confirm the selection by pressing the OK key in the display.3 Select the contact required.4 Confirm the selection by pressing the OK key in the display.
▶ The photo is used as a contact image. |
| Deleting: | <ol style="list-style-type: none">1 Select Delete.2 Confirm the selection by pressing the OK key in the display.3 Confirm the the deletion by pressing the OK key in the display. |

- Share image:**
- 1 Select **Share**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Bluetooth**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
- Rename image:**
- 1 Select **Rename**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Delete existing characters by pressing the **Delete** key in the display
 - 4 Enter a new name for the photo using the keypad .
 - 5 Confirm the selection by pressing the **OK** key in the display.
- Presentation:**
- 1 Select **Slideshow**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
- Show information on the photo:**
- 1 Select **Details**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - The file name, resolution, file size and creation date of the photo are displayed.

Camera and photo settings

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Opt.** key in the display.
- 5 Select **Effect** or **Settings**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select the settings required.
 - You have adapted the camera settings.

Setting the memory location

Photos are saved in the cell phone internal memory or on the SD card.

Set the memory location:

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Camera**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Press the **Opt.** key in the display.
 - 5 Select **Settings**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select **Preferred storage**.
 - 8 Confirm the selection by pressing the **OK** key in the display.
 - 9 Select the required memory location (**Phone/SD card**).
 - 10 Confirm the selection by pressing **OK** ( = selected).
 - ▶ You have set the memory location.
-

File manager

Your personal data, e.g. photos, is stored in the phone's internal memory or on an SD card that you have inserted into the device. The files can be accessed via the file manager:

- 1 Press one of the Control keys  to open the menu.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **My files**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select **Phone/SD card**.
- 8 Confirm the selection by pressing the **OK** key in the display.
- ▶ The files or folders stored in the memory are displayed.
- 9 Select the folder or file you require.
- 10 Press the **Options** key in the display.
- 11 Select one of the following options:
 - Open
 - New folder
 - Delete
 - Details
 - Edit

- Search
- Sort
- Mark
- Memory status

Formatting the memory

If you want to delete all the personal data on the cell phone, the simplest method is to format the memory. Individual files, e.g. photos or ring tone files are deleted using the respective application.

**Attention!**

Formatting will delete all stored data (e.g. photos) from the selected memory location (phone/memory card). This process cannot be reversed.

- 1 Press one of the Control keys  to open the menu.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Tools**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **My files**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select **Phone/SD card**.
 - 8 Confirm the selection by pressing the **OK** key in the display.
 - 9 Press the **Options** key in the display.
 - 10 Select **Memory status**.
 - 11 Confirm the selection by pressing the **OK** key in the display.
 - 12 Select **Format internal storage/Format SD card**.
 - 13 Confirm the selection by pressing the **OK** key in the display.
 - 14 Confirm the request by pressing the **OK** key in the display.
- You have formatted the selected memory. All the personal data has been deleted.

Loading data in the cell phone memory

You can also manage your personal data on a PC.

- 1 Connect the cell phone to a PC using the USB cable.
- 2 Select **USB**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The internal memory of the cell phone is displayed as a drive on the PC.

You can manage the folders and files on the cell phone using the standard functions of your PC operating system.



As long as the cell phone remains connected to the PC, the File Manager function is not available.

Settings

This chapter describes the settings which can be set for operating the cell phone.

Date and time

The date and time can be set manually.

Setting manually

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Time & date**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Use the Control key  to move between the input fields.

Set time: 1 Use the keypad  to enter the time (format: HH:MM).

Set date: 1 Use the keypad  to enter the date (format: MM.DD.YYYY).

Time format: 1 Press the **Select** key in the display.
 2 Select **12 hours/24 hours**.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Date format: 1 Press the **Select** key in the display.
 2 Select **Year-Mon-Day/Mon-Day-Year/Day-Mon-Year**.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Date Separator: 1 Press the **Select** key in the display.
 2 Select the required separator character.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Settings

- Update time settings:
- 1 Press the **Select** key in the display.
 - 2 Select **Auto update time**.
 - 3 Confirm the selection by pressing the **Select/Cancel** key in the display.
 - 4 Press the **Back** key in the display.
- or
- 1 Select **Manual update time**.
 - 2 Confirm the selection by pressing the **Select** key in the display.

- 9 Confirm the selection by pressing the **Done** key in the display.

Answering a call by folding open

You can answer calls by folding opening the phone. You must enable this function before you can answer calls by folding opening the phone or end calls by folding it closed.

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Call settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Flip to answer**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **On/Off**.
 - 9 Confirm the selection by pressing the **OK** key in the display (● = selected).
- You have enabled answering a call by folding opening the phone.

Allow list and block list

You can assign phone numbers to a allow list or block list. When the allow list is activated, calls from phone numbers not in the list are automatically rejected.

When the block list is activated, calls from phone numbers which are in the list are automatically rejected.

Allow list

The allow list is used to enter number which are allowed to reach you.

Switch the allow list on/off:

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Allowlist**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Status**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **On/Off**.
 - 11 Confirm the selection by pressing **OK** ( = selected).
- You have switched the allow list on/off.

Add phone numbers to the allow list:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Allowlist**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Allowlist**.
- 9 Press the **OK** key in the display.
- 10 Select the entry required.

Settings

11 Press the **Options** key in the display.

- | | |
|-------------------|---|
| Add contact: | <ol style="list-style-type: none">1 Select New.2 Confirm the selection by pressing the OK key in the display. |
| Edit contact: | <ol style="list-style-type: none">1 Select Edit.2 Select Name.3 Enter the name using the keypad .4 Select Number.5 Enter the number using the keypad .6 Press the Save key in the display. |
| Delete a contact: | <ol style="list-style-type: none">1 Select Delete.2 Confirm the selection by pressing the OK key in the display. |
| Import contacts: | <ol style="list-style-type: none">1 Select Import contacts.2 Confirm the selection by pressing the OK key in the display.3 Select the entry required.4 Press the Options key in the display.5 Select Mark.6 Confirm the selection by pressing the OK key in the display.7 Press the Options key in the display.8 Select OK.9 Confirm the selection by pressing the OK key in the display. |
| Delete all: | <ol style="list-style-type: none">1 Select Delete all.2 Confirm the selection by pressing the OK key in the display. |

Block list

The block list is used to prevent calls from unwanted phone numbers.
Switch the block list on:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Blocklist numbers**.

- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Status**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **On/Off**.
- 11 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have switched the block list on/off.

Add phone numbers to the block list:

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Blocklist numbers**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Blocklist numbers**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select the entry required.
- 11 Press the **Options** key in the display.
- 12 Use the Control key  to move between the input fields.

- Add contact:
- 1 Select **New**.
 - 2 Confirm the selection by pressing the **OK** key in the display.

- Edit contact:
- 1 Select **Edit**.
 - 2 Select **Name**.
 - 3 Enter the name using the keypad .
 - 4 Select **Number**.
 - 5 Enter the number using the keypad .
 - 6 Press the **Save** key in the display.

- Delete a contact:
- 1 Select **Delete**.
 - 2 Confirm the selection by pressing the **OK** key in the display.

Settings

- | | |
|------------------|---|
| Import contacts: | <ol style="list-style-type: none">1 Select Import contacts.2 Confirm the selection by pressing the OK key in the display.3 Select the entry required.4 Press the Options key in the display.5 Select Mark.6 Confirm the selection by pressing the OK key in the display.7 Press the Options key in the display.8 Select OK.9 Confirm the selection by pressing the OK key in the display. |
| Delete all: | <ol style="list-style-type: none">1 Select Delete all.2 Confirm the selection by pressing the OK key in the display. |

Language

You can define the languages for the display and for keypad input separately from each other.

Display language

The display language defines the language for displays, menus and messages on the cell phone.

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Language settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Display language**.
 - 9 Press the **Select display** key.
 - 10 Select the required language.
 - 11 Confirm the selection by pressing **OK** (● = selected).
- You have defined the display language.

Writing language

The writing language defines the range of characters available for text input (e.g. When writing a text (SMS)).

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Language settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Writing language**.
 - 9 Press the **Select display** key.
 - 10 Select the required writing language.
 - 11 Confirm the selection by pressing **OK** ( = selected).
- You have selected the writing language.

Display

The cell phone offers various setting options for the display.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Display**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select one of the following options:
 - Background image: 1 Select **Wallpaper settings**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Static wallpaper/More pictures**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select the required image.
 - 6 Press the **View** key in the display.
 - 7 Confirm the selection by pressing the **Select** key in the display.

Settings

- Start screen settings:**
- 1 Select **Idle display settings**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Time & date/SIM selection**.
 - 4 Press the **Select/Cancel** key in the display.
 - 5 Confirm the selection by pressing the **Back** key in the display.
- Brightness:**
- 1 Select **Contrast**.
 - 2 Confirm the selection by pressing the **Select** key in the display.
 - 3 Set the brightness to one of 8 levels using the **Control** key .
 - 4 Confirm the selection by pressing the **OK** key in the display.
- Duration:**
- 1 Select **Backlight**.
 - 2 Confirm the selection by pressing the **Select** key in the display.
 - 3 Select the duration (**Always on, 10 secs, 30 secs, 45 secs, 60 secs**) or use the **Control** key .
 - 4 Confirm the selection by pressing the **OK** key in the display.
- Keypad illumination time:**
- 1 Select **Keypad backlight time**.
 - 2 Press the **Select** key in the display.
 - 3 Select the duration (**20 secs, 10 secs, 5 secs, Off**) using the **Control** key .
 - 4 Confirm the selection by pressing the **OK** key in the display.

- 5 Confirm the selection by pressing the **Done** key in the display.

Tones and signals

Selecting the acoustic profile

The cell phone offers an acoustic profile with which you can adapt the phone's reaction to calls received according to the ambient conditions.

- 1 Press one of the **Control** keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Audio profiles**.

- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required profile (**Standard**, **Vibrate**, **Silent**).
- 7 Press the **Options** key in the display.
- 8 Select **Activated**.
- ▶ You have selected the acoustic profile.

Standard The cell phone rings when a call is received.

Vibrate The cell phone vibrates. The ring tone is deactivated. An icon appears in the display.



Silent A incoming call is only shown visually on the display. The cell phone neither rings or vibrates. An icon appears in the display.



Defining the ringing tone

You can select one of the pre-installed ring tones as your ring tone.

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Audio profiles**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required audio profile.
- 7 Press the **Options** key in the display.
- 8 Select **Settings**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Ring settings**.
- 11 Confirm the selection by pressing the **Select** key in the display.
- 12 Select **Caller ringtone**.
- 13 Press the **Select** display key.
- 14 Select the ring tone required.
- ▶ The ring tone is played as a test.
- 15 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have changed the ring tone.

Setting the ring tone volume

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Audio profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required audio profile.
 - 7 Press the **Options** key in the display.
 - 8 Select **Settings**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Adjust volume**.
 - 11 Press the **Select** display key.
 - 12 Select **Caller ringtone**.
 - 13 Press the **Select** key in the display.
 - ▶ The current ring tone is played as a test.
 - 14 Set the volume louder  or quieter  using the Control key.
 - 15 Confirm the selection by pressing the **Done** key in the display.
 - ▶ You have set the volume of the ring tone.
-

Message tone

The message tone indicates the receipt of a new text message (SMS). You can select a melody as a message tone.

Selecting the message tone

- 1 Press one of the Control keys  to open the menu.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Audio profiles**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required audio profile.
- 7 Press the **Options** key in the display.
- 8 Select **Settings**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Ring settings**.
- 11 Confirm the selection by pressing the **Select** key in the display.
- 12 Select **Message ringtone**.
- 13 Press the **Select** key in the display.

14 Select the ring tone required.

▶ The ring tone is played as a test.

15 Confirm the selection by pressing **OK** (● = selected).

▶ You have changed the ring tone.

Setting the volume of the message tone

1 Press one of the Control keys  to open the menu.

2 Select **Settings**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **Audio profiles**.

5 Confirm the selection by pressing the **OK** key in the display.

6 Select the required audio profile.

7 Press the **Options** key in the display.

8 Select **Settings**.

9 Confirm the selection by pressing the **OK** key in the display.

10 Select **Adjust volume**.

11 Press the **Select** key in the display.

12 Select **Message ringtone**.

13 Press the **Select** key in the display.

▶ The current ring tone is played as a test.

14 Set the volume louder  or quieter  using the Control key.

15 Confirm the selection by pressing the **Done** key in the display.

▶ You have set the volume of the ring tone.

Other sounds

The cell phone offers additional options for tones (e.g. key tones).

1 Press one of the Control keys  to open the menu.

2 Select **Settings**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **Audio profiles**.

5 Confirm the selection by pressing the **OK** key in the display.

6 Select the required audio profile.

7 Press the **Options** key in the display.

8 Select **Settings**.

9 Confirm the selection by pressing the **OK** key in the display.

10 Select **Other alert rings**.

11 Press the **Select** key in the display.

Settings

12 Select one of the following options:

- Key tones:**
- 1 Select **Key tone**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Silent/Ringtone1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the key tone.
- Battery warning:**
- 1 Select **Battery low alert**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Turn on/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the battery warning.
- Dial tone:**
- 1 Select **Dial tone**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Turn on/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the dial tone.
- Sound when folding open:**
- 1 Select **Sound on open**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Silent/Ringtone1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 You have set the acoustic tone when folding open.
- Sound when folding closed:**
- 1 Select **Sound on close**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Silent/Ringtone1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 You have set the acoustic tone when folding closed.



The settings for **Other alert rings** can only be configured in the audio profile **Standard**.

LED for incoming call

When a call is received, the LED flashes. This function can be switched on or off.

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Audio profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required audio profile.
 - 7 Press the **Options** key in the display.
 - 8 Select **Settings**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Torch for incoming call**.
 - 11 Confirm the selection by pressing the **Select** key in the display.
 - 12 Select **On/Off**.
 - 13 Confirm the selection by pressing the **OK** key in the display.
- You have defined the torch reaction when a call is received.

SIM cards and network operators

Activating/deactivating the SIM card lock

When the cell phone is switched on, you are requested to enter the SIM card PIN. You can deactivate this SIM card lock.

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Security**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **PIN**.
 - 7 Confirm the selection by pressing the **Select** key in the display.
 - 8 Select **PIN**.
 - 9 Press the **Cancel display** key.
 - 10 Enter the current PIN using the keypad .
 - 11 Confirm the selection by pressing the **OK** key in the display.
- You have deactivated the SIM card lock.
You can use the cell phone without entering the PIN.

Changing the SIM card PIN

You can change PIN 1 and PIN 2 of the SIM card.



The PIN lock is active.

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Security**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **PIN**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Modify PIN**.
 - 9 Press the **Edit display** key.
 - 10 Enter the current PIN using the keypad .
 - 11 Confirm the selection by pressing the **OK** key in the display.
 - 12 Enter the new PIN using the keypad .
 - 13 Confirm the selection by pressing the **OK** key in the display.
 - 14 Enter the new PIN again as confirmation.
 - 15 Confirm the selection by pressing the **OK** key in the display.
- You have changed the PIN of the SIM card.



If the current PIN is entered incorrectly three times in succession, the SIM card is locked. You can unlock the SIM card using PIN 2. If you enter PIN 2 incorrectly three times in succession, you will no longer have access to the SIM card.

In such a case, please contact your mobile service provider.

Resetting to the factory settings

If you want to hand the cell phone over to a third party, you can reset it to the factory settings. All the individual settings are reset, the call lists and phone book entries in the phone's internal memory are deleted.

**Attention!**

On resetting the factory settings, all the data stored (e.g. photos) are deleted from the cell phone. This process cannot be reversed.

- 1 Press one of the Control keys  to open the menu.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Restore factory settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Confirm the reset by pressing the **OK** key in the display.
- You have reset the cell phone to its factory settings.

Appendix

Customer support and warranty

Here you'll find answers to your questions and get help at your own pace.

Scan the QR code to open the online support page, or visit:

www.service.gigaset.com



You can find information on the guarantee in your warranty document. Scan the QR code to download it directly, or enter:



www.gigaset.com/warranty

Approval

This device is intended for use within the European Economic Area.

Country-specific features are taken into account.

Gigaset Technologies GmbH hereby declares that the radio equipment type Gigaset GL40 complies with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following web address: www.gigaset.com/docs.

In some cases, this declaration may be included in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore, please read these files too.

Product care

Wipe the appliance with a **damp** cloth or an anti-static cloth. Do not use any solvents or microfiber cloths.

Never use a dry cloth: there is a risk of static charge.

In rare cases, contact of the device with chemical substances can lead to changes in the surface. Due to the large number of chemicals available on the market, not all substances can be tested.

Impairments to high-gloss surfaces can be cleared by careful removal using cell phone display polishes.

Contact with liquid

If the device has come into contact with liquid:

- 1 **Disconnect all cables from the device.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 **Drain the liquid from the device.**
- 4 **Pat all parts dry.**
- 5 **Then store the device for at least 72 hours with the battery compartment open and the keyboard facing down (if present) in a dry, warm place (not in a: microwave, oven, etc.).**
- 6 **Only switch the device on again when it is dry.**

In most cases, it is possible to restart the device when it is completely dry.

Information on the disposal of electrical and electronic equipment

You can also find out more about environmentally friendly products and processes online at www.gigaset.com.

Environmentally friendly disposal

(in accordance with the WEEE Directive and the EU Battery Directive)



The crossed-out trash can symbol on the product, accessories (e.g. charger, headphones, USB cable), battery, or in the documentation indicates that these components must not be disposed of with household waste.



Waste electrical and electronic equipment and batteries must be collected separately and disposed of at local collection points or retailers.

Technical data

General technical data

Frequency	Band	Maximum power
GSM/2G	EGSM900: 880-915 MHz(TX), 925-960 MHz(RX)	24.63 dBm
	DCS1800: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	21.54 dBm
UMTS/3G	WCDMA 2100: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	23.31 dBm
	WCDMA 900: 880-915 MHz(TX), 925-960 MHz(RX)	23.24 dBm

Appendix

LTE/FSS/ 4G	B1: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	23.88 dBm
	B3: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	24.34 dBm
	B7: 2500-2570 MHz(TX), 2620-2690 MHz(RX)	24.18 dBm
	B8: 880-915 MHz(TX), 925-960 MHz(RX)	24.30 dBm
	B20: 832-862 MHz(TX), 791-821 MHz(RX)	23.89 dBm
	B28: 703-748 MHz(TX), 758-803 MHz(RX)	23.99 dBm
BT	2402 MHz~2480 MHz	4.80 dBm

Operating times


Calling duration: approx. 9 hours
In idle status: approx. 300 hours

Accessories

Only use batteries approved by Gigaset. Unauthorized accessories can cause damage to the device.

Power adapter

Output: 5 V $\approx$ 0.2 A - 1.0 A

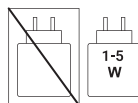

Battery

Technology: Li-Ion
Capacity: 1400 mAh
Part number: V30145-K1310-X485

Index

-
- A**
- Acoustic profile 72
 - Activate/Deactivate SOS calls 38
 - Activating/Deactivating the SIM card lock 77
 - Activating/Deactivating the SOS alarm 39
 - Alarm clock 51
 - Icon 22
 - Allow list 67
 - Appointment, see Events
 - Approval 80
 - Assign call number to direct dialing key 26
-
- B**
- Background picture
 - Using your own photo 60
 - Battery
 - Charge status 22
 - Block list 28, 68
 - Buffering
 - text message 43
-
- C**
- Calendar 53
 - Navigation 53
 - Call
 - Information 32
 - International 25
 - Reject 27
 - Taking 27
 - Call divert 30
 - Revoking 31
 - Setting up 30
 - Call list 32
 - delete 33
 - Open 32
- Call number
 - Dialing 25
 - Incoming call 27
 - Call volume 29
 - Calls
 - From a call list 26
 - Camera 59
 - Settings 61
 - Taking pictures 59
 - Viewing photos 59, 60
 - Care of the device 80
 - Chained
 - text message 40
 - Changing the PIN 78
 - Charging
 - the battery 19
 - Contact with liquid 81
 - Control key
 - Functions 21
 - Creating
 - events 54
 - Customer support and warranty ... 80
-
- D**
- Date
 - Set manually 65
 - Direct dialing keys 26
 - Display
 - Standby 20
 - Display keys 21
 - Display language 70
 - Displaying events 54

E		Internal memory	
Enter text	24	Formatting	63
Entering SOS numbers	38	Manage through file manager ...	62
Entering special characters (text message)	42	managing on a PC	64
Entering text		K	
Text message	41	Keypad lock	
Environment	81	Switching on/off	21
Event		L	
delete	56	Language	
F		Input	71
File manager	62	Phone settings	70
G		Liquid	81
Gallery	60	List of drafts (text message)	43
Getting started	17	Listen to a voice message	36
H		Lower/upper case	42
Handsfree mode	29	M	
Handsfree mode volume	29	Mailbox	36
I		Inquiry	36
Icon		Main menu	23
Alarm clock	22	Making a call	
Battery charge status	22	using the direct dialing key	26
Missed call	22	Making calls	25
Silent	22	Memory location for photos	62
Vibration	22	Memory status, text message	49
Voice message (SMS)	22	Menu guidance	23
Wireless communication	22	Menu overview	6
Icons		Missed call, icon	22
Status bar	22	Mute the microphone	30
User Guide	10	O	
Inbox (text message)	47	Outbox (text message)	45
Input language	71		
Text message	42		
Input methods (text message)	41		
Inserting a memory card	17		
Inserting a SIM card	17		
Inserting the			
battery	18, 19		

P		S	
Package contents	16	Safety information	11
Phone book	34	Save	
Entries	34	text message	50
opening	34	SD card	
Phone book entries	34	Formatting	63
Managing	36	Sending a	
Phone book entry		text message	40
Create	35	Setting the message tone	74
Delete	36, 68, 69, 70	Settings	
Search	35	Allow list	67
Photo		Block list	68
Delete	58, 60	Silent	73
Format	59	Icon	22
Memory location	62	SIM card	
Taking	59	Changing the PIN	78
Use as background	60	SMS	
Photographing	59	icon	22
Photos		SOS calls	37
Viewing	59, 60	SOS emergency calls	
Preferred memory location (text		Entering text	39
message)	50	SOS key	37
Profile, acoustic	72	SOS number	38
R		Status bar	22
Read		Submenus	23
text message	47	Switch microphone on/off	30
Receiver volume	29	Switch off the wake-up call	52
Receiving a		Switch the microphone to mute	30
text message	47	Switching on/off	20
Reset	79	T	
Factory settings	79	Telephoning	
Ring tone		Enter call number	25
Deactivate	73	Text message	
Melody	73	input methods	41
		memory location	50
		memory status	49
		Sending not possible	45
		Sent messages	44
		settings	49
		Special characters	42
		Text message templates	46
		Text messages	40

Index

Text messages (SMS)	40
Texts	
Drafts	43
Time	
Set manually	65
Tones	
Messages	74
Ringing	73

U

Upper/lower case	42
Use the loudspeaker when making a call	29

V

Vibration	
Activate/Deactivate via profile ..	73
Icon	22

W

Wireless communication, quality ..	22
Writing a text message	40

Issued by

**Gigaset Technologies GmbH
Frankenstr. 2, D-46395 Bocholt**

© Gigaset Technologies GmbH 2026

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com