

Gigaset

GL695

The most up-to-date user guide
can be found at
www.gigaset.com/manuals






Contents

Overview	4
Menu overview	6
Safety instructions	11
First steps	15
Package contents	15
Getting started	15
Operating the mobile phone	18
Switching the mobile phone on/off	18
Activating the display	18
Switching the keypad lock on/off	19
Switching the torch on/off	19
Using the Control key (Navigation keys)	20
Display keys	20
Icons in in the status bar	21
Menu guidance	22
Entering text	23
Making/taking calls	24
Making calls using the keypad	24
Taking calls	26
Protection against unwanted calls (block list)	27
During a phone call	28
Call divert	30
Call lists	32
Phone book	35
Mailbox	38
Emergency calls (SOS)	39
SOS calls	39
SOS text message (SMS)	40
Activating the SOS alarm	41

SMS (text messages)	42
Writing and sending a text message	42
Storing a text (SMS) temporarily (list of drafts)	44
Sent messages	46
Outbox	47
Template	48
Receiving texts (SMS)	49
Text (SMS) settings	51
Further applications	53
Alarm clock	53
Calendar	56
Bluetooth	60
Camera and gallery	62
File manager	67
Settings	69
Date and time	69
Allow list and block list	70
Language	74
Tones and signals	75
Display	81
SIM cards and network operator	82
Resetting to the factory settings	83
Customer service	84
Guarantee Certificate	84
Notice on the Disposal of Electrical and Electronic Equipment	86
Technical data	87
Accessories	88

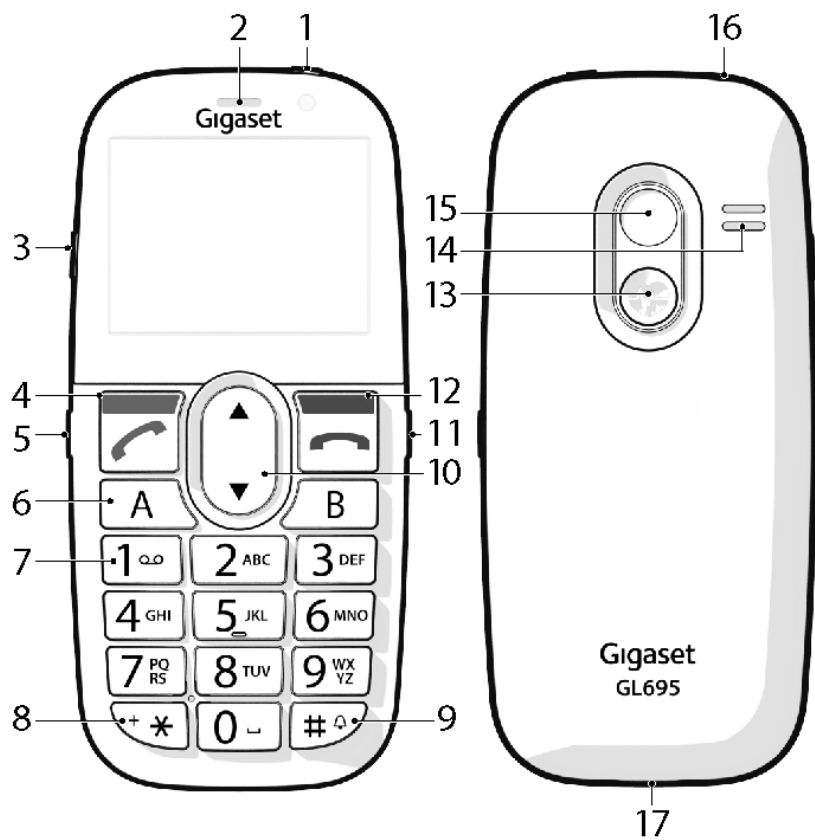Overview



- 1 **On/Off button:** Switching the device on/off
- 2 **Receiver**
- 3 **Volume boost button:** Increase the volume during an active call
- 4 **Left display key:** Select function, depends on the screen display
Take call; dial number; open call list
- 5 **Torch on/off key (press longer)**
- 6 **Direct dialling keys:** Speed dialling numbers
- 7 **Key 1:** Start network answering machine playback (press **longer**)
- 8 **Star key:** Enter * or + (for international calls)
- 9 **Hash key:** Switch between vibration, silent and standard modes (press **longer**)
- 10 **Control key**
 Open the menu
 Navigate through menus and lists
- 11 **Keypad lock on/off button (press longer)**
- 12 **Right display key:** End the call; cancel the function; return to the menu
- 13 **SOS key:** Initiate an emergency call
- 14 **Loudspeaker**
- 15 **Camera**
- 16 **Torch**
- 17 **USB connection port:** Connect a USB cable

Menu overview

 


Not all functions described in this user guide are available in all countries or with all network providers.

Open main menu: ► When the mobile phone is in an idle state, press the **Menu** display key


Contacts

Call logs



Missed calls
Dialled calls
Received calls
Rejected calls
Delete all
Call timers

 Message



Write message
Inbox
Outbox
Drafts
Templates
Voice mail server

SOS



Status
SOS Numbers
SOS SMS ON/OFF
SOS SMS
Warning Tone

Camera

 
Image

Clock

Calendar

My files


SIM-Karten Dienste



SMS & MMS News
Downloads
Chat & Dating
Umgebungssuche
Kundenservice
Extras

SMS News
MMS News
SMS Chat
MobileDating
In der Nähe
Hilfe vor Ort
Filialfinder
KontoInfo
Konfigurationen
Menü-Update
Info

 
Bluetooth



Bluetooth
Bluetooth visibility
Paired device
Transferring files
Device name
Bluetooth file storage
Help

Add new device
Phone
SD card

Settings

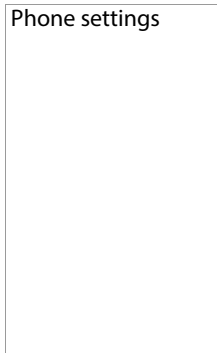

Time & date
Language settings
Auto power on/off
Akku
Restore factory settings

Set time
Set date
Time format
Date format
Set Date separator
Update time settings
Display language
Writing language

Audio profiles

Menu overview

Display	Wallpaper settings	
	Idle display settings	
	Contrast	
	Display backlight	
	Auto keypad lock	
Security	PIN	PIN
	Modify PIN2	Modify PIN
	Phone locked	
	Modify the phone password	
	Privacy	
	Fixed dialling number	Fixed dialling mode
	Allowlist	Fixed dialling number
	blocklist	Add to Allowlist
		Allowlist settings
		blocklist
Call settings	Call forwarding	blocklist settings
	Call waiting	Call forwarding unconditional
	Call barred	Call forwarding on busy
		Call forwarding on no reply
		Divert if unreachable
		Cancel all diverts
		All outgoing calls
		All incoming calls
		Incoming calls when roaming
		ISD calling
	Dial when INTL roaming	
	Cancel all barring	
	Call time minute reminder	
	Auto redial	
	Vibration when connected	
	Reply SMS after reject	

Connections

- APN settings
- Network selection
- Network type
- VoLTE





Torch

Speed dial

Notation in the user guide

This chapter describes the various forms of notation used in the user guide and the respective significance.

Icons

	Warnings, which, if not observed, can result in personal injury or damage to equipment.
	Important information regarding the function and proper handling or functions that could generate costs.
	Condition which must be fulfilled in order to carry out the following action.
	Additional helpful information.

Working steps

- 1 First working step.
 - 2 Further working step.
 - ▶ Result of the series of working steps.
-

Display texts




Display texts are texts which appear on the display of the mobile phone. Display texts are displayed in **bold print** in this guide.

Example:

Press the **Menu**.display key.

Control key

Display of the Control key in the User Guide:

-  Press the Navigate Down key
-  Press the Navigate Up key
-  Press the Navigate Up or Down key

Safety instructions

Please read the following instructions carefully. Failure to comply with these instructions may result in personal injury and damage to the device, as well as violations of applicable laws.

Please explain the content of this document as well as the potential risks involved when using the device to your children.

General information

- For your own safety, only use original Gigaset accessories or those approved by Gigaset for the mobile phone. The use of accessories which are not compatible could damage the mobile phone and be the cause of hazardous situations. Original accessories can be obtained from Gigaset customer service (refer to Customer Service → p. 84).
- The mobile phone is splashproof according to the IP44 standard. If your mobile phone has been exposed to water, dry it and the device openings (microphone/loudspeaker/USB Type-C port) with a lint-free cloth to remove any water droplets.
- Permissible temperature range for charging and operation: 0-40° C. High temperatures could reduce the service life of electronic devices, damage the battery or deform and melt plastic parts. If the mobile phone is to be used or stored in freezing areas, condensation could develop inside the phone and damage the electronic circuitry.
- The mobile phone must not be used or stored in dusty or dirty locations. Dust can be the cause of malfunction of the mobile phone.
- Switch off your mobile phone in potentially explosive atmospheres and observe all warnings. Potentially explosive atmospheres also include those locations for which it is normally recommended that vehicle engines be switched off. In such places, flying sparks can cause explosions or fires resulting in personal injury and possibly death. These areas include: Petrol stations, chemical plants, transport or storage areas for hazardous chemicals, areas below deck on ships, areas in which the air contains chemical substances or fine particles (e.g. particles of dust or metal powder).
- Short-circuiting or modifying the mobile phone is prohibited – there is a risk of personal injury, electric shock, fire or damage to the charger.

Battery and charging process

- To avoid battery fluid leakage, overheating, explosion or fire, never incinerate or heat batteries and never dispose of them in a fire or explosion-prone environment. Do not disassemble, weld or modify the battery. Do not store the battery in an environment subject to strong mechanical influences.

Safety instructions

- Do not use sharp objects, such as screwdrivers, to touch or puncture the battery. There is a risk of battery fluid leaking, the battery overheating, exploding or catching fire and burning. Crushing, heating or incinerating batteries is strictly prohibited.
- Eye contact with the battery electrolyte can cause blindness. If electrolyte enters the eyes, do not rub the eye with your hand. Immediately flush the affected eye completely with clean water and seek medical attention. There is a risk of skin burns if the electrolyte comes into contact with the skin (or clothing). Immediately rinse the skin or clothing completely with soap and clean water and seek medical attention if necessary.
- Never use the batteries for any purpose other than that specified. Never use a damaged battery. If the battery becomes hot, discoloured, deformed or leaks during use, charging or storage, you must replace the battery with a new one immediately for safety reasons.
- The temperature of the battery rises during charging. Do not store the battery in the same compartment as flammable products – there is a risk of fire.
- Do not charge the battery longer than 12 hours.
- Only charge the device indoors. During the charging process, do not hold any telephone conversations and do not dial any phone numbers.
- The electrical socket must be easily accessible during charging.
- There is a risk of electric shock during a thunderstorm.
- Do not use the charger if the power cable is damaged or there is no battery in the mobile phone – there is a risk of electric shock or a risk of fire in such cases.

Headphones



High volumes can damage hearing.

Listening to music or conversations through headphones at high volumes can be uncomfortable and cause permanent hearing damage.

To prevent a loss of hearing, avoid listening at high volume levels for long periods of time.

- If you use the headphones while walking or running, please ensure that the headphone cable does not wrap around your body or other objects.
- Only use headphones in a dry environment. The static electricity which charges in the headphones could discharge on your ears causing an electric shock. Touching the headphone with your hand or contact with bare metal prior to connection to the mobile phone could cause static electricity to discharge.

Use in hospitals / Medical devices

- The function of medical devices could be impaired if used in the vicinity of your product. Observe the technical conditions in your environment , e.g. in medical practices.
- If you use a medical product (e.g. a pacemaker), consult with the product manufacturer prior to use. They can provide information on the sensitivity of the device with regard to external, high-frequency power sources.
- Pacemakers, implanted cardioverter defibrillators:
When switching on the mobile phone, please pay attention that the distance between the mobile phone and implant is at least 152 mm. To reduce potential interference, use the mobile phone on the opposite side to the implant. In the event of possible interference, please switch the mobile phone off immediately. Do not carry the mobile phone in a shirt pocket.
- Hearing aids, cochlea implants:
Some digital, wireless devices can cause interference in hearing aids and cochlea implants. If interference occurs, please contact the manufacturer of such products.
- Other medical devices:
If you and the people in your environment use other medical devices, please contact the relevant manufacturer as to whether such devices are protected from radio frequency signals in the environment. You can also contact your doctor with regard to this.

Emergency calls

- Ensure that the mobile phone is linked to the GSM network and switched on. If necessary, enter the emergency number and carry out your call.
- Inform the member of staff in the emergency call centre with regard to your location.
- Only end the call when the member of staff in the emergency call centre has permitted you to do so.

Children and pets

- Keep the mobile phone, batteries, chargers and accessories out of reach of children and pets. Children and/or pets may swallow small parts and suffer choking and other hazards. Children may only use the mobile phone when supervised by an adult.

Safety instructions

Aircraft, vehicles and road safety

- Switch the mobile phone off in an aircraft.
Please observe the applicable restrictions and regulations.
Wireless devices can interfere with the functionality aeronautical equipment. It is essential to follow instructions from aircraft personnel regarding using the mobile phone on an aircraft.
- As the driver of a vehicle, the main priority is: Safety in road traffic and for road users
Using the mobile phone while driving could distract your attention leading to dangerous situations. In addition, it contravenes current, applicable laws.

SIM cards, memory cards and data connection cables

- Do not remove the cards from the mobile phone while sending or receiving data: Doing so increases the risk of loss of data and damage to the mobile phone or memory cards.

Defective devices

- Installation or repair of the product may only be performed by qualified service personnel.
- Dispose of defective devices or have them repaired by our customer service department; such devices could interfere with other wireless services.
- If the mobile phone is treated roughly, e.g. allowed to fall, the display could break and the electronic circuitry and sensitive interior parts could be damaged.
- Do not use the device if the display is cracked or broken. Glass or plastic splinters can injure the hands and face.
- If the mobile phone, battery or accessories malfunction, please contact your Gigaset Service Centre regarding an inspection.

Further important information

- Never point the flash light directly in the eyes of people or animals. If a flash light is aimed at the human eye when too near, there is a risk of temporary loss of sight or impairment of vision.
- If the device becomes hot, please put it to one side for a while and cancel any programmes which are being executed at the time. If you come into contact with a device which is hot, there is a risk of slight skin irritation, e.g. redness of the skin.
- Do not paint or varnish the mobile phone. Varnish/Paint could damage parts of the mobile phone and cause operational breakdowns.

First steps

This chapter describes the contents of the package and how to start operating the mobile phone for the first time.

Package contents


- Mobile phone Gigaset GL695 including battery
- Charger
- Charger with USB-A connection
- Charging cable to recharge the battery and data transfer

Check the package contents are complete prior to starting up the mobile phone. In case of doubt, contact our customer service.

Getting started

Inserting the SIM and memory cards

You can insert a nano-SIM card and a memory card in the mobile phone.

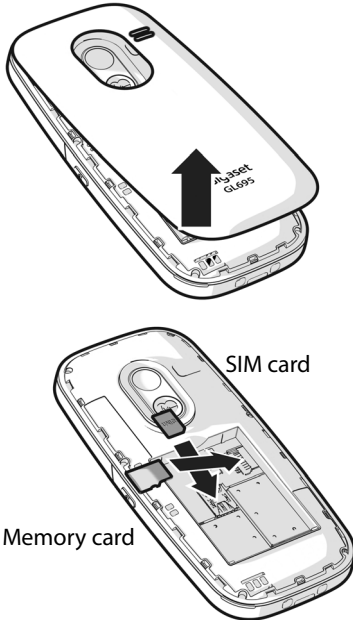

- 1 Insert your fingernail or a suitable aid into the recess in the left-hand corner of the rear side.
- 2 Prise the battery compartment cover upwards to open it.
- 3 Insert the SIM card in the left-hand slot. Pay attention that the SIM card is inserted properly aligned.
- 4 You can also insert a memory card, as an option, in the right-hand slot.
 - ▶ You have inserted a SIM card and memory card in the mobile phone.

Memory card

Inserting the battery and closing the cover



- 1 Insert the battery as illustrated. Pay attention that the battery is inserted properly aligned.



- 2 Replace the battery compartment cover as illustrated.
- 3 Press the cover down carefully to close it. The battery compartment locks in place with an audible click.
 - ▶ You have inserted the battery in the mobile phone.

Charging the battery




- 1 Insert the USB plug on the charging cable in the charger
- 2 Place the mobile phone in the charger.

or



- 1 Insert the USB plug on the charging cable in the USB port on the bottom of the mobile phone.
- 2 Connect the free USB plug on the charging cable to a suitable plug-in power supply unit (not contained in the package supplied).
- 3 Connect the plug-in power supply unit to a properly installed power socket.
 - ▶ You have connected the mobile phone to a power source. The battery is being charged.

Ensure the battery is charged fully before starting to use the mobile phone for the first time.

The battery is fully charged when the charge icon  in the icon bar is completely filled.




If you have set that the battery should only be charged to 80 %, the charge indicator remains with 4 bars and the battery only charges to 80 %.

Operating the mobile phone

This chapter describes the basic steps for operating the mobile phone.

Switching the mobile phone on/off

Switch the mobile phone on:

- 1 Press the On/Off button **longer**.
- 2 Enter the PIN related to the SIM card inserted using the keypad  on the mobile phone.



The PIN was supplied together with the SIM card by your mobile phone provider. In case of doubt, contact your mobile phone provider.

- 3 Confirm the selection by pressing the **OK** (→ p. 20) key in the display.
 - ▶ You have switched on the mobile phone.

Switch the mobile phone off:

- 1 Press the On/Off button **longer**.
 - ▶ You have switched off the mobile phone.
-

Activating the display

The lighting in the display switches off automatically after the set time (→ p. 81) (idle status). This function reduces the battery usage of the mobile phone.

Switch the display on:

- 1 Press one of the following keys:
 - On/Off button
 - Keypad lock key
 - Right display key
 - SOS key
 - ▶ You have switched on the display of the mobile phone.

Switching the keypad lock on/off

The keypad lock inhibits all input via the keys and prevents inadvertent operation of the mobile phone.

Switching on the keypad lock:

- 1 Press the keypad lock key for 2 seconds.

Or


- 1 Press the On/Off button
 - ▶ You have switched the keypad lock on.

Switching the keypad lock off:

- 2 Press the keypad lock key for 2 seconds.

- ▶ You have switched the keypad lock off:


The  icon appears in the display.

 The keypad lock is deactivated when a call is received. You can accept the call. It then locks again when the call ends.

Please note that when the keypad lock function is activated, no call numbers can be entered.

Switching the torch on/off

The torch can be switched on and off using the torch key. The torch lamp is on the top side of the mobile phone (→ p. 4).

 The torch can only be switched on when the mobile phone is already activated (→ p. 18).

Switch the torch on:


- 1 Press the torch key for 2 seconds.

- ▶ You have switched the torch on.

Switch the torch off:

- 1 Press the torch key for 2 seconds.

- ▶ You have switched the torch off.









 The torch uses up a lot of energy. Therefore, switch it off when it is not needed.

Using the Control key (Navigation keys)




The Control key, also referred to as the Navigation key, serves to navigate through menus and input fields. The control key is located between the left display key and right display key.

Functions of the Control key

In idle status:		Open the menu
		Open the menu
During a call		Raise caller volume for the receiver/handsfree function
		Lower caller volume for the receiver/handsfree function
In the menus:		Move upwards in the list of menu entries
		Move downwards in the list of menu entries
During text input:		Move one text field upwards
		Move one text field downwards

Display keys

The display keys are used to execute the functions indicated in the display. The display functions are indicated at the bottom left and bottom right of the mobile phone display and are dependent on the menu currently displayed.

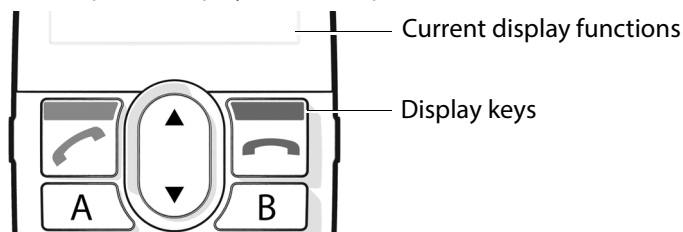

Some examples of the functions of the display keys are illustrated below:

Menu	Contacts	Open main menu/submenu
OK	Back	Confirm menu function / Save entry
Options	Back	To open a submenu:
Options	Delete	Delete character by character to the left

- 1 Press the left-hand or right-hand display key.
 - ▶ You have executed the display functions indicated in the display.

Icons in in the status bar

The icons in the status bar at the top edge of the display indicate current settings and the operating status of the mobile phone:



Vibration is activated, ringing tone is deactivated



Silent function is activated



Missed call in call list



Alarm clock is activated



Voice message missed



Device connected via USB

Wireless communication for SIM card 1



The number of bars in the icon indicates the quality of the current connection. The current network speed is displayed next to the symbol.

 
Battery charge status



Empty



Ca. 60 %



Full

The bars in the indicator light up in succession during the charging process.

Menu guidance


The mobile phone menu is comprised of a main menu and several submenus.

To provide a better orientation, the complete menu overview is depicted in this User Guide: → p. 6

Main menu

The functions in the main menu are indicated by an icon and a name.

Navigation in the main menu:

- 1 Press the **Menu** display key or one of the control keys.
 - 2 Use the  control key to select a submenu (e.g. Settings). The menu currently selected has a coloured background.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the submenu.
-

Submenus

The functions in the submenus are displayed in list form.

The menu entry currently selected has a coloured background. If the name of the entry does not fit in one line, the text runs through.

If there are further entries, a scroll bar appears which indicates the position of the entry in the submenu.



Access a function:

- 1 Select a submenu (e.g. Settings).
- 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the submenu selected.


Switch to previous menu level:

- 1 Press the End Call key  or the **Back** display key.
 - ▶ The previous menu level appears.

 
Entering text


Press the corresponding button once for each letter (e.g. "Hello" 4 2 5 5 6). The software recognises the word automatically. Use the arrow keys  /  to switch between the word suggestions.


With "New word" you can select letters by pressing the key with the desired letter several times.


Right display button (red) : 1 Correct entry.


Left display button (green) : 1 Apply word.

 key: 1 Apply word + space.

 Press hash key :

 - 1 Select upper/lower case, input mode, number input or language.
- 2 Confirm with the left display button (green) .

Enter special characters in edit mode (when writing text messages) ▶ Press star key .

 There are several options available for writing a text (SMS) (→ p. 43).

Making/taking calls


This chapter describes the options available with which to telephone using the mobile phone. This includes the various ways to make and take calls.

It also includes the description of functions which can be used during a call.

 

Making calls using the keypad

You can make national and international calls directly using the dialling keys on the mobile phone keypad.

Dial a national phone number:

- 1 Enter the relevant phone number of the contact required, including access code, using the keypad .
 - 2 Press the **Options** display key.
 - 3 Select **Call**.
- ▶ You have dialled a phone number using the dialling keypad.

Dial an international phone number:

- 1 Press the Star key  twice, until the + sign is inserted.
 - 2 Enter the relevant phone number of the contact required, including access International dialling code (e.g. +43), using the keypad .
- ▶ You have dialled an international phone number.

You can delete digits or cancel dialling a phone number:

Delete digits: 1 Press the **Delete** display key.

Cancel dialling 1 Press the **Back** display key.

Making calls from the phone book

- 1 Press the **Contacts** key in the display.
 - 2 Select the entry required.
 - 3 Press the **Options** display key.
 - 4 Select **Call**.
- ▶ You have dialled a phone number from the phone book.

Detailed information on the phone book: → p. 35

Making calls from a call list

The call lists contain the last calls taken, rejected and missed.

- 1 Press the **Menu** display key.
 - 2 Select **Call logs**.
 - 3 Select the required call list (e.g. **Missed calls**).
 - 4 Select the entry required.
 - 5 Press the **Options** display key.
 - 6 Select **Call**.
- ▶ You have dialled a phone number from the call list.

Detailed information on the call lists: → p. 32

Making calls with the direct dialling keys


You can assign 2 important phone numbers to the direct dialling keys A and B.



Select a direct dialling key:

- 1 Press the required direct dialling key (A or B) **longer**.

or

- 1 Press the **Menu** key in the display.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Speed dial**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required key A or B.
 - 7 Press the **Options** display key.
 - 8 Select **Edit**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Nummer eingeben**.
 - 11 Enter the  call number.
 - 12 Dial the selection by pressing the **OK** key in the display.
- or

Making/taking calls

- 1 Select the required key A or B.
- 2 Select **Options**.
- 3 Select **Import contacts**.
- 4 Dial the selection by pressing the **OK** key in the display.
- 5 Select the entry required.
- 6 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have assigned a phone number to a direct dialling key.

Dialling a phone number using a direct dialling key

- 1 Press the required direct dialling key A or B **longer**.
 - ▶ You have dialled the phone number assigned to the direct dialling key.

Taking calls

An incoming call is indicated by a ringtone from the mobile phone. The display of the mobile phone shows the phone number of the caller (if transmitted). If the caller is in the phone book, the name assigned appears.


Take a call:

- 1 Press the Call key .

or

- 1 Press the **Answer** display key.
 - ▶ You have taken an incoming call.

Rejecting a call:

- 1 Press the End Call key .

or

- 1 Press the **Reject** display key.
 - ▶ You have rejected an incoming call.

Ending a call in progress:

- 1 Press the End Call key .
- ▶ You have ended a phone call which was in progress.

If you do not take an incoming call, it is recorded in the **Missed calls** call list(→ p. 32).

Settings for incoming calls

Activating/deactivating ringtone and/or vibration: → p. 75

Take call with any key: → p. 75

Protection against unwanted calls (block list)

You can enter numbers in a block list.


Calls from these numbers are forwarded directly to the mailbox and not indicated by the mobile phone. You can create entries in the block list manually or apply phone numbers from the phone book.

Adding phone numbers to the block list

You can enter up to 50 numbers the block list.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **blocklist**.
- 7 Confirm the selection by pressing the **Edit** key in the display.
- 8 Select **blocklist**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Press the **Options** key in the display.

Add phone numbers manually:

- 11 Select **New**.
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Enter a name and number using the keypad .
- 14 Dial the selection by pressing the **OK** key in the display.

or add a number from the phone book:

- 11 Select **Import contacts**.
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Select the entry required.
- 14 Press the **Options** key in the display.
- 15 Select **Mark**.
- 16 Press the **Options** key in the display.
- 17 Select **OK**.

- ▶ You have assigned a phone number to the block list.



The first entry displays a dialogue for activating the block list. Confirm the selection by pressing the **OK** key in the display.

During a phone call

The functions described here are available while a phone call is in progress.

Handsfree mode

You can use the loudspeaker of the mobile phone for to make calls (hands-free). This means that you have both hands free during the conversation..

Activate Handsfree mode:

- 1 Press the **Options** key in the display.
- 2 Select **Hands-free**.
 - ▶ You have switched Handsfree mode on.
The caller can be heard via the loudspeaker.



Deactivate Handsfree mode:

- 1 Press the **Options** key in the display.
 - 2 Select the **Cancel handsfree function**.
 - ▶ You have switched Handsfree mode off.
The caller can be heard via the receiver.
-



Adjusting the loudspeaker during a phone call


The volume of the caller can be adjusted to different levels. The setting adjustment applies for the receiver and loudspeaker for Handsfree mode.

Adjust the volume during a phone call:

- 1 Press the Control key  to raise the volume.
- 2 Press the Control key  to lower the volume.

or

- 1 Press the **Options** key in the display.
- 2 Select **Adjust volume**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the Control key  to raise the volume.
- 5 Press the Control key  to lower the volume.
- 6 Select **Back**.

 The setting is automatically saved after about 3 seconds if you have not dialled **Back**.

- ▶ You have set the volume for the phone call.

Muting the microphone

If the microphone is muted, the caller can no longer hear you.

Mute the microphone:

- 1 Press the **Options** key in the display.
- 2 Select **Mute**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have muted the microphone.
The caller can no longer hear you.

Switch the microphone back on:

- 1 Press the **Options** key in the display.
- 2 Select **Cancel mute**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have switched the microphone on.
The caller can hear you again.

Call divert

In the case of call divert, calls are forwarded to another phone number or to the mailbox.



Not all network providers support the call divert function.


Setting up call divert

Before the call divert function can be set up, the call divert function must be switched on.

Switch on the call divert function:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call forwarding**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select one of the following options:
Call forwarding unconditional; Call forwarding on busy; Call forwarding on no reply; Divert if unreachable
- 9 Confirm the selection by pressing the **Edit** key in the display.
- 10 Select **Turn on**.
- 11 Select the destination (**Number** or mailbox) for the diverted calls.

Divert to a phone number:

- 1 Select **Divert to number**.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Enter the phone number using the keypad .
- 4 Only with **Call forwarding on no reply**:
Select one of the specified response times.
- 5 Confirm the selection by pressing the **OK** key in the display.

or

- 1 Press the **Contacts** key in the display.
- 2 Select the contact required.
- 3 Confirm the selection by pressing the **OK** key in the display.

Divert to a mailbox:



The number of the mailbox is assigned to Key 1 (→ p. 38).

- 1 Select **Divert to voicemail**.
- ▶ You have set up the call divert to another phone number or the mailbox.

Revoking call divert

Switch off the call divert function:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call forwarding**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Cancel all diverts**.
- 9 Confirm the selection by pressing the **Edit** key in the display.
- ▶ You have switched the call divert function off.

Call lists

The mobile phone saves different types of calls (missed, accepted and outgoing calls) in call lists.

Opening a call list

- 1 Press the **Menu** key in the display.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened an overview of the call lists.

The overview of the call lists indicates submenus for every type of call:

- **All calls**
- **Missed calls**
- **Received calls**
- **Dialled calls**
- **Rejected calls**



The **All calls** menu contains a summary of the calls of all types of call.

Beside the name of the list is the number of respective entries contained in the list.

- 1 Select the required call list (e.g. missed calls).
- 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the required call list.

Information on a call

- Phone number or name if the contact is contained in the phone book
- Date and time

 If there is at least one missed call, the  icon appears in the status bar.

Managing the entries in the call lists

- 1 Press the **Menu** key in the display.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the call list required.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the entry required.
- 7 Select **Options**.

- | | |
|--------------------------------------|-------------------------------------|
| Dial a number | ▶ Select Call . |
| Show information regarding the call: | ▶ Select Details . |
| Copy number in phone book: | ▶ Select Add to contacts . |
| Write a text message (SMS): | ▶ Select Write message . |
| Copy number in block list: | ▶ Select Add to blocklist . |
| Copy number in allow list | ▶ Select Add to allow list . |
| Delete an entry: | ▶ Select Delete . |

Deleting a call list

- 1 Press the **Menu** key in the display.
 - 2 Select **Call logs**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Delete all**.
 - 5 Select the required call list.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Confirm deleting the prompt by selecting **OK**.
- ▶ You have deleted the call list.

Call timer

- 1 Press the **Menu** display key.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call timers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The following information is shown:

- | | |
|------------------------|--|
| Last call: | ▶ Shows you the call duration of the last call. |
| Received calls: | ▶ Shows you the call duration of the calls received. |
| Dialled calls: | ▶ Shows you the call duration of the dialled calls. |
| Call history: | ▶ Shows you the duration of all calls. |

Resetting the call timer

- 1 Press the **Menu** display key.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call timers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Reset** key in the display.
- 7 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have reset the call timer.

Phone book

The phone book can contain up to 1000 entries. Entries can be stored in the internal phone memory or on the SIM card.

You can create phone book entries manually, transfer them from a call list or transfer a phone number to the phone book when dialling it.

Opening the phone book

1 Press the **Contacts** key in the display.

or

1 Press the **Menu** key in the display.

2 Select **Contacts**.

3 Confirm the selection by pressing the **OK** key in the display.

The **Contacts** display key is always used in the following description.

Phone book entries

The phone book contains all the phone book entries. They are sorted alphabetically.

An entry contains the following information:

- Name

Information on contacts


An icon indicates where the phone book entry is stored:





On the mobile phone

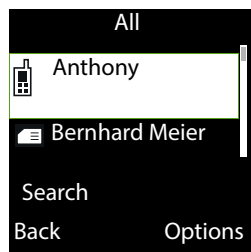

On a SIM card





Creating a phone book entry

- 1 Press the **Menu** key in the display.
 - 2 Select **Contacts**.
 - 3 Select **Options**.
 - 4 Select **New**.
 - 5 Select where the new phone book entry should be stored (SIM card or phone memory).
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select **Name**.
 - 8 Select **Options**.
 - 9 Select **Edit**.
 - 10 Enter the name using the keypad .
 - 11 Confirm the selection by pressing the **OK** key in the display
 - 12 Select **Mobile** or **Home number**.
 - 13 Select **Options**.
 - 14 Select **Edit**.
 - 15 Enter the phone number using the keypad .
 - 16 Confirm the selection by pressing the **OK** key in the display.
 - 17 Select **Options**.
 - 18 Select **Save**.
- ▶ You have created a phone book entry.

Further information on entering text: → p. 23

Searching for a phone book entry

- 1 Enter a letter, numbers or a name using the keypad .
- ▶ Entries which correspond to the input are displayed.
- or
- 1 Scroll through the list using the Control key .

Making calls from the phone book

- 1 Press the **Menu** key in the display.
 - 2 Select **Contacts**.
 - 3 Select the entry required.
 - 4 Press the **Options** key in the display.
 - 5 Select **Call**.
- ▶ You have dialled the number from the phone book.

Editing/Managing phone book entries

- 1 Select **Contacts**.
- 2 Select the entry required.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Options**.
- 5 Select one of the following options:


- | | |
|---------------------------------|-------------------------------------|
| Call contact: | ▶ Select Call . |
| Display contact: | ▶ Select View contacts . |
| Write a text message (SMS): | ▶ Select Write message . |
| Add contact: | ▶ Select New . |
| Delete a contact | ▶ Select Delete . |
| Delete multiple contacts: | ▶ Select Delete multiple . |
| Copy, import or export contact: | ▶ Select Import/Export . |
| Send V-card: | ▶ Select Send vCard . |
| Add to allow list: | ▶ Select Add to allow list . |
| Add to block list: | ▶ Select Add to blocklist . |
| Mark several: | ▶ Select Mehrere markieren . |
| Further options: | ▶ Select Others . |

Mailbox

If your phone provider provides you with a mailbox (answering machine), a caller can leave a message for you if you do not take the call.

In order to play and listen to voice messages in your mailbox, you need the phone number of the mailbox. If necessary, ask your mobile service provider with regard to the call number.

 You can listen to the messages on the mailbox:

- 1 Press and hold the  key.
- ▶ You have listened to the messages on your mailbox.

Emergency calls (SOS)

The mobile phone offers the following SOS functions:

- SOS calls
- SOS SMS (text message)
- SOS alarm



Do not use local, national or international emergency numbers.

SOS calls

The SOS key provides a private emergency call function. By pressing the SOS key, you can call up to 5 numbers and/or send an SMS (text message).

Activating/Deactivating the SOS emergency call function

- 1 Press the **Menu** key in the display.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Status**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **On/Off**.
- 7 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have activated the SOS calls function.



When the function is switched off, the SOS key can only be used for the SOS alarm, not for emergency calls.


Entering emergency numbers

Enter the phone numbers to be dialled when the SOS key is pressed.. You can enter up to 5 phone numbers.

- 1 Press the **Menu** key in the display.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SOS Numbers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select an empty memory location (<empty>).
- 7 Select **Options**.
- 8 Select **Enter number**.

Emergency calls (SOS)

9 Confirm the selection by pressing the **OK** key in the display.

10 Enter the phone number using the keypad .

11 Select **Save**.

or

1 Complete working steps 1 to 8.

2 Select **Options**.

3 Select **Phonebook**.

4 Select the entry required.

5 Confirm the selection by pressing the **OK** key in the display.

▶ You have entered an emergency call number.

SOS text message (SMS)

In addition to the SOS calls, you can also send SOS text messages (SMS).

There is a standard text already provided. You can change this text. When the function is activated, text messages are sent to the emergency call numbers set up.

Activating/Deactivating SMS emergency notifications

1 Press the **Menu** key in the display.

2 Select **SOS**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **SOS SMS ON/OFF**.

5 Confirm the selection by pressing the **OK** key in the display.


6 Select **On/Off**.

7 Confirm the selection by pressing **OK** (● = selected).

▶ You have activate the SOS text message (SOS) function.

Changing the content of the SOS text message


You can change the pre-installed, standard SOS text message and enter your own individual text.

- 1 Press the **Menu** key in the display.
 - 2 Select **SOS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **SOS SMS**.
 - 5 Confirm the selection by pressing the **OK** key in the display. The standard text appears in the display.
 - 6 Delete the existing text by pressing the **Delete** key in the display
 - 7 Enter the text required using the keypad .
 - 8 Select **Options**.
 - 9 Select **Save**.
- ▶ You have changed the content of the SOS text message.

Information on entering text for SMS text messages: → p. 43

Activating the SOS alarm


When the SOS alarm is activated, the mobile phone issues a loud acoustic alarm signal after the SOS key has been pressed.

- 1 Press the **Menu** button in the display.
 - 2 Select **SOS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Warnton**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **On/Off**.
 - 7 Confirm the selection by pressing **OK** ( = selected).
- ▶ You have activated the SOS alarm function.


SMS (text messages)





You can send and receive text messages (SMS).

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.

The Control key  is used in the following description.

Writing and sending a text message

 A text message can contain up to 612 characters. In the case of more than 160 characters, the text (SMS) is sent as a **chained** SMS (up to 4 individual texts).

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Write message**.
 - 5 Confirm the selection by pressing the **Options** key in the display.
 - 6 Select **Open**.
 - 1 Enter the phone number of the contact using the keypad .
 - 2 Press the Control key .
 - or
 - Using Contacts:
 - 1 Select **Options**.
 - 2 Select **Contacts**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select the entry required.
 - 5 Select **Options**.
 - 6 Select **Mark**.
 - 7 Select **Options**.
 - 8 Select **OK**.
 - 7 Press the Control key .
 - 8 Enter the text required using the keypad .
 - 9 Select **Options**.
 - 10 Select **Send**.
 - 11 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have sent a text message.

Discarding a text written

If you want to discard a text which you have entered:

- 1 Select **Options**.
 - 2 Select **Abbrechen**.
- ▶ You have discarded the text entered.





If a text message cannot be sent, it is filed in the outbox (→ p. 47).



Input methods

Each key between 2 and 9 and the 0 key are assigned several letters and digits. When a key is pressed, the possible characters are shown in the display.


Selecting letters/digits:

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Press the Control key .
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Press the Hash key .
- 8 Select **ABC / abc / Abc**.
- 9 Press the relevant key, **briefly**, several times in succession if necessary, until the required character is displayed (→ p. 23).

Moving the cursor (left/right):



- 1 Press the Control key Up  or Down .

Change between lower case and upper case or number entry as necessary:

- 1 Press the Hash key .
 - 2 Select **ABC / abc / Abc / 123.0**.
- ▶ Confirm the selection by pressing the **OK** key in the display.


Changing the input language

The input language defines which characters are available for entering text.

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Write message**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Open**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Press the Hash key .
 - 9 Select **Writing language**.
 - 10 Select the input language required.
 - 11 Confirm the selection by pressing **OK** ( = selected).
- ▶ You have changed the input language.
-


 
Storing a text (SMS) temporarily (list of drafts)

You can store texts temporarily, to be changed and sent later.

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Write message**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Enter the text required using the keypad .
 - 7 Select **Save as draft**.
 - 8 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have stored the text as a draft in the list of drafts.

Editing drafts

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Drafts**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Open**.
The list of drafts appears in the display.
- 7 Select the draft required.
- 8 Select **Options**.
- 9 Select one of the following options:

Read SMS:	1 Select Open .
Delete draft:	1 Select Delete . 2 Confirm the selection by pressing the OK key in the display.
Delete all drafts:	1 Select Delete all . 2 Confirm the selection by pressing the OK key in the display.
Edit SMS:	1 Select Edit . 2 Confirm the selection by pressing the OK key in the display. 3 Delete the existing text by pressing the Delete key in the display 4 Enter the text required using the keypad  .
Send SMS	1 Select Open . 2 Enter the phone number of the contact using the keypad  (→ p. 42) 3 Select Options . 4 Select Send .
Lock/unlock SMS:	1 Select Lock/Unlock . 2 Confirm the selection by pressing the OK key in the display.
Move SMS:	1 Select Move . 2 Select Phone/SIM . 3 Confirm the selection by pressing the OK key in the display.

SMS (text messages)


- Mark SMS:
- 1 Select **Mark**.
 - 2 Select **MarkMark all**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- Sort SMS:
- 1 Select **Sort**.
 - 2 Select **Time/Contacts**.
 - 3 Confirm the selection by pressing the **OK** key in the display. (● = selected).

Sent messages

Sentbox Lists all the texts you have sent.



The **Save sent messages** function is activated (→ p. 51).

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Sentbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Open**.
The list of sent message is displayed.
- 7 Select the required text.
- 8 Select **Options**.
- 9 Select one of the following options:
 - Read SMS: 1 Select **Open**.
 - Delete SMS: 1 Select **Delete**.
2 Confirm the selection by pressing the **OK** key in the display.
 - Delete all texts: 1 Select **Delete all**.
2 Confirm the selection by pressing the **OK** key in the display.
 - Send to other contacts: 1 Select **Forward**.
The text is displayed.
2 Enter the phone number of the contact using the keypad 
3 Select **Options**.
4 Select **Send** (→ p. 42).

- Lock/unlock SMS: 1 Select **Lock/Unlock**.
 2 Confirm the selection by pressing the **OK** key in the display.
- Move SMS: 1 Select **Move**.
 2 Select **Phone/SIM**.
 3 Confirm the selection by pressing the **OK** key in the display.
- Mark SMS: 1 Select **Mark**.
 2 Select **MarkMark all**.
 3 Confirm the selection by pressing the **OK** key in the display.
- Sort SMS: 1 Select **Sort**.
 2 Select **Time/Contacts**.
 3 Confirm the selection by pressing the **OK** key in the display. (● = selected).

Outbox

All the texts which could not be sent, e.g. because no connection could be established or the call number was unknown, are stored on the outbox.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Outbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Open**.
 The list of messages not sent is displayed.
- 7 Select the required text.
- 8 Select **Options**.
- 9 Select one of the following options:
 - Read SMS: 1 Select **View**.
 - Send SMS 1 Select **Resend**.
 2 Confirm the selection by pressing the **OK** key in the display.
 - Delete SMS: 1 Select **Delete**.
 2 Confirm the selection by pressing the **OK** key in the display.


SMS (text messages)

- Delete all texts: 1 Select **Delete all**.
 2 Confirm the selection by pressing the **OK** key in the display.
- Lock/unlock SMS: 1 Select **Lock/Unlock**.
 2 Confirm the selection by pressing the **OK** key in the display.
- Move SMS: 1 Select **Move**.
 2 Select **Phone/SIM**.
 3 Confirm the selection by pressing the **OK** key in the display.
- Mark SMS: 1 Select **Mark**.
 2 Select **MarkMark all**.
 3 Confirm the selection by pressing the **OK** key in the display.
- Sort SMS: 1 Select **Sort**.
 2 Select **Time/Contacts**.
 3 Confirm the selection by pressing the **OK** key in the display. (● = selected).
-

Template

The templates contain a selection of prescribed texts. This template can be edited or sent directly.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Templates**.
- 5 Confirm the selection by pressing the **Options** key in the display.
- 6 Select **Open**.
The list of SMS templates appears in the display.
- 7 Select the required SMS template.
- 8 Select **Edit**.
- 9 Select one of the following options:


Edit SMS templates: 1 Select **Edit**.
 2 Enter the text required using the keypad .

Delete SMS templates: 1 Select **Edit**.
 2 Select **Delete**.

Receiving texts (SMS)

Incoming texts are stored in the inbox. The receipt of a new text is indicated by a notification tone (→ p. 77) and a message **unread messages** in the display.


- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Open**.
- 7 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The list of sent message is displayed.

If there are unread texts in the inbox, the  icon appears in the icon bar.

Read text (SMS)

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select **Open**.
- 9 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have read the text received.

Editing the inbox

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Posteingang**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select one of the following options:
 - Reply to SMS:
 - 1 Select **Answer**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Enter the text required using the keypad .
 - 4 Select **Options**.
 - 5 Select **Send** (→ p. 42).
 - Call sender:
 - 1 Select **Call**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
The call number is dialled.
 - Delete SMS:
 - 1 Select **Delete**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - Delete all texts:
 - 1 Select **Delete all**.
 - 2 Confirm the selection by pressing the **OK** key in the display.

Text (SMS) settings

Show Memory status

The SMS memory status indicates the actual and possible number of texts on the SIM card and in the internal mobile phone memory.

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Options**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Message capacity**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have opened the memory status.

Saving the texts (SMS) sent

You can define whether the texts which you have sent should be stored in the list **Sentbox** (→ p. 46).

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **SMS settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Save sent messages**.
 - 7 Select **OK**.
 - 8 Select **Prompt user, Save, Don't save**.
 - 9 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have defined whether the sent texts should be saved.

Preferred memory location

You can define whether texts should be stored on the mobile phone or on the SIM card.

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **SMS settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Preferred storage**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Phone, SIM**.
 - 9 Confirm the selection by pressing **OK** (= selected).
- ▶ You have defined the memory location where texts should be saved.

Further applications

This chapter describes further functions provided by the mobile phone.


Alarm clock





The date and time are correct.


Setting the alarm clock

You can set 3 alarm times. A wake up alarm (→ p. 55) is issued at the times set:

- 1 Press the **Menu** key in the display.
- 2 Select **Clock**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select a waking time required (00:00).
- 5 Press the **Options** key in the display.
- 6 Select **USB**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Use the Control key  to move between the input fields:

- | | |
|-----------|---|
| Message: | 1 Enter a name of the clock using the keypad  . |
| Time: | 1 Enter the time, to four-digits, using the keypad  . |
| Ringtone: | <ol style="list-style-type: none"> 1 Select Ringtone. 2 Press the Options key in the display. 3 Select Settings. 4 Confirm the selection by pressing the OK key in the display. 5 Select Fixed ringtones. 6 Confirm the selection by pressing the OK key in the display. 7 Select the ringtone for the alarm clock. 8 Confirm the selection by pressing the OK key in the display. |

Further applications

- Repeat:
- 1 Select **Repeat mode**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Settings**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Use the control key  to select how often the event is to be repeated (**Once/Daily/Working days**).
- Save:
- 1 Press the **Options** key in the display.
 - 2 Select **Save**.
 - 3 Confirm the selection by pressing the **OK** key in the display.

If an alarm clock is activated, the  icon appears in the icon bar in the mobile phone display.

Switching the alarm clock on and off

Switch a set alarm clock on or off:

- 1 Press the **Menu** key in the display.
 - 2 Select **Clock**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select a waking time required (00:00).
 - 5 Press the **Options** key in the display.
 - 6 Select **Settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **On/Off**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have switched the alarm clock on/off.

Wake-up call

An alarm is shown in the display and indicated by the selected ringtone melody. The wake-up call sounds for 60 second. If no key is pressed, it is repeated after 5 minutes. After the second repetition, the alarm call is deactivated.



During a call, the alarm is only indicated by a short tone.

Wake up call **deactivating/repeating after a pause (snooze mode)**

To switch off the alarm:

- 1 Select **Off**.
- 2 You have deactivated the wake up call.

Repeat alarm (snooze mode):

- 1 Select **Snooze**.

or

- 1 Press any key.
 - ▶ You have deferred the wake up call.
It will be repeated after 5 minutes.

Calendar

You can enter appointments (events) in the calendar and then be reminded of them.



The date and time are correct.



To open the calendar:

- 1 Press the **Menu** key in the display.
- 2 Select **Calendar**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the calendar.


The current date has a blue background; the currently selected day has a green background. Days with events are marked in red.

Navigating in the calendar

Choosing the required date:

- 1 Navigate up  and down  using the Control keys.

or

- 1 Press the **Options** display key.
- 2 Select **Go to date**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Enter the date required, to eight digits, using the keypad .
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have selected the required date.


Displaying events

An event is indicated at a the specified time by an acoustic signal (when activated) and an indicator in the display.

Switch the acoustic signal off:

- 1 Confirm the selection by pressing the **Cancel** key in the display.
- ▶ You have deactivated the alarm.


Creating a new event

- 1 Press the **Menu** key in the display.
- 2 Select **Calendar**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Options** key in the display.
- 5 Select **Add a new schedule**.
- 6 Use the Control key  to move between the input fields:


Naming an event:7 Select **Subject**.

8 Enter a name for the event using the keypad .

Enter date: 1 Select **Date**.

2 Enter the date required, to eight digits, using the keypad .

Enter time: 1 Select **Time**.

2 Enter the date required, to eight digits, using the keypad .

Ringtone: 1 Select **Ringtone**.

2 Press the **Options** key in the display.

3 Select **Settings**.

4 Confirm the selection by pressing the **OK** key in the display.

5 Select **Fixed ringtones/More ringtones**.

6 Confirm the selection by pressing **OK** ( = selected).

7 Select the ringtone required.

8 Confirm the selection by pressing the **OK** key in the display.



Further applications

- Repeat the event:
- 1 Select **Repeat mode**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Settings**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select how often the event is to be repeated (**Once/Daily repeat/Weekly repeat/Monthly/Yearly/No reminding**).
 - 6 Confirm the selection by pressing the **OK** key in the display.
- Save:
- 1 Press the **Options** key in the display.
 - 2 Select **Save**.

Further information on entering text: → p. 23

Displaying events

You can display events assigned to a specific day:

- 1 Press the **Menu** key in the display.
 - 2 Select **Calendar**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Use the Control key to scroll up  or down  to the required day.
 - 5 Press the **Options** key in the display.
 - 6 Select **View schedules**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select an event.
 - 9 Press the **Options** key in the display.
 - 10 Select **View**.
 - 11 Confirm the selection by pressing the **OK** key in the display.
- You have opened the event selected. The details are displayed.

You can display all the events:

- 1 Press the **Menu** key in the display.
- 2 Select **Calendar**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Options** key in the display.
- 5 Select **All schedules**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select an event.
- 8 Select **Options**.

9 Select **View**.

10 Confirm the selection by pressing the **Options** key in the display.

▶ You have opened all the events. The details are displayed.

Deleting events

You can delete all events of a day or all events in the calendar.

1 Press the **Menu** key in the display.

2 Select **Calendar**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Press the **Options** key in the display.

5 Select **Clear today's tasks/Clear all**.

6 Confirm the selection by pressing the **OK** key in the display.

7 Confirm the deletion by pressing the **OK** key in the display.

▶ You have deleted the events selected.

Or

You can delete a specific event.

1 Press the **Menu** key in the display.

2 Select **Calendar**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Use the Control key to scroll up  or down  to the required day.

5 Press the **Options** key in the display.

6 Select **View schedules/All schedules**.

7 Confirm the selection by pressing the **OK** key in the display.

8 Select an event.

9 Select **Delete**.


10 Confirm the selection by pressing the **OK** key in the display.

11 Confirm the deletion by pressing the **OK** key in the display.

▶ You have delete the event selected.

Pairing a Bluetooth device

- 1 Press the **Menu** key in the display.
- 2 Select **Bluetooth**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Bluetooth**.
- 5 Press the **Turn on** key in the display.

 Bluetooth is activated on your mobile phone if a tick is placed in the box next to Bluetooth.

- 6 Select **Paired device**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Add new device**.
 - 9 Press the **Add** key in the display.
 - 10 Wait until the search has been completed.
 - 11 Select the required device for pairing.
 - 12 Press the **Pair** key in the display.
- ▶ You have connected your mobile phone to the device.

Camera and gallery

The mobile phone is equipped with a camera (→ p. 4). The **Camera** application provides access to your photos and you can also adjust the camera settings.

Quick access to your photos is possible using the **Image** application.

Taking photos

- 1 Press the **Menu** key in the display.
 - 2 Select **Camera**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Point the camera lens at the image required.
 - 5 Press the key .
- ▶ You have taken a photo of the image in front of the camera.

You can discard the photo with the **Back** key in the display. To save the photo, press the **Save** key in the display. It is then saved in JPG format in the **Photos** folder in the internal memory of the mobile phone or on the memory card.

Viewing photos

You can view and manage photos taken via the camera or gallery.

Showing photos via the camera:

- 1 Press the **Menu** key in the display.
 - 2 Select **Camera**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Press the **Opt.** key in the display.
 - 5 Select **Image**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select the file required.
 - 8 Press the **Options** key in the display.
 - 9 Select **Open**.
 - 10 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have displayed a photo via the camera.

Showing photos via the gallery:

- 1 Press the **Menu** key in the display.
 - 2 Select **Image**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select the file required.
 - 5 Press the **Options** key in the display.
 - 6 Select **Open**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have displayed a photo via the gallery.

Editing photos

Showing photos via the image viewer:

- 1 Press the **Menu** key in the display.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Opt.** key in the display.
- 5 Select **Image**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select the file required.
- 8 Press the **Options** key in the display.
- 9 Select **Open**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Press the **Options** key in the display.

or


- 1 Press the **Menu** key in the display.
- 2 Select **Image**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the file required.
- 5 Press the **Options** key in the display.
- 6 Select **Open**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Press the **Options** key in the display.
- 9 Select one of the following options:

Using as a background picture:

- 1 Select **Set as wallpaper**.
- 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The photo is used as a background.

Use as contact image:

- 1 Select **Set as contact icon**.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select the contact required.
- 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The photo is used as a contact image.

- Delete:
- 1 Select **Delete**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Confirm the the deletion by pressing the **OK** key in the display.
- Share image:
- 1 Select **Share**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Bluetooth**.
 - 4 Select the required device.
 - 5 Press the **USB** key in the display.
- Rename image:
- 1 Select **Rename**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Delete existing characters by pressing the **Delete** key in the display
 - 4 Enter a new name for the folder using the keypad .
 - 5 Confirm the selection by pressing the **OK** key in the display.
- Presentation:
- 1 Select **Slideshow**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
- Show information on the photo
- 1 Select **Details**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The file name, resolution, file size and creation date of the photo are displayed.

Camera and photo settings

- 1 Press the **Menu** key in the display.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Opt.** key in the display.
- 5 Select **Options** or **More options**.
- 6 Confirm the selection by pressing the **OK** key in the display.

Further applications

- 7 Select the settings required.
 - 8 Confirm the selection by pressing the **OK** key in the display
- ▶ You have adapted the camera settings.

Setting the memory location

Photos are saved in the mobile phone internal memory or on the SD card.

Set the memory location:

- 1 Press the **Menu** key in the display.
 - 2 Select **Camera**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Press the **Opt.** key in the display.
 - 5 Select **Settings**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select **Preferred storage**.
 - 8 Confirm the selection by pressing the **OK** key in the display.
 - 9 Change the required memory location (**Phone / SD card**).
 - 10 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have set the memory location.

File manager

Your personal data, e.g. photos, music files, ringtones, call recordings are saved in the internal memory of the phone or on an SD card which you have inserted in the device. The files can be accessed via the file manager:

- 1 Press the **Menu** key in the display.
- 2 Select **My files**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone/SD card**.
- 5 Press the **Options** key in the display.
- 6 Select **Open**.
- 7 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The files or folders stored in the memory are displayed.
- 8 Select the folder or file you require.
- 9 Press the **Options** key in the display.
- 10 Select one of the following options:
 - **Open**
 - **New folder**
 - **Delete**
 - **Details**
 - **USB**
 - **Search**
 - **Sorting**
 - **Mark**
 - **Memory status**

Formatting the memory

If you want to delete all the personal data on the mobile phone, the simplest method is to format the memory. Individual files, e.g. photos or ringtone files are deleted using the respective application.



Attention!

As a result of formatting, all the data stored (e.g. photos) in the memory (phone / memory card) is deleted. This process cannot be reversed.

- 1 Press the **Menu** key in the display.
- 2 Select **My files**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone/MemoryCard**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Options**.
- 7 Select **Format**.
- 8 Confirm the selection by pressing the **OK** key in the display.
- 9 Confirm the formatting process by selecting **Yes**.
 - ▶ You have formatted the selected memory. All the personal data has been deleted.

Loading data in the mobile phone memory

You can also manage your personal data on a PC.

- 1 Connect the mobile phone to a PC using the USB cable.
- 2 Select **USB**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The internal memory of the mobile phone is displayed as a drive on the PC.

You can manage the folders and files on the mobile phone using the standard functions of your PC operating system.

You can copy audio and video files into the memory of the mobile phone for use as ringtones or a display background as well as music files for an audio player.



As long as the mobile phone remains connected to the PC, the File Manager function is not available.


Settings

This chapter describes the settings which can be set for operating the mobile phone.


Date and time

The date and time can be set manually.

Setting manually

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Time & date**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Use the Control key  to move between the input fields.

Set time: 1 Use the keypad  to enter the time (format: HH:MM).

Set date: 1 Use the keypad  to enter the date (format: YYYY.MM.DD)

Time format: 1 Press the **Edit** key in the display.
 2 Select **12 hours/24 hours**.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Date format: 1 Press the **Edit** key in the display.
 2 Select **Year-Mon-Day/Mon-Day-Year/Day-Mon-Year**.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Datumstrennzeichen: 1 Press the **Edit** key in the display.
 2 Select the required separator character.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Settings

- Update time settings:**
- 1 Press the **Edit** key in the display.
 - 2 Select **Auto update time**.
 - 3 Confirm the selection by pressing the **Edit/Cancel** key in the display.
 - 4 Press the **Back** key in the display.
- or
- 1 Select **Manual update time**.
 - 2 Confirm the selection by pressing the **Edit** key in the display.

- 9 Confirm the selection by pressing the **Done** key in the display.

Allow list and block list

You can assign phone numbers to a allow list or block list. When the allow list is activated, calls from phone numbers not in the list are automatically rejected.

When the block list is activated, calls from phone numbers which are on the list are automatically rejected.

Allow list


The allow list used to enter number which are allowed to reach you.

Switch the allow list on/off:



- 1 Press the **Menu** key in the display.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Security**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Allowlist**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Allowlist settings**.
 - 9 Select **Audio call interception/Message interception**.
 - 10 Press the **Edit/Cancel** key in the display.
- ▶ You have switched the allow list on/off.

Add phone numbers to the allow list:

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.

- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Allowlist**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Add to Allowlist**.
- 9 Press the **Options** key in the display.
- 10 Use the control key  to move between the input fields.

Add contact:

- ▶ Select **New**.
- ▶ Select **Edit**.
- ▶ Select **Name**.
- ▶ Enter the name using the keypad .
- ▶ Select **Number**.
- ▶ Enter the number using the keypad .
- ▶ Press the **Options** key in the display.
- ▶ Select **Save**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Delete a contact

- ▶ Select **Delete**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Import contacts:

- ▶ Select **Import contacts**.
- ▶ Select the required entry.
- ▶ Press the **Options** key in the display.
- ▶ Select **Mark**.
- ▶ Confirm the selection by pressing the **OK** key in the display.
- ▶ Press the **Options** key in the display.
- ▶ Select **OK**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Import from call list:

- ▶ Select **Add from call history**.
- ▶ Select the required entry.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Delete everything:

- ▶ Select **Delete all**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Block list

The block list is used to prevent calls from unwanted phone numbers.


Switch the block list on:

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **blocklist**.
- 7 Confirm the selection by pressing the **Edit** key in the display.
- 8 Select **blocklist settings**.
- 9 Select **Audio call interception/Message interception**.
- 10 Press the **Edit/Cancel** key in the display.
 - ▶ You have switched the block list on/off.



Add phone numbers to the block list:

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **blocklist**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **blocklist**.

9 Confirm the selection by pressing the **OK** key in the display.

10 Use the Control key  to move between the input fields.

Add contact:

- ▶ Select **New**.
- ▶ Select **Edit**.
- ▶ Select **Name**.
- ▶ Enter the name using the keypad .
- ▶ Select **Number**.
- ▶ Enter the number using the keypad .
- ▶ Press the **Options** key in the display.
- ▶ Select **Save**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Delete a contact

- ▶ Select **Delete**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Copy contact:

- ▶ Select **Import contacts**.
- ▶ Select the required entry.
- ▶ Press the **Options** key in the display.
- ▶ Select **Mark**.
- ▶ Confirm the selection by pressing the **OK** key in the display.
- ▶ Press the **Options** key in the display.
- ▶ Select **OK**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Delete everything:

- ▶ Select **Delete all**.
- ▶ Confirm the selection by pressing the **OK** key in the display.

Language

You can define the languages for the display and for keypad input separately from each other.

Display language

The display language defines the language for displays, menus and messages on the mobile phone.

- 1 Press the **Menu** key in the display.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Language settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Display language**.
 - 9 Press the **Edit** key in the display.
 - 10 Select the required language.
 - 11 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have defined the display language.
-

Writing language

The writing language defines the range of characters available for text input (e.g. When writing a text (SMS)).

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Language settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Writing language**.
 - 9 Press the **Edit** key in the display.
 - 10 Select the required writing language.
 - 11 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have selected the writing language.

Tones and signals

Selecting the acoustic profile

The mobile phone offers an acoustic profile with which you can adapt the phone's reaction to calls received according to the ambient conditions.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Audio profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required profile (**Standard**, **Vibrate**, **Silent**).
 - 7 Press the **Options** key in the display.
 - 8 Select **Activated**.
- ▶ You have selected the acoustic profile.

Standard The mobile phone rings when a call is received.

Vibrate The mobile phone vibrates. The ringtone is deactivated. An icon appears in the display.

Silent A incoming call is only shown visually on the display. The mobile phone neither rings or vibrates. An icon appears in the display.





Defining the ringing tone

You can select one of the pre-installed ringtones as your ringtone. Individual ringtones (mp3 format) can be loaded in the phone's internal memory or on the memory card in the **Ringtones** (→ p. 67) folder.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Audio profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required audio profile.
 - 7 Press the **Options** key in the display.
 - 8 Select **Settings**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Ring settings**.
 - 11 Confirm the selection by pressing the **OK** key in the display.
 - 12 Select **Caller ringtone**.
 - 13 Press the **Edit** key in the display.
 - 14 Select **Fixed ringtones**.
 - 15 Confirm the selection by pressing the **OK** key in the display.
 - 16 Select the ringtone required.
The ringtone is played as a test.
 - 17 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have changed the ringtone.

Setting the ringtone volume

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Audio profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required audio profile.
 - 7 Press the **Options** key in the display.
 - 8 Select **Settings**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Adjust volume**.
 - 11 Press the **Edit** key in the display.
 - 12 Select **Caller ringtone**.
 - 13 Press the **Edit** key in the display.
The current ringtone is played as a test.
 - 14 Set the volume louder  or quieter  using the Control key.
 - 15 Confirm the selection by pressing the **Done** key in the display.
- ▶ You have set the volume of the ringtone.

Message tone

The message tone indicates the receipt of a new text message (SMS). You can select a melody as a message tone.

Selecting the message tone

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Audio profiles**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required **Audio profiles**.
- 7 Press the **Options** key in the display.
- 8 Select **Settings**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Ring settings**.
- 11 Confirm the selection by pressing the **OK** key in the display.
- 12 Select **Message ringtone**.
- 13 Press the **Edit** key in the display.

Settings

14 Select **Fixed ringtones**.

15 Confirm the selection by pressing the **OK** key in the display.

16 Select the ringtone required.

The ringtone is played as a test.

17 Confirm the selection by pressing the **OK** key in the display. (● = selected).

▶ You have changed the ringtone.

Setting the volume of the message tone

18 Press the **Menu** display key.

19 Select **Settings**.

20 Confirm the selection by pressing the **OK** key in the display.

21 Select **Audio profiles**.

22 Confirm the selection by pressing the **OK** key in the display.

23 Select the required audio profile.

24 Press the **Options** key in the display.

25 Select **Settings**.

26 Confirm the selection by pressing the **OK** key in the display.



27 Select **Adjust volume**.

28 Press the **Edit** key in the display.

29 Select **Message ringtone**.

30 Press the **Edit** key in the display.

The current ringtone is played as a test.

31 Set the volume louder  or quieter  using the Control key.

32 Confirm the selection by pressing the **Done** key in the display.

▶ You have set the volume of the ringtone.

Other sounds

The mobile phone offers additional options for tones (e.g. key tones).

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Audio profiles**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required audio profile.
- 7 Press the **Options** key in the display.
- 8 Select **Settings**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Other alert rings**.
- 11 Press the **Edit** key in the display.
- 12 Select one of the following options:

- Key tones:
- 1 Select **Key tone**.
 - 2 Press the **Edit** key in the display.
 - 3 Select **Mute/Ring1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the key tone.

- Battery warning:
- 1 Select **Battery low alert**.
 - 2 Press the **Edit** key in the display.
 - 3 Select **Turn on/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the battery warning.

- Dialling tone:
- 1 Select **Dial tone**.
 - 2 Press the **Edit** key in the display.
 - 3 Select **Turn on/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the battery warning.



The settings for **Other alert rings** can only be made in the audio profile **Standard**.



Torch when receiving a call

When a call is received, the torch flashes. This function can be switched on or off.


- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Audio profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required audio profile.
 - 7 Press the **Options** key in the display.
 - 8 Select **Settings**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Torch for incoming call**.
 - 11 Select **Edit**.
 - 12 Select **Power off/Turn on**.
 - 13 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have defined the torch reaction when a call is received.

Display

The mobile phone offers various setting options for the display.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Display**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select one of the following options:
 - Background image:
 - 1 Select **Wallpaper settings**.
 - 2 Press the **Edit** key in the display.
 - 3 Select **Static wallpaper/More pictures**.
 - 4 Confirm the selection by pressing **OK** (● = selected).
 - 5 Select the required image.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - Start screen settings:
 - 1 Select **Idle display settings**.
 - 2 Press the **Edit** key in the display.
 - 3 Select **Time & date/SIM selection/Today's schedule**.
 - 4 Press the **Turn on/Cancel** key in the display.
 - 5 Confirm the selection by pressing the **Back** key in the display.
 - Brightness:
 - 1 Select **Contrast**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Set the brightness to one of 7 levels using the Control key .
 - 4 Confirm the selection by pressing the **Done** key in the display.
 - Duration:
 - 1 Select **Display backlight**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select the duration (15 sec. - 5 min.) using the control key .
 - 4 Confirm the selection by pressing the **OK** key in the display.


Settings

- Automatic key lock:
- 1 Select **Auto keypad lock**.
 - 2 Press the **Edit** key in the display.
 - 3 Select the duration (Off - 5 minutes) using the control key .
 - 4 Confirm the selection by pressing the **OK** key in the display.

SIM cards and network operator

Activating/deactivating the SIM card lock

When the mobile phone is switched on, you are requested to enter the SIM card PIN. You can deactivate this SIM card lock.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Security**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **PIN**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **PIN**.
 - 9 Press the **Modify PIN** key in the display.
 - 10 Enter the current PIN using the keypad .
 - 11 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have deactivated the SIM card lock.
You can use the mobile phone without entering the PIN.



Changing the SIM card PIN

You can change PIN 1 and PIN 2 of the SIM card.



The PIN lock is active.

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **PIN**.

- 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Modify PIN**.
 - 9 Press the **Edit** key in the display.
 - 10 Enter the current PIN using the keypad .
 - 11 Confirm the selection by pressing the **OK** key in the display.
 - 12 Enter the new PIN using the keypad .
 - 13 Confirm the selection by pressing the **OK** key in the display.
 - 14 Enter the new PIN again as confirmation.
 - 15 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have changed the PIN of the SIM card.



If the current PIN is entered incorrectly three times in succession, the SIM card is locked. You can unlock the SIM card with the PIN2. If you enter PIN2 incorrectly three times in succession, you will no longer have access to the SIM card.

In such a case, please contact your mobile service provider.


Resetting to the factory settings

If you want to hand the mobile phone over to a third party, you can reset it to the factory settings. All the individual settings are reset, the call lists and phone book entries in the phone's internal memory are deleted.



Attention!

On resetting the factory settings, all the data stored (e.g. photos) are deleted from the mobile phone. This process cannot be reversed.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Restore factory settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Enter the phone pin using the keypad .
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Confirm the resetting process by pressing **Ja**.
- ▶ You have reset the mobile phone to its factory settings.

Appendix

Customer service

If you have any problems with your mobile phone, please contact a Gigaset dealer or the Gigaset Service Center.

You can also purchase original accessories (e.g. batteries, charger) there.

Help is available at www.gigaset.com/service

Guarantee Certificate

Unless otherwise specified, the guarantor (hereinafter referred to as "Gigaset Technologies") grants the consumer (customer) a durability warranty under the following conditions (warranty conditions), without prejudice to the consumer's statutory rights relating to defects. The customer's warranty rights are not limited by this warranty. Warranty rights can be asserted free of charge. This warranty represents an obligation on the part of the guarantor in addition to the statutory warranty rights that can be asserted free of charge for defect claims.

Warranty conditions:

- In the case of new devices (telephones, smartphones) and their components exhibiting defects within 24 months of purchase, Gigaset Technologies shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. This durability warranty applies for 12 months from the date of purchase for parts subject to wear (all moving parts that can be replaced by the customer itself, e.g. spare parts, batteries, keyboards, housing).
- This warranty does not apply in the event a defect to devices is attributable to improper treatment and/or a failure to follow the operating guides.
- This warranty does not cover any services provided by the appointed dealer or by the customer himself (e.g. installation, configuration, software downloads). Manuals and, where applicable, accompanying software on a separate data carrier are also excluded from the warranty.
- Proof of purchase plus date of purchase are required as evidence of a valid warranty. Warranty claims must be asserted within two (2) months of the awareness of a warranty event.
- Replaced devices or their components returned to Gigaset Technologies during the course of an exchange are transferred to the ownership of Gigaset Technologies.

- This warranty applies to new devices acquired within the European Union. These will be exchanged free of charge for a technologically current device or repaired by Gigaset Technologies. The warrantor is Gigaset Technologies GmbH, Frankenstraße 2, D-46395 Bocholt.
- No further or different claims arising from this manufacturer's warranty will be accepted. Gigaset Technologies accepts no liability for operational interruptions, loss of profit and loss of data, software additionally installed by the customer or other information. The customer is responsible for safeguarding these. The liability disclaimer does not apply if liability is mandatory, for example under the Product Liability Act, in cases of wilful intent, gross negligence, injury to life, limb and health or breach of material contractual obligations. Claims for damages in respect of breach of material contractual obligations are however limited to foreseeable losses typical for the contract, unless liability is as a result of wilful intent, gross negligence, injury to life, limb and health or under the Product Liability Act.
- Successful assertion of a warranty claim does not extend the term of the warranty.
- Unless there is a warranty event, Gigaset Technologies reserves the right to charge the customer for an exchange or repair. Gigaset Technologies will inform the customer of this in advance.
- Any change to the rules governing burden of proof to the detriment of the customer is not connected with the above rules.
- Federal German law applies to this warranty, to the exclusion of the United Nations Convention on Contracts for the International Sale of Goods (CISG). This choice of law does not deprive the consumer of the protection he/she would have been granted under provisions that cannot be derogated from by agreement, according to the law of the country in which he/she has her habitual residence ("favourability principle").

Please contact the warrantor's customer services to redeem and assert this warranty. You can find the relevant telephone number in our Service Portal at www.gigaset.com/service.

Disclaimer

The display of your mobile device consists of pixels. Each pixel consists of three sub-pixels (red, green and blue).

A sub-pixel may fail or show a colour deviation.

A warranty claim is only valid if the maximum number of permissible pixel errors is exceeded.

Description	Max. pixel errors
Colour-illuminated sub-pixels	1

Guarantee Certificate

Description	Max. pixel errors
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are not covered by the warranty.

Approval

This appliance is intended for use within the European Economic Community.

Country-specific features are taken into account.

Gigaset Technologies GmbH hereby declares that the radio equipment type Gigaset GL695 complies with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following web address:

www.gigaset.com/docs.

In some cases, this declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Notice on the Disposal of Electrical and Electronic Equipment

For more information on environmentally friendly products and procedures, please visit www.gigaset.com.

Environmentally Responsible Disposal

(in accordance with the WEEE Directive and the EU Battery Directive)



The crossed-out wheeled bin symbol on the product, accessories (e.g. charger, headset, USB cable), battery, or accompanying documentation indicates that these components must not be disposed of with household waste.



Waste electrical and electronic equipment and batteries must be collected separately and returned to municipal collection points or retailers.

About radiation

Information on SAR (Specific Absorption Rate) certification

THIS DEVICE FULFILS THE INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device has been developed to ensure that it does not exceed the internationally recommended exposure limits for radio waves.

These guidelines were defined by an independent scientific organisation (ICNIRP) and contain a large safety margin to ensure the safety of all persons, regardless of their age and state of health. The guidelines on exposure to radio waves use a unit of measurement, known as the specific absorption rate or SAR. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR values within the ICNIRP guidelines for this device model are:

Highest SAR value for this phone model and coverage conditions:

SAR head 0.38 W/kg (10 g)

SAR carried on the body 1.58 W/kg (10 g)

SAR for limbs (e.g. when worn on the arm) 3.20 W/kg (10g)

SAR values for carrying on the body were determined at a distance of 5 mm. To comply with the RF exposure guidelines for carrying on the body, the device should be positioned at least this distance away from the body.

Technical data

General technical data

Frequency	Band	Maximum power
GSM/2G	EGSM900: 880-915 MHz(TX), 925-960 MHz(RX)	31.99 dBm
	DCS1800: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	28.43 dBm
UMTS/	WCDMA 2100: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	23.24 dBm
	WCDMA 900: 880-915 MHz(TX), 925-960 MHz(RX)	22.94 dBm
LTE/FSS/4G	B1: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	24.10 dBm
	B3: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	23.60 dBm
	B7: 2500-2570 MHz(TX), 2620-2690 MHz(RX)	23.42 dBm
	B8: 880-915 MHz(TX), 925-960 MHz(RX)	23.61 dBm
	B20: 832-862 MHz(TX), 791-821 MHz(RX)	23.49 dBm
	B28: 703-748 MHz(TX), 758-803 MHz(RX)	23.62 dBm
BT	2402 MHz~2480 MHz	7.61 dBm

Operating times

 
Calling duration: approx. 9 hours
In idle status: approx. 300 hours

Accessories

Use only batteries approved by Gigaset. Unauthorised accessories can cause damage to the device.

Plug-in power supply

Output: 5V $\overline{\text{~}}$ 1,0 A



Battery

Technology: Li-Ion
Capacity: 1400 mAh
Part number: V30145-K1310-X486

Index

-
- A**
- Acoustic profile75
 - Activate/Deactivate SOS calls40
 - Activating/Deactivating the SIM card lock82
 - Activating/Deactivating the SOS alarm41
 - Alarm clock53
 - Icon21
 - Allow list70
 - Appointment, see Events
-
- B**
- Background picture
 - Using your own photo60, 64
 - Battery
 - Charge status21
 - Block list27, 72
-
- C**
- Calendar56
 - Navigation56
 - Call
 - Information32
 - International24
 - Reject26
 - Taking26
 - Call divert30
 - Revoking31
 - Setting up30
 - Call list32
 - delete33
 - Open32
 - Call number
 - Assign to direct dialling key25
 - Dialling24
 - Incoming call26
 - Call volume28
 - Calls
 - From a call list25
 - Camera62
 - Settings65
 - Taking pictures62
 - Viewing photos63
 - Chained SMS42
 - Changing the PIN82
 - Charging the battery17
 - Control key
 - Functions20
 - Creating events57
-
- D**
- Date
 - Set manually69
 - Delete
 - Events59
 - Direct dialling keys25
 - Display
 - Idle status18
 - Display keys20
 - Display language74
 - Displaying events57
-
- E**
- Emergency call39
 - Emergency numbers39
 - Enter text23
 - Entering SOS numbers39
 - Entering text23
 - SMS43
-
- F**
- File manager67
-
- G**
- Gallery63
 - Getting started15
 - Guarantee Certificate84

H	
Handsfree mode	28
Handsfree mode volume	28
I	
Icon	
Alarm clock	21
Battery charge status	21
Missed call	21
Silent	21
USB	21
Vibration	21
Voice message (SMS)	21
Wireless communication	21
Icons	
Status bar	21
User Guide	10
Image viewer	64
Inbox (SMS)	49
Input language	74
SMS	44
Input methods (SMS)	43
Inserting a memory card	15
Inserting a SIM card	15
Inserting the	
battery	16, 17
Internal memory	
Formatting	68
Manage through file manager	67
Management on a PC	68
K	
Keypad lock	
Switching on/off	19
L	
Language	
Input	74
Phone settings	74
List of drafts (SMS)	44
Listen to a voice message	38
Lower/upper case	43
M	
Mailbox	38
Inquiry	38
Main menu	22
Making a call	
Using the direct dialling key	25
Making calls	24
Memory location for photos	66
Memory status, SMS	51
Menu guidance	22
Menu overview	6
Missed call, icon	21
Mute the microphone	29
O	
Outbox (SMS)	47
P	
Package contents	15
Phone book	35
Entries	35
opening	35
Phone book entries	35
Managing	37
Phone book entry	
Create	36
Delete	37, 71, 73
Search	36
Photo	
Delete	60, 65
Format	62
Memory location	66
Taking	62
Use as background	60, 64
Photographing	62
Photos	
Editing	64
Viewing	63
Preferred memory location (SMS)	52
Profile, acoustic	75

R	
Receiver volume	28
Receiving a	
text	49
Reset	83
Factory settings	83
Ringtone	
Deactivate	75
Melody	76
S	
Safety instructions	11
SD card	
Formatting	68
Sending a	
text (SMS)	42
Setting the message tone	77
Settings	
Allow list	70
Block list	72
Silent	75
Icon	21
SIM card	
Changing the PIN	82
SMS	42
icon	21
input methods	43
Memory location	52
Memory status	51
read	49
Save	51
Sending not possible	47
Sent messages	46
Settings	51
SMS template	48
SMS templates	48
SOS emergency calls	
Entering text	41
SOS key	39
Status bar	21
Submenus	22
Switch microphone on/off	29
Switch off the wake-up call	55
Switch the microphone to mute	29
Switching on/off	18
T	
Telephoning	
Enter call number	24
Text	
Buffering	44
Text messages (SMS)	42
Texts	
Drafts	45
Time	
Set manually	69
Tones	
Messages	77
Ringing	76
Torch	
Switching on/off	19
U	
Upper/lower case	43
USB connection	
Icon	21
Use the loudspeaker when making	
a call	28
V	
Vibration	
Activate/Deactivate via profile	75
Icon	21
W	
Wireless communication, quality	21
Writing a	
text (SMS)	42

Issued by

Gigaset Technologies GmbH
Frankenstr. 2, D-46395 Bocholt

© Gigaset Technologies GmbH 2026

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com