

Gigaset

GL7

The most up-to-date user guide
can be found at
www.gigaset.com/manuals



Contents

Overview	4
On the inside	4
Front	5
Back	5
Symbols in the user guide	6
Safety information	7
Getting started	11
Package contents	11
Getting started	11
Inserting the battery and closing the cover	12
Setting up the mobile phone	13
Using the device	15
Switching the phone on and off	15
Locking/unlocking the keypad	15
Adjusting the volume	15
Control key	16
Display	17
Using the menus	21
Sharing contacts, images and ringtones	22
Entering text	23
Making/receiving calls	24
Calling numbers	24
Accepting a call	25
During a call	26
Call lists	27
Contacts	29
Mailbox	34
Additional functions (apps)	35
Shop	35
Browser	35
News	35

Weather	36
Messages	37
Camera	38
Gallery	38
Video	40
Extras	41
Clock	43
Music	45
Calendar	45
Email	47
Note	48
FM Radio	49
File Manager	50
Settings	53
Network and connectivity	53
Personalisation	59
Alarm function (SOS)	63
Privacy & Security	64
Storage media	65
Device	66
Account	69
Resetting the device	70
Appendix	71
Customer service United Kingdom and Ireland	71
Customer Service & Assistance	72
Guarantee Certificate - United Kingdom and Ireland	73
Manufacturer information	75
Authorisation	75
Waste and environmental protection	75
Technical specifications	77
Accessories	77
Menu overview	79
Index	82


Overview

On the inside



- 1 **Receiver**
- 2 **Display** (→ p. 17)
- 3 **Display functions** (→ p. 18)
- 4 **Display keys** (→ p. 18)
Select the functions - they depend on the respective situation
- 5 **Control key** (→ p. 16)
Open menu; confirm selection; navigate within menus and entry fields
- 6 **Talk key**
Accept call, dial number; open call list
- 7 **Quick dial keys** (→ p. 34)
Dial fast access numbers
- 8 **Key 1**
Open network mailbox: Press ▶ and **hold**
- 9 **Star key**
Keypad lock (→ p. 15)
International calls:
▶ Press **twice** (+)
- 10 **On/Off key, End call key**
End call, cancel function, delete text;
Switch device on/off:
Press ▶ and **hold**
- 11 **Volume keys** (→ p. 15)
- 12 **Hash key**
Switch between Vibration, Idle and Default modes: press ▶ and **hold**
When inputting text: Switch between upper and lower case:
Press ▶ and **hold**
- 13 **Microphone**

Front

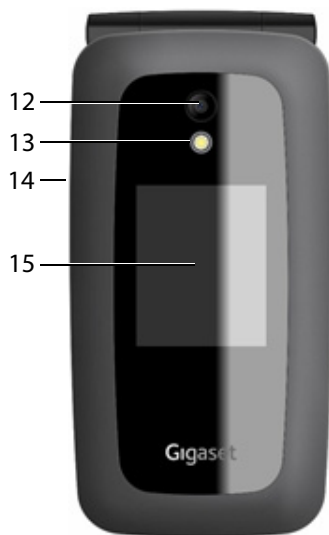

12 Camera

13 Flash for camera

14 Connector for headset

15 Front display


Display of charge level, time, number of new missed calls and messages

16 USB-C port

Connect the USB cable for data transfer or charging

16

Back

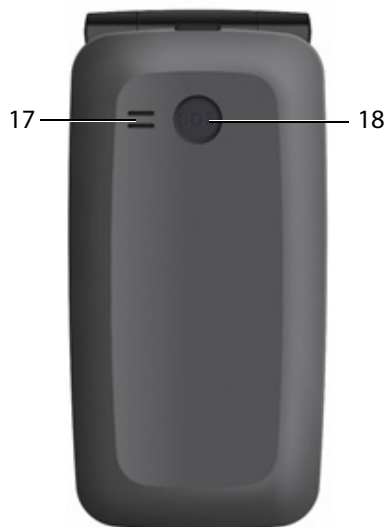





17 Speaker

18 SOS key (→ p. 25)

Start an SOS call






Symbols in the user guide















Icons

	Warnings which, if not followed, can result in damage to devices or personal injury.
	Information regarding function and appropriate handling or functions that could give rise to costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.

Procedures

Example: Set the display language

- ▶  ▶  **Settings** ▶ OK ▶  **Personalisation** ▶  **Language** ▶ OK ▶ OK
- ▶  Select the language required ▶ OK (● = selected)

Step	Actions required
▶	Every arrow initiates an action.
▶ 	Press the Control key  in the middle. The main menu opens.
▶  Settings ▶ OK	Use the Control key  to scroll up or down to menu entry Settings . Press the Control key  .
▶  Personalisation	Use the Control key  to scroll left or right to menu Personalisation .
▶  Language ▶ OK	Use the Control key  to scroll up or down to menu entry Language . Press the Control key  .
▶ OK	The language set is displayed. Press the Control key  .
▶  Select the language required ▶ OK	Use the Control key  up or down to select the language required. Press the Control key  .
● = Selected, ○ = Not selected	

Safety information

Please read these instructions carefully. Failure to comply presents a risk of injury and damage to a device, as well as breaches of applicable laws.

Please explain to your children the contents of this document as well as the potential risks associated with using this device.

General information

- For your own safety, only use original, approved accessories from Gigaset for your mobile phone. Using incompatible accessories can damage the mobile phone and entail hazardous situations. Original accessories can be purchased from Gigaset Customer Service (see Customer service United Kingdom and Ireland → p. 71).
- The mobile phone is not waterproof. The device or its accessories must therefore not be kept or charged in damp environments (in bathrooms, shower rooms or kitchens for example). Rain, moisture or any liquid can contain minerals which can cause the electrical circuitry to corrode. There is a risk of electric shock, fire or damage when the device is being charged.
- Permitted temperature range for charging and operation: 10 to 40°C.
High temperatures can shorten the life of electronic devices and damage the battery; plastic parts can deform or melt. Using or keeping the mobile phone in refrigerated areas can result in condensation on the inside of the telephone which will destroy the electronic circuitry.
- The mobile phone must not be used or kept in dusty or dirty places. Dust can be a reason for the mobile phone to malfunction.
- Switch off your mobile phone when in potentially explosive areas and observe all warning signs. Potentially explosive areas also include places where switching off vehicle engines is normally recommended. It is at these kinds of places that flying sparks can be the cause of explosions or fires with resulting injuries, and there may be a risk to life.
These areas include petrol stations, chemical factories, transport and storage systems for hazardous chemicals, spaces under ship decks, areas in which the air contains chemical substances or fine particles (such as dust or metal powder particles).
- Short-circuiting, disassembling and modifying the mobile phone are not permitted because they present a risk of injury, electric shock, fire or damage to the charger.
- Charges might apply when establishing Internet connections via the SIM card.

Battery and charging



Not replacing the battery properly can pose a risk of explosion.
Dispose of used batteries in line with the instructions (Section Waste and environmental protection → p. 75).

- Never burn or heat batteries, and do not dispose of them in environments which are at risk of heat or fire to prevent battery fluid escaping, overheating, explosion and fire. Do not disassemble, weld and/or modify the battery. Do not keep the battery where it is exposed to strong mechanical effects.
- Do not use any sharp objects (such as screwdrivers) to touch or pierce the battery. There is a risk that battery fluid will escape or the battery will overheat, explode or catch fire and burn. Crushing, heating and burning batteries are strictly prohibited.
- The battery electrolyte coming into contact with eyes can cause a loss of eyesight. If electrolyte does enter an eye, please do not rub the eye with a hand. Immediately wash the affected eye thoroughly with clear water and consult a doctor. The electrolyte coming into contact with skin (or clothing) presents a risk of skin burns. Immediately wash the skin or clothing thoroughly with soap and clear water, and consult a doctor if required.
- Never use batteries for purposes other than those specified. Never use a damaged battery. If the battery becomes hot, discolours, deforms or becomes leaky whilst being used, charged or kept in a safe place, it must be replaced immediately by a new battery for safety reasons.
- The battery temperature rises during the charging process. Do not keep the battery together with ignitable products in the same drawer as this poses a risk of fire.
- Do not charge the battery for longer than 12 hours.
- Only charge the device indoors. Whilst the phone is charging, do not use the phone for calls or dial any numbers.
- The socket must be easily accessible during the charging process.
- Electrical storms pose a risk of electric shocks.
- Do not use the charger when the power cable is damaged or no battery is inserted in the mobile phone because this poses a risk of electric shock and fire.

Headset



High volumes can impair hearing.

Listening to music or conversation with headphones set to a loud volume can be unpleasant and permanently impair hearing.

To prevent loss of hearing, do not have the volume turned up too high for long periods.

- If you wear headphones whilst out walking or running, please ensure that the cord does not wrap itself around your body or objects on your person.

- Only wear headphones in dry environments. The static electricity which builds up on the headphones can discharge via your ears as an electric shock. The static electricity can discharge if you touch the headphones with your hand or touch bare metal before connecting with the mobile phone.

Use in hospitals / medical devices

- The function of medical equipment near your product can be impaired. Bear in mind the technical conditions of the environment in question (such as in a doctors' surgery).
- If you use a medical device such as a pacemaker, please consult the manufacturer of the product before using the product. You will be provided information on the sensitivity of the device to external, high-frequency energy sources.
- Heart pacemakers, implantable cardioverter defibrillators:
When you switch on your mobile phone, ensure that the distance between the phone and an implant is at least 152 mm. To reduce potential interference, use the mobile phone on the opposite side to the implant. Please switch the mobile phone off immediately if interference occurs. Do not keep the mobile phone in a shirt pocket.
- Hearing aids, cochlear implants:
Some digital wireless devices can interfere with hearing aids and cochlear implants. Please consult the manufacturers of these products if interference occurs.
- Other medical devices:
If you and the people around you use other medical devices, please contact the relevant manufacturer for information on whether such devices are protected from radio frequency signals in the environment. You can also consult your doctor about this.

Emergency calls

- Make sure the mobile phone is switched on and connected to the GSM network. Enter the emergency number as required and speak.
- Tell the person at the emergency call centre your location.
- Do not end the conversation until the person at the emergency call centre asks you to.

Children and pets

- Keep the mobile phone, batteries, chargers and accessories out of the reach of children and pets. Children and/or pets can swallow the small parts, posing a risk of suffocation and other hazards. A child may only use the mobile phone under the supervision of an adult.

Aeroplanes, vehicles and road safety

- Switch off your mobile phone in aeroplanes.
Please observe applicable restrictions and regulations.
Wireless devices can interfere with the function of aeronautical equipment. Follow the instructions issued by flight personnel when using your mobile phone.
- The absolute priority for every vehicle driver and everyone in a vehicle is safety on the roads and for road users.
Using a mobile phone whilst driving can be distracting and therefore lead to dangerous situations. You may also be violating applicable laws.

SIM card, memory card and data connector cable

- Do not remove the card from the mobile phone whilst data is being sent or received as this presents a risk of data loss and damage to the mobile phone or memory card.

Defective devices

- Dispose of faulty devices or have them repaired by our Customer Service team.
These devices could interfere with other wireless services.
- Careless handling of the mobile phone, such as dropping it, can shatter the display and damage the electronic circuitry and sensitive parts inside.
- Do not use the device if the display is cracked or shattered. Fragments of glass or plastic can injure hands and face.
- In the event of malfunction of your mobile phone, battery or accessories, please contact a Gigaset Service Centre for an inspection.

Other important information

- Never point the flash light directly at the eyes of people or animals. Pointing a flash light too near to human eyes poses a risk of temporary loss of eyesight or impairment of vision.
- When the device warms up, please put it aside for a while and stop the program you were running. Coming into contact with a hot device can cause minor skin irritations such as redness.
- Do not apply lacquer to the mobile phone. Lacquer and paint can damage the parts of the mobile phone and may cause malfunction.

Getting started

Package contents


- one Gigaset GL7 phone
 - one charging cradle
 - one power pack with USB-C connector
 - one headset
 - one quick reference guide
-

Getting started

Inserting nano SIM cards

You can insert two nano SIM cards into the phone.

- ▶ Place your fingernail into the notch in one corner of the cover and pull the cover up.
- ▶ Remove the battery.
- ▶ Insert one or both SIM card(s) into the card slots.

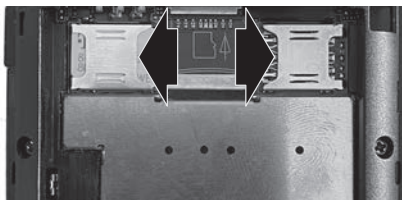


If your SIM card is too small, you might need a SIM card adapter.

Inserting a memory card

You can insert a memory card into the phone.

- ▶ Insert the memory card into the middle of the card slot.

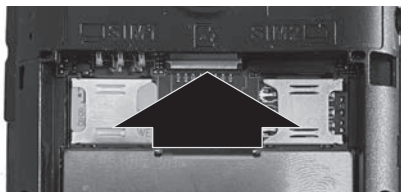


Inserting the battery and closing the cover

- ▶ Inserting the battery.
- ▶ Carefully press down the cover until it clicks into place.

Charging the battery

- ▶ Connect the USB connector on the charger cable supplied to the charging cradle.
 - ▶ Insert the device.
- Or
- ▶ Directly connect the USB connector on the charger cable supplied to the device.
 - ▶ Connect the charger cable to the power source.

- ▶ Fully charge the device battery before using it for the first time.

The battery is fully charged when the charge icon  in the icon bar is completely full.



If you will not be using the phone for several days, switch off your device.

If you will not be using the phone for several weeks, switch it off and remove the battery.

Setting up the mobile phone

When you turn on the mobile phone for the first time, a Setup Wizard starts with which the initial, important settings are configured.


You can change all the settings later on from menu **Settings**.

 You can not cancel the Setup Wizard and can not switch off the device during the setup process.

Selecting the language

▶  Select the language required ▶ **OK** ▶ **Next**

Selecting the keypad



▶  Select the keypad required ▶ **OK** ▶ **Next**


Selecting a network

If you are within range of a WLAN, you can register the mobile phone.

Do not register now: ▶ **Skip**

Registering:

▶  Select the required network ▶ **OK** ▶  Enter the password for the network ▶ **Connect** ▶ **Next**

 Bear in mind when entering the password that it is case sensitive. For information on entering text: → p. 23

Permitting/rejecting location access

Specify whether programmes (apps) should receive information about your location.

▶ Permit (**Allow**) / do not permit (**Decline**) location access

Settings for date and time

Have the date and time set automatically using a time server in the network

▶  **Auto Sync** ▶ **OK** ▶  Select **On** / **Off** ▶ **OK** ▶ **Next**

Automatic synchronisation disabled:

▶ Enter the date and time manually ▶ **Next**

Accepting the licensing terms and conditions and the data privacy statement


Accept everything: ▶ **Next** ▶ **Accept**

Reject everything: ▶ **Next** ▶ **Deny**


Display information on the licensing terms and conditions:

▶  Select the first entry ▶ **OK** ▶ Scroll through the text using 

Exit display: ▶ **Cancel**

Open the URL: ▶  Press the Control key in the middle

Quick access to frequently used settings

Specify whether you want frequently used functions (speaker, mobile data, Bluetooth, airplane mode, ...) to be enabled/disabled with the Control key at the top .

No quick access: ▶ **Skip**


Quick access: ▶ **Next**



This ends the Setup Wizard - the start screen is shown (display in idle mode).

Your mobile phone is now ready to use.


Using the device

Switching the phone on and off

Switch on: ▶ Fold open the device ▶  Keep pressing the On/Off key until the device vibrates

Switch off: ▶  Press and **hold** the On/Off key ▶  **Power Off** ▶ **OK**

Unlocking the SIM card

▶  Enter the PIN for the SIM card(s) ▶ **Done**

Delete a character: ▶ Press the On/Off key 

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the phone.

Lock/unlock the keypad: ▶ Press and **hold** the star key 

The keypad lock is shown on the display.

Adjusting the volume

The volume keys are on the right-hand side of the phone.

When phone is in **idle**: The volumes for ringtones and alarms on the phone can be set to 15 levels.

During a **call**: The volume for handset/speaker can be set to 5 levels.

Louder: ▶ Press the upper volume key









Quieter: ▶ Press the lower volume key

Control key














The Control key enables you to navigate the menus and input fields, and also to select functions.

How the Control key is shown in the operating guide:

-  Press the Control key in the middle
-  |  |  Press the Control key at the top | bottom | top or bottom
-  |  |  Press the Control key on the left | right | left or right
-  Press the Control key on the left, right, top or bottom

Functions of the Control key

When phone is in idle:		Open menu
		Open directory
		Switch to WhatsApp, Facebook, YouTube, Google or Google Maps
		Quick access to functions
In menus:		Scroll up or down through menu
		Scroll left or right through menu
		In grid view, select menu
		Confirm selection, open submenu (OK)
During a call:		Enable/disable the speaker
		Handset/speaker louder
		Handset/speaker quieter



Text field up/down

For text input:



Move the cursor to the left/right



Select special char. from matrix

On Internet pages:



Position the cursor

Display

Enabling the display

The light for the display is switched off after 30 seconds.

Enable the display again: ► Press any key

Change the time limit for the display light: → p. 60

Idle display



Status bar (→ p. 19)

Date and time

Set the date and time: (→ p. 62)

Information on the SIM cards


Name of the provider and connection quality

Access to the social networks (→ p. 19)


Display functions

Display keys and functions

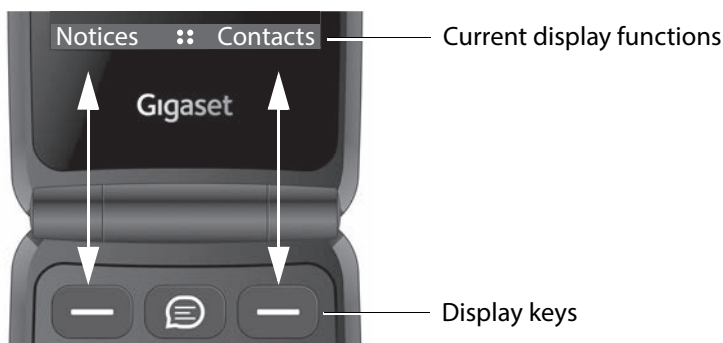


The display keys perform different functions depending on operating situation.



► Press the display key to call the function shown in the display above. In some scenarios, a display function is also shown in the middle of the display.

Enable display function: ► Press the control key in the middle 

Examples:

Idle display:		Opening menu
In the main menu:		Confirm a selection (OK)
When dialling:	CALL	Initiating a call
During a call:		Enable the speaker

Status bar

Icons display current settings and the status of the phone, e.g.:



Ringtone disabled, only silent alert active



Missed call in call list



Alarm clock on



Message received (→ p. 20)



Bluetooth enabled

Wireless connection for SIM cards



The icon is displayed for every SIM card inserted.

The number of white bars indicates the connection quality.

Battery charge level



The area inside the outline indicates the battery charge level. A lightning icon is shown during the charge process.



WLAN connection quality



The icon indicates the connection with a wireless network. The number of curves indicates the connection quality.

Access to social networks

When the phone is in idle, the display provides direct access to social networks WhatsApp, Facebook, YouTube, Maps and Google (search). You might need an account and have to enter the associated access details.

▶  ▶  Select the desired app ▶ **OK**



The subsequence process is dependent on the app selected. You might need to log in and/or configure settings. Follow the instructions from the manufacturer.

The social networks can also be accessed from the main menu of the phone.

Remove access to WhatsApp and Facebook:

- ▶  ▶  Select the app ▶ **Options** ▶ **Uninstall** ▶ **OK** ▶ Confirm with **Uninstall**

Direct access to WhatsApp



- ▶ Press the WhatsApp key between the two display keys





Quickly accessing functions

When the phone is in idle, it provides quick access to frequently used functions.

Enable/disable the torch, airplane mode, WLAN, wireless data and Bluetooth®:

- ▶  ▶  Select the desired function ▶ **OK**



Adjust the ringtone volume:

- ▶  ▶ Use  to set the required volume on 15 levels, plus **SILENT** and **VIBRATE**

Switch between **VIBRATE**, **SILENT** and ringtone:

- ▶  ▶ **OK**

Set the display brightness:

- ▶  ▶ Use  to navigate to the **Brightness** icon ▶ **OK** ... The brightness changes between 10, 40, 70 and 100%

Back to the idle display ▶ Press the On/Off key 

Showing messages

From the idle display, you can show messages that are stored by apps or the system. The number of messages currently available is shown by an icon in the top left of the display. The icon is orange if there are new messages.



Show messages:

- ▶ Press the display key **Notices** ... The available messages are listed

Show message: ▶  Select message ▶ **OK**

Back to the message list ▶ Press the On/Off key 

Delete the message selected: ▶ **Clear**

Delete all messages: ▶ **Clear all**



Configure the display of messages: → p. 61

Using the menus

The apps, functions and settings on your phone are displayed in a menu that has a number of levels.

► Menu overview → p. 79

Opening a menu

► When the phone is in idle, press ... The main menu is opened ► Use the Control key to select the submenu ► **OK**

Menu display

The main menu is displayed in the individual, list and grid views.

- The individual view shows, for every submenu, an icon that fills the screen.
- The list view shows all icons with associated names.
- The grid view always shows nine icons on the display.

The menu entry currently selected is coloured. If there are more entries, a bar is shown on the right that shows the position of the entry in the submenu.

To access a function: ► Select a function ► **OK**

Back to the previous menu level ► Press the On/Off key

Back to the idle display: ► Press and **hold** the On/Off key

Changing the view

► On the idle screen, press ► **Options** ► Select **Grid View** / **List View** / **Single View** ► **OK**

Moving submenus

In the list and grid views, submenus can be moved to simplify access to more frequently used apps and functions.

► From the idle display, press ► Select a submenu ► **Options**
 ► **Move** ► Use the Control key to move the submenu ► **Set**

Sharing contacts, images and ringtones

The phone is able to send data such as contacts, images and ringtones to other devices using Bluetooth, as an attachment to a text message (MMS), as an email or with WhatsApp or Facebook.




For this to work, the relevant function or app must be set up and enabled. Setup can be performed on initial usage.

Example: Sharing contacts

► **Contacts** ► **Options** ►  **Share** ►  Select the app you want to use to share the contact ► **OK**

Bluetooth: ►  **Bluetooth** ► **OK** ► Select the device ► **OK**

Message: ►  **Messages** ► **OK** ► Enter the phone number of the recipient and the text ► **Send message**

Email: ►  **Email** ► **OK** ► Enter the email address of the recipient, the subject and the text ► **Send email**

WhatsApp: ►  **WhatsApp** ► **OK** ► Enter the recipient ► **Send message**

Facebook: ►  **Facebook** ► **OK** ► Enter the recipient ► **Send message**


Entering text

Every key from 1 to 0 is assigned multiple letters and digits. The most important characters available are on the keys.

 
Select letters/digits:

- ▶ Press the key **briefly** several times in succession

 

Delete characters to the left of the cursor:

- ▶ Press the On/Off key 

Switch between upper and lower case and enter digits (Abc, abc, ABC, 123):

- ▶ Keep pressing the Hash key  until the desired writing mode is shown in the header

Use suggestions:

- ▶ Keep pressing the Hash key  until **Predictive** is shown in the header ...
When you write, what you type is used to display text suggestions in the footer ▶  Select the required text ▶ **OK**

Enter special characters:

- ▶ Use the  key

or: ▶  Press the star key ▶  Select the special character ▶ **OK**




Switch between icons and emojis: ▶ Press the **left** display key

To show more pages: ▶ Press the **right** display key

Change the input method: → p. 62

Making/receiving calls




Calling numbers

- ▶  Enter the number including the area code ▶  Press the Talk key or  **Call**

Delete a character: ▶ Press the On/Off key 

For two active SIM cards: ▶  Select the SIM card ▶ **OK**





Dialling from Contacts

- ▶ **Contacts** ▶  Select the entry ▶  Press the Talk key or **OK**
- If more than one phone number is entered:
 - ▶  Select the phone number ▶ **OK**

For detailed information on the contacts, see → p. 29

Dialling from a call list

The call lists contain the most recent accepted, outgoing and missed calls.

- ▶  Press the Talk key ▶  Select the call list ▶  Select the entry
 - ▶  Press the Talk key or **CALL**

For detailed information on the call lists, see → p. 27

Dialling with quick dial keys



The quick dial key is assigned a number from Contacts (→ p. 32).

Important numbers can be dialled with quick dial keys A, B and C with one key press.

- ▶ When phone is in idle: Press and **hold** key A, B or C ... the number stored is dialled immediately



Dialling emergency numbers with the SOS key



The SOS function must be enabled and at least one number from Contacts assigned to the SOS key (→ p. 63).

- ▶ Keep the SOS key on the back of the phone pressed for at least 3 seconds (→ p. 5)

The first of the SOS numbers defined is called. If the person called does not answer, the next SOS number is called, etc. Up to five SOS numbers can be entered.



The SOS functionality can be impaired by the parallel operation of applications (apps). Stop running applications.

Accepting a call

An incoming call is indicated by a ringtone and by the phone number of the caller on the display (if transferred). The name of the caller is displayed if the caller is in the directory.

Accept a call:

- ▶ Fold open the phone ▶ Press the Talk key or display key **Accept**

Reject a call:

- ▶ Press the End key or display key **Decline**

Answer a call with an SMS:

- ▶ Access display function **Reply** using ... Predefined texts are listed ▶ Select the text ▶ **OK** ... The text is sent as an SMS

End a call:

- ▶ Press the end key

When you do not accept a call, it is saved in the **Missed** call list (→ p. 27).


Settings for incoming calls

Enable/disable the ringtone and/or vibration: → p. 59


Change the call answering mode when the phone is folded down: → p. 63

During a call

Handsfree mode

When making calls, you can use the speaker on the mobile phone (handsfree mode). The  icon is shown as the display function.

Enable/disable handsfree mode during a call or when the connection is being set up:

- ▶ Press the Control key in the middle 

Changing the call volume

The call volume can be adjusted on 5 levels using the volume keys on the right-hand side of the phone. The setting applies for the receiver and speaker for handsfree mode.

Louder: ▶ Press the upper volume key

Quieter: ▶ Press the lower volume key

or

- ▶ **Options** ▶  **Volume** ▶ **OK** ▶  Select the volume ... The setting is applied automatically after a short time

Muting the microphone

When the microphone is switched off, callers no longer hear you.


Turn off the microphone: ▶ **Mute**

Turn on the microphone: ▶ **Unmute**

Call lists

The phone saves different types of calls (missed, dialled and received) in lists.

Opening the call list

▶  Press the Talk key

or: ▶  ▶  **Call Log** ▶ **OK**

The **Call Log** menu contains a submenu for every call type:

Missed, Dialed, Received

The calls for all call types are summarised in **All**.

▶  Select the required call list ▶ **OK**

Information about a call

- Icon for the call type



Missed



Dialed



Received

- Phone number or name when the subscriber is entered in the directory
- Image - when the subscriber is entered in the directory with an image
- Date and time of the call







A message about missed calls is displayed when you fold open the phone.

Show information about a call: ▶ **Notes**


Calling people back and repeating calls

▶  ▶  **Call Log** ▶ **OK** ▶  Select a call ▶ **CALL**

Managing call list entries

- ▶  ▶  **Call Log** ▶ **OK** ▶  Select the required call list ▶  Select an entry ▶ **Options**

Show information about a call:


- ▶  **Call Information** ▶ **OK** ... The call is listed with number, date and duration

If there is more than one call of the same type, all are listed.

Block a number: ▶ **Block** ▶ **Block** ... The phone number is transferred to the black list (→ p. 31)

Cancel a block: ▶ **Unblock**

Send a message to a contact:

- ▶  **Send message** ▶ **OK** ▶ Select the app (SMS or WhatsApp) ▶ **OK** ▶ Write the message

Transfer a caller to the directory:

- ▶  **Create New Contact** ▶ **OK** ▶ Add to the contact details ▶ **Save**

Add a number to an existing contact:

- ▶  **Add to Existing Contact** ▶ **OK** ▶  Select a contact ▶ **OK** ▶ Add to the contact details ▶ **Save**

Delete a call:

- ▶  **Edit call log** ▶  Select a call list ▶  Select an entry ▶ **OK** ▶ Select more entries as required ▶ **Delete** ▶ Confirm the prompt with **Delete**




Delete list:

- ▶  **Edit call log** ▶  Select a call list ▶ **All** ▶ **Delete** ▶ Confirm the prompt with **Delete**


Contacts

From Contacts, you can manage the contact details of the recipients of your calls, messages and emails. Contacts can be stored in the internal phone memory or on the SIM cards. You can manually create contacts, copy them from a call list or, when pre-dialling, copy them to Contacts.

Opening and showing contacts

- ▶ Press the control key 
- or: ▶ Press the display key **Contacts**
- or: ▶  ▶  **Contacts** ▶ **OK**

Information about contacts

The list contains the contacts in alphabetical order, with first and last names. Contacts stored on a SIM card are denoted by the  icon.

A contact contains the following information:

First/last names and phone number.

Contacts stored in the phone can contain further information:



Other phone numbers, email addresses, image, company, address, birthday, message and an individual ringtone.

Display all information about a contact:

- ▶  ▶  Select a contact ▶ **OK**

Finding contacts

Search in Contacts for names and phone numbers.

- ▶  Enter letters or digits in the search field . . . entries that contain the characters entered are displayed ▶  select the entry required

or: ▶ Use the Control key  to scroll

Show the search field:

- ▶  Scroll to the start of the contact list








or: ▶ **Options** ▶ **Search**

Sorting contacts by first or last names







- ▶  ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Sort contacts** ▶ **OK** ▶  Select the sorting criterion ▶ **OK**

Using a contact

Calling numbers

- ▶  ▶  Select a contact
- ▶  Press the Talk key ▶  Select the number if required ▶ **OK**
- or: ▶ **OK** ▶  Select the number if required ▶ **CALL**
- or: ▶ **Options** ▶  **Call** ▶  Select the number if required ▶ **OK**




Sending (WhatsApp) messages

- ▶  ▶  Select a contact ▶ **OK** ▶ **Message** ▶  Select **Messages** or **WhatsApp** ▶ Write a (WhatsApp) message and send it
- or
- ▶  ▶  Select a contact ▶ **Options** ▶ **Send message** ▶ **OK** ▶  Select **Messages** or **WhatsApp** ▶ Write a (WhatsApp) message and send it



Writing an email

- ▶  ▶  Select a contact ▶ **Options** ▶  **Send email** ▶ **OK** ▶ Write an email and send it

Creating a new contact






- ▶  ▶ **New** ▶  Select a storage location (**Phone memory** / **SIM memory**) ▶ **OK** ▶  Enter the first/last names and the phone number ▶ **Save**

Enter more numbers or other information:

- ▶  Scroll to the end of the entry ▶ **Add** ▶  Select the field you want to add ▶ **OK** ▶ Enter the information as per the selection ▶ **Save**





For information on entering text → p. 23

Edit contact

- ▶  ▶  Select the contact ▶ **Options** ▶  **Edit contact** ▶ **OK** ▶  Select the field you want to edit or **Add** ▶  Edit the information as per the selection ▶ **Save**



Sharing contacts

Send contacts to other devices using Bluetooth or share them with other users with apps.

- ▶  ▶  Select a contact ▶ **Options** ▶  **Share** ▶ **OK** ▶  Select the function or app you want to use to share the contact ▶ **OK** ▶ Complete the send process - this is dependent on the selection

Blocking contacts

To block undesired calls, messages and emails, you can place certain numbers and email addresses on a black list. Using these numbers and email addresses for contacting is then suppressed.

-  Blocked phone numbers and email addresses are marked with the .

- ▶  ▶  Select a contact ▶ **OK** ▶  Select number and email address as required ▶ **Options**

Block a number:

- ▶  **Block this number** ▶ **OK** ▶ **Block** ... The contact is transferred to the black list


Cancel a block: ▶  **Unblock this number** ▶ **OK**

Editing the black list

Blocked numbers and email addresses are entered in the black list.


- ▶  ▶ **Options** ▶ **Settings** ▶ **Block Contacts** ▶ **OK** ... Blocked numbers and email addresses are listed

Add a number:

- ▶ **Add** ▶  Enter the number ▶ **Save**

Cancel a block:

- ▶ Select the number / email address ▶ **Unblock**

-  Phone numbers can also be transferred to the black list from the call list (→ p. 28).

Specifying emergency contacts

Define up to 5 numbers as emergency contacts. These numbers are shown at the start of the contact list as group **ICE Contacts**, and so can be accessed quickly.

- ▶  ▶ **Options** ▶ **Settings** ▶ **OK** ▶  **Set ICE Contacts** ▶ **OK** ▶  **Select emergency contact 1 - 5** ▶ **OK** ▶ **Look for a contact or select it with**  ▶ **OK**

Delete an emergency contact: ▶ **Remove** ▶ Confirm with **Remove**

Configuring the SOS key

The SOS key can be configured using the contact list options or from menu **Settings – SOS**.



- ▶  ▶ **Options** ▶  **SOS** ▶ **OK**

or






- ▶  ▶  **Settings** ▶ **OK** ▶  **SOS**

Detailed description of the SOS configuration: → p. 63





Assigning quick dial keys


- ▶ Press and **hold** a quick dial key that is not yet assigned (A, B or C) ▶ **Assign** ... The directory is opened ▶  **Select or search for a contact** ▶ **OK** ▶  **Select the number if required** ▶ **OK**

or

- ▶  ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Set speed dial contacts** ▶ **OK** ▶  **Select an unassigned key (A, B or C)** ▶ **Add** ▶  **Select or search for a contact** ▶ **OK**

Cancel or replace the direct dial key assignment:




- ▶  ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Set speed dial contacts** ▶ **OK** ▶  **Select the key (A, B or C)** ▶ **Options**

Delete: ▶  **Remove from speed dial** ▶ **OK** ▶ **Remove**




Replace by another number: ▶ **Replace** ▶  **Select another contact** ▶ **OK**

Setting up a contact group

From Contact groups, you can merge multiple contacts, such as for family or friends.

- ▶  ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Create Group** ▶ **OK** ▶ Enter the group name ▶ **Save** ... **Group** is shown as the first entry in the contact list. This is where the groups set up are kept.




Assign group members:

- ▶  ▶  **Group** ▶ **OK** ▶  Select the group ▶ **OK** ▶ **Add** ▶ Select the contacts for the group ▶ **Add** ... Contacts are shown in the group as well as in the complete list

Importing/exporting contacts



Import contacts

You can import contacts from an Internet account (such as Gmail or Outlook). For this, the relevant account must be active (→ p. 19).

- ▶  ▶  Select the contact ▶ **Options** ▶ **Settings** ▶  **Import contacts** ▶ **OK** ▶ Select the Internet account ▶ Enter the login details ▶ Select the contact ▶ **OK** ▶ **Save**

Export contacts

You can export contacts onto a memory card plugged in or using Bluetooth.

- ▶  ▶ **Options** ▶ **Settings** ▶  **Export contacts** ▶ **OK** ▶ Select memory card or Bluetooth ▶ **OK** ▶ Select certain contacts or all ▶ **Export**

Deleting contacts

- ▶  ▶ **Options** ▶ **Delete Contacts** ▶  Select the contact ▶ **OK** ▶ Select various contacts if required ▶ **Delete** ▶ Confirm the process with **Delete**

Specifying the storage location

Contacts can be stored on the SIM card and/or in the phone memory, and be moved between the two.

- ▶  ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Memory** ▶  Select the storage location to store the contacts ▶ **OK**

Move contacts:



- ▶  ▶ **Options** ▶  **Move contacts** ▶ **OK** ▶  Select the source ▶ **OK** ... The destination is displayed ▶ **OK**

Mailbox

If your phone provider makes available a mailbox, a caller can leave a message if the call is not answered.

To listen to voice messages in your mailbox, you need the phone number of the mailbox. Ask your mobile provider for the phone number if required.


Listen to a voice message:

►  Enter the phone number of the mailbox ► Press the Talk key 

or

► Press and **hold** the  key

Follow the voice instructions for your mailbox to listen to messages and manage your mailbox.

When you use the  key for the first time, you must enter the phone number of the mailbox.

Additional functions (apps)

The mobile phone makes available many useful functions as apps. You can download more apps from the KaiOS shop.

The apps are available from the main menu. The menu display and the order of apps within the menu are configurable (→ p. 21).

Shop



An Internet connection is available.

To extend the functionality of the phone, you can load more apps from the KaiOS shop.

▶ ▶ **Shopping** ▶ **OK**

The apps are categorised.

To switch between categories: ▶ press the Control key

Select an app in a category:

▶ Press the Control key ▶ **Select**

Browser

The app opens the browser on the phone. Use the Control key to navigate within the Internet page shown.

▶ ▶ **Browser** ▶ **OK** ▶ Select an option (such as Internet search)
▶ **OK** ▶ enter the Internet address (URL) ▶ **Go**

News

The app displays important news from across the world. Use the Control key to navigate within the news page shown.

▶ ▶ **News** ▶ **OK** ▶ Select the region ▶ **Next** ▶ Select the categories ▶ **Done** ... The news from the category selected is displayed
▶ Select the news ▶ **Select**

Preview/next news: ▶ **Previous/Next**

Cancel the display ▶ press the End key

Manually refresh the news: ▶ **Refresh**

Options

▶  ▶  **News** ▶ **OK** ▶ **Options**

Select another region:

▶  **Change Region** ▶ **OK** ▶  **Select a region** ▶ **Refresh**




Change the categories displayed:

▶  **Update Categories** ▶ **OK** ▶  **Select a category or cancel the selection** ▶ **Done**

Change the refresh interval:



▶  **Settings** ▶ **OK** ▶ **Terms of Services** ▶ **OK** ▶  **Select the interval**
▶ **Select**

Show the terms and conditions of use:

▶  **Terms of Service** ▶ **OK** ▶  **Select the language** ▶ **OK** ▶ use  to navigate through the display

Weather

The app shows the weather report and forecast for your locations.

▶  ▶  **Weather** ▶ **OK** . . . Weather information for the place selected is displayed

Add a place:

▶ **City** ▶ **Add** ▶ **OK** ▶ Enter a name for the place ▶ **Select**

Editing the display settings

Set the temperature unit:



▶ **Settings** ▶ **OK** ▶  **Temperature Unit** ▶ **OK** ▶ Select Celsius (°C) or Fahrenheit (°F) ▶ **OK**

Set the unit for wind speed:




▶ **Settings** ▶  **Wind Speed** ▶ **OK** ▶ Select the unit for wind speed ▶ **OK**

Messages

You can exchange SMS messages with people in your contact list.

- ▶  ▶  **Messages** ▶ **OK** ... All threads are listed (sequence of messages from/to a certain contact)

Write a new message:

- ▶ **New** ▶ **Add Contact** ▶  Select a recipient from Contacts ▶ **OK** ▶   type in the message text

Add the subject line:

- ▶ **Options** ▶  **Add subject** ▶ **OK** ▶  Enter the subject text

Add an attachment:

- ▶ **Options** ▶  **Add attachment** ▶ **OK** ▶  Select a file type (such as image or contact) ▶ **OK** ▶ select the attachment or create a new one

Send a message: ▶ **Send**

Options for individual threads

- ▶  ▶  **Messages** ▶ **OK** ▶  Select a thread ▶ **OK** ▶ **Options**

Call a contact: ▶  **Call** ▶ **OK**

Delete a message:

- ▶  **Select messages** ▶ **OK** ▶  Select a message or all messages ▶ **Delete**



Delete a thread:

- ▶  **Delete thread** ▶ **OK** ▶ **Delete**


Options for the thread list

- ▶  ▶  **Messages** ▶ **OK** ▶ **Options**

Search for a thread:

- ▶ **Search** ▶  Enter letters or digits in the search field ... entries that contain the characters entered are displayed ▶  select the entry required





Delete all threads:

- ▶  **Select thread** ▶ **OK** ▶ Select individual threads or all threads ▶ **OK**
▶ **Delete**


Camera

With the app **Camera**, use the integrated camera on the phone. Use the camera to take photos and record short videos.

Taking pictures

- ▶  ▶  **Camera** ▶ **OK** ▶  In the header, switch between Camera (fixed image) and Film (moving images) ▶ Point the lens in the correct direction and press the Control key  ... the pictures are stored in the gallery

Using the optical zoom function



- ▶ Use the Navigation keys  to increase/decrease the size of the display window

Setting up the camera

- ▶  ▶  **Camera** ▶ **OK** ▶ **Options** ▶  Select Functions and Camera settings (such as flash, camera resolution and self-timer) ▶ **OK** ▶ Configure the settings ▶ **OK**

Gallery

The gallery shows you all images that are stored on the phone. You can edit and share them.

- ▶  ▶  **Gallery** ▶ **OK** ... A preview of all images is displayed


Show image: ▶  Select image ▶ **OK**

Show favourites: ▶ **Favourites**

Options

- ▶  ▶  **Gallery** ▶ **OK** ▶  Select image ▶ **Options**

Edit image:

- ▶ **Edit** ▶ **OK** ▶  Select Editing settings (such as contrast, rotation, crop, colour effects and colour correction) ▶ **Select** ▶ edit the image ▶ **Done**


Add to Favourites:

- ▶ **Add to favourites** ▶ **OK**

Images that are marked as favourites are shown in the overview at the top/front, and so can be found more easily.

Delete an image: ▶ **Delete** ▶ **OK** ▶ **Delete**


Delete multiple images:

- ▶ **Select Multiple** ▶ **OK** ▶  **Select images** ▶ **OK** ▶ **Options** ▶ **Delete** ▶ **OK** ▶ **Delete**

Share an image:

- ▶ **Share** ▶ **OK** ▶ Select the app you want to use to share the image with someone ▶ **OK**

Share multiple images:

- ▶ **Select Multiple** ▶ **OK** ▶  **Select the images** ▶ **OK** ▶ **Options** ▶ **Share** ▶ **OK** ▶ select the app ▶ **OK**

Show file information:

- ▶ **File Info** ▶ **OK** ... The name of the file, size, type, date it was taken, resolution and path to its storage location are displayed

Sorting and grouping images


Images can be sorted by criteria such as date and time, and be grouped by date.

- ▶  ▶  **Gallery** ▶ **OK** ▶ **Options** ▶ **Sort and Group** ▶ **OK**

Sort images:

- ▶  **Sort by** ▶ **OK** ▶ Select the sorting criterion ▶ **OK**

Group images:

- ▶  **Group by Date** ▶ **OK** ▶ Enable/disable grouping by date ▶ **OK**

Video

Use the **Video** app to record and watch video films. You can edit and share video films.

Recording videos


▶  ▶  **Video** ▶ **OK** ▶ **Camera** ▶ **OK**

To start a recording: ▶ **OK**

To end a recording: ▶ **OK**

To watch a preview: ▶ **Preview** ▶ **OK**

Set the camera options:

▶ **Options** ▶  Select Camera settings ▶ **OK** ▶ Configure the settings ▶ **OK**

Watching a video




▶  ▶  **Video** ▶ **OK** ▶  Select the video ▶ **Select** ▶ **OK**

Full screen display: ▶ **Full Screen**

End full screen display: ▶ Press the On/Off key 

Options


For individual videos

▶  ▶  **Video** ▶ **OK** ▶  Select the video ▶ **Select** ▶ **OK** ▶ **Options**

Change the volume: ▶ **Volume** ▶ **OK** ▶  Adjust the volume

Make a video: ▶ **Rotate** ▶ **OK**

Share a video with others using an app (such as email):

▶ **Share** ▶ **OK** ▶  Select the app ▶ **OK** ▶ Enter the contact details as per the app selected ▶ Send the video

Show file information: ▶ **File Info** ▶ **OK**

Delete a video: ▶ **Clear** ▶ **OK** ▶ **Clear**

For multiple videos

▶  ▶  **Video** ▶ **OK** ▶ **Options** ▶ **Select Multiple** ▶ **OK** ▶ Select the videos ▶ **OK** ▶ **Options**

Delete videos: ▶ **Clear** ▶ **Select** ▶ **Clear**







Share videos: ▶ **Share** ▶ **Select** ▶ select the app ▶ **OK**

Extras

The **Extras** menu contains system functions such as calculator, unit converter and sound recorder.

Calculator

The calculator supports basic arithmetic functions (addition, subtraction, multiplication and division).

- ▶  ▶  **Extras** ▶ **OK** ▶  **Calculator** ▶  Enter the numerical value
 - ▶ Select the mathematical function using the Control key  ▶ press the Control key 

Delete the number entered last: ▶ **Clear**

Clear the calculation: ▶ **Clear all**

Tasks


Pending tasks are managed in the Task lists.

- ▶  ▶  **Extras** ▶ **OK** ▶  **ToDo** ... The task lists are displayed

Add a task:

- ▶  Select a task list ▶ **OK** ▶ **Add** ▶  Enter a description for the task
 - ▶ **Save**

Create a new task list:

- ▶ **New** ▶  Enter a name for the list ▶ **Create**

Editing tasks

- ▶  ▶  **Extras** ▶ **OK** ▶  **ToDo** ▶  Select the task list ▶ **OK** ▶  Select the task ▶ **OK**

Flag a task as complete:

- ▶ **Turn On** ... A tick is shown in front of the task and the task is crossed out

Activate the task again: ▶ **Disable**

Change the description:

- ▶ **Options** ▶  **Edit** ▶ **OK** ▶  Change the text ▶ **Save**

Delete a task:

- ▶ **Options** ▶  **Delete** ▶ **OK** ▶ **Delete**

Delete all tasks from the list.

- ▶ **Options** ▶  **Clear all** ▶ **OK** ▶ **Clear**

Recorder

Use the **Recorder** app to manage the sound recordings made with the integrated microphone.

▶  ▶  **Extras** ▶ **OK** ▶  **Recorder**

Add a recording:

▶ **New** ▶  Start the recording ▶ record sounds ▶ **Done**

Play a recording:



▶  Select the recording ▶ **OK** ▶  Play the recording

Managing audio files

▶  ▶  **Extras** ▶ **OK** ▶  **Recorder** ▶  Select the recording ▶ **Options**

Delete a file: ▶ **Delete** ▶ **OK** ▶ **Delete**

Delete multiple files:

▶  **Select Multiple** ▶ **OK** ▶  Select the audio files ▶ **OK** ▶ **Delete** ▶ **OK**
▶ **Delete**

Share a file with others:

▶ **Share** ▶ Select the app you want to use to share the file ▶ **OK**

Rename a file:

▶ **Rename** ▶ **OK** ▶  Enter the new name ▶ **Save**

Save a file as a ringtone:


▶ **Save As Ringtone** ▶ **OK** ▶ **Save**



Use a ringtone as the default:


▶ Select option **Set as default ringtone**

Unit Converter

Use the unit converter to convert length or temperature units for example.

▶  ▶  **Extras** ▶ **OK** ▶  **Unit Converter** ▶ **OK** ▶  Select the parameter (e.g. temperature) ▶ **OK**

▶ **OK** ▶  Select the unit for the initial value ▶ **OK** ▶  Enter the initial value

▶  ▶ **OK** ▶ Select the unit for the target value ▶ **OK** ... The target value is calculated and displayed

Delete an entry: ▶ **Clear all**



Clock

The **Clock** menu contains an alarm, an egg timer and a stopwatch.

Alarm

- ▶  ▶  **Clock** ▶ **OK** ▶  **Alarm** ▶ **New** ▶  **Time** ▶ **OK** ▶  Set the time
▶ **Save**



Set a repeat:

- ▶  **Repeat** ▶ **OK** ▶  Select the repeat frequency ▶ **OK** ▶ **Save**

Set the alarm tone:

- ▶  **Sound** ▶ **OK** ▶  Select the alarm tone ▶ **OK** ▶ **Save**

Set vibration:

- ▶  **Vibration** ▶ **OK** ▶  Enable/disable vibration ▶ **OK** ▶ **Save**

Name the alarm:

- ▶  **Alarm name** ▶  Enter text ▶ **Save**



When the alarm is switched on, an icon is displayed in the Status bar.

Turning an alarm on and off

The alarm sounds with the tone set.

Switch off the alarm permanently: ▶ **Stop**

Repeat the alarm: ▶ **Snooze**

Switching the alarm on and off

- ▶  ▶  **Clock** ▶ **OK** ▶  **Alarm** ▶ **OK** ▶  Select the alarm ▶ **Turn Off/ Turn On**

Editing the alarm settings

- ▶  ▶  **Clock** ▶ **OK** ▶  **Alarm** ▶  Select the alarm ▶ **Options** ▶ 
Settings ▶ **OK**

Set the snooze time:

- ▶  **Snooze** ▶ **OK** ▶ Select the snooze time ▶ **OK**

Adjust the alarm volume:

- ▶  **Volume** ▶ **OK** ▶  Adjust the volume


Enable/disable vibration:

- ▶  **Vibration** ▶ **OK** ▶  Enable/disable vibration ▶ **OK**

Editing and deleting alarms

▶  ▶  **Clock** ▶ **OK** ▶  **Alarm** ▶ **OK** ▶  Select the alarm ▶ **Options**

Change an alarm:

▶  **Edit** ▶ **OK** ▶ Change the required setting ▶ **Save**

Clear an alarm: ▶  **Delete** ▶ **OK** ▶ **Delete**

Clear all alarms:

▶  **Delete all** ▶ **OK** ▶ **Delete**

Timer

The timer counts a defined time back to 0 (in seconds). When the timer expires, an acoustic alarm sounds.

▶  ▶  **Clock** ▶ **OK** ▶  **Timer** ▶  Select hours, minutes and seconds and set them using the Control key  ▶ **Start**


Editing the timer settings

▶  ▶  **Clock** ▶ **OK** ▶  **Timer** ▶ **Settings**

Set vibration:

▶  **Vibration** ▶ Enable/disable vibration ▶ **OK**

Set the warning tone:

▶  **Sound** ▶ Select the warning tone ▶ **OK**

Stopwatch

The stopwatch stops times down to 1/100ths of a second.

▶  ▶  **Clock** ▶ **OK** ▶  **Stopwatch**

Start the stopwatch: ▶ **Start**

Stop the stopwatch: ▶ **Pause**

Cancel the time measurement: ▶ **Return**

Continue the time measurement: ▶ **Resume**

Interval counter

Whilst the stopwatch is running, you are able to stop intervals. For every "interval", the reading is shown on the display.

Enable the interval counter: ▶ **Lap**



Music

The **Music** app shows all music files that are stored on the phone. You can listen to the music titles stored, manage them in different play lists, use them as ringtones and share them with others.

▶  ▶  **Music** ▶ **OK**

Calendar


The **Calendar** app shows daily, weekly and monthly views, as well as certain calendar categories. From the calendar, you can create appointments and assign reminders.

▶  ▶  **Calendar** ▶ **OK** ... The current date is shown ▶ **OK**

Select the view:

▶ **Options** ▶  Select the **Month View / Week View / Day View** ▶ **OK**

Select month/week/day/hour:

▶ Using the Control key , scroll through the calendar to the entry required regardless of the view selected

Jump to a certain date:

▶ **Options** ▶  **Go to Date** ▶ **OK** ▶ Select the date ▶ **Save**

Return to today's date: ▶ **Options** ▶  **Today** ▶ **OK**

Add an appointment


▶  ▶  **Calendar** ▶ **OK** ▶ **Add** ▶  Enter the title and place

Set the start and end dates:


▶  **Start Date / End date** ▶ **OK** ▶ Select the date ▶ **Save**

Set the start and end times:

▶  **Start Time / End time** ▶ **OK** ▶ Select the time ▶ **Save**

or: ▶  Select option **All-day Event** ▶ **OK**


Repeat an appointment regularly:

▶  **Repeat** ▶ **OK** ▶ Select the repeat frequency ▶ **OK**

Select the calendar in which the appointment is to be created (if there is more than one):


▶  **Calendar** ▶ **OK** ▶ Select the calendar ▶ **OK**

Specify whether and when you want to be reminded about the appointment:

▶  **Reminder** ▶ **OK** ▶ Select the time for the reminder or **None** ▶ **OK**

Enter a message: ▶  **Notes** ▶  Enter the text ▶ **Enter**




Save an appointment: ▶ **Save**

 Days for which an appointment exists are denoted by a "" in the weekly and monthly views.


Finding appointments

▶  ▶  **Calendar** ▶ **OK** ▶ **Options** ▶ **OK** ▶  **Search** ▶ **OK** ▶ Enter the search text ▶ **Back**

Deleting/editing appointments

▶  ▶  **Calendar** ▶ **OK** ▶ Look for an appointment or select it using 
▶ **OK**

Change an appointment:





▶ **Edit** ▶  Select the field you want to edit ▶ Change the entry ▶ **Save**

Delete an appointment: ▶ **Delete** ▶ **OK** ▶ **Delete**






Using more than one calendar

If you have more than one Internet account, you can specify Link in their calendars.

Selecting the calendars to display

▶  ▶  **Calendar** ▶ **OK** ▶ **Options** ▶  **Calendar to Display** ▶ **OK** ... The phone calendar and all available calendar accounts are displayed ▶  Select the calendar(s) ▶ **OK** ▶ **Save** ... Only the appointments for the accounts selected are shown


Adding an account


▶  ▶  **Calendar** ▶ **OK** ▶ **Options** ▶  **Settings** ▶ **OK** ▶  **Add an account** ▶  Select the account type ▶ If required, set up the account or log into it

Set the interval for synchronisation:

▶  **Sync calendar** ▶ **OK** ▶  Select the interval or **Manually** ▶ **OK**

Specify whether and when you want to be reminded about the appointment:

▶  **Events Reminder** ▶ **OK** ▶ Select the time for the reminder or **None** (max. 1 day beforehand) ▶ **OK**

▶  **All-day Events Reminder** ▶ **OK** ▶ Select the time for the reminder or **None** (max. 2 weeks beforehand) ▶ **OK**

Synchronising a calendar manually





Calendars can differ when changes are made on one device and the calendars are not synchronised automatically. To synchronise the differences, the account calendars can be synchronised manually.



►  ►  **Calendar** ► **OK** ► **Options** ►  **Sync calendar** ► **OK**

Email

The **Email** app shows all incoming, sent and deleted messages for your email account. An email account can be synchronised with an existing Internet account (such as Gmail).

Reading emails

►  ►  **Email** ► **OK** ►  Select an email ► **OK** ►  Scroll through the email

 Unread emails are denoted by  to the left of the entry.

Search for an email:

► **Options** ►  **Search** ► **OK** ►  Enter the search text ... Emails containing the text are listed

Select the folder:

► **Options** ►  **View folders** ► **OK** ►  Select the folder ► **OK** ... Only emails for this folder are displayed













Change the sorting order:

► **Options** ►  **Sort** ► **OK** ►  Select the sorting criterion ► **OK**

Writing and sending new emails

►  ►  **Email** ► **OK** ► **Compose** ►  Enter a recipient or select it from Contacts ►  Enter a subject ►  Enter the text ► **Send**

Managing emails

- ▶  ▶  **Email** ▶ **OK** ▶  Select the email ▶ **Options**
- Mark as unread: ▶  **Mark as unread** ▶ **OK**
- Mark as read: ▶  **Mark as read** ▶ **OK**
- Mark an email: ▶  **Add flag** ▶ **OK**
- Remove a mark: ▶  **Remove flag** ▶ **OK**
- Display in-tray for email: ▶  **View folders** ▶ **OK**
- Move an email: ▶  **Edit** ▶ **OK** ▶  **Move to folder** ▶ **OK** ▶ 
Select the folder ▶ **OK**
- Delete: ▶  **Delete** ▶ **OK** ▶ **Delete**

Editing more than one email

It is possible to perform options **Mark as read**, **Add flag**, **Remove flag**, **Move to folder** and **Delete** for multiple emails at the same time.

- ▶  ▶  **Email** ▶ **OK** ▶ **Options** ▶  **Edit** ▶ **OK** ▶  **Select multiple** ▶ **OK**
▶ Select the emails ▶ **OK** ▶  Select the required option ▶ **OK**

Switching accounts

- ▶  ▶  **Email** ▶ **OK** ▶ **Options** ▶  **Switch account** ▶ **OK** ▶  Select the account ▶ **OK**

Note

With the **Note** app, you can create, edit and share notes.




Creating notes

- ▶  ▶  **Note** ▶ **OK** ▶ **New** ▶  Enter text ▶ **Save**

To change line: ▶ Press the Control key 

For information on entering text: → p. 23

Displaying notes

▶  ▶  **Note** ▶ **OK** ▶ ... Existing notes are listed ▶  Select a note ▶ **OK**

or: Look for a note

▶  ▶  **Note** ▶ **OK** ▶ **Options** ▶  **Search** ▶ **OK** ▶  Enter the search text ... The relevant notes are listed ▶  Select a note ▶ **OK**

Sort notes:

▶  ▶  **Note** ▶ **OK** ▶ **Options** ▶  **Sort by** ▶ **OK** ▶  Select a sorting criterion (such as creation date) ▶ **OK**

Deleting/editing notes


▶  ▶  **Note** ▶ **OK** ▶  Select a note ▶ **OK**

Editing:

▶  Position the cursor ▶  Change the text ▶ **Save**

Delete: ▶ **Options** ▶  **Delete** ▶ **OK** ▶ **Delete**

Share:



▶ **Options** ▶  **Share** ▶ **OK** ▶ Select the app you want to use to share the file ▶ **OK**


Delete multiple notes:

▶ **Options** ▶  **Select Multiple** ▶  Select the note ▶ **OK** ▶ **Delete** ▶ **OK** ▶ **Delete**

FM Radio

Use the VHF radio to listen to available VHF radio stations. Because the phone does not have an integrated antenna, a headphones cable needs to be plugged in for this function (→ p. 5).

▶  ▶  **FM Radio** ▶ **OK** ▶ Plug in the headphones cable ▶ **Turn On**
▶ Confirm the volume warning with **OK**

▶ **Stations** ... The frequencies of stations available are listed ▶  Select a station

Adjust the volume:

▶ **Options** ▶  **Volume** ▶ **OK** ▶  Adjust the volume

Switch between headphones and speaker:

▶ **Options** ▶  **Switch to speaker / Switch to headphones** ▶ **OK**

Start scanning for stations: ▶ **Options** ▶  **Scan Stations** ▶ **OK**

Turn off the VHF radio: ▶ **Turn Off** ▶ Unplug the headphone cable

Options

▶  ▶  **FM Radio** ▶ **OK** ▶  Select a station ▶ **Options**

Add selected station to Favourites:

▶  **Add to favourites** ▶ **OK**

Rename a station selected:






▶  **Rename station** ▶ **OK** ▶ Enter a name ▶ **OK**

File Manager

Use the File manager to manage files stored on the phone in internal memory or on the SD card. You can edit, move and copy files.

Opening a file

The files are kept in a folder structure.

▶  ▶  **File Manager** ▶ **OK** ▶  Select **Internal / SD Card** ▶ **OK**
▶  Select the folder ▶ **OK** ▶  Select a file ▶ **OK** ... The file is opened with the relevant app (depending on file type)



Looking for a file

▶  ▶  **File Manager** ▶ **OK**

Look in all memory locations: ▶ **Search**

or: look in a folder










▶  Select **Internal / SD Card** ▶ **OK** ▶  Select the folder ▶ **OK** ▶ **Options**
▶  **Search** ▶ **OK**

▶  Enter the search text ▶ **Search** ... Files matching the entry are listed
▶  Select the file ▶ **OK**









Change the search area:

▶ On the search screen:  **Searching in** ▶ **OK** ▶  Select the required area/folder ▶ **OK**















Managing folders

- ▶  ▶ **File Manager** ▶ **OK** ▶  **Select Internal / SD Card** ▶ **OK**
 ▶  **Select the folder** ▶ **Options**
- Copy a folder: ▶  **Copy** ▶ **OK** ▶  **Select the target folder**
 ▶ **OK** ▶ **Paste**
- Update a folder: ▶  **Refresh** ▶ **OK**
- Display folder details: ▶  **Details** ▶ **OK**
- Create a new folder in the current one: ▶  **New folder** ▶ **OK** ▶  **Enter a name** ▶ **OK**

Editing multiple folders

- ▶  ▶ **File Manager** ▶ **OK** ▶  **Select Internal / SD Card** ▶ **OK**
 ▶ **Options** ▶  **Select items** ▶ **OK**
- Select individual folder: ▶  **Select the folder** ▶ **OK**
- Select all folders: ▶ **Options** ▶  **Select All** ▶ **OK**
- Cancel the selection: ▶ **Options** ▶  **Deselect All** ▶ **OK**
- Copy a folder selected: ▶ **Options** ▶  **Copy** ▶ **OK** ▶  **Select the target folder** ▶ **Paste**


Managing files

- ▶  ▶ **File Manager** ▶ **OK** ▶  **Select Internal / SD Card** ▶ **OK**
 ▶  **Select the folder** ▶ **OK** ▶  **Select the file** ▶ **Options**
- Delete a file: ▶  **Delete** ▶ **OK** ▶ **Delete**
- Copy a file: ▶  **Copy** ▶ **OK** ▶  **Select the target folder**
 ▶ **Paste**
- Move a file: ▶  **Move** ▶ **OK** ▶  **Select the target folder**
 ▶ **Move**
- Rename a file: ▶  **Rename** ▶ **OK** ▶  **Enter a name** ▶ **OK**
- Update a file: ▶  **Refresh** ▶ **OK**
- Show the details for a file: ▶  **Details** ▶ **OK**
- Share files: ▶  **Share** ▶ **OK** ▶ **Select the app** ▶ **OK**

Editing multiple files

- ▶  ▶  **File Manager** ▶ **OK** ▶  **Select Internal / SD Card** ▶ **OK**
 - ▶  **Select the folder** ▶ **OK** ▶ **Options** ▶  **Select items** ▶ **OK**

Select individual files:

- ▶  **Select files** ▶ **OK**

Select all files:

- ▶ **Options** ▶  **Select All** ▶ **OK**

Cancel the selection:

- ▶ **Options** ▶  **Deselect All** ▶ **OK**

Delete files selected:

- ▶ **Options** ▶  **Delete** ▶ **OK** ▶ **Delete**

Copy files selected:

- ▶ **Options** ▶  **Copy** ▶ **OK** ▶  **Select the target folder** ▶ **Paste**

Move files selected:

- ▶ **Options** ▶  **Move** ▶ **OK** ▶  **Select the target folder** ▶ **Move**

Settings


Network and connectivity

From this menu, you configure the settings for the network connections on your phone (mobile network, WLAN, Bluetooth).

Enabling/disabling airplane mode

Airplane mode interrupts the phone connection to the phone network and WLAN. This might be required in the interest of safety (such as on aeroplanes).

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Aeroplane Mode** ▶ **OK** ▶  **Enable or disable Aeroplane Mode** ▶ **OK**

 Enable airplane mode directly from the idle mode display → p. 20

Mobile network and data

The menu shows the settings for the SIM card(s) inserted. You can specify which data volume is sent and at what transfer speed.

Settings for the SIM cards



- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Mobile network & Data** ▶ **OK** ▶  **Network Operator** Select SIM1 or SIM2 ▶ **OK**

Select the network type:

The network type determines the bandwidth and so the transfer speed of mobile data.

- ▶  **Network Type** ▶  Select **Automatic** or the preferred network type ▶ **OK**

Select the network operator automatically or manually:

- ▶  **Automatic** ▶ **OK** ▶  Enable or disable automatic search of the network operator ▶ **OK**

When you disable the automatic search, a search is performed for available network operators.

- ▶  Select the network operator ▶ **OK**

Enabling/disabling data transfer

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Mobile network & Data** ▶ **OK** ▶  **Data Connection** ▶ **OK** ▶  **Enable/disable the data connection** ▶ **OK**



Enabled: Data connections (such as for Internet surfing) can be established over the mobile network.

Disabled: Data connections are only established over WLAN.

Enable/disable data transfer over the mobile network with quick access:
→ p. 20

Enabling/disabling data roaming

To use networks abroad where your provider is not present, you can enable data roaming. Additional charges can be made for this outside the EU.

- ▶  **Data Roaming** ▶ **OK** ▶  **Enable or disable Data Roaming** ▶ **OK**

WLAN

Enabling/disabling WLAN


- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Wi-Fi** ▶ **OK**
▶  **Enable/disable WLAN** ▶ **OK**

Connecting with WLAN







As soon as WLAN is enabled, the device searches for networks in range.

- ▶  **Available Networks** ▶ **OK** ▶  **Select the network** ▶ **OK** ▶  **Enter the password** ▶ **Connect**

Connecting over WPS










 Your WLAN router is able to use WPS to register devices in the WLAN. Please also follow the instructions from your router manufacturer.

WPS connections can be established from a button on the router or by entering a PIN.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Wi-Fi** ▶ **OK**
▶  **Connect with WPS** ▶ **OK** ▶  **Select Button connection or My PIN connection** ▶ **Connect** ▶ Establish a connection depending on the connection method









Registering with a WLAN that is not publicly visible

If you want to register the phone with a “hidden” network, you require the network name (SSID).

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Wi-Fi** ▶ **OK** ▶  **Advanced Settings** ▶ **OK** ▶  **Manage Networks** ▶ **OK** ▶  **Join Hidden Network** ▶ **OK** ▶ Enter the network name (SSID) ▶  **Security** ▶ **OK** ▶  Select the encryption method and enter the password (if required) ▶ **Connect**






Managing the network list

Delete networks already connected from the list of known WLAN connections:

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Wi-Fi** ▶ **OK** ▶  **Advanced Settings** ▶ **OK** ▶  **Manage Networks** ▶ **OK** ▶  **Known networks** ▶ **OK** ... The networks to which the phone has already been connected at least once are displayed ▶  Select a network ▶ **Forget**

Bluetooth

Connect the phone to Bluetooth devices nearby (to exchange data for example).

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Bluetooth** ▶ **OK** ▶  Enable/disable Bluetooth ▶ **OK**



Set the visibility of the mobile phone using Bluetooth:

- ▶  **Visible to All** ▶ **OK** ▶  Enable/disable visibility ▶ **OK**

Change the Bluetooth name of the mobile phone:

- ▶  **My Phone Name** ▶ **OK** ▶  Change the name ▶ **Save**

Connect to devices nearby:






- ▶  **Nearby Devices** ▶ **OK** ... Bluetooth devices that are in range are listed with their MAC addresses ▶  Select a device ▶ **OK** ▶ Confirm the device PIN ▶ **Pair**



When using Bluetooth headsets in connection with applications (apps), only the headphone function (without microphone) may be supported.

Geolocation

For functions such as Google Maps, location details of the phone are required. For this, to Geolocation must be activated.


- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Geolocation**
 - ▶ **OK** ▶  **Enable/disable to Geolocation** ▶ **OK**

Settings for the SIM cards

Use the SIM manager to configure settings for the SIM cards.

Changing a SIM card name

Specify the name of the SIM card for how it is shown on the start screen.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **SIM Manager**
 - ▶ **OK** ▶  **Select a SIM card** ▶ **OK** ▶ **Name** ▶ **OK** ▶  **Change the name of the SIM card** ▶ **Save**

Changing a SIM card PIN

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **SIM Manager**
 - ▶ **OK** ▶  **SIM Security** ▶ **OK** ▶  **Select PIN 1/PIN 2** ▶ **OK** ▶ **Enter the old PIN** ▶  **Enter the new PIN** ▶  **Confirm the new PIN** ▶ **Done**

Operator-specific settings for calls

From the **Calling** menu, you can configure operator-specific settings for calls.







The settings are dependent on network operator.

Please heed any information from your provider.

Permit/suppress Call waiting

When the function is enabled during a call, another incoming call is signalled by a call waiting tone.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Calling** ▶ **OK**
 - ▶  **Select a SIM card** ▶ **OK** ▶ **Call Waiting** ▶ **OK** ▶  **Enable or disable Call waiting** ▶ **OK**

Enabling/disabling caller display








When this function is enabled, your phone number is sent to the person at the other end.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Calling** ▶ **OK**
 - ▶  **Select a SIM card** ▶ **OK** ▶  **Caller ID** ▶ **OK** ▶  **Hide or display phone number** ▶ **OK**

Setting up Call divert

If you are currently on a call or the phone can not be contacted, you can enable automatic Call divert.

Call diverts can be set up for the following situations:

- **Always forward / Forward when busy**
- **Forward when unanswered / Forward when unreachable**
- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Calling** ▶ **OK**
 - ▶  **Select a SIM card** ▶ **OK** ▶  **Call Forwarding** ▶ **OK** ▶  **Select the type of call divert** ▶ **OK** ▶ **Enter the phone number** ▶ **Save**

Setting up Call barring

Specify whether you want to restrict incoming and outgoing calls. So calls to numbers abroad can be prohibited for example, but calls within the national network remain possible.

The following calls can be barred:

- **All** (for incoming and outgoing calls)
- **International** (for outgoing calls)
- **International except home country** (for outgoing calls)
- **All while roaming** (for incoming calls)

An unblocking code is required to unblock barred calls.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Network & Connectivity** ▶  **Calling** ▶ **OK**
 - ▶  **Select the SIM card** ▶ **OK** ▶  **Call Barring** ▶ **OK**

Enable/disable call barring:

- ▶  **Select the call barring required** ▶ **OK** ▶ **Enable or disable call barring** ▶ **OK**

Specify/change the unblocking code:

- ▶  **Change passcode** ▶ **OK** ▶  **Enter and confirm the unblocking code**
 - ▶ **Change**

Setting up call number restrictions

You can restrict calls made by the phone to certain numbers. All other numbers may not be dialled.



Emergency numbers can always be dialled.

For all actions, you must enter the SIM card PIN.

Enabling/disabling call restriction

- ▶ ▶ **Settings** ▶ **OK** ▶ **Network & Connectivity** ▶ **Calling** ▶ **OK**
 - ▶ **Select the SIM card** ▶ **OK** ▶ **Fixed dialling numbers** ▶ **OK** ▶ **Select On/Off** ▶ **OK**

Managing the list of non-barred numbers

- ▶ ▶ **Settings** ▶ **OK** ▶ **Network & Connectivity** ▶ **Calling** ▶ **OK**
 - ▶ **Select the SIM card** ▶ **OK** ▶ **Fixed dialling numbers** ▶ **OK** ▶ **Authorised numbers** ▶ **OK**

Add a number:

- ▶ **Add** ▶ Enter the name ▶ Enter the number to call ▶ **Save**
- or dial from Contacts: ▶ **Contact** ▶ Select a contact ▶ **OK**

Delete a phone number:

- ▶ Select a phone number ▶ **Remove**

Setting up a WLAN hotspot

With the Internet enable, you can allow other devices to use the mobile data connection on your phone. For this, the phone makes available its own WLAN hotspot.



The data volumes accruing are taken off your account.

- ▶ ▶ **Settings** ▶ **OK** ▶ **Network & Connectivity** ▶ **Internet Sharing** ▶ **OK** ▶ **Wi-Fi hotspot** ▶ **OK** ▶ **Enable or disable a hotspot** ▶ **OK**

Personalisation








From the **Personalisation** menu, you tailor device-specific settings to your needs (such as ringtones, date and time, and language).


Tones

Adjust the volume, ringtones and other acoustic sounds on the phone.


Adjusting the volume

You can adjust separately the volumes for medium playback, ringtones, warnings and alarm.


- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Sound** ▶ **OK**
 - ▶  **Volume** ▶ **OK** ▶  Select the required setting ▶  Adjust the volume ▶ **OK**

 The volume can also be adjusted from the Volume keys (→ p. 15).

Setting ringtones

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Sound** ▶ **OK** ▶  **Sound** ▶ **OK**

Enable/disable the silent alert:

- ▶  **Vibrate** ▶ **OK** ▶ Enable/disable the silent alert ▶ **OK**

Select the ringtones:








- ▶  **Ringtones** ▶  Select the ringtone ▶ **OK**

Select the warning tones:

- ▶  **Notice Alerts** ▶ **OK** ▶  Select a warning tone ▶ **OK**

Loading your own ringtones








Existing music files are offered for selection as ringtones (→ p. 45). You can also record a new music file.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Sound** ▶ **OK** ▶  **Sound** ▶ **OK** ▶  **Manage Tones** ▶ **OK** ▶ **My Ringtones** ▶ **OK** ▶ **Add**
 - ▶ Select the source (music or recording device) ▶ **OK** ▶  Select the ringtone or record a new one ▶ **Done** ▶ **Save**

Use a ringtone as the default:

- ▶ Select option **Set as default ringtone**

Sharing ringtones / advisory tones

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Sound** ▶ **OK** ▶  **Sound** ▶ **OK** ▶  **Manage Tones** ▶ **OK** ▶ **System Ringtones/Notice Alerts** ▶ **OK** ▶  **Select a tone** ▶ **Share** ▶ Select the app you want to use to share the tone

Other tones

Enable and disable other tones, such as the dialling tone (sounds when dial digits are entered) and the camera tone (shutter click).


- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Sound** ▶  **Other Sounds** ▶ **OK** ▶  **Select a tone** ▶ **OK** ▶ Enable/disable the tone ▶ **OK**

Display



For the start screen, you can set the background image, the brightness of the display and the time until the display transitions to idle.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Display** ▶ **OK**

Set the background image:

- ▶  **Wallpaper** ▶ **OK** ▶ Select from the gallery (→ p. 38), create a new camera image (→ p. 38) or select an existing system background ▶ **Save**

Set the display brightness:

- ▶  **Brightness** ▶  Decrease or increase the brightness

Time until the screen transitions to idle:

- ▶  **Screen Timeout** ▶ **OK** ▶ Select the required time limit ▶ **OK**

A higher time limit entails increased power consumption.

Enable/disable automatic keypad lock:

- ▶  **Auto Keypad Lock** ▶ **OK** ▶ Enable/disable keypad lock ▶ **OK**

Only the keypad is locked. Block all keys: → p. 15

Search engine

From the **Search** menu, define the search engine to use to search for terms in the Internet.

▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Search** ▶ **OK**

Define the search engine:

▶  **Search Engine** ▶ **OK** ▶ Select the search engine ▶ **OK**

Allow search suggestions:

Search suggestions help you when searching in the Internet and save you from entering whole expressions.

▶ **Search Suggestions** ▶ **OK** ▶ Enable/disable search suggestions ▶ **OK**

Notices

From the idle display, you can show messages that are stored by apps or the system (display key **Notices** → p. 20).

From the **Notices** menu, you specify whether messages are also displayed on the lock screen, and which apps are allowed to store messages.

For information about the lock screen: → p. 64

▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Notices** ▶ **OK**

Show messages when the phone is locked:

▶  **Show on Lock Screen** ▶ **OK** ▶  Enable/disable message display on the lock screen ▶ **OK**




Show contents of the messages on the lock screen:

Here you can read the messages without unlocking the phone.

▶  **Show content on lock screen** ▶ **OK** ▶  Enable/disable contents display on the lock screen ▶ **OK**






Select the apps that are allowed to store messages:

This means for example you receive a message for a new WhatsApp message, but not for a new email.



▶  **App Notices** ▶ **OK** ▶  Select an app ▶ **OK** ▶ **Allow Notices** ▶ **OK**
 ▶  Enable/disable messages ▶ **OK**

Date and time

The date and time can be set manually or automatically using a time server.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Date & Time** ▶ **OK**
 - ▶  **Auto Sync** ▶ **OK** ▶ Enable/disable synchronisation ▶ **OK**


When synchronisation is disabled, set the date and time manually:

- ▶  **Date** ▶ **OK** ▶ Set the date ▶ **Save**
- ▶  **Time** ▶ **OK** ▶ Set the time ▶ **Save**

Specify the time format:







- ▶  **Time Format** ▶ **OK** ▶ Select **12-hour / 24-hour** ▶ **OK**.

Show / do not show the clock on the idle display:

- ▶  **Clocks** ▶ Show/hide the display ▶ **OK**

Language

Set the display language:

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Language** ▶ **OK**
 - ▶  **Language** ▶ **OK** ▶  Select the language ▶ **OK**


An example for the language and date format selected is shown. Change the date format: → p. 62.

Input methods

To simplify the entry of text, the entry aid can be activated and the input language for text selected.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Input methods** ▶ **OK**

Use the entry aid:

- ▶  **Use Predictive** ▶ **OK** ▶ Enable/disable the entry aid ▶ **OK**


Show suggestions whilst text is being entered:

- ▶  **Next Word Suggestion** ▶ **OK** ▶ Enable/disable suggestions ▶ **OK**





Select the entry language(s):

- ▶  **Input Languages** ▶ **OK** ▶  Select one or more languages ▶ **OK** ▶ 

Answer Mode

Normally, you accept an incoming call by flipping open the phone and then pressing the Talk key  or Display key **Accept**.

A call can also be taken by simply flipping open the phone.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Personalisation** ▶  **Answer Mode** ▶ **OK**
 - ▶ **Flip open to answer** ▶ **OK** ▶ Enable/disable flipping open to take a call
 - ▶ **OK**

Alarm function (SOS)

From the **SOS** menu, you set up the alarm function on the phone.

When the function is enabled, the SOS numbers set are called in sequence as soon as you press the SOS key on the back of the device (→ p. 5).








Do not use any local, national or international SOS numbers.

Enabling/disabling SOS




- ▶  ▶  **Settings** ▶ **OK** ▶  **SOS** ▶  **SOS** ▶ **OK** ▶ **SOS settings** ▶ **OK**
 - ▶ Enable/disable SOS ▶ **OK**

Managing SOS numbers





You can assign up to five contacts as private SOS numbers.

- ▶  ▶  **Settings** ▶ **OK** ▶  **SOS** ▶  **SOS** ▶ **OK** ▶  **SOS numbers**
 - ▶ **OK**

Add a number:

- ▶  Select a non-assigned number ▶ **Options** ▶ **Add** ▶ **OK** ... The contact list is opened ▶  Select or search for a contact ▶  Select the number to call ▶ **OK**

Replace a number:

- ▶  Select an assigned number ▶ **Options** ▶  **Replace** ▶ **OK** ... The contact list is opened ▶  Select or search for a contact ▶  Select the number to call ▶ **OK**

Remove a contact from the SOS numbers:

- ▶  Select an assigned number ▶ **Options** ▶  **Remove from SOS number**
 - ▶ **OK** ▶ **Remove**

Privacy & Security


From the **Privacy & Security** menu, configure the various settings for the security of your mobile phone.

Setting up the Screen Lock

To protect your phone from being accessed, you can specify a 4-digit numerical code that you need to enter when switching it on.

▶  ▶  **Settings** ▶ **OK** ▶  **Privacy & Security** ▶  **Screen Lock** ▶ **OK**

Enable/disable screen lock:

▶  **Screen Lock** ▶ **OK** ▶  **Enable/disable the function** ▶ **OK**

When you enable the function for the first time:

▶  **Enter the unblocking code** ▶ **Repeat the unblocking code** ▶ **Create**

Change the unblocking code:

▶  **Change Passcode** ▶ **OK** ▶  **Enter the current unblocking code** ▶  **Enter the new unblocking code** ▶  **Confirm the new unblocking code** ▶ **Change**

Show messages on lock screen: → p. 61

Defining app authorisations

For every app installed, you can define which system functions they are allowed to access and whether they need to ask beforehand every time.

The possible authorisations are dependent on the app selected (e.g. **Geolocation, Microphone, Cameras, ...**)

▶  ▶  **Settings** ▶ **OK** ▶  **Privacy & Security** ▶  **App Permissions** ▶ **OK** ▶  **Select the app** ▶ **OK** ▶  **Select the authorisation** ▶ **OK** ▶ **Set the type of authorisation (Ask, Deny, Grant)** ▶ **OK**





Preventing web activities from being tracked

When you access the Internet, the device you use leaves its own profile - that is used by providers to track your surfing behaviour. Tracking can be permitted or prohibited.


▶  ▶  **Settings** ▶ **OK** ▶  **Privacy & Security** ▶  **Do Not Track** ▶ **OK** ▶  **Permit or prohibit history** ▶ **Save**

Data protection when surfing

The browser on the device makes a log of the Internet pages accessed to retrieve them faster. Also, Internet pages accessed save “cookies” to analyse the surfing behaviour for Internet pages.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Privacy & Security** ▶  **Browsing Privacy** ▶ **OK**

Delete browser history:

- ▶  **Clear Browsing History** ▶ **OK** ▶ **Delete**

Delete cookies and saved information:

- ▶  **Clear Cookies and Stored Data** ▶ **OK** ▶ **Delete**

About KaiOS

KaiOS is the vendor of the mobile phone software. This menu provides information about KaiOS. You can specify whether and which information you want to be available to KaiOS.

For some of the system functions, a minimum age of 16 years is required. For reasons of data protection, you must explicitly agree to the sending of usage data.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Privacy & Security** ▶  **About KaiOS** ▶ **OK**


Show information text:

- ▶  **Welcome to KaiOS.** ▶ **OK**

Confirm / do not confirm age limit:

- ▶  **I am over the age of 16.** ▶ **Confirm / do not confirm statement** ▶ **OK**

Agree to / do not agree to the communication of analysis data / use of data for advertising purposes:

- ▶  **Select an option** ▶ **Permit / do not permit communication** ▶ **OK**

Storage media

From this menu, you manage the storage media on which your application data is stored.

Showing the storage utilisation of the system

- ▶  ▶  **Settings** ▶ **OK** ▶  **Storage** ▶  ▶ **System**

Freeing up storage

Every app stores application data in storage. You can delete the data and so clean up the storage. System data can not be deleted.

▶  ▶  **Settings** ▶ **OK** ▶  **Storage** ▶  **Clean Up Storage** ▶ **OK**

or






▶  ▶  **Settings** ▶ **OK** ▶  **Storage** ▶  **Application Data** ▶ **OK**

Applications that fill storage are displayed.

▶  Select an application ▶ **Clean** ▶ **Delete**

Enabling/disabling the USB port

To transfer data from the phone memory to USB storage connected, or to load from it, the port must be enabled.

▶  ▶  **Settings** ▶ **OK** ▶  **Storage** ▶  **USB storage** ▶ **OK** ▶  **Enable or disable USB storage** ▶ **OK**



Specifying the storage location for media data

Media data is usually stored in the internal memory of the mobile phone. If the requirement is to use an SD card inserted as media storage, it must be enabled.

▶  ▶  **Settings** ▶ **OK** ▶  **Storage** ▶  **Default Media Location** ▶ **OK**
▶  Select the storage location ▶ **OK**

Media browser

The media browser permits access to all media stored in the memory. The current storage requirement is displayed for all media. You can edit the files (this is dependent on media type).

▶  ▶  **Settings** ▶ **OK** ▶  **Storage** ▶  **Media** ▶ **OK** ▶  Select the media type ▶ **OK**


The options available are dependent on the media type and are described in the respective sections.

Device

In the **Device** menu, you can show the device information and edit the device settings.






Showing the device information

In the device information, you can find detailed information about your mobile phone, such as phone number, device model, software version installed, hardware, SIM card, licenses and much more.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Device** ▶  **Device Information** ▶  Scroll through the information

Show more information: ▶ **More Information** ▶ **OK**

Updating the software

- ▶  ▶  **Settings** ▶ **OK** ▶  **Device** ▶  **Device Information** ▶ **OK** ▶  **Software Update** ▶ **OK** ... The phone checks whether the software installed is up-to-date

Look for updates manually: ▶ **Check for Update**

If there is newer software: ▶ **OK** ▶ **Install**

Only download software over a WLAN

Software updates should only be performed when the phone is connected to a WLAN. Downloading software over a mobile data network greatly increases your data volume.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Device** ▶  **Device Information** ▶ **OK** ▶  **Software Update** ▶ **OK** ▶ **Settings** ▶ **Download via** ▶ **OK** ▶ Select **Wi-Fi only / Wi-Fi or mobile network** ▶ **OK**

Showing licensing information

- ▶  ▶  **Settings** ▶ **OK** ▶  **Device** ▶  **Device Information** ▶ **OK** ▶  **Legal Information** ▶ **OK** ▶  Select the licensing information required ▶ **OK**

Managing downloads

From the **Downloads** menu, you manage files that you have received from an Internet page or as an email attachment, or have downloaded.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Device** ▶  **Downloads** ▶ **OK** ▶  Select a file ▶ **OK** ▶ **Open** or select **Options**

The options available are dependent on the file type and are described in the respective sections.

Battery management

Showing the current charge level

▶  ▶  Settings ▶ OK ▶  Device ▶  Battery ▶ OK

Enabling/disabling Power Saving Mode.

When Power save mode is enabled, automatic data transfer is prevented (e.g. the transfer of data via Bluetooth and the receipt of messages). You can then run these functions manually if so required.

▶  ▶  Settings ▶ OK ▶  Device ▶  Battery ▶ OK ▶  Power Saving Mode ▶ OK ▶ Enable/disable Power save mode ▶ OK

Enable Power save mode automatically once the battery has reached a lower capacity threshold:

▶  ▶  Settings ▶ OK ▶  Device ▶  Battery ▶ OK ▶  Turn On Automatically ▶ OK ▶  Select a capacity threshold ▶ OK

Use of the phone by those with impairments

Those with impaired sight or hearing are able to adjust the visual, acoustic and haptic feedback of the phone.

▶  ▶  Settings ▶ OK ▶  Device ▶  Accessibility ▶ OK

Invert Colours:

▶  Invert Colours ▶ OK ▶  Select On / Off ▶ OK

Turn on/off the background light:

▶  Backlight ▶ OK ▶  Select On / Off ▶ OK

Show text bigger:

▶  Large Text ▶ OK ▶  Select On / Off ▶ OK



Give images subtitles:

▶  caption ▶ OK ▶  Select On / Off ▶ OK

Audio playback in mono audio:

▶  Mono Audio ▶  Select On / Off ▶ OK

For stereo playback, adjust the left or right channel to be louder:






▶  Volume Balance ▶  Move the volume balance to the left (L) or right (R)

Enable/disable keypad vibration:

▶  Keypad Vibration ▶  Select On / Off ▶ OK

Enabling/disabling TTY

When TTY (Tele Type Writer) is enabled, you can use the Micro-USB or headset connector to connect the mobile phone to a special telecoms device for the deaf or another relay service.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Device** ▶  **Accessibility** ▶ **OK** ▶  **TTY**
 - ▶ Select TTY mode ▶ **OK**











Account

This menu enables you to set up access to a KaiOS account. You can thereby enable anti-theft protection and gain access to the KaiOS shop (→ p. 35).

KaiOS Account


The KaiOS account grants access to functions such as Remote device management and additional services.

Create Account

- ▶  ▶  **Settings** ▶ **OK** ▶  **Account** ▶  **KaiOS Account** ▶ **OK**
 - ▶  **Create Account** ▶ **OK** ▶ **Accept** ▶  **Region** ▶ **OK** ▶  **Select the region** ▶ **OK** ▶  **Enter the phone number or email address** ▶  **Enter the password** ▶  **Repeat the password** ▶ **Next**

Registering a phone

- ▶  ▶  **Settings** ▶ **OK** ▶  **Account** ▶  **KaiOS Account** ▶ **OK**
 - ▶  **Sign in with Phone / Sign in with Email** ▶ **OK**

Registering: ▶  Enter the account details ▶ **Sign in**





Change the password:

- ▶ **Options** ▶ **Change password** ▶  Enter the current and new passwords
 - ▶ **Next**

De-registering: ▶ **Options** ▶ **Sign out**

Anti-Theft

An active KaiOS account enables you to block or delete your phone over the Internet in the event it is misplaced.

- ▶  ▶  **Settings** ▶ **OK** ▶  **Account** ▶  **Anti-Theft** ▶ **OK** ▶ **Enable/disable anti-theft protection** ▶ **OK**

Resetting the device

When you shut the phone down or pass it on to a third party, you should reset it to the default settings. This deletes all personal information and the settings, including passwords and accounts.

▶  ▶  **Settings** ▶ **OK** ▶  **Device** ▶  **Device Information** ▶ **OK**
▶  **Reset Phone** ▶ **OK** ▶ **Reset**

Once the process is complete, the Setup Wizard starts (→ p. 13).

Appendix

Customer service United Kingdom and Ireland

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service.



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... online:

via our contact form on the customer service page

... by telephone:

United Kingdom

Service Hotline: 020 36953111

(local call cost charge)

Ireland

Service Hotline: 0818 200 033

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country. Our representatives are also available on the telephone hotlines for consultation.

Australia-----	+61 1300 780 878	Jordan -----	00962 6 5625460/1/2
Austria -----	0043 1 311 3046	Kuwait -----	+965 -22458737/22458738
Bahrain -----	31 73 11 173	Lebanon-----	+9611240259/
Belgium -----	07185 6679	-----	+9611236110
Bosnia Herzegovina-----	033 276 649	Luxembourg -----	(+352) 8002 3811
Brazil -----		Malaysia -----	+603-8076 9696
Grandes Capitais e Regiões Metropolitanas:		Malta -----	+39 02360 46111 (0,10 €)
-----	4003 3020	Mexico -----	
-----	(Preço de uma ligação local)	-----	01800 999 4442738 (01800 999 GIGASET)
Demais localidades:		Netherlands -----	0900-3333102
-----	0800 888 3020	New Zealand -----	0800 780 878
-----	(Gratuito)	Norway-----	+47 2231 0845
Bulgaria -----	+359 2 9710666	Oman -----	+968 70928 Ext. 49/21/75
Canada -----	1-866 247-8758	Poland -----	801 140 160
China -----	0 21 400 670 6007 (RMB 0.11)	Portugal -----	(+351) 308 804 760
Croatia -----	01 / 2456 555	-----	(custo de uma chamada local)
Czech Republic -----	233 032 727	Romania-----	+40 021 204 9190
Denmark -----	+45 43682003	Russia -----	8-800 333 4956
Finland -----	+358 (0)9725 19734	Serbia -----	0800 222 111
France -----	(0)1 57 32 45 22	Singapore-----	6735 9100
Germany -----	02871 / 912 912	Slovak Republic -----	0905 035 305
Greece -----	+30 2111 98 1778	Slovenija-----	+386 (1) 5466 511
Hong Kong -----	2763 0203	South Africa -----	0800 98 08 42
-----	2389 7285	Spain -----	(+34) 910 920 931
Hungary-----	06(1)267-2109	Sweden -----	+46 (0)8502 52347
India -----	Please refer to your	Switzerland -----	0848 212 000
-----	local warranty card	Taiwan -----	02 266 24343
Indonesia -----	(62-21) 5673813	Turkey-----	Son kullanıcı için +90 212 888 6346
-----	(62-21) 888856000	Bayi için +90 212 888 6347	
Ireland -----	0818 200 033	Ukraine-----	+380-44-451-71-72
Italy -----	02.600.630.45	United Arab Emirates -----	+971 44504288
(Il numero è di tipo "urbano nazionale" e può essere		United Kingdom-----	020 36953111
chiamato da qualunque operatore di rete fissa o		USA -----	1-866 247-8758
mobile. Il costo della chiamata è inerente al proprio		-----	tollfree
piano tariffario definito con l'operatore telefonico,			
ad esempio in caso di un contratto con tariffa FLAT,			
non ci sono costi aggiuntivi per la chiamata a questo			
numero, in quanto si tratta di un numero urbano			
nazionale.)			

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
- The device is opened (this is classed as third party intervention)
- Repairs or other work done by persons not authorised by Gigaset Communications.
- Components on the printed circuit board are manipulated
- The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by: Gigaset Communications GmbH, Frankenstrasse 2, D-46395 Bocholt.

- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

The display is made up of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Certain content and services which can be accessed using this device are the property of third parties and are protected by copyrights, patents, trademarks and/or other laws for the purpose of safeguarding intellectual property. Such content and services are provided solely for non-commercial, private usage. You may not use content or services which has/have not been authorised by the owner of particular content or a service provider. Without limiting the generality of the foregoing, except as expressly specified by the owner of the content or the service provider, the modification, reproduction, dissemination, uploading, publication, transmission, translation, sale, creation of derived works, distribution of content or services shown on this device are not permitted in any form and on any medium.

Trademarks

Trademarks and product names are brands or registered brand names of their respective companies or organisations and are subjected to product and trademark protection laws.

Manufacturer information

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset GL7 is in compliance with Directive 2014/53/EU and the UK Radio Equipment Regulations 2017.

The full text of the EU and UK declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Waste and environmental protection

Correct disposal of this product

(Directive for electric and electronic equipment (WEEE))

(Applicable in countries with waste separation systems)



This label on the product, accessory or in documentation indicates that the product and its electronic accessories (such as charger, headphones and USB cable) may not be disposed of in household waste.

To avert potential environmental harm and health risks from unmanaged waste disposal, recycle responsibly with the aim of encouraging sustainable reuse of raw materials.

Private users should turn to the dealers from where they bought their products, or contact the authorities responsible, who are able to provide information on where parts can be taken for disposal in an environmentally friendly manner.

Commercial users should please contact their suppliers and check the general terms of their purchase agreement.

This product and the electronic accessory parts may not be disposed of with other commercial waste.

This "WEEE" is compatible with the RoHS Directive.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

Correct disposal of batteries in this product

(Applicable in countries with waste separation systems)



This label on the battery, in the manual or on the packaging denotes that the batteries in this product may not be disposed of in household waste.

Not disposing of batteries properly means the substances inside pose a health risk and a risk to the environment.

To protect natural resources and encourage environmentally responsible reuse of material resources, please separate batteries from other waste streams and dispose of them at your local, free collection point for used batteries.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

About radiation

Information on SAR certification (specific absorption rate)

THIS DEVICE SATISFIES THE INTERNATIONAL DIRECTIVES FOR EXPOSURE BY RADIO WAVES.

Your mobile device has been developed so as not to exceed internationally recommended exposure thresholds for radio waves.

These directives have been specified by an independent scientific organisation (ICNIRP) and include a high margin of safety which should guarantee the safety of all regardless of age and state of health. The directives on exposure to radio waves use a unit called the specific absorption rate (SAR). The highest SAR values in the ICNIRP Directives for this device model:

- The SAR threshold for mobile devices is 2.0 W/kg (head/body).
- The SAR threshold for mobile devices is 4.0 W/kg (limbs).

Highest SAR value for this phone model and measurement conditions

SAR on head (while on phone) 0.16 W/kg (10g)

SAR on body (worn in trouser pocket for example) 1.89 W/kg (10g)

SAR on limbs (worn on arm for example) 2.90 W/kg (10g)

The SAR values for wearing on the body are determined at a distance of 5 mm. To comply with the HF exposure directives for wearing on the body, the device should be positioned at least this distance away from the body.

Technical specifications

Frequency	Band selection	Max. power
2G	900 MHz	31.78 dBm
	1800 MHz	29.41 dBm
3G	900 MHz	22.61 dBm
	2100 MHz	21.66 dBm
4G	800 MHz	23.41 dBm
	1800 MHz	21.14 dBm
	2100 MHz	21.94 dBm
	2600 MHz	21.36 dBm
WLAN 2.4GHz		15.01 dBm
BT	2400 MHz	4.38 dBm

Operating time

Call duration	Approx. 9 hours
Standby	Approx. 300 hours

Accessories

Only use chargers, batteries and cables approved by Gigaset. Accessories that are not approved can damage the device.

Power adapter / charging cradle



Manufacturer	Shenzhen Xin Chenming Technology Co.,LTD. Commercial register 91440300678568812C 2nd Floor, 16 Building, Second Industrial, Tianliao Community, Gongming, Guang- ming, Shenzhen, Guangdong, China
Model ID	C39280-Z4-C791
Input voltage/current	100–240 V / 0.5 A
Input alternating current frequency	50/60 Hz
Output voltage/current	5.0 V / 1.0 A
Output power	5 W
Average efficiency during use	> 68.95 %
Power consumption at zero load	< 0.10 W

Battery

Technology	Li-Ion (replaceable)
Capacity	1400 mAh
Part number	V30145-K1310-X479

Menu overview

Open the main menu:

- Flip open the mobile phone ►  Press the Control key in the middle ►  Select the submenu required



The order of submenus can be changed, depending on the menu display selected(→ p. 21). The order shown here can therefore be different to that on your phone.

Settings	Network & Connectivity	Aeroplane Mode	→ p. 53
		Mobile network & Data	→ p. 53
		Wi-Fi	→ p. 54
		Bluetooth	→ p. 55
		Geolocation	→ p. 56
		SIM Manager	→ p. 56
		Calling	→ p. 56
		Internet Sharing	→ p. 58
	Personalisation	Tones	→ p. 59
		Display	→ p. 60
		Search	→ p. 61
		Notices	→ p. 61
		Date & Time	→ p. 62
		Language	→ p. 62
		Input methods	→ p. 62
		Answer Mode	→ p. 63
	SOS	SOS settings	→ p. 63
		SOS numbers	→ p. 63
	Privacy & Security	Screen Lock	→ p. 64
		App Permissions	→ p. 64
		Do Not Track	→ p. 64
		Browsing Privacy	→ p. 65
		About KaiOS	→ p. 65
	Storage	Clean Up Storage	→ p. 66
		USB Storage	→ p. 66
		Default Media Location	→ p. 66
		Media	→ p. 66
		Application Data	→ p. 66
		System	→ p. 65

Settings	Device	Device Information	→ p. 66
		Downloads	→ p. 67
		Battery	→ p. 68
		Accessibility	→ p. 68
	Account	KaiOS Account	→ p. 69
		Anti-Theft	→ p. 69
Contacts	Edit Contact	→ p. 30
	Call	→ p. 30
	Send message	→ p. 30
	Delete Contacts	→ p. 33
	Move contacts	→ p. 33
	Copy contacts	→ p. 33
	SOS	→ p. 32
	Share	→ p. 31
	Search	→ p. 29
Call Log	Settings	→ p. 27
	→ p. 27
Extras	Calculator	→ p. 41
	ToDo	→ p. 41
	Recorder	→ p. 42
	Unit Converter	→ p. 42
News	→ p. 35
Weather	→ p. 36
Messages	Delete thread	→ p. 37
	Select thread	→ p. 37
	Search	→ p. 37
	Settings	→ p. 37
Clock	Alarm	→ p. 43
	Timer	→ p. 43
	Stopwatch	→ p. 43
Calendar	→ p. 45
Camera	→ p. 38
Video	→ p. 40
Gallery	→ p. 38
File Manager	→ p. 50
Music	→ p. 45
Browser	→ p. 35
Google	→ p. 19
Email	→ p. 47

Note	→ p. 48
FM Radio	→ p. 49
YouTube	→ p. 19
Facebook	→ p. 19
WhatsApp	→ p. 19
Shopping	→ p. 35

Index

A		
Adjusting the volume		
using the volume keys	15	
Adjusting volume		
from the menu	59	
Advisory tone		
setting	59	
sharing	60	
Airplane mode		
enable/disable from quick access ..	20	
enabling/disabling	53	
Alarm	43	
set snooze time	43	
Alarm clock		
icon	19	
switching on/off	43	
Anti-theft protection	69	
App		
alarm	43	
browser	35	
calculator	41	
calendar	45	
camera	38	
downloading from shop	35	
email	47	
File manager	50	
gallery	38	
message	48	
messages	37	
music	45	
news	35	
recorder	42	
Stopwatch	44	
timer	44	
ToDo	41	
unit converter	42	
VHF radio	49	
video	40	
weather	36	
App authorisations	64	
Appointment		
delete	46	
finding	46	
set up	45	
Audio playback in mono audio	68	
Authorisation	75	
B		
Background image	60	
Background light	68	
Battery		
charge level	19, 68	
charging	12	
Disposal	76	
insert	12	
Black list	31	
editing	31	
Bluetooth	55	
enable/disable from quick access ..	20	
Brightness, display	60	
Browser	35	
C		
Calculator	41	
Calendar	45	
Internet accounts	46	
more than one	46	
synchronising	47	
Call		
accept by folding open	63	
accepting	25	
answering with an SMS	25	
ending	25	
information	27	
rejecting	25	
Call list	27	
clearing	28	
opening	27	
Call number restrictions	58	

Call volume	26	Delete browser history.....	65
Caller		Device information.....	67
transferring to black list.....	28	Display.....	4
transferring to directory	28	enabling	17
Calling numbers		idle	17
entering a number.....	24	set the background image	60
from a call list.....	24	set the brightness	60
from Contacts	24, 30	Display brightness	
with the quick dial key	24	set from quick access.....	20
Camera	5, 38	Display functions.....	4, 18
flash.....	5	Display keys	4, 18
Camera settings.....	38	Disposal	75
Can be used by those with			
impairments.....	68	E	
Charge level		Earpiece volume	26
icon	19	Email.....	47
showing	68	sending	47
Confirm age limit	65	writing	30
Connection quality		Email account	47
wireless	19	Enable the hotspot.....	58
WLAN	19	Enable/disable camera tone.....	60
Contact		Enable/disable dialling tone.....	60
blocking	31	Enable/disable keypad lock	60
creating.....	30	Enable/disable keypad vibration	68
deleting.....	33	Enable/disable the silent alert.....	59
editing	30	Enable/disable the USB port.....	66
sharing.....	31	Enable/disable TTY.....	69
Contact group	33	End call key.....	4
Contacts.....	29	Entering text	23
entries	29	Environment	75
opening.....	29	Exclusion of liability	74
Control key.....	4	Exporting	
functions.....	16	Contacts.....	33
shown in the operating guide	16		
Create sound recordings	42	F	
Customer Care	72	File manager	50
Customer care	71	managing files	51
Customer service	71	managing folders.....	51
Customer Service & Assistance.....	72	For directory, see Contacts	
		For SMS, see Messages	
D		Free up application data.....	66
Data protection in the Internet	65	Free up storage.....	66
Data roaming	54	Front.....	4

Front display	5	create	69
		registering a phone.....	69
G		L	
Gallery.....	38	Legal information	67
Getting started.....	11	Licenses.....	67
Guarantee Certificate.....	73	Listen to a voice message.....	34
		Listen to the radio.....	49
H		Lock/unlock the keypad	15
Handsfree mode	26		
Handsfree volume	26	M	
Hash key.....	4	Mailbox	34
Headset connector	5	checking	34
Help	71	Main menu	21
		Manage downloads.....	67
I		Media browser	66
Icon		Media, storage requirement.....	66
alarm clock	19	Menu	
battery charge level.....	19	change view	21
message	19	opening	21
missed call.....	19	overview	79
mute	19	Messages	37
wireless connection.....	19	configuring the display.....	61
WLAN	19	icon.....	19
Icons		permit/prohibit for apps	61
Status bar	19	show on lock screen.....	61
User guide.....	6	showing.....	20
Idle	17	Messages (notes).....	48
Idle display	17	Microphone	4
return to	21	muting	26
Images		Missed call, icon	19
editing	38	Mobile data.....	54
file information.....	39	enable/disable from quick access..	20
grouping.....	39	Mobile phone	
sorting.....	39	reset to defaults	70
Importing		setting up	13
Contacts	33	switching on and off.....	15
Inserting a memory card	11	Music	45
Internet enable	58	Mute	20
		icon.....	19
K			
KaiOS	65	N	
KaiOS account	69	News app.....	35

Notes	48	Select the network type	53
Number		Set a warning tone	59
entering	24	Set the date	62
O		Set the ringtone	59
Open a file	50	Set the time	62
P		Set up Call barring	57
Package contents	11	Set up Call divert	57
Permit emergency numbers	58	Set up the alarm function	63
Permit/prevent Call waiting	56	Setup Wizard	13
Permit/prevent tracking	64	Sharing	22
Phone number		Shop	35
incoming call	25	Show the clock on the idle display ...	62
Power save mode		SIM card	
enable automatically	68	changing name	56
enabling/disabling	68	changing PIN	56
Q		insert	11
Quick dial keys	4, 24	unlocking	15
assigning	32	SIM card adapter	11
Quickly accessing functions	20	SIM cards	53
R		SMS reply	25
Radiation	76	Social networks	
Receiver	4	access to	19
Record a video	38	WhatsApp	20
Recorder	42	SOS	63
Ringtone		enabling/disabling	63
loading	59	SOS key	5
sharing	60	dialling an emergency number	25
Ringtone volume		SOS numbers	
adjust from quick access	20	dialling	25
S		managing	63
Safety information	7	Speaker	5
SAR certification	76	Star key	4
Screen lock	64	Status bar	19
change the unblocking code	64	Stopwatch	44
SD card		interval counter	44
use as media storage	66	Storage location for media data	66
Select the network operator	53	Storage utilisation	66
		system	65
		Submenus	21
		moving	21
		Switch on and off	15
		Switch to mute	26
		Symbols in the user guide	6

T	
Take a photo	38
Talk key	4
Task	
define	41
editing	41
Task lists	41
Thread	37
Time format	62
Time server	62
Timer	44
Torch on/off	20
TTY (Tele Type Writer)	69
Turning an alarm on and off	43
U	
Unblocking code	
call barring	57
screen lock	64
Unit converter	42
Updating software	67
Upper/lower case	23
USB-C port	
Use the speaker when making calls ..	
Using the menus	
21	
V	
VHF radio	49
Vibration	20
Video	40
Volume balance	68
Volume keys	4, 15
W	
Weather report	36
WhatsApp key	20
Wireless connection, quality	19
WLAN	
enable/disable from quick access ..	
icon for connection quality	
known networks	
not public	
WPS	
54	

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, 46395 Bocholt, Germany

© Gigaset Communications GmbH 2023

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com