

Gigaset

GL795

The most up-to-date user guide
can be found at
www.gigaset.com/manuals






Contents

Overview	4
Menu overview	6
Safety instructions	12
First steps	16
Package contents	16
Getting started	16
Operating the mobile phone	19
Switching the mobile phone on/off	19
Activating the display	19
Using the Control key	20
Display keys	20
Icons in the status bar	21
Menu guidance	22
Entering text	23
Making/taking calls	24
Making calls using the keypad	24
Taking calls	26
Protection against unwanted calls (blocklist)	27
During a phone call	28
Call divert	30
Call lists	32
Phone book	35
Mailbox	38
Emergency calls (SOS)	39
SOS calls	39
SOS text message (SMS)	40
Activating the SOS alarm	41

SMS (text messages)	42
Writing and sending a text message	42
Storing a text (SMS) temporarily (list of drafts)	45
Sent messages	46
Outbox	47
Template	48
Receiving texts (SMS)	49
Text (SMS) settings	51
Further applications	53
Alarm clock	53
Calendar	55
Bluetooth	60
Camera and gallery	62
File manager	67
Settings	69
Date and time	69
Allow list and block list	70
Language	75
Tones and signals	76
Display	82
SIM cards and network operator	83
Resetting to the factory settings	85
Appendix	86
Customer service	86
Guarantee Certificate	86
Approval	88
Notice on the Disposal of Electrical and Electronic Equipment	89
About radiation	89
Technical data	90
Accessories	91

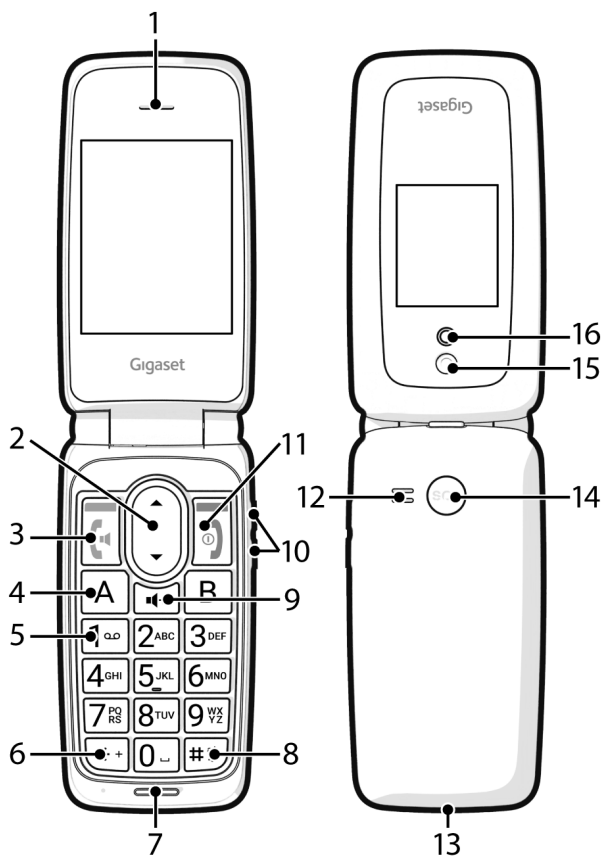Overview



- 1 Receiver
- 2 Control key  Open menu
- 3 Left display key:  Navigate through menus and lists
Select function, depends on the screen display
Take call; dial number; open call list
- 4 Direct dialling keys: Speed dialling numbers
- 5 Key 1: Start network answering machine playback (press **longer**)
- 6 Star key: Enter * or + (for international calls)
- 7 Microphone
- 8 Hash key: Switch between vibration, silent and standard modes (press **longer**)
- 9 Volume boost button: Increase the volume during an active call
- 10 Volume keys: Increase/decrease volume
- 11 Right display key: End the call; cancel the function; return to the menu; switch the device on/off (press **longer**)
- 12 Loudspeaker
- 13 USB connection port: Connect a USB cable
- 14 SOS key: Initiate an emergency call
- 15 Camera
- 16 Torch

Menu overview



Not all functions described in this user guide are available in all countries or with all network providers.

 
Open main menu: ► When the mobile phone is in an idle state, press the **Menu** display key

Contacts

Call logs


Call logs
Missed calls
Dialed calls
Received calls
Rejected calls
Delete all
Call timers

Message



Write message
Inbox
Outbox
Drafts
Sentbox
Templates
Broadcast message
Voice mail server
SMS settings
Message capacity

 SOS



SOS status
Contact list
SOS SMS ON/OFF
Messages
Warning Tone status

Image

Camera

Tools

Calendar		
Alarm		
Bluetooth	Bluetooth	
	Bluetooth visibility	
	Paired device	
	Transferring files	
	Device name	
	Bluetooth file storage	
	Help	
Special	SMS & MMS News	SMS News
		MMS News
	Downloads	
	Chat & Dating	SMS Chat
		MobileDating
	Umgebungssuche	In der Nähe
		Hilfe vor Ort
		Filialfinder
	Kundenservice	KontoInfo
		Konfigurationen
	Extras	Menü-Update
		Info
My files	Phone	
	MemoryCard	
Torch		

Settings

Menu overview

Phone settings	Time & date	Set time
		Set date
		Time format
		Date format
		Date separator
		Update time settings
	Allowlist	Status
		Allowlist settings
	Blocklist	Status
		Blocklist
	Language settings	Display language
		Writing language
	Display	Wallpaper settings
	Idle display settings	
	Contrast	
	Backlight	
	Keypad backlight time	
Audio	Ring settings	
	Adjust volume	
	Ring type	
	Other alert rings	
Auto power on/off		

Call settings	Flip to answer	
	Call divert	
	Call waiting	Activate
		Cancel
		Check status
		All outgoing calls
		All incoming calls
		Incoming calls when roaming
		ISD calling
		Dial when INTL roaming
	Cancel all barring	
	Call barred	
	Hide ID	Call time minute reminder
	Others	Auto redial
		Vibration when connected
		Reply SMS after reject

Layout

Profiles

Battery

Speed dial

Security	PIN	PIN
		PIN ändern
	Modify PIN2	
	Phone locked	
	Change password	
	Privacy	
	Fixed dialing number	Fixed dialing mode
		Fixed dialing number

Connections	Network account
	Data service
	Data roaming
	Network selection
	Network type
	VoLTE

Menu overview

Dial Num Voice

Light settings

Charge light settings

Low battery





Incoming call

Restore factory settings

Notation in the user guide

This chapter describes the various forms of notation used in the user guide and the respective significance.

Icons

	Warnings, which, if not observed, can result in personal injury or damage to equipment.
	Important information regarding the function and proper handling or functions that could generate costs.
	Condition which must be fulfilled in order to carry out the following action.
	Additional helpful information.

Working steps

- 1 First working step.
 - 2 Further working step.
- ▶ Result of the series of working steps.

Display texts




Display texts are texts which appear on the display of the mobile phone. Display texts are displayed in **bold print** in this guide.

Example:

Press the **Menu**.display key.

Control key

Display of the Control key in the User Guide:

-  Press the Navigate Down key
-  Press the Navigate Up key
-  Press the Navigate Up or Down key

Safety instructions

Please read the following information and instructions carefully. Failure to comply with these instructions may result in personal injury and damage to the device, as well as violations of applicable laws.

Please explain the content of this document as well as the potential risks involved when using the device to your children.

General information

- For your own safety, only use original Gigaset accessories or those approved by Gigaset for the mobile phone. The use of accessories which are not compatible could damage the mobile phone and be the cause of hazardous situations. Original accessories can be obtained from Gigaset customer service (refer to Customer Service → p. 86).
- The mobile phone is splashproof according to the IP44 standard. If your mobile phone has been exposed to water, dry it and the device openings (microphone/loudspeaker/USB Type-C port) with a lint-free cloth to remove any water droplets.
- Permissible temperature range for charging and operation: 0–40° C. High temperatures could reduce the service life of electronic devices, damage the battery or deform and melt plastic parts. If the mobile phone is to be used or stored in freezing areas, condensation could develop inside the phone and damage the electronic circuitry.
- The mobile phone must not be used or stored in dusty or dirty locations. Dust can be the cause of malfunction of the mobile phone.
- Switch off your mobile phone in potentially explosive atmospheres and observe all warnings. Potentially explosive atmospheres also include those locations for which it is normally recommended that vehicle engines be switched off. In such places, flying sparks can cause explosions or fires resulting in personal injury and possibly death. These areas include: Petrol stations, chemical plants, transport or storage areas for hazardous chemicals, areas below deck on ships, areas in which the air contains chemical substances or fine particles (e.g. particles of dust or metal powder).
- Short-circuiting or modifying the mobile phone is prohibited – there is a risk of personal injury, electric shock, fire or damage to the charger.

Battery and charging process

- To avoid battery fluid leakage, overheating, explosion or fire, never incinerate or heat batteries and never dispose of them in a fire or explosion-prone environment. Do not disassemble, weld or modify the battery. Do not store the battery in an environment subject to strong mechanical influences.
- Do not use sharp objects, such as screwdrivers, to touch or puncture the battery. There is a risk of battery fluid leaking, the battery overheating, exploding or catching fire and burning. Crushing, heating or incinerating batteries is strictly prohibited.
- Eye contact with the battery electrolyte can cause blindness. If electrolyte enters the eyes, do not rub the eye with your hand. Immediately flush the affected eye completely with clean water and seek medical attention. There is a risk of skin burns if the electrolyte comes into contact with the skin (or clothing). Immediately rinse the skin or clothing completely with soap and clean water and seek medical attention if necessary.
- Never use the batteries for any purpose other than that specified. Never use a damaged battery. If the battery becomes hot, discoloured, deformed or leaks during use, charging or storage, you must replace the battery with a new one immediately for safety reasons.
- The temperature of the battery rises during charging. Do not store the battery in the same compartment as flammable products – there is a risk of fire.
- Do not charge the battery longer than 12 hours.
- Only charge the device indoors. During the charging process, do not hold any telephone conversations and do not dial any phone numbers.
- The electrical socket must be easily accessible during charging.
- There is a risk of electric shock during a thunderstorm.
- Do not use the charger if the power cable is damaged or there is no battery in the mobile phone – there is a risk of electric shock or a risk of fire in such cases.

Headphones



High volumes can damage hearing.

Listening to music or conversations through headphones at high volumes can be uncomfortable and cause permanent hearing damage.

To prevent a loss of hearing, avoid listening at high volume levels for long periods of time.

- If you use the headphones while walking or running, please ensure that the headphone cable does not wrap around your body or other objects.
- Only use headphones in a dry environment. The static electricity which charges in the headphones could discharge on your ears causing an electric shock. Touching the headphone with your hand or contact with bare metal prior to connection to the mobile phone could cause static electricity to discharge.

Safety instructions

Use in hospitals / Medical devices

- The function of medical devices could be impaired if used in the vicinity of your product. Observe the technical conditions in your environment , e.g. in medical practices.
- If you use a medical product (e.g. heart pacemaker), consult with the product manufacturer prior to use. They can provide information on the sensitivity of the device with regard to external, high-frequency power sources.
- Pacemakers, implanted cardioverter defibrillators:
When switching on the mobile phone, please pay attention that the distance between the mobile phone and implant is at least 152 mm. To reduce potential interference, use the mobile phone on the opposite side to the implant. In the event of possible interference, please switch the mobile phone off immediately. Do not carry the mobile phone in a shirt pocket.
- Hearing aids, cochlea implants:
Some digital, wireless devices can cause interference in hearing aids and cochlea implants. If interference occurs, please contact the manufacturer of such products.
- Other medical devices:
If you and the people in your environment use other medical devices, please contact the relevant manufacturer as to whether such devices are protected from radio frequency signals in the environment. You can also contact your doctor with regard to this.

Emergency calls

- Ensure that the mobile phone is linked to the GSM network and switched on. If necessary, enter the emergency number and carry out your call.
- Inform the member of staff in the emergency call centre with regard to your location.
- Only end the call when the member of staff in the emergency call centre has permitted you to do so.

Children and pets

- Keep the mobile phone, batteries, chargers and accessories out of reach of children and pets. Children and/or pets may swallow small parts and suffer choking and other hazards. Children may only use the mobile phone when supervised by an adult.

Aircraft, vehicles and road safety

- Switch the mobile phone off in an aircraft.
Please observe the applicable restrictions and regulations.
Wireless devices can interfere with the functionality aeronautical equipment. It is essential to follow instructions from aircraft personnel regarding using the mobile phone on an aircraft.
- As the driver of a vehicle, the main priority is: Safety in road traffic and for road users
Using the mobile phone while driving could distract your attention leading to dangerous situations. In addition, it contravenes current, applicable laws.

SIM cards, memory cards and data connection cables

- Do not remove the cards from the mobile phone while sending or receiving data: Doing so increases the risk of loss of data and damage to the mobile phone or memory cards.

Defective devices

- Installation or repair of the product may only be performed by qualified service personnel.
- Dispose of defective devices or have them repaired by our customer service department; such devices could interfere with other wireless services.
- If the mobile phone is treated roughly, e.g. allowed to fall, the display could break and the electronic circuitry and sensitive interior parts could be damaged.
- Do not use the device if the display is cracked or broken. Glass or plastic splinters can injure the hands and face.
- If the mobile phone, battery or accessories malfunction, please contact your Gigaset Service Centre regarding an inspection.

Further important information

- Never point the flash light directly in the eyes of people or animals. If a flash light is aimed at the human eye when too near, there is a risk of temporary loss of sight or impairment of vision.
- If the device becomes hot, please put it to one side for a while and cancel any programmes which are being executed at the time. If you come into contact with a device which is hot, there is a risk of slight skin irritation, e.g. redness of the skin.
- Do not paint or varnish the mobile phone. Varnish/Paint could damage parts of the mobile phone and cause operational breakdowns.

First steps

This chapter describes the contents of the package and how to start operating the mobile phone for the first time.

Package contents


- Mobile phone Gigaset GL795 including battery
- Charger
- Charger with USB-C connection

Check the package contents are complete prior to starting up the mobile phone. In case of doubt, contact our customer service.


Getting started

Inserting the SIM and memory cards

You can insert a nano-SIM card and a memory card in the mobile phone.

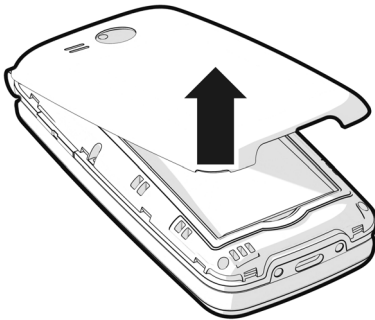


- 1 Insert your fingernail or a suitable aid into the recess in the left-hand corner of the rear side.
- 2 Prise the battery compartment cover upwards to open it.

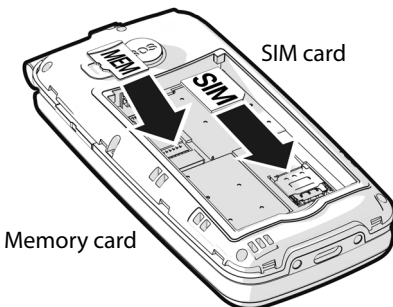


- 3 Insert the SIM card in the left-hand slot. Pay attention that the SIM card is inserted properly aligned.
 - 4 You can also insert a memory card, as an option, in the right-hand slot.
- ▶ You have inserted a SIM card and memory card in the mobile phone.

Inserting the battery and closing the cover

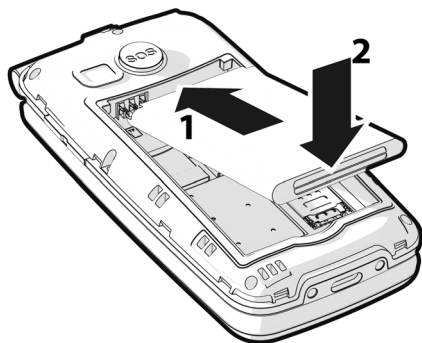

- 1 Insert the battery as illustrated. Pay attention that the battery is inserted properly aligned.

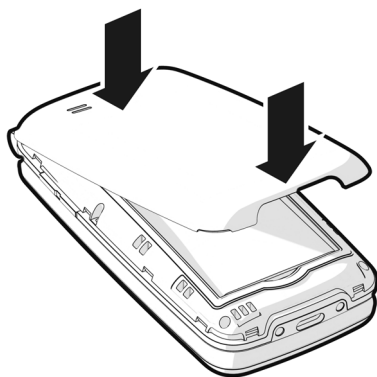


- 2 Replace the battery compartment cover as illustrated.
 - 3 Press the cover down carefully to close it. The battery compartment locks in place with an audible click.
- ▶ You have inserted the battery in the mobile phone.

Charging the battery




- 1 Insert the USB plug on the charging cable in the charger
- 2 Place the mobile phone in the charger.

or

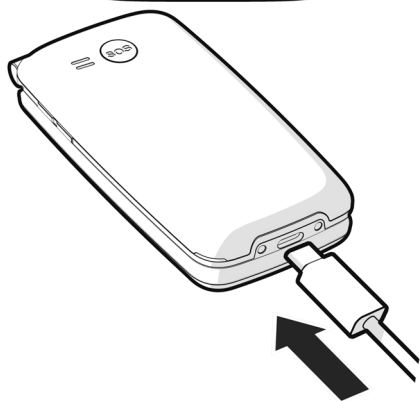

- 1 Insert the USB plug on the charging cable in the USB port on the bottom of the mobile phone.
 - 2 Connect the free USB plug on the charging cable to a suitable plug-in power supply unit (not contained in the package supplied).
 - 3 Connect the plug-in power supply unit to a properly installed power socket.
- ▶ You have connected the mobile phone to a power source. The battery is being charged.

 Ensure the battery is charged fully before starting to use the mobile phone for the first time.

The battery is fully charged when the charge icon  in the icon bar is completely filled.




If you have set that the battery should only be charged to 80 %, the charge indicator remains with 4 bars and the battery only charges to 80 %.

Operating the mobile phone

This chapter describes the basic steps for operating the mobile phone.

Switching the mobile phone on/off

Switch the mobile phone on:

- 1 Press the On/Off button **longer**.
- 2 Enter the PIN related to the SIM card inserted using the keypad  on the mobile phone.



The PIN was supplied together with the SIM card by your mobile phone provider. In case of doubt, contact your mobile phone provider.

- 3 Confirm the selection by pressing the **OK** (→ p. 20) key in the display.
 - ▶ You have switched on the mobile phone.

Switch the mobile phone off:

- 1 Press the On/Off button **longer**.
 - ▶ You have switched off the mobile phone.

Activating the display

The lighting in the front display switches off automatically after 5 seconds. Fold open the mobile phone to switch the display on automatically. The lighting in the main display switches off automatically after the set time (→ p. 82) (idle status). This function reduces the battery usage of the mobile phone.

Switch on the front display when it is closed:

- 1 Press one of the volume buttons.
 - ▶ You have switched on the front display of the mobile phone.

Switch on the main display when the phone is folded open:









- 1 Press any key.
 - ▶ You have switched on the main display of the mobile phone.

Using the Control key




The Control key, also referred to as the Navigation key, serves to navigate through menus and input fields. The control key is located between the left display key and right display key.

Functions of the Control key

In idle status:	 Open the menu
	 Open the menu
During a call	 Raise caller volume for the receiver/handsfree function
	 Lower caller volume for the receiver/handsfree function
In the menus:	 Move upwards in the list of menu entries
	 Move downwards in the list of menu entries
During text input:	 Move one text field upwards
	 Move one text field downwards

Display keys

The display keys are used to execute the functions indicated in the display. The display functions are indicated at the bottom left and bottom right of the mobile phone display and are dependent on the menu currently displayed.

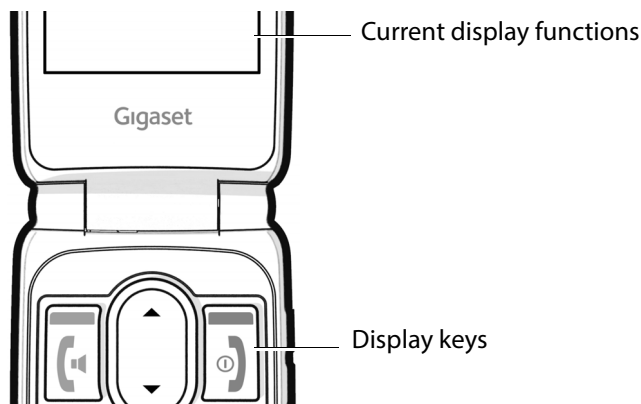

Some examples of the functions of the display keys are illustrated below:

Menu	Contacts	Open main menu/submenu
OK	Back	Confirm menu function / Save entry
Options	Back	To open a submenu:
Options	Delete	Delete character by character to the left

- 1 Press the left-hand or right-hand display key.
- ▶ You have executed the display functions indicated in the display.

Icons in the status bar

The icons in the status bar at the top edge of the display indicate current settings and the operating status of the mobile phone:



Vibration is activated, ringing tone is deactivated



Silent function is activated



Missed call in call list



Alarm clock is activated



Voice message missed



Device connected via USB

Wireless communication for SIM card



The number of bars in the icon indicates the quality of the current connection. The current network speed is displayed next to the symbol.

 
Battery charge status



Empty



Ca. 60 %



Full

The bars in the indicator light up in succession during the charging process.

Menu guidance



The mobile phone menu is comprised of a main menu and several submenus.

To provide a better orientation, the complete menu overview is depicted in this User Guide: → p. 6

Main menu

The functions in the main menu are indicated by an icon and a name.

Navigation in the main menu:

- 1 Press the **Menu** display key or one of the control keys .
 - 2 Use the control keys to select  a submenu (e.g. Settings).
 - ▶ The menu currently selected has a coloured background.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the submenu.
-

Submenus

The functions in the submenus are displayed in list form.

The menu entry currently selected has a coloured background. If the name of the entry does not fit in one line, the text runs through.

If there are further entries, a scroll bar appears which indicates the position of the entry in the submenu.



Access a function:

- 1 Select a submenu (e.g. Settings).
- 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the submenu selected.


Switch to previous menu level:

- 1 Press the End Call key  or the **Back** display key.
 - ▶ The previous menu level appears.

Entering text

 

Press the corresponding key once for each letter (e.g. "Hello" 4 3 5 5 6). The software recognises the word automatically. Use the arrow keys  /  to switch between the word suggestions.


With "New word" you can select letters by pressing the key with the desired letter several times.


Right display button (red) : 1 Correct entry.

Left display button (green) : 1 Apply word.

 key: 1 Apply word + space.

 Press hash key : 1 Select upper/lower case, input mode, number input or language.
2 Confirm with the left display button (green) .

Enter special characters in edit mode (when writing text messages) ▶ Press star key .

 In order to write a text (SMS) there are several options available (→ p. 43).

Making/taking calls


 
This chapter describes the options available with which to telephone using the mobile phone. This includes the various ways to make and take calls.

It also includes the description of functions which can be used during a call.

 

Making calls using the keypad

You can make national and international calls directly using the dialling keys on the mobile phone keypad.

Dial a national phone number:

- 1 Enter the relevant phone number of the contact required, including access code, using the keypad .
 - 2 Press the **Options** display key.
 - 3 Select **Call**.
 - 4 Press the Call key .
- ▶ You have dialled a phone number using the dialling keypad.

Dial an international phone number:

- 1 Press the Star key  twice, until the + sign is inserted.
 - 2 Enter the relevant phone number of the contact required, including access International dialling code (e.g. +43), using the keypad .
- ▶ You have dialled an international phone number.

You can delete digits or cancel dialling a phone number:

- | | |
|-----------------|--|
| Delete digits: | 1 Press the Delete display key. |
| Cancel dialling | 1 Press the Back display key. |

Making calls from the phone book

- 1 Press the **Contacts** key in the display.
 - 2 Select the entry required.
 - 3 Press the **Options** display key.
 - 4 Select **Call**.
- ▶ You have dialled a phone number from the phone book.

Detailed information on the phone book: → p. 35

Making calls from a call list

The call lists contain the last calls taken, rejected and missed.

- 1 Press the **Menu** display key.
- 2 Select **Call logs**.
- 3 Select the required call list (e.g. missed calls).
- 4 Select the entry required.
- 5 Press the **Options** display key.
- 6 Select **Call**.
 - ▶ You have dialled a phone number from the call list.


Detailed information on the call lists: → p. 32

Making calls with the direct dialling keys

You can assign 2 important phone numbers to the direct dialling keys A and B.



Select a direct dialling key:

- 1 Press the required direct dialling key (A or B) **longer**.
 - 2 Confirm the request by pressing the **OK** key in the display.
- or
- 1 Press the **Menu** key in the display.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Speed dial**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required key A or B.
 - 7 Press the **Options** key in the display.
 - 8 Select **Input number**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Input number**.
 - 11 Enter the  call number.
 - 12 Dial the selection by pressing the **OK** key in the display.
- or

Making/taking calls

- 1 Select the required key A or B.
- 2 Select **Options**.
- 3 Select **Contacts**.
- 4 Dial the selection by pressing the **OK** key in the display.
- 5 Select the entry required.
- 6 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have assigned a phone number to a direct dialling key.

Dialling a phone number using a direct dialling key

- 1 Press the required direct dialling key A or B **longer**.
 - ▶ You have dialled the phone number assigned to the direct dialling key.
-

Taking calls

An incoming call is indicated by a ringtone from the mobile phone. The display of the mobile phone shows the phone number of the caller (if transmitted). If the caller is in the phone book, the name assigned appears.


Take a call:

- 1 Press the Call key .


or

- 1 Fold open the mobile phone.
 - ▶ You have taken an incoming call.

Rejecting a call:

- 1 Press the End Call key .

Ending a call in progress:

- 1 Press the End Call key .

or

- 1 Fold the mobile phone closed.
 - ▶ You have ended a phone call which was in progress.

If you do not take an incoming call, it is recorded in the **Missed calls** call list(→ p. 32).

Settings for incoming calls

Activating/Deactivating ringtone and/or vibration: → p. 76

Take call with any key: → p. 76

Protection against unwanted calls (blocklist)

You can enter numbers in a block list.


Calls from these numbers are forwarded directly to the mailbox and not indicated by the mobile phone. You can create entries in the block list manually or apply phone numbers from the phone book.

Adding phone numbers to the blocklist

You can enter up to 50 numbers the blocklist.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Blocklist numbers**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Blocklist numbers**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Press the **Options** key in the display.

Add phone numbers manually:

- 11 Select **New**.
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Enter a name and number using the keypad .
- 14 Dial the selection by pressing the **Save** key in the display.

or add a number from the phone book:

- 11 Select **Import contacts**.
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Select the entry required.
- 14 Press the **Options** key in the display.
- 15 Select **Mark**.
- 16 Press the **Options** key in the display.
- 17 Select **OK**.

- ▶ You have assigned a phone number to the blocklist.



The block list is switched on for each new entry.

During a phone call

The functions described here are available while a phone call is in progress.

Handsfree mode

You can use the loudspeaker of the mobile phone for to make calls (hands-free). This means that you have both hands free during the conversation..

Activate Handsfree mode:

- 1 Press the **Options** key in the display.
- 2 Select **H-Free**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have switched Handsfree mode on.
The caller can be heard via the loudspeaker.


Deactivate Handsfree mode:

- 1 Press the **Options** key in the display.
 - 2 Select **Headset**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have switched Handsfree mode off.
The caller can be heard via the receiver.
-



Adjusting the loudspeaker during a phone call

The volume of the caller can be adjusted to different levels. The setting adjustment applies for the receiver and loudspeaker for Handsfree mode.

Adjust the volume during a phone call:

- 1 Press the Control key  to raise the volume.
- 2 Press the Control key  to lower the volume.

or

- 1 Press the **Options** key in the display.
- 2 Select **Adjust volume**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the Control key  to raise the volume.
- 5 Press the Control key  to lower the volume.



The setting is automatically saved after around 3 seconds.

or

- 1 Press the Volume key.
- ▶ You have set the volume for the phone call.

Muting the microphone

If the microphone is muted, the caller can no longer hear you.

Mute the microphone:

- 1 Press the **Options** key in the display.
- 2 Select **Sound off**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have muted the microphone.
The caller can no longer hear you.

Switch the microphone back on:

- 1 Press the **Options** key in the display.
- 2 Select **Unmute**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have switched the microphone on.
The caller can hear you again.

Call divert

In the case of call divert, calls are forwarded to another phone number or to the mailbox.



Not all network providers support the call divert function.


Setting up call divert

Before the call divert function can be set up, the call divert function must be switched on.

Switch on the call divert function:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call divert**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select one of the following options:
Call forwarding unconditional; Call forwarding on busy; Call forwarding on no reply; Divert if unreachable
- 9 Press the **Select** key in the display.
- 10 Select **Activate**.
- 11 Select the destination (number or mailbox) for the diverted calls.

Divert to a phone number:

- 1 Select **Divert to number**.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Enter the phone number using the keypad .
- 4 Only with **Call forwarding on no reply**:
Select one of the specified response times.
- 5 Confirm the selection by pressing the **OK** key in the display.

or

- 1 Press the **Contacts** key in the display.
- 2 Select the contact required.
- 3 Confirm the selection by pressing the **OK** key in the display.

Divert to a mailbox:



The number of the mailbox is assigned to Key 1 (→ p. 38).

- 1 Select **Divert to voicemail**.
- 2 Select **Divert to number**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set up the call divert to another phone number or the mailbox.

Revoking call divert

Switch off the call divert function:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call divert**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Cancel all diverts**.
- 9 Confirm the selection by pressing the **Select** key in the display.
 - ▶ You have switched the call divert function off.

Call lists

The mobile phone saves different types of calls (missed, accepted and outgoing calls) in call lists.

Opening a call list

- 1 Press the **Menu** key in the display.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened an overview of the call lists.

The overview of the call lists indicates submenus for every type of call:

- **All calls**
- **Missed calls**
- **Dialed calls**
- **Received calls**
- **Rejected calls**

The **All calls** menu contains a summary of the calls of all types of call.

Beside the name of the list is the number of respective entries contained in the list.

- 1 Select the required call list (e.g. missed calls).
- 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the required call list.

Information on a call

- Phone number or name if the contact is contained in the phone book
- Date and time



If there is at least one missed call, the icon appears in the status bar.

Managing the entries in the call lists

- 1 Press the **Menu** key in the display.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the call list required.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the entry required.
- 7 Select **Options**.

Show information regarding the call: ▶ Select **Details**.

Dial a number ▶ Select **Call**.

Write a text message (SMS): ▶ Select **Write message**.

Copy number in phone book: ▶ Select **Add to contacts**.

Copy number in blocklist: ▶ Select **Add to Blocklist**.

Copy number in allowlist ▶ Select **Add to allowlist**.

Delete an entry: ▶ Select **Delete**.

Delete all entries: ▶ Select **Delete all**.

Deleting a call list

- 1 Press the **Menu** key in the display.
 - 2 Select **Call logs**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Delete all**.
 - 5 Select the call list required.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Confirm deleting the prompt by selecting **OK**.
- ▶ You have deleted all call lists.

Call timer

- 1 Press the **Menu** display key.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call timers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The following information is shown:

Last call: ▶ Shows you the call duration of the last call.

Received calls: ▶ Shows you the call duration of the calls received.

Dialed calls: ▶ Shows you the call duration of the dialled calls.

Call history: ▶ Shows you the duration of all calls.

Resetting the call timer

- 1 Press the **Menu** display key.
- 2 Select **Call logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call timers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Reset** key in the display.
- 7 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have reset the call timer.

Phone book

The phone book can contain up to 1000 entries. Entries can be stored in the internal phone memory or on the SIM card.

You can create phone book entries manually, transfer them from a call list or transfer a phone number to the phone book when dialling it.

Opening the phone book

1 Press the **Contacts** key in the display.

or

1 Press the **Menu** key in the display.

2 Select **Contacts**.

3 Confirm the selection by pressing the **OK** key in the display.

The **Contacts** display key is always used in the following description.

Phone book entries

The phone book contains all the phone book entries. They are sorted alphabetically.

An entry contains the following information:

- Name

Information on contacts


An icon indicates where the phone book entry is stored:





On the mobile phone



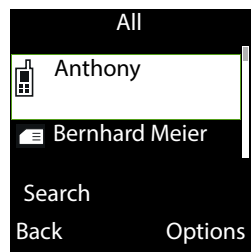

On a SIM card



Creating a phone book entry

- 1 Press the **Menu** key in the display.
 - 2 Select **Contacts**.
 - 3 Select **Add new contact**.
 - 4 Press the **Options** key in the display.
 - 5 Select **New**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select where the new phone book entry should be stored (SIM card or phone memory).
 - 8 Confirm the selection by pressing the **OK** key in the display.
 - 9 Select **Name**.
 - 10 Press the **Options** key in the display.
 - 11 Press the **Edit** key in the display.
 - 12 Enter the name using the keypad .
 - 13 Confirm the selection by pressing the **OK** key in the display.
 - 14 Select **Mobile** or **Home number**.
 - 15 Press the **Options** key in the display.
 - 16 Select **Edit**.
 - 17 Enter the phone number using the keypad .
 - 18 Confirm the selection by pressing the **OK** key in the display.
 - 19 Press the **Options** key in the display.
 - 20 Press the **Save** key in the display.
 - ▶ You have created a phone book entry.
- Further information on entering text: → p. 23
-

Searching for a phone book entry

- 1 Enter a name or number using the keypad 
 - ▶ Entries which correspond to the input are displayed.
- or
- 1 Scroll through the list using the Control key .

Making calls from the phone book

- 1 Press the **Menu** key in the display.
 - 2 Select **Contacts**.
 - 3 Select the entry required.
 - 4 Press the **Options** key in the display.
 - 5 Select **Call**.
- ▶ The contact selected is called.

Editing/Managing phone book entries

- 1 Select **Kontakte**.
- 2 Select the entry required.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Options**.
- 5 Select one of the following options:


- | | |
|-----------------------------|--|
| Call contact: | ▶ Select Call . |
| Display contact: | ▶ Select View . |
| Write a text message (SMS): | ▶ Select Write message . |
| Delete a contact | ▶ Select Delete . |
| Delete multiple contacts: | ▶ Select Delete multiple . |
| Add contact: | ▶ Select New . |
| Copy contact: | ▶ Select Import/Export . |
| | ▶ Select Copy, Import contacts, Import/Export |
| Add to allowlist: | ▶ Select Add to allowlist . |
| Add to blocklist: | ▶ Select Add to Blocklist . |

Mailbox

If your phone provider provides you with a mailbox (answering machine), a caller can leave a message for you if you do not take the call.

In order to play and listen to voice messages in your mailbox, you need the phone number of the mailbox. If necessary, ask your mobile service provider with regard to the call number.

 You can listen to the messages on the mailbox:

- 1 Press and hold the  button.
- ▶ You have listened to the messages on your mailbox.

Emergency calls (SOS)

The mobile phone offers the following SOS functions:

- SOS calls
- SOS SMS (text message)
- SOS alarm



Do not use local, national or international emergency numbers.

SOS calls

The SOS key provides a private emergency call function. By pressing the SOS key, you can call up to 5 numbers and/or send an SMS (text message).

Activating/Deactivating the SOS emergency call function

- 1 Press the **Menu** key in the display.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SOS status**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **On/Off**.
- 7 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have activated the SOS calls function.



When the function is switched off, the SOS key can only be used for the SOS alarm, not for emergency calls.


Entering emergency numbers

Enter the phone numbers to be dialled when the SOS key is pressed.. You can enter up to 5 phone numbers.

- 1 Press the **Menu** key in the display.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Contact list**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select an empty memory location (<empty>).
- 7 Select **Options**.
- 8 Select **Edit**.

Emergency calls (SOS)

9 Confirm the selection by pressing the **OK** key in the display.

10 Enter the phone number using the keypad .

11 Confirm the selection by pressing the **OK** key in the display.

or

1 Complete working steps 1 to 9.

2 Select **Import contacts**.

3 Select the entry required.

4 Confirm the selection by pressing the **OK** key in the display.

▶ You have entered an emergency call number.

SOS text message (SMS)

In addition to the SOS calls, you can also send SOS text messages (SMS).

There is a standard text already provided. You can change this text. When the function is activated, text messages are sent to the emergency call numbers set up.

Activating/Deactivating SMS emergency notifications

1 Press the **Menu** key in the display.


2 Select **SOS**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **Send SOS SMS**.

5 Confirm the selection by pressing the **OK** key in the display.


6 Select **On/Off**.

7 Confirm the selection by pressing **OK** ( = selected).

▶ You have activate the SOS text message (SOS) function.

Changing the content of the SOS text message


You can change the pre-installed, standard SOS text message and enter your own individual text.

- 1 Press the **Menu** key in the display.
 - 2 Select **SOS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Messages**.
 - 5 Confirm the selection by pressing the **OK** key in the display. The standard text appears in the display.
 - 6 Delete the existing text by pressing the **Delete** key in the display
 - 7 Enter the text required using the keypad .
 - 8 Select **Options**.
 - 9 Select **Save**.
- ▶ You have changed the content of the SOS text message.

Information on entering text for SMS text messages: → p. 43

Activating the SOS alarm


When the SOS alarm is activated, the mobile phone issues a loud acoustic alarm signal after the SOS key has been pressed.

- 1 Press the **Menu** button in the display.
 - 2 Select **SOS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Warning Tone status**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **On/Off**.
 - 7 Confirm the selection by pressing **OK** ( = selected).
- ▶ You have activated the SOS alarm function.

SMS (text messages)

You can send and receive text messages (SMS).

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.

The Control key  is used in the following description.



Writing and sending a text message



A text message can contain up to 612 characters. In the case of more than 160 characters, the text (SMS) is sent as a **chained SMS** (up to 4 individual texts).

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.


Enter number

- 1 Enter the phone number of the contact using the keypad .
- 2 Press the Control key .

or

Using Contacts:


- 1 Select **Options**.
- 2 Select **Contacts**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the entry required.
- 5 Select **Options**.
- 6 Select **Mark**.
- 7 Select **Options**.
- 8 Select **OK**.

- 6 Enter the text required using the keypad .
 - 7 Select **Options**.
 - 8 Select **Send**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have sent a text message.

Discarding a text written

If you want to discard a text which you have entered:

- 1 Select **Options**.
 - 2 Select **Exit**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have discarded the text entered.

 

 If a text message cannot be sent, it is filed in the outbox (→ p. 47).

Input methods



Each key between 2 and 9 and the 0 key are assigned several letters and digits. When a key is pressed, the possible characters are shown at the bottom of the display. The selected character is highlighted.

The mobile phone offers you 2 input methods. You can select the letters and numbers manually or the mobile phone offers you a selection of words:

Text input without input help:

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the Hash key .
- 7 Press the control key Down .
- 8 Select **ABC/abc/Abc**.
- 9 Press the relevant key **briefly** several times in succession if necessary, until the required character is displayed.

 Text input with input help:

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the Hash key .
- 7 Press the control key Down .
- 8 Select **EN/en/En**.



SMS (text messages)

9 Press the desired letters.

10 Use the control key  to select the required word.

11 Confirm the selection by pressing the **OK** key in the display.

Move cursor (to left/right):

1 Press the Control key Up  or Down .

Change between lower case and upper case or number entry as necessary:

1 Press the Hash key .

2 Press the control key Down .

3 Select **EN/en/En/ABC/abc/Abc/123**.

4 Confirm the selection by pressing the **OK** key in the display.

Entering special characters:

1 Press the Star key.

2 Select the special character required.

▶ You have selected the special character required.

Changing the input language

The input language defines which characters are available for entering text.

1 Press the **Menu** key in the display.

2 Select **Message**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **Write message**.


5 Confirm the selection by pressing the **OK** key in the display.

6 Press the Hash key .

7 Press the control key Down .

8 Select **Writing language**.


9 Select the input language required.

10 Confirm the selection by pressing **OK** ( = selected).

▶ You have changed the input language.


Storing a text (SMS) temporarily (list of drafts)

You can store texts temporarily, to be changed and sent later.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Enter the text required using the keypad .
- 7 Select **Save as draft**.
- 8 Press the **Options** key in the display.
- 9 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have stored the text as a draft in the list of drafts.

Editing drafts

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Drafts**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 The list of drafts appears in the display.
- 7 Select the draft required.
- 8 Press the **Options** display key.
- 9 Select one of the following options:

Delete draft:	1 Select Delete .
	2 Confirm the selection by pressing the OK key in the display.
Delete all drafts:	1 Select Delete all .
	2 Confirm the selection by pressing the OK key in the display.
Edit SMS:	1 Select Edit .
	2 Confirm the selection by pressing the OK key in the display.
	3 Enter the text required using the keypad  .
Move SMS:	1 Select Move .
	2 Select Phone/SIM .
	3 Confirm the selection by pressing the OK key in the display.

SMS (text messages)


- Mark SMS:
- 1 Select **Mark**.
 - 2 Select **Mark/Mark all/Mark all by numbers/SIM storage SMS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- Sort SMS:
- 1 Select **Sort**.
 - 2 Select **Time/Contacts/Subject/Type**.
 - 3 Confirm the selection by pressing the **OK** key in the display. (● = selected).

Sent messages

Sentbox Lists all the texts you have sent.



The **Save sent messages** function is activated (→ p. 52).

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Sentbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 The list of sent message is displayed.
- 7 Select the required text.
- 8 Select **Options**.
- 9 Select one of the following options:
 - Read SMS: 1 Select **View**.
 - Delete SMS: 1 Select **Delete**.
2 Confirm the selection by pressing the **OK** key in the display.
 - Delete all texts: 1 Select **Delete all**.
2 Confirm the selection by pressing the **OK** key in the display.
 - Send to other contacts: 1 Select **Forward**.
The text is displayed.
2 Enter the phone number of the contact using the keypad 
3 Select **Options**.
4 Select **Send**(→ p. 42).

- Move SMS:
- 1 Select **Move**.
 - 2 Select **Phone/SIM**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- Mark SMS:
- 1 Select **Mark**.
 - 2 Select **Mark/Mark all/Mark all by numbers/SIM storage SMS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- Sort SMS:
- 1 Select **Sort**.
 - 2 Select **Time/Contacts/Subject/Type**.
 - 3 Confirm the selection by pressing the **OK** key in the display. (● = selected).

Outbox

All the texts which could not be sent, e.g. because no connection could be established or the call number was unknown, are stored on the outbox.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Outbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 The list of messages not sent is displayed.
- 7 Select the required text.
- 8 Select **Options**.
- 9 Select one of the following options:

Read SMS: 1 Select **View**.

Send SMS: 1 Select **Resend**.

2 Confirm the selection by pressing the **OK** key in the display.

Delete SMS: 1 Select **Delete**.

2 Confirm the selection by pressing the **OK** key in the display.

Delete all texts: 1 Select **Delete all**.

2 Confirm the selection by pressing the **OK** key in the display.


SMS (text messages)

- Move SMS:
- 1 Select **Move**.
 - 2 Select **Phone/SIM**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- Mark SMS:
- 1 Select **Mark**.
 - 2 Select **Mark/Mark all/Mark all by numbers/SIM storage SMS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- Sort SMS:
- 1 Select **Sort**.
 - 2 Select **Time/Contacts/Subject/Type**.
 - 3 Confirm the selection by pressing the **OK** key in the display. (● = selected).
-

Template

The templates contain a selection of prescribed texts. This template can be edited or sent directly.

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Templates**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 The list of SMS templates appears in the display.
- 7 Select the required SMS template.
- 8 Select **Edit**.
- 9 Select one of the following options:


Edit SMS templates: 1 Enter the text required using the keypad .

Delete SMS templates: 1 Select **Delete**.

Receiving texts (SMS)

Incoming texts are stored in the inbox. The receipt of a new text is indicated by a notification tone (→ p. 78) and a message **unread messages** in the display.


- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The list of sent message is displayed.

If there are unread texts in the inbox, the  icon appears in the icon bar.

Reading texts (SMS)

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select **View**.
- 9 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have read the text received.

Editing texts (SMS)

- 1 Press the **Menu** key in the display.
- 2 Select **Message**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select one of the following options:
 - Read SMS:
 - 1 Select **View**.
 - Reply to SMS:
 - 1 Select **Answer**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Enter the text required using the keypad .
 - 4 Select **Options**.
 - 5 Select **Send**(→ p. 42).
 - Delete SMS:
 - 1 Select **Delete**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - Delete all texts:
 - 1 Select **Alles löschen**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - Call sender:
 - 1 Select **Call**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
The call number is dialled.
 - Move SMS:
 - 1 Select **Move**.
 - 2 Select **Phone/SIM**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - Mark SMS:
 - 1 Select **Mark**.
 - 2 Select **Mark/Mark all/Mark all by numbers/SIM storage SMS**.
 - 3 Confirm the selection by pressing the **OK** key in the display.

- Sort SMS:
- 1 Select **Sort**.
 - 2 Select **Time/Contacts/Subject/Type**.
 - 3 Confirm the selection by pressing the **OK** key in the display. (● = selected).
- Add sender
- 1 Select **Add sender to**.
 - 2 Select **Add to new contact/Add to existed contact**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
The call number is dialled.
- Delete repeated numbers:
- 1 Select **Delete repeated numbers**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
The call number is dialled.
- Add to blocklist:
- 1 Select **Add to Blocklist**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
The call number is dialled.

Text (SMS) settings

Showing memory status

The SMS memory status indicates the actual and possible number of texts on the SIM card and in the internal mobile phone memory.

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Message capacity**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have opened the memory status.

Saving the texts (SMS) sent

You can define whether the texts which you have sent should be stored in the list **Sentbox** (→ p. 46).

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **SMS settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Save sent messages**.
 - 7 Select **OK**.
 - 8 Select **Prompt user, Save, Don't save**.
 - 9 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have defined whether the sent texts should be saved.

Preferred memory location

You can define whether texts should be stored on the mobile phone or on the SIM card.

- 1 Press the **Menu** key in the display.
 - 2 Select **Message**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **SMS settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Preferred storage**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Phone, SIM**.
 - 9 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have defined the memory location where texts should be saved.

Further applications

This chapter describes further functions provided by the mobile phone.


Alarm clock





The date and time are correct.


Setting the alarm clock

You can set 3 alarm times. A wake up alarm (→ p. 55) is issued at the times set:

- 1 Press the **Menu** key in the display.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Alarm**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select a waking time required (00:00).
- 8 Press the **Options** key in the display.
- 9 Select **Edit**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Use the Control key  to move between the input fields:

- | | |
|-----------|--|
| Message: | 1 Enter a name of the clock using the keypad  . |
| Time: | 1 Enter the time, to four-digits, using the keypad  . |
| Ringtone: | 1 Select Ringtone . |
| | 2 Press the Options key in the display. |
| | 3 Select Select . |
| | 4 Confirm the selection by pressing the OK key in the display. |
| | 5 Select Fixed ringtones/More ringtones/FM radio ring . |
| | 6 Confirm the selection by pressing the OK key in the display. |
| | 7 Select the ringtone for the alarm clock. |
| | 8 Confirm the selection by pressing the OK key in the display. |

Further applications

- Repeat:
- 1 Select **Repeat mode**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Select**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Use the control key  to select how often the event is to be repeated (**Once/Daily/Customize**).
- Save:
- 1 Press the **Options** key in the display.
 - 2 Select **OK**.
 - 3 Confirm the selection by pressing the **OK** key in the display.

If an alarm clock is activated, the  icon appears in the icon bar in the mobile phone display.

Switching the alarm clock on and off

Switch a set alarm clock on or off:

- 1 Press the **Menu** key in the display.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Tools**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **Alarm**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select a required alarm clock.
 - 8 Press the **Options** key in the display.
 - 9 Select **On/Off**.
 - 10 Confirm the selection by pressing the **OK** key in the display.
- You have switched the alarm clock on/off.

Waking call

An alarm is shown in the display and indicated by the selected ringtone melody. The wake-up call sounds for 60 second. If no key is pressed, it is repeated after 5 minutes. After the second repetition, the alarm call is deactivated.



During a call, the alarm is only indicated by a short tone.

Deactivating wake-up call/repeating after a pause (snooze mode)

To switch off the alarm:

- 1 Select **Off**.
- 2 You have deactivated the wake up call.

Repeat alarm (snooze mode):

- 1 Select **Snooze**.

or

- 1 Press any key.
 - ▶ You have deferred the wake up call.
It will be repeated after 5 minutes.

Calendar

You can enter appointments (events) in the calendar and then be reminded of them.



The date and time are correct.

To open the calendar:


- 1 Press the **Menu** key in the display.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have opened the calendar.

The current date has a blue background; the currently selected day has a green background. Days with events are marked in red.


Further applications

Navigating in the calendar

Choosing the required date:

1 Navigate up  and down  using the Control keys.

or

- 1 Press the **Options** display key.
 - 2 Select **Go to date**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Enter the date required, to eight digits, using the keypad .
 - 5 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have selected the required date.


Displaying events

An event is indicated at a the specified time by an acoustic signal (when activated) and an indicator in the display.

Switch the acoustic signal off:

- 1 Confirm the selection by pressing the **Cancel** key in the display.
- ▶ You have deactivated the alarm.


Creating a new event

- 1 Press the **Menu** key in the display.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Press the **Options** key in the display.
- 8 Select **Add new schedule**.
- 9 Use the Control key  to move between the input fields:


Naming an event: 1 Select **Subject**.

2 Enter a name for the event using the keypad .

Enter date: 1 Select **Date**.

2 Enter the date required, to eight digits, using the keypad .

Enter time: 1 Select **Time**.

2 Enter the date required, to eight digits, using the keypad .

- Ringtone:
- 1 Select **Ringtone**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Select**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **Fixed ringtones/More ringtones/FM radio ring**.
 - 6 Confirm the selection by pressing **OK** (● = selected).
 - 7 Select the ringtone required.
 - 8 Confirm the selection by pressing the **OK** key in the display.



- Repeat the event:
- 1 Select **Repeat mode**.
 - 2 Press the **Options** key in the display.
 - 3 Select **Select**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select how often the event is to be repeated (**Once/Daily repeat/Weekly repeat/Monthly/Yearly/No reminding**).
 - 6 Confirm the selection by pressing the **OK** key in the display.

- Save:
- 1 Press the **Options** key in the display.
 - 2 Select **OK**.

Further information on entering text: → p. 23

Displaying events

You can display events assigned to a specific day:

- 1 Press the **Menu** key in the display.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Use the Control key to scroll up  or down  to the required day.
- 8 Press the **Options** key in the display.
- 9 Select **View schedules**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Select an event.

Further applications

12 Press the **Options** key in the display.

13 Select **View**.

14 Confirm the selection by pressing the **OK** key in the display.

▶ You have opened the event selected. The details are displayed.

You can display all the events:

1 Press the **Menu** key in the display.

2 Confirm the selection by pressing the **OK** key in the display.

3 Select **Tools**.

4 Confirm the selection by pressing the **OK** key in the display

5 Select **Calendar**.

6 Confirm the selection by pressing the **OK** key in the display.

7 Press the **Options** key in the display.

8 Select **All schedules**.

9 Confirm the selection by pressing the **OK** key in the display.

10 Select an event.

11 Select **Options**.

12 Select **View**.

13 Confirm the selection by pressing the **OK** key in the display.

▶ You have opened all the events. The details are displayed.

Deleting events

You can delete all events of a day or all events in the calendar.

1 Press the **Menu** key in the display.

2 Confirm the selection by pressing the **OK** key in the display.

3 Select **Tools**.

4 Confirm the selection by pressing the **OK** key in the display.

5 Select **Calendar**.

6 Confirm the selection by pressing the **OK** key in the display.

7 Press the **Options** key in the display.

8 Select **Clear today's schedules/All schedules/Clear all**.



9 Confirm the selection by pressing the **OK** key in the display.

10 Confirm the deletion by pressing the **OK** key in the display.

▶ You have deleted the event selected.


Or

You can delete a specific event:

- 1 Press the **Menu** key in the display.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **Calendar**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Use the Control key to scroll up  or down  to the required day.
- 8 Press the **Options** key in the display.
- 9 Select **View schedules**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Select an event.
- 12 Select **Delete**.
- 13 Confirm the selection by pressing the **OK** key in the display.
- 14 Confirm the deletion by pressing the **OK** key in the display.
- 15 You have delete the event selected.

Pairing a Bluetooth device

- 1 Press the **Menu** key in the display.
- 2 Select **Bluetooth**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Bluetooth**.
- 5 Press the **Activate** key in the display.

 Bluetooth is activated on your mobile phone if a tick is placed in the box next to Bluetooth.

- 6 Select **Paired device**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Add new device**.
 - 9 Press the **Add** key in the display.
 - 10 Wait until the search has been completed.
 - 11 Select the required device for pairing.
 - 12 Press the **Pair** key in the display.
- ▶ You have connected your mobile phone to the device.

Camera and gallery

The mobile phone is equipped with a camera (→ p. 4). The **Camera** application provides access to your photos and you can also adjust the camera settings.

Quick access to your photos is possible using the **Image** application.

Taking photos

- 1 Press the **Menu** key in the display.
 - 2 Select **Camera**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Point the camera lens at the image required.
 - 5 Press the key .
- ▶ You have taken a photo of the image in front of the camera.

The mobile phone saves the photo automatically. It is then saved in JPG format in the **Photos** folder in the internal memory of the mobile phone or on the memory card.

If you want to delete the photo:

- 1 Press the **Options** key in the display.
 - 2 Select **Delete**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have deleted the photo.

Viewing photos

You can view and manage photos taken via the camera or gallery.

Showing photos via the camera:

- 1 Press the **Menu** key in the display.
 - 2 Select **Camera**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Press the **Opt.** key in the display.
 - 5 Select **Image viewer**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select the file required.
 - 8 Press the **Options** key in the display.
 - 9 Select **View**.
 - 10 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have displayed a photo via the camera.

Showing photos via the gallery:

- 1 Press the **Menu** key in the display.
 - 2 Select **Image**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select the file required.
 - 5 Press the **Options** key in the display.
 - 6 Select **View**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have displayed a photo via the gallery.

Editing photos

Showing photos via the image viewer:


- 1 Press the **Menu** key in the display.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Opt.** key in the display.
- 5 Select **Image viewer**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select the file required.
- 8 Press the **Options** key in the display.
- 9 Select **View**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Press the **Options** key in the display.

or

- 1 Press the **Menu** key in the display.
- 2 Select **Image**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the file required.
- 5 Press the **Options** key in the display.
- 6 Select **View**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Press the **Options** key in the display.
- 9 Select one of the following options:

- Using as a background picture:
- 1 Select **Set as wallpaper**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The photo is used as a background.

- Use as contact image:
- 1 Select **Set as contact icon**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select the contact required.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The photo is used as a contact image.

- Deleting:
- 1 Select **Delete**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Confirm the deletion by pressing the **OK** key in the display.
- Share image:
- 1 Select **Share**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Bluetooth**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
- Rename image:
- 1 Select **Rename**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Delete existing characters by pressing the **Delete** key in the display.
 - 4 Enter a new name for the folder using the keypad .
 - 5 Confirm the selection by pressing the **OK** key in the display.
- Presentation:
- 1 Select **Slide play**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
- Show information on the photo
- 1 Select **Details**.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - ▶ The file name, resolution, file size and creation date of the photo are displayed.

Camera and photo settings

- 1 Press the **Menu** key in the display.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the **Opt.** key in the display.
- 5 Select **Effect** or **Settings**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select the settings required.
 - ▶ You have adapted the camera settings.

Setting the memory location

Photos are saved in the mobile phone internal memory or on the SD card.

Set the memory location:

- 1 Press the **Menu** key in the display.
 - 2 Select **Camera**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Press the **Opt.** key in the display.
 - 5 Select **Settings**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select **Preferred storage**.
 - 8 Confirm the selection by pressing the **OK** key in the display.
 - 9 Change the required memory location (**Phone / MemoryCard**).
 - 10 Confirm the selection by pressing **OK** (= selected).
- ▶ You have set the memory location.

File manager

Your personal data, e.g. photos, music files, ringtones, call recordings are saved in the internal memory of the phone or on an SD card which you have inserted in the device. The files can be accessed via the file manager:

- 1 Press the **Menu** key in the display.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Tools**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Select **My files**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select **Phone/MemoryCard**.
- 8 Confirm the selection by pressing the **OK** key in the display.
- 9 The files or folders stored in the memory are displayed.
- 10 Select the folder or file you require.
- 11 Press the **Options** key in the display.
- 12 Select one of the following options:
 - **Open**
 - **New folder**
 - **Delete**
 - **Details**
 - **Edit**
 - **Search**
 - **Sort**
 - **Mark**
 - **Memory status**

Formatting the memory

If you want to delete all the personal data on the mobile phone, the simplest method is to format the memory. Individual files, e.g. photos or ringtone files are deleted using the respective application.

**Attention!**

As a result of formatting, all the data stored (e.g. photos) in the memory (phone / memory card) is deleted. This process cannot be reversed.

Further applications

- 1 Press the **Menu** key in the display.
 - 2 Confirm the selection by pressing the **OK** key in the display.
 - 3 Select **Tools**.
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - 5 Select **My files**.
 - 6 Confirm the selection by pressing the **OK** key in the display.
 - 7 Select **Phone/MemoryCard**.
 - 8 Confirm the selection by pressing the **OK** key in the display.
 - 9 Press the **Options** key in the display.
 - 10 Select **Memory status**.
 - 11 Confirm the selection by pressing the **OK** key in the display.
 - 12 Select **Format phone memory/Format MemoryCard**.
 - 13 Confirm the selection by pressing the **OK** key in the display.
 - 14 Confirm the request by pressing the **OK** key in the display.
- ▶ You have formatted the selected memory. All the personal data has been deleted.

Loading data in the mobile phone memory

You can also manage your personal data on a PC.

- 1 Connect the mobile phone to a PC using the USB cable.
 - 2 Select **USB storage**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
- ▶ The internal memory of the mobile phone is displayed as a drive on the PC.

You can manage the folders and files on the mobile phone using the standard functions of your PC operating system.

You can copy audio and video files into the memory of the mobile phone for use as ringtones or a display background as well as music files for an audio player.



As long as the mobile phone remains connected to the PC, the File Manager function is not available.


Settings

This chapter describes the settings which can be set for operating the mobile phone.


Date and time

The date and time can be set manually.

Setting manually

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Time & date**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Use the Control key  to move between the input fields.

Set time: 1 Use the keypad  to enter the time (format: HH:MM).

Set date: 1 Use the keypad  to enter the date (format: YYYY.MM.DD)

Time format: 1 Press the **Edit** key in the display.
 2 Select **12 hours/24 hours**.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Date format: 1 Press the **Edit** key in the display.
 2 Select **Year Mon Day/Mon Day Year/Day Mon Year**.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Datumstrennzeichen: 1 Press the **Edit** key in the display.
 2 Select the required separator character.
 3 Confirm the selection by pressing the **OK** key in the display (● = selected).

Settings

- Update time settings**
- 1 Press the **Edit** key in the display.
 - 2 Select **Auto update time**.
 - 3 Confirm the selection by pressing the **Select/Cancel** key in the display.
 - 4 Press the **Back** key in the display.
- or
- 1 Select **Manual update time**.
 - 2 Confirm the selection by pressing the **Edit** key in the display.

- 9 Confirm the selection by pressing the **Done** key in the display.

Allow list and block list

You can assign phone numbers to a allow list or block list. When the allow list is activated, calls from phone numbers not in the list are automatically rejected.

When the block list is activated, calls from phone numbers which are on the list are automatically rejected.


Allow list

The allow list used to enter number which are allowed to reach you.

Switch the allow list on/off:

- 1 Press the **Menu** key in the display.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Allowlist**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Status**.
 - 9 Select **On/Off**.
 - 10 Confirm the selection by pressing the **OK** key in the display (● = selected).
- You have switched the allow list on/off.



Add phone numbers to the allow list:

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Allowlist**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Allowlist numbers**.
- 9 Press the **OK** key in the display.
- 10 Press the **Options** key in the display.
- 11 Use the Control key  to move between the input fields.

Add contact:

- 1 Select **New**.
- 2 Confirm the selection by pressing the **OK** key in the display

Edit contact::

- 1 Select **Edit**.
- 2 Select **Name**.
- 3 Enter the name using the keypad .
- 4 Select **Number**.
- 5 Enter the number using the keypad .
- 6 Press the **Options** key in the display.
- 7 Select **Save**.
- 8 Confirm the selection by pressing the **OK** key in the display.

Delete a contact

- 1 Select **Delete**.
- 2 Confirm the selection by pressing the **OK** key in the display.

Import contacts:

- 1 Select **Import contacts**.
- 2 Select the required entry.
- 3 Press the **Edit** key in the display.
- 4 Select **Mark**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Options** key in the display.
- 7 Select **OK**.
- 8 Confirm the selection by pressing the **OK** key in the display.

Settings

Select from call list:

- 1 Select **Select call log**.
- 2 Confirm the selection by pressing the **OK** key in the display
- 3 Select the required entry.
- 4 Press the **Options** key in the display.
- 5 Select **Mark**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Press the **Options** key in the display.
- 8 Select **OK**.
- 9 Confirm the selection by pressing the **OK** key in the display.

Delete everything:

- 1 Select **Delete all**.
- 2 Confirm the selection by pressing the **OK** key in the display.

Block list


The block list is used to prevent calls from unwanted phone numbers.

Switch the block list on:

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Blocklist numbers**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Status**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **On/Off**.
 - 11 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have switched the block list on/off.

Add phone numbers to the block list:



- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.

- 6 Select **Blocklist numbers**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Blocklist numbers**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select the entry required.
- 11 Press the **Options** key in the display.
- 12 Use the Control key  to move between the input fields.

Add contact:

- 1 Select **New**.

Edit contact::

- 1 Select **Edit**.
- 2 Select **Name**.
- 3 Enter the name using the keypad .
- 4 Select **Number**.
- 5 Enter the number using the keypad .
- 6 Press the **Save key in the display**.

Delete a contact

- 1 Select **Delete**.
- 2 Confirm the selection by pressing the **OK** key in the display.

Import contacts:

- 1 Select **Import contacts**.
- 2 Select the required entry.
- 3 Press the **Edit** key in the display.
- 4 Select **Mark**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Press the **Options** key in the display.
- 7 Select **OK**.
- 8 Confirm the selection by pressing the **OK** key in the display.

Settings

Select from call list:

- 1 Select **Select call log**.
- 2 Confirm the selection by pressing the **OK** key in the display
- 3 Select the required entry.
- 4 Press the **Options** key in the display.
- 5 Select **Mark**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Press the **Options** key in the display.
- 8 Select **OK**.
- 9 Confirm the selection by pressing the **OK** key in the display.

Delete everything:

- 1 Select **Delete all**.
- 2 Confirm the selection by pressing the **OK** key in the display.

Language

You can define the languages for the display and for keypad input separately from each other.

Display language

The display language defines the language for displays, menus and messages on the mobile phone.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Language settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Display language**.
 - 9 Press the **Select** key in the display.
 - 10 Select the required language.
 - 11 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have defined the display language.

Writing language

The writing language defines the range of characters available for text input (e.g. When writing a text (SMS)).

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Phone settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **Language settings**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Writing language**.
 - 9 Press the **Select** key in the display.
 - 10 Select the required writing language.
 - 11 Confirm the selection by pressing **OK** (● = selected).
- ▶ You have selected the writing language.

Tones and signals

Selecting the acoustic profile

The mobile phone offers an acoustic profile with which you can adapt the phone's reaction to calls received according to the ambient conditions.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required profile (**Standard, Vibrate, Silent**).
 - 7 Press the **Options** key in the display.
 - 8 Select **Activated**.
- ▶ You have selected the acoustic profile.

Standard The mobile phone rings when a call is received.

Vibrate The mobile phone vibrates. The ringtone is deactivated. An icon appears in the display.

Silent A incoming call is only shown visually on the display. The mobile phone neither rings or vibrates. An icon appears in the display.





Defining the ringing tone

You can select one of the pre-installed ringtones as your ringtone. Individual ringtones (mp3 format) can be loaded in the phone's internal memory or on the memory card in the **Ringtones** (→ p. 67) folder.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required audio profile.
 - 7 Press the **Options** key in the display.
 - 8 Select **Settings**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Ring settings**.
 - 11 Confirm the selection by pressing the **Select** key in the display.
 - 12 Select **Caller ringtone**.
 - 13 Press the **Select** key in the display.
 - 14 Select **Fixed ringtones/More ringtones**.
 - 15 Confirm the selection by pressing the **OK** key in the display.
 - 16 Select the ringtone required.
The ringtone is played as a test.
 - 17 Confirm the selection by pressing the **OK** key in the display. (● = selected).
- ▶ You have changed the ringtone.

Setting the ringtone volume

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Profiles**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select the required audio profile.
 - 7 Press the **Options** key in the display.
 - 8 Select **Settings**.
 - 9 Confirm the selection by pressing the **OK** key in the display.
 - 10 Select **Adjust volume**.
 - 11 Press the **Select** key in the display.
 - 12 Select **Caller ringtone**.
 - 13 Press the **Select** key in the display.
The current ringtone is played as a test.
 - 14 Set the volume louder  or quieter  using the Control key.
 - 15 Confirm the selection by pressing the **Done** key in the display.
- ▶ You have set the volume of the ringtone.

Message tone

The message tone indicates the receipt of a new text message (SMS). You can select a melody as a message tone.

Selecting the message tone

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Profiles**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required audio profile.
- 7 Press the **Options** key in the display.
- 8 Select **Settings**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Ring settings**.
- 11 Confirm the selection by pressing the **Select** key in the display.
- 12 Select **Message ringtone**.
- 13 Press the **Select** key in the display.

14 Select **Fixed ringtones/More ringtones**.

15 Confirm the selection by pressing the **OK** key in the display.

16 Select the ringtone required.

The ringtone is played as a test.

17 Confirm the selection by pressing the **OK** key in the display. (● = selected).

▶ You have changed the ringtone.

Setting the volume of the message tone

1 Press the **Menu** display key.

2 Select **Settings**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **Profiles**.

5 Confirm the selection by pressing the **OK** key in the display.

6 Select the required audio profile.

7 Press the **Options** key in the display.

8 Select **Settings**.

9 Confirm the selection by pressing the **OK** key in the display.



10 Select **Adjust volume**.

11 Press the **Select** key in the display.

12 Select **Message ringtone**.

13 Press the **Select** key in the display.

The current ringtone is played as a test.

14 Set the volume louder  or quieter  using the Control key.

15 Confirm the selection by pressing the **Done** key in the display.

▶ You have set the volume of the ringtone.

Other sounds

The mobile phone offers additional options for tones (e.g. key tones).

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Profiles**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required audio profile.
- 7 Press the **Options** key in the display.
- 8 Select **Settings**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Other alert rings**.
- 11 Press the **Select** key in the display.
- 12 Select one of the following options:

- Key tones:
- 1 Select **Key tone**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Silent/Ring1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the key tone.

- Battery warning:
- 1 Select **Battery low alert**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Activate/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the battery warning.

- Dialling tone:
- 1 Select **Dial tone**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Activate/Off** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the battery warning.

- Fold-open sound:
- 1 Select **Sound on open**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Silent/Ring1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the battery warning.
- Fold-closed sound:
- 1 Select **Sound on close**.
 - 2 Press the **Select** key in the display.
 - 3 Select **Silent/Ring1** (● = selected).
 - 4 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have set the battery warning.



The settings for **Other alert rings** can only be made in the audio profile **Standard**.

LED when receiving a call


When a call is received, the LED flashes. This function can be switched on or off.



- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Light settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Incoming call**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Activate/Off**.
- 9 Confirm the selection by pressing the **OK** key in the display.
 - ▶ You have defined the torch reaction when a call is received.

Display

The mobile phone offers various setting options for the display.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Display**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select one of the following options:


- | | |
|------------------------|--|
| Background image: | <ol style="list-style-type: none">1 Select Wallpaper settings.2 Press the Select key in the display.3 Select Static wallpaper/More pictures.4 Confirm the selection by pressing the OK key in the display.5 Select the required image.6 Press the View key in the display.7 Confirm the selection by pressing the Select key in the display. |
| Start screen settings: | <ol style="list-style-type: none">1 Select Idle display settings.2 Press the Select key in the display.3 Select Time & date/SIM selection.4 Press the Select/Cancel key in the display.5 Confirm the selection by pressing the Back key in the display. |
| Brightness: | <ol style="list-style-type: none">1 Select Contrast.2 Confirm the selection by pressing the Select key in the display.3 Set the brightness to one of 8 levels using the control key .4 Confirm the selection by pressing the OK key in the display. |

- Duration:
- 1 Select **Backlight**.
 - 2 Confirm the selection by pressing the **Select** key in the display.
 - 3 Select the duration (**10 secs - Always on**) or using the control key .
 - 4 Confirm the selection by pressing the **OK** key in the display.
- Illumination time of the keyboard:
- 1 Select **Keypad backlight time**.
 - 2 Press the **Select** key in the display.
 - 3 Select the duration (**Off - 20 secs**) using the control key .
 - 4 Confirm the selection by pressing the **OK** key in the display.

SIM cards and network operator

Activating/Deactivating the SIM card lock

When the mobile phone is switched on, you are requested to enter the SIM card PIN. You can deactivate this SIM card lock.



- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Security**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **PIN**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **PIN**.
 - 9 Press the **Modify PIN** key in the display.
 - 10 Enter the current PIN using the keypad .
 - 11 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have deactivated the SIM card lock.
You can use the mobile phone without entering the PIN.

Changing the SIM card PIN

You can change PIN 1 and PIN 2 of the SIM card.



The PIN lock is active.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Security**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Select **PIN**.
 - 7 Confirm the selection by pressing the **OK** key in the display.
 - 8 Select **Modify PIN**.
 - 9 Press the **Edit** key in the display.
 - 10 Enter the current PIN using the keypad .
 - 11 Confirm the selection by pressing the **OK** key in the display.
 - 12 Enter the new PIN using the keypad .
 - 13 Confirm the selection by pressing the **OK** key in the display.
 - 14 Enter the new PIN again as confirmation.
 - 15 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have changed the PIN of the SIM card.



If the current PIN is entered incorrectly three times in succession, the SIM card is locked. You can unlock the SIM card with the PIN 2. If you enter PIN 2 incorrectly three times in succession, you will no longer have access to the SIM card.

In such a case, please contact your mobile service provider.

Resetting to the factory settings

If you want to hand the mobile phone over to a third party, you can reset it to the factory settings. All the individual settings are reset, the call lists and phone book entries in the phone's internal memory are deleted.

**Attention!**

On resetting the factory settings, all the data stored (e.g. photos) are deleted from the mobile phone. This process cannot be reversed.

- 1 Press the **Menu** display key.
 - 2 Select **Settings**.
 - 3 Confirm the selection by pressing the **OK** key in the display.
 - 4 Select **Restore factory settings**.
 - 5 Confirm the selection by pressing the **OK** key in the display.
 - 6 Confirm the reset by pressing the **OK** key in the display.
- ▶ You have reset the mobile phone to its factory settings.

Appendix

Customer service

If you have any problems with your mobile phone, please contact a Gigaset dealer or the Gigaset Service Center.

You can also purchase original accessories (e.g. batteries, charger) there.

Help is available at www.gigaset.com/service

Guarantee Certificate

Unless otherwise specified, the guarantor (hereinafter referred to as "Gigaset Technologies") grants the consumer (customer) a durability warranty under the following conditions (warranty conditions), without prejudice to the consumer's statutory rights relating to defects. The customer's warranty rights are not limited by this warranty. Warranty rights can be asserted free of charge. This warranty represents an obligation on the part of the guarantor in addition to the statutory warranty rights that can be asserted free of charge for defect claims.

Warranty conditions:

- In the case of new devices (telephones, smartphones) and their components exhibiting defects within 24 months of purchase, Gigaset Technologies shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. This durability warranty applies for 12 months from the date of purchase for parts subject to wear (all moving parts that can be replaced by the customer itself, e.g. spare parts, batteries, keyboards, housing).
- This warranty does not apply in the event a defect to devices is attributable to improper treatment and/or a failure to follow the operating guides.
- This warranty does not cover any services provided by the appointed dealer or by the customer himself (e.g. installation, configuration, software downloads). Manuals and, where applicable, accompanying software on a separate data carrier are also excluded from the warranty.
- Proof of purchase plus date of purchase are required as evidence of a valid warranty. Warranty claims must be asserted within two (2) months of the awareness of a warranty event.
- Replaced devices or their components returned to Gigaset Technologies during the course of an exchange are transferred to the ownership of Gigaset Technologies.
- This warranty applies to new devices acquired within the European Union. These will be exchanged free of charge for a technologically current device or repaired by

Gigaset Technologies. The warrantor is Gigaset Technologies GmbH, Frankenstraße 2, D-46395 Bocholt.

- No further or different claims arising from this manufacturer's warranty will be accepted. Gigaset Technologies accepts no liability for operational interruptions, loss of profit and loss of data, software additionally installed by the customer or other information. The customer is responsible for safeguarding these. The liability disclaimer does not apply if liability is mandatory, for example under the Product Liability Act, in cases of wilful intent, gross negligence, injury to life, limb and health or breach of material contractual obligations. Claims for damages in respect of breach of material contractual obligations are however limited to foreseeable losses typical for the contract, unless liability is as a result of wilful intent, gross negligence, injury to life, limb and health or under the Product Liability Act.
- Successful assertion of a warranty claim does not extend the term of the warranty.
- Unless there is a warranty event, Gigaset Technologies reserves the right to charge the customer for an exchange or repair. Gigaset Technologies will inform the customer of this in advance.
- Any change to the rules governing burden of proof to the detriment of the customer is not connected with the above rules.
- Federal German law applies to this warranty, to the exclusion of the United Nations Convention on Contracts for the International Sale of Goods (CISG). This choice of law does not deprive the consumer of the protection he/she would have been granted under provisions that cannot be derogated from by agreement, according to the law of the country in which he/she has her habitual residence ("favourability principle").

Please contact the warrantor's customer services to redeem and assert this warranty. You can find the relevant telephone number in our Service Portal at www.gigaset.com/service.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Certain content and services which can be accessed using this device are the property of third parties and are protected by copyrights, patents, trademarks and/or other laws for the purpose of safeguarding intellectual property. Such content and services are provided solely for non-commercial, private usage.

You may not use content or services which has/have not been authorised by the owner of particular content or a service provider.

Without limiting the generality of the foregoing, except as expressly specified by the owner of the content or the service provider, the modification, reproduction, dissemination, uploading, publication, transmission, translation, sale, creation of derived works, distribution of content or services shown on this device are not permitted in any form and on any medium.

Approval

This appliance is intended for use within the European Economic Community.

Country-specific features are taken into account.

Gigaset Technologies GmbH hereby declares that the radio equipment type Gigaset GL795 complies with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following web address:

www.gigaset.com/docs.

In some cases, this declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Please therefore check all of these files.

Notice on the Disposal of Electrical and Electronic Equipment

For more information on environmentally friendly products and procedures, please visit www.gigaset.com.

Environmentally Responsible Disposal

(in accordance with the WEEE Directive and the EU Battery Directive)



The crossed-out wheeled bin symbol on the product, accessories (e.g. charger, headset, USB cable), battery, or accompanying documentation indicates that these components must not be disposed of with household waste.



Waste electrical and electronic equipment and batteries must be collected separately and returned to municipal collection points or retailers.

About radiation

Information on SAR (Specific Absorption Rate) certification

THIS DEVICE FULFILS THE INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device has been developed to ensure that it does not exceed the internationally recommended exposure limits for radio waves.

These guidelines were defined by an independent scientific organisation (ICNIRP) and contain a large safety margin to ensure the safety of all persons, regardless of their age and state of health. The guidelines on exposure to radio waves use a unit of measurement, known as the specific absorption rate or SAR. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR values within the ICNIRP guidelines for this device model are:

Highest SAR value for this phone model and coverage conditions:

SAR head	0.28 W/kg (10g)
SAR carried on the body	1.68 W/kg (10g)
SAR for limbs (e.g. when worn on the arm)	3.73 W/kg (10g)

SAR values for carrying on the body were determined at a distance of 5 mm. To comply with the RF exposure guidelines for carrying on the body, the device should be positioned at least this distance away from the body.

Technical data

General technical data

Frequency	Band	Maximum power
GSM/2G	EGSM900: 880-915 MHz(TX), 925-960 MHz(RX)	32.51 dBm
	DCS1800: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	29.67 dBm
UMTS/	WCDMA 2100: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	22.80 dBm
	WCDMA 900: 880-915 MHz(TX), 925-960 MHz(RX)	22.90 dBm
LTE/FSS/4G	B1: 1920-1980 MHz(TX), 2110-2170 MHz(RX)	24.43 dBm
	B3: 1710-1785 MHz(TX), 1805-1880 MHz(RX)	24.11 dBm
	B7: 2500-2570 MHz(TX), 2620-2690 MHz(RX)	23.66 dBm
	B8: 880-915 MHz(TX), 925-960 MHz(RX)	23.33 dBm
	B20: 832-862 MHz(TX), 791-821 MHz(RX)	24.12 dBm
	B28: 703-748 MHz(TX), 758-803 MHz(RX)	24.19 dBm
BT	2402 MHz~2480 MHz	2.81 dBm


Operating times

Calling duration: approx. 9 hours
 In idle status: approx. 300 hours

Accessories


Use only chargers, batteries and cables approved by Gigaset. Unauthorised accessories can cause damage to the device.

Plug-in power supply/charging cradle

Input: 100-240 V 50/60 Hz = 0.3 A
Output: 5 V  1.0 A

Battery

Technology: Li-Ion
Capacity: 1400 mAh
Part number: V30145-K1310-X485

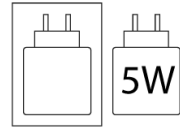

Power adapter

Manufacturer	SHENZHEN Xin Chenming Technology Co., Ltd. Commercial registration number: 91440300678568812C NO 6 Gem Three Street Community Tianliao Industrial Zone Gongming, Guangming New District, Shenzhen, Guangdong, PRC.
Model ID	C39280-Z4-C791 (EU version)
Input voltage	100-240 V
Input alternating current frequency	50/60 Hz
Output voltage	5.0 V
Output current	1.0 A
Output power	5 W
Average efficiency during use	> 73.62 %
Power consumption at zero load	< 0.10 W

Index

-
- A**
- Acoustic profile 76
 - Activate/Deactivate SOS calls
 - 40
 - Activating/Deactivating the SIM card
 - lock 83
 - Activating/Deactivating the
 - SOS alarm 41
 - Alarm clock 53
 - Icon 21
 - Allow list 70
 - Appointment, see Events
-
- B**
- Background picture
 - Using your own photo 60, 64
 - Battery
 - Charge status 21
 - Block list 72
 - Blocklist 27
-
- C**
- Calendar 55
 - Navigation 56
 - Call
 - Information 32
 - International 24
 - Reject 26
 - Taking 26
 - Call divert 30
 - Revoking 31
 - Setting up 30
 - Call list 32
 - delete 33
 - Open 32
 - Call number
 - Assign to direct dialling key 25
 - Dialling 24
 - Incoming call 26
 - Call volume 28
-
- Calls
 - From a call list 25
 - Camera 62
 - Settings 65
 - Taking pictures 62
 - Viewing photos 63
 - Chained
 - SMS 42
 - Changing the PIN 84
 - Charging
 - the battery 18
 - Control key
 - Functions 20
 - Creating
 - events 56
-
- D**
- Date
 - Set manually 69
 - Delete
 - Events 58
 - Direct dialling keys
 - 25
 - Display
 - Idle status 19
 - Display keys 20
 - Display language 75
 - Displaying events 56
-
- E**
- Emergency call 39
 - Emergency numbers 39
 - Enter text 23
 - Entering SOS numbers 39
 - Entering special characters (SMS) 44
 - Entering text
 - SMS 43
 - Exclusion of liability 88

-
- F**
File manager67
-
- G**
Gallery.....63
Getting started.....16
Guarantee Certificate.....86
-
- H**
Handsfree mode28
Handsfree mode volume28
-
- I**
Icon
 Alarm clock.....21
 Battery charge status.....21
 Missed call.....21
 Silent.....21
 USB.....21
 Vibration.....21
 Voice message (SMS).....21
 Wireless communication.....21
Icons
 Status bar21
 User Guide.....11
Image viewer.....64
Inbox (SMS)49
Input language75
 SMS44
Input methods (SMS)43
Inserting a memory card16
Inserting a SIM card.....16
Inserting the
 battery.....17, 18
Internal memory
 Formatting.....67
 Manage through file manager.....67
 Management on a PC.....68
-
- K**
Keypad lock
 Switching on/off.....20
-
- L**
Language
 Input75
 Phone settings.....75
List of drafts (SMS)45
Listen to a voice message.....38
Lower/upper case.....44
-
- M**
Mailbox.....38
 Inquiry38
Main menu22
Making a call
 Using the direct dialling key25
Making calls24
Memory location for photos.....66
Memory status, SMS51
Menu guidance22
Menu overview.....6
Missed call, icon21
Mute the microphone29
-
- O**
Outbox (SMS).....47
-
- P**
Package contents16
Phone book35
 Entries.....35
 opening.....35
Phone book entries35
 Managing.....37
Phone book entry
 Create36
 Delete37, 71, 72, 73, 74

Search.....	36	Icon.....	21
Photo		SIM card	
Delete.....	60, 65	Changing the PIN.....	84
Format.....	62	SMS.....	42
Memory location.....	66	icon.....	21
Taking.....	62	input methods.....	43
Use as background.....	60, 64	Memory location.....	52
Photographing.....	62	Memory status.....	51
Photos		read.....	49
Editing.....	64	Save.....	52
Viewing.....	63	Sending not possible.....	47
Preferred memory location (SMS).....	52	Sent messages.....	46
Profile, acoustic.....	76	Settings.....	51
		Special characters.....	44
R		SMS templates.....	48
Receiver volume.....	28	SOS emergency calls	
Receiving a		Entering text.....	41
text.....	49	SOS key.....	39
Reset.....	85	Status bar.....	21
Factory settings.....	85	Submenus.....	22
Ringtone		Switch microphone on/off.....	29
Deactivate.....	76	Switch off the alarm call.....	55
Melody.....	77	Switch the microphone to mute.....	29
		Switching on/off.....	19
S			
Safety instructions.....	12	T	
SD card		Telephoning	
Formatting.....	67	Enter call number.....	24
Sending a		Text	
text (SMS).....	42	Buffering.....	45
Setting the message tone.....	78	Text messages (SMS).....	42
Settings		Texts	
Allow list.....	70	Drafts.....	45
Block list.....	72	Time	
Silent.....	76	Set manually.....	69

Index

Tones	
Messages	78
Ringing	77

U

Upper/lower case	44
USB connection	
Icon	21
Use the loudspeaker when making a call	28

V

Vibration	
Activate/Deactivate via profile	76
Icon	21

W

Wireless communication, quality	21
Writing a text (SMS)	42

All rights reserved. Rights of modification reserved.

Issued by

Gigaset Technologies GmbH
Frankenstr. 2, D-46395 Bocholt

© Gigaset Technologies GmbH 2025

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com