

PREMIUM 300HX

Information on the phone system:

- Detailed and up-to-date operating guide for your Gigaset phone

www.gigaset.com/manuals

- Documentation relating to your base/router





Gigaset HX – the universal handset

With your Gigaset HX handset, you have purchased a high-quality, multifunctional and future-proof device.

You can use your handset with several different DECT bases.

On a Gigaset base

Connect your HX handset to a Gigaset base and use the many features with the quality you would expect from Gigaset.

If your Gigaset base is IP-compatible, you can also make broadband calls using your HX handset with the highest voice quality (HDSP).

In this guide, all functions that are available for your HX handset are detailed/described. The complete functionality with Gigaset bases is described in the guide relevant to your Gigaset system.

All Gigaset user guides can be found at → www.gigaset.com/manuals

On a DECT/GAP telephone or router from another manufacturer

The handset also functions with DECT/GAP telephones from other manufacturers, of course, as well as DECT routers. Additional information can be found at

→ www.gigaset.com/compatibility.

On DECT routers with CAT-iq 2.0/2.1

Your Gigaset HX handset is certified in accordance with the DECT/CAT-iq 2.0/2.1 standard. As a result, operation with a DECT router with CAT-iq functionality is possible.

Handset functions on a CAT-iq router (amongst others):

- full access to the central directory on the router as well as the local directory integrated in the handset,
- convenient calling and using of call lists,
- using several lines and call numbers (the relevant scope of the function is dependent on the country, network and router),
- enjoy excellent audio quality (certified HD-Voice™ quality).

→ Details can be found in the relevant user guide for your router.

Additional information regarding your HX handset can be found at → www.gigaset.com/hx

Details regarding the functionality of the handset on various bases and routers can be found at

→ www.gigaset.com/compatibility

Contents

Overview	5
Safety precautions	7
Getting started	8
Using the telephone	14
Getting to know your telephone	14
Making calls	18
Call lists	21
Message lists	22
Directories	24
Local handset directory	24
Base directory	28
Assignment of the control key to a directory	28
Answer machine	29
Local answering machine	29
Network mailbox	30
Set fast access for the answer machine	31
Additional functions	32
Sound profiles	32
Calendar	33
Alarm clock	35
Baby monitor	36
Protection against unwanted calls	37
Resource Directory	40
Setting the handset	41
Appendix	49
Service (Customer Care)	49
Manufacturer's advice	51
Technical data	53
Display icons	55
Index	57



Not all functions described in the user guide are available in all countries or from all network providers.

Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:


→ Documentation regarding your base/your router



You can obtain all Gigaset user guides in PDF format:

→ www.gigaset.com/manuals

Overview

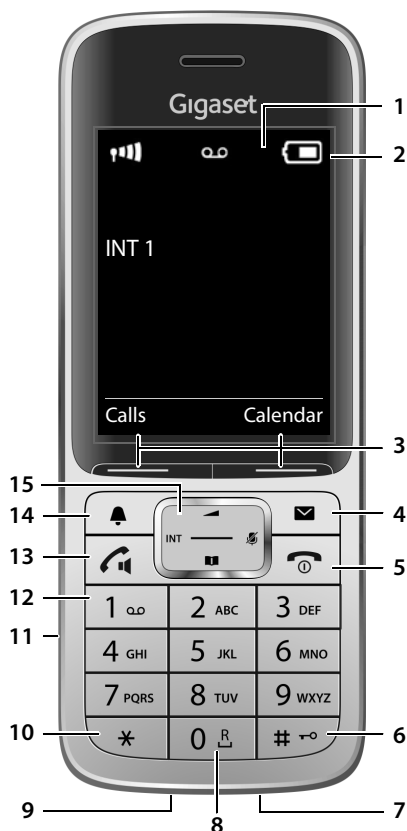

- 1 **Display**
- 2 **Status bar** (→ p. 55)
Icons display current settings and operating status of the telephone
- 3 **Display keys** (→ p. 15)
Various functions, depending on the operating situation

- 4 **Message key** (→ p. 22)
Access to the call and message lists;
Flashes: new message or new call
- 5 **End call key / On/off key**
End call; Cancel function; one level back ▶ **Press briefly**
- 6 **Hash key / Lock key**
Switch the handset on/off ▶ **Press and hold**
Lock/unlock the keypad ▶ **Press and hold**
Toggle between upper/lower case and digits ▶ **Press briefly**
- 7 **Microphone**
- 8 **Recall key**
Consultation call (flash) ▶ **Press and hold**
- 9 **USB connection socket**
For data exchange between the handset and PC
- 10 **Star key**
Open special characters table ▶ **Press briefly**
- 11 **Headset connection** (2.5 mm jack)
- 12 **Key 1**
Select answer machine/network mailbox ▶ **Press and hold**
- 13 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between earpiece mode and handsfree mode; open the redial list ▶ **Press briefly**
Start dialling ▶ **Press and hold**
- 14 **Profile key**
Switch between sound profiles
- 15 **Control key / Menu key** (→ p. 14)
Open a menu; navigate in menus and entry fields; access functions



If multiple functions are listed, the button function depends on the situation.

Subject to technical and visual modifications as part of the product improvement process.

Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

Keys

	or		Talk key		or		Handsfree key
			End call key				Number / letter keys
	/		Control key rim / centre				Message key
			Recall key				Star key
			Hash key				Profile key
OK, Back, Select, Change, Save, ...				Display keys			














Procedures

Example: Switching Auto answer on/off

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** = activated)

Symbols	Meaning
▶	Every arrow initiates an action.
▶	When in idle status press the centre of the control key. The main menu opens.
▶	Navigate to the icon using the control key .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶ Telephony	Select the Telephony entry using the control key .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated /deactivated .

Safety precautions

	Read the safety precautions and the user guide before use.
	The device cannot be used in the event of a power failure. In case of a power failure it is also not possible to make emergency calls . If the LAN or Internet connection is down, functions that require an Internet connection are not available, such as Internet telephony (VoIP), online directories and the Info Center. Emergency numbers cannot be dialled if the keypad/display lock is activated!
	Use only rechargeable batteries that correspond to the specification (see "Technical data"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.
	The handset must not be operated if the battery cover is open. Ensure that the batteries can not be short-circuited by objects in the battery compartment.
	Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Use only the power adapter indicated on the device. Whilst charging, the power socket must be easily accessible.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.
	Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.
	To prevent loss of hearing, avoid listening at high volume over long periods of time.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

Getting started

Contents of the package

- One handset
- One battery cover (rear cover for the handset)
- One battery
- One charging cradle incl. power adapter
- One belt clip
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.


The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the mains unit into your power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

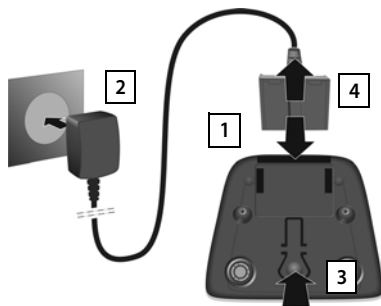


Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**


Inserting the battery



Only use a rechargeable battery, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

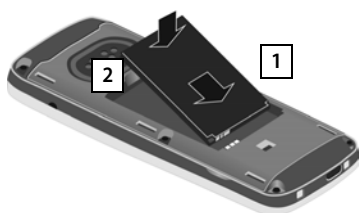


- ▶ Insert battery with the contact side pointing down **1**.
- ▶ Press the battery down until it clicks into place **2**.

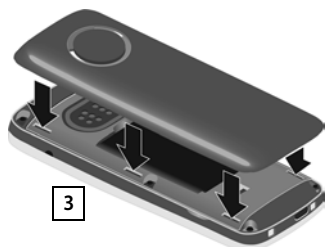


- ▶ Orientate the battery cover with the side tabs fitting into the slots on the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.

Re-opening the battery cover

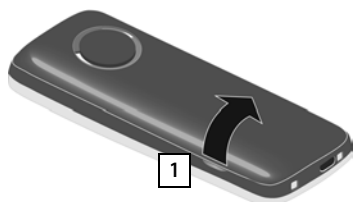


- ▶ Remove the belt clip (if attached).
- ▶ Place your fingernail in the notch underneath the battery cover and pull the battery cover up **1**.

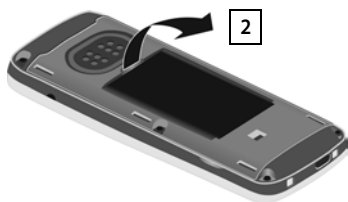


- ▶ To change the battery, place your fingernail in the recess in the housing and pull the battery up **2**.

Charge the battery

 - ▶ Charge the battery fully prior to first use in the charging cradle or using a standard USB mains adapter.



The battery is fully charged when the power icon  disappears from the display.



The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.


Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the battery.

Attaching the belt clip



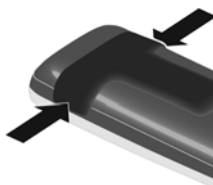

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.



Changing the display language

You can change the display language if the phone is set to a language not required.

- ▶ Press the centre of the control key .
- ▶ Press the keys **9** and **5** **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Français** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .

Example



Registering the handset (depending on the base)



Registration must be initiated on the base station **and** on the handset.
Both must be carried out **within 60 secs.**

On the base / On the router

- Gigaset base: ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).
- Other base station/router: ▶ Information regarding the registration procedure
→ Documentation regarding your base/your router

On the handset

- ▶ ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ... an available base is sought ▶ if required: enter system PIN (default setting on Gigaset bases: 0000) ▶ **OK**

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. INT 1. If not, repeat the procedure.

A handset can be registered to up to four base stations.

- ▶ ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK**
- Change of base: ▶ **Select Base** ▶ **OK** ▶ use to select base or **Best Base** ▶ **Select** (☉ = selected)

Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

De-registering the handset (depending on the base):

- ▶ **De-register Handset** ▶ **OK** ... the handset being used is selected ▶ use to select another handset if required ▶ **OK** ▶ enter system PIN if required ▶ **OK** ▶ Confirm de-registration with **Yes**

If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).

Data protection

If the product is connected to the Internet via an IP base station or router, it will automatically connect to the Gigaset support server sending regular product specific information. This information will for example be used for firmware updates or to provide internet services.

For more information regarding the stored data, please visit → www.gigaset.com

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.



Date and time are set using the base. The date and time can also be set on an IP-compatible base via a time server on the network.

If the base permits it, you can set the date and time manually using the handset.

- ▶ Press the display key **Time**

or, if the date and time have already been set:

- ▶ ▶ **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**

The active input position flashes.

Change input position: ▶

To switch between the entry fields: ▶

Enter date:

- ▶ enter the day, month and year in 8-digit format.

Enter time:

- ▶ enter hours and minutes in 4-digit format.


Save settings:

- ▶ Press the display key **Save**. . . . **Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:

- ▶ Press and **hold** the End call key


The telephone is now ready for use.

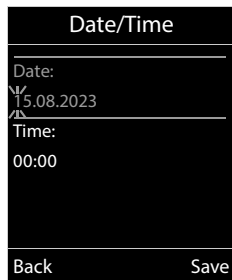

Connecting the headset

- ▶ Connect the headset with 2.5 mm jack to the left side of the handset **1**.

The headset volume corresponds with the setting for the receiver volume.

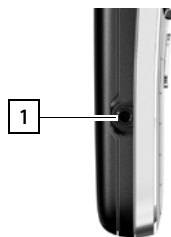


Connecting the USB data cable

For data exchange between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.



Connect the handset **directly** to the PC, **not** via a USB hub.

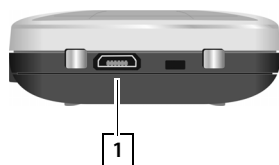


Using the telephone

Getting to know your telephone

 
Switch the handset on/off


Switch on: ▶ When the handset is switched off, press and **hold** the End call key 

Switch off: ▶ When the handset is in idle status, press and **hold** the End call key 

Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the following symbol appears 





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Control key




The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

In idle status



Open the directory

 Press **briefly**

Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

 Press and **hold**

Open the main menu

 or 

Open the list of handsets



In submenus, selection and entry fields

Confirm a function



During a conversation

Open the directory

Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

Mute the microphone

Initiate an internal consultation call

Adjust the loudspeaker volume for receiver and handsfree mode




Press and **hold**



Display keys

The display keys perform a range of functions depending on the operating situation.

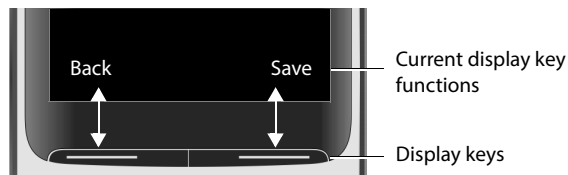

Display key icons → p. 55

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.



The menu guidance depends on the base. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.

Examples: **Audio Settings** may be in the top-level menu or in the **Settings** submenu, while **Calendar** may be in the **Organizer** menu or the **Additional Features** menu.

Selecting/confirming functions

Confirm selection using

OK or press the centre of the control key

One menu level back using

Back

Change to idle status

Press and **hold**



Switch function on/off using

Change on / off

Activate/deactivate option using

Select activated / not activated


Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ use the control key  to select a submenu ▶ OK

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ use the control key  to select a function ▶ OK


Return to the previous menu level:

▶ Press the display key **Back**

or

▶ Press the End call key  **briefly**


Returning to idle status

▶ Press and **hold** the End call key 




If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Example

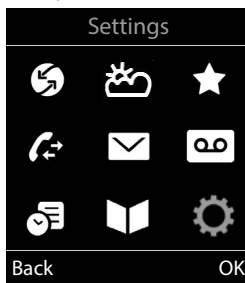

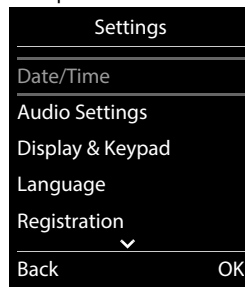

Example





Entering text

 
 

Input position




- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.


- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ use  to navigate to the desired character ▶ **Insert**

New Entry

First Name:
Peter

Surname:

Phone (Home): Abc

 Save



The availability of special characters depends on the language setting.


Making calls

Making a call

▶  enter the number ▶ **briefly** press the Talk key 

 


or

▶ press and **hold** the Talk key  ▶  enter the number

Cancel dialling: ▶ Press the End call key 

On an IP-capable Gigaset base

The connection is selected via the send connection (line) set for the handset. To use another line:

▶ press and **hold** the Talk key  ▶  select the line ▶ **Dial** ▶  enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Dialling a number from the local directory

▶  open the directory ▶  select an entry ▶ press the Talk key 

If multiple numbers are entered:


▶  select a number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from a public/central directory

 

 
Depending on the base to which the handset is connected, you can dial from a public directory or a central directory on a CAT-iq base.

▶ press and **hold** 

Further information → in the detailed user guide for your telephone

Dialling from the redial list



The redial list contains the 20 numbers last dialled with the handset.

▶ **Briefly** press the Talk key  ... the redial list is opened ▶  select an entry ▶ press the Talk key 

If a name is displayed:




▶ **View** ... the number is displayed ▶  browse numbers if necessary ▶ when the desired number is reached press the Talk key 

Managing entries in the redial list

- ▶ Briefly press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ **Options** ... possible options:

Copy an entry to the directory: ▶  **Copy to Directory** ▶ OK


Copy the number to the display:

 
- ▶  **Display number** ▶ OK ▶ Use as required  to change or add ▶  save as a new entry in the directory

Delete the selected entry: ▶  **Delete entry** ▶ OK

Delete all entries: ▶  **Delete List** ▶ OK

Set automatic redial:






- ▶  **Automatic Redial** ... the selected number is automatically dialled at fixed intervals (at least every 20 secs). The handsfree key flashes, "open listening" is activated.

The participant answers: ▶ Press the Talk key  ... the function is terminated

The participant does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.


Dialling from the call list

 The call lists (→ p. 21) contain the most recent accepted, outgoing and missed calls.


- ▶  ▶  **Call Lists** ▶ OK ▶  select a list ▶ OK ▶  select an entry ▶ press the Talk key 



The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .


Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk .

Accepting a call:

- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶ 
- Accept a call on the headset


Switch off ringtone: ▶ **Silence** ... the call can be accepted for as long as it is shown on the display

Reject the call: ▶ Press the End call key 

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine (where the system has a local answer machine):

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ Place the handset in the charging cradle ▶ hold  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset, when the handset has a headset connector):


- ▶ Press  ▶ use  to set the volume ▶ **Save**




The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

or: ▶ **Briefly** press the Profile key 

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



The base/router to which the handset is registered provides information on call numbers.

Detailed information can be found at → www.gigaset.com/compatibility.

List entry

The following information is displayed in the list entries::

- The list type (in the header)
- Icon for the type of entry:



Missed calls






Accepted calls








Outgoing calls (redial list)



Call on the answer machine (only for a system with a local answer machine)

- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls	
  Frank	
Today, 15:40	[3]
 089563795	
13.05.23, 18:32	
  Susan Black	
12.05.23, 13:12	
View	Options

Opening the call list





 
Via the display key: ▶ **Calls** ▶  select list ▶ OK

Via the menu: ▶  ▶  **Call Lists** ▶ OK ▶  select list ▶ OK












Via the Message key (missed calls):

▶ Press the Message key  ▶  **Missed Calls:** ▶ OK

Calling back a caller from the call list


▶  ▶  **Call Lists** ▶ OK ▶  select list ▶ OK ▶  select entry ▶ Press the Talk key 

Additional options

- ▶  ▶  ▶ **Call Lists** ▶ OK ▶  select list ▶ OK ... possible options:
 - View an entry: ▶  select entry ▶ **View**
 - Number into directory:
 - ▶  select entry ▶ **Options** ▶  **Copy to Directory** ▶ OK
 - Number into black list:
 - ▶  select entry ▶ **Options** ▶  **Copy to Blacklist** ▶ OK
 - Delete an entry: ▶  select entry ▶ **Options** ▶  **Delete entry** ▶ OK
 - Delete list: ▶ **Options** ▶  **Delete List** ▶ OK ▶ Yes




Message lists

Notifications about missed calls, messages on the answering machine/network mailbox and missed alarms are saved in the messages list and can be shown on the handset display.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Activation from the handset is only possible on Gigaset bases. Use the web interface as required for CAT-iq routers. Information → user guide of the base/router.

Icons for message types and the number of new messages are shown on the idle display.


Notification for the following message types is available:

-  on the answer machine/network mailbox
-  in the missed calls list
-  in the missed alarms list



The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Example

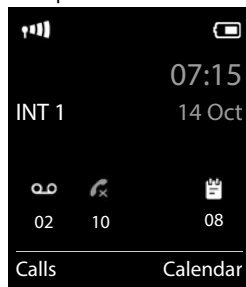


Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed

An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.

An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.

- ▶  Select a list ▶ **OK** ... the calls or messages are listed
Network mailbox: The network mailbox number is dialled.

Example

Messages & Calls	
Missed Alarms:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Answer Mach.:	
Back	OK




The message list contains an entry for every answering machine assigned to the handset, such as a network mailbox.

Activating/deactivating Message key flashing

Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated for each message type.

In idle status:

- ▶  ▶ Press keys      ... the number 9

appears in the display ▶ use  to select the message type:

Messages on the network mailbox

 
▶  

missed calls

▶  

Messages on the answer machine (only for a system with a local answer machine)

▶  

The number 9 followed by the entry (e.g. 975) is displayed, the current setting for the select message type flashes in the entry field (e.g. 0) ▶ use  to set the action for the arrival of new messages:

The Message key flashes

▶ 

 
The Message key does not flash

▶ 

- ▶ Confirm selected setting with **OK**

or

- ▶ return to idle display without making changes: ▶ **Back**

System	
975 SET:	
	
Back	OK

Directories

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets.



Information about online directories on IP-capable bases and central directories on CAT-iq bases → user guide of the base.

Opening the directory

▶ Briefly press in idle status

or

▶ ▶ ▶ ▶ OK ▶ Directory ▶ OK



Changing the assignment of the control key to a directory: → p. 28

Directory entries

Number of entries: up to 500

Information: First name and surname, up to three telephone numbers, e-mail address, anniversary with alert, VIP ringtone with VIP icon, CLIP-picture

Length of the entries: Numbers: max. 32 digits
 First name, surname: max. 16 characters
 E-mail address: max. 64 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ switch between the entry fields and enter data for an entry:.

Names/numbers:

- ▶ enter first names and/or surnames, at least one number (personal, office, or mobile) and an e-mail address, if applicable

Anniversary:

- ▶ activate/deactivate **Anniversary** ▶ enter date and time ▶ select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP):

- ▶ select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Save entry: ▶ Save

Example

New Entry	
First Name:	Robert
Surname:	
Phone (Home):	
	Abc
< C	Save



The entry is only valid if it contains at least one number.

Searching for/selecting a directory entry

- ▶ ▶ browse searched names

or

- ▶ ▶ enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and hold

Displaying/changing an entry

- ▶ ▶ select entry ▶ View ▶ select the field to be changed ▶ Edit

or

- ▶ ▶ select an entry ▶ Options ▶ Edit entry ▶ OK

Deleting entries

Delete the **selected** entry:


- ▶ ▶ select an entry ▶ Options ▶ Delete entry ▶ OK

Delete **all** entries:

- ▶ ▶ Options ▶ Delete all ▶ OK ▶ Yes

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ Options ▶  Sort by Surname / Sort by First Name

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶  ▶ Options ▶  Available Memory ▶ OK

Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or Options ▶  Copy to Directory ▶ OK ... possible options:

Create a new entry:

▶ <New Entry> ▶ OK ▶  select number type ▶ OK ▶ complete entry ▶ Save

Add number to an existing entry:

▶  select an entry ▶ OK ▶  select number type ▶ OK ... the number is entered or a prompt to overwrite an existing number is displayed ▶ if required, answer the prompt with Yes/No ▶ Save

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.
The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.

The recipient handset does not support vCards

A separate entry is created and sent for each number.

The sending handset does not support vCards

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

▶ ▶ select the desired entry ▶ Options ▶ Copy entry ▶ OK ▶ to Internal ▶ OK ▶ select the receiving handset ▶ OK ... the entry is copied

Copy the next entry after successful transfer: ▶ Press Yes or No

Copying the entire directory

▶ ▶ Options ▶ Copy all ▶ OK ▶ to Internal ▶ OK ▶ select the receiving handset ▶ OK ... the entries are copied one after the other


Base directory

(depending on the base)

If the DECT base (on a CAT-iq router for example) provides a separate directory, it can also be displayed and edited on the handset.

- ▶  ▶   **Contacts** ▶ OK ▶  **Base Directory** ▶ OK ... The first entry in the phone directory is displayed






or

- ▶ Press and **hold** the Control button 

For information on the base directory: → Documentation relating to your base/router


Transferring contacts

Transfer contacts from the base directory to the local directory (and in the other direction).



- ▶ Press and  **hold** the Control key ▶  **Base Directory / Handset Directory** ▶ OK ▶  Select an entry as required ▶  **Copy entry / Copy all** ▶ OK ▶  **to Handset Directory / to Base Directory** ▶ OK

Assignment of the control key to a directory

Changing the assignment of the control key to a directory



Briefly press the control key  to open the preferred directory. The default directory is the local one.

The preferred directory is the one

- opened with a **brief** press of the control key 
- into which a number is transferred using  when it is dialled
- in which a search is performed for the right name for a phone number (such as for an incoming call for showing in the display or when transferring a call to a list)

The local directory is the default preferred directory.

Changing the preferred directory:






- ▶  ▶   **Contacts** ▶ OK ▶  **Preferred Directory** ▶ OK ▶  **select Handset Directory or Base Directory** ▶ OK

Answer machine



Local answering machine

Some Gigaset bases make available a local answering machine, that you can use from the handset menu. Below is an introduction to the basic functions. For further information → refer to the user guide for the base.






Activate/deactivate the answer machine

- ▶  ▶  **Answer Machine** ▶ OK ▶  **Activation** ▶ OK ▶  **select Answer Machine** (if more than one answer machine is available) ▶ **Change** ▶  **select On or Off** ▶ **Save**

Playing back messages

- ▶ Press the Message key  ▶  **select an answer machine** (if there are messages for several answer machines) ▶ **OK**

Recording a personal announcement/advisory message

- ▶  ▶  **Answer Machine** ▶ OK ▶  **Announcements** ▶ OK ▶  **select Record Announcement. or Rec. Advisory Msg.** ▶ OK ▶  **select Answer Machine** (if there are several) ▶ OK ▶ OK ▶ record your announcement message (at least 3 seconds) ... possible options:


Complete the recording and save:

- ▶ **End** ... the announcement is played back for you to check

Repeat the recording:

- ▶ **New**





Cancel the recording:

- ▶ Press the End call key  or **Back**

Resume the recording:

- ▶ **OK**

Changing the language for the voice prompt and default announcement (if available)

- ▶  ▶  **Answer Machine** ▶ OK ▶  **Language** ▶ OK ▶  **select your language** ▶ **Select** (⊙ = selected)

Network mailbox

Each network mailbox accepts incoming calls made via the corresponding line. To record all calls, a network mailbox must be set up for all handset connections.



The network mailbox has been **requested** from the network provider.

A network mailbox might need to be set up on the phone system or in the base configuration.



The network mailbox is automatically called via the corresponding connection. An automatic area code specific to the phone is **not** prefixed.

The network mailbox messages can be played back using the phone's keypad (digit codes). For VoIP, you need to use the web configurator to define how the digit codes are to be converted to DTMF signals and transmitted. Ask your VoIP provider which type of DTMF transmission it supports.

Enable network mailbox / Enter number

On the handset, you can manage the network mailboxes that are assigned to one of its receive connections.

- ▶ ▶ ▶ Answer Machine ▶ OK ▶ Network Mailbox ▶ OK ▶ select connection if applicable ▶ OK ... then

For a fixed line network/connection

- ▶ enter or amend the network mailbox number ▶ Save



To activate/deactivate the network mailbox for the fixed line network connection use the phone number and a function code of your network provider. Please contact the network provider if you require any further information.

 
For a VoIP connection

Activate/deactivate network MB:

- ▶ **Status:** select On or Off
- Enter number: ▶ Network Mailbox ▶ enter or amend the network mailbox number

With some VoIP providers, the phone number has already been downloaded together with the general VoIP provider data and saved to the base station.
- Save settings: ▶ Save



Playing back messages

- ▶ Press and hold 




Key 1 has been assigned to the network mailbox.

or

 
- ▶ Press the Message key  ▶  select network mailbox (**Net AM: Fixed Line / Mailbox: IP1**) ▶ **OK**

or


- ▶  ▶   **Answer Machine** ▶ **OK** ▶ **Play Messages** ▶ **OK** ▶  **Network Mailbox** ▶  select network mailbox (**Net AM: Fixed Line / Mailbox: IP1**) ▶ **OK**

Listen to announcement out loud: ▶ Press the handsfree key 


Set fast access for the answer machine

 It is possible to call a network mailbox or the telephone's local answer machine directly by pressing key .




For systems without a local answer machine, the network mailbox is automatically connected with key .

Assigning key 1 / Changing assignment




Settings for the fast access are device-specific. A different answer machine can be assigned to key  on each registered handset.

- ▶  ▶   **Answer Machine** ▶ **OK** ▶  **Set Key 1** ▶ **OK** ▶  select answer machine ▶ **Select** ( = selected)

Return to idle status: ▶ Press and **hold** the End call key 

Network mailbox

If no number has yet been saved for the network mailbox:

- ▶  make a change in the line **Network Mailbox** ▶  enter the number of the network mailbox ▶ **Save** ▶ Press and **hold** the End call key  (idle status)

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The procedure required for your telephone may differ from the procedures described here. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

→ Documentation regarding your base/your router

All Gigaset user guides in PDF format:

→ www.gigaset.com/manuals

Sound profiles

The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**.

▶ switch between the profiles ... the profile is changed straight away without a prompt
The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ▶ after switching to **Profile Silent** press the display key **Beep** ... the icon appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Profile Loud** and **Profile Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2023						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

▶ ▶ ▶ Organizer ▶ OK ▶ Calendar ▶ OK ▶ select desired day ▶ OK ... then

Switch on/off: ▶ **Activation:** select **On** or **Off**

Enter date: ▶ **Date** ... the selected day has been pre-set ▶ enter new date

Enter time: ▶ **Time** ▶ enter hours and minutes of the appointment

Set name: ▶ **Text** ▶ enter a description of the appointment (e.g. evening meal, meeting)

Set alarm tone: ▶ **Signal** ▶ select the melody of the reminder alarm or deactivate the acoustic signal

Enter information for the appointment:

▶ select successively **Date**, **Time**, **Text** and **Signal** ▶ use or to set the relevant value ▶ **Save**

Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ <New Entry> ▶ OK ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **OFF**




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

▶ Press the Message key  ▶  **Missed Alarms:** ▶ OK ▶  browse through the list of any appointments






or

▶  ▶  **Organizer** ▶ OK ▶  **Missed Alarms** ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ **Delete**

Displaying/changing/deleting stored appointments

▶  ▶  **Organizer** ▶ OK ▶  **Calendar** ▶ OK ▶  select day ▶ OK ... the appointment list is displayed ▶  select date ... possible options:

Display appointment details:

▶ **View** ... the appointment settings are displayed

Change appointment:

▶ **View** ▶ **Edit**


or ▶ **Options** ▶  **Edit entry** ▶ OK

Activate/deactivate appointment:

▶ **Options** ▶  **Activate/Deactivate** ▶ OK

Delete appointment: ▶ **Options** ▶  **Delete entry** ▶ OK

Delete all appointments for a day:

▶ **Options** ▶  **Delete all Appoints.** ▶ OK ▶ **Yes**

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** select **On** or **Off**
 - Setting the wake-up time:
 - ▶ **Time** ▶ enter hours and minutes
 - Set days: ▶ **Occurrence** ▶ switch between **Monday-Friday** and **Daily**
 - Set the volume: ▶ **Volume** ▶ set volume in 5 levels s or select **crescendo** (increasing volume)
 - Set alarm: ▶ **Melody** ▶ select a ringtone for the alarm
 - Enter alarm data: ▶ select successively **Time**, **Occurrence**, **Volume** and **Melody** ▶ use or to set the relevant value ▶ **Save**
 - Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The microphone of the handsfree device is always used, even if a headset is connected.

The answer machine for the destination number must be switched off.

After switching on:


- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶ ▶ ▶ **Additional Features** ▶ OK ▶ **Baby Monitor** ▶ OK ... then
- Switch on/off:
 - ▶ **Activation:** select On or Off
- Enter destination:
 - ▶ **Send alarm to** ▶ select External or Internal
 - External:** ▶ **Number** ▶ select number or select a number from the directory: ▶
 - Internal:** ▶ **Handset** ▶ **Change** ▶ select the handset ▶ OK
- Activate/deactivate two-way talk:
 - ▶ **Two Way Talk** ▶ select On or Off
- Set microphone sensitivity:
 - ▶ **Sensitivity** ▶ select High or Low
- Save settings: ▶ **Save**

The destination number is displayed in idle display when the baby monitor is activated.

Baby Monitor activated

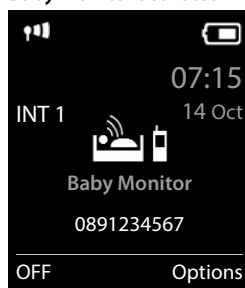

Deactivate baby monitor / Cancel alarm

Deactivate the baby monitor:

- ▶ In idle status press the display key **OFF**

Cancel the alarm:



- ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

- ▶ Accept alarm call ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.



The baby monitor cannot be reactivated remotely.

Reactivate: → p. 36

Protection against unwanted calls

Time control for external calls




Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶  ▶   **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Ringtones (Handset)** ▶ **OK** ▶  **Time Control** ▶ **Change ...** then


Switch on/off: ▶  select **On** or **Off**

Enter time: ▶  switch between **Suspend ring. from** and **Suspend ring. until** ▶

 enter start and end in 4-digit format

Save: ▶ **Save**

Example

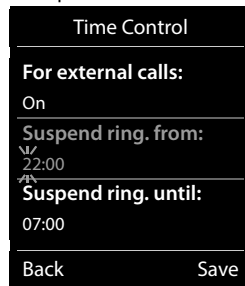

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

For one handset

- ▶ ▶ ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (Handset) ▶ OK ▶ Anon. Calls Silent ▶ Edit (☑ = activated) ... the call is only signalled on the display

For all handsets

(only on some Gigaset bases)

- ▶ ▶ ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Anonymous Calls ▶ Edit (☑ = activated) ▶ Protection Mode:
 - No Protection** Anonymous calls are indicated in the same way as identified numbers.
 - Silent Call** The telephone will not ring and the incoming call will only appear in the display.
 - Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
- Save settings: ▶ Save

Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶ ▶ ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (Handset) ▶ OK ▶ Silent Charging ▶ Change (☑ = ringtone is switched off when in charging cradle)

Black list

(only on some Gigaset bases: → www.gigaset.com/compatibility)

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

The black list is enabled when **Silent Call** or **Block Call** is selected as the protection mode.

Displaying/editing the black list

- ▶ ▶ ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Black List ▶ Edit ▶ Blocked Numbers ▶ OK ... the list of blocked numbers is displayed ... possible options:
 - Create an entry: ▶ New: use to enter a number ▶ Save
 - Delete an entry: ▶ select an entry ▶ Delete ... the entry is deleted

Transferring a number from a call list to the black list

- ▶ ▶ ▶ Call Lists ▶ OK ▶ Accepted calls/Missed calls ▶ OK ▶ select entry ▶ Options ▶ Copy to Blacklist ▶ OK

Setting the protection mode















- ▶  ▶   **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Black List** ▶ **Edit** ▶  **Protection Mode** ▶ **OK** ▶  select desired protection:

- | | |
|----------------------|---|
| No Protection | All calls are indicated, including from callers whose numbers are on the black list. |
| Silent Call | The telephone will not ring and the incoming call will only appear in the display. |
| Block Call | The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone. |
| Save settings: | ▶ Save |

Resource Directory

 Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory.

Managing images (for screensaver and CLIP) and sounds

- ▶  ▶   **Resource Directory** ▶ **OK** ... possible options:
 - View image: ▶  **Screensavers / Caller Pictures** ▶ **OK** ▶  select picture ▶ **View** ... the selected picture is displayed
 - Play sound: ▶  **Sounds** ▶ **OK** ▶  select sound ... the selected sound is played
 - Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶  select volume ▶ **Save**
 - Rename picture/sound:
 - ▶  **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶  select sound/image ▶ **Options** ▶ **Rename** ▶  delete name ▶  enter new name ▶ **Save** ... the entry is saved with the new name
 - Delete picture/sound:
 - ▶  **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶  select sound/picture ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

- ▶  ▶   **Resource Directory** ▶ **OK** ▶  **Capacity** ▶ **OK** ... the percentage of available memory is displayed

Setting the handset

Changing the language

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Language** ▶ OK ▶ select language ▶ Select (= selected)

If the handset has been set to an incomprehensible language:

- ▶ ▶ Press the keys **slowly** one after the other ▶ select the correct language ▶ press the right display key

Display and keypad

Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Screensaver** ▶ **Edit** (= on) ... then
 - Switch on/off: ▶ **Activation:** select **On** or **Off**
 - Select screensaver: ▶ **Selection** ▶ select a screensaver (**Digital Clock / Analog Clock / Info Services / <Pictures> / Slideshow**)
 - View screensaver: ▶ **View**
 - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.

- All pictures from the **Screensaver** folder of the **Resource Directory** are available for selection.

End screensaver

- ▶ Press the End call key **briefly** ... the display changes to idle status

Notes on displaying Info Services

- Info Services** are activated via the web configurator.
 - The telephone is connected to the Internet.

- The type of info service available to your phone is set on the Internet on the Gigaset.net server.
- If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off



The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Info Ticker** ▶ **Edit**
 = on)

The text appears as soon as the telephone changes to idle status. If a message is shown in the display, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Large Font** ▶ **Change**
 = on)

Colour scheme

You can choose from a range of colour combinations for the display.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Colour Schemes** ▶ OK ▶  select the desired colour scheme ▶ **Select**  = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/ charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Display Backlight** ▶ OK ... then

Backlight when in the charging cradle:

- ▶ **In Charger:**  select **On** or **Off**

Backlight when not in the charging cradle:

- ▶  **Out of Charger** ▶  select **On** or **Off**

Save selection:

- ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.

Keypad illumination

The keypad has 5 levels of brightness to choose from.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Key Illumination** ▶ OK ▶ use  to select **Brightness** (1 - 5) ▶ **Save**

Activating/deactivating automatic keypad lock

 
Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Auto Keypadlock** ▶ **Change** = on)

Auto answer


When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** = activated)



Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.


Changing the earpiece and handsfree volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.




-  Changes are only saved permanently in **Profile Personal**.

During a conversation

- ▶  **Handset Volume** ▶  select volume ▶ **Save** ... the setting is saved

-  Without saving, the setting is automatically saved after around 3 seconds.

In idle status

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then

For the earpiece: ▶ **Earpiece:**  set the volume

For the speaker: ▶  **Speaker** ▶  set the volume

Save settings: ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Acoustic Profiles** ▶ **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ select profile ▶
Select = selected)

Earpiece Profiles: High or Low (default setting)


Handsfree Profiles: Profile 1 (default setting) . . . **Profile 4**

Ringtones

Ringtone volume

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ select
For internal calls and alarms or **External Calls** ▶ set
volume in 5 levels or in crescendo mode (increasing volume) ▶
Save

Example

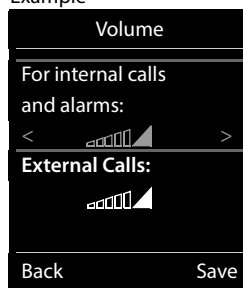

Changes are only saved permanently in **Profile Personal**.



Ringtone melody

Set a variety of ringtones for internal and external calls for every available send/receive connection of the telephone (**Landline**, **IP1**) or set the same ringtone for **All calls**.

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Melodies** ▶ OK ▶ select the connection ▶ select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off


Switching the ringtone off permanently

- ▶ Use the  key to set **Profile Silent** ... the following icon appears in the status bar 

Switching the ringtone on permanently



- ▶ Use the  key to set **Profile Loud** or **Profile Personal**


Switching the ringtone off for the current call

- ▶ **Silence** or press the End call key 

Switching the alert tone (beep) on/off


Switch on an alert tone (beep) instead of the ringtone:

- ▶ Press the Profile key  to select **Profile Silent** ▶ press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ Press the Profile key  to change profile

Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶   **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then

Tone when keys are pressed:

- ▶ **Key Tones:**  select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶  select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶  select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:**  select **On** or **Off**

Save settings:

- ▶ **Save**

 


There is no battery warning when the baby monitor is switched on.

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys **2** to **9**.



- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ select an entry ▶ **OK** ▶ select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:
 Change the assignment: ▶ select an entry ▶ **OK** ▶ select a number if required ▶ **OK**
 Delete the assignment: ▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ select the function ▶ **OK** ... The assignment of the display key is changed

Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**










The availability of functions depends on the base.

Starting a function

With the telephone in idle status: ▶ **Briefly press** ... the assigned function is executed

Changing the name of a connection (line)


(only on a CAT-iq router)

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ... all available connections (lines) are displayed ▶  select connection ▶ OK ▶  **Connection Name** ▶ OK ▶  change the name of the connection ▶ **Save**

Assigning handsets to a connection (line)

(only on a CAT-iq router)

Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶  select connection ▶ OK ▶  **Assigned Handsets** ... all registered handsets are displayed ▶  select handset ▶ **Change** (= handset is assigned)

Permit/prevent multiple calls

(only on a CAT-iq router)

If the function is activated, multiple calls can be made in parallel.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶  select connection ▶ OK ▶  **Multiple Calls** ▶ **Change** (= activated)

Permit/prevent internal listening in


(only on a CAT-iq router)

If the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶  select connection ▶ OK ▶  **Listening In** ▶ OK ▶ **Change** (= activated)

Handset update





The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).

 The base/router to which the handset is registered must also support this function (→ www.gigaset.com/compatibility)







The phone checks whether new firmware is available for the handset. If it is, a message is displayed.


▶ Start the firmware update with **Yes**.

Enable/disable automatic check for new firmware:







▶  ▶   **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Update** ▶ **OK** ▶  **Automatic Check** ▶ **OK** ▶ **Change** (= enabled)

Start the firmware update manually

▶  ▶   **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Update** ▶ **OK** ▶  **Update** ▶ **OK** ▶ **OK** ... if there is new firmware, the update will start






 The update process may take up to 30 minutes. During this time, only restricted handset use is available.


Checking the firmware version

▶  ▶   **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Update** ▶ **OK** ▶  **Current Version** ▶ **OK** ... the firmware version of the handset is displayed

Resetting a handset

Reset any individual settings and changes that you have made.

▶  ▶   **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Reset** ▶ **OK** ▶ **Yes** ... the handset's settings are reset

 The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Appendix

Service (Customer Care)

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service.



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... **online:**

via our contact form on the customer service page

... **by telephone:**

United Kingdom

Service Hotline: 020 36953111

(local call cost charge)

Ireland

Service Hotline: 0818 200 033

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

For questions about VoIP access, please contact the respective service provider.

Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for 12 months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
- The device is opened (this is classed as third party intervention)

- Repairs or other work done by persons not authorised by Gigaset Communications.
- Components on the printed circuit board are manipulated
- The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by:
Gigaset Communications GmbH, Frankenstraße 2, D-46395 Bocholt
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Gigaset Communications GmbH hereby declares that the following radio equipment types are in compliance with Directive 2014/53/EU and the Radio Equipment Regulations 2017:

Gigaset PREMIUM 300HX

The full text of the EU and UK declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	lithium ion (Li-Ion)
Voltage:	3.7 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	200/160 *
Talktime (hours)	12
Operating time with 1.5 hours of calls per day (hours)	110/85 *
Charging time in charging cradle (hours)	2.5

* With **No Radiation** function disabled / with **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 4.50 W
To maintain the charge status:	approx. 0.30 W

General specifications

DECT standard	Supported
CAT-iq standard	Certified in accordance with standard CAT-iq 2.0 with HD Voice www.dect.org/cat-iq-certification.aspx
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity

Power adapter

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China
Model identifier	C733 / C734
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	5 V
Output current	0.4 A
Output power	2 W
Average active efficiency	> 71.6 %
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

Standard characters

Press the relevant key several times.


 




	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	␣ ¹⁾	.	,	?	!	← ²⁾	0			

- 1) Space
- 2) Line break




Display icons









The following icons are displayed depending on the settings and the operating status of your telephone.



Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator Flashes: Answer machine is recording a message or is being operated by another internal participant (only for a system with a local answer machine)
	Profile Silent activated (Ringtone switched off)






Display key icons






Icon	Meaning
	Last number redial
	Delete text
	Open the directory

 Icon	Meaning
	"Beep" ringtone activated
	Keypad lock activated
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%





Icon	Meaning
	Copy number to the directory
	Divert a call to answer machine (only for a system with a local answer machine)




Display icons to indicate . . .

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording (only for a system with a local answer machine)

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Index

-
- A**
- Activating/deactivating message LED 23
 - Advisory tones 45
 - Alarm 35
 - Alarm clock 35
 - switch on/off 35
 - Alert tone (beep) 32, 45
 - Anniversary, see Appointment
 - Answer machine
 - calling back a caller 21
 - playing back messages 31
 - set fast access 31
 - voice prompt language 29
 - Answer, auto 43
 - Appointment
 - display missed 34
 - missed 34
 - notification 34
 - setting 33
 - Assigning key 1 31
 - Assigning number key 46
 - Authorisation 51
 - Auto answer 43
 - Automatic
 - redial 19
-
- B**
- Baby monitor 36
 - activation 36
 - deactivation 37
 - Base directory 28
 - transferring contacts 28
 - Battery
 - charging 10
 - charging status 55
 - inserting 9
 - Beep (alert tone) 32, 45
 - Best base station 11
 - Black list 38
 - copying a number from a call list 38
 - Broken display 7
-
- C**
- Calendar 33
 - Call
 - external 18
 - Call block 39
 - Call list
 - copying a number to the directory 22
 - delete 22
 - delete an entry 22
 - dialling 19
 - entry 21
 - opening 21
 - Call lists 21
 - Call protection 37
 - Call, anonymous
 - protection from 38
 - Calling
 - external 18
 - Cancel the alarm (baby monitor) 37
 - Care 52
 - Care of the device 52
 - Changing
 - display language 41
 - earpiece volume 43
 - handsfree volume 43
 - Character charts 54
 - Charge status of the batteries 55
 - Charging cradle (handset)
 - connecting 8
 - Charging time of handset 53
 - CLIP image
 - view in resource directory 40
 - Colour scheme 42
 - Connecting the USB data cable 13
 - Connection
 - assigning handset 47
 - changing name 47
 - Contact with liquid 52
 - Contents of the package 8
 - Control key 5, 14
 - Correcting incorrect entries 17
 - Customer Care 49

-
- D**
- Data protection 51
 - Dialling
 - from the call list 19
 - from the directory 18
 - from the redial list 18
 - using quick dial 46
 - Directory 24
 - copying numbers 26
 - dialling numbers 18
 - entry 24
 - memory 26
 - opening 24
 - order of entries 26
 - preferred 28
 - saving an entry 25
 - searching 25
 - selecting an entry 25
 - sending entry/list to handset 27
 - sending to handset 27
 - Directory key
 - change assignment 28
 - Display
 - activating/deactivating new message 23
 - backlight 42
 - broken 7
 - changing display language 41
 - colour scheme 42
 - directory memory 26
 - large font 42
 - missed appointment/anniversary 34
 - network mailbox message 22
 - screensaver 41
 - setting 41
 - Display icons 55
 - Display keys 5, 15
 - assigning 46
 - icons 55
 - Disposal 52
-
- E**
- Earpiece profile 44
 - Earpiece volume 20
 - Emergency numbers
 - not possible 7
 - End call key 5, 18
 - Entering numbers 17
 - Entering special characters 17
 - Entering text 17
 - Entering the number
 - of the network mailbox 30
 - Entering umlauts 17
 - Environment 51
 - Exclusion of liability 50
-
- F**
- Fast access 31
 - Firmware update 48
-
- G**
- Getting started 8
 - Guarantee Certificate 49
-
- H**
- Handset
 - assigning connection 47
 - automatic keypad lock 43
 - changing the settings 41
 - colour scheme 42
 - connecting the charging cradle 8
 - display backlight 42
 - display language 41
 - earpiece volume 43
 - handset volume 20
 - handsfree volume 20, 43
 - idle status 16
 - keypad illumination 43
 - muting 20
 - overview 5
 - registering 11
 - resetting 48
 - set up 9
 - switch on/off 14
 - update 48
 - use as a baby monitor 36
 - Handsfree key 20
 - Handsfree mode 20
 - Handsfree profile 44
 - Handsfree volume 20
 - Hash key 5
 - Headset connection 5
 - Headset socket 12
 - Hearing
 - prevent loss of 7
 - Hearing aids 7
 - HX 2
-
- I**
- Icons
 - alarm clock 35
 - displaying new messages 22
 - indications 56
 - on display keys 55
 - status bar 55
 - Idle status
 - returning to 16
 - Illumination, keypad 43
 - Indications, icons 56
 - Internal listening in 47
 - Internet connection
 - outage 7

-
- K**
- Key 1 (fast access) 5
 - Key, assigning 46
 - Keypad illumination 43
 - Keypad lock, automatic 43
 - Keys
 - control key 5, 14
 - display keys 5, 15
 - end call key 5, 18
 - handsfree 20
 - hash key 5
 - menu 14
 - message key 5
 - on/off key 5
 - profile key 5, 32
 - recall key 5
 - star key 5
 - talk key 5
-
- L**
- LAN connection
 - outage 7
 - Language
 - display 41
 - Language, display 10
 - Large font 42
 - Line 47
 - Liquid 52
 - Lock/unlock the keypad 14
 - Loss of hearing 7
 - Lower/upper case 17
-
- M**
- Making calls
 - external 18
 - Manufacturer's advice 51
 - Medical equipment 7
 - Melody
 - ringtone for internal/external calls 44
 - Memory in the directory 26
 - Memory, resource directory 40
 - Menu key 14
 - Message key 5
 - Message lists 22
 - Microphone
 - switch on/off 20
 - Missed anniversaries/appointments 34
 - Multiple calls 47
 - Muting the handset 20
-
- N**
- Network mailbox 30
 - activate/deactivate 30
 - defining for fast access 31
 - entering number 30
 - Network MB, see Network mailbox
 - Number
 - copying to the directory 26
 - saving in the directory 25
-
- O**
- On/Off button 5
 - Operating time of handset 53
 - Outage
 - Internet connection 7
 - LAN connection 7
 - Overview
 - handset 5
-
- P**
- Picture
 - as CLIP image 40
 - as screensaver 40
 - delete 40
 - rename 40
 - Play sound 40
 - Power adapter 7, 54
 - Preferred directory 28
 - Profile key 5, 32
 - Profiles 32
 - Protection from calls
 - anonymous 38
 - black list 38
 - switch off ringtone when in charging
 - cradle 38
 - time control 37
-
- Q**
- Quick dial 18, 31
-
- R**
- Recall key 5
 - Redial list 18, 21
 - Registering (handset) 11
 - Resource Directory 40
 - memory 40
 - Resource directory
 - view CLIP image 40
 - Ringtone 44
 - changing 44
 - melody for internal/external calls 44
 - switch off when in charging cradle 38
 - time control 37
 - volume 44

S	
Safety precautions	7
Screensaver	41
Searching in directory.....	25
Sending	
entire directory to handset	27
Service	49
Setting the date.....	12
Setting the time.....	12
Setting up	
handset	9
Show new messages.....	22
Signal strength	55
Snooze mode (alarm)	35
Sound	
delete.....	40
playback	40
rename	40
Sound profiles	32
Sounds for ringtones	40
Speaker.....	20
Star key.....	5
Status bar	5
icons.....	55
SUOTA.....	48
Symbols, see Icons	55

T	
Talk key	5
Technical data.....	53
Telephone	
operating	14
Time control for external calls	37

U	
Upper/lower case.....	17
USB connection socket	5

V	
Viewing network mailbox message.....	22
VIP group, classify directory entry	25
VIP ringtone	25
Volume	
earpiece	43
handset handsfree volume	43
handset speaker/earpiece volume	20
speaker.....	43

All rights reserved. Rights of modification reserved.

Issued by

Gigaset Communications GmbH
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2023

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com