

# SIEMENS



## Gigaset S680 - S685

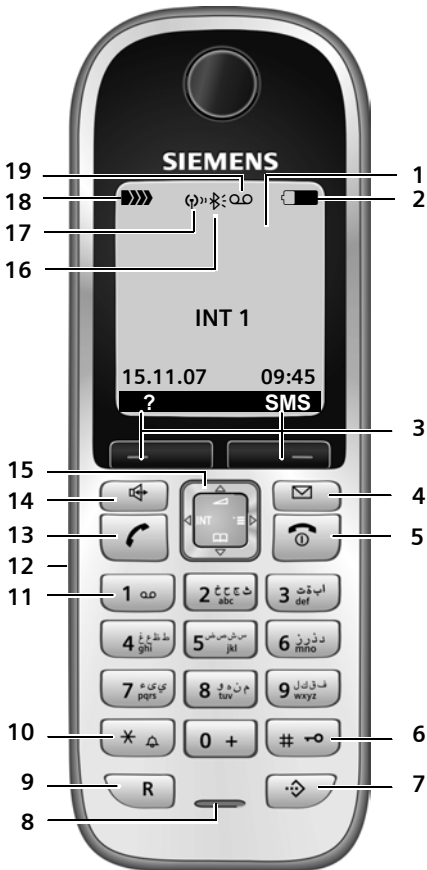
Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.

[www.gigaset.com](http://www.gigaset.com)

# Gigaset

# Handset at a glance



- 1 **Display** (screen) in idle status
- 2 **Charge status of the batteries**  
 [Battery Level Icons] (flat to full)  
 [Flashing Battery Icon] flashes: batteries almost flat  
 [Charging Battery Icon] flashes: batteries charging
- 3 **Display keys** (page 12)
- 4 **Message key**  
 Access to calls and message lists;  
 Flashes: new message or new call
- 5 **End call key, On/Off key**  
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
 Keypad lock on/off (press and hold in idle status),  
 Toggle between upper/lower case and digits (press and hold)
- 7 **Call-by-call list key**  
 Open call-by-call list
- 8 **Microphone**
- 9 **Recall key**  
 - Confer (flash)  
 - Insert a dialling pause (press and hold)
- 10 **Star key**  
 Ringer tones on/off (press and hold);  
 With an open connection: switch between dial pulsing/touch tone dialling (press briefly)  
 Open special characters table
- 11 **Key 1**  
 Dial answer machine (S685 only)/network mailbox (press and hold)
- 12 **Connection socket** for headset
- 13 **Talk key**  
 Answer a call, open last number redial list (press briefly), start dialling (press and hold)  
 When writing an SMS: send SMS
- 14 **Handsfree key**  
 Switch between earpiece and handsfree mode;  
 Lights up: handsfree activated;  
 Flashes: incoming call
- 15 **Control key** (page 11)
- 16 **Bluetooth** activated (page 55)
- 17 **Eco mode** activated (page 13)
- 18 **Signal strength**  
 [Signal Strength Icons] (high to low)  
 [No Reception Icon] flashes: no reception
- 19 **Answer machine icon** (S685 only)  
 Answer machine switched on;  
 Flashes: answer machine is recording a message or is being operated by another internal party

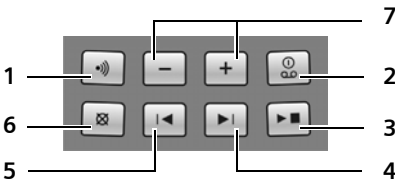
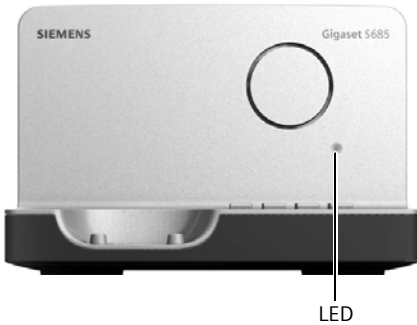
## The base station at a glance

---

You can use the keys on the base station to register handsets to the base station, search for handsets ("Paging", see page 44) and operate the integrated answer machine (Gigaset S685 only).

### Base station Gigaset S685

---



- 1 Registration/paging key  
Press briefly: search for handsets "Paging", see page 44.  
Press and hold: register handsets and DECT devices, see page 43.
- 2 On/Off key: activate/deactivate answer machine.  
LED lights up: answer machine is activated.  
LED flashes: at least one new message is present.

### During message playback:

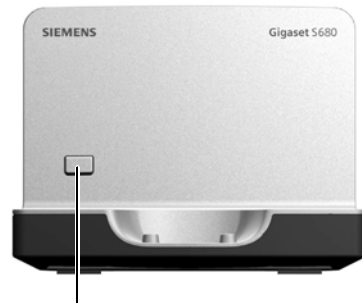
- 3 Play/stop key:  
Play back new messages from the answer machine or cancel the playback (press briefly).  
Play back new and old messages (press and hold).
- 4 Skip to next message (press once) or next message but one (press twice).
- 5 Skip back to beginning of message (press once) or to previous message (press twice).
- 6 Delete current message.
- 7 Adjust volume during message playback:  
[ - ] = quieter; [ + ] = louder.  
While an external call is being signalled: adjust ringer tone volume.

### Please note:

- ◆ If the answer machine is being operated from a handset or if it is recording a message, it cannot be operated from the base station.
- ◆ If the LED flashes although the answer machine is switched off, it means that there is still at least one new message that has not been played back yet.

### Base station Gigaset S680

---



- Registration/paging key:
- Press briefly: search for handsets "Paging", see page 44.
  - Press and hold: register handsets and DECT devices, see page 43.

# Contents

<b>Handset at a glance</b> .....	1	<b>SMS (text messages)</b> .....	28
<b>The base station at a glance</b> ....	2	Writing/sending an SMS .....	28
<b>Safety precautions</b> .....	5	Receiving an SMS .....	30
<b>Gigaset S680/S685 – More than just a telephone</b> .....	7	Notification by SMS .....	32
<b>First steps</b> .....	7	SMS mailboxes .....	32
Pack contents .....	7	Setting SMS centres .....	33
Installing the base station and charging cradle .....	7	SMS on a PABX .....	34
Setting up the handset for use .....	8	Activating/deactivating muting for the first ringer tone .....	34
<b>Operating the handset</b> .....	11	Activating/deactivating the SMS function .....	34
Control key .....	11	SMS troubleshooting .....	35
Display keys .....	12	<b>Operating the answer machine of the Gigaset S685 base station</b> .....	36
Reverting to idle status .....	12	Operation via the handset .....	36
Menu guidance .....	12	Activating/deactivating call screening .....	39
Correcting incorrect entries .....	13	Setting up the answer machine .....	40
<b>ECO DECT</b> .....	13	Resetting fast access for the answer machine using key 1 .....	40
<b>Menu tree</b> .....	14	Operating when on the move (remote control) .....	41
<b>Making calls</b> .....	16	<b>Using the network mailbox</b> ...	42
Making an external call .....	16	Configuring fast access for the network mailbox .....	42
Ending a call .....	16	Viewing the network mailbox report .....	42
Accepting a call .....	16	<b>Using several handsets</b> .....	43
Calling Line Identification .....	17	Registering handsets .....	43
Handsfree talking .....	18	Deregistering handsets .....	44
Muting .....	18	Locating a handset ("paging") .....	44
<b>Making calls easily using network services</b> .....	19	Changing the base station .....	44
<b>Using the directory and lists</b> ...	20	Making internal calls .....	44
Directory/call-by-call list .....	20	Listening in to an external call .....	45
Last number redial list .....	24	Changing the name of a handset .....	46
Opening lists with the message key .....	24	Changing a handset's internal number .....	46
<b>Making cost-effective calls</b> ....	26	Using a handset as a room monitor .....	46
Linking call-by-call numbers with one number .....	26	<b>Handset settings</b> .....	47
Automatic network provider preselection (Preselection) .....	26	Shortcuts for functions and numbers .....	47

## Contents

Changing the display language . . . . .	48	<b>Appendix . . . . .</b>	<b>61</b>
Setting the display . . . . .	48	Care . . . . .	61
Setting the screensaver . . . . .	49	Contact with liquid . . . . .	61
Setting the display backlight . . . . .	49	Questions and answers . . . . .	61
Activating/deactivating		Service (Customer Care) . . . . .	63
auto answer . . . . .	49	Authorisation . . . . .	64
Changing the handsfree/		Specifications . . . . .	64
earpiece volume . . . . .	50	<b>Notes on the user guide . . . . .</b>	<b>65</b>
Changing ringer tones . . . . .	50	Example of a menu input . . . . .	65
My stuff . . . . .	51	Example of multiple line input . . . . .	66
Activating/deactivating		Writing and editing text . . . . .	66
advisory tones . . . . .	52	<b>Additional functions via the</b>	
Setting the alarm clock . . . . .	53	<b>PC interface . . . . .</b>	<b>67</b>
Setting an appointment		<b>Accessories . . . . .</b>	<b>68</b>
(calendar) . . . . .	53	<b>Wall-mounting the</b>	
Displaying missed appointments		<b>base station . . . . .</b>	<b>71</b>
and anniversaries . . . . .	54	<b>Index . . . . .</b>	<b>72</b>
Using Bluetooth devices . . . . .	55		
Setting your own area code . . . . .	57		
Restoring the handset to the			
factory settings . . . . .	57		
<b>Base station settings . . . . .</b>	<b>57</b>		
Protecting against unauthorised			
access . . . . .	57		
Changing ringer tones			
(Gigaset S685 only) . . . . .	58		
Activating/deactivating			
music on hold . . . . .	58		
Repeater support . . . . .	58		
Restoring the base station to			
the factory settings . . . . .	58		
<b>Connecting the base station</b>			
<b>to PABX . . . . .</b>	<b>59</b>		
Dialling modes and recall . . . . .	59		
Saving an access code			
(outside line code) . . . . .	59		
Setting pauses . . . . .	60		
Switching temporarily to touch			
tone dialling (DTMF) . . . . .	60		

# Safety precautions

---

## Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Fit only the **recommended, rechargeable batteries** (page 64), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 61).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

## Safety precautions



All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

**Please note:**

Not all of the functions described in this manual are available in all countries.

## Gigaset S680/S685 – More than just a telephone

---

Your phone, which has a clearly laid out colour display (65K colours) doesn't just offer you the option of sending and receiving SMS messages via the fixed network and of saving up to 250 phone numbers and e-mail addresses (page 20) – it can do much more besides:

- ◆ You can reduce the transmission power by activating the eco mode (page 13).
- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 47).
- ◆ You can easily make calls using network services (page 19).
- ◆ You can designate important people as VIPs so you can tell important calls from the ringer tone (page 21).
- ◆ You can assign pictures to your contacts. You can then tell who is calling you from the picture on your handset's display.  
Precondition: Calling Line Identification (CLIP, page 17).
- ◆ You can save appointments (page 53) and anniversaries (page 23) in your phone and it will remind you of them in advance.
- ◆ You can use Bluetooth™ for wireless communication with other devices that also use this technology (see page 55) Bluetooth™ can be used for
  - headsets (page 10)
  - exchanging directory entries with your mobile phone (page 22)
  - downloading photos (.bmp) to visualise the caller (page 67)
  - exchanging directories with Outlook using Gigaset QuickSync (page 67).

**Enjoy using your new telephone!**

## First steps

---

### Pack contents

---

- ◆ one Gigaset S680/S685 base station with mains adapter,
- ◆ one Gigaset S68H handset,
- ◆ one phone cord,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

### Installing the base station and charging cradle

---

The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

You can find instructions on how to mount the base station on the wall at the end of this user guide.

#### Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.



## Range and reception strength

### Range:

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

The range is reduced when eco mode is activated (see page 13).

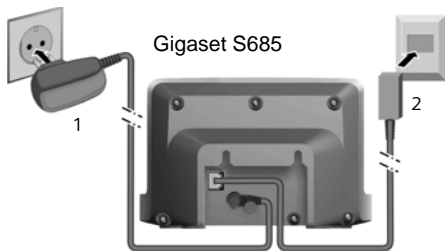
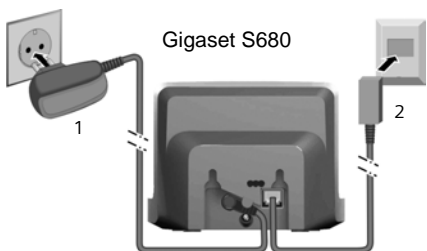
### Reception strength:

The display shows the quality of the radio range between the base station and handset:

- ◆ Good to poor: ▬▬▬ ▬▬▬ ▬▬▬ ▬▬▬
- ◆ No reception: ▬▬▬ flashes

## Connecting the base station

- ▶ **First** connect the power supply unit and **then** the phone jack as shown below and place the cables in the cable recesses.

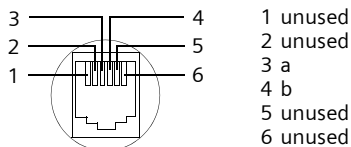


- 1 Mains adapter 230 V
- 2 Phone jack with phone cord

### Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**.
- ◆ If you buy a replacement phone cord, make sure that the phone jack has the correct type of wiring.

### Correct phone jack assignment



## Setting up the handset for use



The display is protected by a plastic film.  
**Please remove the protective film!**

## Inserting the batteries

### Warning:

Use only the rechargeable batteries recommended by Gigaset Communications GmbH \* (page 64). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

\* Gigaset Communications GmbH is a trademark licensee of Siemens AG.

- ▶ Insert the batteries the right way round (see figure).

The polarity is indicated in/on the battery compartment.



### Closing the battery cover

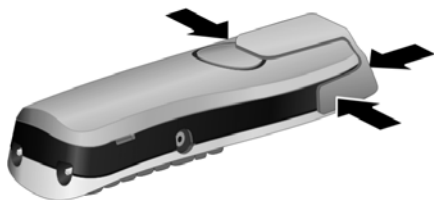
- ▶ First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.
- ▶ Then press the cover until it clicks into place.



### Attaching the belt clip

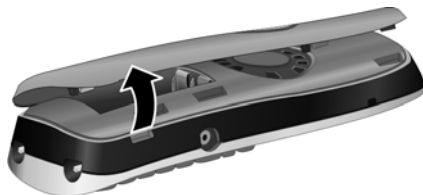
There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.



### Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Place your fingertip in the cavity in the casing and lift the battery cover upwards.



### Placing the handset in the base station and registering

- ▶ Place the handset in the base station with its **display facing upwards**.

The handset registers automatically. Registration can take up to 5 minutes. During this time **Regstr.Procedure** appears in the display and the name of the base station flashes, e.g. **Base 1**. The handset will be assigned the lowest unassigned internal number (1–6).

This will appear in the display when registration is complete, e.g. **INT 1**. This means that the number 1 has been assigned. If the internal numbers 1–6 are already assigned to other devices, the number 6 is overwritten.

#### Please note:

- Automatic registration is only possible while no one is making calls using the base station.
- Each key press interrupts the automatic registration.
- If automatic registration does not work the handset will have to be registered manually (page 43).
- You can change the name of the handset (page 46).

To charge the batteries, leave the handset in the base station.

## First steps

### Please note:

- If the handset has turned itself off because the batteries are flat and if it is then placed in the charging cradle, it will turn itself on automatically.
- Only place the handset in the base station or charging cradle that is intended for it.


For questions and problems see page 61.

## Headset socket

You can connect various headset types (with 2.5 mm jack connector), including: HAMA Plantronics M40, MX100 and MX150.

You can access a list of headsets that have been tested for compatibility on the Internet at [www.plantronics.com/productfinder](http://www.plantronics.com/productfinder).

## Initial charging and discharging of batteries

If the handset is activated, the flashing battery icon  in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the base station or charging cradle **continuously** for **seven** hours. Your handset need not be turned on for it to charge.
- ▶ Afterwards, remove the handset from the base station and do not put it back again until the batteries are fully charged.

### Please note:

After the first battery charge **and** discharge you may replace your handset in its base station after every call.

### Please note:



- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

## Setting the date and time

The date and time must be set in order to, for example, have the correct time for incoming calls and be able to use the alarm clock and calendar.

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field with:

 →  → Date/Time

- ▶ Change multiple line input:

Date:

Enter the day, month and year in 8-digit format.


Time:

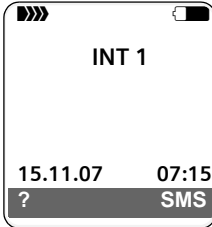
Enter hours and minutes as 4 digits, e.g.     for 07:15 a.m.

**Save**

Press the display key

## Display in idle status

Once the phone is registered and the time set, the idle display is as shown here (example). If the answer machine is activated, the answer machine icon  will also be displayed in the header:




Your answer machine is set with a standard announcement.

### Your phone is now ready for use.

 
If you have any queries about using your phone, please read the tips on troubleshooting ("Questions and Answers", page 61) or contact our customer service department (Customer Care, page 63).

 
## Operating the handset

### Activating/deactivating the handset

-  In idle status, press and hold the end call key (confirmation tone).

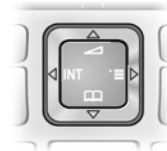
### Activating/deactivating the keypad lock


-  Press and **hold** the hash key.

You will hear the confirmation tone. The  icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.





## Control key



 
 


In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

The control key has a number of different functions:





### When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu to set the call volume (page 50), ringer tones (page 50) and advisory tones (page 52) for the handset.




### In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

### In lists and submenus

-  /  Scroll up/down line by line.
-  Open submenu or confirm selection.
-  Go back one menu level or cancel.

### During an external call

-  Open the directory.
-  Initiate internal consultation call and mute
-  Adjust the loudspeaker volume for earpiece and hands-free mode.

## Display keys










---

The function of the display keys changes depending on the particular operating situation. Example:



- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys


The most important display icons are:

-  Left display key, as long as it has not been assigned a function (page 47).
-  Open the main menu.
-  Open a context-dependent menu.
-  Delete key: deletes one character at a time from right to left.
-  Go back one menu level or cancel operation.
-  Fetch e-mail address from the directory.
-  Copy number into directory.
-  Divert external call to answer machine (S685 only).
-  Open the last number redial list.

## Reverting to idle status

---

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.


## Menu guidance

---

Your telephone's functions are accessed using a menu that has a number of levels.



### Main menu (first menu level)

---

- ▶ Press  with the handset in idle status to open the main menu.

The main menu functions are shown in the display with colour icons and names.

To access a function, i.e. to open the corresponding submenu (next menu level):


- ▶ Navigate to the function using the control key /. The name of the function is displayed in the display header. Press the display key **OK**.

### Submenus

---


The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

Or:

- ▶ Enter the corresponding digit combination (page 14).

**Briefly** press the end call key  once to return to the previous menu level/cancel the operation.

## Illustration in the user guide


The operating steps are shown in abbreviated form.



### Example


The illustration:

 →  → Date/Time


 

means:

 Press the key to display the main menu.

 Use the control key  to scroll through submenu Settings and press **OK**.

Date/Time Scroll to the function with the control key  and press **OK**.

### Other types of illustrations:

 /  /  etc.

Press the matching key on the handset.



Enter digits or letters.

You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 65.

## Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **<C** to delete the character to the left of the cursor
- ◆ insert characters to the left of the cursor
- ◆ overwrite the character (flashing) when entering the time and date etc.

## ECO DECT

ECO DECT reduces power consumption by using a power supply with low power consumption and also reduces the transmission power of the base station.



If only **one** handset is registered and it is in the base station, eco mode is always **activated automatically**. In this case, the transmission power of the base station is reduced to the minimum.

 
You can use your handset to reduce the transmission power on the base station **manually** even when the handset is not in the base station.

 
By doing so, you will reduce the transmission power even if you have several handsets registered.

Your handset also reduces the transmission power depending on the distance to the base station.

### Activating/deactivating eco mode:

 →  → Base → Add. Features  
→ Eco Mode

**OK** Press the display key  
( = on).

If eco mode is activated manually, the  icon is displayed at the top of the screen. If eco mode is **activated** automatically (only one handset is registered and it is on the base station) and eco mode has **not** been activated via the menu, then the icon is **not** displayed.

### Please note:

- Activating eco mode reduces the range of the base station.
- Eco mode and any repeater support (see page 58) cancel each other out, i.e. both functions cannot be used at the same time.
- If external handsets (GAP) and handsets from earlier Gigaset versions are used, your handset will **not** automatically reduce the transmission power to the base station.

# Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

**Example:** for "Set ringer tone for external calls".

With the telephone in **idle status**, press (open main menu):

1 SMS

**You have activated an SMS mailbox (general or private) without a PIN**

1-1	New SMS	(page 28)
1-2	Incoming 0	(page 31)
1-3	Outgoing 0	(page 29)

**You have activated an SMS mailbox with a PIN or 2-3 mailboxes**

1-1	Mailbox	1-1-1	New SMS	(page 28)
		1-1-2	Incoming 0	(page 31)
		1-1-3	Outgoing 0	(page 29)
1-2 to 1-4	Mailbox 1 Mailbox 2 Mailbox 3	1-2-1 to 1-4-1	New SMS	(page 28)
		1-2-2 to 1-4-2	Incoming 0	(page 31)
		1-2-3 to 1-4-3	Outgoing 0	(page 29)
1-6	Settings	1-6-1	Service Centres	(page 33)
		1-6-2	SMS Mailboxes	(page 32)
		1-6-3	Notify Number	(page 32)
		1-6-4	Notify Type	(page 32)
		1-6-5	Status Report	(page 29)
		1-6-6	Subscribe to SMS	(page 28)

3 Calls List (page 25)

4 Add. Features

4-3	Room Monitor	(page 46)
4-4	Data Transfer	4-4-2 Bluetooth (page 55)
		4-4-3 Directory (page 22)
4-6	Missed Alarms	(page 54)

5 Alarm Clock (page 53)

6 Calendar (page 53)

7 Resource Dir. 

7-1	Screensavers	(page 51)
7-2	Caller Pictures	(page 51)
7-3	Sounds	(page 51)
7-4	Capacity	(page 52)

8 Settings 

8-1	Date/Time	(page 10)	
8-2	Audio Settings	8-2-1 Handset Volume (page 50)	
		8-2-2 Ringer Settings (page 50)	
		8-2-3 Advisory Tones (page 52)	
8-3	Display	8-3-1 Screen Saver (page 49)	
		8-3-2 Colour Scheme (page 48)	
		8-3-3 Contrast (page 48)	
		8-3-4 Backlight (page 49)	
8-4	Handset	8-4-1 Language (page 48)	
		8-4-2 Auto Answer (page 49)	
		8-4-3 Register H/Set (page 43)	
		8-4-4 Select Base (page 44)	
		8-4-5 Area Codes (page 57)	
		8-4-6 Reset Handset (page 57)	
8-5	Base	8-5-1 Ringer Settings (page 58)	
		8-5-2 Music on hold (page 58)	
		8-5-3 System PIN (page 57)	
		8-5-4 Base Reset (page 58)	
		8-5-5 Add. Features (page 13, page 45, page 59)	
		8-5-6 Preselection (page 26)	
		8-5-7 Calls List Type (page 25)	
8-6	Voice Mail	8-6-1 Set Key 1 (page 42)	
		only S685 base station:	
		8-6-2 Ans Machine (page 36)	
		8-6-3 Call Screening (page 39)	
		8-6-4 Announcements (page 36)	
		8-6-5 Message Length (page 40)	
		8-6-6 Record Quality (page 40)	
8-6-7 Ring Delay (page 40)			





## Making calls

---

 

 
### Making an external call


---

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

#### Please note:

Dialling using the directory, the call-by-call list (page 1, page 20) or the calls and last number redial list (page 25/page 24) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

### Continuing a call on a Bluetooth headset


**Precondition:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 55).

Press the talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.

For further details on your headset, see the user guide issued with it.


## Ending a call

---





 Press the end call key.

## Accepting a call

---

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .
- ▶ Gigaset S680: Press the display key  **Accept**.
- ▶ Gigaset S685: Press the display key  to divert the call to the answer machine (page 39).

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 49), the handset will take a call automatically when you lift it out of the cradle.

If the ringer tone is intrusive, press the display key **Silence**. You can take the call as long as it is displayed on the screen.

### Accepting a call on a Bluetooth headset

**Precondition:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 55).

**Only press the talk key on the headset when the headset itself rings** (this may take up to 5 seconds).

For further details on your headset, see the user guide issued with it.

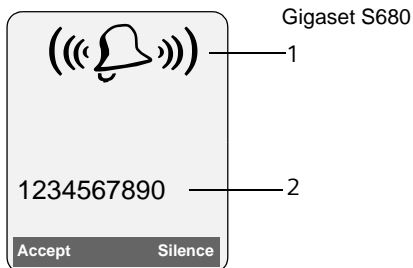
## Calling Line Identification

When you receive a call, the caller's number and/or name is displayed on the screen if the following conditions are met:

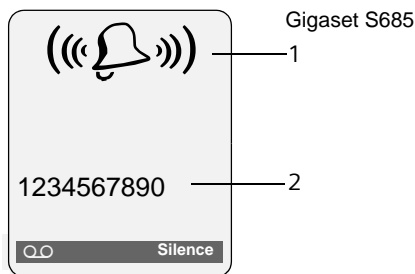
- ◆ Your network provider supports CLIP, CLI and CNIP.
  - CLI (Calling Line Identification): the caller's number is transmitted.
  - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
  - CNIP (Calling Name Identification Presentation): the caller's name is displayed.
- ◆ You have arranged CLIP or CNIP with your network provider.
- ◆ The caller has arranged CLI with the network provider.

### Call display with CLIP/CLI

If the number of the caller is saved in your directory, you will see their name, and if you have assigned a CLIP picture to that caller, this will also be displayed.



or



- 1 Ringer tone icon
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ External, if no number is transmitted.
- ◆ Withheld, if the caller has withheld Calling Line Identification.
- ◆ Unavailable, if the caller has not arranged Calling Line Identification.

### Display with CNIP

If you have CNIP, then the name (town) that is registered with your network provider for the caller's number will **also** be displayed. If the number of the caller is saved in your directory, the CNIP display is replaced by the corresponding directory entry.

1234567890	1
Anna Fielding, London	2

- 1 Caller's number
- 2 Name and town

The display shows:

- ◆ External, if no number is transmitted.
- ◆ Withheld, if the caller has withheld Calling Line Identification.
- ◆ Unavailable, if the caller has not arranged Calling Line Identification.

## Handsfree talking

---

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

### Activating/deactivating handsfree mode

---

#### Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.



#### Switching between earpiece and handsfree mode



Press the handsfree key.

During a call and when listening to the answer machine (Gigaset S685 only), activate or deactivate handsfree.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For how to adjust the loudspeaker volume, see page 50.

## Muting

---

You can deactivate the microphone in your handset during an external call. The other party hears hold music.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

You can turn the hold music on and off (page 58).

## Making calls easily using network services

---

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ **If you require assistance, please contact your network provider.**

## Using the directory and lists

---

The options are:

- ◆ Directory
- ◆ Call-by-call list
- ◆ Last number redial list
- ◆ SMS list
- ◆ Call history
- ◆ List of missed calls
- ◆ Answer machine list  
(Gigaset S685 only).

You can save a total of 250 entries in the directory and call-by-call list.

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 22).

### Directory/call-by-call list

---


#### Please note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

### Directory

---

In the **directory** you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ VIP designation and VIP ringer tone (optional)
- ◆ E-mail address (optional)
- ◆ CLIP pictures (optional)
- ◆ Anniversaries with reminder
  - ▶ With the handset in idle status, open the directory by pressing the  key.

#### Length of the entries (directory)

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 60 characters

### Call-by-call list

---

The **call-by-call list** is used to store the access codes for network providers ("call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.


#### Length of entries

Number: max. 32 digits

Name: max. 16 characters

### Saving a number in the directory

---

 → New Entry

- ▶ Change multiple line input:

First Name / Surname:

Enter a name in at least one of the fields.

Phone (Home) / Phone (Office) / Phone (Mobile)

Enter a number in at least one of the fields.

E-mail

Enter e-mail address.

Annivers.:

Select On or Off.

With setting On:

Enter Anniversary (Date) and Annivers. (Time) (page 23) and select reminder type: Annivers. (Signal).

Caller Picture

If required, select a picture to be displayed when the caller calls (see My stuff, page 51).

Precondition: Calling Line Identification (CLIP).

- ▶ Save changes: (page 66).

### Saving a number in the call-by-call list

---

 → New Entry

- ▶ Change multiple line input:

Name:

Enter name.

Number:

Enter number.

## Order of directory entries

---

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.



The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters



To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

## Selecting entries in the directory and call-by-call list

---

 /  Open directory or call-by-call list.

 
You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name (in the directory: first character of the surname or of the first name if **only** the first name has been entered), or scroll to the entry using .

## Dialling with the directory/call-by-call list

---

 /  →  (select entry)

 Press the talk key. The number is dialled.

## Managing entries in the directory/call-by-call lists

---

 /  →  (select entry)

### Viewing entries

**View** Press the display key. The entry is displayed.  
Back with **OK**.


### Editing entries

**View** **Edit** Press display keys one after the other.



- ▶ Carry out changes and save.

### Using other functions

 /  →  (select entry)  
→ **Options** (open menu)

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press   after the number is displayed.

#### Edit Entry

Edit selected entry.

#### Delete Entry

Delete selected entry.

#### VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringer tone to it. You can then recognise important calls from the ringer tone.

**Precondition:** Calling Line Identification (page 17).

#### Copy Entry

Send a single entry to a handset (page 22).

## Using the directory and lists

### Delete List

Delete **all** entries in the directory/call-by-call list.

### Copy List

Send complete list to a handset (page 22).

### Available Memory

Display the available entries in the directory and call-by-call list (page 20).




## Using quick dial keys


- ▶ Press and **hold** the required quick dial key (page 47).

## Sending the directory/call-by-call list to another handset

### Preconditions:

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (select entry)  
→ **Options** (open menu) → Copy Entry / Copy List → to Internal

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the Copy next entry? prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

### Please note:

You can also send the complete **directory** via data transfer, without opening the directory:



 →  → Data Transfer → Directory

### Please note:


- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

## Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (see page 55) you can transfer directory entries in vCard format, e.g. to exchange entries with your mobile.

 →  (select entry) → **Options** (open menu) → Copy Entry / Copy List  
→ vCard via Bluetooth


The list of "Known Devices" (see page 56) is displayed.

 Select device and press **OK**.

## Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (see page 56) sends a vCard to your handset, this occurs automatically and you are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:

 Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

## Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS or during a call to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the Name line.

A number is displayed:




**Options** → Copy to Directory


► Complete the entry, see page 20.

Gigaset S685: The message playback is interrupted during the number transfer from the answer machine list.

## Copying a number or e-mail address from the directory

In many operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



► Depending on the operating situation, open the directory with  or  or  Directory.

 Select an entry (page 21).


## Saving an anniversary in the directory


For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: Annivers.: Off).

Anniversaries are automatically recorded in the calendar (page 53).

 →  (select entry; page 21)

**View** **Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

 Select On.

► Change multiple line input:

Anniversary (Date)

Enter day/month/year in 8-digit format.

Annivers. (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Annivers. (Signal)



Select the type of signal for the reminder.

► Save changes: (page 66).


### Please note:


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

## Deactivating anniversaries

 →  (select entry; page 21)

**View** **Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

 Select Off.

**Save** Press the display key.

## Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ringer tone.

You now have the following options:

**SMS** Write an SMS

**OFF** Press the display key to acknowledge and end the reminder call.

## Viewing missed anniversaries


In idle status, you are reminded of an elapsed and unacknowledged anniversary by the **one-off** display of **Appoint.**

► View appointment:

**Appoint.** Press the display key.

You now have the following options:

**SMS** Write an SMS

**Delete** Delete the reminder. After deleting, press the  or **Go Back** display key: Back in idle status, **Appoint.** is no longer displayed.



 
You can also view missed anniversaries afterwards (see page 54).



## Last number redial list



The last number redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the phone book or the call-by-call list, then the appropriate name will be displayed.


### Manual last number redial

-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again.  
The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

### Managing entries in the last number redial list

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.


The following functions can be selected with :

#### Copy to Directory

Copy an entry to the directory (page 20).

#### Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.


- Called party answers: press the talk key . The function is ended.
- Called party does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.

Display Number (as in the directory, page 21)


Delete Entry (as in the directory, page 21)

 
 

Delete List (as in the directory, page 22)

## Opening lists with the message key

You can use the message key  to open the following list selection:


- ◆ SMS list  
If **several** mailboxes are set up (page 32), several lists are displayed.
- ◆ Answer machine list (Gigaset S685 only) or network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (page 42).
- ◆ Call history

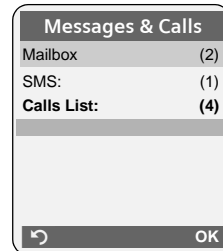
An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:



Icon	New message...
	... in the answer machine list (Gigaset S685 only) or on the network mailbox
	... in the call history
	... in SMS list

The number of new entries is shown beneath the corresponding icon.

### List selection

If you press the message key , only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are identified in bold:



Select a list with . To open, press  or **OK**.

If only one list contains entries, no list selection is offered and the relevant list is displayed immediately.

## Incoming SMS message list

All received SMS messages are saved in the incoming message list, page 31.

## Call history

**Precondition:** Calling Line Identification (CLIP, page 17)

Depending on the type of list set, the call history contains



- ◆ accepted calls (  )
- ◆ missed calls
- ◆ calls recorded by the answer machine (∞, Gigaset S685 only)

Depending on the type of list set, all numbers of the last 30 incoming calls are saved or just the missed calls are saved. The list of missed calls does not contain calls that were answered or recorded by the answer machine (Gigaset S685 only).

You can also call up the call history via the menu:

 → Calls List

## Setting the calls list type

 →  → Base → Calls List Type

Missed Calls / All Calls

Select and press **OK** (  = on).

 Press and **hold** (idle status).

The calls list entries are retained when you change the list type.

## List entry


New messages are displayed at the top.

Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry  
**Bold:** new entry
- ◆ Number or name of caller  
You can add the caller's number to the directory (page 23).
- ◆ Date and time of call (if set, page 10)
- ◆ Type of entry:
  - accepted calls (  )
  - missed calls
  - calls recorded by the answer machine (∞, Gigaset S685 only)

Pressing the display key **Delete** deletes the marked entry.

After pressing the display key **Options** you can select more functions with :

Copy to Directory

Copy number to the directory.

Delete List

Delete complete list.

Information

See following section entitled "Displaying CNIP information".

When you quit the call history, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

## Answer machine list (Gigaset S685 only)

---

You can use the **answer machine list** to listen to the messages that are on the answer machine.

### Displaying CNIP information

---

If you have CNIP, you can display the name and town that is registered with your network provider for this number.

You have selected a list entry.

**Options** Open menu.

**Information** Select and press **OK**.

If the name and town are not shown, it means that the caller has not requested Calling Line Identification or that Calling Line Identification has been withheld.

Press **OK** to return to the list.

## Making cost-effective calls

---

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

### Linking call-by-call numbers with one number

---

You can insert the dialling code of a network provider ahead of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).

**Options** Press the display key.

**Display Number**

Select and press **OK**.



Enter number or select number from the directory (page 23).



Press the talk key. Both numbers are dialled.

## Automatic network provider preselection (Preselection)

---

You can specify a call-by-call number (preselection number) which is **automatically** placed in front of numbers when you dial them.

◆ The **"with preselection"** list contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.

◆ The **"without preselection"** list contains the "exception to the rule".

Example:

You have entered 08 for "with preselection". Consequently, all numbers that start with 08 are dialled with preselection.

If, for example, you want 081 to still be dialled without preselection, enter 081 for "without preselection".

When dialling, the **first** digits of the selected numbers are compared with both lists after the talk/handsfree key is pressed:

- ◆ The preselection number is not prefixed if the dialled number
  - **does not** match any entries in the two lists
  - matches an entry in the **"without preselection"** list

◆ The preselection number is prefixed if the first digits of the dialled number match with **only** one entry in the list **"with preselection"**.

### Saving preselection numbers

---



→ Base → Preselection  
→ Preselect No.



Enter or change the preselection number (call-by-call number).

**Save**

Press the display key.



Press and **hold** (idle status).


## Save or change entries in the preselection lists

---


Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means e.g. that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.


 →  → Base → Preselection  
→ With Preselect / Without Preselect.

 Select entry.

**Edit** Press the display key.


 Enter or edit first digits of number.

**Save** Press the display key.

 Press and **hold** (idle status).

## Temporarily cancelling preselection

---

 (press and **hold**) → **Options**  
→ Aut Preselect off

## Permanently deactivating preselection

- ▶ Delete the preselection number (page 26).

## SMS (text messages)

---

Your unit is supplied ready for sending SMS messages immediately.

### Preconditions:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.

SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.

Your SMS messages are sent via the **Service Centr.** that is shown as the **active send service centre**. However, you can activate any other SMS centre as the active send service centre to send a current message (page 33).

If no SMS Service Centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (page 33).

Information on writing an SMS can be found in the appendix:

- ◆ For how to enter text, see page 66.
- ◆ Writing using the predictive text tool EATONI, see page 67.

### Rules

- ◆ An SMS can be up to 612 characters.
- ◆ If there are more than 160 characters, the SMS is sent as a **linked** SMS (up to 4 SMS messages with 153 characters each).

### Please note:

- ◆ Each incoming SMS is signalled by a single ring (ringer tone as for external calls). If you accept an SMS "call", the SMS will be lost. To prevent this ring, suppress the first ringer tone for all external calls (page 34).
- ◆ If your phone is connected to a PABX, please read page 34.
- ◆ To receive SMS messages you must be registered with your service provider.

## Registering with the registration wizard

---

The first time you press the display key **SMS** you will be asked whether you wish to register automatically with all entered SMS centres (see page 33). Confirm with **Yes** or refuse with **No** to abort automatic registration. You can now receive SMS messages from all SMS centres whose numbers you have entered.

You can call up automatic registration thereafter via the menu:

 →  → **Settings** → **Subscribe to SMS**

The registration wizard does not support setting up personal mailboxes (page 32).

## Writing/sending an SMS

---

### Writing an SMS

 → 

**Mailbox 2** Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

**New SMS** Select and press **OK**.



Write an SMS.

### Please note:

- Instructions on entering text can be found at page 66 and on writing with EATONI predictive text at page 67.
- EATONI is activated as a default setting. Activating/deactivating EATONI see page 67.

## Sending an SMS



Press the talk key

Or:

**Options**

Press the display key.

Send

Select and press **OK**.

SMS

Select and press **OK**.



Select number with area code (even if you are in that area) from the directory or call-by-call list, or enter number directly. For SMS to an SMS mailbox: add the mailbox ID to the **end** of the number.

**Send**

Press the display key. The SMS is sent.

### Please note:

- If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- If the memory is full, or if the SMS function on the base station is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

## Setting input language

- ▶ You are writing an SMS (page 28).

**Options**

Press the display key.

Select Language

Select and press **OK**.



Select input language and press **OK**.



Press the end call key **briefly** twice to return to the text panel.

The input language setting only applies to the current SMS.

## SMS status report

**Precondition:** Your network provider supports this feature.

If you have activated the status report, you will receive an SMS with a confirmation message after sending.

### Activating/deactivating a status report

→ → Settings

Status Report

Select and press **OK** ( = on).

### Reading/deleting status report/saving number to directory

- ▶ Open the incoming message list (page 31) and then:



Select SMS with the State OK or State not OK status.

**Read**

Press the display key.

- ◆ Delete:

**Options** Delete Entry **OK**.

- ◆ Save to directory:

**Options** Copy to Directory **OK**.

- ◆ Delete entire list:

**Options** Delete List **OK**.

## Draft message list

You can save an SMS in the draft message list and edit and send it later.

### Saving an SMS in the draft message list

- ▶ You are writing an SMS (page 28).

**Options**

Press the display key.

Save Entry Select and press **OK**.

### Opening the draft message list

→ → (mailbox, mailbox PIN)  
→ Outgoing (3)

The first list entry is displayed, e.g.:

1234567890
21.11.07 09:45

## SMS (text messages)

### Reading or deleting individual SMS messages

- ▶ Open the draft message list and then:



Select SMS.

**Read**

Press the display key. The entry will be displayed. Scroll line by line using

Or delete the SMS with

**Options** Delete Entry **OK**.

### Writing/changing an SMS

- ▶ You are reading an SMS in the draft message list.

**Options** Open menu.

You have the following options:

#### New SMS

Write a new SMS and then send (page 29) or save it.

#### Edit

Edit the text of the saved SMS and then send (page 29).

#### Character Set

Text is shown in the selected character set.

### Deleting draft message list

- ▶ Open the draft message list and then:

**Options** Open menu.

Delete all Select, press **OK** and confirm with **Yes**. The list is cleared.



Press and **hold** (idle status).

### Sending SMS messages to an e-mail address

If your service provider supports the **SMS as e-mail** feature, you can also send your SMS messages to e-mail addresses.

The e-mail address must be at the beginning of the text. You must send the SMS to the e-mail service of your SMS send centre.



→ → (mailbox, mailbox PIN)

→ New SMS

**E-Mail** /

Load the e-mail address from the directory or enter it directly. End the entry with a space or colon (depending on the service provider).



Enter the SMS text.

**Options**

Press the display key.

Send

Select and press **OK**.

E-mail

Select and press **OK**. If the number of the e-mail service is not entered (page 33), enter the number of the e-mail service.

**Send**

Press the display key.

### Sending SMS messages as a fax

You can also send an SMS to a fax machine.

**Precondition:** Your network provider supports this feature.

- ▶ You are writing an SMS (page 28).

**Options** Press the display key.

Send Select and press **OK**.

Fax Select and press **OK**.



Select number from the directory or enter directly. Enter the number with dialling code (even if you are in the same area).

**Send**

Press the display key.

### Receiving an SMS

All received SMS messages are saved in the incoming message list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.



The display tells you if the SMS memory is full.

- ▶ Deleting SMS messages you no longer require (page 31).

## Incoming message list

The incoming message list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset S68H handsets by the  icon in the display, the flashing message key  and an advisory tone.

### Opening the incoming message list with the key

 Press.

Select mailbox if necessary and enter mailbox PIN.

The incoming message list is displayed as follows (example):

<b>SMS:</b>	(2)	1
		2

- 1 **bold:** number of new entries  
**regular:** number of read entries
- 2 Name of mailbox, here: general mailbox

Open list with **OK**.

An entry in the list is displayed as in the following example:

1234567890
21.11.07 09:45

### Opening the incoming message list via the SMS menu

 →  → (mailbox, mailbox PIN)  
→ Incoming (2)

### Reading or deleting individual SMS messages

- ▶ Open the incoming message list.
- ▶ Continue as described in "Reading or deleting individual SMS messages", page 30.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

### Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.

- ▶ Open the incoming message list.

**Options** Open menu.

- ▶ To continue, see "Deleting draft message list", page 30.

## Replying to or forwarding SMS messages

- ▶ Read the SMS (page 31):

**Options** Press the display key.

You have the following options:

Reply

Write and send a reply SMS directly (page 28).

Edit

Edit the text in the SMS and then send it (page 29).

### Forwarding an SMS

- ▶ You are reading an SMS (page 31):

**Options** Press the display key.

**Forward** Select and press **OK**. For further information, see page 29.

## Adding numbers to the directory

### Adding the sender's number

- ▶ Open incoming message list and select entry (page 31).

**Options** Press the display key. For further information, see page 23.

#### Please note:


- You can create a special directory for SMS messages within your main directory by putting a star (\*) before the names.
- An attached mail box identifier is added to the directory.




### Copying/dialling numbers from an SMS text

- ▶ Read the SMS (page 31) and scroll to the telephone number.

The digits are reverse-highlighted.

 Press the display key. For further information, see page 23.

Or:

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the local area code (dialling code) in the directory.

### Changing the character set

- ▶ Read the SMS (page 31):

**Options** Press the display key.

#### Character Set

Text is shown in the selected character set.

## Notification by SMS

You can be notified about missed calls or new answer machine messages (Gigaset S685 only) via SMS.


**Precondition:** For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.


You only need to set the phone number to which notification should be sent (notification number) and the notification type.

### Saving the notification number

 →  → Settings → Notify Number

 Enter the number to which the SMS should be sent.

**Save** Press the display key.

 Press and **hold** (idle status).

### Warning:

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

### Setting the notification type

 →  → Settings → Notify Type

- ▶ Change multiple line input if necessary:

#### Missed Calls:

Set On if you require SMS notification.

#### Ans Machine:

(Gigaset S685 only)

Set On if you require SMS notification.

- ▶ Save changes (page 66).

## SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

### Please note:


- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (\*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's default settings. This will **delete all SMS messages from all mailboxes**.

## Setting up and changing a personal mailbox

---

### Setting up a personal mailbox

 →  → Settings → SMS Mailboxes

 Select mailbox, e.g. Mailbox 2 and press **OK**.

▶ Change multiple line input:

On/Off:

Activate or deactivate mailbox.

ID:

Select mailbox ID (0–9). You can only select the available numbers.


Protection:

Activate/deactivate PIN protection.

PIN

If necessary, enter 4-digit PIN.

▶ Save changes (page 66).

Active mailboxes are marked with  in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

### Deactivating a mailbox

▶ Set On/Off: to Off. Confirm message with **Yes** if necessary.

All SMS messages saved in this mailbox will be deleted.

### Deactivating PIN protection

▶ Set Protection: to Off.

The mailbox PIN is reset to "0000".

### Changing the name of a mailbox

 →  → Settings → SMS Mailboxes

→  (Select mailbox)

**Edit** Press the display key.

 Enter new name.

**Save** Press the display key.

 Press and **hold** (idle status).

### Changing a mailbox's PIN and ID

 →  → Settings → SMS Mailboxes  
→  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

▶ Set ID:, Protection: and PIN (page 33).

### Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

▶ You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.


## Setting SMS centres

---

### Entering/changing SMS centres

▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → Settings → Service Centres

 Select SMS centre (e.g. Service Centr. 1) and press **OK**.

▶ Change multiple line input:

Active Send:

Select **Yes** if SMS messages are to be sent via the SMS centre. For the SMS centres 2 to 4, the setting only applies to the next SMS.

SMS:

Press the display key **Edit**. Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

E-mail:

Press the display key **Edit**. Enter the number of the e-mail service.

▶ Save changes (page 66).

**Please note:**

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (precondition: your service provider supports this function).

### Sending an SMS through another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

This setting only applies to the next SMS to be sent. Thereafter, the setting returns to Service Centr. 1.

### SMS on a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded to the extension of the PABX (CLIP)**.The CLIP evaluation of the number of the SMS centre happens in your **Gigaset**.
- ◆ If required, you must prefix the number for the SMS centre with the access code (depending on your PABX).  
If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS messages **on ISDN PABXs** is only possible via the MSN number assigned to your base station.

### Activating/deactivating muting for the first ringer tone



Open menu.



Press keys.



First ring audible.

Or:



First ring muted.

### Activating/deactivating the SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings which you have made for sending and receiving SMS messages (e.g. the call numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after you turn off your phone.



Open menu.



Enter the digits.



Deactivate SMS function.

Or:



Activate SMS function (default setting).

## SMS troubleshooting

### Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed, see self-help.

### Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

<p>You cannot send messages.</p> <ol style="list-style-type: none"> <li>You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none"> <li>Ask your service provider to enable this service.</li> </ul> </li> <li>SMS transmission has been interrupted (e.g. by a call). <ul style="list-style-type: none"> <li>Re-send the SMS.</li> </ul> </li> <li>Network provider does not support this feature.</li> <li>No number or an invalid number is entered for the SMS centre set as the active send service centre. <ul style="list-style-type: none"> <li>Enter the number (page 33).</li> </ul> </li> </ol>
<p>You receive an incomplete SMS.</p> <ol style="list-style-type: none"> <li>Your phone's memory is full. <ul style="list-style-type: none"> <li>Delete old SMS messages (page 31).</li> </ul> </li> <li>The service provider has not yet sent the rest of the SMS.</li> </ol>
<p>You have stopped receiving SMS messages.</p> <ol style="list-style-type: none"> <li>You have changed the ID of your mailbox. <ul style="list-style-type: none"> <li>Give your SMS contacts your new ID or undo the change (page 33).</li> </ul> </li> <li>You have not activated your mailbox. <ul style="list-style-type: none"> <li>Activate your mailbox (page 33).</li> </ul> </li> <li>Call diversion is activated with <b>When: All Calls</b> or the <b>All Calls</b> call diversion is activated for the network mailbox. <ul style="list-style-type: none"> <li>Change the call diversion</li> </ul> </li> </ol>

The message is played back.

- The "display call number" service is not activated.
  - Ask your service provider to activate this function (chargeable).
- Your mobile phone operator and your fixed network SMS service provider have not agreed on a co-operation.
  - Obtain information from your fixed network SMS service provider.
- Your terminal is recorded by your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
  - Start the registration wizard for automatic registration (see page 28).
  - Have the device (re-)registered to receive SMS messages.

Messages are only received during the day.

The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.

- Start the registration wizard for automatic registration (see page 28).
- Obtain information from your fixed network SMS service provider.
- Have the device (re-)registered to receive SMS messages.

## Operating the answer machine of the Gigaset S685 base station

---

You can operate the answer machine that is integrated into the base station using the keys on the base station (see page 2), via the handset or by remote control (other phone/mobile phone). Your own announcement message or advisory message can only be recorded via the handset.


### Announcement mode

You can use the answer machine in two different modes.

- ◆ In **Ans. & Record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Announce Only** mode, the caller hears your announcement but cannot leave a message.


 
## Operation via the handset

 
---

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key .

### Activating/deactivating the answer machine

---

 →  → Voice Mail → Ans Machine  
( = on)

When you switch the answer machine on, the remaining memory time is announced. If the time has not yet been set (page 10), an appropriate announcement is made. The  icon appears in the display.

The phone is supplied with pre-recorded announcements for answer and record mode and for announce only mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

### Recording a personal announcement/announce only

---



 →  → Voice Mail → Announcements  
→ Record Announce / Record Anc Only

**OK** Press the display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now speak your announcement (at least 3 secs.).

**End** Press the display key to end the recording.

Cancel the recording with  or .  
Restart the recording with **OK**.

After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement will be used again.
- ◆ If the answer machine's memory is full, it will switch to **Announce Only** mode.
  - ▶ Delete old messages and the answer machine will automatically switch back to **Ans. & Record** mode. Repeat recording if required.

## Playing back announcements

---

 →  → Voice Mail → Announcements  
→ Play Announce / Play Anc Only

If you have not recorded a personal announcement, the relevant pre-recorded announcement is played.

Record a new announcement while playing back announcement:

**New** Press the display key.

If the answer machine's memory is full, it will switch to **Announce Only** mode.


- ▶ Delete old messages and the answer machine will automatically switch back to **Ans. & Record** mode. Repeat recording if required.

## Deleting announcements/announce only

---

 →  → Voice Mail → Announcements  
→ Del Announce / Del Anc Only

**Yes** Press the display key to confirm the prompt.



 Press and **hold** (idle status).

Once you have deleted your announcement, the relevant pre-recorded announcement will be used again.

## Selecting announcement mode

---

You can choose between **Ans. & Record** and **Announce Only**.

 →  → Voice Mail → Announcements  
→ Set Ans. Mode → Ans. & Record / Announce Only ( = on)

 Press and **hold** (idle status).

The selected mode is saved even after the answer machine is deactivated.

If the memory for messages is full in **Ans. & Record** mode, the answer machine will switch to the **Announce Only** mode and you will receive an instruction to delete old messages.

- ▶ Delete old messages.

The answer machine **automatically** switches back to the set mode once deletion is complete. You can then reselect the required recording mode.

## Setting "answer and record" or "announce only" by toggling

You can use the **Ans Mode Time** setting to change over the announcement mode for a specific period.

**Example:** **Ans. & Record** mode is set. If you activate **Ans Mode Time** and set a period (e.g. 18:00 to 08:00) the answer machine switches to **Announce Only** mode for this period. Outside this period (08:01 to 17:59), **Ans. & Record** mode is active.

 →  → Voice Mail → Announcements  
→ Set Ans. Mode → Ans Mode Time  
( = on)

- ▶ Change multiple line input:

From:

Enter hours/minutes for the start of the period in 4-digit format.

Until:

Enter hours/minutes for the end of the period in 4-digit format.

Activation:

Select **On** or **Off**.

- ▶ Save changes with **Save**.

If the messages memory is full and **Activation: On** has been selected, saving is interrupted and you will receive an instruction to delete old messages.

- ▶ Delete old messages and repeat the setting.



As soon as you change the announcement mode (page 37), the **Ans Mode Time** function is automatically deactivated.


## Playing back messages

---

The date and time of each message is logged (provided this has been set, page 10) and displayed during the playback. If Calling Line Identification is activated, the caller's number or name is displayed. If the caller's number is saved in the directory, their name is displayed.

### Playing back new messages

New messages that have not yet been heard are indicated by the  icon in the display and by the  key flashing on the handset.

 Press the message key.

Ans M.: Select and press **OK**.

An announcement informs you if there are new or old messages.

If there are new messages, playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time you will hear an appropriate announcement before playback begins.

 
 
### Playing back old messages



You can listen to old messages if there are no more new messages. Begin playback as described under "Listening to new messages".



After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".


### Stopping and controlling playback

During message playback:

 Pause playback. Press  again to resume.

 or  To the previous message.

 or  To the next message.

2 x  To next-but-one message.

If playback is interrupted for over a minute, the answer machine returns to idle status.

 
### Reading CNIP information of a message

▶ Please read page 26.

### Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

#### During message playback:

 Press the star key.

An announcement informs you of the message's new status.


#### Or:

**Options** Open menu.

Mark as New

Select and press **OK**.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The  key on the handset flashes.

### Adding the telephone number of a message to the directory

See "Copying a displayed number to the directory", page 23.

## Deleting messages

---

You can either delete all old messages together or individually.

### Deleting all old messages

During playback or pause:

**Options** Press the display key.

Del All Old Msgs

Select and press **OK**.

**Yes** Press the display key to confirm the prompt.

### Deleting individual old messages

During playback or pause:

**Delete** Press the display key.

## Picking up a call from the answer machine


---

You can pick up a call while the answer machine is recording or is being operated via remote operation:



Press the talk or display key.

Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The  key on the handset flashes.

You can accept the call even if it is not signalled on the handset.

## Diverting an external call to the answer machine

---

You can divert an incoming external call to the answer machine even if it is deactivated.

**Precondition:** Sufficient memory space is available on the answer machine.

An external call is signalled on the handset:



Press the display key.

The answer machine starts immediately in recording mode and records the call. The set time for the call acceptance (page 40) is ignored.

## Activating/deactivating two-way recording

---

You can record an **external** call with the answer machine.

- ▶ Inform the caller that the call is being recorded.

**Options** Open menu.

Two Way Record

Select and press **OK**.

The two-way recording is indicated on the display by an advisory text and is added to the answer machine list as a new message.



Press the display key to stop the two-way recording.

The maximum recording time depends on the memory available on the answer machine. If the memory is full you will hear an end tone, the recording is aborted and the call recorded up to that point is listed in the answer machine list as a new message. If the answer machine was in **Ans. & Record** mode, it will switch to the **Announce Only** mode. You will receive an instruction to delete old messages.

- ▶ Delete old messages.

The answer machine **automatically** switches back to the set mode once deletion is complete.

## Activating/deactivating call screening

 
---

During recording of a message you can listen in via the loudspeaker of registered handsets.

## Permanently activating/deactivating call screening

---

 →  → Voice Mail → Call Screening → Handset

( = on)



Press and **hold** (idle status).

You can switch off the **Call Screening** function on the handset during the recording.

## Switching off call screening for the current recording

---



Press the end call key.



## Setting up the answer machine

The answer machine has already been preset at the factory. Make individual settings using the handset.

### Call acceptance/charge saving function for remote operation



You can set when you want the answer machine to accept a call.


The options are: 0 sec., after 10 sec., 18 sec. or 30 sec. and the cost-saving setting Automatic.

In Automatic mode, the following applies for call acceptance:


- ◆ If there are no new messages, the answer machine accepts a call after 18 seconds.
- ◆ If new messages are present, the answer machine accepts a call after **10 seconds**.

When operating remotely you can tell after approx. 15 seconds that there are no new messages (otherwise the answer machine would already have accepted your call). There will be no call charges if you hang up now.

 →  → Voice Mail → Ring Delay

Select  0 sec. / 10 sec. / 18 sec. / 30 sec. / Automatic.

**Save** Press the display key.

 Press and **hold** (idle status).


#### Please note:

You can configure your telephone so that the **first** ringer tone is **suppressed** on all calls (page 34). The time set for call acceptance therefore does not indicate how long the phone rings before the answer machine accepts the call.

### Setting the recording time

You can set the maximum recording time of a message. The options are: 1, 2, 3 mins or Maximum.

 →  → Voice Mail → Message Length


 Select recording time.

**Save** Press the display key.

### Setting the recording quality





 
Set the quality you require for your recordings. The options are: Standard, High, Excellent. If the quality is higher, the maximum recording time is reduced.

 →  → Voice Mail → Record Quality

 
 Select the recording quality.

 
**Save** Press the display key.

### Changing the language for voice prompt and pre-recorded announcement

  8  5  9  2

 
Enter digits **and**

 **OK** Set English.

 **OK** Set French.

 **OK** Set Arabian.


### Resetting fast access for the answer machine using key 1

 
By default, key  has been assigned for fast access to the integrated answer machine. However, if you have set the network mailbox for fast access (page 42), you can reset this setting.

 →  → Voice Mail → Set Key 1

Answer Machine / Network Mailb.

Select and press **OK**.

 Press and **hold** (idle status).

After you have selected the network mailbox or the answer machine, press and **hold** key . You will be connected directly.

The setting for fast access applies to all Gigaset S68H handsets.

## Operating when on the move (remote control)

---

You can check and activate your answer machine from any other telephone (hotel, pay phone etc.), or initiate ringback from the answer machine with an SMS.

### Preconditions:

- ◆ You have set a system PIN other than 0000 (page 57).
- ◆ The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).


## Calling the answer machine and playing back messages

---








Dial your own number.



When you hear your announcement, press  and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answer machine with the keypad.

The following keys are used for operation:

-  Go to the start of the previous message.
-  Stop playback. Press again to resume.
-  Go to the next message.
-  Mark message as "new".
-  Delete current message.

## Activating the answer machine

---

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answer machine is activated.

The messages are now played back.

The answer machine cannot be deactivated remotely.

## Initiating ringback from the answer machine with SMS and listening to messages

---

**Precondition:** You must have stored a notification number (see page 32).

You can use the telephone (mobile phone or any other device with SMS functionality) for which you have stored the notification number in your phone to send an SMS to your answer machine when you are away from home. It will then call you back. The message playback begins when you accept the call and press any key.

The SMS must contain the following:

\*<System PIN>\*<Ringback number>\*

The ringback number is optional.

Examples:

\*4711\* or \*4711\*089123456\*

If a ringback number is entered, it is dialled; otherwise the notification number is dialled.

You can now operate the answer machine via the keypad, as described in the previous sections.

## Using the network mailbox

---

The network mailbox is your network provider's answer machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

## Configuring fast access for the network mailbox

---

With fast access, you can dial the network mailbox or the integrated answer machine (Gigaset S685 only) directly.

 
Gigaset S680: Fast access is set for the network mailbox. You only need to enter the number of the network mailbox.

Gigaset S685: The integrated answer machine is set for fast access. Instead of using this, you can specify the network mailbox. Ask your network provider about this.

### Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Voice Mail → Set Key 1

Network Mailb.

Select and press **OK** ( = on).



Enter the number for the network mailbox.

**Save**

Press the display key.



Press and **hold** (idle status).


The setting for fast access applies to all Gigaset S68H handsets.

## Calling the network mailbox



Press and **hold**. You are connected straight to the network mailbox.



Press handsfree key () if required. You will hear the network mailbox announcement.

## Viewing the network mailbox report

---

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list and the message key flashes (page 24).

## Using several handsets

---

### Registering handsets

---

You can register up to six handsets to your base station.

A Gigaset S68H handset can be registered to up to four base stations.

### Automatic registration of Gigaset S68H to Gigaset S680/S685

---

Precondition: The handset must not already be registered to a base station.

Registering the handset to the base station occurs automatically.

- ▶ Place the handset in the base station with its display facing forward.

Registration can take up to 5 minutes. During this process, the registration procedure appears in the display and the name of the base station flashes, e.g. base station 1. When the handset has registered successfully, its screen displays its internal number, e.g. INT 2 for internal number 2. The handset is assigned the lowest available internal number (1–6). If all internal numbers 1–6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

#### Please note:

- Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.
- You can change the name of the handset (see page 46).

### Manual registration of Gigaset S68H to Gigaset S680/S685

---

You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.

#### On the handset

 →  → Handset → Register H/Set



Select base station, e.g. Base 1 and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. You will see flashing on the display e.g. Base 1.

#### On the base station

Within 60 sec. press and **hold** the registration/paging key on the base station (page 2) (approx. 3 sec.).

### Registering other handsets

---

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

#### On the handset

- ▶ Start to register the handset as described in its user guide.


#### On the base station


Press and **hold** the registration/paging key on the base station (page 2) (approx. 3 sec.).

## Deregistering handsets

---


You can deregister any other registered handset from any registered Gigaset S68H handset.

 Open list of internal parties. The handset you are currently using is indicated by < .

 Select the internal party you wish to deregister.

**Options** Open menu.

De-reg. H/Set No. Select and press **OK**.

 Enter the current system PIN and press **OK**.

**Yes** Press the display key.

 
## Locating a handset ("paging")

---

You can locate your handset using the base station.

- ▶ **Briefly** press the registration/paging key on the base station (page 2).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringer tones are switched off.

### Ending paging


- ▶ **Briefly** press the registration/paging key on the base station or press the talk key  on the handset.

## Changing the base station

---

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (Best Base).

 →  → Handset → Select Base


 Select one of the registered base stations or Best Base and press **OK**.


## Making internal calls

---


Internal calls to other handsets registered on the same base station are free.

### Calling a specific handset

 Initiate internal call.

 Enter the number of the handset.


Or:


 Initiate internal call.

 Select handset.


 Press the talk key.

### Calling all handsets ("group call")

 Initiate internal call.

 Press the star key. All handsets are called.


### Ending a call


 Press the end call key.

## Transferring a call to another handset

---


You can transfer an external call to another handset (connect).

 Open list of handsets. The external participant hears hold music if activated (see page 58).

 Select a handset or **Call All** and press **OK**.

 
When the internal participant answers:

- ▶ If necessary announce the external call.

 Press the end call key.

The external call is transferred to the other handset.


If the internal participant does **not** answer or the line is busy, press the display key **End**, to return to the external call.


When transferring a call you can also press the end call key  before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you (the display will show Recall).

## Internal consultation calls

When you are speaking to an **external** participant you can call an **internal** participant at the same time for consultation.

 Open list of handsets.  
The external participant hears hold music if activated (see page 58).

 Select handset and press **OK**.

## Ending a consultation call

**End** Press the display key.

You are reconnected with the external participant.

## Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number or name will appear in the display if Calling Line Identification is enabled.

## Ending an internal call, accepting an external call

**Accept** Press the display key.

The internal call is **ended**. You are connected to the external caller.

## Rejecting the external call

**Reject** Press the display key.



The call waiting tone is turned off. You remain connected with the internal participant. The ringer tone can still be heard on other registered handsets.

 
## Listening in to an external call


**Precondition:** The Listening In function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

## Activating/deactivating internal listening-in

 
 →  → Base → Add. Features  
→ Listening In

Press **OK** to activate/deactivate the function ( = on).

 Press and **hold** (idle status).


## Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.

 
 Press and **hold** the talk key.

You are linked into the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

## Ending listening in






 Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.








## Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

-  Open list of handsets. Your own handset is indicated by <.
-  Select handset.
-  Press the display key.
-  Enter name.
-  Press the display key.

## Changing a handset's internal number

A handset is **automatically** assigned the lowest free number on registration. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).

-  Open list of handsets. Your own handset is indicated by <.
-  **Options** Open menu.
-  **Edit H/Set No.** Select and press **OK**. The list of handsets is displayed.
-  The current number flashes. Select a handset.
-  Enter the new internal number (1–6). The handset's old number is overwritten.
-  **Save** Press the display key to save the input.
-  Press and **hold** (idle status).

You will hear the error tone (descending tone sequence) if you assign an internal number twice.

- ▶ Repeat the procedure with a free number.

## Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer tone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

The room monitor mode is retained if you turn the handset off and on again.

### Caution!

- **You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.**
- When the function is activated the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answer machine.

## Activating the room monitor and entering the destination number

---


 →  → Room Monitor


- ▶ Change multiple line input:

Room M.:

Select On to activate.

Call to:

**External number:** Select the number from the directory (press display key ) or enter it directly. Only the **last 4 digits** are displayed.

**Internal number:** **Options** → INT → **OK** →  (select handset or Call All, if all registered handsets are to be called) → **OK**.



Level:


Set noise level sensitivity (Low or High).

- ▶ Press **Save** to save the settings.

## Changing set destination numbers

---

 →  → Room Monitor

 Scroll to the Call to: line.

**<C** or **Delete**

Delete existing number.

- ▶ Enter number as described in "Activating the room monitor and entering the destination number" (page 47).

## Deactivating the room monitor remotely

---

**Preconditions:** The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringer tone) on the handset will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (page 47).

 
 

## Handset settings

---

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

## Shortcuts for functions and numbers

---


You can assign the left display key and each of the digit keys  and  to  a number or a function. The right-hand display key has already been assigned a function. You can change the assignment.

The number is then dialled or the function started by simply pressing a key.

## Assigning a digit key/left display key

---

**Precondition:** The digit key or the left display key has not yet been assigned a number or a function.

- ▶ Press the display key  or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

### Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

### Room Monitor

Assign key to the menu for setting and activating the room monitor (see page 46).



## Handset settings

### Alarm Clock

Assign key to the menu for setting and activating the alarm clock (see page 53).

### Calendar

Open calendar/enter new appointment.

### Bluetooth

Assign key to the Bluetooth menu.

### More Features...

More functions are available:

#### INT

Internal calls (see page 44).

#### SMS

Assign the menu for SMS functions to a key (see page 28).

#### SMS Notific.

Assign key with the menu for activating SMS notification (page 32).

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

## Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

## Changing key assignments

### Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 47).

### Digit key

- ▶ Press the digit key **briefly**.


**Change** Press the display key. The list of possible key assignments is displayed.


- ▶ Proceed as is described when first assigning the key with a shortcut (page 47).


## Changing the display language

You can view the display texts in different languages.

 →  → Handset → Language

The current language is indicated by .


 Select a language and press **OK**.

 Press and **hold** (idle status).

If you accidentally choose a language you do not understand:



   

Press keys in sequence.

 Select the correct language and press **OK**.


 
## Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → Display

### Colour Scheme

Select and press **OK**.

 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

**Contrast** Select and press **OK**.

 Select contrast.

 
**Save** Press the display key.

 Press and **hold** (idle status).

## Setting the screensaver

You can set a picture from the Resource Dir. (page 51) to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the Screen Saver menu option is marked with .

 →  → Display → Screen Saver

The current setting is displayed.

▶ Change multiple line input:


Activation:

Select On (screensaver is displayed) or Off (no screensaver).

Selection:


If required, change the screensaver (see below).

▶ Save changes: (page 66).


If the screensaver conceals the display, **briefly** press  to show the idle display with time and date.

## Changing the screensaver

 →  → Display → Screen Saver

 Scroll to the Selection line.

**View** Press the display key. The active screensaver is displayed.

 Select screensaver and press **Change**.

▶ Save changes: (page 66).

## Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If the base station is turned on, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select On or Off.

Without Charger

Select On or Off.

**Please note:**

With the On setting, the standby time of the handset can be significantly reduced.

 
**Save**



Press the display key.



 
Press and **hold** (idle status).

## Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → Handset

Auto Answer

Select and press **OK** ( = on).



Press and **hold** (idle status).

## Changing the handsfree/earpiece volume

---

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels.

In idle status:



→ Handset Volume



Set the earpiece volume.



Scroll to the **Speaker**: line.



Set the handsfree volume.

**Save**

Press display key if necessary to save the setting permanently.

Setting the volume during a call:



Press the control key.




Select volume.

**Save**

Press display key if necessary to save the setting permanently.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **Save**.

If  is assigned to another function:

**Options**

Open menu.

Volume

Select and press **OK**.

Configure setting (see above).


### Please note:


You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 15).

## Changing ringer tones

---

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring =

.

◆ Ringer tones:

You can select various ringer tones, melodies or any sound from My stuff (page 51).

You can set different ringer tones for the following functions:

◆ Ext. Calls: for external calls

◆ Internal Calls: for internal calls

◆ Appointments: for set appointments (page 53)

◆ All: the same ringer tone for all functions

## Settings for individual functions

---

Set the volume and melody depending on the type of signalling required.

In idle status:



→ Ringer Settings



Select setting, e.g. Ext. Calls and press **OK**.



Set volume (1–6).



Scroll to the next line.



Select melody.

**Save**

Press the display key to save the setting.


## Same settings for all functions

In idle status:

 → Ringer Settings → All

- ▶ Set volume and ringer tone (see "Settings for individual functions").

**Save** Press the display key to confirm the prompt.

 Press and **hold** (idle status).


### Please note:


You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 15).

## Activating/deactivating the ringer tone

 
You can deactivate the ringer tone on your handset before you answer a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call. The ringer tone cannot be re-activated while an external call is in progress.

### Deactivating the ringer tone permanently

 Press and **hold** the star key.

The  icon appears in the display.

### Re-activating the ringer tone


 Press and **hold** the star key.

 
### Deactivating the ringer tone for the current call

**Silence** Press the display key.

## Activating/deactivating the alert tone



In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer tone.

 Press and **hold** the star key and **within 3 seconds**:

**Beep** Press the display key. A call will now be signalled by **one** short alert tone. You will now see  in the display.


## My stuff

My stuff on the handset manages sounds, which you can use as ringer tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling line identification (CLIP). My stuff can manage the following media types:



Icon	Sound	Format
	Ringer tones	Standard
	Picture (CLIP picture, screen-saver)	BMP (128 x 100 or 128 x 160 pixels)


The icon is displayed in front of the name in My stuff. Various mono- and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.


You can download pictures from a PC (see page 67). If too little memory is available, then you will have to delete one or more pictures first. The pre-configured pictures are labelled with . You cannot rename or delete them.

## Playing back sounds/viewing CLIP pictures

 →  → Screensavers / Caller Pictures / Sounds (select entry)


**Play / View** Press the display key. Sounds are played back or pictures are displayed. Press the  key to switch between entries.

**End /**  Press the display key. Playback of the sound or display of the picture ends.

While you are playing back sounds, you can also interrupt playback with the  key.

 Press and **hold** (idle status).

## Handset settings

If you have saved a picture in an invalid data format, you will see an error message after selecting the entry. Cancel the operation with . Use **Delete** to delete the picture.

### Sounds: setting the volume

During playback:

**Volume** Press the display key.



Set volume.


**Save** Press the display key.

### Renaming/deleting a picture

---

You have selected an entry.

**Options** Open menu.

If a picture cannot be deleted () , these options are not available. Depending on the situation, you can select the following functions:

#### Delete Entry

The selected entry is deleted.

#### Delete List

All entries in the list that can be deleted are deleted.

#### Rename


Change the name (max. 16 characters) and press **Save**. The entry is saved with the new name.

### Checking memory

---

You can display the capacity available for screensavers and CLIP pictures.



→  → Capacity



Back: press the display key.

## Activating/deactivating advisory tones

---

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key click:** Every key press is confirmed.
- ◆ **Acknowledge tones:**
  - **Confirmation tone** (ascending tone sequence): at the end of an entry/ setting and when an SMS or a new entry arrives in the answer machine list or call history
  - **Error tone** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone:** when scrolling at the end of a menu
- ◆ **Battery tone:** The batteries need to be charged.

In idle status:

 → Advisory Tones

▶ Change multiple line input:

Key Tones:

Select On or Off.

Confirm.:

Select On or Off.

Battery:

Select On, Off or In Call. The battery warning tone is only activated/deactivated and only sounds during a call.

▶ Save changes: (page 66).

You cannot deactivate the confirmation tone for placing the handset in the base station.

#### Please note:

You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 15).

## Setting the alarm clock

**Precondition:** The date and time have already been set (page 10).

### Activating/deactivating the alarm clock and setting the wake-up time



- ▶ Change multiple line input:

Activation:

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

Occurance:

Select Daily or Monday-Friday.

Volume:

Set the volume (1–6).

Melody:


Select melody.

- ▶ Save changes: (page 66).

The  icon is shown in the display.

A wake-up call with selected ringer tone (page 50) is signalled on the handset.

The wake-up call sounds for 60 seconds.

 is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off.

During a call, the wake-up call is signalled by a short tone.

### Deactivating the wake-up call/repeating after a pause (snooze mode)

**Precondition:** A wake-up call is sounding.

**OFF**

Press the display key. The wake-up call is deactivated.

or

**Snooze**

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Setting an appointment (calendar)

You can have your handset remind you of up to 30 appointments (volume and melody, see page 50).

### Saving an appointment

**Precondition:** The date and time have already been set (page 10).



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black.)

The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment.

<New Entry>

Select and press **OK**.

- ▶ Change multiple line input:

Appoint.:

Select On or Off.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digits format.

Notes:


Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

**Save**

Press the display key.



Press and **hold** (idle status).

The appointment is marked with  in the appointments list. The list of appointments is sorted by date.

## Handset settings

An appointment reminder is signalled with the selected ringer tone (page 50). The appointment reminder sounds for 60 seconds. The entered text, date and time are displayed.

During a call, the appointment reminder is signalled by a short tone.

## Managing appointments



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black in the calendar.)



Select appointment for the day.

### Options

Open menu  
Back with

You have the following options:

### View Entry

View selected appointment, open the **Options** menu for editing, deleting and activating/ deactivating.

### Edit Entry

Edit selected appointment.

### Delete Entry

Delete selected appointment.

### Activate / Deactivate

Activate/deactivate the selected appointment.

### Delete List

Delete **all** appointments.

## Deactivating or accepting an appointment reminder

**Precondition:** An appointment reminder is sounding.

### OFF

Press the display key to deactivate the appointment reminder.

Or:

### SMS

Press display key to accept the appointment reminder with an SMS.

## Displaying missed appointments and anniversaries

Missed appointments/anniversaries (page 23) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/ anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (page 24).

The most recent entry is at the head of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.** Pressing the display key will also open the **Missed Alarms** list.

To open the list from the menu:

→ **Missed Alarms**

Select appointment/anniversary.  
Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

### Delete

Delete appointment

### SMS

Write an SMS.



Press and **hold** (idle status).

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

## Using Bluetooth devices

Your Gigaset S68H handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register 1 Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or to exchange data with the computer (page 67).



In order to transfer phone numbers via Bluetooth connections, it is essential that area codes (international and local area codes) are saved on the phone (see page 57).

 
You will find a description of how to operate your Bluetooth devices in the user guides for these devices.


### Please note:

- You can only operate headsets on your handset that have the **headset profile**.
- It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialled from the headset.

## Activating/deactivating Bluetooth mode

 →  → Data Transfer → Bluetooth  
→ Activation

Press **OK** to activate or deactivate Bluetooth mode ( = activated).

In idle status, the  icon on the handset shows that Bluetooth mode is activated:




## Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

### Please note:

- If you register a headset, any headset that is already registered will be overwritten.
- If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please **deactivate** this connection before you start the registration process to the Gigaset.



 →  → Data Transfer → Bluetooth  
→ Search Headset / Search Data Device

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

**Options** Press the display key.

Trust Device Select and press **OK**.

  Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

The device is saved in the list of known devices.

## Cancelling/repeating current search

To cancel search:

**Cancel** Press the display key.

Repeat search if necessary:

**Options** Select and press **OK**.

Repeat Search



Select and press **OK**.




 
## Editing the list of known (trusted) devices

---

### Open list

 →  → Data Transfer → Bluetooth → Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

### Viewing entries

Open list →  (select entry)


**Options** Press the display key.

**View Entry** Select and press **OK**.  
Device name and address are displayed.  
Back with **OK**.

### Deregistering Bluetooth devices

Open list →  (select entry)

**Options** Press the display key.

**Delete Entry** Select and press **OK**.  
 Back: press and **hold** key.

#### Please note:


If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

### Changing the name of a Bluetooth device

Open list →  (select entry)

**Options** Press the display key.

**Rename** Select and press **OK**.

 Change name

**Save** Press the display key

 Back: Press and **hold** key.

## Rejecting/accepting an unregistered Bluetooth device


---

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

### ◆ Reject

**Go Back** Press the display key.

### ◆ Accept

 Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.

If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.


Once the PIN has been confirmed, save to the list of known devices:

- **Yes** Press the display key
- **No** Press the display key: use temporarily.


## Changing the Bluetooth name of the handset

---


You can change the handset name used to identify it on the display of another Bluetooth device.

 →  → Data Transfer → Bluetooth → Own Device Name

**Change** Press the display key

 Change name

**Save** Press the display key

 Back: Press and **hold** key.

## Setting your own area code






In order to transfer phone numbers (for example vCard), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already pre-set.

 →  → Handset → Area Codes

Check that the (pre)set area code is correct.

► Change multiple line input:

-  Select/change input field.
-  Navigate in the input field.
-  If necessary, delete number: press the display key.
-  Enter number.
-  Press the display key.

**Example:**

**Area Codes**

---

International code:  
00 - 49



Local area code:  
0 - [ 89 ]

 Save

## Restoring the handset to the factory settings

You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists and the handset's registration to the base station as well as the content of My stuff are retained.

 →  → Handset → Reset Handset

-  Press the display key.
-  Press and **hold** (idle status).

## Base station settings

The base station settings are carried out using a registered Gigaset S68H handset.

### Protecting against unauthorised access






Protect the system settings of the base station with a PIN known only by you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base station or when restoring the default settings.

### Changing the system PIN

You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only by you.

Gigaset S685: Setting a system PIN facilitates remote operation of the answer machine (page 41).

 →  → Base → System PIN

-  Enter the current system PIN and press **OK**.
-  Enter new system PIN. For security the PIN is shown as four stars (\*\*\*\*).
-   Jump to the next line, re-enter new system PIN and press **OK**.
-  Press and **hold** (idle status).

## Resetting the system PIN

---

If you have forgotten your system PIN you can reset the base station to the original code **0000**:

Disconnect the power cord from the base station. Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after a while.

The base has now been reset and the system PIN **0000** set.

### Please note:

All handsets are deregistered and must be re-registered.

## Changing ringer tones (Gigaset S685 only)



---

### ◆ Volume:

You can choose between five volumes and the "crescendo" ring, see page 50. Select "0" to deactivate the base station ringer tone.

### ◆ Ringer tones:

You can set a ringer tone melody for external calls, see page 50.

 
 →  → Base → Ringer Settings

For how to adjust the settings, see page 50.

## Activating/deactivating music on hold

---

 →  → Base → Music on hold



Press **OK** to activate or deactivate music on hold ( = on).

## Repeater support


---

With a repeater you can increase the range and reception strength of your base station. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

**Precondition:** A repeater is registered. Eco mode is disabled.

 →  → Base → Add. Features → Repeater Mode

**Yes** Press the display key.

When repeater mode is active, the menu item is marked with .

### Please note:

Repeater support and eco mode (see page 13) rule each other out, i.e. both functions cannot be used at the same time.



## Restoring the base station to the factory settings

---

 
When the settings are restored

- ◆ eco mode is disabled,
- ◆ handsets are still registered,
- ◆ the system PIN is not reset.

 →  → Base → Base Reset

  Enter the system PIN and press **OK**.

**Yes** Press the display key.

Cancel the restoring process by pressing  or the display key **No**.

 Press and **hold** (idle status)

## Connecting the base station to PABX

---

The following settings are only necessary when your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

### Dialling modes and recall

---



The current setting is indicated by .

#### Changing the dialling mode


---

The following dialling modes can be selected:

- ◆ Touch tone dialling (DTMF)
- ◆ Pulse dialling (DP)



 →  → Base → Add. Features  
→ Dialling Mode

 Select dialling mode ( = on) and press **OK**.


 Press and **hold** (idle status).

#### Setting recall

---

 →  → Base → Add. Features  
→ Recall



 Select flashing time ( = on) and press **OK**.


 Press and **hold** (idle status).

## Saving an access code (outside line code)

---

**Precondition:** You may have to enter an access code for external calls in your PABX, e.g. "0".

 →  → Base → Add. Features  
→ Access Code

 Enter or change access code, max. 3 digits.

▶ Save changes: (page 66).

If an access code has been saved,


- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, call history or answer machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers and SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **KC**.

## Setting pauses

---

### Changing pause after line seizure

---

You can change the length of pause that is inserted between pressing the talk key  and sending the number.



Open menu.



Press keys.



Enter digit for the pause length (**1** = 1 sec.; **2** = 3 sec.; **3** = 7 sec.) and press **OK**.

### Changing the pause after the recall key

---

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open menu.



Press keys.



Enter a digit for the length of the pause (**1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms) and press **OK**.

 
### Changing a dialling pause (pause after access code)

---

**Precondition:** You have saved an access code (page 59).




Open menu.



Press keys.



Enter a digit for the length of the pause (**1** = 1 sec.; **2** = 2 sec.; **3** = 3 sec.; **4** = 6 sec.) and press **OK**.

To insert a dialling pause: press  for 2 seconds. A P appears in the display.

## Switching temporarily to touch tone dialling (DTMF)

---

If your PABX still operates with pulse dialling (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call.

**Precondition:** You are conducting a call or have already dialled an external number.



Press the star key.

After the call is ended, pulse dialling is automatically activated again.

## Appendix

---

### Care

---

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

---

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Questions and answers


---

If you have any questions about using your phone, visit us at [www.gigaset.com/customercare](http://www.gigaset.com/customercare) at any time. The table below contains a list of common problems and possible solutions.

#### Registration or connection problems with a Bluetooth headset.

 
- ▶ Reset the Bluetooth headset (see the user guide for your headset).
- ▶ Delete registration data from the handset when deregistering the device (see page 56).
- ▶ Repeat the registration process (see page 55).

#### The display is blank.

1. The handset is not turned on.
  - ▶ Press **and hold** the end call key .
2. The battery is almost flat.
  - ▶ Charge or replace the batteries (page 8).


#### The keys of a handset do not respond when pressed.

The keypad lock is activated.

- ▶ Press and **hold** the hash key  (page 11).

#### "Base station x" flashes on the display.

1. The handset is outside the range of the base station.
  - ▶ Move the handset closer to the base station.
2. The base station's range is reduced because eco mode is activated.
  - ▶ Deactivate eco mode (page 13) or reduce the distance between the handset and the base station.
3. The handset has been deregistered.
  - ▶ Register the handset (page 43).
4. The base station is not turned on.
  - ▶ Check the base station's mains adapter (page 8).

<p><b>Base Search flashes in the display.</b></p> <p>The handset is set to Best Base and no base station is turned on or within range.</p> <ul style="list-style-type: none"> <li>▶ Move the handset closer to the base station.</li> <li>▶ Check the base station's mains adapter (page 8).</li> </ul>
<p><b>Handset does not ring.</b></p> <ol style="list-style-type: none"> <li>1. The ringer tone is deactivated.             <ul style="list-style-type: none"> <li>▶ Activate the ringer tone (page 51).</li> </ul> </li> <li>2. Call diversion set to All Calls.             <ul style="list-style-type: none"> <li>▶ Deactivate call diversion.</li> </ul> </li> </ol>
<p><b>You cannot hear a ringer/dialling tone from the fixed network.</b></p> <p>The phone cord supplied has not been used or has been replaced by a new cord with the wrong jack connections.</p> <ul style="list-style-type: none"> <li>▶ Please always use the phone cord supplied or ensure that the jack connections are correct when purchasing from a retailer (page 8).</li> </ul>
<p><b>Error tone sounds after system PIN prompt.</b></p> <p>You have entered the wrong system PIN.</p> <ul style="list-style-type: none"> <li>▶ Reset the system PIN to 0000 (page 58).</li> </ul>
<p><b>Forgetting the system PIN.</b></p> <ul style="list-style-type: none"> <li>▶ Reset the system PIN to 0000 (page 58).</li> </ul>
<p><b>Call charges are not displayed.</b></p> <ol style="list-style-type: none"> <li>1. Your network provider does not support this feature.</li> <li>2. There are no metering pulses.             <ul style="list-style-type: none"> <li>▶ Ask your network provider to transmit the metering pulses.</li> </ul> </li> </ol>
<p><b>The other party cannot hear you.</b></p> <p>You have pressed the  (INT) key. The handset is "muted".</p> <ul style="list-style-type: none"> <li>▶ Activate the microphone again (page 18).</li> </ul>
<p><b>The number of the caller is not displayed despite CLIP.</b></p> <p>Calling Line Identification is not enabled.</p> <ul style="list-style-type: none"> <li>▶ <b>The caller</b> should ask the network provider to release Calling Line Identification (CLI).</li> </ul>

<p><b>You hear an error tone when keying an input (a descending tone sequence).</b></p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"> <li>▶ Repeat the operation.             <ul style="list-style-type: none"> <li>Watch the display and refer to the user guide if necessary.</li> </ul> </li> </ul>
<p><b>You cannot listen to messages on the network mailbox.</b></p> <p>Your phone system is set for pulse dialling.</p> <ul style="list-style-type: none"> <li>▶ Set your phone system to touch tone dialling.</li> </ul>

**Gigaset S685 only:**

<p><b>No time is specified for a message in the call history.</b></p> <p>Date/time is not set.</p> <ul style="list-style-type: none"> <li>▶ Set the date/time (page 10).</li> </ul>
<p><b>The answer machine reports "PIN is incorrect" to the remote control.</b></p> <ol style="list-style-type: none"> <li>1. You have entered the wrong PIN             <ul style="list-style-type: none"> <li>▶ Enter the system PIN again</li> </ul> </li> <li>2. The system PIN is still set to 0000.             <ul style="list-style-type: none"> <li>▶ Change the system PIN (page 57).</li> </ul> </li> </ol>
<p><b>The answer machine is not recording any messages/has switched over to announcement.</b></p> <p>Its memory is full.</p> <ul style="list-style-type: none"> <li>▶ Delete old messages.</li> <li>▶ Play back new messages and delete.</li> </ul>

## Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi . . . . .	.97 12 62 23 800	Jordan . . . . .	00962 6 5625460/1/2
Argentina . . . . .	0800-888-9878	Kuwait . . . . .	00965-2464993
Australia . . . . .	1300 665 366	Latvia . . . . .	7 50 11 18
Austria .05 17 07 50 04 (0,065 Euro/Min.)		Lebanon. . . . .	00961-1236110
Bahrain . . . . .	.97 31 73 11 173	Luxembourg . . . . .	40 66 61 56 40
Belgium . . . . .	0 78 15 66 79	Malaysia. . . . .	.603 77124304
Bosnia Herzegovina . . . . .	.033 276 649	Malta . . . . .	+353 21 4940 632
Brazil. . . . .		Mexico . .01800 999 4442738 (01800 999 Gigaset)	
Grande Capitais e Regiões Metropolitanas: . . . . .	4003 3020	Netherlands . . . . .	.0900-3333102 (0,25 Euro/min.)
. . . . .	R\$ 0,14 (US\$ 0,069)	New Zealand . . . . .	08 00 27 43 63
Demais localidades: . . . . .	0800 888 3020	Norway . . . . .	22 70 84 00
. . . . .	R\$ 0,20 (US\$ 0,098)	Oman. . . . .	96 82 47 09 281
Bulgaria. . . . .	02 873 94 88	Poland . . . . .	0 801 140 160
Canada . . . . .	866 247 8758	Portugal . . . . .	(351) 808 781 223
China . . . . .	0 21 400 670 6007 (RMB 0.11)	Romania . . . . .	+4.021.529.7114.
Croatia . . . . .	01 / 2456 555 (0,23 Kn)	Russia. . . . .	8 (495) 228 1312
Czech Republic . . . . .	233 032 727	Serbia. . . . .	0800 222 111
Denmark . . . . .	35 25 86 00	Singapore . . . . .	6735 9100
Dubai . . . . .	.97 14 39 69 944	Slovak Republic . . . . .	02 59 68 22 66 (4,428 sk)
Egypt. . . . .	202 7623441	Slovenija . . . . .	0 14 74 63 36
Finland . . . . .	.09 23 11 34 25	South Africa. . . . .	08 60 10 11 57
France. . . . .	01 56 38 42 00 (Appel national)	Spain . . . . .	.902 103935
Germany. . . . .	.01805 333 222	Sweden . . . . .	.08 750 99 11
(0,14 Euro/Min. aus dem Festnetz der Deutschen Telekom.		Switzerland . . . . .	0848 212 000 (0,08 SFr./Min.)
Für Anrufe aus den Mobilfunknetzen können abweichende Preise gelten)		Taiwan . . . . .	02 266 24343
Greece . . . . .	801 1000 500 (0,026 Euro)	Thailand. . . . .	.02 722 1118
Hong Kong . . . . .	2763 0203	Turkey . . . . .	.0216 459 98 59
. . . . .	2389 7285	Ukraine . . . . .	+380-44-451-71-72
Hungary . . . . .	.06 14 71 24 44 (27 Ft)	United Arab Emirates . . . . .	0 43 66 03 86
India . . . . .	Please refer to your local warranty card	United Kingdom . . . . .	0 84 53 67 08 12
Ireland . . . . .	18 50 77 72 77	USA . . . . .	1-866 247-8758
Israel. . . . .	1 700 700 727	. . . . .	(toll free)
Italy. . . . .	199.15.11.15		

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.



## Authorisation

This device is intended for connection to analogue networks outside the EEA (with the exception of Switzerland) depending on national type approval.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

**CE 0682**

**Bluetooth  Qualified Design Identity**

The Bluetooth QD ID for your Gigaset S68H is: B012741.

## Specifications

### Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size:

AAA (Micro, HR03)

Voltage:

1.2 V

Capacity:

600 – 1200 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Sanyo NiMH 800
- ◆ GP 850 mAh
- ◆ Yuasa Technologies AAA 800

The device is supplied with two recommended batteries.

## Handset operating times/charging times

The operating time of your Gigaset depends on the age of the batteries and the way they are used. (All times are maximum possible times and apply only when the display backlight is deactivated.)

	Capacity (mAh) approx.			
	600	800	1000	1200
Standby time (hours)	130	180	220	265
Talktime (hours)	7	10	12	14
Operating time for 1.5 hour call each day (hours)	70	90	115	135
Charging time, charging cradle (hours)	6	9	11	13
Charging time, base station (hours)	5	7	8	10

At the time of going to print, batteries up to 900 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

[www.gigaset.com/customercare](http://www.gigaset.com/customercare)

## Base station power consumption

In standby mode: Gigaset S680: approx. 1.2 watt  
Gigaset S685: approx. 1.6 watt

During a call: Gigaset S680: approx. 1 watt  
Gigaset S685: approx. 1.5 watt

## General specifications



DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions in operation	+5 °C to +45 °C; 20% to 75% humidity
Dialling mode	DTMF (touch tone dialling)/ DP (pulse dialling)





## Notes on the user guide

This section explains the meaning of certain typographical conventions that are used in this user guide.

### Example of a menu input

The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.



 →  → Display

- ▶ With the handset in idle status, press on the **right** of the control key () to open the main menu.
- ▶ With the /  control key, select the  icon.



Settings appears in the display header.


- ▶ Press the display key **OK** to confirm the Settings function.

The Settings submenu is displayed.

- ▶ Press on the bottom of control key  repeatedly until the Display menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

Contrast    Select and press **OK**.

- ▶ Press on the bottom of control key  repeatedly until the Contrast menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

    Select contrast and press the display key **Save**.

- ▶ Press on the right or left of the control key to set the contrast.
- ▶ Press the display key **Save** to confirm the selection.



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

## Example of multiple line input

In many situations you can change settings or enter data in several lines of a display.

In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):



Date:

Enter the day, month and year in 8-digit format.

The second line is marked with [ ] to show it is active.

- ▶ Enter the date using the digit keys.

Time:

Enter hours/minutes in 4-digit format.

- ▶ Press the [ ] key.

The fourth line is marked with [ ] to show it is active.

- ▶ Enter the date using the digit keys.

- ▶ Save the changes.

- ▶ Press the display key **Save**.
- ▶ Then press and **hold** the [ ] key. The handset switches to idle status.

## Writing and editing text

The following rules apply when writing a text:

- ◆ Control the cursor with [ ] [ ] [ ] [ ] .
- ◆ Characters are inserted on the left of the cursor.
- ◆ Press the star key [ \* ] to show the table of special characters. Select the required character, press the display key **Insert** to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Writing an SMS/name (without predictive text)

Press the relevant key several times to enter letters/characters.

### Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 [ ]	[ ] <sup>1)</sup>	[ ] <sup>2)</sup>	1							
2 [ ]	a	b	c	2	ä	á	à	â	ã	ç
3 [ ]	d	e	f	3	ë	é	è	ê		
4 [ ]	g	h	i	4	ï	í	ì	î		
5 [ ]	j	k	l	5						
6 [ ]	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 [ ]	p	q	r	s	7	ß				
8 [ ]	t	u	v	8	ü	ú	ù	û		
9 [ ]	w	x	y	9	ÿ	ý	æ	ø	å	
0 [ ]	.	,	?	!	0					

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

### Setting upper/lower case or digits

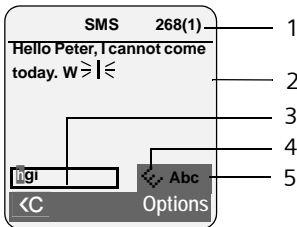
Press the hash key **[#↔]** **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key **[#↔]** **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.

### Writing SMS (with predictive text)

EATONI predictive text helps you when you are writing SMS messages.

Each key between **[0+]** and **[9جذذ]** is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel.



- 1 Remaining number of characters, in brackets: SMS part 1-n
- 2 SMS text
- 3 Selection line
- 4 EATONI is activated
- 5 Upper/lower case or digits

If this letter is the one you want, confirm it by pressing the next key. If it does not match the one you want, press the hash key **[#↔]** **briefly** until the letter you are looking for is reverse highlighted in the

display line and then transferred to the text field.

If you press and **hold** the hash key **[#↔]** you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

### Deactivating/activating predictive text

**Precondition:** You are writing an SMS.

**Options** Press the display key.

#### Predictive Text

Select and press **OK** **[✓]** = on).



Press the end call key **briefly** to return to the text field.

Enter the text.

## Additional functions via the PC interface

You can connect the handset to your computer using Bluetooth (page 55). The computer must be equipped with a suitable dongle.

Your handset can communicate with the computer via the "**Gigaset QuickSync**" program (free download at [www.gigaset.com/qigasetS680](http://www.gigaset.com/qigasetS680)).

You can

- ◆ synchronise your handset's directory with Outlook,
- ◆ download photos (.bmp) from the computer to the handset,
- ◆ download pictures (.bmp) as screen-saver from the computer to the handset.

During the transfer of data between handset and PC, you will see **[↔]** on the display. During this time the keypad is disabled, and incoming calls will be ignored.

## Accessories

---

### Gigaset Handsets

Upgrade your Gigaset to a cordless PABX:

#### Gigaset handset S68H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor

[www.gigaset.com/qigasetS68H](http://www.gigaset.com/qigasetS68H)



#### Gigaset Handset SL37H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walky-talky function

[www.gigaset.com/qigasetSL37H](http://www.gigaset.com/qigasetSL37H)



### Gigaset Handset SL56

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Voice dialling
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth

[www.gigaset.com/gigasetSL56](http://www.gigaset.com/gigasetSL56)



### Gigaset C47H handset

- ◆ Illuminated graphical colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

[www.gigaset.com/gigasetC47H](http://www.gigaset.com/gigasetC47H)



### Gigaset Handset E45

- ◆ Dust and splashproof casing
- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

[www.gigaset.com/gigasete45](http://www.gigaset.com/gigasete45)



## Accessories

### Gigaset repeater

The Gigaset repeater can be used to increase the reception range of your Gigaset handset to the base station.

[www.gigaset.com/gigasetrepeater](http://www.gigaset.com/gigasetrepeater)



### Gigaset HC450 – door intercom for cordless phones

- ◆ Use the intercom from your cordless phone – no need for a fixed home phone
- ◆ Intuitive user functions using the softkeys (open door, switch on entry light)
- ◆ Simple to configure using the handset menu
- ◆ Divert to outside phone numbers (intercom feature)
- ◆ Simple to install and register with the Gigaset system
- ◆ Replaces existing call button – no further cable is needed
- ◆ Supports the existing doorbell and standard door opener
- ◆ Configuration options for the second ringer key (separate intercom call, activating interior lighting, or function such as first ringer key)

[www.gigaset.com/GigasetHC450](http://www.gigaset.com/GigasetHC450)



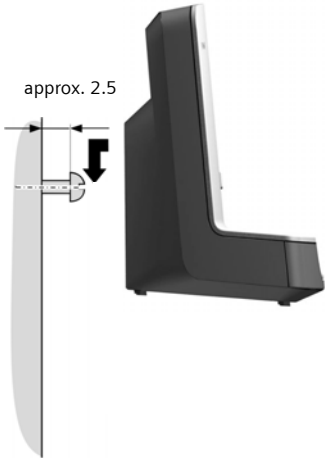
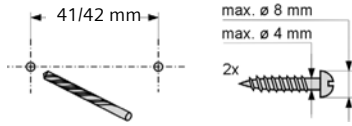
All accessories and batteries are available from your phone retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

# Wall-mounting the base station

---





# Index

---

## A

- Access code
  - for a PABX . . . . . 59
- Access protection . . . . . 57
- Accessories . . . . . 68
- Acknowledge tones . . . . . 52
- Activating
  - advisory tones . . . . . 52
  - answer machine . . . . . 36
  - answer machine
    - (remote operation) . . . . . 41
  - appointment . . . . . 53
  - Bluetooth mode . . . . . 55
  - call acceptance . . . . . 49
  - handset . . . . . 11
  - internal listening in . . . . . 45
  - keypad lock . . . . . 11
  - muting ringer tone . . . . . 34
  - room monitor . . . . . 47
  - two-way recording . . . . . 39
- Advisory tones . . . . . 52
- Alarm clock . . . . . 53
- Alert tone . . . . . 51
- Anniversary . . . . . 23
  - deactivating . . . . . 23
  - missed . . . . . 23, 54
  - saving in directory . . . . . 23
- Announcement
  - (answer machine) . . . . . 37
- Announcement mode
  - (answer machine) . . . . . 36, 37
- Answer machine . . . . . 36
  - activating/deactivating . . . . . 36
  - deleting messages . . . . . 38
  - playing back messages . . . . . 38
  - recording a personal
    - announcement/announce only . 36
  - remote operation . . . . . 41
  - scrolling back . . . . . 38
  - scrolling forward . . . . . 38
- Answer machine list . . . . . 24, 26
- Answer machine, see also
  - Network mailbox
- Appointment . . . . . 53, 54

- Appointment/anniversary
  - display missed . . . . . 54
- Appointments
  - activating/deactivating . . . . . 54
  - deleting . . . . . 54
  - managing . . . . . 54
- Area code
  - setting own dialling code . . . . . 57
- Assigning a key . . . . . 47
- Assigning numerical keys . . . . . 47
- Authorisation . . . . . 64
- Automatic
  - call acceptance . . . . . 16, 49
  - last number redial . . . . . 24
  - network provider preselection . . . 26

## B

- Base station
    - changing . . . . . 44
    - connecting . . . . . 8
    - connecting and installing . . . . . 7
    - connecting to PABX . . . . . 59
    - range . . . . . 8
    - restoring to factory settings . . . . . 58
    - setting . . . . . 57
    - system PIN . . . . . 57, 58
  - Battery
    - charging . . . . . 1, 10
    - display . . . . . 1, 10
    - fitting . . . . . 8
    - icon . . . . . 1, 10
    - recommended batteries . . . . . 64
    - tone . . . . . 52
  - Beep, see Advisory tones
  - Best base station . . . . . 44
  - Birthday, see Anniversary
  - Bluetooth
    - accepting a call . . . . . 16
    - changing device name . . . . . 56
    - deregistering devices . . . . . 56
    - list of known devices . . . . . 56
    - registering devices . . . . . 55
    - transferring directory (vCard) . . . . 22
  - Bluetooth connection
    - setting own area code . . . . . 57
- ## C
- Calendar . . . . . 53

- Call
    - accepting . . . . . 16
    - accepting (Bluetooth) . . . . . 16
    - ending . . . . . 16
    - external . . . . . 16
    - internal . . . . . 44
    - party listening in . . . . . 45
    - picking up from answer machine . . . 39
    - transferring (connect) . . . . . 44, 46
    - two-way recording . . . . . 39
  - Call acceptance . . . . . 40, 49
  - Call duration . . . . . 16
  - Call history . . . . . 25
  - Call screening during recording . . . . 39
  - Call waiting
    - internal call . . . . . 45
  - Call-by-call . . . . . 20
    - numbers . . . . . 20, 26
  - Call-by-call list
    - key . . . . . 1
  - Calling Line Identification . . . . . 17
  - Care of the telephone . . . . . 61
  - Changing
    - destination number . . . . . 47
    - device name (Bluetooth) . . . . . 56
    - dialling mode . . . . . 59
    - display language . . . . . 48
    - earpiece volume . . . . . 50
    - handsfree volume . . . . . 50
    - internal number of a handset . . . . 46
    - name of a handset . . . . . 46
    - pause time . . . . . 60
    - ringer tone . . . . . 50
    - system PIN . . . . . 57, 58
  - Character set . . . . . 30, 32
  - Charge saving function (remote operation) . . . . . 40
  - Charge status display . . . . . 1
  - CLI, CLIP . . . . . 17
  - CLIP picture . . . . . 17, 20, 51
  - CNIP . . . . . 17
  - Configuring the network mailbox . . . 42
  - Confirmation tone . . . . . 52
  - Connecting, base station to PABX . . . 59
  - Consultation call (internal) . . . . . 45
  - Control key . . . . . 1, 11
  - Correcting incorrect entries . . . . . 13
  - Customer Care . . . . . 63
- D**
- Deactivating
    - advisory tones . . . . . 52
    - answer machine . . . . . 36
    - appointment . . . . . 53
    - appointment reminder . . . . . 54
    - call acceptance . . . . . 49
    - handset . . . . . 11
    - internal listening in . . . . . 45
    - keypad lock . . . . . 11
    - muting ringer tone . . . . . 34
    - preselection . . . . . 27
    - room monitor . . . . . 47
    - two-way recording . . . . . 39
  - Delete key . . . . . 12
  - Deleting
    - announcement for answer machine . . . . . 37
    - characters . . . . . 13
    - message . . . . . 38
  - Deregistering (handset) . . . . . 44
  - Deregistering devices (Bluetooth) . . . 56
  - Destination number (room monitor) . . 47
  - Dialling
    - call-by-call list . . . . . 21
    - directory . . . . . 21
    - mode . . . . . 59
    - quick dial . . . . . 47
    - with quick dial . . . . . 22
  - Dialling pause . . . . . 60
    - entering . . . . . 1
  - Directory . . . . . 20
    - copying number from text . . . . . 23
    - managing entries . . . . . 21
    - opening . . . . . 11
    - order of entries . . . . . 21
    - saving anniversary . . . . . 23
    - saving entry . . . . . 20
    - saving the sender's number (SMS) . . . . . 31
    - sending entry/list to handset . . . . 22
    - transferring a vCard (Bluetooth) . . . 22
    - using to enter numbers . . . . . 23
  - Display
    - backlight . . . . . 49
    - changing display language . . . . . 48
    - contrast . . . . . 48
    - in idle status . . . . . 12
    - memory (directory/call-by-call) . . . 22

## Index

memory (My stuff) . . . . .	52
missed appointments/ anniversaries . . . . .	54
name (CNIP) . . . . .	17
network mailbox report. . . . .	42
number (CLI/CLIP) . . . . .	17
screensaver . . . . .	49
setting . . . . .	48
wrong language . . . . .	48
Display keys . . . . .	1, 12
assigning . . . . .	47
DP (pulse dialling) . . . . .	59
Draft message list (SMS). . . . .	29

## E

Earpiece mode . . . . .	18
Earpiece volume . . . . .	50
EATONI (predictive text) . . . . .	67
Eco mode . . . . .	13
E-mail address . . . . .	30
copying from the directory . . . . .	23
End call key . . . . .	1, 16
Ending, call . . . . .	16
Ending, see deactivate	
Entry . . . . .	
saving, changing (preselection) . . . . .	27
selecting (menu) . . . . .	65
selecting from directory . . . . .	21
Error tone . . . . .	52
Example . . . . .	
menu input . . . . .	65
multiple line input . . . . .	66
External call . . . . .	
diverting to answer machine . . . . .	39

## F

Fast access . . . . .	
answer machine . . . . .	40
network mailbox. . . . .	42
Fax (SMS) . . . . .	30

## G

Group call . . . . .	44
----------------------	----

## H

Handset . . . . .	
activating/deactivating . . . . .	11
advisory tones . . . . .	52
changing internal number. . . . .	46
changing name . . . . .	46
changing the number . . . . .	46

changing to a different base station . . . . .	44
changing to best reception. . . . .	44
contact with liquid . . . . .	61
deregistering . . . . .	43, 44
display backlight . . . . .	49
display language . . . . .	48
earpiece volume . . . . .	50
handsfree volume . . . . .	50
idle status . . . . .	12
list . . . . .	11
locating. . . . .	44
muting . . . . .	18
paging . . . . .	44
registering. . . . .	43
registering to a different base station . . . . .	44
restoring to factory settings . . . . .	57
screensaver . . . . .	49
setting . . . . .	47
setting up . . . . .	8
signal strength. . . . .	8
transferring a call. . . . .	44
using room monitor . . . . .	46
using several . . . . .	43
Handset operating time . . . . .	
in room monitor mode. . . . .	46
Handsfree key . . . . .	1
Handsfree talking . . . . .	18
Hash key. . . . .	1, 11
Headset socket . . . . .	10
Hearing aids . . . . .	5
Hold music . . . . .	18, 58
setting . . . . .	58

## I

Icon . . . . .	
alarm clock . . . . .	53
answer machine . . . . .	36
battery . . . . .	10
display . . . . .	12
for new messages . . . . .	24
keypad lock . . . . .	11
new message . . . . .	38
new SMS . . . . .	31
ringer tone . . . . .	51
Idle status (display) . . . . .	12
Idle status, returning to. . . . .	12
Incoming message list (SMS) . . . . .	30, 31
Incorrect input (correction) . . . . .	13

- Input language (SMS) . . . . . 29
- Installation, base station . . . . . 7
- Internal
  - consulting . . . . . 45
  - listening in . . . . . 45
  - making calls . . . . . 44
- Internal call . . . . . 44
  - call waiting . . . . . 45
- K**
- Key 1 (fast access) . . . . . 1, 40
- Keypad lock . . . . . 11
- Keys
  - call-by-call list . . . . . 1
  - control key . . . . . 1, 11
  - delete key . . . . . 12
  - display keys . . . . . 1, 12
  - end call key . . . . . 1, 16
  - fast access . . . . . 1, 40
  - handsfree key . . . . . 1
  - hash key . . . . . 1, 11
  - message key . . . . . 1
  - on/off key . . . . . 1
  - quick dial . . . . . 22
  - recall key . . . . . 1
  - star key . . . . . 1
  - talk key . . . . . 1, 16
- L**
- Language, display . . . . . 48
- Last number redial . . . . . 24
- Linking, see SMS
- Liquid . . . . . 61
- List . . . . . 20
  - answer machine . . . . . 24, 26
  - call history . . . . . 25
  - call-by-call list . . . . . 20
  - handsets . . . . . 11
  - known devices (Bluetooth) . . . . . 56
  - missed calls . . . . . 25
  - network mailbox . . . . . 25
  - SMS draft message list . . . . . 29
  - SMS incoming message list . . . . . 31
  - SMS list . . . . . 25
- Listening in to call . . . . . 45
- Locating, handset . . . . . 44
- Lock
  - activating/deactivating keypad protection . . . . . 11
- M**
- Mailbox ID, see SMS
- Mailboxes, see SMS
- Mains adapter . . . . . 5
- Making calls
  - accepting a call . . . . . 16
  - external . . . . . 16
  - internal . . . . . 44
- Making cost-effective calls . . . . . 26
- Manual last number redial . . . . . 24
- Medical appliances . . . . . 5
- Memory
  - directory/call-by-call . . . . . 22
  - My stuff . . . . . 52
- Menu
  - end tone . . . . . 52
  - menu guidance . . . . . 12
  - menu input . . . . . 65
  - opening . . . . . 11
  - overview . . . . . 14
- Message key
  - open list . . . . . 31
  - opening lists . . . . . 24
- Messages . . . . . 36
  - deleting . . . . . 38
  - key . . . . . 1
  - marking as "new" . . . . . 38
  - new message icon . . . . . 38
  - playing back . . . . . 38
- Microphone . . . . . 1
- Missed
  - anniversary . . . . . 54
  - appointment . . . . . 54
  - calls . . . . . 25
- Multiple line input . . . . . 66
- Muting
  - first ring . . . . . 34
  - handset . . . . . 18
- My stuff . . . . . 51
- N**
- Name
  - displaying caller's name (CNIP) . . . . 17
  - of a handset . . . . . 46
- Network provider (numbers list) . . . . 20
- Network provider preselection,
  - automatic . . . . . 26
- Network services . . . . . 19
- Notification by SMS . . . . . 32

## Index

### Number

- as destination for room monitor . . . 47
- copying from an SMS text . . . . . 32
- copying from directory . . . . . 23
- copying to directory . . . . . 23
- displaying caller's number (CLIP) . . . 17
- entering with directory . . . . . 23
- saving in the directory. . . . . 20

### Numbers list

- network provider . . . . . 20

### O

- On/Off key . . . . . 1
- Order in directory. . . . . 21
- Outside line code. . . . . 59

### P

#### PABX

- connecting base station . . . . . 59
- pauses . . . . . 60
- saving access code . . . . . 59
- setting dialling mode . . . . . 59
- setting recall. . . . . 59
- SMS . . . . . 34
- switch to touch tone dialling . . . . . 60

- Pack contents . . . . . 7

- Paging. . . . . 44

- Pause . . . . . 60

- PC interface . . . . . 67

- Phone jack assignment. . . . . 8

#### Picture

- deleting . . . . . 52
- renaming . . . . . 52

- Picture CLIP . . . . . 20, 51

#### PIN change

- system PIN . . . . . 57, 58

#### Playing back

- announcement (answer machine) . . . . . 37
- message (answer machine). . . . . 38

- Power consumption . . . . . 65

- Predictive text . . . . . 67

- Preselection . . . . . 26

- deactivating . . . . . 27

#### Protecting the phone against

- access . . . . . 57

- Pulse dialling . . . . . 59

### Q

- Questions and answers . . . . . 61

- Quick dial . . . . . 20, 47

### R

- Range. . . . . 8

- Recall . . . . . 59

- Recall key . . . . . 1

- pause after . . . . . 60

#### Reception booster, see Repeater

#### Recording

- quality. . . . . 40

- time . . . . . 40

- two-way recording. . . . . 39

- Registering (handset) . . . . . 43

- Registering devices (Bluetooth) . . . . 55

- Reminder call . . . . . 23

- Remote operation . . . . . 41

- Repeater . . . . . 58

#### Ringer tone

- changing. . . . . 50

- muting . . . . . 34

- setting melody. . . . . 58

- setting volume . . . . . 50, 58

- Room monitor. . . . . 46

### S

- Saving (access code) . . . . . 59

- Screensaver . . . . . 49

- Searching in directory . . . . . 21

#### Sending

- directory entry to handset . . . . . 22

- Sensitivity (room monitor). . . . . 47

- Service . . . . . 63

#### Setting

- date . . . . . 10

- melody . . . . . 58

- screensaver . . . . . 49

- time . . . . . 10

#### Setting up

- handset. . . . . 8

- Shortcut . . . . . 14

- Signal strength . . . . . 8

- SMS . . . . . 28

- active send service centre . . . . . 28

- changing mailbox . . . . . 33

- deleting. . . . . 30

- draft message list . . . . . 29

- forwarding . . . . . 31

- incoming message list . . . . . 31
  - input language . . . . . 29
  - linked . . . . . 28
  - mailbox ID . . . . . 32
  - mailboxes . . . . . 32
  - notification by SMS . . . . . 32
  - notification number . . . . . 32
  - notification type . . . . . 32
  - PIN protection . . . . . 33
  - reading . . . . . 30
  - receiving . . . . . 30
  - registration wizard . . . . . 28
  - replying to and forwarding . . . . . 31
  - rules . . . . . 28
  - saving number . . . . . 31
  - self help with error messages . . . . . 35
  - sending as a fax . . . . . 30
  - sending to a personal mailbox . . . . . 33
  - sending to an e-mail address . . . . . 30
  - status report . . . . . 29
  - to a PABX . . . . . 34
  - troubleshooting . . . . . 35
  - writing . . . . . 28, 66
  - SMS centre
    - changing number . . . . . 33
    - setting . . . . . 33
  - SMS list . . . . . 25
  - Snooze mode . . . . . 53
  - Sound, see Ringer tone
  - Special functions . . . . . 59
  - Specifications . . . . . 64
  - Star key . . . . . 1
  - System settings . . . . . 57
- T**
- Talk key . . . . . 1, 16
  - Text message, see SMS
  - Touch tone dialling . . . . . 59, 60
  - Troubleshooting . . . . . 61
  - Troubleshooting (SMS) . . . . . 35
- U**
- Unknown . . . . . 17
  - Unknown caller . . . . . 17
- V**
- Viewing the network mailbox report . . 42
  - VIP (directory entry) . . . . . 21
- Volume**
- earpiece . . . . . 50
  - earpiece volume . . . . . 50
  - handset handsfree volume . . . . . 50
  - loudspeaker . . . . . 50
  - ringer tone . . . . . 50, 58
  - setting . . . . . 50
- W**
- Warning tone, see Advisory tones
  - Writing (SMS) . . . . . 28
  - Writing, editing text . . . . . 66