

SIEMENS



Gigaset S680 - S685

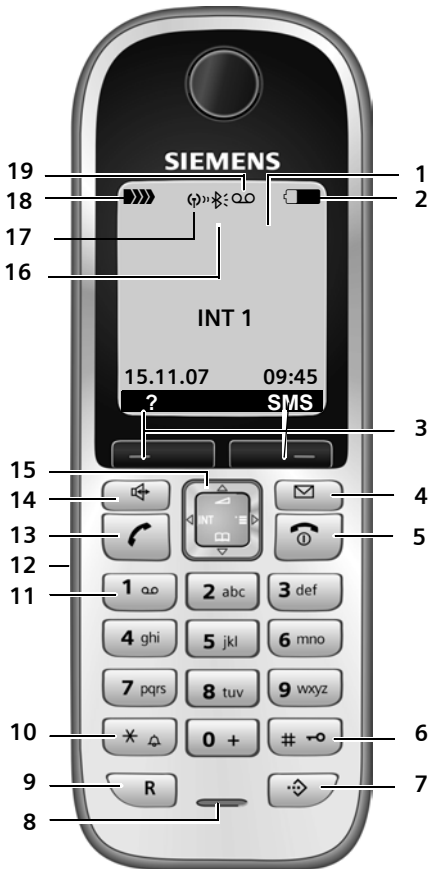
Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG

 
 
 
© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com

 
 
Gigaset

Handset at a glance



- 1 **Display** (screen) in idle status
- 2 **Charge status of the batteries**
 (flat to full)
 flashes: batteries almost flat
 flashes: batteries charging
- 3 **Display keys** (page 11)



- 4 **Message key**
Access to calls and message lists;
Flashes: new message or new call
- 5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
Keypad lock on/off (press and hold in idle status),
Toggle between upper/lower case and digits (press and hold)
- 7 **Call-by-call list key**
Open call-by-call list
- 8 **Microphone**
- 9 **Recall key**
- Confer (flash)
- Insert a dialling pause (press and hold)
- 10 **Star key**
Ring tones on/off (press and hold);
During a call: switch from pulse dialling to touch tone dialling (press briefly)
Open special characters table
- 11 **Key 1**
Dial answer machine (S685 only)/network mailbox (press and hold)
- 12 **Connection socket** for headset
- 13 **Talk key**
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
When writing an SMS: send SMS
- 14 **Handsfree key**
Switch between earpiece and handsfree mode;
Lights up: handsfree activated;
Flashes: incoming call
- 15 **Control key** (page 11)
- 16 **Bluetooth** activated (page 55)
- 17 **Eco mode** activated (page 13)
- 18 **Signal strength**
 (high to low)
 flashes: no reception
- 19 **Answer machine icon** (S685 only)
Answer machine switched on;
Flashes: answer machine is recording a message or is being operated by another internal party

Gigaset contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

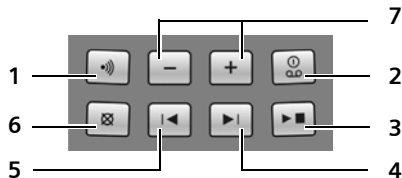
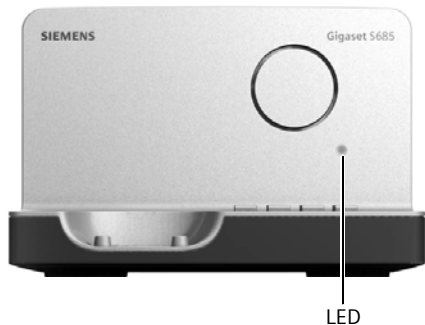
Service Centre UK: 08453 6708 12
(local call cost charge)

Please have your proof of purchase ready when calling.

The base station at a glance

You can use the keys on the base station to register handsets to the base station, search for handsets ("Paging", see page 44) and operate the integrated answer machine (Gigaset S685 only).

Base station Gigaset S685



- 1 Registration/paging key
Press briefly: search for handsets "Paging", see page 44.
Press and hold: register handsets and DECT devices, see page 43.
- 2 On/Off key: activate/deactivate answer machine.
LED lights up: answer machine is activated.
LED flashes: at least one new message is present.

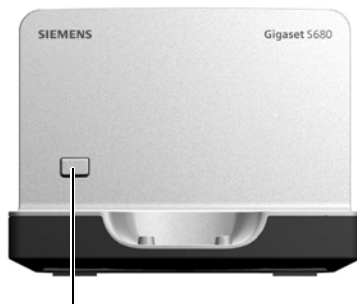
During message playback:

- 3 Play/stop key:
Play back new messages from the answer machine or cancel the playback (press briefly).
Play back new and old messages (press and hold).
- 4 Skip to next message (press once) or next message but one (press twice).
- 5 Skip back to beginning of message (press once) or to previous message (press twice).
- 6 Delete current message.
- 7 Adjust volume during message playback:
[-] = quieter; [+] = louder.
While an external call is being signalled: adjust ringer melody volume.

Please note:

- ◆ If the answer machine is being operated from a handset or if it is recording a message, it cannot be operated from the base station.
- ◆ If the LED flashes although the answer machine is switched off, it means that there is still at least one new message that has not been played back yet.

Base station Gigaset S680



- Registration/paging key:
- Press briefly: search for handsets "Paging", see page 44.
 - Press and hold: register handsets and DECT devices, see page 43.

Contents

Handset at a glance	1
Gigaset contact numbers:	1
The base station at a glance	2
Safety precautions	5
Gigaset S680/S685 – More than just a telephone	7
First steps	7
Pack contents	7
Installing the base station and charging cradle	7
Setting up the handset for use	8
Operating the handset	11
Control key	11
Display keys	11
Reverting to idle status	12
Menu guidance	12
Correcting incorrect entries	13
ECO DECT	13
Menu tree	14
Making calls	17
Making an external call	17
Ending a call	17
Accepting a call	17
Calling Line Identification	17
Handsfree talking	18
Muting	18
Making calls easily using network services	19
Setting functions for the next call ...	19
Setting functions for all subsequent calls	19
Functions during a call	20
Functions after a call	20
Using the directory and lists ...	21
Directory/call-by-call list	21
Last number redial list	25
Opening lists with the message key	25
Making cost-effective calls	27
Linking call-by-call numbers with one number	27
Automatic network provider preselection (Preselection)	27
SMS (text messages)	29
Writing/sending an SMS	29
Receiving an SMS	31
Notification by SMS	32
SMS mailboxes	33
Setting SMS centres	34
SMS on a PABX	34
Activating/deactivating the SMS function	34
SMS troubleshooting	35
Operating the answer machine of the Gigaset S685 base station	36
Operation via the handset	36
Activating/deactivating call screening	39
Setting up the answer machine	40
Resetting fast access for the answer machine using key 1	40
Operating when on the move (remote control)	41
Using the network mailbox ...	42
Configuring fast access for the network mailbox	42
Viewing the network mailbox report	42
Using several handsets	43
Registering handsets	43
Deregistering handsets	44
Locating a handset ("paging")	44
Changing the base station	44
Making internal calls	44
Listening in to an external call	45
Changing the name of a handset	46
Changing a handset's internal number	46
Using a handset as a room monitor	46
Handset settings	47
Shortcuts for functions and numbers	47

Contents

Changing the display language	48	Authorisation	63
Setting the display	48	Guarantee Certificate	
Setting the screensaver	49	United Kingdom	63
Setting the display backlight	49	Specifications	64
Activating/deactivating		Notes on the user guide	65
auto answer	49	Example of a menu input	65
Changing the handsfree/		Example of multiple line input	65
earpiece volume	49	Writing and editing text	66
Changing ring tones	50	Additional functions via the	
Resource Directory	51	PC interface	67
Activating/deactivating		Accessories	68
advisory tones	52	Wall-mounting the	
Setting the alarm clock	52	base station	70
Setting an appointment		Index	71
(calendar)	53		
Displaying missed appointments			
and anniversaries	54		
Using Bluetooth devices	54		
Setting your own area code	56		
Restoring the handset to the			
factory settings	56		
Base station settings	57		
Protecting against unauthorised			
access	57		
Changing ring tones			
(Gigaset S685 only)	57		
Activating/deactivating			
music on hold	57		
Repeater support	58		
Restoring the base station to			
the factory settings	58		
Connecting the base station			
to PABX	59		
Dialling modes and recall	59		
Saving an access code			
(outside line code)	59		
Setting pauses	59		
Changing the pause after the recall key .			
60			
Switching temporarily to touch			
tone dialling (DTMF)	60		
Appendix	61		
Care	61		
Contact with liquid	61		
Questions and answers	61		
Service (Customer Care)	62		

Safety precautions

Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Fit only the **recommended, rechargeable batteries** (page 64), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 61).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

Safety precautions



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Please note:

Not all of the functions described in this manual are available in all countries.

Gigaset S680/S685 – More than just a telephone

Your phone, which has a clearly laid out colour display (65K colours) doesn't just offer you the option of sending and receiving SMS messages via the fixed network and of saving up to 250 phone numbers and e-mail addresses (page 21) – it can do much more besides:

- ◆ You can reduce the transmission power by activating the eco mode (page 13).
- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 47).
- ◆ You can easily make calls using network services (page 19).
- ◆ You can designate important people as VIPs so you can tell important calls by the ringer melody (page 22).
- ◆ You can assign pictures to your contacts. You can then tell who is calling you from the picture on your handset's display.
Precondition: Calling Line Identification (CLIP, page 17).
- ◆ You can save appointments (page 53) and anniversaries (page 24) on your phone and it will remind you of them in advance.
- ◆ You can use Bluetooth™ for wireless communication with other devices that also use this technology (see page 54). Bluetooth™ can be used for
 - headsets (page 10)
 - exchanging directory entries with your mobile phone (page 23)
 - downloading photos (.bmp) to visualise the caller (page 67)
 - exchanging directories with Outlook using Gigaset QuickSync (page 67)
- ◆ **Enjoy using your new telephone!**

First steps

Pack contents

- ◆ one Gigaset S680/S685 base station with mains adapter,
- ◆ one Gigaset S68H handset,
- ◆ one phone cord,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

Installing the base station and charging cradle

The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

You can find instructions on how to mount the base station on the wall at the end of this user guide.

Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Range and reception strength

Range:

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

The range is reduced when eco mode is activated (see page 13).

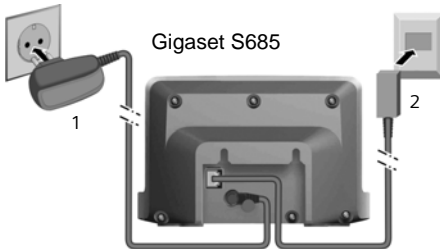
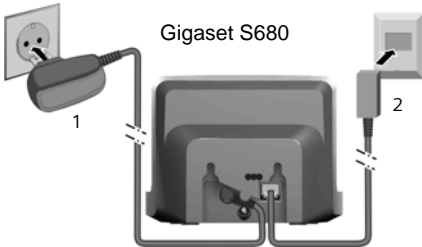
Reception strength:

The display shows the quality of the radio range between the base station and handset:

- ◆ Good to poor: ▣▣▣ ▣▣▣ ▣▣▣ ▣▣▣
- ◆ No reception: ▣▣▣ flashes

Connecting the base station

- ▶ **First** connect the power supply unit and **then** the phone jack as shown below and place the cables in the cable recesses.



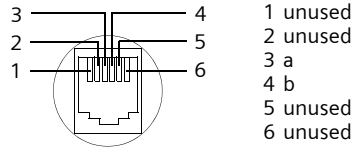
- 1 Mains adapter 230 V
- 2 Phone jack with phone cord

Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.

- ◆ Only use the mains adapter and phone cord **supplied**.
- ◆ If you buy a replacement phone cord, make sure that the phone jack has the correct type of wiring.

Correct phone jack assignment



Setting up the handset for use



The display is protected by a plastic film.
Please remove the protective film!

Inserting the batteries

Warning:

Use only the rechargeable batteries recommended by Gigaset Communications GmbH * (page 64). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

* Gigaset Communications GmbH is a trademark licensee of Siemens AG.

- ▶ Insert the batteries the right way round (see figure).

The polarity is indicated in/on the battery compartment.



Closing the battery cover

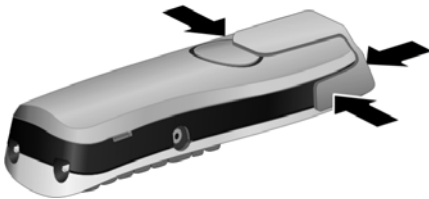
- ▶ First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.
- ▶ Then press the cover until it clicks into place.



Attaching the belt clip

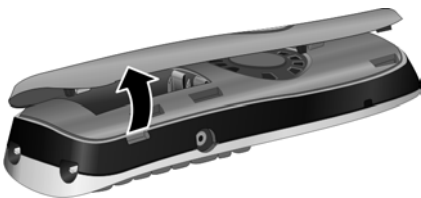
There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.



Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Place your fingertip in the cavity in the casing and lift the battery cover upwards.



Placing the handset in the base station and registering

- ▶ Place the handset in the base station with its **display facing upwards**.

The handset registers automatically. Registration can take up to 5 minutes. During this time *Regstr.Procedure* appears in the display and the name of the base station flashes, e.g. Base 1. The handset will be assigned the lowest unassigned internal number (1–6).

This will appear in the display when registration is complete, e.g. INT 1. This means that the number 1 has been assigned. If the internal numbers 1–6 are already assigned to other devices, the number 6 is overwritten.

Please note:

- Automatic registration is only possible while no one is making calls using the base station.
- Each key press interrupts the automatic registration.
- If automatic registration does not work the handset will have to be registered manually (page 43).
- You can change the name of the handset (page 46).

To charge the batteries, leave the handset in the base station.

Please note:

- If the handset has turned itself off because the batteries are flat and if it is then placed in the charging cradle, it will turn itself on automatically.
- Only place the handset in the base station or charging cradle that is intended for it.


For questions and problems see page 61.

Headset socket

You can connect various headset types (with 2.5 mm jack connector), including: HAMA Plantronics M40, MX100 and MX150.

You can access a list of headsets that have been tested for compatibility on the Internet at www.plantronics.com/productfinder.

Initial charging and discharging of batteries

If the handset is activated, the flashing battery icon  in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the base station or charging cradle **continuously** for **seven** hours. Your handset need not be turned on for it to charge.
- ▶ Afterwards, remove the handset from the base station and do not put it back again until the batteries are fully discharged.

Please note:

After the first battery charge **and** discharge you may replace your handset in its base station after every call.

Please note:



- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

The date and time must be set in order to, for example, have the correct time for incoming calls and be able to use the alarm clock and calendar.

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field with:

 →  → Date/Time

- ▶ Change multiple line input:

Date:

Enter the day, month and year in 8-digit format.


Time:

Enter hours and minutes as 4 digits, e.g.     for 07:15 a.m.

Save

Press the display key

Display in idle status

Once the phone is registered and the time set, the idle display is as shown here (example). If the answer machine is activated, the answer machine icon  will also be displayed in the header:




Your answer machine is set with a standard announcement.

Your phone is now ready for use.


If you have any queries about using your phone, please read the tips on troubleshooting ("Questions and Answers", page 61) or contact our customer service department (Customer Care, page 62).

 
Operating the handset

Activating/deactivating the handset

-  In idle status, press and hold the end call key (confirmation tone).

Activating/deactivating the keypad lock


-  Press and **hold** the hash key.

You will hear the confirmation tone. The  icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.





Control key



 

 

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

The control key has a number of different functions:





When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu to set the call volume (page 49), ring tones (page 50) and advisory tones (page 52) for the handset.




In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

In lists and submenus

-  /  Scroll up/down line by line.
-  Open submenu or confirm selection.
-  Go back one menu level or cancel.

During an external call

-  Open the directory.
-  Initiate internal consultation call and mute
-  Adjust the loudspeaker volume for earpiece and hands-free mode.





Display keys

The function of the display keys changes depending on the particular operating situation. Example:


 





- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys

The most important display icons are:


-  Left display key, as long as it has not been assigned a function (page 47).
-  Open the main menu.
-  Open a context-dependent menu.
-  Delete key: deletes one character at a time from right to left.

Operating the handset

-  Go back one menu level or cancel operation.
-  Fetch e-mail address from the directory.
-  Copy number into directory.
-  Divert external call to answer machine (S685 only).
-  Open the last number redial list.

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.


Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

Menu guidance



Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ Press  with the handset in idle status to open the main menu.

The main menu functions are shown in the display with colour icons and names.


To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key /. The name of the function is displayed in the display header. Press the display key **OK**.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

Or:

- ▶ Enter the corresponding digit combination (page 14).

 


Briefly press the end call key  once to return to the previous menu level/cancel the operation.

Illustration in the user guide


The operating steps are shown in abbreviated form.



Example


The illustration:

 →  → Date/Time


 
 
means:

 Press the key to display the main menu.


 Use the control key  to scroll through submenu Settings and press **OK**.

Date/Time Scroll to the function with the control key  and press **OK**.

Other types of illustrations:

 /  /  etc.

Press the matching key on the handset.

 Enter digits or letters.

You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 65.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **⏪** to delete the character to the left of the cursor
- ◆ insert characters to the left of the cursor
- ◆ overwrite the character (flashing) when entering the time and date etc.

ECO DECT

ECO DECT reduces power consumption by using a power supply with low power consumption and also reduces the transmission power of the base station.



If only **one** handset is registered and it is in the base station, eco mode is always **activated automatically**. In this case, the transmission power of the base station is reduced to the minimum.

 
You can use your handset to reduce the transmission power on the base station **manually** even when the handset is not in the base station.

 
By doing so, you will reduce the transmission power even if you have several handsets registered.

Your handset also reduces the transmission power depending on the distance to the base station.

Activating/deactivating eco mode:

 →  → Base → Add. Features
→ Eco Mode

OK Press the display key
( = on).

If eco mode is activated manually, the  icon is displayed at the top of the screen. If eco mode is **activated** automatically (only one handset is registered and it is on the base station) and eco mode has **not** been activated via the menu, then the icon is **not** displayed.

Please note:

- Activating eco mode reduces the range of the base station.
- Eco mode and any repeater support (see page 58) cancel each other out, i.e. both functions cannot be used at the same time.
- If external handsets (GAP) and handsets from earlier Gigaset versions are used, your handset will **not** automatically reduce the transmission power to the base station.

Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

Example: 8 tuv 2 abc 2 abc 1 oo for "Set ringer melody for external calls".

With the telephone in **idle status**, press (open main menu):

1 SMS

You have activated an SMS mailbox (general or private) without a PIN

1-1	New SMS	(page 29)
1-2	Incoming 0	(page 31)
1-3	Outgoing 0	(page 30)


You have activated an SMS mailbox with a PIN or 2-3 mailboxes

1-1	Mailbox	1-1-1	New SMS	(page 29)
		1-1-2	Incoming 0	(page 31)
		1-1-3	Outgoing 0	(page 30)
1-2 to 1-4	Mailbox 1 Mailbox 2 Mailbox 3	1-2-1 to 1-4-1	New SMS	(page 29)
		1-2-2 to 1-4-2	Incoming 0	(page 31)
		1-2-3 to 1-4-3	Outgoing 0	(page 30)
1-6	Settings	1-6-1	Service Centres	(page 34)
		1-6-2	SMS Mailboxes	(page 33)
		1-6-3	Notify Number	(page 32)
		1-6-4	Notify Type	(page 32)

2 Sel. Services

2-3	Withhold No.	(page 19)		
2-6	All Calls	2-6-1	Call Divert	(page 19)
		2-6-3	Call Waiting	(page 19)
2-7	Ringback Off	(page 20)		

3 Calls List (page 26)

4 Add. Features 

4-3	Room Monitor	(page 46)	
4-4	Data Transfer	4-4-2	Bluetooth (page 55)
		4-4-3	Directory (page 23)
4-6	Missed Alarms	(page 54)	

5 Alarm Clock  (page 52)6 Calendar  (page 53)7 Resource Dir. 

7-1	Screensavers	(page 51)	
7-2	Caller Pictures	(page 51)	
7-3	Sounds	(page 51)	
7-4	Capacity	(page 52)	

8 Settings 

8-1	Date/Time	(page 10)	
8-2	Audio Settings	8-2-1	Handset Volume (page 49)
		8-2-2	Ringer Settings (page 50)
		8-2-3	Advisory Tones (page 52)
8-3	Display	8-3-1	Screen Saver (page 49)
		8-3-2	Colour Scheme (page 48)
		8-3-3	Contrast (page 48)
		8-3-4	Backlight (page 49)
8-4	Handset	8-4-1	Language (page 48)
		8-4-2	Auto Answer (page 49)
		8-4-3	Register H/Set (page 43)
		8-4-4	Select Base (page 44)
		8-4-5	Area Codes (page 56)
		8-4-6	Reset Handset (page 56)
8-5	Base	8-5-1	Ringer Settings (page 57)
		8-5-2	Music on hold (page 57)
		8-5-3	System PIN (page 57)
		8-5-4	Base Reset (page 58)
		8-5-5	Add. Features (page 13, page 45, page 59)
		8-5-6	Preselection (page 27)
		8-5-7	Calls List Type (page 26)

Menu tree

8-6	Voice Mail	8-6-1	Set Key 1	(page 42)
-----	------------	-------	-----------	-----------



only S685 base station:

	8-6-2	Ans Machine	(page 36)
	8-6-3	Call Screening	(page 39)
	8-6-4	Announcements	(page 36)
	8-6-5	Message Length	(page 40)
	8-6-6	Record Quality	(page 40)
	8-6-7	Ring Delay	(page 40)

 


Making calls

 
Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

Please note:

Dialling using the directory, the call-by-call list (page 1, page 21) or the calls and last number redial list (page 26/page 25) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").


Continuing a call on a Bluetooth headset

Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 55).


Press the talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.

For further details on your headset, see the user guide issued with it.



 
 
Ending a call

 Press the end call key.

 
Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .
- ▶ Gigaset S680: Press the display key  **Accept**.
- ▶ Gigaset S685: Press the display key  to divert the call to the answer machine (page 39).

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 49), the handset will take a call automatically when you lift it out of the cradle.

If the ringer melody is intrusive, press the display key  **Silence**. You can take the call as long as it is displayed on the screen.

Accepting a call on a Bluetooth headset

Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 55).

Only press the talk key on the headset when the headset itself rings (this may take up to 5 seconds).

For further details on your headset, see the user guide issued with it.

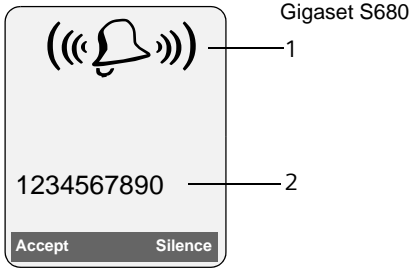
Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

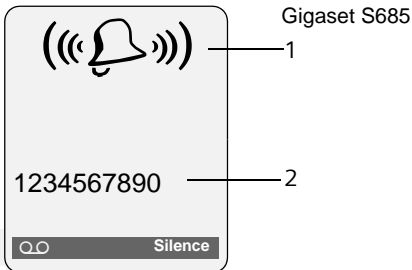
- ◆ Your network provider supports CLIP, CLI.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
- ◆ You have arranged CLIP with your network provider.
- ◆ The caller has arranged CLI with the network provider.

Call display with CLIP/CLI

If the number of the caller is saved in your directory, you will see their name, and if you have assigned a CLIP picture to that caller, this will also be displayed.



or



- 1 Ringer melody icon
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ External, if no number is transmitted.
- ◆ Withheld, if the caller has withheld Calling Line Identification (page 19).
- ◆ Unavailable, if the caller has not arranged Calling Line Identification.

Handsfree talking

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating handsfree mode

Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.



Switching between earpiece and handsfree mode



Press the handsfree key.

During a call and when listening to the answer machine (Gigaset S685 only), activate or deactivate handsfree.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For how to adjust the loudspeaker volume, see page 49.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears hold music.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

You can turn the hold music on and off (page 57).

Making calls easily using network services



Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ **If you require assistance, please contact your network provider.**


Setting functions for the next call

Withhold No.

Withhold Calling Line Identification for the next call (CLIR).


 →  → Withhold No.

 Enter number.

 Press the talk key.

Setting functions for all subsequent calls

If you have completed one of the following procedures, a code is sent.

- ▶ After confirmation from the telephone network, press the end call key .

You can set the following features:

General call diversion

 →  → All Calls → Call Divert

- ▶ Change multiple line input:


When:

All Calls / No Answer / When Busy.

Call No.:

Press the display key **Edit**. Enter the number to which the call is to be diverted

Or:


Press . Select number from the directory and press **OK**.

Press **Save** to save.

Status:

Activate/deactivate call diversion

- ▶ Press the display key **Send**.

 After the announcement, press the end call key.

Status:

Activating/deactivating parallel ringing.

- ▶ Press the display key **Send**.

Activating/deactivating call waiting

 →  → All Calls → Call Waiting

Status: Activate/deactivate.

Send Press the display key.

Functions during a call

Initiating ringback

You hear the busy tone.

Options → Ringback



Press the end call key.

Consultation



During a call:

Ext.Call Press the display key.



Enter the number.

You have the following options:

- ◆ **Toggleing:**
 - ▶ Use  to toggle between the participants.
- ◆ **End call with both participants:**
 - ▶ Press the end call key .

Accepting a waiting call

Accept Press the display key.

You have the option of toggling or holding a conference call.

Please note:

Without CLIP a waiting call is only announced with a beep.

Accepting a waiting call

Options → Accept waiting call

Functions after a call

Cancelling ringback



Ringback Off

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Call-by-call list
- ◆ Last number redial list
- ◆ SMS list
- ◆ Call history
- ◆ List of missed calls
- ◆ Answer machine list
(Gigaset S685 only).

You can save a total of 250 entries in the directory and call-by-call list.

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 23).


Directory/call-by-call list

Please note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

Directory

In the **directory** you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ VIP designation and VIP ringer melody (optional)
- ◆ E-mail address (optional)
- ◆ CLIP pictures (optional)
- ◆ Anniversaries with reminder
- ▶ With the handset in idle status, open the directory by pressing the  key.

Length of the entries (directory)

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 60 characters

Call-by-call list

The **call-by-call list** is used to store the access codes for network providers ("call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

Length of entries

Number: max. 32 digits

Name: max. 16 characters

Saving a number in the directory

 → New Entry

- ▶ Change multiple line input:

First Name / Surname:

Enter a name in at least one of the fields.

Phone (Home) / Phone (Office) / Phone (Mobile)

Enter a number in at least one of the fields.

E-mail

Enter e-mail address.

Annivers.:

Select On or Off.

With setting On:

Enter Anniversary (Date) and Annivers. (Time) (page 24) and select reminder type: Annivers. (Signal).

Caller Picture

If required, select a picture to be displayed when the caller calls (see Resource Directory, page 51).
Precondition: Calling Line Identification (CLIP).

- ▶ Save changes: (page 66).

Saving a number in the call-by-call list

 → New Entry

- ▶ Change multiple line input:

Name:

Enter name.

Number:

Enter number.

Order of directory entries



Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

Selecting entries in the directory and call-by-call list


 /  Open directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name (in the directory: first character of the surname or of the first name if **only** the first name has been entered), or scroll to the entry using .

Dialling with the directory/call-by-call list

 /  →  (select entry)

 Press the talk key. The number is dialled.

Managing entries in the directory/call-by-call lists

 /  →  (select entry)

Viewing entries

View Press the display key. The entry is displayed.
Back with **OK**.


Editing entries

View **Edit** Press display keys one after the other.


- Carry out changes and save.

Using other functions

 /  →  (select entry)
→ **Options** (open menu)

The following functions can be selected with .

Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringer melody to it. You can then recognise important calls from the ringer melody.

Precondition: Calling Line Identification (page 17).

Copy Entry

Send a single entry to a handset (page 23).

Delete List

Delete **all** entries in the directory/call-by-call list.

Copy List

Send complete list to a handset (page 23).

Available Memory

Display the available entries in the directory and call-by-call list (page 21).




Using quick dial keys


- ▶ Press and **hold** the required quick dial key (page 47).

Sending the directory/call-by-call list to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (select entry)
→ **Options** (open menu) → Copy Entry / Copy List → to Internal

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the Copy next entry? prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

You can also send the complete **directory** via data transfer, without opening the directory:



 →  → Data Transfer → Directory

Please note:


- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (see page 55) you can transfer directory entries in vCard format, e.g. to exchange entries with your mobile.

 →  (select entry) → **Options** (open menu) → Copy Entry / Copy List
→ vCard via Bluetooth


The list of "Known Devices" (see page 55) is displayed.

 Select device and press **OK**.

Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (see page 55) sends a vCard to your handset, this occurs automatically and you are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:

 Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS or during a call to the directory.

A number is displayed:




Options → Copy to Directory


- ▶ Complete the entry, see page 21.

Gigaset S685: The message playback is interrupted during the number transfer from the answer machine list.

Copying a number or e-mail address from the directory

In many operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



- ▶ Depending on the operating situation, open the directory with  or  or  Directory.

 Select an entry (page 22).


Saving an anniversary in the directory


For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: Annivers.: Off).

Anniversaries are automatically recorded in the calendar (page 53).

 →  (select entry; page 22)

View **Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

 Select On.

- ▶ Change multiple line input:

Anniversary (Date)

Enter day/month/year in 8-digit format.

Annivers. (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Annivers. (Signal)



Select the type of signal for the reminder.

- ▶ Save changes: (page 66).


Please note:


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

Deactivating anniversaries

 →  (select entry; page 22)

View **Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

 Select Off.

Save Press the display key.

Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ringer melody.

You now have the following options:

SMS Write an SMS

OFF Press the display key to acknowledge and end the reminder call.

Viewing missed anniversaries


In idle status, you are reminded of an elapsed and unacknowledged anniversary by the **one-off** display of **Appoint.**

- ▶ View appointment:

Appoint. Press the display key.

You now have the following options:

SMS Write an SMS



 
Delete Delete the reminder. After deleting, press the  or **Go Back** display key: Back in idle status, **Appoint.** is no longer displayed.

You can also view missed anniversaries afterwards (see page 54).

Last number redial list



The last number redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the phone book or the call-by-call list, then the appropriate name will be displayed.


Manual last number redial

-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again.
The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the last number redial list

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.

 
The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 21).

Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.


- Called party answers: press the talk key . The function is ended.
- Called party does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.

Display Number (as in the directory, page 22)


Delete Entry (as in the directory, page 22)

 
 

Delete List (as in the directory, page 22)

Opening lists with the message key

You can use the message key  to open the following list selection:


- ◆ SMS list
If **several** mailboxes are set up (page 33), several lists are displayed.
- ◆ Answer machine list (Gigaset S685 only) or network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (page 42).
- ◆ Call history

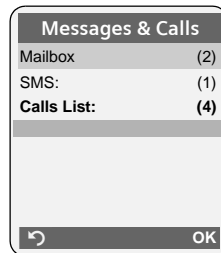
An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

Icon	New message...
	... in the answer machine list (Gigaset S685 only) or on the network mailbox
	... in the call history
	... in SMS list



The number of new entries is shown beneath the corresponding icon.

List selection

If you press the message key , only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are identified in bold:



Using the directory and lists

Select a list with . To open, press  or **OK**.

If only one list contains entries, no list selection is offered and the relevant list is displayed immediately.


Incoming SMS message list

All received SMS messages are saved in the incoming message list, page 31.

Call history

Precondition: Calling Line Identification (CLIP, page 17)

Depending on the type of list set, the call history contains



- ◆ accepted calls ()
- ◆ missed calls
- ◆ calls recorded by the answer machine (☞, Gigaset S685 only)

Depending on the type of list set, all numbers of the last 30 incoming calls are saved or just the missed calls are saved. The list of missed calls does not contain calls that were answered or recorded by the answer machine (Gigaset S685 only).


You can also call up the call history via the menu:


 → Calls List

Setting the calls list type

 →  → Base → Calls List Type

Missed Calls / All Calls

Select and press **OK** ( = on).

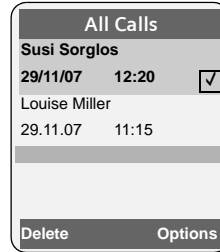
 Press and **hold** (idle status).


The calls list entries are retained when you change the list type.

List entry


New messages are displayed at the top.

Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry
Bold: new entry
- ◆ Number or name of caller
You can add the caller's number to the directory (page 23).
- ◆ Date and time of call (if set, page 10)
- ◆ Type of entry:
 - accepted calls ()
 - missed calls
 - calls recorded by the answer machine (☞, Gigaset S685 only)

Pressing the display key **Delete** deletes the marked entry.

After pressing the display key **Options** you can select more functions with :

Copy to Directory

Copy number to the directory.

Delete List

Delete complete list.

When you quit the call history, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

Answer machine list (Gigaset S685 only)

You can use the **answer machine list** to listen to the messages that are on the answer machine.

Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

Linking call-by-call numbers with one number

You can insert the dialling code of a network provider ahead of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).

Options

Press the display key.

Display Number

Select and press **OK**.



Enter number or select number from the directory (page 24).



Press the talk key. Both numbers are dialled.

Automatic network provider preselection (Preselection)

You can specify a call-by-call number (preselection number) which is **automatically** placed in front of numbers when you dial them.

- ◆ The "**with preselection**" list contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.

- ◆ The "**without preselection**" list contains the "exception to the rule".

Example:

You have entered 08 for "with preselection". Consequently, all numbers that start with 08 are dialled with preselection.

If, for example, you want 081 to still be dialled without preselection, enter 081 for "without preselection".

When dialling, the **first** digits of the selected numbers are compared with both lists after the talk/handsfree key is pressed:

- ◆ The preselection number is not prefixed if the dialled number
 - **does not** match any entries in the two lists
 - matches an entry in the "**without preselection**" list
- ◆ The preselection number is prefixed if the first digits of the dialled number match with **only** one entry in the list "**with preselection**".

Saving preselection numbers

→ → Base → Preselection
→ Preselect No.



Enter or change the preselection number (call-by-call number).

Save

Press the display key.




Press and **hold** (idle status).

Save or change entries in the preselection lists


Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means e.g. that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.


 →  → Base → Preselection
→ With Preselect / Without Presel.

 Select entry.

 
Edit Press the display key.

 Enter or edit first digits of number.

Save Press the display key.

 Press and **hold** (idle status).

Temporarily cancelling preselection

 (press and **hold**) → **Options**
→ Aut Preselect off

Permanently deactivating preselection

- ▶ Delete the preselection number (page 27).

SMS (text messages)

Your unit is supplied ready for sending SMS messages immediately.

Preconditions:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.

SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.

Your SMS messages are sent through the SMS centre that is entered as the active send service centre (page 34). Only one SMS centre can be the active send service centre at any one time.

If no SMS Service Centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (page 34).

Information on writing an SMS can be found in the appendix:

- ◆ For how to enter text, see page 66.
- ◆ Writing using the predictive text tool EATONI, see page 66.

Rules

- ◆ An SMS can be up to 612 characters.
- ◆ If there are more than 160 characters, the SMS is sent as a **linked** SMS (up to 4 SMS messages with 153 characters each).

Please note:

- ◆ If your phone is connected to a PABX, please read page 34.
- ◆ To receive SMS messages you must be registered with your service provider.

Writing/sending an SMS

Writing an SMS



Mailbox 2 Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.



Write an SMS.

Please note:

- Instructions on entering text can be found at page 66 and on writing with EATONI predictive text at page 66.
- EATONI is activated as a default setting. Activating/deactivating EATONI see page 67.

Sending an SMS



Press the talk key

Or:

Options Press the display key.

Send Select and press **OK**.

SMS Select and press **OK**.



Select number with area code (even if you are in that area) from the directory or call-by-call list, or enter number directly. For SMS to an SMS mailbox: add the mailbox ID to the **end** of the number.

Send

Press the display key. The SMS is sent.

Please note:

- If you are interrupted by an external call while writing an SMS, the text is automatically saved in the outgoing message list.
- If the memory is full, or if the SMS function on the base station is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

Setting input language

- ▶ You are writing an SMS (page 29).

Options Press the display key.

Select Language

Select and press **OK**.



Select input language and press **OK**.



Press the end call key **briefly** twice to return to the text panel.

The input language setting only applies to the current SMS.

Draft message list

You can save an SMS in the draft message list and edit and send it later.

Saving an SMS in the draft message list

- ▶ You are writing an SMS (page 29).

Options Press the display key.

Save Entry Select and press **OK**.

Opening the draft message list

→ → (mailbox, mailbox PIN)
→ **Outgoing** (3)

The first list entry is displayed, e.g.:

1234567890
21.11.07 09:45

Reading or deleting individual SMS messages

- ▶ Open the draft message list and then:



Select SMS.

Read

Press the display key. The entry will be displayed. Scroll line by line using .

Or delete the SMS with

Options Delete Entry **OK**.

Writing/changing an SMS

- ▶ You are reading an SMS in the draft message list.

Options Open menu.

You have the following options:

New SMS

Write a new SMS and then send (page 29) or save it.

Edit

Edit the text of the saved SMS and then send (page 29).

Character Set

Text is shown in the selected character set.

Deleting draft message list

- ▶ Open the draft message list and then:

Options Open menu.

Delete all Select, press **OK** and confirm with **Yes**. The list is cleared.



Press and **hold** (idle status).

Receiving an SMS

All received SMS messages are saved in the incoming message list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

 

The display tells you if the SMS memory is full.

- ▶ Deleting SMS messages you no longer require (page 31).

Incoming message list

The incoming message list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset S68H handsets by the  icon in the display, the flashing message key  and an advisory tone.

Opening the incoming message list with the key

 Press.

Select mailbox if necessary and enter mailbox PIN.

The incoming message list is displayed as follows (example):

SMS: (2) — 1
 — 2



- 1 **bold:** number of new entries
regular: number of read entries
- 2 Name of mailbox, here: general mailbox

Open list with **OK**.

An entry in the list is displayed as in the following example:

1234567890
 21.11.07 09:45

Opening the incoming message list via the SMS menu

 →  → (mailbox, mailbox PIN)
 → Incoming (2)

Reading or deleting individual SMS messages

- ▶ Open the incoming message list.
- ▶ Continue as described in "Reading or deleting individual SMS messages", page 30.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.

- ▶ Open the incoming message list.

Options Open menu.

- ▶ To continue, see "Deleting draft message list", page 30.

Replying to or forwarding SMS messages

- ▶ Read the SMS (page 31):

Options Press the display key.

You have the following options:

Reply

Write and send a reply SMS directly (page 29).

Edit

Edit the text in the SMS and then send it (page 29).

Forwarding an SMS

- ▶ You are reading an SMS (page 31):

Options Press the display key.

Forward Select and press **OK**. For further information, see page 29.

Adding numbers to the directory

Adding the sender's number

- ▶ Open incoming message list and select entry (page 31).

Options Press the display key. For further information, see page 23.


Please note:

- You can create a special directory for SMS messages within your main directory by putting a star (*) before the names.
- An attached mail box identifier is added to the directory.


Copying/dialling numbers from an SMS text

- ▶ Read the SMS (page 31) and scroll to the telephone number.

The digits are reverse-highlighted.

 Press the display key. For further information, see page 23.

Or:

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the local area code (dialling code) in the directory.

Changing the character set

- ▶ Read the SMS (page 31):

Options Press the display key.

Character Set

Text is shown in the selected character set.

Notification by SMS

You can be notified about missed calls or new answer machine messages (Gigaset S685 only) via SMS.

Precondition: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to set the phone number to which notification should be sent (notification number) and the notification type.

Saving the notification number

 →  → Settings → Notify Number



Enter the number to which the SMS should be sent.

Save

Press the display key.



Press and **hold** (idle status).

Warning:

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

Setting the notification type

 →  → Settings → Notify Type

- ▶ Change multiple line input if necessary:

Missed Calls:

Set On if you require SMS notification.

Ans Machine:

(Gigaset S685 only)

Set On if you require SMS notification.

- ▶ Save changes (page 66).

SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

Please note:

- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (*) to the number of a (preset) SMS centre. Both service providers, for sending and receiving sms to / from personal mailboxes have to support this function.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's default settings. This will **delete all SMS messages from all mailboxes**.

Setting up and changing a personal mailbox

Setting up a personal mailbox

 →  → Settings → SMS Mailboxes

 Select mailbox, e.g. Mailbox 2 and press **OK**.

- ▶ Change multiple line input:

On/Off:

Activate or deactivate mailbox.

ID:

Select mailbox ID (0–9). You can only select the available numbers.


Protection:

Activate/deactivate PIN protection.

PIN

If necessary, enter 4-digit PIN.

- ▶ Save changes (page 66).

Active mailboxes are marked with in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

- ▶ Set On/Off: to Off. Confirm message with **Yes** if necessary.


All SMS messages saved in this mailbox will be deleted.

Deactivating PIN protection

- ▶ Set Protection: to Off.

The mailbox PIN is reset to "0000".


Changing the name of a mailbox

 →  → Settings → SMS Mailboxes →  (Select mailbox)

Edit Press the display key.

 Enter new name.

Save Press the display key.

 Press and **hold** (idle status).

Changing a mailbox's PIN and ID

 →  → Settings → SMS Mailboxes →  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

- ▶ Set ID:, Protection: and PIN (page 33).

Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.




- ▶ You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centres

Entering/changing SMS centres

- ▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → Settings → Service Centres
 Select SMS centre (e.g. Service Centr. 1) and press **OK**.

- ▶ Change multiple line input:

Active Send:

Select Yes if SMS messages are to be sent via the SMS centre.

SMS:

Press the display key **Edit**. Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

- ▶ Save changes (page 66).

Please note:

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (precondition: your service provider supports this function).

Sending an SMS through another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

SMS on a PABX


- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded to the extension of the PABX (CLIP)**. The CLIP evaluation of the number of the SMS centre happens in your **Gigaset**.
- ◆ If required, you must prefix the number for the SMS centre with the access code (depending on your PABX).
If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS messages **on ISDN PABXs** is only possible via the MSN number assigned to your base station.

Activating/deactivating the SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings which you have made for sending and receiving SMS messages (e.g. the call numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after you turn off your phone.

 
 Open menu.

Enter the digits.

 **OK** Deactivate SMS function.

Or:

 **OK** Activate SMS function (default setting).

SMS troubleshooting

Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed, see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

<p>You cannot send messages.</p> <ol style="list-style-type: none"> You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none"> Ask your service provider to enable this service. SMS transmission has been interrupted (e.g. by a call). <ul style="list-style-type: none"> Re-send the SMS. Network provider does not support this feature. No number or an invalid number is entered for the SMS centre set as the active send centre. <ul style="list-style-type: none"> Enter the number (page 34).
<p>You receive an incomplete SMS.</p> <ol style="list-style-type: none"> Your phone's memory is full. <ul style="list-style-type: none"> Delete old SMS messages (page 31). The service provider has not yet sent the rest of the SMS.

You have stopped receiving SMS messages.

- You have changed the ID of your mailbox.
 - Give your SMS contacts your new ID or undo the change (page 33).
- You have not activated your mailbox.
 - Activate your mailbox (page 33).
- Call diversion is activated with *When: All Calls* or the *All Calls* call diversion is activated for the network mailbox.
 - Change the call diversion

The message is played back.

- The "display call number" service is not activated.
 - Ask your service provider to activate this function (chargeable).
- Your mobile phone operator and your fixed network SMS service provider have not agreed on a co-operation.
 - Obtain information from your fixed network SMS service provider.
- Your terminal is recorded by your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
 - Have the device (re-)registered to receive SMS messages.

Messages are only received during the day.

The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.

- Obtain information from your fixed network SMS service provider.
- Have the device (re-)registered to receive SMS messages.

Operating the answer machine of the Gigaset S685 base station

 
You can operate the answer machine which is integrated into the base station using the keys on the base station (see page 2), via the handset or by remote control (other phone/mobile phone). Your own announcement message or advisory message can only be recorded via the handset.

Announcement mode


 
You can use the answer machine in two different modes.

 
- ◆ In **Ans. & Record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Announce Only** mode, the caller hears your announcement but cannot leave a message.

Operation via the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key .

Activating/deactivating the answer machine

 →  → **Voice Mail** → **Ans Machine**
( = on)

When you switch the answer machine on, the remaining memory time is announced. If the time has not yet been set (page 10), an appropriate announcement is made. The  icon appears in the display.

The phone is supplied with pre-recorded announcements for answer and record mode and for announce only mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

Recording a personal announcement/announce only



 →  → **Voice Mail** → **Announcements**
→ **Record Announce / Record Anc Only**

OK Press the display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now speak your announcement (at least 3 secs.).

End Press the display key to end the recording.

Cancel the recording with  or .
Restart the recording with **OK**.

After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement will be used again.
- ◆ If the answer machine's memory is full, it will switch to **Announce Only** mode.
 - ▶ Delete old messages and the answer machine will automatically switch back to **Ans. & Record** mode. Repeat recording if required.

Playing back announcements

 →  → Voice Mail → Announcements
→ Play Announcement / Play Anc Only

If you have not recorded a personal announcement, the relevant pre-recorded announcement is played.

Record a new announcement while playing back announcement:

New Press the display key.


If the answer machine's memory is full, it will switch to **Announce Only** mode.

- ▶ Delete old messages and the answer machine will automatically switch back to **Ans. & Record** mode. Repeat recording if required.

Deleting announcements/announce only

 →  → Voice Mail → Announcements
→ Del Announcement / Del Anc Only



Yes Press the display key to confirm the prompt.


 Press and **hold** (idle status).

Once you have deleted your announcement, the relevant pre-recorded announcement will be used again.

Selecting announcement mode

You can choose between **Ans. & Record** and **Announce Only**.

 →  → Voice Mail → Announcements
→ Set Ans. Mode → Ans. & Record /
Announce Only (= on)

 Press and **hold** (idle status).

The selected mode is saved even after the answer machine is deactivated.

If the memory for messages is full in **Ans. & Record** mode, the answer machine will switch to the **Announce Only** mode and you will receive an instruction to delete old messages.

- ▶ Delete old messages.

The answer machine **automatically** switches back to the set mode once deletion is complete. You can then reselect the required recording mode.

Setting "answer and record" or "announce only" by toggling

You can use the **Ans Mode Time** setting to change over the announcement mode for a specific period.

Example: **Ans. & Record** mode is set. If you activate **Ans Mode Time** and set a period (e.g. 18:00 to 08:00) the answer machine switches to **Announce Only** mode for this period. Outside this period (08:01 to 17:59), **Ans. & Record** mode is active.

 →  → Voice Mail → Announcements
→ Set Ans. Mode → Ans Mode Time
(= on)

- ▶ Change multiple line input:

From:

Enter hours/minutes for the start of the period in 4-digit format.

Until:

Enter hours/minutes for the end of the period in 4-digit format.

Activation:

Select **On** or **Off**.

- ▶ Save changes with **Save**.

If the messages memory is full and **Activation: On** has been selected, saving is interrupted and you will receive an instruction to delete old messages.


- ▶ Delete old messages and repeat the setting.

 
As soon as you change the announcement mode (page 37), the **Ans Mode Time** function is automatically deactivated.

Playing back messages

The date and time of each message is logged (provided this has been set, page 10) and displayed during the playback. If Calling Line Identification is activated, the caller's number is displayed. If the caller's number is saved in the directory, their name is displayed.

Playing back new messages

New messages that have not yet been heard are indicated by the ∞ icon in the display and by the  key flashing on the handset.

 Press the message key.

Ans M.: Select and press **OK**.

An announcement informs you if there are new or old messages.

If there are new messages, playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time you will hear an appropriate announcement before playback begins.



Playing back old messages


 
You can listen to old messages if there are no more new messages. Begin playback as described under "Listening to new messages".



After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".


Stopping and controlling playback

During message playback:

 Pause playback. Press  again to resume.

 or  To the previous message.

 or  To the next message.

 
2 x  To next-but-one message.

If playback is interrupted for over a minute, the answer machine returns to idle status.

Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

During message playback:

 Press the star key.

An announcement informs you of the message's new status.


Or:

Options Open menu.

Mark as New

Select and press **OK**.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The  key on the handset flashes.

Adding the telephone number of a message to the directory

See "Copying a displayed number to the directory", page 23.

Deleting messages

You can either delete all old messages together or individually.

Deleting all old messages

During playback or pause:

Options Press the display key.

Del All Old Msgs

Select and press **OK**.

Yes Press the display key to confirm the prompt.

Deleting individual old messages

During playback or pause:

Delete Press the display key.


Picking up a call from the answer machine

You can pick up a call while the answer machine is recording or is being operated via remote operation:



Press the talk or display key.

Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The  key on the handset flashes.

You can accept the call even if it is not signalled on the handset.

Diverting an external call to the answer machine

You can divert an incoming external call to the answer machine even if it is deactivated.

Precondition: Sufficient memory space is available on the answer machine.

An external call is signalled on the handset:



Press the display key.

The answer machine starts immediately in recording mode and records the call. The set time for the call acceptance (page 40) is ignored.

Activating/deactivating two-way recording

You can record an **external** call with the answer machine.

- ▶ Inform the caller that the call is being recorded.

Options Open menu.

Two Way Record

Select and press **OK**.

The two-way recording is indicated on the display by an advisory text and is added to the answer machine list as a new message.

End

Press the display key to stop the two-way recording.

The maximum recording time depends on the memory available on the answer machine. If the memory is full you will hear an end tone, the recording is aborted and the call recorded up to that point is listed in the answer machine list as a new message. If the answer machine was in **Ans. & Record** mode, it will switch to the **Announce Only** mode. You will receive an instruction to delete old messages.

- ▶ Delete old messages.

 
The answer machine **automatically** switches back to the set mode once deletion is complete.

Activating/deactivating call screening

During recording of a message you can listen in via the loudspeaker of registered handsets.

Permanently activating/deactivating call screening

 →  → Voice Mail → Call Screening → Handset

( = on)



Press and **hold** (idle status).

You can switch off the Call Screening function on the handset during the recording.

Switching off call screening for the current recording



Press the end call key.

Setting up the answer machine

The answer machine has already been preset at the factory. Make individual settings using the handset.

Call acceptance/charge saving function for remote operation

You can set when you want the answer machine to accept a call.


The options are: 0 sec., after 10 sec., 18 sec. or 30 sec. and the cost-saving setting Automatic.

In Automatic mode, the following applies for call acceptance:

- ◆ If there are no new messages, the answer machine accepts a call after 18 seconds.
- ◆ If new messages are present, the answer machine accepts a call after **10 seconds**.

When operating remotely you can tell after approx. 15 seconds that there are no new messages (otherwise the answer machine would already have accepted your call). There will be no call charges if you hang up now.

 →  → Voice Mail → Ring Delay

Select  0 sec. / 10 sec. / 18 sec. / 30 sec. / Automatic.

Save Press the display key.

 Press and **hold** (idle status).

Setting the recording time

You can set the maximum recording time of a message. The options are: 1, 2, 3 mins or Maximum.

 →  → Voice Mail → Message Length


 Select recording time.

Save Press the display key.

Setting the recording quality


Set the quality you require for your recordings. The options are: Standard, High, Excellent. If the quality is higher, the maximum recording time is reduced.

 →  → Voice Mail → Record Quality

 Select the recording quality.

Save Press the display key.


Resetting fast access for the answer machine using key 1


By default, key  has been assigned for fast access to the integrated answer machine. However, if you have set the network mailbox for fast access (page 42), you can reset this setting.

 →  → Voice Mail → Set Key 1

Answer Machine / Network Mailb.

Select and press **OK**.

 Press and **hold** (idle status).

After you have selected the network mailbox or the answer machine, press and **hold** key . You will be connected directly.

The setting for fast access applies to all Gigaset S68H handsets.

Operating when on the move (remote control)

You can check and activate your answer machine from any other telephone (hotel, pay phone etc.), or initiate ringback from the answer machine with an SMS.

Preconditions:


- ◆ You have set a system PIN other than 0000 (page 57).
- ◆ The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

Calling the answer machine and playing back messages








Dial your own number.



When you hear your announcement, press  and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answer machine with the keypad.

The following keys are used for operation:

-  Go to the start of the previous message.
-  Stop playback. Press again to resume.
-  Go to the next message.
-  Mark message as "new".
-  Delete current message.

Activating the answer machine

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answer machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answer machine cannot be deactivated remotely.

Initiating ringback from the answer machine with SMS and listening to messages

Precondition: You must have stored a notification number (see page 32).

You can use the telephone (mobile phone or any other device with SMS functionality) for which you have stored the notification number in your phone to send an SMS to your answer machine when you are away from home. It will then call you back. The message playback begins when you accept the call and press any key.

The SMS must contain the following:

<System PIN><Ringback number>*

The ringback number is optional.

Examples:

4711 or *4711*089123456*

If a ringback number is entered, it is dialled; otherwise the notification number is dialled.

You can now operate the answer machine via the keypad, as described in the previous sections.

Using the network mailbox

The network mailbox is your network provider's answer machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

With fast access, you can dial the network mailbox or the integrated answer machine (Gigaset S685 only) directly.


Gigaset S680: Fast access is set for the network mailbox. You only need to enter the number of the network mailbox.

Gigaset S685: The integrated answer machine is set for fast access. Instead of using this, you can specify the network mailbox, such as the T-NetBox provided by T-Com. Ask your network provider about this.

Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Voice Mail → Set Key 1

Network Mailb.

Select and press **OK** ( = on).



Enter the number for the network mailbox.

Save

Press the display key.



Press and **hold** (idle status).


The setting for fast access applies to all Gigaset S68H handsets.

Calling the network mailbox



Press and **hold**. You are connected straight to the network mailbox.



Press handsfree key () if required. You will hear the network mailbox announcement.

Viewing the network mailbox report

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list and the message key flashes (page 25).

Using several handsets

Registering handsets

You can register up to six handsets to your base station.

A Gigaset S68H handset can be registered to up to four base stations.

Automatic registration of Gigaset S68H to Gigaset S680/S685

Precondition: The handset must not already be registered to a base station.

Registering the handset to the base station occurs automatically.

- ▶ Place the handset in the base station with its display facing forward.

Registration can take up to 5 minutes. During this process, the registration procedure appears in the display and the name of the base station flashes, e.g. base station 1. When the handset has registered successfully, its screen displays its internal number, e.g. INT 2 for internal number 2. The handset is assigned the lowest available internal number (1–6). If all internal numbers 1–6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

Please note:

- Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.
- You can change the name of the handset (see page 46).


Manual registration of Gigaset S68H to Gigaset S680/S685


You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.

On the handset

 →  → Handset → Register H/Set

 Select base station, e.g. Base 1 and press **OK**.

 Enter the system PIN of the base station (the default is 0000) and press **OK**. You will see flashing on the display e.g. Base 1.

On the base station

Within 60 sec. press and **hold** the registration/paging key on the base station (page 2) (approx. 3 sec.).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

On the handset


- ▶ Start to register the handset as described in its user guide.


On the base station

Press and **hold** the registration/paging key on the base station (page 2) (approx. 3 sec.).

Deregistering handsets


You can deregister any other registered handset from any registered Gigaset S68H handset.

 Open list of internal parties. The handset you are currently using is indicated by < .

 Select the internal party you wish to deregister.

Options Open menu.

De-reg. H/Set No.
Select and press **OK**.

 Enter the current system PIN and press **OK**.

 
Yes Press the display key.

Locating a handset ("paging")

You can locate your handset using the base station.

- ▶ **Briefly** press the registration/paging key on the base station (page 2).
- ▶ All handsets will ring simultaneously ("paging"), even if the ring tones are switched off.


Ending paging

- ▶ **Briefly** press the registration/paging key on the base station or press the talk key  on the handset.

Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (Best Base).


 →  → Handset → Select Base


 Select one of the registered base stations or Best Base and press **OK**.

Making internal calls


Internal calls to other handsets registered on the same base station are free.

Calling a specific handset

 Initiate internal call.

 Enter the number of the handset.


Or:


 Initiate internal call.

 Select handset.


 Press the talk key.

Calling all handsets ("group call")

 Initiate internal call.


 Press the star key. All handsets are called.


Ending a call

 Press the end call key.

Transferring a call to another handset


You can transfer an external call to another handset (connect).

 Open list of handsets. The external participant hears hold music if activated (see page 57).

 Select a handset or Call All and press **OK**.


When the internal participant answers:

- ▶ If necessary announce the external call.

 Press the end call key.

The external call is transferred to the other handset.


If the internal participant does **not** answer or the line is busy, press the display key **End**, to return to the external call.


When transferring a call you can also press the end call key  before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you (the display will show Recall).

Internal consultation calls

When you are speaking to an **external** participant you can call an **internal** participant at the same time for consultation.

 Open list of handsets.
The external participant hears hold music if activated (see page 57).

 Select handset and press **OK**.

Ending a consultation call

End Press the display key.

You are reconnected with the external participant.

Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if Calling Line Identification is enabled.

Ending an internal call, accepting an external call

Accept Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting the external call

Reject Press the display key.



The call waiting tone is turned off. You remain connected with the internal participant. The ringer melody can still be heard on other registered handsets.


Listening in to an external call


Precondition: The Listening In function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

Activating/deactivating internal listening-in


 →  → Base → Add. Features
→ Listening In

Press **OK** to activate/deactivate the function ( = on).

 Press and **hold** (idle status).


Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.


 Press and **hold** the talk key.

You are linked into the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in






 Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key () , the handset that has "listened in" remains connected to the external participant.








Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

-  Open list of handsets. Your own handset is indicated by <.
-  Select handset.
-  Press the display key.
-  Enter name.
-  Press the display key.

Changing a handset's internal number

A handset is **automatically** assigned the lowest free number on registration. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).

-  Open list of handsets. Your own handset is indicated by <.
-  Open menu.
-  Select and press **OK**. The list of handsets is displayed.
-  The current number flashes. Select a handset.
-  Enter the new internal number (1–6). The handset's old number is overwritten.
-  Press the display key to save the input.
-  Press and **hold** (idle status).

You will hear the error tone (descending tone sequence) if you assign an internal number twice.

- ▶ Repeat the procedure with a free number.

Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer melody** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.



If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

The room monitor mode is retained if you turn the handset off and on again.

Caution!

- You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- When the function is activated the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answer machine.

Activating the room monitor and entering the destination number


 →  → Room Monitor


▶ Change multiple line input:

Room M.:

Select On to activate.

Call to:

External number: Select the number from the directory (press display key ) or enter it directly. Only the **last 4 digits** are displayed.

Internal number: **Options** → INT → **OK** →  (select handset or Call All, if all registered handsets are to be called) → **OK**.


Level:


Set noise level sensitivity (Low or High).

▶ Press **Save** to save the settings.

Changing set destination numbers

 →  → Room Monitor

 Scroll to the Call to: line.

 or **Delete**
Delete existing number.

▶ Enter number as described in "Activating the room monitor and entering the destination number" (page 47).

Deactivating the room monitor remotely

Preconditions: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

▶ Accept the call from the room monitor and press keys  .




The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringer melody) on the handset will remain activated until you press the display key **OFF** on the handset. To reactivate the room function with the same phone number:

▶ Turn on the activation again and save with **Save** (page 47).

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.


Shortcuts for functions and numbers

You can assign the left display key and each of the digit keys  and  to  a number or a function. The right-hand display key has already been assigned a function. You can change the assignment.

The number is then dialled or the function started by simply pressing a key.

Assigning a digit key/left display key

Precondition: The digit key or the left display key has not yet been assigned a number or a function.

▶ Press the display key  or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

Room Monitor

Assign key to the menu for setting and activating the room monitor (see page 46).

Handset settings

Alarm Clock

Assign key to the menu for setting and activating the alarm clock (see page 52).

Calendar

Open calendar/enter new appointment.

Bluetooth

Assign key to the Bluetooth menu.

More Features...

More functions are available:

INT

Internal calls (see page 44).

SMS

Assign the menu for SMS functions to a key (see page 29).

SMS Notific.

Assign key with the menu for activating SMS notification (page 32).

Withhold No.

Suppress Calling Line Identification for the next call (page 19).

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

Changing key assignments

Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 47).

Digit key

- ▶ Press the digit key **briefly**.

 
Change Press the display key. The list of possible key assignments is displayed.


- ▶ Proceed as is described when first assigning the key with a shortcut (page 47).


Changing the display language

You can view the display texts in different languages.





 →  → Handset → Language


The current language is indicated by .

 Select a language and press **OK**.

 Press and **hold** (idle status).



If you accidentally choose a language you do not understand:

    Press keys in sequence.

 Select the correct language and press **OK**.


 
Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → Display

Colour Scheme

Select and press **OK**.

 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.


Save Press the display key.


 Press and **hold** (idle status).

Setting the screensaver

You can set a picture from the Resource Dir. (page 51) to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the Screen Saver menu option is marked with .

 →  → Display → Screen Saver

The current setting is displayed.

▶ Change multiple line input:


Activation:

Select On (screensaver is displayed) or Off (no screensaver).

Selection:


If required, change the screensaver (see below).


▶ Save changes: (page 66).


If the screensaver conceals the display, **briefly** press  to show the idle display with time and date.

Changing the screensaver

 →  → Display → Screen Saver

 Scroll to the Selection line.

View  Press the display key. The active screensaver is displayed.

 Select screensaver and press **Change**.

▶ Save changes: (page 66).

Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If the base station is turned on, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select On or Off.

Without Charger

Select On or Off.

Please note:

With the On setting, the standby time of the handset can be significantly reduced.


Save



Press the display key.



 
Press and **hold** (idle status).

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → Handset

Auto Answer

Select and press **OK** ( = on).



Press and **hold** (idle status).

Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels.

In idle status:

 → Handset Volume



Set the earpiece volume.



Scroll to the Speaker: line.



Set the handsfree volume.

Save

Press display key if necessary to save the setting permanently.

Handset settings

Setting the volume during a call:



Press the control key.




Select volume.

Save

Press display key if necessary to save the setting permanently.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **Save**.

If  is assigned to another function, e.g. toggling (page 20):

Options Open menu.

Volume Select and press **OK**.

 

Configure setting (see above).

Please note:

You can also set the call volume, the ring tones and the advisory tones via the menu (see page 15).

Changing ring tones

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring = .

◆ Ring tones:

You can select various ring tones, melodies or any sound from Resource Directory (page 51).

You can set different ring tones for the following functions:

- ◆ **Ext. Calls:** for external calls
- ◆ **Internal Calls:** for internal calls
- ◆ **Appointments:** for set appointments (page 53)
- ◆ **All:** the same ringer melody for all functions

Settings for individual functions

Set the volume and melody depending on the type of signalling required.

In idle status:



→ Ringer Settings



Select setting, e.g. Ext. Calls and press **OK**.



Set volume (1–6).



Scroll to the next line.



Select melody.

Save

Press the display key to save the setting.

Same settings for all functions

In idle status:



→ Ringer Settings → All

▶ Set volume and ringer melody (see "Settings for individual functions").

Save

Press the display key to confirm the prompt.



Press and **hold** (idle status).

Please note:

You can also set the call volume, the ring tones and the advisory tones via the menu (see page 15).


Activating/deactivating the ringer melody

You can deactivate the ringer melody on your handset before you answer a call or when the handset is in idle status; the ringer melody can be deactivated permanently or just for the current call. The ringer melody cannot be re-activated while an external call is in progress.

Deactivating the ringer melody permanently



Press and **hold** the star key.

The  icon appears in the display.

Re-activating the ringer melody



Press and **hold** the star key.

 
Deactivating the ringer melody for the current call

Silence Press the display key.

Activating/deactivating the alert tone



In place of the ringer melody you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer melody.

*** * *** Press and **hold** the star key and **within 3 seconds**:

Beep Press the display key. A call will now be signalled by **one** short alert tone. You will now see  in the display.


Resource Directory

Resource Directory on the handset manages sounds, which you can use as ring tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling line identification (CLIP). Resource Directory can manage the following media types:



Icon	Sound	Format
	Ring tones	Standard
	Picture (CLIP picture, screensaver)	BMP (128 x 100 or 128 x 160 pixels)


The icon is displayed in front of the name in Resource Directory. Various mono- and polyphonic sounds and pictures are pre-configured on your handset.


You can listen to the available sounds and view the pictures.


You can download pictures from a PC (see page 67). If too little memory is available, then you will have to delete one or more pictures first. The pre-configured pictures are labelled with . You cannot rename or delete them.

Playing back sounds/viewing CLIP pictures


 →  → Screensavers / Caller Pictures / Sounds (select entry)

Play / View Press the display key. Sounds are played back or pictures are displayed. Press the  key to switch between entries.

End /  Press the display key. Playback of the sound or display of the picture ends.

While you are playing back sounds, you can also interrupt playback with the  key.

 Press and **hold** (idle status).

If you have saved a picture in an invalid data format, you will see an error message after selecting the entry. Cancel the operation with . Use **Delete** to delete the picture.

Sounds: setting the volume

During playback:

Volume Press the display key.


 Set volume.

Save Press the display key.

Renaming/deleting a picture

You have selected an entry.

Options Open menu.

If a picture cannot be deleted () , these options are not available. Depending on the situation, you can select the following functions:

Delete Entry

The selected entry is deleted.

Delete List

All entries in the list that can be deleted are deleted.



Handset settings


Rename

Change the name (max. 16 characters) and press **Save**. The entry is saved with the new name.

Checking memory

You can display the capacity available for screensavers and CLIP pictures.

 →  → Capacity

 Back: press the display key.

Activating/deactivating advisory tones

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key click:** Every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the answer machine list or call history
 - **Error tone** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone:** when scrolling at the end of a menu
- ◆ **Battery tone:** The batteries need to be charged.

In idle status:

 → Advisory Tones

▶ Change multiple line input:

Key Tones:

Select On or Off.

Confirm.:

Select On or Off.

Battery:

Select On, Off or In Call. The battery warning tone is only activated/deactivated and only sounds during a call.

▶ Save changes: (page 66).

You cannot deactivate the confirmation tone for placing the handset in the base station.



Please note:

You can also set the call volume, the ring tones and the advisory tones via the menu (see page 15).

Setting the alarm clock

Precondition: The date and time have already been set (page 10).

Activating/deactivating the alarm clock and setting the wake-up time

 → 

▶ Change multiple line input:

Activation:

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

Occurance:

Select Daily or Monday-Friday.


Volume:

Set the volume (1–6).


Melody:

Select melody.

▶ Save changes: (page 66).

The  icon is shown in the display.

A wake-up call with selected ringer melody (page 50) is signalled on the handset. The wake-up call sounds for 60 seconds.

 is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Precondition: A wake-up call is sounding.

OFF Press the display key. The wake-up call is deactivated.

or

Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Setting an appointment (calendar)

You can have your handset remind you of up to 30 appointments (volume and melody, see page 50).

Saving an appointment

Precondition: The date and time have already been set (page 10).



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black.)

The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment.

<New Entry>

Select and press **OK**.

► Change multiple line input:

ApPOINT.:

Select On or Off.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digits format.


Notes:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Save Press the display key.



 
Press and **hold** (idle status).

The appointment is marked with  in the appointments list. The list of appointments is sorted by date.

An appointment reminder is signalled with the selected ringer melody (page 50). The appointment reminder sounds for 60 seconds. The entered text, date and time are displayed.

During a call, the appointment reminder is signalled by a short tone.

Managing appointments




Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black in the calendar.)



Select appointment for the day.

Options

Open menu
Back with .

You have the following options:

View Entry

View selected appointment, open the **Options** menu for editing, deleting and activating/ deactivating.

Edit Entry

Edit selected appointment.

Delete Entry

Delete selected appointment.

Activate / Deactivate

Activate/deactivate the selected appointment.

Handset settings

Delete List

Delete **all** appointments.

Deactivating or accepting an appointment reminder

Precondition: An appointment reminder is sounding.

OFF Press the display key to deactivate the appointment reminder.

Or:

SMS Press display key to accept the appointment reminder with an SMS.

Displaying missed appointments and anniversaries

Missed appointments/anniversaries (page 24) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (page 25).

The most recent entry is at the head of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.** Pressing the display key will also open the **Missed Alarms** list.

To open the list from the menu:

 →  → **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a

missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete

Delete appointment

SMS

Write an SMS.



Press and **hold** (idle status).

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Using Bluetooth devices

Your Gigaset S68H handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register 1 Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or to exchange data with the computer (page 67).


In order to be able to continue using the phone numbers, it is essential that area codes (international and local area codes) are saved on the phone (see page 56).

 
You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

 
Please note:

- You can only operate headsets on your handset that have the **headset profile**.
- It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the handset, and when a number is dialled from the handset.

Activating/deactivating Bluetooth mode

 → Activation

Press **OK** to activate or deactivate Bluetooth mode ( = activated).

In idle status, the  icon on the handset shows that Bluetooth mode is activated:




Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

Please note:

- If you register a headset, any headset that is already registered will be overwritten.
- If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please **deactivate** this connection before you start the registration process to the Gigaset.

 → Search Headset / Search Data Device

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

Options Press the display key.

Trust Device Select and press **OK**.



Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

The device is saved in the list of known devices.

Cancelling/repeating current search

To cancel search:

Cancel Press the display key.

Repeat search if necessary:


Options Select and press **OK**.

Repeat Search



Select and press **OK**.

Editing the list of known (trusted) devices

Open list

 → Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

Viewing entries

Open list →  (select entry)

Options Press the display key.


View Entry Select and press **OK**.
Device name and address are displayed.
Back with **OK**.

Deregistering Bluetooth devices

Open list →  (select entry)

Options Press the display key.

Delete Entry Select and press **OK**.

 Back: press and **hold** key.

Please note:

If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

Changing the name of a Bluetooth device

Open list →  (select entry)

Options Press the display key.

Rename Select and press **OK**.



Change name

Save

Press the display key




Back: Press and **hold** key.

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

◆ Reject

 Press the display key.



◆ Accept



Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.



If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.


Once the PIN has been confirmed, save to the list of known devices:


-  Press the display key
-  Press the display key: use temporarily.


Changing the Bluetooth name of the handset

You can change the handset name used to identify it on the display of another Bluetooth device.

 →  → Data Transfer → Bluetooth
→ Own Device Name

 Press the display key

 Change name

 Press the display key

 Back: Press and **hold** key.

Setting your own area code

In order to transfer phone numbers (for example vCard), it is essential that your area code (international and local area code) is saved on the phone.


Some of these numbers are already pre-set.


 →  → Handset → Area Codes


Check that the (pre)set area code is correct.


▶ Change multiple line input:

 Select/change input field.

 Navigate in the input field.

 If necessary, delete number: press the display key.

 Enter number.



 Press the display key.

Example:

Area Codes

International code:
00 - 44


Local area code:
0 - [20]

Restoring the handset to the factory settings

You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists and the handset's registration to the base station as well as the content of Resource Directory are retained.

 →  → Handset → Reset Handset

 Press the display key.

 Press and **hold** (idle status).

Base station settings

The base station settings are carried out using a registered Gigaset S68H handset.

Protecting against unauthorised access


Protect the system settings of the base station with a PIN known only by you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base station or when restoring the default settings.


Changing the system PIN



You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only by you.

Gigaset S685: Setting a system PIN facilitates remote operation of the answer machine (page 41).

 →  → Base → System PIN

 Enter the current system PIN and press **OK**.

 Enter new system PIN. For security the PIN is shown as four stars (****).

  Jump to the next line, re-enter new system PIN and press **OK**.

 Press and **hold** (idle status).

Resetting the system PIN

If you have forgotten your system PIN you can reset the base station to the original code **0000**:

Disconnect the power cord from the base station. Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after a while.

The base has now been reset and the system PIN **0000** set.

Please note:

All handsets are deregistered and must be re-registered.



Changing ring tones (Gigaset S685 only)

◆ Volume:

You can choose between five volumes and the "crescendo" ring, see page 50. Select "0" to deactivate the base station ringer melody.

◆ Ring tones:

 
You can set a ringer melody for external calls, see page 50.

 →  → Base → Ringer Settings

For how to adjust the settings, see page 50.

Activating/deactivating music on hold



 →  → Base → Music on hold

Press **OK** to activate or deactivate music on hold ( = on).


Repeater support

With a repeater you can increase the range and reception strength of your base station. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Precondition: A repeater is registered. Eco mode is disabled.

 →  → Base → Add. Features
→ Repeater Mode

Yes Press the display key.

When repeater mode is active, the menu item is marked with .

Please note:


Repeater support and eco mode (see page 13) rule each other out, i.e. both functions cannot be used at the same time.

Restoring the base station to the factory settings


When the settings are restored


- ◆ eco mode is disabled,
- ◆ handsets are still registered,
- ◆ the system PIN is not reset.

 →  → Base → Base Reset

 Enter the system PIN and press **OK**.

Yes Press the display key.

Cancel the restoring process by pressing  or the display key **No**.

 Press and **hold** (idle status)

Connecting the base station to PABX

The following settings are only necessary when your PABX requires them; see the PABX user guide.




You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Dialling modes and recall




The current setting is indicated by .

Changing the dialling mode

The following dialling modes can be selected:


 
- ◆ Touch tone dialling (DTMF)
 - ◆ Pulse dialling (DP)
-  →  → Base → Add. Features
→ Dialling Mode
- Select dialling mode (= on) and press **OK**.
-  Press and **hold** (idle status).


Setting recall

-  →  → Base → Add. Features
→ Recall
- Select flashing time (= on) and press **OK**.
-  Press and **hold** (idle status).

Saving an access code (outside line code)

Precondition: You may have to enter an access code for external calls in your PABX, e.g. "0".

 →  → Base → Add. Features
→ Access Code

 Enter or change access code, max. 3 digits.

▶ Save changes: (page 66).

 
If an access code has been saved,

- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, call history or answer machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers and SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **<C>**.

Setting pauses

Changing pause after line seizure


You can change the length of pause that is inserted between pressing the talk key

 and sending the number.

Open menu.

Press keys.

 Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press **OK**.

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open menu.



Press keys.



Enter a digit for the length of the pause (**1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms) and press **OK**.

Changing a dialling pause (pause after access code)

Precondition: You have saved an access code (page 59).



Open menu.



Press keys.



Enter a digit for the length of the pause (**1** = 1 sec.; **2** = 2 sec.; **3** = 3 sec.; **4** = 6 sec.) and press **OK**.

To insert a dialling pause: press **R** for 2 seconds. A P appears in the display.

Switching temporarily to touch tone dialling (DTMF)

If your PABX still operates with pulse dialling (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call.

Precondition: You are conducting a call or have already dialled an external number.



Press the star key.

After the call is ended, pulse dialling is automatically activated again.

Appendix

Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.


Questions and answers

If you have any questions about using your phone, visit us at www.qigaset.com/customer-care at any time. The table below contains a list of common problems and possible solutions.

Registration or connection problems with a Bluetooth headset.


- ▶ Reset the Bluetooth headset (see the user guide for your headset).
- ▶ Delete registration data from the handset when deregistering the device (see page 55).
- ▶ Repeat the registration process (see page 55).

The display is blank.

1. The handset is not turned on.
 - ▶ Press **and hold** the end call key .
2. The battery is almost flat.
 - ▶ Charge or replace the batteries (page 8).

The keys of a handset do not respond when pressed.

The keypad lock is activated.

- ▶ Press and **hold** the hash key  (page 11).

"Base station x" flashes on the display.

1. The handset is outside the range of the base station.
 - ▶ Move the handset closer to the base station.
2. The base station's range is reduced because eco mode is activated.
 - ▶ Deactivate eco mode (page 13) or reduce the distance between the handset and the base station.
3. The handset has been deregistered.
 - ▶ Register the handset (page 43).
4. The base station is not turned on.
 - ▶ Check the base station's mains adapter (page 8).

Base Search flashes in the display.

The handset is set to **Best Base** and no base station is turned on or within range.

- ▶ Move the handset closer to the base station.
- ▶ Check the base station's mains adapter (page 8).

Handset does not ring.

1. The ringer melody is deactivated.
 - ▶ Activate the ringer melody (page 50).
2. Call diversion set to **All Calls**.
 - ▶ Deactivate call diversion (page 19).

You cannot hear a ringer/dialling tone from the fixed network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong jack connections.

- ▶ Please always use the phone cord supplied or ensure that the jack connections are correct when purchasing from a retailer (page 8).

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.
▶ Reset the system PIN to 0000 (page 57).


Forgetting the system PIN.

▶ Reset the system PIN to 0000 (page 57).

Call charges are not displayed.

1. Your network provider does not support this feature.
2. There are no metering pulses.
▶ Ask your network provider to transmit the metering pulses.

The other party cannot hear you.

You have pressed the  (INT) key. The handset is "muted".
▶ Activate the microphone again (page 18).

The number of the caller is not displayed despite CLIP.

Calling Line Identification is not enabled.
▶ **The caller** should ask the network provider to release Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.
▶ Repeat the operation.
Watch the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your phone system is set for pulse dialling.
▶ Set your phone system to touch tone dialling.

Gigaset S685 only:

No time is specified for a message in the call history.

Date/time is not set.
▶ Set the date/time (page 10).

The answer machine reports "PIN is incorrect" to the remote control.

1. You have entered the wrong PIN
▶ Enter the system PIN again
2. The system PIN is still set to 0000.
▶ Change the system PIN (page 57).

The answer machine is not recording any messages/has switched over to announcement.

Its memory is full.
▶ Delete old messages.
▶ Play back new messages and delete.

Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet can be reached any time from anywhere.

www.gigaset.com/customer-care
It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on:

UK helpdesk: 0 84 53 67 08 12.

Please have your proof of purchase ready when calling with regard to guarantee/warranty claims.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for analogue phone lines in the UK.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs.

CE 0682

Bluetooth  **Qualified Design Identity**

The Bluetooth QD ID for your Gigaset S68H is: B012741.

Guarantee Certificate United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to

comply with information contained in the user guides.

- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications GmbH, Schla-venhorst 66, D-46395 Bocholt, Germany.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Specifications

Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 600 – 1200 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Sanyo NiMH 800
- ◆ GP 850 mAh
- ◆ Yuasa Technologies AAA 800

The device is supplied with two recommended batteries.

Handset operating times/charging times

The operating time of your Gigaset depends on the age of the batteries and the way they are used. (All times are maximum possible times and apply only when the display backlight is deactivated.)

	Capacity (mAh) approx.			
	600	800	1000	1200
Standby time (hours)	130	180	220	265
Talktime (hours)	7	10	12	14
Operating time for 1.5 hour call each day (hours)	70	90	115	135
Charging time, charging cradle (hours)	6	9	11	13
Charging time, base station (hours)	5	7	8	10

At the time of going to print, batteries up to 900 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.gigaset.com/customer-care

Base station power consumption

In standby mode: Gigaset S680: approx. 1.2 watt

Gigaset S685: approx. 1.6 watt

During a call: Gigaset S680: approx. 1 watt

Gigaset S685: approx. 1.5 watt

General specifications



DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions in operation	+5 °C to +45 °C; 20% to 75% humidity
Dialling mode	DTMF (touch tone dialling)/ DP (pulse dialling)





Notes on the user guide

This section explains the meaning of certain typographical conventions that are used in this user guide.

Example of a menu input

The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.



 →  → Display

- ▶ With the handset in idle status, press on the **right** of the control key () to open the main menu.
- ▶ With the / control key, select the  icon.



Settings appears in the display header.


- ▶ Press the display key **OK** to confirm the Settings function.

The Settings submenu is displayed.

- ▶ Press on the bottom of control key () repeatedly until the Display menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

Contrast Select and press **OK**.

- ▶ Press on the bottom of control key () repeatedly until the Contrast menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

 Select contrast and press the display key **Save**.

- ▶ Press on the right or left of the control key to set the contrast.
- ▶ Press the display key **Save** to confirm the selection.



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

Example of multiple line input

In many situations you can change settings or enter data in several lines of a display.

In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):

Date/Time

Date:
[15.11.2007]

Time:
11:11

 **Save**

Date:


Enter the day, month and year in 8-digit format.

The second line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Time:


Enter hours/minutes in 4-digit format.

- ▶ Press the  key.

The fourth line is marked with [] to show it is active.





 
- ▶ Enter the date using the digit keys.

- ▶ Save the changes.

▶ Press the display key **Save**.
 ▶ Then press and **hold** the  key.
 The handset switches to idle status.

Writing and editing text

 
 
The following rules apply when writing a text:

- ◆ Control the cursor with    .
- ◆ Characters are inserted on the left of the cursor.
- ◆ Press the star key  to show the table of special characters. Select the required character, press the display key **Insert** to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing an SMS/name (without predictive text)

Press the relevant key several times to enter letters/characters.

 
 
Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
 1 sp			1							
 2 abc	a	b	c	2	ä	á	à	â	ã	ç
 3 def	d	e	f	3	ë	é	è	ê		
 4 ghi	g	h	i	4	ï	í	ì	î		
 5 jkl	j	k	l	5						
 6 mno	m	n	o	6	ö	ñ	ó	ô	õ	
 7 pqrs	p	q	r	s	7	ß				
 8 tuv	t	u	v	8	ü	ú	ù	û		
 9 wxyz	w	x	y	z	9	ÿ	ý	æ	ø	å
 0 +	.	,	?	!	0					

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

 
 
Setting upper/lower case or digits

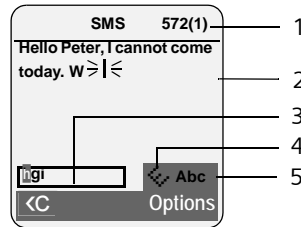
Press the hash key  **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.


Writing SMS (with predictive text)

 
EATONI predictive text helps you when you are writing SMS messages.

Each key between  and  is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel.



- 1 Remaining number of characters, in brackets: SMS part 1-n
- 2 SMS text
- 3 Selection line
- 4 EATONI is activated
- 5 Upper/lower case or digits

If this letter is the one you want, confirm it by pressing the next key. If it does not match the one you want, press the hash key  **briefly** until the letter you are looking for is reverse highlighted in the display line and then transferred to the text field.

If you press and **hold** the hash key  you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

Deactivating/activating predictive text

Precondition: You are writing an SMS.

Options Press the display key.

Predictive Text

Select and press **OK** (= on).



Press the end call key **briefly** to return to the text field.
Enter the text.


 
Additional functions via the PC interface

You can connect the handset to your computer using Bluetooth (page 54). The computer must either be equipped with a suitable Bluetooth adapter or can be switched to Bluetooth mode.

Your handset can communicate with the computer via the "**Gigaset QuickSync**" program (free download at www.gigaset.com/gigasetS680).

You can

- ◆ synchronise your handset's directory with Outlook,
- ◆ download photos (.bmp) from the computer to the handset,
- ◆ download pictures (.bmp) as screen-saver from the computer to the handset.

During the transfer of data between handset and PC, you will see  →  on the display. During this time the keypad is disabled, and incoming calls will be ignored.

Accessories

Gigaset Handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset handset S68H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor

www.gigaset.com/gigasetS68H



Gigaset Handset SL37H

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walky-talky function

www.gigaset.com/gigasetSL37H



Gigaset Handset SL56

- ◆ Illuminated graphical colour display (65 k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Voice dialling
- ◆ PC interface, e.g. for managing directory entries, ringer tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth

www.gigaset.com/gigasetSL56



Gigaset C47H handset

- ◆ Illuminated graphical colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringer tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.gigaset.com/gigasetC47H



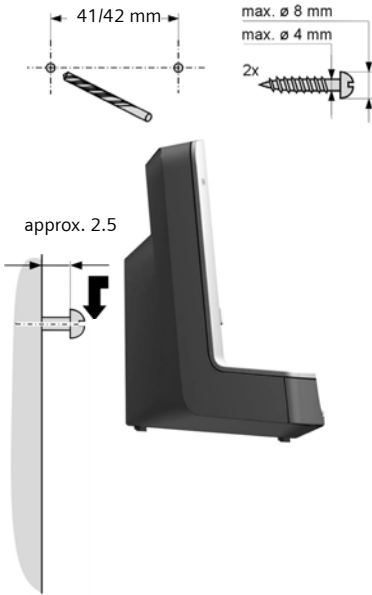
Gigaset Handset E45

- ◆ Dust and splashproof casing
- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.gigaset.com/gigasete45



Wall-mounting the base station



Index

A

Access code
 for a PABX 59
 Access protection 57
 Accessories 68
 Acknowledge tones 52
 Activating
 advisory tones 52
 answer machine 36
 answer machine
 (remote operation) 41
 appointment 53
 Bluetooth mode 55
 call acceptance 49
 handset 11
 internal listening in 45
 keypad lock 11
 room monitor 47
 two-way recording 39
 Advisory tones 52
 Alarm clock 52
 Alert tone 51
 Anniversary 24
 deactivating 24
 missed 24, 54
 saving in directory 24
 Announcement
 (answer machine) 37
 Announcement mode
 (answer machine) 36, 37
 Answer machine 36
 activating/deactivating 36
 deleting messages 38
 playing back messages 38
 recording a personal announcement/
 announce only 36
 remote operation 41
 scrolling back 38
 scrolling forward 38
 Answer machine list 25, 26
 Answer machine, see also
 Network mailbox
 Appointment 53, 54
 Appointment/anniversary
 display missed 54

Appointments
 activating/deactivating 53
 deleting 53
 managing 53
 Area code
 setting own dialling code 56
 Assigning a key 47
 Assigning numerical keys 47
 Authorisation 63
 Automatic
 call acceptance 17, 49
 last number redial 25
 network provider preselection 27

B

Base station
 changing 44
 connecting 8
 connecting and installing 7
 connecting to PABX 59
 range 8
 restoring to factory settings 58
 setting 57
 system PIN 57
 Battery
 charging 1, 10
 display 1, 10
 fitting 8
 icon 1, 10
 recommended batteries 64
 tone 52
 Beep, see Advisory tones
 Best base station 44
 Birthday, see Anniversary

Bluetooth
 accepting a call 17
 changing device name 55, 56
 deregistering devices 55
 list of known devices 55
 registering devices 55
 transferring directory (vCard) 23

C

Calendar 53
 Call
 accepting 17
 accepting (Bluetooth) 17
 ending 17
 external 17
 internal 44

Index

- party listening in 45
- picking up from answer machine . . . 39
- transferring (connect) 44, 46
- two-way recording 39
- Call acceptance 40, 49
- Call diversion 19
- Call duration 17
- Call history 26
- Call screening during recording 39
- Call waiting
 - accepting/rejecting 20
 - activating/deactivating 19
 - internal call 45
- Call-by-call 21
 - numbers 21, 27
- Call-by-call list
 - key 1
- Calling Line Identification 17
- Care of the telephone 61
- Changing
 - destination number 47
 - device name (Bluetooth) 55, 56
 - dialling mode 59
 - display language 48
 - earpiece volume 49
 - handsfree volume 49
 - internal number of a handset 46
 - name of a handset 46
 - pause time 59
 - ringer melody 50
 - system PIN 57
- Character set 30, 32
- Charge saving function (remote operation) 40
- Charge status display 1
- CLI, CLIP 17
- CLIP picture 18, 21, 51
- CLIR 19
- Configuring the network mailbox 42
- Confirmation tone 52
- Connecting, base station to PABX 59
- Consultation 20
- Consultation call (internal) 45
- Control key 1, 11
- Correcting incorrect entries 13
- Customer Care 62
- D**
- Deactivating
 - advisory tones 52
 - answer machine 36
 - appointment 53
 - appointment reminder 54
 - call acceptance 49
 - handset 11
 - internal listening in 45
 - keypad lock 11
 - preselection 28
 - room monitor 47
 - two-way recording 39
- Delete key 11
- Deleting
 - announcement for answer machine 37
 - characters 13
 - message 38
- Deregistering (handset) 44
- Deregistering devices (Bluetooth) . . . 55
- Destination number (room monitor) . . 47
- Dialling
 - call-by-call list 22
 - directory 22
 - mode 59
 - quick dial 47
 - with quick dial 23
- Dialling pause 60
 - entering 1
- Directory 21
 - copying number from text 23
 - managing entries 22
 - opening 11
 - order of entries 22
 - saving anniversary 24
 - saving entry 21
 - saving the sender's number (SMS) 32
 - sending entry/list to handset 23
 - transferring a vCard (Bluetooth) 23
 - using to enter numbers 24
- Display
 - backlight 49
 - changing display language 48
 - contrast 48
 - in idle status 12
 - memory (directory/call-by-call) 23
 - memory (My stuff) 52
 - missed appointments/
 - anniversaries 54
 - network mailbox report 42
 - number (CLI/CLIP) 17

screensaver	49
setting	48
withholding (CLIR)	19
wrong language	48
Display keys	1, 11
assigning	47
DP (pulse dialling)	59
Draft message list (SMS)	30

E

Earpiece mode	18
Earpiece volume	49
EATONI (predictive text)	66
Eco mode	13
E-mail address	
copying from the directory	24
End call key	1, 17
Ending, call	17
Ending, see deactivate	
Entry	
saving, changing (preselection)	28
selecting (menu)	65
selecting from directory	22
Error tone	52
Example	
menu input	65
multiple line input	65
External call	
diverting to answer machine	39

F

Fast access	
answer machine	40
network mailbox	42

G

Group call	44
Guarantee Certificate	63

H

Handset	
activating/deactivating	11
advisory tones	52
changing internal number	46
changing name	46
changing the number	46
changing to a different base	
station	44
changing to best reception	44
contact with liquid	61
deregistering	43, 44

display backlight	49
display language	48
earpiece volume	49
handsfree volume	49
idle status	12
list	11
locating	44
muting	18
paging	44
registering	43
registering to a different base	
station	44
restoring to factory settings	56
screensaver	49
setting	47
setting up	8
signal strength	8
transferring a call	44
using room monitor	46
using several	43
Handset operating time	
in room monitor mode	46
Handsfree key	1
Handsfree talking	18
Hash key	1, 11
Headset socket	10
Hearing aids	5
Hold music	18, 57
setting	57

I

Icon	
alarm clock	52
answer machine	36
battery	10
display	11
for new messages	25
keypad lock	11
new message	38
new SMS	31
ringer melody	50
Idle status (display)	12
Idle status, returning to	12
Incoming message list (SMS)	31
Incorrect input (correction)	13
Input language (SMS)	30
Installation, base station	7
Internal	
consulting	45
listening in	45

Index

- making calls 44
- Internal call 44
 - call waiting 45

K

- Key 1 (fast access) 1, 40
- Keypad lock 11
- Keys
 - call-by-call list 1
 - control key 1, 11
 - delete key 11
 - display keys 1, 11
 - end call key 1, 17
 - fast access 1, 40
 - handsfree key 1
 - hash key 1, 11
 - message key 1
 - on/off key 1
 - quick dial 23
 - recall key 1
 - star key 1
 - talk key 1, 17

L

- Language, display 48
- Last number redial 25
- Linking, see SMS
- Liquid 61
- List 21
 - answer machine 25, 26
 - call history 26
 - call-by-call list 21
 - handsets 11
 - known devices (Bluetooth) 55
 - missed calls 26
 - network mailbox 26
 - SMS draft message list 30
 - SMS incoming message list 31
 - SMS list 26
- Listening in to call 45
- Locating, handset 44
- Lock
 - activating/deactivating keypad protection 11

M

- Mailbox ID, see SMS
- Mailboxes, see SMS
- Mains adapter 5

Making calls

- accepting a call 17
 - external 17
 - internal 44
- Making cost-effective calls 27
- Manual last number redial 25
- Medical appliances 5

Memory

- directory/call-by-call 23
- My stuff 52

Menu

- end tone 52
- menu guidance 12
- menu input 65
- opening 11
- overview 14

Message key

- open list 31
- opening lists 25

Messages

- deleting 38
- key 1
- marking as "new" 38
- new message icon 38
- playing back 38

Microphone

- 1

Missed

- anniversary 54
- appointment 54
- calls 26

- Multiple line input 65

Muting

- handset 18

N

Name

- of a handset 46

- Network provider (numbers list) 21

- Network provider preselection,
 - automatic 27

- Network services 19

- Notification by SMS 32

Number

- as destination for room monitor 47
- copying from an SMS text 32
- copying from directory 24
- copying to directory 23
- displaying caller's number (CLIP) 17
- entering with directory 24
- saving in the directory 21

- withholding 19
- Numbers list
 - network provider 21
- O**
- On/Off key 1
- Order in directory 22
- Outside line code 59
- P**
- PABX
 - connecting base station 59
 - pauses 59
 - saving access code 59
 - setting dialling mode 59
 - setting recall 59
 - SMS 34
 - switch to touch tone dialling 60
- Pack contents 7
- Paging 44
- Pause 59, 60
- PC interface 67
- Phone jack assignment 8
- Picture
 - deleting 51
 - renaming 51
- Picture CLIP 21, 51
- PIN change
 - system PIN 57
- Playing back
 - announcement (answer machine) 37
 - message (answer machine) 38
- Power consumption 64
- Predictive text 66
- Preselection 27
 - deactivating 28
- Protecting the phone against
 - access 57
- Pulse dialling 59
- Q**
- Questions and answers 61
- Quick dial 21, 47
- R**
- Range 8
- Recall 59
- Recall key 1
 - pause after 60
- Reception booster, see Repeater
- Recording
 - quality 40
 - time 40
 - two-way recording 39
- Registering (handset) 43
- Registering devices (Bluetooth) 55
- Reminder call 24
- Remote operation 41
- Repeater 58
- Resource Directory 51
- Ringback 20
- Ringer melody
 - changing 50
 - setting melody 57
 - setting volume 50, 57
- Room monitor 46
- S**
- Saving (access code) 59
- Screensaver 49
- Searching in directory 22
- Sending
 - directory entry to handset 23
- Sensitivity (room monitor) 47
- Service 62
- Setting
 - date 10
 - melody 57
 - screensaver 49
 - time 10
- Setting up
 - handset 8
- Shortcut 14
- Signal strength 8
- SMS 29
 - active send service centre 29
 - changing mailbox 33
 - deleting 30
 - draft message list 30
 - forwarding 31
 - incoming message list 31
 - input language 30
 - linked 29
 - mailbox ID 33
 - mailboxes 33
 - notification by SMS 32
 - notification number 32
 - notification type 32
 - PIN protection 33
 - reading 30

Index

receiving	31
replying to and forwarding	31
rules	29
saving number	32
self help with error messages	35
sending to a personal mailbox.	33
to a PABX	34
troubleshooting	35
writing.	29, 66
SMS centre	
changing number	34
setting	34
SMS list	26
Snooze mode.	53
Sound, see Ringer melody	
Special functions	59
Specifications	64
Star key	1
System settings	57
T	
Talk key	1, 17
Text message, see SMS	
Toggling	20
Touch tone dialling	59, 60
Troubleshooting.	61
Troubleshooting (SMS).	35
U	
Unknown	18
Unknown caller	18
V	
Viewing the network mailbox report	42
VIP (directory entry).	22
Volume	
earpiece	49
earpiece volume.	49
handset handsfree volume	49
loudspeaker	49
ringer melody.	50, 57
setting	50
W	
Warning tone, see Advisory tones	
Withholding	
Calling Line Identification	19
Writing (SMS)	29
Writing, editing text	66