

# Gigaset

## C620H

### Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability.

This product's packaging is eco-friendly!

To learn more, visit [www.gigaset.com](http://www.gigaset.com).



GIGASET. INSPIRING CONVERSATION.  
**MADE IN GERMANY**



# Overview of handset








 



- 1 **Display in idle status**
- 2 **Status bar** ( → page 35)  
Icons display current settings and operating status of the phone
- 3 **Display keys** ( → page 14, → page 25)
- 4 **End call key, On/off key**  
End call, cancel function, go back one menu level (press **briefly**), back to idle status (press and **hold**), switch handset on/off (press and **hold** in idle status)
- 5 **Baby Monitor key** ( → page 33)
- 6 **Message key** ( → page 15)  
Access to the calls and message lists;  
**Flashing:** new message or new call
- 7 **Hash key**  
Keypad lock on/off (press and **hold** in idle status);  
Toggles between upper/lower case and digits;  
Insert a dialling pause (press and **hold**)
- 8 **Microphone**
- 9 **Recall key**  
Consultation call (flash) (press and **hold**)
- 10 **Star key**  
In idle status: Ringtone on/off (press and **hold**);  
With an open connection: switch from pulse dialling to tone dialling (press **briefly**);  
When inputting text: Open special characters table
- 11 **Connection socket for headset** ( → page 10)
- 12 **Key 1**  
Select network mailbox (press and **hold**)
- 13 **Call Protection key** ( → page 23)
- 14 **Answer call key / Handsfree key**  
Dial number displayed;  
Accept call; switch from earpiece to handsfree mode;  
Open the redial list (press **briefly**);  
start dialling (press and **hold**);
- 15 **Control key / Menu key** ( → page 13)

# Contents

---

Overview of handset .....	1
Safety precautions .....	3
Getting started .....	4
Understanding the operating steps in the user guide .....	12
Getting to know your phone .....	13
Making calls .....	17
Adjusting the telephone settings .....	20
Restoring phone to default setting .....	26
ECO DECT .....	26
Multiple handsets .....	27
Phonebook (Address book) .....	28
Call list .....	30
Calendar .....	31
Alarm clock .....	32
Baby monitor .....	33
Display icons .....	35
Menu tree .....	37
Customer Service & Assistance .....	38
Environment .....	41
Appendix .....	42
Index .....	44

## Safety precautions

	<p>Read the safety precautions and the user guide before use.</p> <p>The device cannot be used in the event of a power failure. In case of a power failure it is also <b>not possible to make emergency calls</b>.</p> <p>Emergency numbers <b>cannot</b> be dialled if the <b>keypad/display lock</b> is activated!</p>
	<p>Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).</p>
	<p>The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.</p>
	<p>Use only the power adapter indicated on the device.</p> <p>Whilst charging, the power socket must be easily accessible.</p>
	<p>Use only <b>rechargeable batteries</b> that correspond to the <b>specification</b> (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.</p>
	<p>Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.</p>
	<p>Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.</p>
	<p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.</p> <p>The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p>
	<p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").</p>

## Getting started

---

### Checking the contents of the package

- ◆ One handset,
- ◆ One charging cradle incl. power adapter,
- ◆ One battery cover (rear cover for the handset),
- ◆ Two batteries,
- ◆ One belt clip,
- ◆ One user guide.

### Setting up the charging cradle

The charging cradle is designed for use in closed, dry rooms in a temperature range of +5°C to +45°C.


- ▶ Set up the charging cradle on a flat, non-slip surface.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

#### Notes

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.
- ◆ Pay attention to the range of the base. This is up to 50 m inside buildings and up to 300 m in unobstructed outdoor areas. The range is reduced when **Maximum Range** is deactivated.

### Connecting the charging cradle

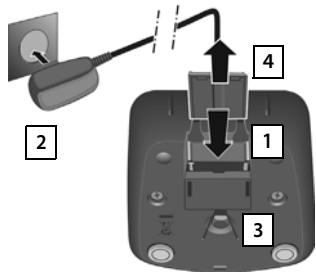

- ▶ Connect the flat plug to the charging cradle **1**.
- ▶ Plug the power adapter into the power socket **2**.

If you have to remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3** and disconnect the plug **4**.

## Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film!**

### Inserting the batteries and closing the battery cover

#### Caution


Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 42), as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries with the polarity in the right direction (for correct +/- direction, see diagram).



- ▶ First insert the battery cover on the top **1**.
- ▶ Then press the cover **2** until it clicks into place.

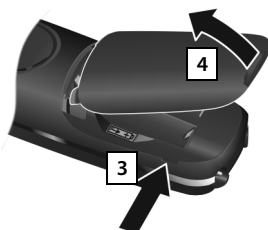

To open the battery cover, for example to change the batteries:


- ▶ Grip the notch on the side of the cover **3** and pull the battery cover upwards **4**.

## Getting started

### Belt clip

The handset has notches on each side to attach the belt clip.

- ◆ **To attach** — press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- ◆ **To remove** — press the centre of the belt clip firmly with your right thumb, push the fingernail of your left thumb up between the clip and the casing and pull the clip in an upward direction.

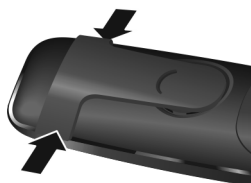

### Charging the batteries

The batteries are supplied partially charged. Please charge completely before use. (The batteries are fully charged when the power icon ⚡ disappears from the display.)

- ▶ Charge the handset in the charging cradle for **11.5 hours**.



#### Notes

- ◆ The handset may only be placed in the designated base/charging cradle.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.




## Changing the display language

You can also change the display language via the menu:

▶ ▶ OK ▶ Language ▶ OK ▶ Select language ▶ Select

or, if you do not understand the language currently set, go to:

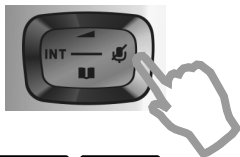

- ▶ Press right on the control key.




- ▶ Press keys and **slowly** one after the other.

### Example



The language selection display appears.  
The current language (e.g. English) is selected.

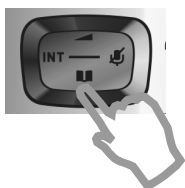

- ▶ Press the down control key ...

### Example



... until the language you wish to use is displayed e.g. French.

- ▶ Press the **right** key, directly under the display, to select the language.

### Example



The selection is marked with .

- ▶ Press and **hold** the End call key to return to idle status.

## Registering the handset

The registration process depends on the base.

◆ **Automatically registering the Gigaset C620-620A handset to base station:**

- ▶ Place the handset in the base.

If automatic registration does not work, the handset will have to be registered manually.

◆ **Manually registering the handset:**

You must initiate registration on the handset **and** on the base. Both must be carried out **within 60 secs.**

- ▶ **On the base:** Press and **hold** (min. 3 secs) the Registration/paging key.
- ▶ **On the handset,** press the display key **Register**.

Or:

- ▶  ▶  ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK**


Display shows: **Searching for a base in registration mode.** The connection to the base will be established; this may take some time.

- ▶ Enter the system PIN if required (factory setting: **0000**). ▶ **OK**

When registering, the display screen shows: **Handset is registering**


After registering successfully, the display screen shows: **Handset registered**

Your handset can be registered on up to four bases. To see how to use your handset with multiple bases and de-register a handset, refer to the user guide for the base.

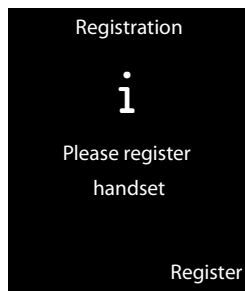

## Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

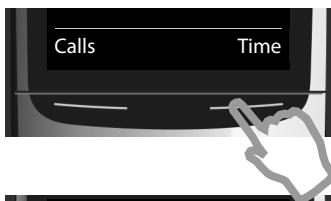

- ▶ Press the key **Time** below the display screen to open the input field.

(If you have already set the date/time, open the input field via the menu:

☰ ▶ ⚙ ▶ OK ▶ Date/Time ▶ OK)

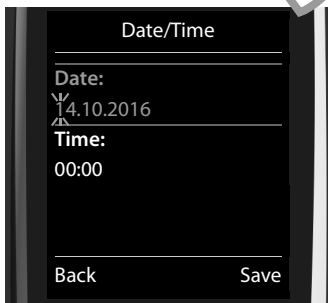

The submenu **Date/Time** is shown on the display.

- ▶ The active input position flashes.  
Enter the day, month and year as an 8-digit number via the keypad,  
e.g. 

1	00
---	----

4	00
---	----

1	00
---	----

0	0
---	---


2	00
---	----

0	0
---	---

1	00
---	----

6	00
---	----

  
for 14.10.2016.

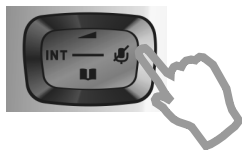

Press the **right** or **left** control key to change the input position, e.g. to correct an entry.



- ▶ Press the **down** control key to switch to the time input field.
- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g., 

0	0
---	---


7	00
---	----

1	00
---	----


5	00
---	----

  
for 07:15 am.  
Change the input position with the control key if necessary.
- ▶ Press the key **Save** below the display screen to save the entry.

## Getting started

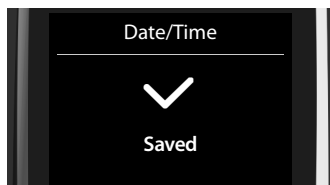

Display shows: **Saved**. You will hear a confirmation tone.

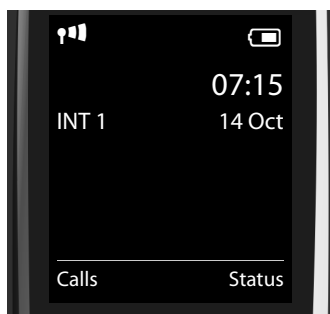

You will automatically return to idle status.

**Your phone is now ready for use.**

## Connecting the headset



You can connect a headset with 2.5 mm jack connectors. For information on recommended headsets, see the relevant product page at [www.gigaset.com](http://www.gigaset.com)

## What would you like to do next?

After successfully setting up the phone, you can make calls straight away, customise your Gigaset according to your requirements or firstly familiarise yourself with the operation.

---

### Setting ringtones

Assign specific tunes to internal and external calls, reminders ( → page 21), wake-up calls ( → page 32) and to certain callers ( → page 28).

---

### Protecting yourself against unwanted calls

Set your phone up so that it doesn't ring if there is an anonymous call or use the time control ( → page 23). Use the black list to block calls from unwanted numbers ( → page 24).

---

### Register an existing Gigaset handset and add it to the phonebook

Use available handsets to continue calling from your new base. Transfer directory entries from these handsets to your new handset ( → page 29).

---

### Configuring ECO DECT settings


 
 
 
Reduce the transmission power (emissions) of your phone ( → page 26).

---

**If you have any questions about using your phone, please read the tips on troubleshooting ( → page 39) or contact our Customer Service team ( → page 38).**

## Understanding the operating steps in the user guide

The keys on your Gigaset handset are set out in these operating instructions as follows:

	Answer call key / Menu key / End call key
	Number / Letter keys
	Star key / Hash key
	Message key / Recall key / Call Protection key / Baby Monitor key










Overview of display icons (→ page 35).

### Example: Activating/deactivating Auto Answer

Illustration in the user guide:


 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** (☑ = activated)

Follow this procedure:

- ▶ : With the handset in idle status, press the **right** control key to open the main menu.
- ▶ : Navigate to the  icon using the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Settings**.
- ▶  **Telephony**: Scroll to the entry **Telephony** with the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Telephony**.
- ▶ **Auto Answer**: The activate/deactivate auto answer function is selected.
- ▶ **Change** (☑ = activated): Press the display key **Change** or the middle of the control key  to alternate between activating or deactivating (☑ = activated, ☐ = deactivated).

 
# Getting to know your phone

## Switching the handset on/off

- ▶ Press and **hold** the End call key  in idle status to switch the handset on or off.


## Locking/unlocking the keypad

The keypad lock prevents any accidental use of the phone. If you press a key when the keypad is locked, a message is displayed.

- ▶ Press and hold the  key to lock or unlock the keypad.

If a call is signalled on the handset, the keypad automatically unlocks, and you can accept the call. It then locks again when the call is finished.






## Control key

In the description below, the side of the control key (up, down, right, left, middle) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".






The control key allows you to navigate within menus and entry fields. In idle status or during an external call, it has the following functions:

### When the handset is in idle status

-  Open the phonebook.
-  or  Open the main menu.
-  Open list of handsets.
-  Bring up the menu for setting the handset's call volume (→ page 19).

### During an external call

-  Open the phonebook.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

### Functions when pressing the centre of the control key

The key has different functions, depending on the operating situation.

- ◆ **In idle status**, it opens the main menu.
- ◆ **In submenus, selection and entry fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

#### Note


These instructions demonstrate opening the main menu by pressing the right of the control key and confirming the functions by pressing the appropriate display key. However, if you prefer, you can also press the middle of the control key.

## Display keys

The display keys have a function preset by default in idle status, but the keys can be re-assigned (→ page 25).

The functions of the display keys change depending on the operating situation.

Example

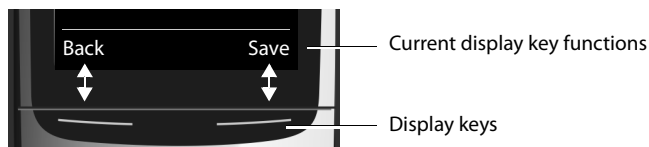

Some of the important display keys are:

- Options**      Open a menu for further functions.
- OK**            Confirm selection.
- Back**          Skip back one menu level or cancel operation.
- Save**          Save entry.

Overview of icons on the display keys (→ page 36).

## Menu guidance


The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → page 37.


### Main menu (first menu level)

- ▶ When the handset is in idle status, press **right** on the control key  to open the main menu.


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Use the control key  to navigate to the required function and press the display key **OK**.

Returning to idle status: **Briefly** press the display key **Back** or End call key .

Example

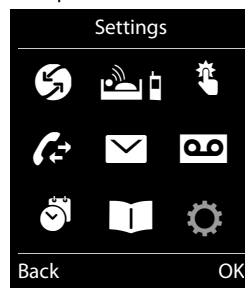



## Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function using the control key (⏮) and press **OK**.

Returning to the previous menu level: **Briefly** press the display key **Back** or End call key (⏮).

## Returning to idle status

From any menu:

- ▶ Press and **hold** the End call key (⏮).

Or:





- ▶ If you do not press a key, the display **automatically** returns to idle status after 2 minutes.

## Message lists

Any messages you receive are saved in the message lists.

An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes. Icons for message types and the number of new messages are shown on the idle display.

New messages available:

- ◆  On the answer machine (depending on the base)/network mailbox
- ◆  In the missed calls list
- ◆  In the SMS list (depending on the base)
- ◆  In the missed alarms list

Open the message list by pressing the Message key (ⓧ). You can access the following message lists:


- ◆ **Answer Mach.:** Answer machine list (depending on the base)
- ◆ **Mailbox:** Network mailbox (if your network provider supports this function and the number of the network mailbox has been stored.)
- ◆ **SMS:** Incoming SMS message list (depending on the base)
- ◆ **Missed Calls:** Missed call list (see "Call list" → page 30)
- ◆ **Missed Alarms:** Missed appointments list

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.


**Opening the list:** (ⓧ) Select required list. ▶ **OK**

**Exception:** If you select the **network mailbox**, the number of the network mailbox will be selected. Lists are not opened on the display.

### Example

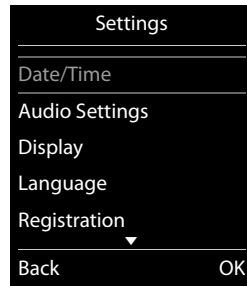

### Example

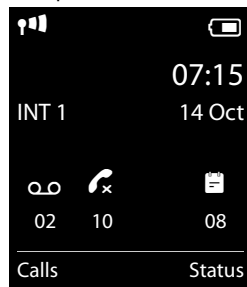


## Entering numbers and text

If several number and/or text fields are displayed (e.g. **First Name** and **Surname** in a phonebook entry), the field is automatically activated. The following fields must be activated by navigating with the control key (↩). A field is activated when a cursor is blinking inside it.

### Correcting incorrect entries

- ◆ Deleting **characters** before the cursor: press the display key **<C** briefly.
- ◆ Deleting **words** before the cursor: press and **hold** the display key **<C**.

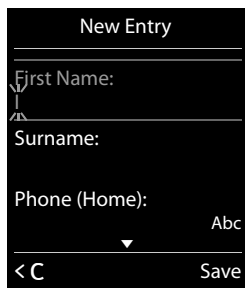


### Entering text

- ◆ **Letters/Characters:** Multiple letters and characters are assigned to each key between **0-9** and **0-9#\***. The characters are shown according to the key in a selection line at the bottom left of the display. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character.
- ◆ **Placing the cursor:** Letters/characters are inserted at the cursor position. You can insert the cursor by pressing the control key (⏏), or (↩) in fields with multiple characters.
- ◆ **Typing lower case, upper case and numbers:** Press the hash key **#<->** to switch between lower case, upper case or numbers for the **following letters**.  
When editing a phonebook entry, the first letter and each letter following a space is automatically in upper case.
- ◆ **Special characters:** Press the star key **\*<->** to open the special characters table. Navigate to the character desired using the star key and press the display key **Insert** to select it.
- ◆ **Special letters:** Umlauts or other marked/diacritic characters can be selected by pressing the corresponding letter several times. See the character table → page 43.

# Making calls

## Making an external call

▶ Enter number, **briefly** press the Answer call key .

Or:


▶ Press and **hold** the Answer call key , enter number.

You can cancel the dialling process with the End call key .

## Dialling with the redial list

The redial list contains the 20 numbers last dialled with the handset. You can manage this similarly to your phone's message lists (→ page 15).

▶ Press the Answer call key  **briefly** to open the redial list.

▶  Select entry. ▶ Press the Answer call key . The number is dialled.

When a name and corresponding phone number are displayed: Press the display key **View**.

## Managing entries in the redial list:



▶ Open redial list. ▶  Select entry. ▶ **Options**

You can select the following functions:

◆ **Copy to Directory** ▶ **OK**

Copy an entry to the phonebook (→ page 28).

◆ **Display number** ▶ **OK**

Copy a number into the display and edit it or add to it, then select with  or save as a new entry in the phonebook with .

◆ **Delete entry** ▶ **OK**



Delete the selected entry.

◆ **Delete all** ▶ **OK**

Delete all entries.


## Dialling from the call list

 ▶  ▶ **OK** ▶  Select list. ▶ **OK**

▶  Select entry. ▶ 

▶ The number is dialled.

### Notes



- ◆ You can also bring up the call list using the display key **Calls**, but you must assign a display key accordingly (→ page 25).
- ◆ You can also open the list **Missed calls** using the Message key .



### Example



### Dialling with the phonebook

 or  ▶  ▶ OK

▶  Select entry. ▶ 


▶ If multiple numbers are entered: Select the number with  and press the Answer call key  or OK.

▶ The number is dialled.

### One touch call

 
You can set up your phone so that you can dial a specific number when you press **any key on the keyboard**. This allows children, who are unable to enter a number, to call a certain number, for example.

 ▶  ▶ OK

▶ **Activation:**  On / Off

▶ **Call to:** Enter or change the number that you wish to dial.

▶ **Save**

The activated One Touch Call appears on the idle display. The saved number is dialled by pressing any key. Press the End call key  to cancel dialling.

#### Ending one touch call mode:

▶ Press the display key OFF. ▶ Press and **hold** the  key.

Or:

▶ Press and **hold** the  key.

### Accepting a call

You have the following options:

▶ Press .

▶ If **Auto Answer** is switched on (→ page 21), remove the handset from the charging cradle.

### Handsfree mode








If you are going to let someone listen in, you should tell the other party that this is happening.

▶ Press .

Placing the handset in the charging cradle during a call:


▶ Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

## Adjusting the loudspeaker volume

- ◆ Accessing the settings **via the menu**:
  - ▶  ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK
  - ▶ **Earpiece:**  Volume can be set at 5 levels for the earpiece and headset.
  - ▶ **Speaker:**  Set the volume at 5 levels.
  - ▶ **Save**
- ◆ Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece, headset):
  - ▶ control key  ▶ .
  - ▶ The setting is saved automatically after 2 seconds or press the display key **Save**. The screen reverts back to its previous display.

## Switching the microphone on/off (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Press  to switch the microphone on/off.

## Adjusting the telephone settings

The handset and base station are preconfigured, but you can change the settings to suit your individual requirements.

The settings can be changed via the menu **Settings** whilst on a call or in idle status.

### Changing the display language


☰ ▶ ⚙ ▶ OK ▶ 🗨 Language ▶ OK ▶ 🗨 Select languages ▶ Select (● = selected)

### Setting your country and local area codes

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards). Some of these numbers are already preset. Please ensure that the prefix is correctly separated from the rest of the area code.

☰ ▶ ⚙ ▶ OK ▶ 🗨 Telephony ▶ OK  
▶ 🗨 Area Codes ▶ OK ▶ 🗨 Navigate to the entry field,  
delete the number using **<C** if needed ▶ Enter the number  
▶ Save

#### Example

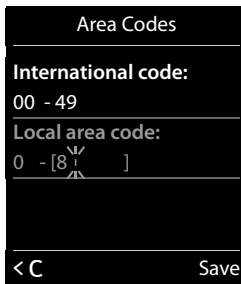

### Adjusting the handset display settings


#### Setting a screensaver

You can set a screensaver for the display when in idle status. You can choose from an analogue clock, a digital clock or an image.

To show the display in idle status, **briefly** press 📞.

☰ ▶ ⚙ ▶ OK ▶ 🗨 Display ▶ OK  
▶ Screensaver (✓ = activated) ▶ Edit  
▶ Activation: 🗨 On / Off  
▶ Selection:  
    🗨 Digital Clock / Analog Clock / [Images]  
Or:  
▶ View (View screensaver)  
▶ 🗨 Select screensaver ▶ OK  
▶ Save

#### Example

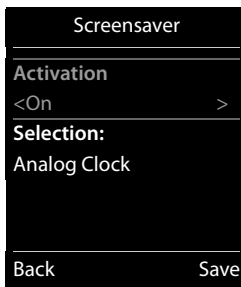

#### Setting the colour scheme

You can set the display to show a dark or a light background.

☰ ▶ ⚙ ▶ OK ▶ 🗨 Display ▶ OK ▶ 🗨 Colour Schemes ▶ OK  
▶ 🗨 Colour Scheme 1 / Colour Scheme 2 ▶ Select (● = selected)

## Setting the display backlight

The display backlight is always lit when the handset is not in the base/charging cradle or when a key is pressed. Any **digit keys** pressed appear on the display for pre-dialling.

You can also activate/deactivate the display backlight for idle status:

▶ ▶ OK ▶ Display ▶ OK ▶ Backlight ▶ OK

In Charger: On / Off

Out of Charger: On / Off

▶ Save

### Note

The handset's standby time can be significantly reduced if the display backlight is activated.

## Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as you remove it from the charging cradle.

▶ ▶ OK ▶ Telephony ▶ OK ▶ Auto Answer ▶ Change  = activated)

Regardless of the setting **Auto Answer**, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold for a further 2 seconds while placing the handset in the charging cradle.

## Setting earpiece and handsfree profiles

You can set various profiles for **handsfree** and the **earpiece** to optimally adapt your phone to your environment. Check which is the most comfortable for you.

▶ ▶ OK ▶ Audio Settings ▶ OK ▶ Earpiece Profiles/Handsfree Profiles ▶ OK ▶ Select profile ▶ Select ( = selected)

**Handsfree Profiles:** Profile 1 ... Profile 4. The default is Profile 1.

**Earpiece Profiles:** High and Low. The default is Low.

## Setting the handset ringtones

### Setting the ringtone volume

▶ ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (Handset) ▶ OK ▶ Volume ▶ OK

#### ▶ For internal calls and alarms:


Volume can be set at 5 levels or crescendo (increasing volume) for internal calls and anniversaries.

#### ▶ External Calls:

Volume can be set at 5 levels or crescendo (increasing volume) for external calls.

▶ Save

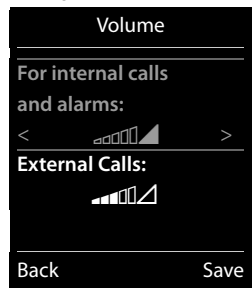

### Example



 

## Adjusting the telephone settings


### Setting the ring melody

 ▶  ▶ OK ▶  Audio Settings ▶ OK ▶  Ringtones (Handset) ▶ OK  
▶  Melodies ▶ OK




- ▶ **Internal Calls:**  Setting the volume/melody for internal calls and anniversaries.
- ▶ **External Calls:**  Setting volumes/melodies for external calls.
- ▶ **Save**

### Activating/deactivating the ringtone

Activating/deactivating the ringtone **permanently**: Press and **hold** the star key . When the ringtone is deactivated,  appears in the status bar.

 Deactivating the ringtone for a **current call**: Press **Silence** or .




### Activating/deactivating the alert tone (beep)

You can activate an alert tone (beep) instead of the ringtone. Press and **hold** the star key  and **within three seconds** ▶ **Beep**. When the alert tone is activated,  appears in the status bar. Press and **hold** the star key  to deactivate the alert tone again.

### Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

 ▶  ▶ OK ▶  Audio Settings ▶ OK ▶  Advisory Tones ▶ OK

- ▶ **Key Tones:**  **On / Off**  
Tone when keys are pressed.
- ▶ **Confirmation:**  **On / Off**  
Confirmation/error tone after making entries, advisory tone when a new message has been received.
- ▶ **Battery:**  **On / Off**  
Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds).  
There is no battery warning when the baby monitor is activated.
- ▶ **Save**



## Protection against unwanted calls

You call up the menu using the Call Protection key  (→ page 1).


### Setting time control for external calls

You can specify a time period when you want the telephone to ring at a lower volume, or not at all.

 ▶ **Time Control** ▶ **Edit**

▶ **Activation** (✓ = function activated) ▶ **Edit**

▶ **Activation:**

 **Off:** Time control deactivated.


or

 **Silent Call:**

▶ Enter the time **From** / **To** when you don't want the telephone to ring. Incoming calls are only shown on the display.

or

 **Quiet Call:**


▶ **Quiet Call Volume** Adjust using  and enter the time **From** / **To** when you want the telephone to ring at the set volume.

▶ **Save**

You can create a list of max. 15 contacts from the phonebook for whom your phone will ring at the normal volume during the low volume period:



 ▶ **Time Control** ▶ **Edit** ▶ **VIP Callers** ▶ **OK** ▶ List is displayed

◆ **Add an entry:** Press the display key **New**. ▶  Select an entry from the phonebook. ▶ **OK**


◆ **Deleting an entry:**  Select entry ▶ Press the display key **Delete**.

### Protection from anonymous callers


You can set your phone so that it doesn't ring for anonymous calls (callers who have actively withheld Calling Line Identification) or they are only shown on the display. The setting applies for all registered handsets and the base station.

 ▶  **Anonymous Calls** (✓ = function activated) ▶ **OK**


▶ **Protection Mode:**

 **No Protection:** Anonymous calls are signalled in the same way as identified numbers.

or


 **Silent Call:** Your telephone will not ring and the incoming call will only appear in the display.

or

 **Block Call:** Your telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.

▶ **Save**

### Example

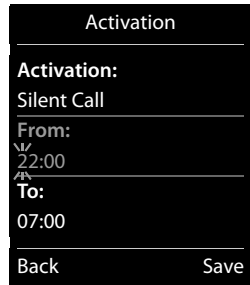

### Black list

When the black list function is activated, calls from black list numbers are not signalled or are only signalled in the display.

The setting applies for all registered handsets and the base station.

#### Editing the black list

 ▶  **Black List** (✓ = function activated) ▶ **Change** ▶ **Blocked Numbers**

▶ **New** ▶ Enter number. ▶ **OK**


Or:

▶ **Delete**: Delete entry.


#### Activating/deactivating the black list

 ▶  **Black List** (✓ = function activated) ▶ **Change** ▶  **Protection Mode** ▶ **OK**


▶ **Protection Mode**:

▶  **No Protection**: Calls from black list numbers are signalled in the same way as other calls.

or



▶  **Silent Call**: Your telephone will not ring and the incoming call will only appear in the display.

or

▶  **Block Call**: Your telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.

▶ **Save**

#### Transferring numbers from a call list to the Black List

▶ Open the call list. ▶  Select entry (missed or accepted call). ▶ **Options** ▶  **Copy to Blacklist** ▶ **OK**

### Quick access to numbers and functions

The **digit keys**  up to  can be assigned to a **number from the phonebook**.

The left and right **display keys** have a **function** preset by default, but the keys can be re-assigned (→ page 25).

You can then dial the number or start the function by simply pressing a key.


### Assigning digit keys

**Prerequisite:** You must assign a number to the digit key.

▶ Press and **hold** the digit key.

Or:

**Briefly** press the digit key. ▶ Press the display key **QuickDial**.

▶ The phonebook opens. ▶  Select entry. ▶ **OK**

The entry is saved to the corresponding digit key.

#### Note

If you delete or edit the entry in the phonebook at a later date, this will not affect the assignment to the number key.

## Selecting numbers/changing an assignment

**Prerequisite:** You must have assigned a number to the digit key.

When the handset is in idle status

- ▶ Press and **hold** the digit key: The number is dialled immediately.


Or:

- ▶ **Briefly** press the digit key: Press the left-hand display key with the number/name (abbreviated if necessary) to dial the number.

Or:

Press the display key **Change** to change the key assignment, or press the display key **Clear Key** to delete the assignment.

## Assigning display keys

- ▶ In idle status, press and **hold** the left or right-hand display key. ▶ The list of possible key assignments is opened. ▶  Select entry ▶ **OK**

Choose from the following functions:

<b>Status</b>	Access status centre (activate/deactivate: Alarm clock and depending on the base Maximum Range, No Radiation, answer machine).
<b>Baby Monitor</b>	Set and activate the baby monitor (→ page 33).
<b>Alarm Clock</b>	Set and activate the alarm clock (→ page 32).
<b>Calendar</b>	Open calendar (→ page 31).
<b>One Touch Call</b>	Set up one touch call (→ page 18).
<b>Redial</b>	Show redial list (→ page 17).
<b>More Functions...</b>	You can also choose further functions:
<b>Call Lists</b>	Show call list (→ page 30).
<b>SMS</b>	Open SMS menu (depending on the base).

## Restoring phone to default setting

---

You can reset individual modifications to handset settings.

The following are **not** affected by the reset:

- ◆ Date / time,
- ◆ Registration of handsets to the base and the current selection of the base,
- ◆ Entries in the calendar and phonebook,
- ◆ Redial list.

When resetting the handset (**Handset Reset**), audio and display settings will be deleted.

### Resetting the handset

 ▶  ▶ OK ▶  System ▶ OK ▶  Handset Reset ▶ OK ▶ Confirm security prompt with Yes



---

ECO DECT uses less energy and reduces transmission power.

### Reducing radiation (depending on the base)

**The radiation can only be reduced if your base supports this function.**

Your telephone's transmission power is **automatically** reduced according to the distance to the base.

You can reduce the radiation from the handset and the base even further by

- ◆ deactivating **Maximum Range**,
- ◆ activating **No Radiation**.




For more details, see the user guide for your base station.


# Multiple handsets

---

## Making internal calls



Internal calls to other handsets registered to the same base are free of charge.


 (press briefly) ▶ The list of handsets is opened. Your own handset is marked <. ▶   
Select the handset or **Call all** (group call) from the list if required. ▶ 

**Holding down**  immediately starts a call on **all** registered handsets.

 
## Internal consultation/internal transfer

You receive a call from an **external** participant and would like to transfer the call to an **internal** participant or wish to consult him/her.


 ▶ The list of handsets is opened. ▶ If more than two handsets are registered to the base, select one handset or **Call all**. ▶  or **OK**

**Holding a consultation call:** You are speaking to the internal participant and are returning to your external call: ▶ **Options** ▶  **End active call** ▶ **OK**

**Transferring an external call:** You have two options to transfer the call:

- ▶ Wait until the participant called answers, then hang up:  
Press the End call key .


Or:

- ▶ Hang up before the participant calls: Press the End call key .


If the participant called does not answer or does not transfer the call, end the consultation with **End**.


## Establishing a conference call/call swapping

You are taking a call while a second call is being held. Both callers are indicated on the display.

- ▶ **Call swapping:** You can switch between both participants using .

- ▶ **Establishing a three-way conference call:** Press **Conf**.

**Ending a conference call:** Press **End Conf**. You are reconnected with the external participant. You can switch again between both participants using .

Each of the callers can end their participation in the conference call by pressing the End call key .

## Accepting/rejecting call waiting

If you get an external call while conducting an internal call, you will hear the call waiting tone. If the number is transferred, you will see it or the name of the caller on the display.

- ▶ **Rejecting a call:** ▶ Press the display key **Reject**.
- ▶ **Accepting a call:** ▶ Press the display key **Accept**. You are now speaking to the new caller. The previous call is placed on hold.

**Ending the current call and returning to the call on hold:**

- ▶ **Options** ▶  **End active call** ▶ **OK**.

## Phonebook (Address book)

In a **phonebook entry**, you can store first names and surnames, up to three numbers, an anniversary with a reminder, caller melody and e-mail addresses.

You can create the directory (with up to 250 entries) individually for each of your handsets. You can also send lists/entries to other handsets (→ page 29).

### Length of the entries

3 numbers: Max. 32 digits each  
 First name and surname: Max. 16 characters each

## Managing directory entries

### Opening phonebook

Press the key or ▶ ▶ **OK** in idle status or, depending on the situation, the display key .

### Creating a new entry

- ▶ Open directory. ▶ <New Entry> ▶ **OK**
- ▶ Switch between the input fields using and enter the relevant components of the entry (names, numbers, anniversary, ringtone, e-mail).  
 Navigate downwards to display further components.
- ▶ Press the display key **Save**.

To create an entry, you must enter at least one number.

Example

### Displaying/changing an entry

- ▶ Open phonebook. ▶ Select the desired entry.
- ▶ **View** ▶ Display all components of the entry. ▶ **Edit**

Or:

- ▶ **Options** ▶ **Edit entry** ▶ **OK**

### Deleting an entry

- ▶ Open phonebook. ▶ Select the desired entry. ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete **all** entries in the directory:

- ▶ Open phonebook. ▶ **Options** ▶ **Delete List** ▶ **OK**

### Defining the order of the contacts entries

You can define whether the entries are to be sorted by first name or surname.

- ▶ Open phonebook. ▶ **Options** ▶ Press **Sort by Surname** or **Sort by First Name**.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetical) | Other characters


## Displaying the number of entries that are available in the directory

- ▶ Open phonebook. ▶ Options ▶  Available Memory ▶ OK

## Selecting a phonebook entry, searching in the phonebook

- ▶ Open phonebook.
- ▶ Scroll to the name you are searching for using . **Holding down**  scrolls continuously upwards or downwards through the phonebook.

Or:

- ▶ Enter the first few letters (max. 8 letters) using the keypad. The display jumps to the first name that begins with these letters. If necessary, scroll on to the desired entry using .

## Transferring an entry/phonebook to another handset

### Prerequisites:




- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

You can transfer the entire directory, an individual entry or several individual entries.





### Notes

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.
- ◆ When transferring an entry between two vCard handsets:  
If the recipient does not yet have an entry with that name, a new entry is created.  
If there is already an entry with that name, this entry is expanded with the new numbers.  
If the entry contains more numbers than the recipient permits, a further entry is created with the same name.
- ◆ If the recipient is not a vCard handset: A separate entry is created and sent for each number.
- ◆ Your handset receives entries from a non-vCard handset: Entries with numbers that are already stored are discarded, otherwise a new entry is created.






### Transferring individual entries

- ▶ Open phonebook. ▶  Select the desired entry. ▶ Options
- ▶  Copy Entry ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

### Transferring the entire directory






- ▶ Open phonebook. ▶  Select the desired entry. ▶ Options
- ▶  Copy List ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

## Transferring a displayed number to the phonebook

- ▶ The number is displayed or highlighted.
- ▶ Press display key  or **Options** ▶  **Copy to Directory.** ▶ **OK**
  - ▶ **<New Entry>** ▶ **OK** ▶  Select number type. ▶ **OK**
    - ▶ Complete the entry. ▶ **OK**
- Or:
  - ▶  Select entry. ▶ **OK** ▶  Select number type. ▶ **OK**
    - ▶ The number is entered or an existing number is overwritten (answer the prompt using **Yes/No**).
- ▶ **Save**

## Call list



 
 
 
 

Your telephone stores calls in various lists. Opening the lists:

- ◆ **Missed calls list:** Message key  ▶  **Missed Calls:** ▶ **OK**
- ◆ **List selection:**  ▶  ▶ **OK** ▶  Select list. ▶ **OK**


The last 20 entries are displayed in the call list.

### List entry



The following information is displayed in the list entries:

- ◆ The list type (in the header row)
- ◆ Icon for the type of entry:
  -  (Missed calls),  (Accepted calls),  (Outgoing calls)
- ◆ Caller's number. If the number is stored in the phonebook, name and number type are displayed instead ( Phone (Home),  Phone (Office),  Phone (Mobile)). For missed calls, the number of missed calls from this number is also shown in square brackets.
- ◆ Date and time of call (if set).
- ▶  Select entry. ▶ **Options**
- ▶ **View:** All available information is displayed, e.g. the corresponding number when a name is displayed.
- ▶ **Options:** You can delete the entry or transfer the number to the phonebook ( → page 30).

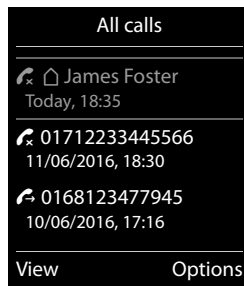Example



### Calling back a caller from the call list:

- ▶  Select entry. ▶ Press the Answer call key .



# Calendar

You can remind yourself of up to **30 appointments**.




In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be highlighted.

May 2016						
Mo	Tu	We	Th	Fr	Sa	Su
		01	02	03	04	05
06	07	08	09	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		

Back OK

## Saving appointments to the calendar


**Prerequisite:** Date and time are set (→ page 9).

 ▶  ▶ **OK** ▶ **Calendar** ▶ **OK** ▶  Select the desired day. ▶ **OK**

- ◆ Appointments that have already been stored are shown. <New Entry> ▶ **OK** opens the window to enter an additional appointment.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

**Activation:**  **On/Off**

The following information can be added:

- ◆ **Date:** The selected day is preset. Enter new data to change.
  - ◆ **Time:** Time (hour and minute) of the appointment.
  - ◆ **Text:** Appointment name (e.g. dinner, meeting).
  - ◆ **Signal:**  Select the melody of the reminder signal or deactivate the acoustic signalling.
- ▶ **Save**

## Signalling of appointments/anniversaries

Anniversaries are transferred from the phonebook and displayed as an appointment. An appointment/anniversary is displayed in idle status and signalled for 60 seconds with the selected ringtone.

**You can deactivate the reminder call:**


- ▶ Press **OFF** to acknowledge and end the reminder call.

**When you are on the phone**, a reminder call is indicated on the handset with a **single** advisory tone.




## Displaying missed appointments/anniversaries


The following appointments and anniversaries are stored in the **Missed Alarms** list:

- ◆ The appointment/anniversary call was not acknowledged.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the head of the list.

To open the list: ▶ Message key  ▶  Missed Alarms ▶ OK





Or via the menu:  ▶  ▶ OK ▶  Missed Alarms ▶ OK

▶  scroll in the list if required

Information about the appointment/anniversary is displayed. You can:

- ▶ Delete an appointment/anniversary: **Delete**

## Displaying/changing/deleting stored appointments

 ▶  ▶ OK ▶ Calendar ▶ OK ▶  Select the desired day. ▶ OK ▶ The appointment list is displayed. ▶  Select the desired appointment.

- ▶ **View:** Display appointment settings, change, if required using **Edit**.

Or:




- ▶ **Options:** Change settings or delete appointments.
  - **Edit entry** ▶ OK
  - **Delete entry** ▶ OK
  - **Activate/Deactivate** ▶ OK
  - **Delete all Appoints.** ▶ OK ▶ Confirm prompt with **Yes**.  
All appointments for the **selected day** are deleted.


## Alarm clock

**Prerequisite:** Date and time are set (→ page 9).

You can activate/deactivate and set the alarm clock as follows:


 ▶  ▶ OK ▶ Alarm Clock ▶ OK ▶ Activation:  On/Off

- ▶ Changing the settings:
  - **Time:** Set the hour and minute for the wake-up time (time setting → page 9).
  - **Occurrence:**  **Daily/Monday-Friday**
  - **Volume:**  Volume can be set at 5 levels or crescendo (increasing volume).
  - **Melody:**  Select a ringtone for the alarm call.
- ▶ Press the display key **Save**.

When the alarm clock is activated, the icon  and the alarm time is displayed in idle status.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

### Example

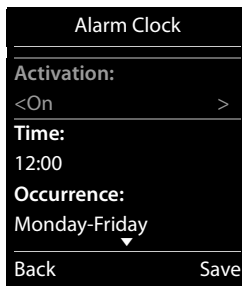

If the left or right display key is assigned the **Status** function (factory settings, Assigning display keys → page 25), the alarm can be switched on and off quickly:

- ▶ Press the display key **Status**. ▶ **Alarm** ▶ **Change** (☑ = on)

## Deactivating the alarm call/repeating after a pause (snooze mode)

**Prerequisite:** One alarm call sounds.

- ▶ **Deactivating until the next alarm call:** Press **OFF**.

Or:

- ▶ **Snooze mode:**

Press **Snooze** or any key. The wake-up call is deactivated and then repeated after 5 minutes.

Or:

Press nothing. The alarm call is deactivated after 60 seconds and then repeated after 5 minutes. After the fourth repetition, the alarm call is deactivated for 24 hours.

## Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The baby monitor alarm to an external number is cancelled after approximately 90 seconds.

In baby monitor mode, incoming calls are only signalled on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the Baby monitor key (☎), the display keys and pressing the middle of the control key.

You can answer the baby monitor alarm using the **Two Way Talk** function. Deactivate/activate the speaker of the handset with this function.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.

### Caution


Ensure the following points:

- ◆ The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- ◆ The baby monitor is activated 20 seconds after switching on.

Please always check the functionality when you switch on:

- ◆ Test the sensitivity.
- ◆ Check the connection if you are forwarding the baby monitor alarm to an external number.
- ◆ Make sure that the answer machine at the target number is switched off.

### Activating/deactivating and setting the baby monitor

Press the Baby monitor key .

Or:


 ▶  ▶  ▶ OK

▶ **Activation:**  On/Off


▶ Setting the baby monitor:

- **Send alarm to:**  **Internal** (at least 2 handsets are registered)/ **External**

If **Internal** is selected:

▶ **Handset:** Press the **Change** display key. ▶  Select handset. ▶ OK

If **External** is selected:


▶ **Number:** Enter the number directly or select from the phonebook (press the display key ).

- **Two Way Talk:**  On/Off
- **Sensitivity:**  High/Low

▶ **Save**



The target number is displayed in idle status when the baby monitor alarm is activated. The baby monitor is deactivated using the **OFF** display key.

### Cancelling the baby monitor alarm

Cancelling during a baby monitor alarm: Press .


### Deactivating the baby monitor remotely

**Prerequisites:** The baby monitor alarm is forwarded to an external destination number. The recipient's phone supports tone dialling.

▶ Accept the baby monitor alarm and press the   keys.

The call is ended. The baby monitor is deactivated and the handset is in idle status.



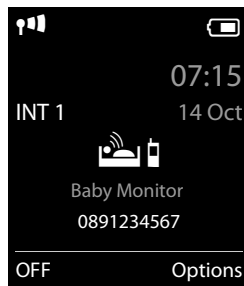







### Baby monitor activated







 





# Display icons

## Icons in the status bar





The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength ( <b>No Radiation</b> off)
	76% - 100%
	51% - 75%
	26% - 50%
	1% - 25%
	Red: no connection to the base
	<b>No Radiation</b> activated: white, if <b>Maximum Range</b> is on; green, if <b>Maximum Range</b> is off
	Ringtone deactivated
	"Beep" ringtone activated
	Key lock

Icon	Meaning
	Battery charge status:
	White: charged over 66%
	White: charged between 34 and 66%
	White: charged between 11 and 33%
	Red: charged below 11%
	Flashes red: battery almost empty (approx. 5 minutes talktime remaining)
	Battery is charging (current charge status):
	0% - 10%
	11% - 33%
	34% - 66%
	67% - 100%

## Menu icons



	Select Services
	Baby Monitor
	One Touch Call
	Call Lists
	SMS



	Answer Machine
	Organiser
	Directory
	Settings

## Display icons

### Display key icons

The following icons indicate the current function of the display keys according to the operating situation:

Icon	Action
	Last number redial
	Deleting text

Icon	Action
	Opening phonebook
	Copy number to the phonebook

### Display icons for signalling of



Establishing a call  
(outgoing call)



Connection  
established



No connection  
established/connection  
terminated



External call



Internal call



Reminder call for  
anniversary



Reminder call for  
appointment



Alarm call

### Other display icons



Information



(Security) prompt



Please wait...



Action complete  
(green)



Action failed (red)

# Menu tree

Opening the main menu: Press  whilst the telephone is in idle status.

## Note

Not all functions described in this user guide are available in all countries or with all network providers.



**Select Services**

(depending on base)



**Baby Monitor**

→ page 33



**One Touch Call**

→ page 18



**Call Lists**

(depending on base)



**Answer Machine**

(depending on base)



**Organiser**

Calendar

→ page 31

Alarm Clock

→ page 32

Missed Alarms

→ page 32



**Directory**

→ page 28



**Settings**

Date/Time

→ page 9

Audio Settings

Handset Volume

→ page 19

Earpiece Profiles

→ page 21

Handsfree Profiles

→ page 21

Advisory Tones

→ page 22

Ringtones (Handset)

→ page 21

(further submenus depending on base)

Display

Screensaver

→ page 20

Colour Schemes

→ page 20

Backlight

→ page 21

Language

→ page 20

Registration

Register Handset

→ page 8

(further submenus depending on base)

Telephony

Auto Answer

→ page 21

Area Codes

→ page 20

(further submenus depending on base)

System

Reset Handset

→ page 26

(further submenus depending on base)

## Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal [www.gigaset.com/service](http://www.gigaset.com/service).

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia ----- **+61 1300 780 878**  
 Austria ----- **-0043 1 311 3046**  
 Bahrain ----- **31 73 11 173**  
 Belgium ----- **07815 6679**  
 Bosnia Herzegovina ----- **033 276 649**  
 Brazil  
 Grandes Capitais e Regiões Metropolitanas:  
 ----- **-4003 3020**  
 (Preço de uma ligação local)  
 ----- Demais localidades:  
 ----- **-0800 888 3020**

(Gratuito)

Bulgaria ----- **+359 2 9710666**  
 Canada ----- **1-866 247-8758**  
 China ----- **0 21 400 670 6007** (RMB 0.11)  
 Croatia ----- **01 / 2456 555**  
 Czech Republic ----- **233 032 727**  
 Denmark ----- **+45 43682003**  
 Finland ----- **+358 (0)9725 19734**  
 France ----- **(0) 157 32 45 22**  
 Germany ----- **02871 / 912 912**  
 Greece ----- **+30 2111 98 1778**  
 Hong Kong ----- **-2763 0203**  
 ----- 2389 7285  
 Hungary ----- **01 267 2109**  
 India ----- Please refer to your  
 ----- local warranty card  
 Indonesia ----- **-(62-21) 5673813**  
 ----- **(62-21) 888856000**

Ireland ----- **0818 200 033**  
 Italy ----- **02.600.630.45**  
 (il numero è di tipo "urbano nazionale" e può essere chiamato da qualunque operatore di rete fissa o mobile. Il costo della chiamata è inerente al proprio piano tariffario definito con l'operatore telefonico, ad esempio in caso di un contratto con tariffa FLAT, non ci sono costi aggiuntivi per la chiamata a questo numero, in quanto si tratta di un numero urbano nazionale).

Jordan ----- **00962 6 5625460/1/2**  
 Kuwait ----- **+965 -22458737/22458738**  
 Lebanon ----- **+9611240259/**  
 ----- **+9611236110**  
 Luxembourg ----- **(+352) 8002 3811**  
 Malaysia ----- **+603-8076 9696**  
 Malta ----- **+39 02360 46111** (0,10 €)  
 Mexico  
 -- **01800 999 4442738 (01800 999 GIGASET)**  
 Netherlands ----- **0900-3333102**  
 New Zealand ----- **0800 780 878**  
 Norway ----- **+47 2231 0845**  
 Oman ----- **+968 70928 Ext. 49/21/75**  
 Poland ----- **801 140 160**  
 Portugal ----- **(+351) 308 804 760**  
 ----- (custo de uma chamada local)  
 Romania ----- **+40 021 204 9130**  
 Russia ----- **8-800 333 4956**  
 Serbia ----- **-0800 222 111**  
 Singapore ----- **6735 9100**  
 Slovak Republic ----- **-044 5567 988**  
 Slovenia ----- **-01 5466 511**  
 South Africa ----- **0800 98 08 42**  
 Spain ----- **902 103935**  
 Sweden ----- **+46 (0)8502 52347**  
 Switzerland ----- **-0848 212 000**  
 Taiwan ----- **-02 266 24343**  
 Turkey - **Son kullanıcı için +90 212 888 6346**  
**Bayi için +90 212 888 6347**  
 Ukraine ----- **+380-44-451-71-72**  
 United Arab Emirates ----- **+97144458255**  
 ----- **+97144458254**  
 United Kingdom ----- **020 36953111**  
 USA ----- **-1-866 247-8758**  
 ----- tollfree

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.


 


## Questions and answers

If you have any queries about the use of your telephone, suggested solutions are available on our web-site at

[www.gigaset.com/service](http://www.gigaset.com/service) ▶ FAQ ▶ First steps for troubleshooting.

The table below also lists steps for troubleshooting.

<p><b>The display is blank.</b></p> <ol style="list-style-type: none"> <li>1. The handset is not activated.           <ul style="list-style-type: none"> <li>▶ <b>Hold down</b> .</li> </ul> </li> <li>2. The battery is empty.           <ul style="list-style-type: none"> <li>▶ Charge the battery or replace it ( → page 5).</li> </ul> </li> <li>3. The key and display lock is activated.           <ul style="list-style-type: none"> <li>▶ <b>Hold down</b> the hash key .</li> </ul> </li> </ol>
<p><b>"No Base" flashes on the display.</b></p> <ol style="list-style-type: none"> <li>1. The handset is outside the range of the base.           <ul style="list-style-type: none"> <li>▶ Move the handset closer to the base.</li> </ul> </li> <li>2. The base is not activated.           <ul style="list-style-type: none"> <li>▶ Check the base power adapter.</li> </ul> </li> <li>3. The base's range is reduced because <b>Maximum Range</b> is deactivated.           <ul style="list-style-type: none"> <li>▶ Activate <b>Maximum Range</b> ( → page 26) or reduce the distance between the handset and base.</li> </ul> </li> </ol>
<p><b>"Please register handset" or "Place handset in base" flashes on the display.</b></p> <p>The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than six DECT registrations).</p> <ul style="list-style-type: none"> <li>▶ Register the handset again ( → page 8).</li> </ul>
<p><b>The handset does not ring.</b></p> <ol style="list-style-type: none"> <li>1. The ringtone is deactivated.           <ul style="list-style-type: none"> <li>▶ Activate ringtone ( → page 22).</li> </ul> </li> <li>2. Call forwarding is set.           <ul style="list-style-type: none"> <li>▶ Deactivate call forwarding.</li> </ul> </li> <li>3. The phone does not ring if the caller has withheld his number.           <ul style="list-style-type: none"> <li>▶ Activate the ringtone for unknown calls ( → page 23).</li> </ul> </li> <li>4. The phone does not ring during a specific period or for certain numbers.           <ul style="list-style-type: none"> <li>▶ Check time control for external calls ( → page 23) and black list ( → page 24).</li> </ul> </li> </ol>
<p><b>The other party cannot hear you.</b></p> <p>The handset is "muted".</p> <ul style="list-style-type: none"> <li>▶ Activate the microphone again ( → page 19).</li> </ul>
<p><b>The caller's number is not displayed.</b></p> <ol style="list-style-type: none"> <li>1. <b>Calling Line Identification (CLI)</b> is not approved for the caller.           <ul style="list-style-type: none"> <li>▶ The <b>caller</b> should ask the network provider to enable Calling Line Identification (CLI).</li> </ul> </li> <li>2. <b>Caller display (CLIP)</b> is not supported by the network provider or is not enabled for you.           <ul style="list-style-type: none"> <li>▶ Caller display (CLIP) is enabled by the network provider.</li> </ul> </li> <li>3. Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.           <ul style="list-style-type: none"> <li>▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.</li> <li>▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, phone number identification, caller ID, etc. in the system's user guide or ask the system manufacturer.</li> </ul> </li> </ol>

### You hear an error tone when keying an input.

Action has failed/invalid input.

- ▶ Repeat the process.  
Read the display and refer to the user guide if necessary.

### You cannot listen to messages on the network mailbox.

Your PABX is set to pulse dialling.

- ▶ Set your PABX to tone dialling.

## Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset C620H is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

## Exclusion of liability

Your handset display has a resolution of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation.

**This is normal and no reason for a warranty claim.**

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and housing are excluded from the warranty.

# Environment

---

## Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).

## Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

## Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

# Appendix

---

## Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

## Contact with liquid

If the device comes into contact with liquid:

- 1 Disconnect the power supply.
- 2 Remove the batteries and leave the battery compartment open.
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 Do not switch on the device again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

## Technical data

### Batteries

Technology: 2 x AA NiMH

Voltage: 1.2 V

Capacity: 1300 mAh

### Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	530 * 260 **
Talktime (hours)	26
Operating time for 1.5 hours of calls per day (hours) *	210 * 160 **
Charging time in base (hours)	8
Charging time in charging cradle (hours)	11.5

\* **No Radiation** deactivated, **without** display backlight in idle status

\*\* **No Radiation** activated, **without** display backlight in idle status

## Power consumption of the handset in the charging cradle

When charging: approx. 1.5 W

To maintain the charge status: approx. 0.5 W

## General specifications

### DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex method	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity

## Character charts

### Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 [sp]	1									
2 [abc]	a	b	c	2	ä	á	à	â	ã	ç
3 [def]	d	e	f	3	ë	é	è	ê		
4 [ghi]	g	h	i	4	ï	í	ì	î		
5 [jkl]	j	k	l	5						
6 [mno]	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 [pqrs]	p	q	r	s	7	ß				
8 [tuv]	t	u	v	8	ü	ú	ù	û		
9 [wxyz]	w	x	y	z	9	ÿ	ý	æ	ø	å
0 [.]	[ <sup>1)</sup> ]	.	,	?	!	[ <sup>2)</sup> ]	0			

- 1) Space
- 2) Line break

# Index

---

- A**
- Address book, see Phonebook
  - Advisory tones ..... 22
  - Alarm clock ..... 32
  - Alert tone (beep) ..... 22
  - Anniversary ..... 28
    - displaying missed ..... 32
  - Anonymous calls off ..... 23
  - Answer call key ..... 1
  - Answer machine
    - answer machine list ..... 15
  - Appointment
    - displaying missed ..... 32
  - Area code
    - setting own area code ..... 20
  - Assigning number key ..... 24
  - Authorisation ..... 40
  - Auto Answer ..... 21
- B**
- Baby monitor ..... 33
  - Baby monitor key ..... 1
  - Backlight, display ..... 21
  - Base
    - setting up ..... 4
  - Base station
    - changing the settings ..... 20
  - Battery
    - charging ..... 6
    - charging status ..... 35
    - display ..... 1
    - icon ..... 1
    - inserting ..... 5
  - Beep (alert tone) ..... 22
  - Birthday, see Anniversary
  - Black list ..... 24
- C**
- Call
    - accepting ..... 18
    - accepting automatically ..... 21
    - external ..... 17
    - internal ..... 27
    - transferring (connecting) ..... 27
    - transferring internally (connecting) ..... 27
  - Call lists ..... 30
    - deleting an entry ..... 30
  - Call protection ..... 23
  - Call protection key ..... 1, 23
  - Call waiting
    - external during an internal call ..... 27
    - internal during an external call ..... 27
  - Calling
    - external ..... 17
    - internal ..... 27
  - Care ..... 42
  - Care of the device ..... 42
  - Changing
    - display language ..... 7
  - Changing the phone settings ..... 20
  - Changing the settings ..... 20
  - Character charts ..... 43
  - Charge status indicator ..... 1
  - Charge status of the batteries ..... 35
  - Charging cradle (handset)
    - connecting ..... 4
    - setting up ..... 4
  - Charging time of handset ..... 42
  - Colour scheme ..... 20
  - Connecting the headset ..... 10
  - Consultation call
    - internal ..... 27
  - Contact with liquid ..... 42
  - Contents of the package ..... 4
  - Control key ..... 1, 13
  - Correcting incorrect entries ..... 16
  - Correction of incorrect entries ..... 16
  - Customer Care ..... 38
  - Customer Service & Assistance ..... 38
- D**
- Deactivating
    - baby monitor ..... 34
  - Default setting ..... 26
  - Dialling
    - from the call list ..... 17
    - using speed dial ..... 24
    - using the redial list ..... 17
    - with directory ..... 18
  - Directory
    - saving entry ..... 28
  - Display
    - backlight ..... 21
    - changing display language ..... 7
    - colour scheme ..... 20
    - network mailbox message ..... 15
    - phonebook memory ..... 29
    - screensaver ..... 20
    - setting ..... 20

- setting the backlight . . . . . 21
- Display icons . . . . . 35
- Display keys . . . . . 1, 14
  - assigning . . . . . 24
  - icons . . . . . 36
- Displays
  - missed appointments/anniversaries . . . 32
- Disposal . . . . . 41
- E**
- Earpiece profile . . . . . 21
- Earpiece volume . . . . . 19
- ECO DECT . . . . . 26
- Emergency numbers
  - not possible . . . . . 3
- End call key . . . . . 1
- End call/End key . . . . . 17
- Ending a conference call . . . . . 27
- Entering special characters . . . . . 16
- Entering special letters . . . . . 16
- Entering text . . . . . 16
- Entering umlauts . . . . . 16
- Environment . . . . . 41
- Exclusion of liability . . . . . 40
- External call
  - transferring internally (connecting) . . . 27
- External calls
  - time control for ringtone . . . . . 23
- F**
- Factory settings . . . . . 26
- Field strength . . . . . 35
- G**
- Getting started . . . . . 4
- H**
- Handset
  - advisory tones . . . . . 22
  - changing the settings . . . . . 20
  - colour scheme . . . . . 20
  - connecting the charging cradle . . . . . 4
  - display backlight . . . . . 21
  - display language . . . . . 7, 20
  - earpiece volume . . . . . 19
  - idle status . . . . . 15
  - list . . . . . 13
  - muting . . . . . 19
  - registering . . . . . 8
  - restoring to default setting . . . . . 26
  - screensaver . . . . . 20
  - setting . . . . . 20
- setting up . . . . . 5
- speaker volume . . . . . 19
- switching on/off . . . . . 13
- transferring a call . . . . . 27
- use as a baby monitor . . . . . 33
- using multiple . . . . . 27
- Handsfree mode . . . . . 18
- Handsfree profile . . . . . 21
- Handsfree volume . . . . . 19
- Hash key . . . . . 1
- Headset socket . . . . . 10
- Hearing aids . . . . . 3
- Help . . . . . 39
- I**
- Icon
  - alarm clock . . . . . 32
- Icons
  - displaying new messages . . . . . 15
  - on display keys . . . . . 36
  - status bar . . . . . 35
- Idle status
  - returning to . . . . . 15
- Incoming message list (SMS) . . . . . 15
- Incoming SMS message list . . . . . 15
- Internal
  - making calls . . . . . 27
- Internal call . . . . . 27
  - call waiting . . . . . 27
- Internal consultation call . . . . . 27
- K**
- Key
  - assigning to a function or number . . . . 24
- Key 1 (fast access) . . . . . 1
- Keys
  - Answer call key . . . . . 1
  - Baby monitor key . . . . . 1
  - Call protection key . . . . . 1, 23
  - control key . . . . . 1, 13
  - display keys . . . . . 1, 14
  - End call key . . . . . 1
  - End call/End key . . . . . 17
  - fast access . . . . . 1
  - Hash key . . . . . 1
  - Message key . . . . . 1
  - On/off key . . . . . 1
  - Recall key . . . . . 1
  - Star key . . . . . 1

- L**
- Language
    - display ..... 7
  - Liquid ..... 42
  - List
    - accepted calls ..... 30
    - answer machine ..... 15
    - call lists ..... 30
    - handsets ..... 13
    - incoming SMS message list ..... 15
    - missed calls ..... 30
    - outgoing calls ..... 30
  - List entry ..... 30
  - Locking/unlocking the keypad ..... 13
  - Lower/upper case ..... 16
- M**
- Making calls
    - accepting a call ..... 18
    - external ..... 17
    - internal ..... 27
  - Managing the calendar ..... 31
  - Marked characters ..... 16
  - Medical equipment ..... 3
  - Melody
    - ringtone for internal/external calls ..... 22
  - Memory in the phonebook ..... 29
  - Menu
    - opening ..... 13
    - tree ..... 37
  - Message key ..... 1
  - Message lists ..... 15
    - opening ..... 15
  - Microphone ..... 1
  - Missed anniversaries/appointments ..... 32
  - Missed call ..... 30
  - Muting the handset ..... 19
- N**
- Number
    - copying to the phonebook ..... 30
  - Numbers
    - entering ..... 16
- O**
- On/off key ..... 1
  - One touch call ..... 18
  - Operating time of handset ..... 42
  - Order in the phonebook ..... 28
- P**
- Phone
    - restoring to default setting ..... 26
    - setting ..... 20
  - Phonebook ..... 28
    - copying number from text ..... 30
    - opening ..... 13
    - order of entries ..... 28
    - sending entry/list to handset ..... 29
    - sending to handset ..... 29
  - Power adapter ..... 3
  - Protection against unwanted calls ..... 23
  - Protection from anonymous callers ..... 23
- Q**
- Questions and answers ..... 39
- R**
- Range ..... 4
    - reducing ..... 26
  - Recall key ..... 1
  - Redial list ..... 17
  - Reducing radiation ..... 26
  - Reducing transmission power ..... 26
  - Registering (handset) ..... 8
  - Restoring to default setting ..... 26
  - Restoring to factory settings ..... 26
  - Ringtone
    - changing ..... 21
    - melody for internal/external calls ..... 22
    - silencing for anonymous calls ..... 23
    - time control for external calls ..... 23
  - Ringtones ..... 21
- S**
- Safety precautions ..... 3
  - Saving a number in the directory ..... 28
  - Screensaver ..... 20
  - Searching
    - in directory ..... 29
  - Selecting an entry from the phonebook ..... 29
  - Sending
    - phonebook entry to handset ..... 29
  - Setting an appointment ..... 31
  - Setting options
    - phone ..... 20
  - Setting the date ..... 9, 37
  - Setting the display language ..... 20
  - Setting the time ..... 9, 37
  - Setting up
    - handset ..... 5



Signal tone, see Advisory tones	
SMS	
incoming message list. . . . .	15
Snooze mode (alarm) . . . . .	33
Sound, see Ringtone	
Speaker. . . . .	18
Speed dial . . . . .	24
Star key. . . . .	1
Status bar . . . . .	1
icons. . . . .	35
Status centre . . . . .	25
Storing e-mail in the phonebook . . . . .	28
Switching microphone (handset) on/off . .	19

**T**

Technical data . . . . .	42
Telephone	
operating. . . . .	13
Three-way conference call	
ending . . . . .	27
Time control	
ringtone for external calls. . . . .	23
Time control, VIP callers. . . . .	23
Transferring an external call internally . . .	27
Troubleshooting	
general. . . . .	39

**U**

Upper/lower case. . . . .	16
---------------------------	----

**V**

Viewing network mailbox message . . . . .	15
VIP ringtone. . . . .	28
Volume	
handset handsfree/earpiece volume . . .	19

**W**

Warning tone, see Advisory tones	
----------------------------------	--

Issued by  
Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2016  
Subject to availability.  
All rights reserved. Rights of modification reserved.  
[www.gigaset.com](http://www.gigaset.com)