

Gigaset

Sculpture

CL750H

This user guide only describes a small proportion of the functions of the telephone.

A detailed and up-to-date user guide is available at

www.gigaset.com/manuals



Contents

Overview	2
Safety precautions	4
Getting started	5
Using the telephone	9
Getting to know your telephone	9
Making calls	12
Message lists	16
Call lists	17
Directory	18
Additional functions	20
Calendar	20
Alarm clock	21
Baby monitor	22
ECO DECT	24
Protection against unwanted calls	24
Other functions	25
Appendix	26
Customer Service & Assistance	26
Manufacturer's advice	28
Technical data	30
Display icons	31
Index	33



Not all functions described in the user guide are available in all countries or from all network providers.





Overview



- 1 **Display**
- 2 **Status bar**
Icons display current settings and operating status of the telephone
- 3 **Display keys**
- 4 **Message key**
Access to the call and message lists;
Flashes: new message or new call
- 5 **End call key, On/off key**
End call; cancel function;
Go back one menu level ▶ Press **briefly**
Return to idle status ▶ Press **and hold**
- 6 **Hash key**
Lock/unlock the keypad (in idle status) ▶ Press **and hold**
Toggle between upper/lower case and digits (when inputting text) ▶ Press **briefly**
Insert a dialling pause ▶ Press **and hold**
- 7 **Recall key**
Consultation call (flash) ▶ Press **and hold**
- 8 **Microphone**
- 9 **Star key**
Switch between pulse dialling/ tone dialling (during existing connection) ▶ Press **briefly**
Open special characters table (when inputting text) ▶ Press **briefly**
- 10 **Key 1**
Select network mailbox ▶ Press **and hold**
- 11 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between receiver and handsfree mode; send SMS (when composing an SMS)
- 12 **Control key / menu key**
Open the redial list ▶ Press **briefly**
Start dialling ▶ Press **and hold**



Using the user guide effectively

Icons

	Warnings, which, if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.


Keys

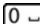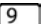

Talk key / Handsfree key  or  and 

Number / letter keys  to 

Message key  / Recall key 

Display keys, e. g. **OK**, **Back**, **Select**, **Change**, **Save**

End call key 

Star key  / Hash key 




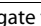





Control key rim  / centre 

Procedures

Example: Switching Auto answer on/off

Illustration in the user guide:

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change**  (= on)

Step	Follow this procedure
▶ 	When in idle status press the centre of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated  / deactivated  .

Safety precautions



Read the safety precautions and the user guide before use.
Explain their content and the potential hazards associated with using the device to your children.

The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.



Use only **rechargeable batteries** that correspond to the **specification** (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



If you give your Gigaset to a third party, make sure you also give them the user guide.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.
Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.
The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").

Getting started

Contents of the package

- One handset,
- One charging cradle including power adapter,
- One battery cover,
- Two batteries,
- One user guide

Setting up the charging cradle

The charging cradle is designed for use in enclosed, dry rooms within a temperature range of +5 °C to +45 °C.

 
The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.



- Never expose the telephone to heat sources, direct sunlight or other electrical devices.
Protect your telephone from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle

- ▶ Insert the jack of the power adapter into the power supply on the bottom of the charging cradle **1**, turn it backwards and click into place.
- ▶ Run the cable through one of the cable channels **2**.
- ▶ Plug the power adapter into the power socket **3**.

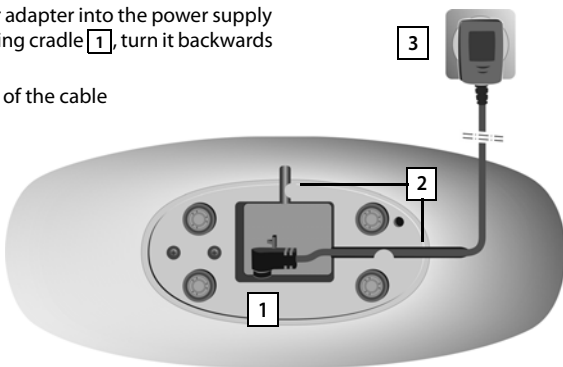

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Turn the jack forwards (unlock) and remove.

Setting up the handset for use

 
The display is protected by a plastic film. ▶ **Please remove the protective film!**

Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries (for correct +/- direction, see diagram).

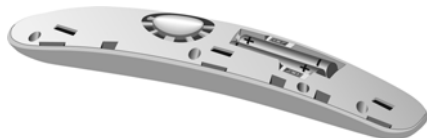

- ▶ Close the battery cover and apply pressure until it clicks into place.




To re-open the battery cover:

 
- ▶ Reach into the recess and lift the cover.



Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle.

The batteries are fully charged when the power icon  disappears from the display.







Batteries may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ Press the centre of the control key .
- ▶ Press the keys **6** and **5** **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ Selecting a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .



Registering the handset

A handset can be registered to up to four base stations. The registration process depends on the base station.








Registration must be initiated on the base station **and** on the handset.
Both must be carried out **within 60 secs.**

On the base station

- ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).

On the handset

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ▶ ... use  to select base station (if the handset is already registered to four base stations) ▶ **OK** ... an available base station is sought ▶ ... enter system-PIN (default setting: **0000**) ▶ **OK**

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If not, repeat the procedure.

Setting the date and time



Set the date/time so that the correct date and time can be assigned to incoming calls, and to enable the alarm to be used.


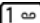







- ▶ Press the display key **Time**

or, if the date and time have already been set:


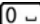
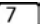


- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**



The active cursor position flashes ▶ ... change cursor position with  ▶ ... switch between cursor positions with 
Enter date:

- ▶ ... using  enter the day, month and year in 8-digit format, e.g.         for 15/08/2015.


Enter time:

- ▶ ... using  enter hours and minutes in 4-digit format, e.g.     for 07:15.

 
Save settings:

- ▶ Press the display key **Save**. ... **Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:



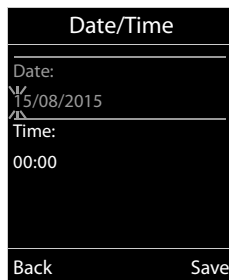

- ▶ Press and **hold** the End call key 

The telephone is now ready for use.



Handset settings

In the **Settings** menu you can adapt the handset as you desire, e.g. choose a different screensaver, larger text size or a different ringtone.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶ ... use  to select a submenu e.g. **Audio Settings** ▶ **OK** ▶ ... navigate to the desired function ▶ ... confirm the setting ▶ **Save**





Further information about settings can be found in the detailed user guide for the Gigaset CL750 at → www.gigaset.com/manuals

Using the telephone



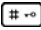

Getting to know your telephone

Switching the handset on/off

- Switch on: ▶ When the handset is switched off press and **hold** the End call key 
- Switch off: ▶ When the handset is in idle status press and **hold** the End call key 

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone. If the handset is locked with a PIN, you need this to unlock it.

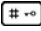- Switch on: ▶  Press and **hold** ... the icon  appears on the display
- Switch off: ▶  Press and **hold** ▶ ... use  to enter the handset PIN (if other than 0000)





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Control key

 


The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

In idle status

- Open the directory
- Open the main menu
- Open the list of handsets



In submenus, selection and entry fields

- Confirm a function



Getting to know your telephone

During a conversation

Open the directory

Mute the microphone

Initiate an internal consultation call

Adjust the loudspeaker volume for receiver and handsfree mode



Display keys

The display keys perform a range of functions depending on the operating situation.



Display key icons → p. 31.

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels

Select/confirm functions

Confirm selection using

OK or press the middle of the control key

One menu level back using

Back

Change to idle status by

Press and hold

Switch function on/off using

Change on / off

Activate/deactivate option using

 
Select activated / not activated

Main menu

In idle status: ▶ Press the **centre** of the control key ▶ ... use the control key to select a submenu ▶ OK


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

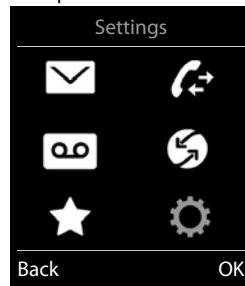

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**

 
or

▶ Press the End call key  **briefly**

Returning to idle status

▶ Press and **hold** the End call key 

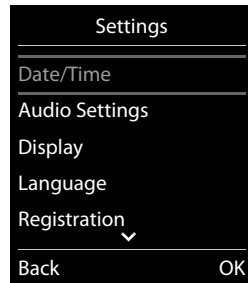

Example





If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Entering text




Input position




- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  **Press briefly**
- Delete **words** to the left of the cursor: ▶  **Press and hold**

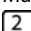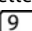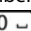Entering letters/characters

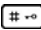Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the character set of the handset.


Making calls

Making calls


▶ ... use  to enter the number ▶ **briefly** press the Talk key 

or


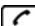
▶ Press and **hold** the Talk key  ▶ ... use  to enter the number


Cancel dialling: ▶ Press the End call key 

Dialling from the directory

▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 



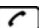
If multiple numbers are entered:

▶ ... use  to select a number ▶ press the Talk key  ... the number is dialled

 For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from the redial list

The redial list contains the 20 numbers last dialled with the handset.

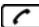

▶ **Briefly** press the Talk key  ... the redial list is opened ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:






▶ **View** ... the number is displayed ▶ ... use  to browse numbers if necessary ▶ ... when the desired number is reached press the Talk key 


Dialling from the call list


The call lists (→ p. 17) contain the most recent accepted, outgoing and missed calls.

▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select a list ▶ **OK** ▶ ... use  to select an entry ▶ Press the Talk key 

Example

All calls	
  Frank	14/02/2015, 15:40
 089563795	13/02/2015, 15:32
  Susan Black	11/02/2015, 13:20
View	Options

 The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .




Further information about making calls:



- Calling Line Identification,
- Managing entries in the redial list,
- One touch call,
- Dialling in extension systems

can be found in the detailed user guide for the Gigaset CL750 at

→ www.gigaset.com/manuals

Incoming calls

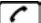An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key . Accept a call:

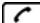- Press the Talk key  or ► **Accept**
- If **Auto Answer** is activated: ► Remove the handset from the charging cradle
- Accept a call with the Gigaset L410 handsfree clip: ► Press the Talk key .





The Gigaset L410 is registered to the base station → Gigaset L410 user guide

Switch off ringing: ► **Silence** ... the call can be accepted for as long as it is shown on the display

Making internal calls

- ▶  Press **briefly** ... the handset list is opened, this handset is indicated by < ... use  to select handset or **Call all** (group call) ► Press the Talk key 

Fast access for group call:

- ▶  Press **briefly** ► 

or ►  press and **hold**





Internal calls to other handsets registered to the same base station are free of charge.

You hear the busy tone if:

- there is already an internal connection
- The handset being called is not available (deactivated, outside of range).
- The internal call is not accepted within 3 minutes.

Internal consultation call/internal transfer

Call an **external** participant and transfer the call to an **internal** participant or hold a consultation call with him or her.

- ▶  ▶ ... the list of handsets is opened ▶ ... use  to select a handset or **Call all** ▶ **OK** ... the internal participant(s) are called ... possible options:

Hold a consultation call:

- ▶ Speak to the internal participant


Return to the external call:

- ▶ **Options** ▶  **End active call** ▶ **OK**

Transfer the external call when the internal participant has answered:

- ▶ Announce an external call ▶ Press the End call key 

Transfer the external call before the internal participant answers:




- ▶ Press the End call key  ... the external call is forwarded immediately. If the internal participant does not answer or the line is busy, the external call will automatically return to you.

End the internal call if the internal participant does **not** answer or the line is busy:

- ▶ **End** ... You return to the external call

Establishing a conference call/call swapping

Conduct a call while a second call is being held. Both callers are indicated on the display.

- Call swapping: ▶ Use  to swap between both participants.
 - Establish a three-way conference call: ▶ **Conf.**
 - End a conference call: ▶ **End Conf.** ... You have been connected back to external participant ... ▶ use  to swap between both participants
- The other participants end the conference call using the End call key .

Accepting/rejecting call waiting

An external call arriving during an internal call is indicated with a call waiting tone. If the number is transferred, you will see the number or the name of the caller on the display.

- Rejecting a call: ▶ **Reject**
The call waiting tone is turned off. The call continues to be indicated on the other registered handsets.
- Accepting a call: ▶ **Accept** ... Speak to the new caller, the previous call is placed on hold.

Internal call waiting during an external call

If an internal participant attempts to call you while you are involved in an external or internal call, this call is shown on the display (**Call Waiting**).

- End display: ▶ Press any key
- Accept the internal call: ▶ End your current call
The internal call is indicated in the usual way. You can accept the call.

Listening in to an external call

You are conducting an external call. An internal participant can listen in to this call and take part in the conversation (conference).



The **Listening In** function must be activated.

Activating/deactivating internal listening in

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Listening In** ▶ **Change** (= on)

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You can listen in to the external call.

- ▶ Press and **hold** ... all participants will hear a signal tone

Ending listening in

- ▶ Press ... all participants will hear a signal tone

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call and when establishing a connection:

- ▶ Press the handsfree key

Call volume

Applies to the current mode (handsfree, receiver or headset):

- ▶ Press ▶ ... use to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.


Muting the microphone

When the microphone is switched off, callers will no longer hear you.





- Switch the microphone on/off during a call: ▶ Press

Message lists

 
Notifications about missed calls, messages on the network mailbox, received SMS messages and missed alarms are saved in the messages list.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:



-  on the network mailbox
-  in the missed calls list
-  in the SMS message list
-  in the missed alarms list

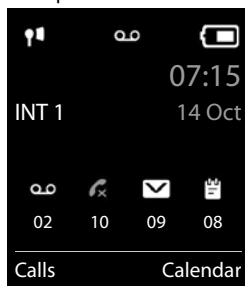Example



The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed
An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.
An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.
- ▶ ... use  to select a list ▶ **OK** ... the calls or messages are listed
Network mailbox: The network mailbox number is dialled.

Example







Messages & Calls	
Missed Calls:	(5)
Mailbox:	(1)
SMS:	(4)
Missed Alarms:	(2)
Back	OK

Call lists






The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.

List entry

The following information is displayed in the list entries:





- The list type (in the header)
- Icon for the type of entry:
 -  Missed calls,
 -  Accepted calls,
 -  Outgoing calls
- Caller's number. If the number is stored in the directory, the name and number type ( Phone (Home),  Phone (Office),  Phone (Mobile)) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Date and time of call (if set)

Example

All calls	
  Frank	
Today, 15:40	[3]
 089563795	
13/05/15, 18:32	
  Susan Black	
12/05/2015,	
View	Options

Opening the call list



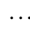


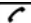
Via the display key: ▶ **Calls** ▶ ... use  to select the list ▶ **OK**

Via the menu: ▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select the list ▶ **OK**

Via the Message key (missed calls):


▶ Press the Message key  ▶  **Missed Calls:** ▶ **OK**

Calling back a caller from the call list



▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK** ▶ ... use  to select entry ▶ Press the Talk key 



Additional options


▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK** ... possible options:

View an entry: ▶ ... use  to select entry ▶ **View**

Copy the number to the directory:

▶ ... use  to select entry ▶ **Options** ▶  **Copy to Directory**

Delete an entry: ▶ ... use  to select entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete list: ▶ **Options** ▶  **Delete List** ▶ **OK** ▶ **Yes**

Directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 19).

Opening the directory

- ▶ Briefly press  in idle status




Directory entries

Number of entries: up to 200

Information: First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon

Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters

Creating an entry



- ▶  ▶  <New Entry> ▶ OK ▶ ... use  to switch between the entry fields and enter data for an entry.

Save entry: ▶ Save






The entry is only valid if it contains at least one number.

Searching for/selecting a directory entry

- ▶  ▶ ... use  to browse searched names

or

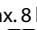

- ▶  ▶ ... use  to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use  to continue browsing to the desired entry, if needed

Scroll through directory: ▶  ▶ Press and hold 

Displaying/changing an entry

- ▶  ▶ ... use  to select entry ▶ View ▶ ... use  to select the field to be changed ▶ Edit

or

- ▶  ▶ ... use  to select an entry ▶ Options ▶ Edit entry ▶ OK



Deleting entries

Delete the **selected** entry: ▶  ▶ ... use  to select an entry ▶ Options ▶  Delete entry ▶ OK

Delete **all** entries: ▶  ▶ Options ▶  Delete List ▶ OK ▶ Yes

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶  ▶ Options ▶  Sort by Surname / Sort by First Name

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.

The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.






The recipient handset does not support vCards:

A separate entry is created and sent for each number.

The sending handset does not support vCards:

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

▶  ▶ ... use  to select the desired entry ▶ Options ▶  Copy Entry ▶ OK ▶  to Internal ▶ OK ▶ ... use  to select the receiving handset ▶ OK ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**



Use **vCard via SMS** to send a directory entry in vCard format by SMS.

Copying the entire directory

▶  ▶ Options ▶  Copy List ▶ OK ▶  to Internal ▶ OK ▶ ... use  to select the receiving handset ▶ OK ... the entries are copied one after the other

Additional functions

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

July 2015						
Mo	Tue	We	Th	Fri	Sat	Su
		01	02	03	04	05 06
07	08	09	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31			
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select desired day ▶ OK ... then
- Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
- Enter information for the appointment:
 - ▶ ... use to successively select **Date, Time, Text and Signal** ▶ ... use or to set the relevant value ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ OK ▶ ... Then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**
- Respond with SMS: ▶ Press the display key **SMS** ... the SMS menu is displayed



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying/changing/deleting stored appointments

- ▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select day ▶ OK ... the appointment list is displayed ▶ ... use to select date ... possible options:

Display appointment details:

- ▶ **View** ... The appointment settings are displayed

Change appointment: ▶ **View** ▶ **Edit**

- or ▶ **Options** ▶ **Edit entry** ▶ OK

Activate/deactivate appointment:

- ▶ **Options** ▶ **Activate/Deactivate** ▶ OK

Delete appointment: ▶ **Options** ▶ **Delete entry** ▶ OK

Delete all appointments for a day:

- ▶ **Options** ▶ **Delete all Appoints.** ▶ OK ▶ Yes

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Alarm Clock** ▶ OK ... then

Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**

Enter alarm data: ▶ ... use to successively select **Time**, **Occurrence**, **Volume** and **Melody** ▶ ... use or to set the relevant value ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off /repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the ability to press the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Baby Monitor** ▶ **OK** ... then

Switch on/off:

- ▶ **Activation:** ... use to select **On** or **Off**

Enter destination:

- ▶ **Send alarm to** ▶ ... use to select **External** or **Internal**

External: ▶ **Number** ▶ ... use to select number or select a number from the directory: ▶

Internal: ▶ **Handset** ▶ **Change** ▶ ... use to select the handset ▶ **OK**

Activate/deactivate two-way talk:

 
- ▶ **Two Way Talk** ▶ ... use to select **On** or **Off**

Set microphone sensitivity:

- ▶ **Sensitivity** ▶ ... use to select **High** or **Low**


Save settings: ▶ **Save**

Baby Monitor activated

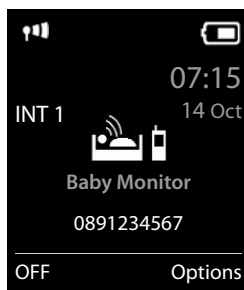

The destination number is displayed in idle display when the baby monitor is activated.



Switching off/interrupting the alarm

- Switch off the alarm: ▶ In idle status press the display key **OFF**
- Interrupt the alarm: ▶ Press the End call key  during an alarm

Deactivating the alarm remotely



The alarm is forwarded to an external destination number.
The receiving phone supports tone dialling.





- ▶ Accept alarm call ▶ Press keys   ... the call is ended
The alarm is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.
- Reactivate baby monitor with the same number: ▶ ... Reactivate (→ p. 22) ▶ **Save**

ECO DECT

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

Reducing radiation by up to 80%

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **ECO DECT** ▶ OK ▶ **Maximum Range** ▶ **Change** ( = off)



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

Deactivating radiation in idle status

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **ECO DECT** ▶ OK ▶  **No Radiation** ▶ **Change** ( = on)




To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.

In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.

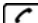▶ Press and **hold** the Talk key  ... the ringing tone will sound.

Further information can be found at www.gigaset.com.

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

 
- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Time Control** ▶ OK ▶ ... then

Switch on/off: ▶ use to select **On** or **Off**

Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format

Save: ▶ **Save**

Example

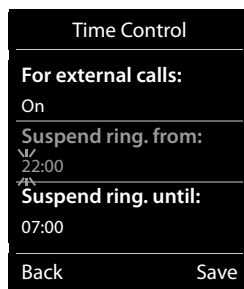

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

For one handset

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ Edit (= on) ... the call is only signalled on the display

For all handsets

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Anonymous Calls** ▶ Edit (= on) ▶ ... use to select **Protection Mode**:

No Protection Anonymous calls are indicated in the same way as identified numbers

Silent Call The telephone will not ring and the incoming call will only appear in the display.

Block Call The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.

Save settings: ▶ **Save**

Other functions

The telephone also offers other functions: e.g. Compose and send SMS



Further information about these functions can be found in the detailed user guide for the Gigaset CL750 at → www.gigaset.com/manuals

Appendix

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia	+61 1300 780 878
Austria	0043 1 311 3046
Bahrain	31 73 11 173
Belgium	07815 6679
Bosnia Herzegovina	033 276 649
Brazil	
Grandes Capitais e Regiões Metropolitanas:	4003 3020
(Preço de uma ligação local)	
Demais localidades:	0800 888 3020
(Gratuito)	
Bulgaria	+359 2 9710666
Canada	1-866 247-8758
China	0 21 400 670 6007 (RMB 0.11)
Croatia	01 / 2456 555
Czech Republic	233 032 727
Denmark	+45 43682003
Finland	+358 (0)9725 19734
France	(0)1 57 32 45 22
Germany	02871 / 912 912
Greece	+30 2111 98 1778
Hong Kong	2763 0203
	2389 7285
Hungary	01 267 2109
India	Please refer to your local warranty card
Indonesia	(62-21) 5673813
	(62-21) 888856000
Ireland	0818 200 033
Italy	02.600.630.45

(il numero è di tipo "urbano nazionale" e può essere chiamato da qualunque operatore di rete fissa o mobile. Il costo della chiamata è inerente al proprio piano tariffario definito con l'operatore telefonico, ad esempio in caso di un contratto con tariffa FLAT, non

ci sono costi aggiuntivi per la chiamata a questo numero, in quanto si tratta di un numero urbano nazionale).

Jordan	00962 6 5625460/1/2
Kuwait	+965 -22458737/22458738
Lebanon	+9611240259/
	+9611236110
Luxembourg	(+352) 8002 3811
Malaysia	+603-8076 9696
Malta	+39 02360 46111 (0,10 €)
Mexico	01800 999 4442738
	(01800 999 GIGASET)
Netherlands	0900-3333 102
New Zealand	0800 780 878
Norway	+47 2231 0845
Oman	+968 70928 Ext. 49/21/75
Poland	801 140 160
Portugal	(+351) 308 804 760
	(custo de uma chamada local)
Romania	+40 021 204 9130
Russia	8-800 333 4956
Serbia	0800 222 111
Singapore	6735 9100
Slovak Republic	044 5567 988
Slovenija	01 5466 511
South Africa	0800 98 08 42
Spain	902 103935
Sweden	+46 (0)8502 52347
Switzerland	0848 212 000
Taiwan	02 266 24343
Turkey	+90 216 223 01 57
Ukraine	+380-44-451-71-72
United Arab Emirates	+97144458255
	+97144458254
United Kingdom	020 36953111
USA(tollfree)	1-866 247-8758

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Guarantee Certificate - United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee Certificate - Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Gigaset Communications.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

Manufacturer's advice

- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue). It may be the case that a sub-pixel is missing or has a colour deviation. A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

The EC declaration of your country according to 1999/5/EC can be found at: www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

CE 0682

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
 - 2 **Remove the batteries and leave the battery compartment open.**
 - 3 Allow the liquid to drain from the device.
 - 4 Pat all parts dry.
 - 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
 - 6 **Do not switch on the device again until it is completely dry.**
- When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours) *	320/180
Talktime (hours)	14
Operating time with 1.5 hours of calls per day (hours) *	120/95
Charging time in charging cradle (hours)	7.5

* No Radiation switched on/off, without display backlight in idle status



The telephone operating times will increase if a more efficient battery is used.








General specifications







DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)

Display icons



The following icons are displayed depending on the settings and the operating status of your telephone.



Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off)
	1% -100% white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Ringtone switched off
	"Beep" ringtone activated
	Keypad lock activated




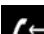

Icon	Meaning
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%




Display key icons

Icon	Meaning
	Last number redial
	Delete text

Icon	Meaning
	Open the directory
	Copy number to the directory




Display icons to indicate ...




Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call

Display icons

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Index

-
- A**
- Alarm 21
 - Alarm clock 21
 - switch on/off 21
 - Answer machine
 - calling back a caller 17
 - Appointment
 - notification 20
 - setting 20
 - Authorisation 28
-
- B**
- Baby monitor 22
 - activation 22
 - Battery
 - charging 6
 - charging status 31
 - inserting 6
 - Broken display 4
-
- C**
- Calendar 20
 - Call
 - accepting 13
 - external 12
 - internal 13
 - participant listening in 15
 - transferring internally (connecting) 14
 - Call list
 - copying a number to the directory 17
 - delete 17
 - delete an entry 17
 - dialling 12
 - entry 17
 - opening 17
 - Call lists 17
 - Call swapping 14
 - Call waiting, external
 - accepting/rejecting 14
 - Call waiting, internal
 - accept 14
 - Call, anonymous
 - protection from 25
 - Calling
 - external 12
 - internal 13
 - Care 29
 - Care of the device 29
 - Charge status of the batteries 31
 - Charging cradle (handset)
 - connecting 5
 - Charging time of handset 30
 - Conference 14
 - Conference call
 - end 14
 - Consultation call
 - internal 14
 - Contact with liquid 29
 - Contents of the package 5
 - Control key 2, 9
 - Correcting incorrect entries 11
 - Customer Care 26
 - Customer Service & Assistance 26
-
- D**
- Deactivating wireless module 24
 - Dialling
 - from the call list 12
 - from the directory 12
 - from the redial list 12
 - Directory 18
 - dialling numbers 12
 - entry 18
 - opening 18
 - order of entries 19
 - saving an entry 18
 - searching 18
 - selecting an entry 18
 - sending entry/list to handset 19
 - sending to handset 19
 - Display
 - broken 4
 - network mailbox message 16
 - Display icons 31
 - Display keys 2, 10
 - icons 31
 - Disposal 29
-
- E**
- Earpiece volume 15
 - ECO DECT 24
 - Emergency numbers
 - not possible 4
 - End call key 12
 - Entering special characters 11
 - Entering text 11
 - Entering umlauts 11
 - Environment 29
 - Exclusion of liability 28
-
- F**
- Fast access 12
-
- G**
- Getting started 5
 - Guarantee Certificate 27

-
- H**
- Handset
- connecting the charging cradle 5
 - earpiece volume 15
 - idle status 11
 - muting 15
 - registering 7
 - set up 5
 - speaker volume 15
 - switch on/off 9
 - use as a baby monitor 22
- Handsfree key 15
- Handsfree mode 15
- Hearing aids 4
-
- I**
- Icons
- alarm clock 21
 - displaying new messages 16
 - indications 31
 - on display keys 31
 - status bar 31
- Idle status
- returning to 11
- Indications, icons 31
- Internal
- consultation 14
 - listening in 15
 - making calls 13
-
- K**
- Key 1 (fast access) 2
- Keys
- control key 2, 9
 - display keys 2, 10
 - End call key 12
 - fast access 2
 - handsfree 15
 - menu 9
 - recall key 2
 - star key 2
 - talk key 2
-
- L**
- Language
- display 7
- Liquid 29
- Listening in to an external call 15
- Locking/unlocking the keypad 9
- Lower/upper case 11
-
- M**
- Making calls
- accepting a call 13
 - external 12
 - internal 13
- Maximum Range 24
- Medical equipment 4
- Menu key 9
- Message lists 16
- Microphone 2
- switch on/off 15
- Muting the handset 15
-
- N**
- Number
- saving in the directory 18
- Numbers
- entering 11
-
- O**
- Operating time of handset 30
-
- P**
- Phone directory, see Directory 12
- Phonebook, see Directory 12
- Power adapter 4
- Protection from calls
- anonymous 25
 - time control 25
-
- Q**
- Quick dial 12
-
- R**
- Radiation
- reducing 24
- Radiation-free 24
- Recall key 2
- Redial list 12
- Registering (handset) 7
- Ringtone
- time control 24
-
- S**
- Safety precautions 4
- Searching in directory 18
- Sending
- entire directory to handset 19
- Setting the date 8
- Setting the time 8
- Setting up
- handset 5
 - setting up the charging cradle (handset) 5
- Show new messages 16
- Signal strength 31
- SMS 25
- Snooze mode (alarm) 21
- Speaker 15
- Speaker volume 15
- Star key 2
- Status bar
- icons 31
- Switch off the alarm (baby monitor) 23
- Symbols, see Icons 31

T	
Talk key	2
Technical data	30
Telephone	9
operating	9
Three-way conference call, see Conference call	
Time control for external calls	24
Transferring, external call internally	14

U	
Upper/lower case	11

V	
Viewing network mailbox message	16
Volume	
handset speaker/earpiece volume	15

Issued by

Gigaset Communications GmbH

Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2015

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com