


Gigaset


E260/E310

Overview of handset

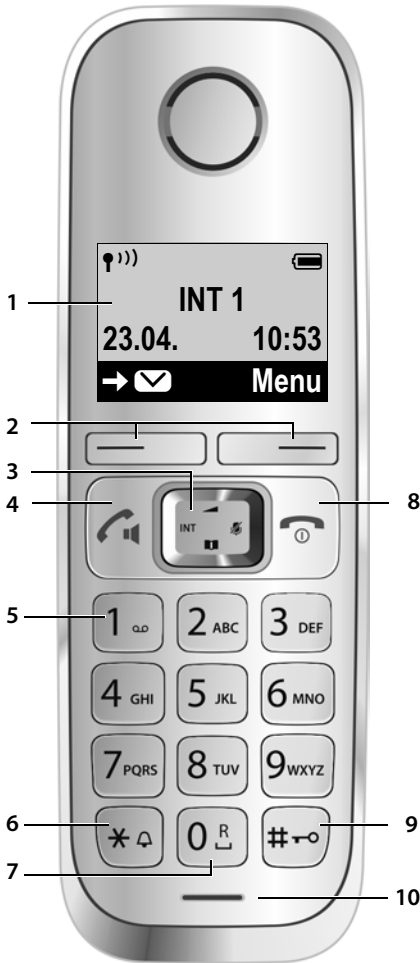

- 1 **Display** in idle status
(→ page 16)
- 2 **Display keys** (→ page 3)
- 3 **Control key** (→ page 4)
- 4 **Talk/speaker key**
Accept call; start dialling; toggle between earpiece and speaker mode (→ page 27);
Lights up: speaker mode activated;
Flashes: incoming call
- 5 **Key 1**
Call the network mailbox
(→ page 33)
- 6 **Star key**
Ringers on/off (press and **hold**); with an open connection: switch from pulse dialling to tone dialling (press **briefly**, → page 44)
- 7 **0 key/recall key**
Consultation call (flash): press and **hold**
- 8 **End call key, on/off key**
End call; cancel function; go back one menu level (press **briefly**); back to idle status (press and **hold**); activate/deactivate handset (press and **hold** in idle status)
- 9 **Hash key**
Keypad lock on/off (press and **hold**, → page 20); upper/lower case and digits (→ page 50); enter dialling pause (press and **hold**)
- 10 **Microphone**

Base overview

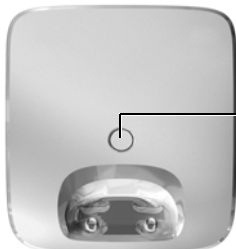





Registration/paging key

- Press **briefly**: search for handsets ("paging" → page 36).
- Press and **hold**: register handsets and DECT devices (→ page 35).

Icons and keys

Display icons

   The display depends on the phone's settings and operating status.

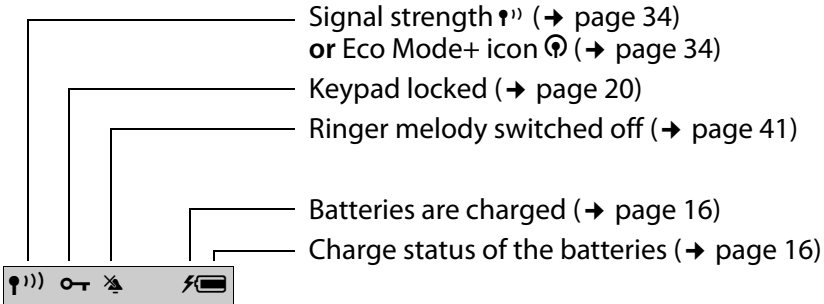


Other display icons:


Call (→ page 25) Alarm call (→ page 35)





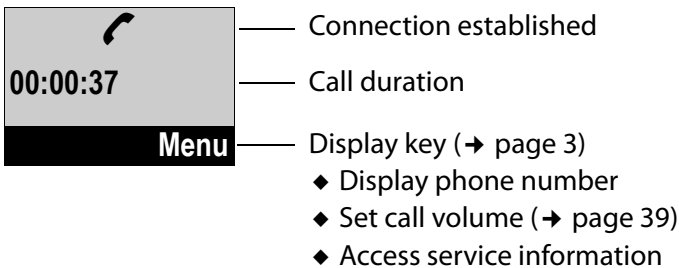

Display during external call:

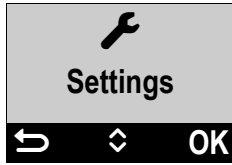

Main menu icons



-  Alarm Clock
-  Audio Settings
-  Voice Mail
-  Settings

For information on using the menu and the menu tree, see page 18 and page 23.







Display keys

The functions of the display keys change depending on the particular operating situation. **Examples:**


- ① Current display key function
- ② Display keys



Examples:

-  **Menu** Open main menu/menu for further functions.
-  **OK** Confirm selection or save entry.
-  **→**  Open calls list (→ page 30), network mailbox (→ page 33)
-  **< C** Delete key: delete one character at a time from right to left.
-  **↶** Go back one menu level or cancel operation.





Control key

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black e.g.,  for "press the right edge of the control key".



The control key has a number of different functions:





When the handset is in idle status

-  Open the main menu.
-  Open the directory.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume.





In menus and in lists

-  Scroll up/down a line at a time.

In input fields

-  /  Use the control key to move the cursor to the left  or right .

During an external call

-  Mute the microphone.
-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and speaker mode.

Contents

Overview of handset	1
Base overview	1
Icons and keys	2
Display icons	2
Main menu icons	3
Display keys	3
Control key	4
Safety precautions	8
First steps	9
Checking the package contents	9
Setting up the base and charger (if included)	9
Connecting the base	10
Connecting the charger (if included)	10
Setting up the handset for use	11
Changing the display language	13
Setting the date/time	14
What would you like to do next?	17
Using the phone	18
Menu guidance	18
Keys on the keypad	19
Correcting incorrect entries	19
Activating/deactivating the handset	19
Activating/deactivating the keypad lock	20
Understanding the operating steps	21
Menu tree	23
Making calls	25
Making external calls and ending calls	25
Accepting a call	25
Calling Line Identification	25
Notes on phone number display (CLIP)	26
Speaker mode operation	27
Muting	27
Using the directory and lists	27

Contents

Directory	27
Redial list	29
Network mailbox list	30
Calls list	30
Opening lists	31
Automatic network provider preselection	31
Using the network mailbox	33
Accepting a new message from the network mailbox	33
Playing back messages	33
ECO DECT	34
Using the handset as an alarm clock	35
Using multiple handsets	35
Registering handsets	35
De-registering handsets	36
Locating a handset ("paging")	36
Listening in to an external call (conference)	36
Making internal calls	37
Setting the handset	38
Changing the display language	38
Setting big dial font	38
Changing the display contrast	39
Setting the display backlight	39
Auto answer	39
Changing the speaker/earpiece volume	39
Setting the sound of the earpiece	40
Changing ringers	40
Advisory/warning tones	41
Restoring the handset default settings	42
Setting the base	42
Repeater support	42
Protecting against unauthorised access	42
Resetting the base to the default settings	43
Operating the base on the PABX	44
Questions and answers	45
Authorisation	46
Environment	46

Exclusion of liability	47
Appendix	48
Caring for your telephone	48
Contact with liquid	48
Specifications	48
Writing and editing names	50
Accessories	51
Mounting the E260/E310 base on the wall	52
Mounting the charger on the wall	52
Index	53

Safety precautions



Read the safety precautions and the user guide before use.

The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Use only **rechargeable batteries** that correspond to the **specification** (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").

First steps

Checking the package contents

- ◆ One Gigaset E260/E310 base
- ◆ One power adapter
- ◆ One Gigaset handset
- ◆ Two batteries
- ◆ One battery cover
- ◆ One phone cord
- ◆ One user guide

If you have purchased a **model with multiple handsets**, the package should contain two batteries, a battery cover and a charger with power adapter for each additional handset.

Setting up the base and charger (if included)

The base and charger are designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the base at a central point in the building on a level, non-slip surface or mount the base and charger on the wall (→ page 52).

Please note

Pay attention to the range of the base.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated (→ page 34).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.


Please note:

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

First steps

Connecting the base


- ▶ **First**, connect telephone jack **1**.
- ▶ **Then** connect the power adapter **2** and insert the cables into the cable ducts.

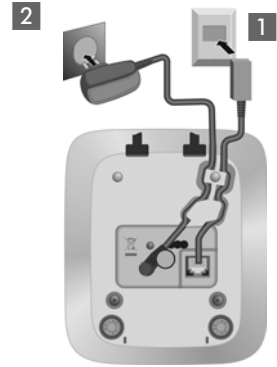

Please note:


- ◆ The power adapter must **always be connected**, as the phone will not operate without a mains connection.
- ◆ Use only the power adapter and phone cord **supplied**. Pin connections on telephone cables can vary.

Connecting the charger (if included)

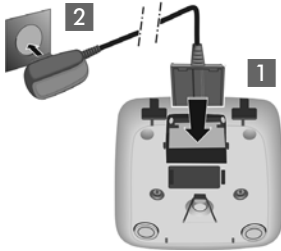

- ▶ Connect the flat plug on the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

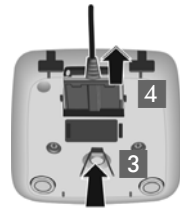

Setting up the handset for use


The display is protected by a plastic film.
Please remove the protective film!

Inserting the batteries and closing the battery cover

Warning

Use only rechargeable batteries (→ page 48) recommended by Gigaset Communications GmbH i.e., never use a conventional (non-rechargeable) battery, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in/on the battery compartment.

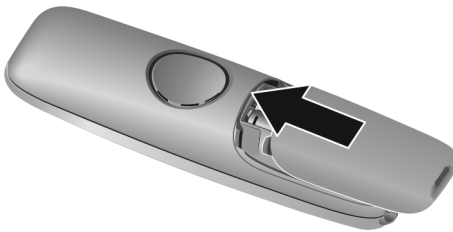

- ▶ Slide the battery cover back into the main casing until it clicks into place.


To reopen the battery cover, for instance to replace the batteries, press the grooved area at the top of the cover and slide it downwards.



Initial charging and discharging of the batteries

The correct charge status can only be displayed if the battery is first fully charged **and** discharged.

- ▶ Charge the handset in the base for **7.5 hours**.

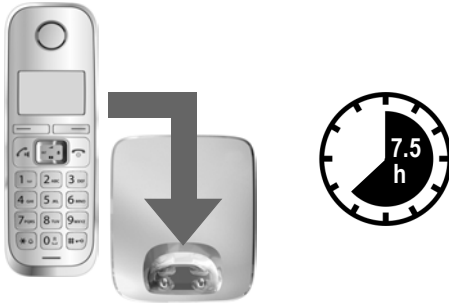

Please note

The handset must only be placed in the designated Gigaset E260/E310 base or the corresponding charger.

- ▶ After charging, remove the handset from the base and only replace it when the batteries are **fully discharged**.

Please note

- ◆ The handset is pre-registered with the base. If you have purchased a **model with multiple handsets**, all handsets will already be registered with the base. You do not need to register the handsets again.
However, if a handset is not registered with the base (**Register HS** or **Put into base** flashes on the display), please register the handset manually (→ page 35).
- ◆ After the first battery charge **and** discharge, you may place your handset in the charger after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

Changing the display language

Change the display language if you do not understand the language currently set.




- ▶ Press the right-hand display key.




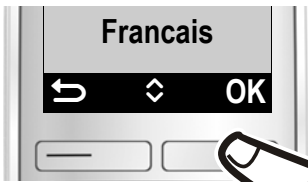
- ▶ Press keys **4** **2** **1** **slowly** one after the other.



The display for setting languages appears and the current language (e.g., English) is selected.

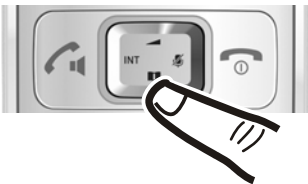

- ▶ Press down on the control key  ...




... until the language you wish to use is displayed e.g., French.

- ▶ Press the key below **OK** to select this language.



The selection is marked with ✓.



- ▶ Press and **hold** the end call key  to return to idle status.

Setting the date/time


Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

Please note


Depending on your network provider, the date and time may be displayed automatically.



- ▶ Press the key below **Menu** on the display screen to open the main menu.

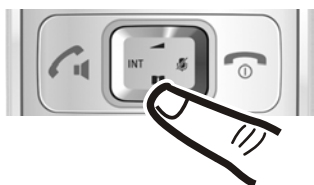


- ▶ Press down on the control key ...

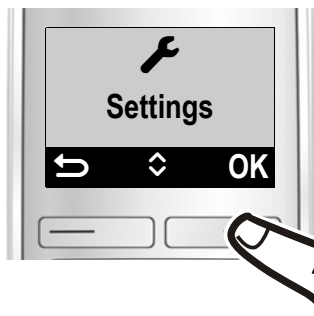

... until the menu entry **Settings** appears on the screen.

- ▶ Press the key below **OK** on the display screen.

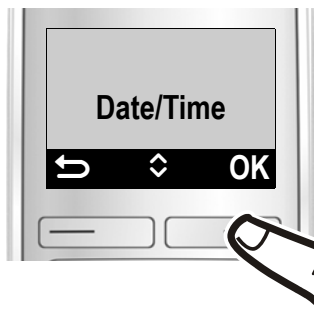

The menu entry **Date/Time** appears on the screen.

- ▶ Press the key below **OK** on the display screen.




- ▶ The input field opens. The active line is marked [...]. Enter the day, month and year as a 6-digit number via the keypad e.g., for 1 April 2017.



To correct errors: Press on the left or right edge of the control key to change the position of the cursor.



- ▶ Press the key below **OK** on the display screen to confirm your entry.

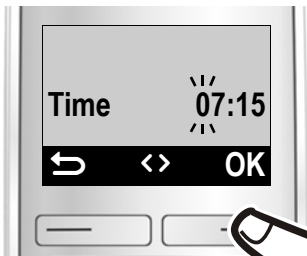

- ▶ Enter the hours and minutes as four-digit numbers via the keypad e.g., for 7.15 a.m. If necessary, use the control key to swap between fields.

- ▶ Press the key below **OK** on the display screen to confirm your entry.



The display shows **Saved**. You will hear a confirmation tone.



- ▶ Press and **hold** the end call key to return to idle status.

Please note

If your phone receives the date and time during calling line display (e.g., via your network provider, a router or PABXs), you can specify whether this data should be copied to your phone:

- ▶ Press the following keys in sequence:



You will see the following display and the current setting will flash:

973 SET: [0]

- ▶ Press one of the following keys to determine when the date should be copied across:



Never



Or **Once**, in case the date/time is not set on your phone



Or **Always**

Your selection is displayed (e.g., 2 for Always):

973 SET: [2]

- ▶ Press the display key **OK**.

Display in idle status

Once the phone is registered and the time set, the idle status is shown as in this example.


Screen display

- ◆ Reception between the base and the handset:

- Good to poor: 📶 📶 📶 📶
- No reception: 📶

- ◆ Battery charge status:

- 📶 Batteries charged to over 66%
- 📶 Batteries charged to between 34% and 66%
- 📶 Batteries charged to between 11% and 33%
- 📶 Batteries charged below 11%
- 📶 Flashes: battery almost empty (less than 10 minutes of talktime)
- 🔌📶 🔌📶 🔌📶 🔌📶 Charging

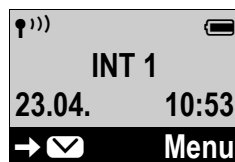

If **Eco Mode+** (→ page 34) is activated, the 📶 icon is displayed in the top left corner of the display.

Your phone is now ready for use.

If you have any questions about using your phone, please read the tips on troubleshooting ("Questions and answers" → page 45) or contact our Customer Care team (→ page 46).

What would you like to do next?

Now that you have successfully set up your Gigaset, you can immediately start calling – or you can adapt it to your personal requirements. Use the following guide to quickly locate the most important functions.

Operating the phone	▶	page 18
Changing the ringers and volume on the handset	▶	page 40
Changing the call volume on the handset	▶	page 39
Setting the sound of the earpiece	▶	page 40
Activating Eco Mode / Eco Mode+	▶	page 34
Transferring an old directory to a new handset	▶	page 29
Registering other handsets	▶	page 35
Setting big dial font	▶	page 38
Storing numbers in the directory	▶	page 28

Using the phone


Menu guidance

Your telephone's functions are accessed via a menu consisting of several levels (menu overview → page 23).


Main menu (first menu level)




- ▶ When the handset is in idle status, press the display key **Menu** to open the main menu.

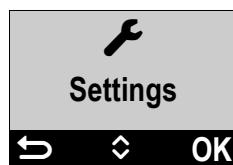The functions in the main menu are shown by means of an icon and the function's name.



Selecting a function:


- ▶ You can scroll between functions using the control key . The relevant function is shown in the display.
- ▶ Press the display key **OK** to select the displayed function. This opens the corresponding submenu and the first entry is displayed.


If you press the display key  left on the control key  or **briefly** press the end call key , the display returns to idle status.




Submenus

The functions in the submenu are indicated by name.

Selecting a function:

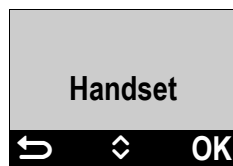- ▶ You can scroll between functions using the control key . The relevant function is shown in the display.
- ▶ Press the display key **OK** to select the displayed function. This opens the corresponding submenu and the first entry is displayed.




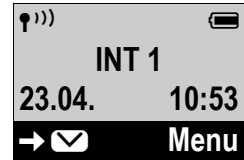
If you press the display key , left on the control key  or **briefly** press the end call key , the display will return to the previous menu level.

Any settings you have not confirmed by pressing **OK** will be discarded.

Returning to idle status

From any point in the menu:

- ▶ Press and **hold** the end call key  or
- ▶ Do not press any key: after 2 minutes, the display will **automatically** revert to idle status.



Keys on the keypad

 /  /  etc.


Press the corresponding key on the handset.




Enter digits or letters.

Correcting incorrect entries

You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Use the display key  to delete the character to the left of the cursor
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character e.g., when entering time and date

Activating/deactivating the handset

 
 In idle status, press and **hold** the end call key (confirmation tone).

If you place a deactivated handset in the base or charger, it will automatically be activated after a specific period of time (approx. 30 seconds).

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



In idle status, press and **hold** the hash key (confirmation tone). The keypad lock is activated or deactivated. If it is activated, the  icon appears in the display.

If the keypad lock is activated, a corresponding message is displayed when you press a key.

The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note

When the keypad lock is active, you cannot call emergency numbers.

Understanding the operating steps


An example of a procedure is as follows:

Menu ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK**
 ▶  **Auto Answer** ▶ **OK** (✓ = on)

This means you should proceed as follows:

Please note

Scroll upwards if you wish to select one of the last entries in a menu level with numerous entries.

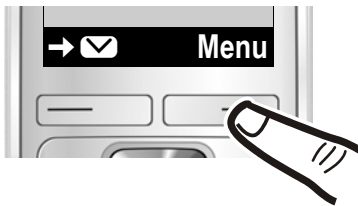


Menu :

Press the key below **Menu** on the display screen to open the main menu.



▶  :

Press up or down on the control key until ...

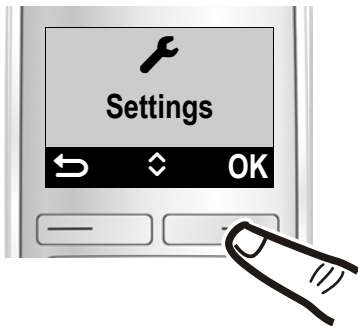


Settings:

... the menu entry **Settings** appears on the screen.

▶ **OK:**

Press the key below **OK** on the display screen to open the submenu.

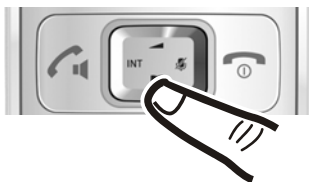

▶  :

Press up or down on the control key until ...

Understanding the operating steps




Handset:

... the menu entry **Handset** appears on the screen.


▶ **OK**:

Press the key below **OK** on the display screen to open the sub-menu.

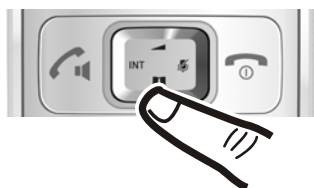

▶ :

Press up or down on the control key until ...

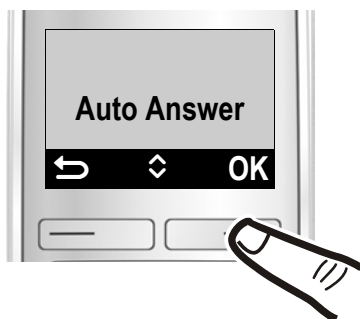


Auto Answer:


... the menu entry **Auto Answer** appears on the screen.

▶ **OK**:


Press the key below **OK** on the display screen to switch the function on or off (☎! = on).

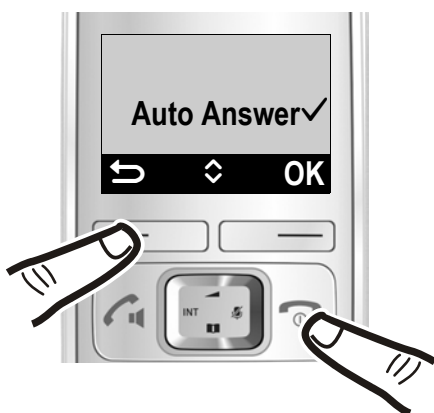


The change is effective immediately and does not need to be confirmed.





Press the key below  on the display screen to jump back to the previous menu level

or

Press and **hold** the end call key  to return to idle status.

Menu tree

If you press the **Menu** display key in idle status, a list appears with menu entries. You can scroll through the list by pressing .

-  **Alarm Clock**
-  **Audio Settings**
-  **Voice Mail**
-  **Settings**

Some of these menu entries contain submenus. The page numbers refer to the relevant description in the user guide.

Alarm Clock

Activation	→ page 35
Wake-up time	→ page 35

Audio Settings


Handset Volume	Earpiece	→ page 39
	Speaker	→ page 39
Handset Sound	Low	→ page 40
	High	→ page 40
Ringer Volume		→ page 40
Ringer Melody	External Calls	→ page 41
	Internal Calls	→ page 41
	Alarm Clock	→ page 41
Advis.Tones		→ page 41
Battery Low		→ page 41

Voice Mail

Play Messages	→ page 33
Netw. Mailbox	→ page 33

Menu tree

🔑 Settings

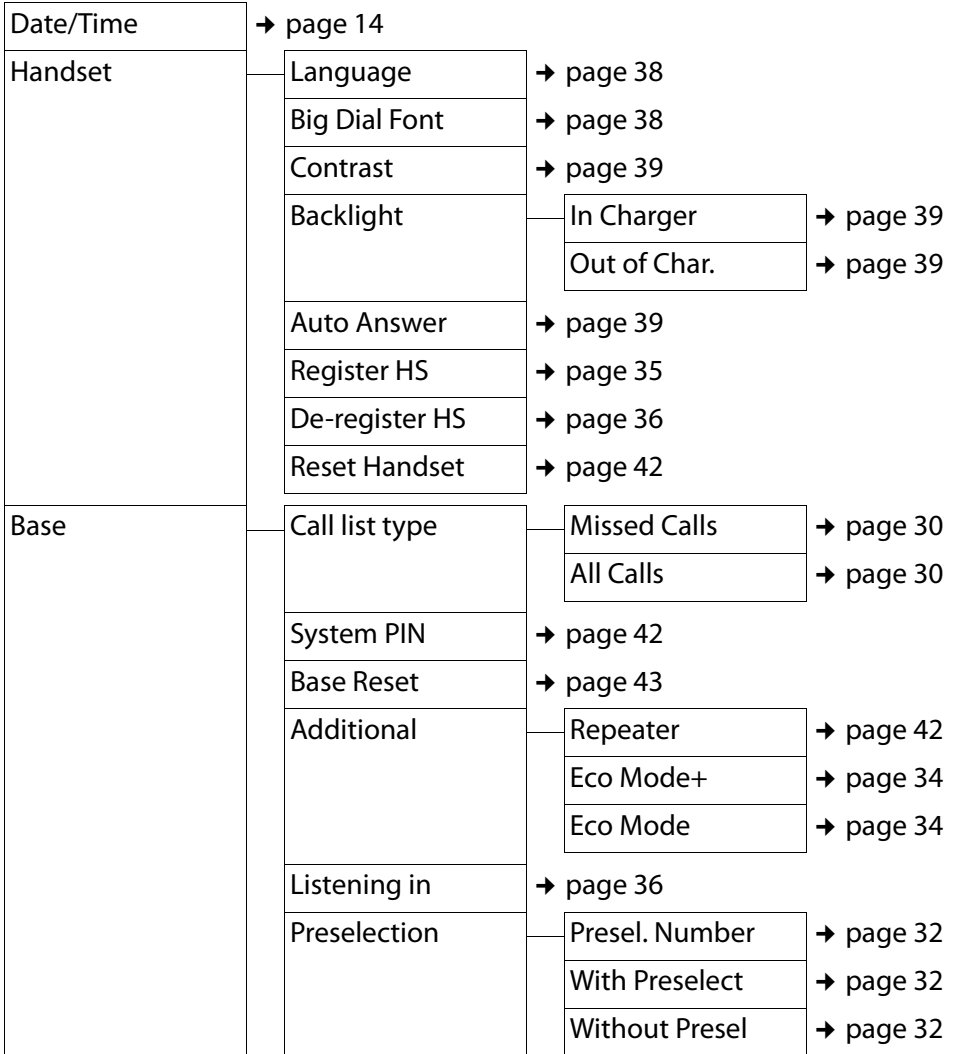




Making calls


When the display backlight is switched off, pressing any key will activate the backlight. The relevant key function is performed.



Making external calls and ending calls

External calls are calls using the public telephone network.


Enter the phone number  and press the talk key . The number is dialled.

You can also **first** press and **hold** the talk key  (dial tone) and then enter the number.


Press and **hold** the hash key  to enter a dialling pause.


During the call, you can access the menu for adjusting the earpiece volume with  and adjust the volume using .

Ending a call/cancelling dialling:

Press the end call key  or place the handset in the base or charger.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk/speaker key .

Press the talk/speaker key  to accept the call.

If the handset is in the base and the **Auto Answer** function is activated (→ page 39), the handset will accept

a call automatically when you lift it out of the base.

If the ringer is intrusive, press

Menu ▶ **Silent** ▶ **OK**

You can accept the call as long as it is displayed on the screen.

Calling Line Identification

When you receive a call, the caller's number and/or name is displayed on the screen if the following prerequisites are met.

- ◆ Your network provider supports CLIP, CLI and CNIP.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
 - CNIP (Calling Name Identification Presentation): the caller's name is displayed.
- ◆ You have requested CLIP or CNIP from your network provider.
- ◆ The caller has requested CLI from the network provider.

Call display

When you receive a call, the phone number or, if you have CNIP, the name (town) registered with your network provider for the caller's number is shown in the display.

If the number of the caller is stored in your directory, the display is

Making calls

replaced by the corresponding directory entry.



The following is displayed instead of the number:

- ◆ **External call**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld or not requested Calling Line Identification.

Notes on phone number display (CLIP)

By default, the number of the caller is shown in the display of your Gigaset telephone. You do not have to make any other settings on your Gigaset telephone.

However, if the caller's number is not displayed, this can be due to the following:

- ◆ You have not requested CLIP from your network provider
- ◆ Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.

Is your telephone connected via a PABX/gateway?

You can establish this by checking for an additional device connected between your telephone and home connection, e.g., a PABX, gateway

etc. In most cases, simply resetting this device will remedy the situation:

- ▶ Briefly disconnect the PABX power plug. Re-insert the plug and wait for the device to restart.

If the caller number is still not displayed:

- ▶ Check the CLIP (phone number display) settings of your PABX and activate this function if necessary. In the user manual for the device, search for the term "CLIP" (or an alternative term such as "calling line identification", "phone number identification", "caller ID" etc.). If necessary, contact the device manufacturer.

If this does not resolve the problem, it is possible that your network provider does not provide the CLIP service for this number.

Have you requested the phone number display service from your network provider?

- ▶ Check whether your provider supports phone number display (CLIP) and that the function has been activated for you. If necessary, contact your provider.

Additional information on this subject can be found on the Gigaset website at:

www.gigaset.com/service

Speaker mode operation


In speaker mode, you activate the loudspeaker so that you can hear the caller without having to hold the handset to your ear. You therefore have both hands free and other people can listen in on the conversation.

Please note

Inform your caller before you use speaker mode so that they know a third party may be listening.


Activating/deactivating speaker mode

Switching between earpiece and speaker mode

 Press the speaker key.

During a call, activate or deactivate speaker mode.


If you wish to place the handset in the charger during a call:

- ▶ Press and hold the speaker key  while placing the handset in the charger and for a further 2 seconds. Otherwise, the call is cancelled.

For instructions on adjusting the loudspeaker volume, see page 39.

Muting

You can deactivate your handset's microphone during a call.

Press the **right-hand** control key  during the call to activate/deactivate the function.


Using the directory and lists

The telephone offers a directory, redial list, network mailbox list and calls list.

You can save up to 120 entries in the directory.

You can create a personalised directory for your own individual handset. You can copy all of the entries or individual entries to other handsets (→ page 29). It is also possible to copy entries from old handsets providing they are registered to your (new) base.

Directory

You can store numbers and the associated names in the **directory**. With the handset in idle status, open the directory by pressing the  control key.


Length of an entry


Number: max. 32 digits

Name: max. 16 characters

Saving the first number in the directory



 ▶ **New Entry?** ▶ **OK**

▶  (Enter number) ▶ **OK**

 
▶  (Enter name) ▶ **OK**

Using the directory and lists

Storing further numbers in the directory

- ☐ ▶ **Menu** ▶ **New Entry** ▶ **OK**
- ▶  (Enter number) ▶ **OK**
- ▶  (Enter name) ▶ **OK**

Please note

- ◆ Refer to the character set chart to see how to enter names (→ page 50).
- ◆ Press and **hold** the hash key  to enter a dialling pause.

Order of directory entries

The directory entries are sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:



- 1 Space
- 2 Digits (0–9)
- 3 Letters (alphabetical)
- 4 Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.

Selecting a directory entry

☐ Open the directory.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name, if necessary scroll to the entry with the  key.

Dialling with the directory

Select an entry.



Managing directory entries

Select an entry.

The following functions can be selected with **Menu** ▶ :

New Entry

Save new phone number.

Show Number

Display the phone number.

Show Name

Display the name.

Edit Entry

Edit selected entry.

Use Number

Edit or add to a stored number. Then dial or select other functions using **Menu**.

Delete Entry

Delete selected entry.

Send Entry

Send an individual entry to another handset (→ page 29).

Delete List

Delete **all** directory entries.

Send List



Send the complete directory to another handset.

Shortcut


For creating shortcuts by assigning the current entry to a key, see the following section.

Using shortcuts

You can assign directory entries to the keys **2.ABC** to **9.WXYZ**:

  (Select entry)

▶ **Menu** ▶ **Shortcut**

▶  (Press the key to which you want to assign the entry)

To dial, press and hold the required shortcut key.

Transferring the directory to another handset


You can transfer directory entries from other handsets to your new handset – even entries from old handsets.

Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

  (Select entry) ▶ **Menu**

▶  **Send Entry/Send List**

▶ **OK** ▶  (Select the internal number of the receiving handset)

▶ **OK**

A message appears on the display to confirm a successful transfer. You will hear the confirmation tone.

Adding a displayed number to the directory

You can copy numbers displayed in a list, e.g., the calls list or redial list, to the directory.

If you have CNIP, the first 16 characters of the transmitted name are also copied in the input field **<Name>**.

A number is displayed.

Menu ▶  **Copy to Dir.** ▶ **OK**

▶ Complete the entry (→ page 28).

Redial list

The redial list contains the ten numbers last dialled with the handset. If one of the numbers is in the directory, the corresponding name will be displayed.

Dialling from the redial list



Press the talk key.



Select an entry.



Press the talk key. The number is dialled.

Managing entries in the redial list



Press the talk key.



Select an entry.



Press the display key.

The following functions can be selected with :

Use Number

Edit or add to the number. Then dial or select other functions from the **Menu**.

Copy to Dir.

Copy an entry to the directory.

Delete Entry

Delete selected entry.

Delete List

Delete **all** entries.

Using the directory and lists

Network mailbox list

You can use this list to listen to messages on the network mailbox (→ page 33).

Calls list

Prerequisite: CLIP (→ page 26)

Depending on the type of list set, the calls list contains:

- ◆ All calls
 - Accepted calls
 - Unanswered calls
- ◆ Missed calls

Setting the call list type

Menu ▶ **Settings** ▶ **OK**

▶ **Base** ▶ **OK**

▶ **Call list type** ▶ **OK**

▶ **Missed Calls /All Calls**

▶ **OK** (✓ = selected)

Press and **hold** (idle status).

The calls list entries are retained when you change the list type.

Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved.

Opening the calls list

▶ **CallsList**

The calls list is displayed as follows:

CallsList 01+02

Number of new entries + number of old, read entries.

OK Press the display key to open the list.

The last incoming call is displayed. The display will alternate between the following (example):

12345678	Number or name of caller
23.04. 10:53	Date/time of call

If necessary, use to select another entry.

The following functions can be selected with **Menu** ▶ :

Delete Entry

Delete current entry.

Copy to Dir.

Copy an entry to the directory.

Date/Time

Display date and time of call (if set, → page 14).

Status

New Call: New missed call.

Old Call: Entry already read.

Show Name

If you have requested CNIP, you can view the name and town that are registered for this phone number with your network provider.

Delete List

Caution! All old and new entries will be deleted.

After exiting the calls lists, all viewed entries are assigned the status "old".

Calling back a caller from the calls list

→✉ ▶ 📞 CallsList 01+02 ▶ OK
▶ 📞 (Select entry) ▶ 📞

Opening lists

When you press **?**, the list selection opens. You can scroll through the available lists by pressing **📞**. Only the lists containing messages and the network mailbox list are displayed.

An **advisory tone** sounds as soon as a **new message** appears in a list. The message **New messages** appears in the display.

Please note

If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been set (depending on your network provider).

Automatic network provider preselection

You can store a call-by-call number (preselection number), which is **automatically** placed in front of numbers when you dial them. If, for example, you wish to make international calls via special network providers, you can save the relevant dialling code here.

In the **With Preselect** list, specify the dialling codes or the first digits of the dialling codes that you wish to assign to the preselection number.

In the **Without Presel** list, enter the exceptions to the **With Preselect** list.

Examples:







Presel. Number	0999
With Preselect	08
Without Presel	081 084

All numbers that start with 08, except for 081 and 084, are dialled with the preselection number 0999.

Phone number	Dialled number
07112345678 ▶	07112345678
08912345678 ▶	0999 08912345678
08412345678 ▶	08412345678

Automatic network provider preselection

Storing preselection numbers

- Menu ▶  Settings ▶ **OK**
 - ▶  Base ▶ **OK**
 - ▶  Preselection ▶ **OK**
 - ▶  Presel. Number ▶ **OK**
 - ▶  (Enter or edit preselection number) ▶ **OK**
-  Press and **hold** (idle status).








Permanently deactivating preselection

Delete the preselection number with **<C** and press **OK**.




Saving or editing entries in preselection lists

Each of the two lists can contain 11 entries with 4 digits.

Depending on the country, numbers may be preset in the "With Preselect" list. This means e.g., that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.

- Menu ▶  Settings ▶ **OK**
 - ▶  Base ▶ **OK**
 - ▶  Preselection ▶ **OK**
 - ▶  With Preselect /
- Without Presel** ▶ **OK**
- ▶  (Select entry)
 - ▶ **OK** ▶  (Enter or edit first digits of number) ▶ **OK**
-  Press and **hold** (idle status).

Temporarily cancelling preselection

-  (press and hold) ▶ **Menu**
- ▶  Preselect off ▶ **OK**
- ▶  Dial number

Using the network mailbox

The network mailbox is the answering machine in your provider's telephone network. More information is available from your provider.

You cannot use the network mailbox unless you have **requested** it from your provider.

Entering the network mailbox number

In order to use the network mailbox quickly and easily via the network mailbox list and to use fast access, you will need to enter the number in your phone.

Menu ▶  **Voice Mail** ▶ **OK**
▶  **Netw. Mailbox** ▶ **OK**



Enter the network mailbox number and press **OK**.

Accepting a new message from the network mailbox

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number is saved in the **calls list** (→ page 30).

Please note

Enter the network mailbox phone number into your directory along with the designation "Network mailbox"; the display and the calls list will then show this designation.

Playing back messages

There are three ways to call the network mailbox.

- ◆ Call the network mailbox via the **Voice Mail** menu:

Menu ▶  **Voice Mail** ▶ **OK**
▶  **Play Messages** ▶ **OK**

- ◆ Call the network mailbox via the network mailbox list:

  ▶  **Netw.MBX**

The list is displayed as follows:


Netw.MBX 00+**

00: The number of new messages is only displayed correctly if your network provider transmits this information.

** : The number of old messages is not available.

OK Press the display key to call the network mailbox.

- ◆ Fast access to the network mailbox:

To access the network mailbox, simply press and **hold** the  key – you do not have to select it via the menu.

ECO DECT

You are helping to protect the environment with your Gigaset.

Reducing energy consumption

Your telephone has a power-saving adapter plug and uses <0.4 W when in idle status and when the batteries are not being charged.

Reducing radiation

The radiation from your telephone is reduced **automatically**:

- ◆ **Handset:** The closer the handset is to the base, the lower the radiation.
- ◆ **Base:** The radiation is reduced to virtually zero when only one handset is registered and the handset is placed in the base.

You can reduce the radiation from the handset and the base even more by using **Eco Mode**:

Eco Mode

Reduces the radiation of the base and handset by 80% – whether you are making a call or not. **Eco Mode** reduces the range of the base by approx. 50%. It is always better to use **Eco Mode** when a reduced range is sufficient.





Switching off radiation

Eco Mode+



When you activate **Eco Mode+**, the radiation (DECT transmission power) of base and handset is switched off automatically and only turns on when calls are made. This is also true when multiple handsets are used, provided the handsets support **Eco Mode+**.

Eco Mode/Eco Mode+ can be activated/deactivated independently of one another and can also be used with multiple handsets. The handset need not be placed in the base.


Activating/deactivating Eco Mode / Eco Mode+

- Menu ▶  Settings ▶ **OK**
- ▶  Base ▶ **OK**
- ▶  Additional ▶ **OK**
- ▶  Eco Mode / Eco Mode+
- ▶ **OK** (✓ = on)

Status displays

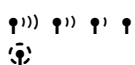Display icon	
	Reception strength: – Good to poor – No reception
	Eco Mode+ enabled (displays instead of the reception strength icon when in idle status)

Please note

- ◆ When using **Eco Mode+** you can ensure that the range of the base is sufficient by pressing the talk key . You hear the ring tone if the base can be reached.
- ◆ When **Eco Mode+** is enabled:
 - Call setup is delayed by approx. 2 seconds.
 - Handset standby time is reduced by approx. 50%.
- ◆ Registering handsets that do not support **Eco Mode+** causes the mode to be deactivated on the base and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base.
- ◆ **Eco Mode / Eco Mode+** and repeater support (→ page 42) cancel each other out, i.e., if you use a repeater, you cannot use **Eco Mode** or **Eco Mode+**.

Using the handset as an alarm clock

Activating/deactivating the alarm clock

Prerequisite:

The time is set (→ page 14).

Menu ▶  **Alarm Clock** ▶ **OK**


▶  **Activation**

▶ **OK** (✓ = activated)


After you activate the alarm clock, the menu for setting the wake-up time opens automatically.


Setting the wake-up time

Menu ▶  **Alarm Clock** ▶ **OK**

▶  **Wake-up time** ▶ **OK**

▶  (Enter wake-up time) ▶ **OK**

If the alarm clock is activated, you will see the  icon in the display and the wake-up time after it.

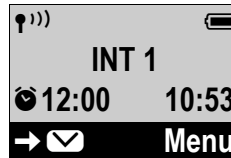

When the alarm clock rings...

Press any key to deactivate the alarm clock for 24 hours.

If you do not press any key, the alarm clock switches off after one minute.

Using multiple handsets

Registering handsets

You can register up to four handsets on the base.

Registering a Gigaset handset manually to the Gigaset E260/ E310

You must register the handset manually on both the handset (1) and the base (2).

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g., **INT 1**.

Using multiple handsets

The registration process is cancelled after 60 seconds. If the handset has not registered within this time, repeat the process.

1) On the handset

Menu ▶  **Settings** ▶ **OK**

▶  **Handset** ▶ **OK**

▶  **Register HS** ▶ **OK**

▶ Enter the base system PIN (default setting: 0000) ▶ **OK**

Registering flashes on the display.

2) On the base

Within **60 seconds** of entering the system PIN, press and **hold** the registration/paging key on the base (→ page 1) (min. 3 seconds).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

1) On the handset

▶ Start to register the handset as described in its user guide.

2) On the base

▶ Press and **hold** the registration/paging key on the base (→ page 1) for approx. 3 seconds.

De-registering handsets

You can de-register any other registered handset from any registered Gigaset handset.

Menu ▶  **Settings** ▶ **OK**

▶  **Handset** ▶ **OK**

▶  **De-register HS** ▶ **OK**



Select the internal party/parties you wish to de-register and press **OK**. (The handset you are currently using is indicated by <.)





Enter the current system PIN and press **OK**.

Locating a handset ("paging")

You can locate your handset using the base.

- ▶ **Briefly** press the registration/paging key on the base (→ page 1).
- ▶ All handsets will ring at the same time ("paging"), even if the ringer melodies are switched off.

Ending paging

Briefly press the registration/paging key on the base (→ page 1) or press the talk key  or end call key  on the handset.

Listening in to an external call (conference)


You want to listen in to an existing external call.

Prerequisite: The **Listening in** function must be activated.


Activating/deactivating the function:


- Menu** ▶  **Settings** ▶ **OK**
 ▶  **Base** ▶ **OK**
 ▶  **Listening in** ▶ **OK** (✓ = on)

Listening in to the call:

Press and **hold** the talk key  on the handset. All participants hear a signal tone. This handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in:



Press the end call key  on the handset; all participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.




Making internal calls

Internal calls are free calls between handsets that are registered with the same base.




Calling a specific handset

-  Initiate internal call.
 Enter the number of the handset.

Or:

-  Initiate internal call.
 Select handset.
 Press the talk key.


Calling all handsets ("group call")

-  Press and **hold**.
Or:
 Initiate internal call.
 Press the star key.


Or:

-  Initiate internal call.

Call all

- Select
 Press the talk key.

Ending a call


-  Press the end call key.

Accepting an internal call

Your telephone rings and the internal number of the caller appears in the display (e.g. INT 2).



Press the talk key , to take the call.

Ending a call

Press the end call key .

Transferring a call to another handset/internal consultation

You are in conversation with an **external** participant.

-  Open the list of handsets. The external participant hears the music on hold.
 Select a handset or **Call All** and press **OK**.

When an internal participant answers:

- ▶ If necessary, announce the external call.

Setting the handset

Either



Press the end call key. The external call is transferred to the other handset.

or



Press the display key. You are reconnected with the external participant.

When transferring a call, you can also press the end call key before the internal participant answers.

If the internal participant does not answer or the line is busy, the call will automatically return to you.

Accepting a waiting call

If you receive an **external** call while conducting an **internal** call, you will hear the call waiting tone (short beep). The caller's number or name will appear in the display if phone number identification is enabled.

- ▶ Press the end call key to end the internal call.
- ▶ Press the talk key to accept the external call.

Setting the handset

You can change the settings on your handset to suit your individual requirements.

Changing the display language

You can view the display texts in different languages.

- Menu ▶ Settings ▶ OK
- ▶ Handset ▶ OK
- ▶ Language ▶ OK
- ▶ (Select language) ▶ OK

The current language is indicated by a ✓.

If you accidentally choose a language you do not understand:

- Menu ▶ (Select language)
- ▶ OK (✓ = selected)








Setting big dial font

You can improve the legibility of the digits when you dial. Bigger digits are displayed.

- Menu ▶ Settings ▶ OK
- ▶ Handset ▶ OK
- ▶ Big Dial Font ▶ OK (✓ = on)









Changing the display contrast

You can set the display contrast to 9 levels.

- Menu ▶  Settings ▶  OK
- ▶  Handset ▶  OK
- ▶  Contrast ▶  OK
- ▶  (Set contrast) ▶  OK

Setting the display backlight

Depending on whether or not the handset is in the charger, you can activate or deactivate the backlight (✓ = on).

- Menu ▶  Settings ▶  OK
- ▶  Handset ▶  OK
- ▶  Backlight ▶  OK
- ▶  In Charger/Out of Char.
- ▶  OK (✓ = on)

If the display backlight **In Charger** is activated, the display is permanently dimmed, when the handset is in the charger.


If the display backlight **Out of Charger** is activated, the handset will switch the display brightness in two stages to 10% of the maximum brightness when the handset is not in the charger.







When the display backlight is switched off, pressing any key will activate the backlight and perform the relevant key function.

Please note

If the backlight is turned on outside the charger, the standby time for the handset is considerably reduced!

Auto answer

When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key .


- Menu ▶  Settings ▶  OK
- ▶  Handset ▶  OK
- ▶  Auto Answer ▶  OK (✓ = on)


Changing the speaker/earpiece volume

You can set the volume for speaker mode and earpiece mode to five different levels.



In idle status:


-  ▶ Handset Volume ▶  OK
- ▶  Earpiece/Speaker ▶  OK

 Set the volume 1–5.

 OK Press the display key to save the setting.

During a conversation via the earpiece or in speaker mode:

-  Press the control key to open the menu for setting the volume. Set the earpiece or speaker volume 1–5 by pressing .

The setting 1–5 will automatically be saved after approximately 3 seconds or press the display key .

Setting the handset

Please note

You can also set the call volume via the menu (→ page 23).


Extra loud setting

During a conversation, the earpiece volume can also be set to **Extra Loud**:



Do not hold the handset close to the ear when doing so.

If **Extra Loud** is set, **Extra Loud!** is shown on the display.

After pressing the display key  or at the end of the call, the volume will automatically drop to the previously set level.

Warning



- ◆ This setting can cause damage to the hearing of people with good hearing and is only intended for people with a hearing impairment.
- ◆ It may amplify interference noise in the phone line.

Setting the sound of the earpiece

Adjust the sound of the earpiece to suit your requirements.

- ◆ **Low**: Default setting
- ◆ **High**: Treble emphasis setting

In idle status:

-  ▶ **Handset Sound** ▶ **OK**
 - ▶  **Low/High**
 - ▶ **OK** (✓ = selected)

Please note

You can also set the sound of the earpiece via the menu (→ page 23).

Changing ringers

◆ Volume:

Five volume levels (1–5) and **Crescendo** (volume increases with each ring) can be set.

◆ Melody:

List of pre-loaded ringer melodies. The first three melodies are the "classical" ringer melodies.

You can also set different ringer melodies for the following functions:

◆ External Calls

◆ Internal Calls


◆ Alarm Clock

Setting the ringer volume

The ringer volume is the same for all types of ring.

In idle status:

 ▶  **Ringer Volume** ▶ **OK**

 Set the volume.

OK Press the display key to save the setting.




Please note


You can also adjust the ringer volume via the menu (→ page 23).

Setting the ringer melody

Set different ringer melodies for external calls, internal calls and the alarm clock.

In idle status:

  **Ringer Melody** ▶ **OK**
 ▶  **External Calls/Internal Calls/Alarm Clock** ▶ **OK**

 Select melody and press **OK** (✓ = selected).

Please note

You can also set the ringer melodies via the menu (→ page 23).


Activating/deactivating the ringer


You can:

- ◆ Permanently deactivate the ringer in **idle status** or **when receiving a call**
- ◆ Deactivate the ringer for the **current call** only


The ringer cannot be re-activated while a call is in progress.

Permanently deactivating the ringer

 Press and **hold** the star key.

The  icon appears in the display.

Reactivating the ringer

 Press and **hold** the star key.

Deactivating the ringer for the current call

Menu ▶ **Silent** ▶ **OK**

Advisory/warning tones

Your handset uses advisory tones to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other:

◆ Advis.Tones

- **Key click**: Every key press is confirmed.
- **Confirmation tone** (rising tone sequence): At the end of an entry/setting, when the handset is placed in the base and on arrival of a new entry in the call list.
- **Error tone** (descending tone sequence): When you make an incorrect entry.
- **Menu end tone**: When scrolling at the end of a menu.

◆ Battery Low

The battery needs charging.

The **menu end tone** when scrolling at the end of a menu cannot be deactivated.

Activating/deactivating advisory tones

Menu ▶  **Audio Settings** ▶ **OK**
 ▶  **Advis.Tones** ▶ **OK** (✓ = on)

Activating/deactivating the battery low beep

Menu ▶  **Audio Settings** ▶ **OK**
 ▶  **Battery Low** ▶ **OK** (✓ = on)

Setting the base

Restoring the handset default settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory, calls list, date and time or the handset's registration to the base.

Menu ▶  **Settings** ▶ **OK**
▶  **Handset** ▶ **OK**
▶  **Reset Handset** ▶ **OK**
▶ **Reset?** ▶ **OK**





Cancel the reset with .

Setting the base

The base settings are made via registered handset.

Repeater support

You can increase the range and signal strength of the base using a repeater. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Menu ▶  **Settings** ▶ **OK**
▶  **Base** ▶ **OK**
▶  **Additional**
▶ **OK** ▶  **Repeater**
▶ **OK** (✓ = activated)

After activating or deactivating the repeater, switch your handset off

and on again (→ page 19).

Please note




- ◆ Eco Mode / Eco Mode+ (→ page 34) and repeater support cancel each other out, i.e., if you use a repeater, you cannot use Eco Mode or Eco Mode+.
- ◆ The default encrypted transmission setting is deactivated when repeater mode is activated.

Protecting against unauthorised access

Protect the system settings of the base with a system PIN known only to you. You will need to enter the system PIN when, for example, registering/de-registering a handset to/from the base.

Changing the system PIN

You can change the base's 4-digit default system PIN ("0000") to a 4-digit PIN known only to yourself.

Menu ▶  **Settings** ▶ **OK**
▶  **Base** ▶ **OK**
▶  **System PIN** ▶ **OK**
▶ **PIN:** (Enter current system PIN)
▶ **OK** ▶ **New PIN:** (Enter new system PIN) ▶ **OK**

Resetting the system PIN

If you have forgotten your system PIN, you can reset the PIN to the original code **0000 using the button on the base. This will also reset other settings**; see the section entitled "Resetting the base to the default settings".

Resetting the base to the default settings

When restoring default settings:

- ◆ Individual settings are reset
- ◆ All lists are deleted
- ◆ **Eco Mode** and **Eco Mode+** are deactivated.

The date and time are retained.

Resetting the base via the menu

When resetting via the menu

- ◆ Handsets are still registered
- ◆ The system PIN is not reset.

Menu ▶  **Settings** ▶ **OK**

▶  **Base** ▶ **OK**

▶  **Base Reset** ▶ **OK**

Resetting the base using the button on the base

When resetting the base using the button on the base

- ◆ All handsets are de-registered and
- ◆ The system PIN is reset to the original code **0000**

Proceed as follows:

- ▶ Remove the mains cable from the base.
- ▶ Hold down the registration/paging key on the base (→ page 1) while reconnecting the power cable to the base. Hold the key down for at least 5 seconds.

Please note

All handsets are de-registered and must be re-registered. All settings are reset to the default settings.

Operating the base on the PABX

The following settings are only necessary if your PABX requires them; see the PABX user manual.

Changing the dialling mode

Menu ▶ * 0 # → 0 0 5 # → 1 → 1 →

▶ Enter the digit for the dialling mode: 0 0 = tone dialling (DTMF); 1 → = pulse dialling (PD) ▶ **OK**.

Temporarily switching to tone dialling (DTMF)

If your PABX still operates with pulse dialling (PD), but you need tone dialling for a connection (e.g., to listen to the network mailbox), you must switch to tone dialling for the call.

Prerequisite: You are conducting a call or have already dialled an external number.

▶ Press the star key * 0.

Tone dialling is now activated **for this call only**.


Setting recall

Menu ▶ * 0 # → 0 0 5 # → 1 → 2 #

▶ Enter digits for recall:

0 0 = 80 ms; 1 → = 100 ms;
2 # = 120 ms; 3 DEF = 400 ms;
4 DEF = 250 ms; 5 # = 300 ms;
6 # = 600 ms; 7 # = 800 ms ▶ **OK**.

Changing the pause after line seizure

You can set the length of the pause inserted between pressing the talk key  and transmitting the phone number.

Menu ▶ * 0 # → 0 0 5 # → 1 → 9 #

▶ Enter digit for the current pause length:

1 → = 1 second
2 # = 3 seconds
3 DEF = 7 seconds ▶ **OK**.

Changing the pause after recall key

Menu ▶ * 0 # → 0 0 5 # → 1 → 4 #


▶ Enter digit for the current pause length:

1 → = 800 ms;
2 # = 1600 ms;
3 DEF = 3200 ms ▶ **OK**.

Questions and answers

If you have any questions about the use of your phone, you can contact us at www.gigaset.com/service for assistance 24/7.

In addition, the following table provides troubleshooting assistance.

<p>The display is blank.</p> <ol style="list-style-type: none"> The handset is not activated. <ul style="list-style-type: none"> ▶ Press and hold the end call key . The battery is empty. <ul style="list-style-type: none"> ▶ Charge or replace the battery (→ page 12).
<p>"Base" flashes in the display.</p> <ol style="list-style-type: none"> The handset is outside the range of the base. <ul style="list-style-type: none"> ▶ Move the handset closer to the base. The range of the base is reduced because Eco Mode mode is activated. <ul style="list-style-type: none"> ▶ Deactivate Eco Mode (→ page 34) or reduce the distance between the handset and base. The base is not activated. <ul style="list-style-type: none"> ▶ Check the base power adapter (→ page 10).
<p>"Put into base" or "Register HS" flashes in the display.</p> <p>The handset has not been registered with the base or has been de-registered.</p> <ul style="list-style-type: none"> ▶ Place the handset in the base (automatic registration, may take up to 5 minutes) or register the handset manually (→ page 35).

<p>The handset does not ring.</p> <p>The ringer melody is deactivated.</p> <ul style="list-style-type: none"> ▶ Activate the ringer melody (→ page 41).
<p>You cannot hear a ringer/dialling tone from the fixed line.</p> <p>The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.</p> <ul style="list-style-type: none"> ▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 50).
<p>The connection always terminates after approx. 30 seconds.</p> <p>Repeater activated/deactivated (→ page 42).</p> <ul style="list-style-type: none"> ▶ Activate/deactivate the handset (→ page 19).
<p>When you try to activate Eco Mode+, "Not possible!" appears in the display.</p> <p>A handset is registered to the base that does not support Eco Mode+.</p>
<p>Error tone sounds after system PIN prompt.</p> <p>You have entered the wrong system PIN.</p> <ul style="list-style-type: none"> ▶ Reset the system PIN to 0000 (→ page 43).
<p>Forgotten system PIN.</p> <ul style="list-style-type: none"> ▶ Reset the system PIN to 0000 (→ page 43).
<p>The number of the caller is not displayed although CLIP has been set.</p>

Environment

Calling Line Identification is not enabled.

- ▶ **The caller** should ask the network provider to enable Calling Line Identification (CLI).

Refer to the notes on calling line display (→ page 26).

You hear an error tone when keying an input.

Action has failed/invalid input.

- ▶ Repeat the process.
Read the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set to pulse dialling.

- ▶ Set your PABX to tone dialling (→ page 44).

Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset E260/E310 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and

ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste.

Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from general household waste using designated local authority sites.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

Correct disposal and separate collection of used equipment will help to prevent potential negative consequences for the environment and human health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Exclusion of liability

Your handset display has a resolution of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation.

This is normal and no reason for a warranty claim.

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and housing are excluded from the warranty.

Appendix

Caring for your telephone

Wipe the unit with a **damp cloth** or an **antistatic cloth**. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

Contact with liquid

If the handset has come into contact with liquid:

1. **Deactivate the handset and remove the battery immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will usually be able to use it again.

Specifications

Batteries

Technology: Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh

The device is supplied with two approved batteries.

Handset operating times/ charging times

Your handset can charge batteries up to a capacity of 1000 mAh. Using special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your Gigaset depends on the capacity and age of the batteries and the way it is used. (Standby times/talktimes/operating times are maximum possible times, charging times are typical values.)

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours) *	190/ 153	220/ 176	255/ 203	310/ 250
Talktime (hours)	17	20	23	28
Operating time for 1.5 hrs of calls per day (hours) **				
- Without	110	130	150	185
- With	85	95	110	135
Eco Mode+				
Charging time in base (hours)	6.5	7.5	8.5	11
Charging time in charger (hours)	6	7	8	9.5

* Without/with display backlight

** Without display backlight
(Setting the display backlight
→ page 39)

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is updated regularly:

www.gigaset.com/service

Base power consumption

	E260/E310
In standby mode *	approx. 0.6 W
Base in standby mode **	< 0.4 W
During a call	approx. 0.5 W

* Charged handset in base


** Handset not in base

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Repeat frequency of the transmission pulse	100 Hz
Length of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 300 m out- doors, up to 50 m indoors
Base power supply	230 V ~/50 Hz
Ambient conditions for operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dial- ling)/PD (pulse dialling)

Appendix

Pin connections on the telephone jack

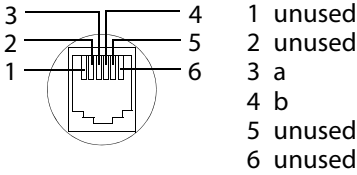

Writing and editing names

The following rules apply when writing names:

- ◆ Each key between **[0.5]** and **[9name]** is assigned several letters and characters.
- ◆ Control the cursor with **[←]** **[→]**.
- ◆ Characters are inserted at the cursor position.
- ◆ Press the display key **[<C]** to delete the character to the left of the cursor.
- ◆ The first letter of the name is automatically capitalised and then followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key **[#→]** to change the text input mode.

123	Digits
Abc	Upper case *
abc	Lower case

* First letter in capitals, all others in lower case

Writing names

Enter the individual letters/characters by pressing the corresponding key.

Briefly press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
[1→]	1	£	§	¥	¤										
[2→]	a	b	c	2	ä	á	à	â	ã	ç					
[3→]	d	e	f	3	ë	é	è	ê							
[4→]	g	h	i	4	ï	í	ì	î							
[5→]	j	k	l	5											
[6→]	m	n	o	6	ö	ñ	ó	ò	ô	õ					
[7→]	p	q	r	s	7	ß									
[8→]	t	u	v	8	ü	ú	ù	û							
[9→]	w	x	y	z	9	ÿ	ÿ	æ	ø	å					
[0.5]	[←]	.	,	?	!	0	+	-	:	;	"	'	;	_	
[*→]	*	/	()	<	=	>	%							
[#→]			#	@	\	&	§								

1) Space

Central European

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x
[1→]	1	§	¤										
[2→]	a	b	c	2	ą	ä	á	â	ć	ç			
[3→]	d	e	f	3	ę	ë	é						
[4→]	g	h	i	4	í	î							
[5→]	j	k	l	5	ł								
[6→]	m	n	o	6	ń	ó	ö	ó	ò				
[7→]	p	q	r	s	7	ß	ś						
[8→]	t	u	v	8	ű	ú	ú						
[9→]	w	x	y	z	9	ý	ź	ż					
[0.5]	[←]	.	,	?	!	0	+	-	:	"	'	;	_
[*→]	*	/	()	<	=	>	%					
[#→]			#	@	\	&	§						

1) Space

Accessories

Upgrade your Gigaset to a cordless PABX.

Gigaset E260H/E310H handset

- ◆ Extra loud voice playback
- ◆ Handsfree operation with brilliant voice quality
- ◆ Hearing aid compatible (HAC)
- ◆ High-contrast, large b/w display
- ◆ Battery charge status and reception signal indicator
- ◆ Large font for outstanding legibility
- ◆ Enlargeable digit display
- ◆ Green illuminated handsfree key
- ◆ High-quality, large, illuminated and clear keypad
- ◆ Directory for 120 entries
- ◆ Automatic redialling of the last 10 numbers
- ◆ Talk/standby time of up to 20/240 hours
- ◆ Standard batteries

www.gigaset.com



Gigaset repeater

The Gigaset repeater can be used to increase the reception range between your Gigaset handset and the base.

www.gigaset.com



Compatibility

You can find more information about the handset functions in connection with the individual Gigaset bases at:

www.gigaset.com/compatibility


All accessories and batteries are available from your phone retailer.




Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

Mounting the E260/E310 base on the wall

Mounting the E260/E310 base on the wall

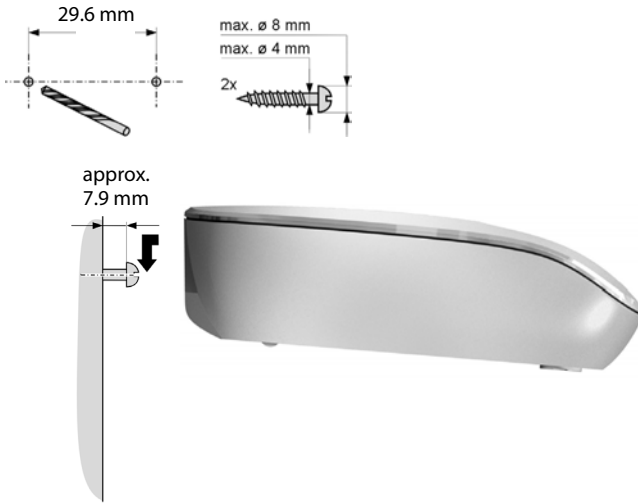

Mounting the charger on the wall

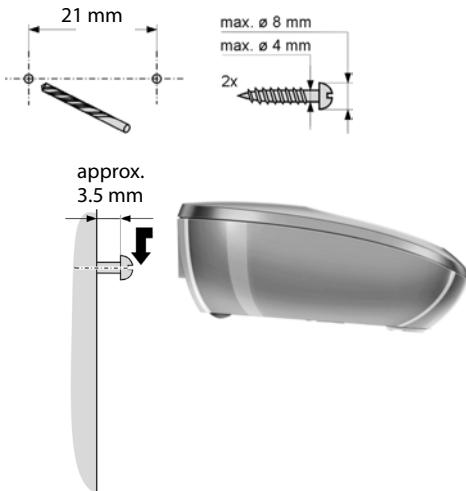

Index

A

Accepting a call	25
Access protection	42
Accessories	51
Activating	
advisory tones	41
auto answer	39
handset	19
key lock	20
Adapter plug	
power saving	34
Advisory tones	41
Alarm clock	35
Anonymous	26
Answering machine list	31
Authorisation	46
Auto answer	25, 39
Automatic network provider	
preselection	31

B

Backlight	39
Base	
changing system PIN	42
connecting	10
operating on PABX	44
restoring default settings	43
setting	42
setting up	9
Battery	
battery low tone	41
charging	12
display	2
icon	2
inserting	11
Battery low tone	41
Big dial font	38
Broken display	8

C

Call	
internal	37
participant listening in	36
transferring (connecting)	37
Call waiting, internal call	38
Calling	
externally	25
internally	37
Calling Line Identification	25
Calls list	30
Changing	
display language	13
earpiece volume	39, 40
speaker volume	39, 40
system PIN	42
Character set	50
Charge status indicator	2
CLI, CLIP	25
CNIP	25
Confirmation tone	41
Control key	1, 4
Correcting incorrect entries	19
Customer care	45
D	
Deactivating	
advisory tones	41
auto answer	39
handset	19
key lock	20
Delete key	3
Deleting	
characters	19
De-registering (handset)	36
Dialling	
using shortcut	29
with directory	28
Dialling mode	44
Dialling pause	1, 25, 28
Directory	27

Index

opening.....	4
order of entries.....	28
saving entry.....	28
saving first number.....	27
selecting entry.....	28
sending entry/list to handset.....	29
Display	
backlight.....	39
broken.....	8
changing display language.....	13, 38
contrast.....	39
in idle status.....	1, 19
name (CNIP).....	25
network mailbox message.....	33
number (CLI/CLIP).....	25
Display keys.....	1, 3
Disposal.....	47
E	
Earpiece	
sound.....	40
volume.....	39
Earpiece mode.....	27
ECO DECT.....	34
Eco mode.....	34
Eco mode+.....	34
Emergency numbers	
not possible.....	8
End call key.....	1, 25
Entering recall.....	1
Environment.....	46
Error tone.....	41
Exclusion of liability.....	47
External call.....	26
Extra loud.....	40
F	
Fast access	
answering machine.....	33
G	
General troubleshooting.....	45
Getting help with your phone.....	45
Group call.....	37

H

Handset

activating/deactivating.....	19
advisory tones.....	41
big dial font.....	38
contact with liquid.....	48
de-registering.....	36, 43
display language.....	13, 38
earpiece volume.....	39
idle status.....	19
list.....	4
locating.....	36
muting.....	27
registering.....	35
restoring to default settings.....	42
setting (individual).....	38
setting up.....	11
sound.....	40
speaker volume.....	39
transferring a call.....	37
using multiple.....	35
Hash key.....	1, 20
Hearing aids.....	8
Help.....	45

I

Icon

key lock.....	20
ringer.....	41

Idle status

display.....	1, 19
returning to.....	19

Incorrect entries (correction).....

.....	19
-------	----

Internal call.....

call waiting.....	38
-------------------	----

Internal listening in.....

.....	36
-------	----

K

Key click.....

.....	41
-------	----

Key lock.....

.....	20
-------	----

Keys

control key.....	1, 4
delete key.....	3
display keys.....	1, 3

- end call key 1
 - hash key 1, 20
 - key 1 (fast access to answering machine) 33
 - key 1 (fast access to network mailbox) 1
 - on/off key 1
 - recall key 1
 - shortcut 29
 - star key 1
 - talk key 1
- L**
- Language, display 13
 - List
 - answering machine list 31
 - calls list 30
 - handsets 4
 - redial list 29
 - Listening in to a call 36
 - Lock
 - activating/deactivating key lock .. 20
- M**
- Making calls
 - accepting a call 25
 - external 25
 - internal 37
 - Medical equipment 8
 - Menu
 - end tone 41
 - tree 23
 - using 18
 - Message
 - playing back 33
 - Message key
 - opening lists 31
 - Muting the handset 27
- N**
- Name
 - displaying caller's name (CNIP) 25
 - Network mailbox 33
 - entering number 33
 - Network provider preselection
 - automatic 31
 - Number
 - displaying caller's number (CLIP) .. 25
 - entering network mailbox 33
 - saving in the directory 28, 29
- O**
- On/off key 1
 - Operating steps (display) 21
 - Order in directory 28
- P**
- PABX
 - operating base on PABX 44
 - setting dialling mode 44
 - setting recall 44
 - switching to tone dialling 44
 - Package contents 9
 - Paging 36
 - Phone number display, notes 26
 - PIN change
 - system PIN 43
 - Pin connections 50
 - PIN, changing 42
 - Playing back
 - message (ans. mach.) 33
 - Power adapter 8
 - Power consumption 49
 - Power saving adapter plug 34
 - Preselection 31
 - saving, changing entry 32
 - Protecting phone against access 42
- Q**
- Questions and answers 45
- R**
- Radiation
 - reducing 34
 - Range 9
 - Recall key 1
 - Reception booster, see Repeater
 - Redial list 29

Index

Reducing energy consumption.....	34
Reducing radiation.....	34
Registering (handset).....	35
Repeater.....	42
Resetting the system PIN.....	43
Restoring to default settings	
base.....	43
handset.....	42
Ringer	
changing.....	40
setting melody.....	41
setting volume.....	40
S	
Safety precautions.....	8
Searching	
handset.....	36
in directory.....	28
Sending	
directory entry to handset.....	29
Setting.....	35
date.....	14
melody (ringer).....	41
recall.....	44
time.....	14
Setting up	
base.....	9
handset.....	11
Sound of the earpiece.....	40
Speaker mode.....	27
Specifications.....	48
Star key.....	1
System.....	42

T

Talk key.....	1
Telephone care.....	48
Telephone jack	
pin connections.....	50
Tone dialling.....	44

V

Viewing network mailbox message.....	33
Volume	
earpiece.....	39, 40
extra loud.....	40
handset speaker volume.....	39
loudspeaker.....	39, 40
ringer.....	40

W

Writing and editing names.....	50
--------------------------------	----

Issued by

Gigaset Communications GmbH

Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2017

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com