Gigaset

QV1030 Ouick Start Guide

1 Overview



Dual Speaker

2 Turning your Tablet on



Press the Power button and hold for a few seconds.



• Slide the **Unlock** icon to the right.

3 Connecting to a WiFi Network



• Available WiFi network found.



 
• Touch the **All Apps** icon.



• Touch the **Settings** icon.



Touch to select WiFi.



- Select your desired WiFi connection.
- You may be asked to enter the WiFi password.



• Touch to enter the password.



 
WiFi connection has been successfully established.

4 Opening an Application




- ♦ Touch the **All Apps** icon.
- Touch the application you want to open.

5 Transferring Files between Tablet and Computer



Use the included Micro USB cable to connect tablet and computer.
 Tip: Install "Windows Media Player 11" if Windows XP or an earlier version is installed on your computer.

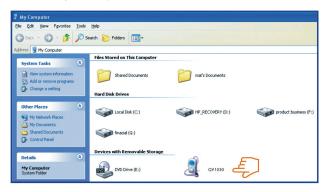

- Select drive "Gigaset QV1030" to see the files stored on the tablet and to transfer files between tablet and computer.
- Disconnect cable when finished.
- For more information, visit: www.gigaset.com/service

6 Turning your Tablet off



 Press and hold the Power button until the dialogue box below appears.



◆ Touch to select **Power off**.



Selecting the Language

To change the language:

Application screen ➤ Settings ➤ Language & input ➤ Language. ➤ Select language.

To reset the system

- Press the Power button for 8 seconds.
- Power on normally.

Online Help

Battery charging

Battery charging in power-off mode is more efficient.

Issued by

Gigaset Communications GmbH Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2013

Subject to availability.
All rights reserved. Rights of modification reserved.
www.gigaset.com

Google, Google Play, Android and other marks are trademarks of Google Inc.



A31008-N1168-R101-4-X143