

SL450HX

Detailed information on the telephone system:

→ User guide of your Gigaset telephone
www.gigaset.com/manuals

→ Documentation relating to your base/router

User guide online on your
smartphone or tablet:

Download the Gigaset Help app





Gigaset HX – the universal handset

With your Gigaset HX handset, you have purchased a high-quality, multifunctional and future-proof device.

You can use your handset with several different DECT bases.

On a Gigaset base

Connect your HX handset to a Gigaset base and use the many features with the quality you would expect from Gigaset.

If your Gigaset base is IP-compatible, you can also make broadband calls using your HX handset with the highest voice quality (HDSP).

In this guide, all functions that are available for your HX handset are detailed/described. The complete functionality with Gigaset bases is described in the guide relevant to your Gigaset system.

All Gigaset user guides can be found at → www.gigaset.com/manuals

or online on your smartphone or tablet:

→ download the Gigaset Help app from  or 

On a DECT/GAP telephone or router from another manufacturer

The handset also functions with DECT/GAP telephones from other manufacturers, of course, as well as DECT routers. Additional information can be found at

→ www.gigaset.com/compatibility.

On DECT routers with CAT-iq 2.0

Your Gigaset HX handset is certified in accordance with the DECT/CAT-iq 2.0 standard. As a result, operation with a DECT router with CAT-iq functionality is possible.

Handset functions on a CAT-iq router (amongst others):

- full access to the central directory on the router as well as the local directory integrated in the handset,
- convenient calling and using of call lists,
- using several lines and call numbers^{*)},
- enjoy broadband calls in guaranteed/certified HD-Voice™ quality.


→ Details can be found in the relevant user guide for your router.

Additional information regarding your HX handset can be found at → www.gigaset.com/hx

Details regarding the functionality of the handset on various bases and routers can be found at → www.gigaset.com/compatibility

*) The relevant scope of the function is dependent on the country, network and router

Overview

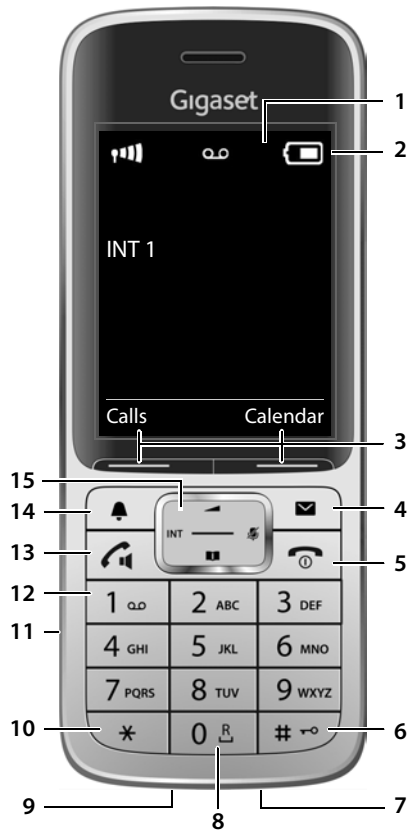

1 Display

2 Status bar

Icons display current settings and operating status of the telephone

3 Display keys

Various functions, depending on the operating situation

4 Message key

Access to the call and message lists;
Flashes: new message or new call

5 End call key, On/off key

End call; cancel function;
Go back one menu level
Return to idle status

- ▶ Press **briefly**
- ▶ Press and **hold**

Switch the handset on/off
(in idle status)

- ▶ Press and **hold**

6 Hash key

Lock/unlock the keypad
(in idle status)

- ▶ Press and **hold**

Toggle between upper/lower
case and digits
(when inputting text)

- ▶ Press **briefly**

Insert a dialling pause

- ▶ Press and **hold**

7 Microphone

8 Recall key

Consultation call (flash)

- ▶ Press and **hold**

9 USB connection socket

For data exchange between the handset and PC

10 Star key

Open special characters table
(when inputting text)

- ▶ Press **briefly**

Switch from pulse dialling to
tone dialling
(for an existing connection)

- ▶ Press **briefly**

11 Headset connection

(2.5 mm jack)

12 Key 1

Select answer machine/
network mailbox

- ▶ Press
and **hold**

13 Talk key / Handsfree key

Accept call; dial number displayed; switch
between receiver and handsfree mode

Open the redial list

- ▶ Press **briefly**

Start dialling

- ▶ Press
and **hold**

14 Profile key

Switch between sound profiles

15 Control key / menu key

Open a menu; navigate in menus and entry
fields; access functions (depending on the
situation)

Contents

Overview	3
Safety precautions	6
Getting started	7
Using the telephone	13
Getting to know your telephone	13
Making calls	17
Local answer machine	20
Local handset directory	21
Message lists	25
Call lists	26
Additional functions	27
Sound profiles	28
Calendar	29
Alarm clock	31
Baby monitor	32
Protection against unwanted calls	34
Resource Directory	36
Bluetooth	37
Additional functions using the PC interface	40
Setting the handset	42
Appendix	51
Customer Service & Assistance	51
Manufacturer's advice	52
Technical data	54
Display icons	55
Index	57



Not all functions described in the user guide are available in all countries or from all network providers.

Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

➔ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

➔ Documentation regarding your base/your router







You can obtain all Gigaset user guides

in PDF format: ➔ www.gigaset.com/manuals

 

 


 
 



 
 
 
 
online: ➔ **Gigaset Help** app for your smartphone or tablet



Illustration in the user guide






	Warnings, which, if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.




 





Keys

 or 	Talk key	 or 	Handsfree key
	End call key	 to 	Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		Profile key
OK, Back, Select, Change, Save, ...		Display keys	











Procedures

Example: Switching Auto answer on/off

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**  = on)

Step	Follow this procedure
▶ 	When in idle status press the centre of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated  / deactivated  .

Safety precautions

	<p>Read the safety precautions and the user guide before use.</p> <p>The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls.</p> <p>Emergency numbers cannot be dialled if the keypad/display lock is activated!</p>
	<p>Use only rechargeable batteries that correspond to the specification (see "Technical data"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.</p>
	<p>The handset must not be operated if the battery cover is open.</p>
	<p>Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).</p>
	<p>The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.</p>
	<p>Use only the power adapter indicated on the device.</p> <p>Whilst charging, the power socket must be easily accessible.</p>
	<p>Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.</p>
	<p>Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.</p>
	<p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.</p> <p>The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p>
	<p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.</p> <p>If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").</p>

Getting started

Contents of the package

- One handset
- One battery cover (rear cover for the handset)
- One battery
- One charging cradle incl. power adapter
- One belt clip
- One user guide



The charging cradle is designed for use in enclosed, dry rooms within a temperature range of +5 °C to +45 °C.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.


Protect your telephone from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **[1]**.
- ▶ Plug the mains unit into your power socket **[2]**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **[3]**.
- ▶ Pull out the plug **[4]**.

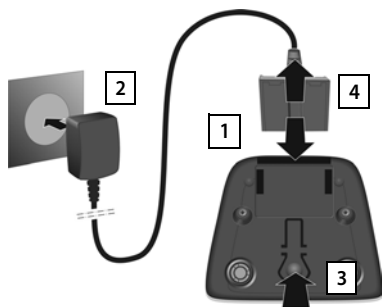


Setting up the handset for use

The display is protected by a plastic film. ▶ Please remove the protective film!


Inserting the battery



Only use a rechargeable battery, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

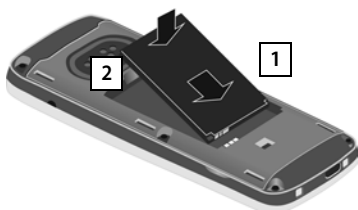


- ▶ Insert battery with the contact side pointing down **1**.
- ▶ Press the battery down until it clicks into place **2**.

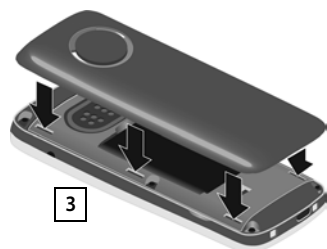


- ▶ Orientate the battery cover with the side tabs fitting into the slots on the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.

Re-opening the battery cover

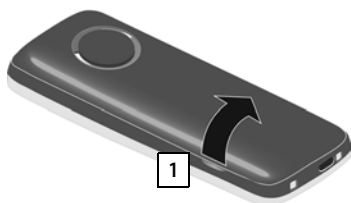

 
- ▶ Remove the belt clip (if attached).
- ▶ Place your fingernail in the notch underneath the battery cover and pull the battery cover up **1**.

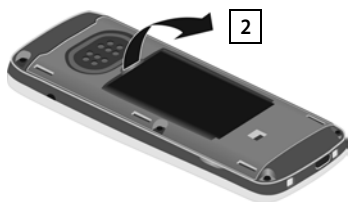


- ▶ To change the battery, place your fingernail in the recess in the housing and pull the battery up **2**.

Charge the battery

- ▶ Charge the battery fully prior to first use in the charging cradle or using a standard USB mains adapter.



The battery is fully charged when the power icon  disappears from the display.




The battery may heat up during charging. This is not dangerous. After a time, the charge capacity of the battery will decrease for technical reasons.

Attaching the belt clip



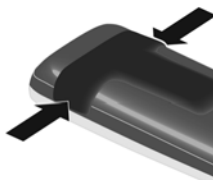

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.



Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ Press the centre of the control key .
- ▶ Press the keys **9** and **5** slowly and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .



Registering the handset (depending on the base)



Registration must be initiated on the base station **and** on the handset.
Both must be carried out **within 60 secs.**

On the base / router

- Gigaset base: ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).
- Other base station/
router: ▶ Information regarding the registration procedure → Documentation regarding your base/your router

On the handset

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ... an available base is sought ▶ ... if required: enter system PIN (default setting on Gigaset bases: **0000**) ▶ **OK**

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If not, repeat the procedure.

A handset can be registered to up to four base stations.

- Change of base: ▶ **Select Base** ▶ **OK** ▶ ... use to select base or **Best Base** ▶ **Select** = selected)
Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.
- De-registering the handset (depending on the base): ▶ **De-register Handset** ▶ **OK** ... the handset being used is selected ▶ ... use to select another handset if required ▶ **OK** ... enter system PIN if required ▶ **OK** ▶ ... Confirm de-registration with **Yes**
If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls, and to enable the alarm to be used.



Date and time are set using the base. The date and time can also be set on an IP-compatible base via a time server on the network.

If the base permits it, you can set the date and time manually using the handset.

- ▶ Press the display key **Time**

or, if the date and time have already been set:

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**



The active cursor position flashes ▶ ... change cursor position with ▶ ... switch between cursor positions with

Enter date:

- ▶ ... using enter the day, month and year in 8-digit format.

Enter time:


- ▶ ... using enter hours and minutes in 4-digit format.

Save settings:

Press the display key **Save**. ... **Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:

- ▶ Press and **hold** the End call key

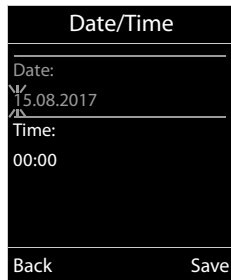

The telephone is now ready for use.


Connecting the headset

- ▶ Connect the headset with 2.5 mm jack to the left side of the handset **1**.

or

- ▶ Connect headset via Bluetooth .

The headset volume corresponds with the setting for the receiver volume.

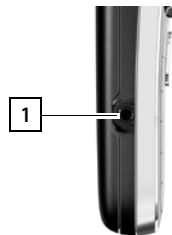


Connecting the USB data cable

For data exchange between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.

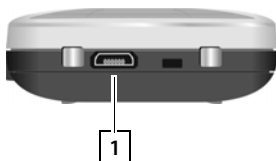

i Connect the handset **directly** to the PC, **not** via a USB hub.



Using the telephone

 
Getting to know your telephone

Switch the handset on/off

- Switch on: ▶ When the handset is switched off, press and **hold** the End call key 
- Switch off: ▶ When the handset is in idle status, press and **hold** the End call key 

Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the following symbol appears 





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Control key




The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g.  for "press right on the control key" or  for "press the centre of the control key".

In idle status

Open the directory

 Press **briefly**

Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

 Press and **hold**

Open the main menu

 or 

Open the list of handsets



In submenus, selection and entry fields

Confirm a function



Getting to know your telephone

During a conversation

Open the directory

Open the list of available online directories (Gigaset GO-Box 100) or central directory of the base (e.g. CAT-iq base)

Mute the microphone

Initiate an internal consultation call


Adjust the loudspeaker volume for receiver and handsfree mode



Press and **hold**

Display keys

The display keys perform a range of functions depending on the operating situation.

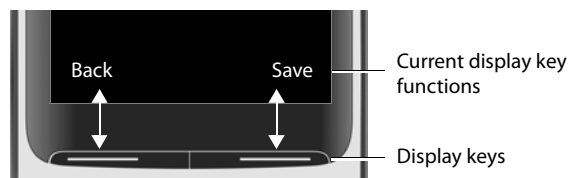

Display key icons → p. 55.

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.



The menu guidance depends on the base. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.

Examples: **Audio Settings** may be in the top-level menu or in the **Settings** submenu, while **Calendar** may be in the **Organizer** menu or the **Additional Features** menu.

Selecting/confirming functions

Confirm selection using

OK or press the centre of the control key

One menu level back using

Back

Change to idle status

Press and **hold**



Switch function on/off using

Change on / off

Activate/deactivate option using


Select activated / not activated

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ **OK**


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

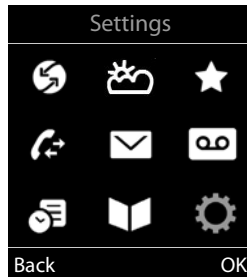

Submenus


The functions in the submenu are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ Press the End call key  **briefly**

Returning to idle status

▶ Press and **hold** the End call key 

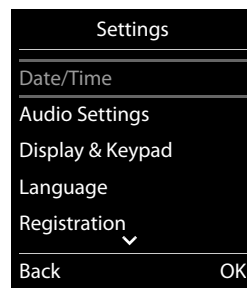

Example





If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Entering text

 
 
 
Input position

 


- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.


Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  **C** Press **briefly**
- Delete **words** to the left of the cursor: ▶  **C** Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.


 
 


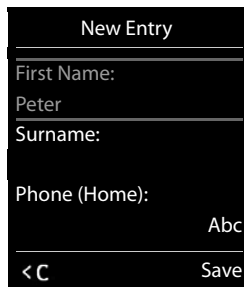- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key 
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the character set of the handset.




Making calls

Making a call

- ▶ ... use  to enter the number ▶ **briefly** press the Talk key 
- or
- ▶ press and **hold** the Talk key  ▶ ... use  to enter the number
- Cancel dialling: ▶ Press the End call key 

On a Gigaset GO-Box 100 or another IP-compatible Gigaset base


 
The connection is selected via the send connection (line) set for the handset. To use another line:

- ▶ press and **hold** the Talk key  ▶ ... use  to select the line ▶ **Dial** ▶ ... use  to enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Dialling a number from the local directory

- ▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:


- ▶ ... use  to select the number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from a public/central directory



 
Depending on the base to which the handset is connected to, you can dial from a public directory, the Gigaset.net directory (e.g. Gigaset GO-Box 100) or a central directory on a CAT-ig base.

- ▶ press and **hold** 

Further information → in the detailed user guide for your telephone

Dialling from the redial list

 









The redial list contains the 20 numbers last dialled with the handset.

- ▶ **Briefly** press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶ ... use  to browse numbers if necessary ▶ ... when the required number is reached press the Talk key 

Managing entries in the redial list






- ▶ Briefly press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶
Options ... possible options:
 - Copy an entry to the directory: ▶  **Copy to Directory** ▶ **OK**
 - Copy the number to the display:
 - ▶  **Display number** ▶ **OK** ▶ ... use  to edit or add numbers if necessary ... use  to save as a new entry in the directory
 - Delete the selected entry: ▶  **Delete entry** ▶ **OK**
 - Delete all entries: ▶  **Delete List** ▶ **OK**
 - Set automatic redial:
 - ▶  **Automatic Redial** ... the selected number is automatically dialled at fixed intervals (at least every 20 secs). The handsfree key flashes, "open listening" is activated.
 - The participant answers: ▶ Press the Talk key  ... the function is terminated
 - The participant does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.

Dialling from the call list

The call lists (→ p. 25) contain the most recent accepted, outgoing and missed calls.


- ▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select a list ▶ **OK** ▶ ... use  to select an entry ▶
Press the Talk key 

Example

 
All calls	
  Frank	14.02.17, 15:40
 089563795	13.02.17, 15:32
  Susan Black	11.02.17, 13:20
View	Options




The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key . Accepting a call:


- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶ 
- Accept a call on the headset

Switch off ringtone: ▶ **Silence** ... the call can be accepted for as long as it is shown on the display

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine :

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ ... Place the handset in the charging cradle ▶ ... hold  for a further 2 seconds

Call volume

Applies to the current mode (handsfree, receiver or headset):

- ▶ Press  ▶ ... use  to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone







When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 



Local answer machine

(only on Gigaset bases with local answer machine)







Switching the answer machine on/off:

- ▶  ▶ ... use  to select  **Answer Machine** ▶ **OK** ▶  **Activation** ▶ **OK** ▶ ... use  to select an answer machine (if there are several) ▶ **Change** ▶ ... use  to select **On or Off** ▶ **Save**


Playing back messages:

- ▶ Press the Message key  ▶ ... use  to select an answer machine (if there are messages for several answer machines) ▶ **OK**

Recording a personal announcement/advisory message:

- ▶  ▶ ... use  to select  **Answer Machine** ▶ **OK** ▶  **Announcements** ▶ **OK** ▶ ... use  to select **Record Announcem.** or **Rec. Advisory Msg.** ▶ **OK** ▶ ... use  to select an answer machine (if there are several) ▶ **OK** ▶ **OK** ▶ ... record an announcement (at least 3 seconds) ... possible options

Complete the recording and save:

- ▶ **End** ... the announcement is played back for you to check
- Cancel the recording: ▶ Press the End call key  or **Back**
- Resume the recording: ▶ **OK**
- Repeat the recording: ▶ **New**

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 23).



Information about online directories (e.g. on a Gigaset GO-Box 100) or central directories on CAT-iq bases → user guide of the base.

Opening the directory

- ▶ Briefly press in idle status

Directory entries

Number of entries: up to 500

Information: First name and surname, up to three telephone numbers, e-mail address, anniversary with alert, VIP ringtone with VIP icon, CLIP-picture

Length of the entries: Numbers: max. 32 digits
 First name, surname: max. 16 characters
 E-mail address: max. 64 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ ... use to switch between the entry fields and enter data for an entry:.

Names/numbers:

- ▶ ... use to enter first names and/or surnames, at least one number (personal, office, or mobile) and an e-mail address, if applicable

Anniversary:

- ▶ ... use to activate/deactivate **Anniversary** ▶ ... use to enter date and time ▶ ... use to select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP) :

- ▶ ... use to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the icon.

Save entry: ▶ Save

Example

The screenshot shows a 'New Entry' form with the following fields and content:

- First Name:** Robert
- Surname:** (empty field)
- Phone (Home):** (empty field with a dropdown arrow)
- At the bottom right, there is a dropdown menu showing 'Abc' and a 'Save' button.
- At the bottom left, there is a '< C' button.



The entry is only valid if it contains at least one number.

Searching for/selecting a directory entry

▶ ▶ ... use to browse searched names

or

▶ ▶ ... use to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use to continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and hold

Displaying/changing an entry

▶ ▶ ... use to select entry ▶ **View** ▶ ... use to select the field to be changed ▶ **Edit**

or

▶ ▶ ... use to select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**

Deleting entries

Delete the **selected** entry: ▶ ▶ ... use to select an entry ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete **all** entries: ▶ ▶ **Options** ▶ **Delete all** ▶ **OK** ▶ **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶ ▶ **Options** ▶ **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶ ▶ **Options** ▶ **Available Memory** ▶ **OK**

Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or **Options** ▶  **Copy to Directory** ▶ **OK** ... possible options:

Create a new entry:

▶ **<New Entry>** ▶ **OK** ▶ ... use  to select number type ▶ **OK** ▶ complete entry ▶ **Save**

Add number to an existing entry:

▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select number type ▶ **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with **Yes/No** ▶ **Save**

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.

The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.






The recipient handset does not support vCards:

A separate entry is created and sent for each number.

The sending handset does not support vCards:

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

▶  ▶ ... use  to select the desired entry ▶ **Options** ▶  **Copy Entry** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**

Copying the entire directory

▶  ▶ Options ▶  Copy All ▶ OK ▶  to Internal ▶ OK ▶ ... use  to select the receiving handset ▶ OK ... the entries are copied one after the other



Information about copying directory entries using Bluetooth can be found in the detailed user guide for the Gigaset SL450 at → www.gigaset.com/manuals

Synchronising the phonebook with the PC address book (Gigaset QuickSync)




The Gigaset QuickSync programme has been installed on the computer.
The handset is connected via Bluetooth or via a USB data cable to the computer.

Free download and further information at → www.gigaset.com/quicksync

Message lists

Notifications about missed calls, messages on the answer machine/network mailbox and missed alarms are saved in the messages list.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Activation from the handset is only possible on Gigaset bases. Use the web interface as required for CAT-iq routers. Information → user guide of the base/router.

Icons for message types and the number of new messages are shown on the idle display.


Notification for the following message types is available:


 on the answer machine/network mailbox

 in the missed calls list



 in the missed alarms list

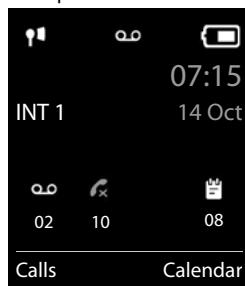Example




 The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed
An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.
An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.
- ▶ ... use  to select a list ▶ **OK** ... the calls or messages are listed
Network mailbox: The network mailbox number is dialled.

Example

Messages & Calls	
Missed Alarms:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Answer Mach.:	
Back	OK

 The message list contains an entry for every answer machine assigned to the handset, e.g. for the local answer machine on a Gigaset base / CAT-iq router or for a network mailbox.

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



The base/router to which the handset is registered provides information on call numbers.

Detailed information can be found at → www.gigaset.com/compatibility.

List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
 - Missed calls,
 - Accepted calls,
 - Outgoing calls,
 - Call on the answer machine
- Caller's number. If the number is stored in the directory, the name and number type (Phone (Home), Phone (Office), Phone (Mobile)) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls	
Frank	
Today, 15:40	[3]
089563795	
13.05.17, 18:32	
Susan Black	
12.05.17, 13:12	
View	Options

Opening the call list

Via the display key: ▶ **Calls** ▶ ... use to select the list ▶ **OK**

Via the menu: ▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select the list ▶ **OK**

Via the Message key (missed calls):

▶ Press the Message key ▶ **Missed Calls:** ▶ **OK**

Calling back a caller from the call list

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select list ▶ **OK** ▶ ... use to select entry ▶ Press the Talk key

Additional options

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ ... use to select list ▶ **OK** ... possible options:

View an entry: ▶ ... use to select entry ▶ **View**

Copy the number to the directory:

▶ ... use to select entry ▶ **Options** ▶ **Copy to Directory**

Delete an entry: ▶ ... use to select entry ▶ **Options** ▶ **Delete entry** ▶ **OK**

Delete list: ▶ **Options** ▶ **Delete List** ▶ **OK** ▶ **Yes**

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The following description applies to a Gigaset GO-Box 100. The procedure required for your telephone may differ from the procedures described here.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

→ Documentation regarding your base/your router

You can obtain all Gigaset user guides


in PDF format: → www.gigaset.com/manuals

online: → **Gigaset Help** app for your smartphone or tablet




Sound profiles

The telephone has 3 sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**

- Use  to switch between the profiles ... the profile is changed straight away without a prompt

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
Advisory tones	Key click	Yes	No	Yes
	Confirmation tone	Yes	No	Yes
	Battery tone	Yes	Yes	Yes

Activate alert tone for an incoming call for **Profile Silent**: ► after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



Changes to the settings listed in the table:

- apply in the **Loud** and **Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

The set profile remains set when switching the phone off and back on.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

September 2017						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
Back						OK

Saving appointments to the calendar



- ▶ ▶ ... use to select **Organizer** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select desired day ▶ OK ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Enter date: ▶ **Date** ... the selected day has been pre-set ▶ ... use to enter new date
 - Enter time: ▶ **Time** ▶ ... use to enter hours and minutes of the appointment
 - Set name: ▶ **Text** ▶ ... use to enter a description of the appointment (e.g. evening meal, meeting)
 - Set alarm tone: ▶ **Signal** ▶ ... use to select the melody of the reminder alarm or deactivate the acoustic signal
 - Enter information for the appointment:
 - ▶ ... use to successively select **Date**, **Time**, **Text** and **Signal** ▶ ... use or to set the relevant value ▶ **Save**
 - Save appointment: ▶ **Save**

If an appointment has already been entered: ▶ **<New Entry>** ▶ OK ▶ ... Then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

- Acknowledge and stop the reminder: ▶ Press the display key **OFF**




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

▶ Press the Message key  ▶  **Missed Alarms:** ▶ OK ▶ ... use  to browse through the list of any appointments







or

▶  ▶ ... use  to select  **Organizer** ▶ OK ▶  **Missed Alarms** ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

- Delete an appointment/anniversary: ▶ **Delete**

Displaying/changing/deleting stored appointments

▶  ▶ ... use  to select  **Organizer** ▶ OK ▶  **Calendar** ▶ OK ▶ ... use  to select day ▶ OK ... the appointment list is displayed ▶ ... use  to select date ... possible options:

Display appointment details:

▶ **View ...** The appointment settings are displayed

Change appointment: ▶ **View** ▶ **Edit**


or ▶ **Options** ▶  **Edit entry** ▶ OK

Activate/deactivate appointment:

▶ **Options** ▶  **Activate/Deactivate** ▶ OK

Delete appointment: ▶ **Options** ▶  **Delete entry** ▶ OK

Delete all appointments for a day:

▶ **Options** ▶  **Delete all Appoints.** ▶ OK ▶ **Yes**

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Setting the wake-up time:
 - ▶ **Time** ▶ ... use to enter hours and minutes
 - Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
 - Set the volume: ▶ **Volume** ▶ ... use to set volume in 5 levels or select **crescendo** (increasing volume)
 - Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
 - Enter alarm data: ▶ ... use to successively select **Time**, **Occurrence**, **Volume** and **Melody** ▶ ... use or to set the relevant value ▶ **Save**
 - Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off /repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the ability to press the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Baby Monitor** ▶ **OK** ... then

Switch on/off:

- ▶ **Activation:** ... use to select **On** or **Off**

Enter destination:

- ▶ **Send alarm to** ▶ ... use to select **External** or **Internal**

External: ▶ **Number** ▶ ... use to select number or select a number from the directory: ▶

Internal: ▶ **Handset** ▶ **Change** ▶ ... use to select the handset ▶ **OK**

Activate/deactivate two-way talk:


- ▶ **Two Way Talk** ▶ ... use to select **On** or **Off**

Set microphone sensitivity:

- ▶ **Sensitivity** ▶ ... use to select **High** or **Low**

Save settings: ▶ **Save**


Baby Monitor activated

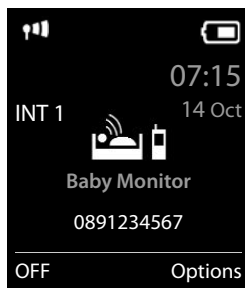

The destination number is displayed in idle display when the baby monitor is activated.

Deactivate baby monitor / cancel alarm

Deactivate the baby monitor: ▶ In idle status press the display key **OFF**

 

Cancel the alarm: ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

 
▶ Accept alarm call ▶ Press keys   ... the call is ended

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.

Reactivate baby monitor with the same number: ▶ ... **Activation** to switch back on (→ p. 32) ▶ **Save**

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.


▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Time Control** ▶ OK ▶ ... then

Switch on/off: ▶ use to select **On** or **Off**

Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format

Save: ▶ **Save**

Example

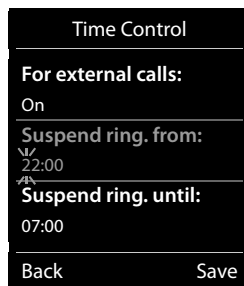

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

For one handset

▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ **Edit** (= on) ... the call is only signalled on the display

For all handsets

(only on some Gigaset bases)

▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Anonymous Calls** ▶ **Edit** (= on) ▶ ... use to select **Protection Mode**:

No Protection Anonymous calls are indicated in the same way as identified numbers

Silent Call The telephone will not ring and the incoming call will only appear in the display.

Block Call The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.

Save settings: ▶ **Save**

Black list

(only on some Gigaset bases)

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

Displaying/editing the black list

▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Black List** ▶ **Edit** ▶ **Blocked Numbers** ▶ OK ... the list of blocked numbers is displayed ... possible options:

Create an entry: ▶ **New** ▶ ... use to enter a number ▶ **Save**

Delete an entry: ▶ ... use to select an entry ▶ **Delete** ... the entry is deleted

Transferring a number from a call list to the black list

▶ ▶ ... use to select **Call Lists** ▶ OK ▶ ... use to select **Accepted calls/ Missed calls** ▶ OK ▶ ... use to select entry ▶ **Options** ▶ **Copy to Blacklist** ▶ OK

Setting the protection mode

▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Black List** ▶ **Edit** ▶ **Protection Mode** ▶ OK ▶ ... use to select desired protection:

No Protection All calls are indicated, including from callers whose numbers are on the black list.

Silent Call The telephone will not ring and the incoming call will only appear in the display.

Block Call The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.

Save settings: ▶ **Save**

Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Silent Charging** ▶ **Change** (= ringtone is switched off when in charging cradle)

Resource Directory

Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ Gigaset QuickSync).

Media types:

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 240 x 172 pixels 240 x 320 pixels

If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Manage CLIP pictures/sounds

▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Resource Directory** ▶ **OK**
 ... possible options:

View CLIP-picture: ▶ **Caller Pictures** ▶ **OK** ▶ ... use to select picture ▶ **View**
 ... the selected picture is displayed

Play sound: ▶ **Sounds** ▶ **OK** ▶ ... use to select sound ... the selected sound is played

Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ ... use to select volume ▶ **Save**

Rename picture/sound:

▶ Select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/image ▶ **Options** ▶ **Rename** ▶ ... use to delete name, use to enter new name ▶ **Save** ... the entry is saved with the new name

Delete picture/sound: ▶ Select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/picture ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Resource Directory** ▶ **OK** ▶ **Capacity** ▶ **OK** ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. for connecting a Bluetooth headset.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset



The headset features the **Headset** or **Handsfree Profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 5 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.

In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

▶ ▶ ... use to select ▶ OK ▶ Activation ▶ Change = activated

If the local area code is still not saved: ▶ ... use to enter local area code ▶ OK

When in idle status, the activated Bluetooth mode is indicated on the handset by the icon.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select ▶ **OK** ▶ **Search for Headset / Search Data Device** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:
 - Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices
 - Display information about a device:
 - ▶ ... use to select a device, if applicable ▶ **View** ... the device name and device address are displayed
 - Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**
 - Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Open the list

- ▶ ▶ ... use to select ▶ **OK** ▶ **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device



Bluetooth headset



Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry

- ▶ ▶ ... use to select ▶ **OK** ▶ **Known Devices** ▶ **OK** ▶ ... use to select entry ... possible options:
 - View an entry: ▶ **View** ... the device name and device address are displayed ▶ Press **OK** to go back
 - De-register a Bluetooth device:
 - ▶ **Options** ▶ **Delete entry** ▶ **OK**
 - Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use to edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, a prompt will appear asking you to enter the PIN of the Bluetooth device (Bonding).

Reject: ▶ **Briefly** press the End call key .


Accept: ▶ ... use  to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... Wait for PIN confirmation ... then

Add the device to the list of known devices: ▶ **Yes**

Use the device temporarily: ▶ **No** ... the Bluetooth connection can be used, as long as the device is located within transmission range or until it is switched off

Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

▶  ▶ ... use  to select ▶ **OK** ▶  **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use  to change the name ▶ **Save**

Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.

Free to download at → www.gigaset.com/quicksync

QuickSync functions:

- Sync the handset's directory with Microsoft® Outlook®
 - Upload CLIP-pictures (.bmp) from the computer to the handset
 - Upload pictures (.bmp) as screensavers from the computer to the handset
 - Upload sounds (ringtone melodies) from the computer to the handset
 - Update firmware
 - Cloud synchronisation with Google™
- Connecting the handset to the computer via Bluetooth or via a USB data cable..



Connect the handset **directly** to the PC, **not** via a USB hub.

Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- Launch the **Gigaset QuickSync** program on the computer.



The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Carrying out a firmware update


- ▶ Connect the telephone and the PC using a **USB data cable** ▶ Launch **Gigaset QuickSync** ▶ Establish connection to the handset
- ▶ Start firmware update in **Gigaset QuickSync** ... Information about this can be found in **Gigaset QuickSync** help feature

The update process may take up to 10 minutes (not including download time).

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.

The display on your telephone is switched off and the Message key  and the Talk key  will flash.

Once the update is complete, your telephone will automatically restart.



 
 


 The firmware can also be updated directly via the DECT radio link if the base/router supports this (→ **Handset Update**).

Procedure in the event of an error


If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery ▶ Replace the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery
- ▶ Press and hold keys  and  at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys  and  ... the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above



 Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.

Setting the handset

Changing the language

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Language** ▶ OK ▶ ... use to select language ▶ **Select** (= selected)

If the handset has been set to an incomprehensible language:

- ▶ ▶ Press the keys **9** **5** **slowly** one after the other ▶ ... use to select the correct language ▶ press the right display key

Display and keypad

Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Screensaver** ▶ **Edit** (= on) ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Select screensaver: ▶ **Selection** ▶ ... use to select a screensaver (**Digital Clock** / **Analog Clock** / **Info Services** / <Pictures> / **Slideshow**)
 - View screensaver: ▶ **View**
 - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.


- All pictures from the **Screensaver** folder of the **Resource Directory** are available for selection.

End screensaver

- ▶ Press the End call key **briefly** ... the display changes to idle status

Notes on displaying Info Services

(only on a Gigaset GO-Box 100 or other Gigaset-IP base)

 **Info Services** are activated via the web configurator.
The telephone is connected to the Internet.

- The type of info service available to your phone is set on the Internet on the Gigaset.net server.
If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

(only on a Gigaset GO-Box 100 or other Gigaset-IP base)






 
The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display** ▶ OK ▶  **Info Ticker** ▶ **Edit**  = on)

The text appears as soon as the telephone changes to idle status. If a message is shown in idle status, the info text is not displayed.








Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Large Font** ▶ **Change**  = on)

Colour scheme









You can choose from a range of colour combinations for the display.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Colour Schemes** ▶ OK ▶ ... use  to select the desired colour scheme ▶ **Select**  = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Display Backlight** ▶ OK ... then
- Backlight when in the charging cradle:
 - ▶ **In Charger:** ... use  to select **On** or **Off**
- Backlight when not in the charging cradle:
 - ▶  **Out of Charger** ▶ ... use  to select **On** or **Off**
- Save selection:
 - ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.






Keypad illumination

The keypad has 5 levels of brightness to choose from.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Key Illumination** ▶ OK ▶ ... use  to select **Brightness (1 - 5)** ▶ **Save**





Activating/deactivating automatic keypad lock


Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Auto Keypadlock** ▶ **Change** = on)

Activating/deactivating Auto Answer


When set to Auto Answer, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** = on)



Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.


Changing the earpiece and handsfree volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.


-  Changes are only saved permanently in **Profile Personal**.

During a conversation

- ▶  **Handset Volume** ▶ ... use  to select volume ▶ **Save** ... the setting is saved

-  Without saving, the setting is automatically saved after around 3 seconds.

In idle status

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then









For the earpiece: ▶ **Earpiece:** ... use  to set the volume

For the speaker: ▶  **Speaker** ▶ ... use  to set the volume

Save settings: ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.








- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Acoustic Profiles** ▶  **Earpiece Profiles / Handsfree Profiles** ▶ **OK** ▶ ... use  to select profile ▶ **Select**  = selected)

Earpiece Profiles: High or Low (default setting)


Handsfree Profiles: Profile 1 (default setting) ... Profile 4

Ringtones

Ringtone volume

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Ringtones (Handset)** ▶ **OK** ▶ **Volume** ▶ **OK** ▶ ... use  to select **For internal calls and alarms** or **External Calls** ▶ ... use  to set volume in 5 levels or in crescendo mode (increasing volume) ▶ **Save**



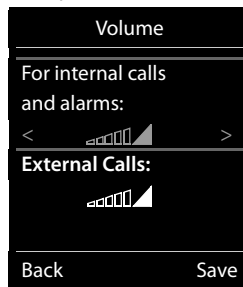


 

Example



Changes are only saved permanently in **Profile Personal**.



Ringtone melody

Set a variety of ringtones for internal and external calls for every available send/receive connection of the telephone (**Landline**, **IP1**) or set the same ringtone for **All calls**.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Ringtones (Handset)** ▶ **OK** ▶  **Melodies** ▶ **OK** ▶ ... use  to select the connection ▶ ... use  to select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off

Switching the ringtone off permanently


- ▶ Use the  key to set **Profile Silent** ... the following icon appears in the status bar 

Setting the handset

Switching the ringtone on permanently



- ▶ Use the  key to set **Profile Loud** or **Profile Personal**


Switching the ringtone off for the current call

- ▶ **Silence** or press the End call key 

Switching the alert tone (beep) on/off







Switch on an alert tone (beep) instead of the ringtone:

- ▶ ... Press the Profile key  to select **Profile Silent** ▶ press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ ... Press the Profile key  to change profile






Switching the silent alert on/off

Incoming calls and other messages are indicated by a silent alert.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Silent Alert** ▶ Change  (= on)

Switching advisory tones on/off



The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then



Tone when keys are pressed:

- ▶ **Key Tones:** ... use  to select **On** or **Off**



Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶ ... use  to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶ ... use  to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:** ... use  to select **On** or **Off**

Save settings:

- ▶ **Save**



There is no battery warning when the baby monitor is switched on.

Fast access to numbers and functions

Number keys: It is possible to assign a **number from the directory** to the keys  to .

Display keys: The left and right display keys have a **function** preset by default, but the keys can be re-assigned.

You can then dial the number or start the function by simply pressing a key.

Assigning a number to digit keys (quick dial)





A number has not been assigned to the digit key.

▶ Press and **hold** the digit key

or

▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

▶ Press and **hold** the digit key ... the number is dialled immediately

or

▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

Changing the digit key assignment

▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:


Change the assignment:


▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**

Delete the assignment:

▶ **Clear Key**

Assigning display keys, changing assignments

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... use  to select function ▶ **OK** ... possible options:

Quick Dial	Assign a number from the directory to the display key
Baby Monitor	Set and activate/deactivate baby monitor
Alarm Clock	Set and activate/deactivate the alarm clock
Calendar	Open calendar
One Touch Call	Set up one touch call
Bluetooth	Open Bluetooth menu
Redial	Show redial list
More Functions...	▶ OK ▶ ... use  to select other function
Call Lists	Show call list
Call Divert	Activate/deactivate Call Divert











The availability of options depends on the base.

Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Changing the name of a connection (line)










(only on a CAT-iq router)

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ 
Connections ▶ **OK** ... all available connections (lines) are displayed ▶ ... use  to select connection ▶ **OK** ▶  **Connection Name** ▶ **OK** ▶ ... use  to change the name of the connection ▶ **Save**

Assigning handsets to a connection (line)

(only on a CAT-iq router)








Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ 
Connections ▶ **OK** ▶ ... use  to select connection ▶ **OK** ▶  **Assigned Handsets** ... all registered handsets are displayed ▶ ... use  to select handset ▶
Change  = handset is assigned)

Permit/prevent multiple calls

(only on a CAT-iq router)








If the function is activated, multiple calls can be made in parallel.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Multiple Calls** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Multiple Calls** ▶ **Change** = on)

Permit/prevent internal listening in


(only on a CAT-iq router)

If the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Listening In** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Listening In** ▶ OK ▶ **Change** = on)

Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).






-  The base/router to which the handset is registered must also support this function (→ www.gigaset.com/compatibility)

If your base/router does not support this function, you can also update the firmware via a USB cable and **Gigaset Quick Sync**.

If new firmware is available for the handset a message to this effect will be displayed.

- ▶ Start the firmware update with **Yes**.

Start the firmware update manually:






- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Update** ▶ OK ▶ **Update** ▶ OK ▶ OK ... if there is new firmware, the update will start



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Resetting the handset to the default settings

Reset any individual settings and changes that you have made.

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset**
Reset ▶ OK ▶ **Yes** ... the handset's settings are reset

The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Appendix

Customer Service & Assistance

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... online:

via our contact form on the customer service page

... by telephone:

Service Greece +30 2111 98 1778

(0.026 € per minute from the Greek phone network. For calls from mobile phone networks, other prices may apply.)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Guarantee Certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximium Objekt 2 / 3.Stock, Modecenterstraße 17, 1110 Vienna, Austria.

Manufacturer's advice

- Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.)
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset SL450HX is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Environment



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
 - 2 **Remove the batteries and leave the battery compartment open.**
 - 3 Allow the liquid to drain from the device.
 - 4 Pat all parts dry.
 - 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
 - 6 **Do not switch on the device again until it is completely dry.**
- When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	lithium ion (Li-Ion)
Voltage:	3.7 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	200/160 *
Talktime (hours)	12
Operating time with 1.5 hours of calls per day (hours)	110/85 *
Charging time in charging cradle (hours)	2.5

* No Radiation deactivated/activated, without display backlight in idle status

Power consumption of the handset in the charging cradle

When charging:	approx. 4.5 W
To maintain the charge status:	approx. 0.3 W








General specifications

DECT standard	Supported
CAT-iq standard	Certified in accordance with standard CAT-iq 2.0 with HD Voice www.dect.org/cat-iq-certification.aspx
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Bluetooth: Radio frequency range	2402-2480 MHz
Bluetooth: Transmission power	4 mW pulse power


 
Display icons







The following icons are displayed depending on the settings and the operating status of your telephone.



 
Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100%
	white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator flashes: Answer machine is recording a message or is being operated by another internal participant
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated

Display key icons

 

 
 

Icon	Meaning
	Last number redial
	Delete text






Icon	Meaning
	Keypad lock activated
	Battery charge status: White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%

Icon	Meaning
	Open the directory
	Copy number to the directory
	Divert a call to answer machine




Display icons




Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Index

- A**
- Advisory tones 46, 47
 - Alarm 31
 - Alarm clock 31
 - switch on/off 31
 - Alert tone (beep) 28, 46
 - Anniversary, see Appointment
 - Answer machine 20
 - calling back a caller 26
 - Appointment
 - display missed 30
 - missed 30
 - notification 29
 - setting 29
 - Assigning number key 47
 - Authorisation 52
 - Automatic
 - answer 44
 - redial 18
- B**
- Baby monitor 32
 - activation 32
 - deactivation 33
 - Battery
 - charging 9
 - charging status 55
 - inserting 8
 - Beep (alert tone) 28, 46
 - Best base station 10
 - Black list 35
 - Bluetooth 37
 - activate 37
 - changing the device name 39
 - de-registering devices 38
 - list of known devices 38
 - registering devices 38
 - Broken display 6
- C**
- Calendar 29
 - Call
 - external 17
 - Call block 35
 - Call list
 - copying a number to the directory 26
 - delete 26
 - delete an entry 26
 - dialling 18
 - entry 26
 - opening 26
 - Call lists 26
 - Call protection 34
 - Call, anonymous
 - protection from 34
- Calling**
- external 17
 - Cancel the alarm (baby monitor) 33
 - Care 53
 - Care of the device 53
 - Changing
 - display language 42
 - earpiece volume 44
 - handsfree volume 44
 - Changing the device name (Bluetooth) 39
 - Charge status of the batteries 55
 - Charging cradle (handset)
 - connecting 7
 - Charging time of handset 54
 - CLIP-picture
 - view in Resource Directory 36
 - Colour scheme 43
 - Connecting the USB data cable 12
 - Connection
 - assigning handset 48
 - changing name 48
 - Contact with liquid 53
 - Contents of the package 7
 - Control key 3, 13
 - Correcting incorrect entries 16
 - Customer Care 51
 - Customer Service & Assistance 51
- D**
- De-registering devices (Bluetooth) 38
 - Dialling
 - from the call list 18
 - from the directory 17
 - from the redial list 17
 - using quick dial 47
 - Directory 21
 - copying numbers 23
 - dialling numbers 17
 - entry 21
 - memory 22
 - opening 21
 - order of entries 22
 - saving an entry 21
 - searching 22
 - selecting an entry 22
 - sending entry/list to handset 23
 - sending to handset 23
 - Display
 - backlight 43
 - broken 6
 - changing display language 42
 - colour scheme 43
 - directory memory 22
 - missed appointment/anniversary 30
 - network mailbox message 25
 - screensaver 42
 - setting 42

Index

- Display icons 55
Display keys 3, 14
 assigning 47
 icons 55
Disposal 53
-
- E**
Earpiece profile 45
Earpiece volume 19
Emergency numbers
 not possible 6
End call key 3, 17
Entering numbers 16
Entering special characters 16
Entering text 16
Entering umlauts 16
Environment 53
Exclusion of liability 52
-
- F**
Firmware update 49
Firmware updates 41
-
- G**
Getting started 7
Gigaset QuickSync 24
Guarantee Certificate 51
-
- H**
Handset
 advisory tones 47
 assigning connection 48
 automatic keypad lock 44
 changing the settings 42
 colour scheme 43
 connecting the charging cradle 7
 display backlight 43
 display language 42
 earpiece volume 19, 44
 handsfree volume 44
 idle status 15
 keypad illumination 44
 large font 43
 muting 19
 overview 3
 registering 10
 restoring to default setting 47
 set up 8
 speaker volume 19
 switch on/off 13
 update 49
 use as a baby monitor 32
Handsfree key 19
Handsfree mode 19
Handsfree profile 45
Hash key 3
Headset (Bluetooth) 37
Headset connection 3, 9
Headset socket 11
Hearing aids 6
-
- I**
Icons
 alarm clock 31
 displaying new messages 25
 indications 56
 on display keys 55
 status bar 55
Idle status
 returning to 15
Illumination, keypad 44
Indications, icons 56
Internal listening in 49
-
- K**
Key 1 (fast access) 3
Key, assigning 47
Keypad illumination 44
Keypad lock, automatic 44
Keys
 control key 3, 13
 display keys 3, 14
 end call key 3, 17
 fast access 3
 handsfree 19
 hash key 3
 menu 13
 message key 3
 on/off key 3
 profile key 3, 28
 recall key 3
 star key 3
 talk key 3
-
- L**
Language
 display 9
Language, display 42
Large font 43
Line 48
Liquid 53
List
 known devices (Bluetooth) 38
Lock/unlock the keypad 13
Lower/upper case 16
-
- M**
Making calls
 external 17
Manufacturer's advice 52
Medical equipment 6
Melody
 ringtone for internal/external calls 45
Memory in the directory 22
Memory, resource directory 36
Menu key 13

Message key	3
Message lists	25
Microphone	
switch on/off	19
Missed anniversaries/appointments	30
Multiple calls	49
Muting the handset	19

N

Number	
copying to the directory	23
saving in the directory	21

O

On/off key	3
Operating time of handset	54
Overview	
handset	3

P

PC Interface	40
Picture	
as CLIP image	36
as screensaver	36
delete	36
formats	36
rename	36
Power adapter	6
Profile key	3, 28
Profiles	28
Protection from calls	
anonymous	34
black list	35
switch off ringtone when in charging	
cradle	35
time control	34

Q

Quick dial	17
QuickSync	24, 40

R

Recall key	3
Redial list	17
Registering (handset)	10
Registering device (Bluetooth)	38
Resetting the handset to the default	
settings	50
Resource Directory	36, 47
memory	36
view CLIP picture	36
Ring delay	44
Ringtone	45
changing	45
melody for internal/external calls	45
switch off when in charging cradle	35
time control	34
volume	45

S

Safety precautions	6
Screensaver	42
Searching in directory	22
Sending	
entire directory to handset	23
Setting the date	11
Setting the time	11
Setting up	
handset	8
Show new messages	25
Signal strength	55
Signal tone, see Advisory tones	
Silent alert	46
Snooze mode (alarm)	31
Sound	
delete	36
formats	36
playback	36
rename	36
Sound profiles	28
Sounds for ringtones	36
Speaker	19
Speaker volume	19
Star key	3
Status bar	3
icons	55
SUOTA	49
Symbols, see Icons	55

T

Talk key	3
Technical data	54
Telephone	
operating	13
Time control for external calls	34

U

Update	41
Upper/lower case	16
USB connection socket	3

V

Viewing network mailbox message	25
VIP group, classify directory entry	21
VIP ringtone	21
Volume	
earpiece	44
handset handsfree volume	44
handset speaker/earpiece volume	19
speaker	44

W

Warning tone, see Advisory tones	
----------------------------------	--

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2017

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com

Apple, the Apple logo and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Google, Android, Google Play and other brands are trademarks of Google Inc.