

How can I delete messages?

You can either delete individual messages or all old messages.

Deleting individual messages


While playing back the message to be deleted:

1. possibility via the keypad




Press display key  (◀C).

2. possibility on the basestation

To delete the current message, press the delete-key  on top of the base station.

Deleting all old messages




1. Open the menu, press display key  (MENU).

The Playback stopps.



2. Select "Delete all" with display key  or  and confirm with display key  (OK).

3. Confirm prompt, press display key  (OK).

