Gigaset

EN Dear Customer,

Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.

We hope you enjoy your Gigaset.

DE Sehr geehrte Kundin, sehr geehrter Kunde,

die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.

Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.

FR Chère Cliente, Cher Client,

la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.

Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.

IT Gentile cliente,

la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.

Le auguriamo tanta soddisfazione con il vostro Gigaset.

NL Geachte klant,

Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.

Wij wensen u veel plezier met uw Gigaset**.**

ES Estimado cliente,

la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.

Le deseamos que disfrute con su Gigaset.

PT SCaros clientes,

Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.

Desejamos que tenham bons momentos com o seu Gigaset.

DA Kære Kunde,

Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.

Vi håber, du får meget glæde af din Gigaset.

FI Arvoisa asiakkaamme,

Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.

Toivotamme Teille paljon iloa Gigaset-laitteestanne.

SV Kära kund,

Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.

Vi önskar dig mycket nöje med din Gigaset.

NO Kjære kunde,

Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.

Vi håper du får stor glede av din Gigaset-enhet.

EL Αγαπητή πελάτισσα, αγαπητέ πελάτη,

η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH.

Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.

HR Poštovani korisnici,

Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.

Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.

SL Spoštovani kupec!

Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.

Želimo vam veliko užitkov ob uporabi naprave Gigaset.

Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com

Gigaset

CS Vážení zákazníci,

společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH.

Doufáme, že jste s produkty Gigaset spokojeni.

SK Vážený zákazník,

Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH.

Veríme, že budete so zariadením Gigaset spokojní.

RO Stimate client,

Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmaţii efectuate de Siemens AG sau SHC şi incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparţine Gigaset Communications GmbH.

Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.

SR Poštovani potrošaču,

Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH.

Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.

BG Уважаеми потребители,

Gigaset Communications GmbH е правоприемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH.

Надяваме се да ползвате с удоволствие вашия Gigaset.

HU Tisztelt Vásárló!

A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni.

Reméljük, megelégedéssel használja Gigaset készülékét.

PL Szanowny Kliencie,

Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH.

Życzymy wiele przyjemności z korzystania z produktów Gigaset.

TR Sayın Müşterimiz,

Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır.

Gigaset'ten memnun kalmanızı ümit ediyoruz.

RU Уважаемыи покупатель!

Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH.

Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.

Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com

SIEMENS



Gigaset C455


Gigaset

Issued by
Siemens Home and Office Communication Devices GmbH & Co. KG
Schlavenhorst 66
D-46395 Bocholt

© Siemens Home and Office Communication Devices GmbH & Co. KG 2007
All rights reserved. Subject to availability.
Rights of modification reserved.


www.siemens.com/gigaset

The handset at a glance

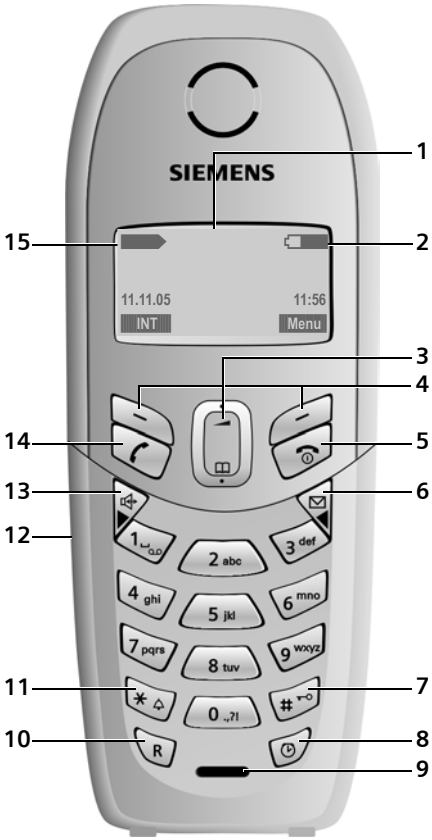

1 **Display** in idle status
2 **Battery charge level**
(1/3 charged to fully charged)
flashes: battery almost flat
flashes: battery charging
3 **Control key** (page 11)
4 **Display keys** (page 11)
5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
6 **Message key**
Opens calls and message lists
Flashes: new message or new call
7 **Hash key**
Keypad lock on/off (press and hold, page 11)
Toggle between upper/lower case letters and digits for text entry (page 33)
8 **Alarm clock key** (page 27)
Activate and deactivate the alarm clock
9 **Microphone**
10 **Recall key**
Enter flash (press briefly)
Insert a pause (press and hold)
11 **Star key**
Ringtones on/off (press and hold in idle status),
12 **Connection socket for headset** (page 7)
13 **Handsfree key**
Switch between earpiece and handsfree mode
Lights up: handsfree activated
Flashes: incoming call
14 **Talk key**
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
15 **Signal strength**
(low to high)
flashes: no reception

Base station C455 at a glance

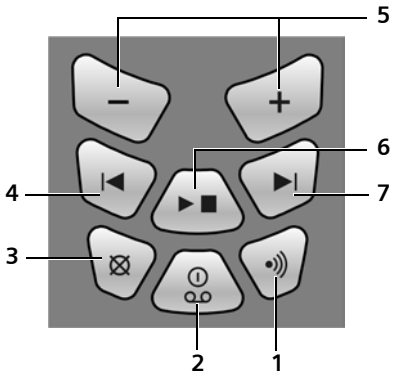

Using the keys on the base station, you can operate the integrated answering machine and register the handset to the base station.

1 Registration/paging key:
Page handsets (press briefly, "Paging", page 25).
Register handsets and DECT devices (press and hold, page 24).

2 On/Off key: activate and deactivate answering machine.
Lights up: answering machine is activated.
Flashes: there is at least one new message or message is in the process of being recorded.
Flickers for about four seconds: memory is full.

During message playback:

3 Delete current message.

4 Skip to previous message.

5 Adjust volume (= quieter; = louder):
During message playback: adjust volume.
While an external call is being signalled: adjust ringtone volume.

6 Playback/Stop key
Play back messages from the answering machine, or cancel playback.

7 Skip to next message.

Please remember:

- If the answering machine is being operated from a handset or if it is recording a message, it cannot be operated from the base station.
- If the On/Off key flashes although the answering machine is switched off, it means that there is still at least one new message that has not been played back yet.

Contents

The handset at a glance 1

Base station C455 at a glance 2

Safety precautions 4

ECO DECT 5

Gigaset C455 – more than just a telephone 5

First Steps 5
Pack contents 5
Installing the base station 5
Connecting the base station 5
Setting up the handset for use 6
Belt clip and headset 7

Menu tree 8

Making calls 10
Making an external call 10
Ending a call 10
Answering a call 10
Calling Line Identification. 10
Handsfree operation 10

Operating the handset 11
Switching the handset on/off 11
Activating/deactivating the keypad lock . . . 11
Control key on the handset 11
Display keys 11
Returning to idle status 12
Menu guidance 12
Correcting incorrect entries 12

Using the directory and lists 13
Directory 13
Last number redial list 14
Opening lists with the message key 14

Making cost-effective calls 15
Automatic network provider code (preselection) 15
Displaying the call duration 16

SMS (text messages) 17
Registering for SMS using the registration wizard 17
Writing/sending an SMS 17
Receiving an SMS 18
Setting SMS centre: 19
SMS to a PABX 19
Activating/deactivating the SMS function . . 19
SMS troubleshooting 20

Operating the base station answering machine 21
Operation via the handset 21
Activating/deactivating listen-in 22
Setting up the answering machine 22
Resetting fast access on the answering machine 23

Using the network mailbox 24
Configuring the network mailbox for fast access 24
Viewing a message from the network mailbox 24

Using several handsets 24
Registering handsets 24
Locating a handset ("Paging") 25
Making internal calls 25
Listening in to an external call 25

Handset settings 26
Changing the display language 26
Setting the display 26
Activating/deactivating auto answer 26
Adjusting the loudspeaker volume 26
Changing ringtones 26
Activating/deactivating suppression of the first ringtone 27
Advisory tones 27
Using the handset as an alarm clock 27
Restoring the handset default settings . . . 28

Base station settings 28
Changing ringtones 28
Restoring the base station to factory settings 28

Operating the base station on the PABX 29
Dialling modes and flash time 29
Setting pauses 29
Switching temporarily to tone dialling (DTMF) 29

Appendix 30
Symbols and typographical conventions used 30
Care 30
Contact with liquid 30
Questions and answers 30
Service (Customer Care) 31
Specifications 32
Writing and editing a text message 33

Accessories 34

Index 35

Safety precautions

Caution:
Read the safety precautions and the user guide before use.
Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use the mains adapter supplied, as indicated on the underside of the base station.



Fit only the **recommended rechargeable batteries (page 32)** of the same type! I.e. do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Insert rechargeable batteries with the correct polarity, and use them according to this user guide (polarity symbols can be seen in the handset's battery compartment, page 6).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station in bathrooms or shower rooms. The handset and base station are not splash proof (page 30).



Do not use the phone in environments with a potential explosionhazard, e.g. auto paint shops.



If you give your Gigaset to someone else, make sure you also give them the user guide.



Dispose of used devices and batteries in accordance with statutory requirements.

Note:
Not all of the functions described in this manual are available in all countries.

ECO DECT

ECO DECT reduces power consumption by using a power supply with low power consumption and also reduces the transmission power of the base station.

The transmission power of the base station is switched off when just 1 handset is registered on the base station!

Your handset also reduces the transmission power depending on the distance to the base station.

Gigaset C455 – more than just a telephone

Your phone not only enables you to send and receive text messages over the fixed network and store up to 100 telephone numbers (page 13) – it can do a whole lot more:

- You can programme the keys of your phone with important phone numbers. The number is then dialled by simply pressing a key (page 13).
- Use the handsfree function (page 10) to keep your hands free when making a call.
- Use your handset as an alarm clock (page 27).

Have fun using your new telephone!

First Steps

Pack contents

The pack contains:

- one Gigaset C455 base station
- one Gigaset C45 handset
- one mains adapter
- one phone cord
- two batteries
- one battery cover
- one belt clip
- one user guide

Installing the base station

The base is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.


- Set up the base station at a central point in the apartment or house.

Please note:

- Never expose the telephone to heat sources, direct sunlight, other electrical appliances.
- Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Connecting the base station

- **First** connect the mains adapter and **then** the phone jack as shown below and place the phone cord in the cord recess.

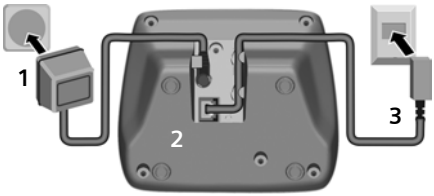


1 Mains adapter 230 V
2 Underside of the base
3 Phone jack with phone cord

Please remember:

- Keep the mains adapter **plugged in at all times** for operation as the phone does not work without mains connection.
- If you buy a replacement phone cord from a store ensure that the phone jack is connected correctly.

Correct phone jack assignment

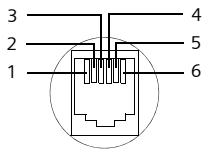

1 unused
2 unused
3 a
4 b
5 unused
6 unused


Setting up the handset for use

Inserting the batteries

Caution:
Use only the rechargeable batteries recommended by Siemens on page 32. I.e. never use a conventional (non-rechargeable) battery or other battery type, otherwise serious damage to health and property cannot be ruled out, e.g. the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- Fit the batteries with the correct polarity (see diagram).


The polarity is indicated in the battery compartment.

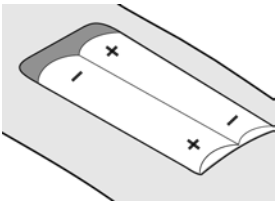

The handset switches on automatically. You will hear a confirmation tone.

Closing the battery cover

- Position the cover pointing slightly downwards and push it up until it clicks into position.

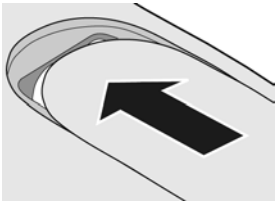

Opening the battery cover

- Press below the upper curve on the battery cover and slide down.

Placing the handset in the base station and registering

Important: the handset must not already be registered to a base station.

Registering the handset to the Gigaset C455 base station occurs automatically.

- Place the handset in the charging cradle of the base unit with its **display facing forward**.

You will hear a confirmation tone.

Automatic registration takes around one minute. While registration is in progress the screen displays **Registering** and **Base** flashes. The handset is assigned the lowest unassigned internal number (1–4). If several handsets are registered to the base, the internal number is shown in the display after registration, e.g. **INT 2**. This means that the handset has been assigned the internal number 2. If the handset has been registered successfully you will see the display key **INT** at the bottom left of the display.

Notes:
- Automatic registration is not possible when the base station on which you wish to register the handset is being used to make a call.
- A key press cancels automatic registration.
- If four handsets are already registered to the base station there are two options:
  - The handset with the internal number 4 is in idle status: the handset you wish to register is assigned the number 4. The handset that was previously number 4 is de-registered.
  - The handset with the internal number 4 is being used: the handset you wish to register cannot be registered.
- If automatic registration does not work the handset will have to be registered manually (page 24).

- To charge the batteries, leave the handset in the charging cradle on the base station.

Notes:
- The handset may only be placed in the base provided for it.
- If the handset has switched itself off because the batteries are flat and is then placed in the cradle, it will switch itself on automatically.

For questions and problems see page 30.

Initial charging and discharging of batteries

Battery charging is indicated in the top right of the display by a flashing battery icon , or . During handset operation, the battery icon indicates the charge status of the batteries (page 1).

The correct charge status can only be displayed when the batteries are first fully charged **and** discharged through use.

- To do this, leave the handset in the base without interruption until the battery icon stops flashing in the display (approx. 6h).
- Once the batteries are fully charged, remove the handset from the base and do not put it back again until the batteries are fully discharged.

Note:
After the first battery charge **and** discharge you may replace your handset in its base after every call.

Please remember:

- Always repeat the charging and discharging procedure if you remove the batteries from the handset and re-insert them.
- The batteries may warm up as they are charging. This is not dangerous.
- After a time the charge capacity of the batteries will decrease for technical reasons.

Note:
You will find explanations for the symbols and typographical conventions used in this user guide in the appendix, page 30.

Setting the date and time

Menu → Settings → Date/Time

Enter the day, month and year with 6 digits and press OK. Use to move between the fields.

Enter hours and minutes with 4 digits (e.g. 0 7 1 5 for 07.15 hrs) and press OK. Use to move between the fields.

Once the phone is registered and the time set, the idle display looks as shown on page 1.

Your phone is now ready for use.

Gigaset C455: Your answering machine is set with a standard announcement.

Belt clip and headset

By using a belt clip and headset (optional) you can easily make your mobile phone a constant companion both inside the building and in its immediate vicinity.

Attaching the belt clip

There are notches for attaching the belt clip on the side of the handset at approximately the same height as the display.

- Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.

The belt clip's clasp must be pointing towards the battery compartment.

Connection socket for headset

You can connect the following types of headset (with jack connector): HAMA Plantronics M40, MX100 and MX150.

Menu tree

There are two ways to select a function:

Using number combinations ("shortcut")

- To open the main menu, press Menu with the handset in idle status.
- Enter the number combination that is in front of the function in the menu tree.
- **Example**: Menu **4 2 2** for "Set handset language".

Scrolling through the menus (see also page 30)

- To open the main menu, press Menu with the handset in idle status.
- Scroll to the required function with the control key and press OK.

1 SMS

1-1	Write Message				
1-2	Incoming 00+00				
1-3	Outgoing				
1-4	Settings	1-4-1	Service Centres	1-4-1-1	Service Centre 1
				...	[to]
				1-4-1-3	Service Centre 3
		1-4-2	Register to Service Centres		

2 Alarm Clock

2-1	Activation
2-2	Wakeup time

3 Audio Settings

3-1	Ringer Volume		
3-2	Ringer Melody	3-2-1	External Calls
		3-2-2	Internal Calls
		3-2-3	Alarm Clock
3-3	Advisory Tones		
3-4	Battery Low	3-4-1	Off
		3-4-2	On
		3-43	During Call

4 Settings

4-1	Date/Time				
4 2	Handset	4-2-1	Display	4-2-1-1	Screensaver
				4-2-1-2	Colour Scheme
				4-2-1-3	Contrast
				4-2-1-4	Backlight
		4-2-2	Language		
		4-2-3	Auto Answer		
		4-2-4	Register Handset		
		4-2-5	Reset Handset		
4-3	Base	4-3-1	Audio Settings	4-3-1-1	Ringer Volume
				4-3-1-2	Ringer Melody
		4-3-2	System PIN		
		4-3-3	Base Reset		
		4-3-4	Listening in		
		4-3-5	Preselection	4-3-5-1	Preselection Number
				4-3-5-2	With Preselection
				4-3-5-3	Without Preselection

5 Voice Mail

5-1	Set Key 1	5-1-1	Network Mailbox
		5-1-2	Answer Machine
5-2	Answer Machine		
5-3	Call Screening	5-3-1	Handset
		5-3-2	Base
5-4	Announcements	5-4-1	Record Announcement
		5-4-2	Play Announcement
		5-4-3	Delete Announcement
5-5	Message Length	5-5-1	Maximum
		5-5-2	30 sec
		5-5-3	60 sec
		5-5-4	120 sec
5-6	Ring Delay	5-6-1	Immediately
		5-6-2	10 sec
		5-6-3	20 sec
		5-6-4	30 sec
		5-6-5	Auto

Making calls

Making an external call

External calls are calls using the public telephone network.

Enter the number and press the talk key.

Or:

Press **and hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key.

Notes:
- Dialling with the directory (page 13) or last number redial list (page 14) saves repeated keying of phone numbers.
- You can assign a number from the directory to a key for speed dialling (page 13).
- You can edit or add to any phone number selected by means of quick dialling or from the directory and use it for the current call.

Ending a call

Press the end call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen, and by the flashing handsfree key.

You can accept the call by:

- Pressing the talk key.
- Pressing the handsfree key.
- Press the display key Menu and select TAD Diversion to divert the call to the answering machine (page 22).

If the handset is in the base and the Auto Answer function is activated (page 26), the handset will take a call automatically when you lift it out of the base.

If the ringtone is intrusive, press Menu Silent. You can take the call so long as it is displayed on the screen.


Calling Line Identification.

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

- Your network provider supports CLIP, CLI:
  - CLI (Calling Line Identity): the caller's number is transmitted
  - CLIP (Calling Line Identification Presentation): the caller's number is displayed
- You have arranged CLIP with your network provider.
- The caller has arranged CLI with the network provider.

Call display with CLIP/CLI

If the caller's number is stored in your directory, you will see their name.

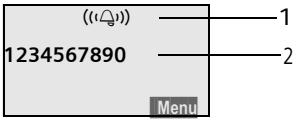

1 Ring icon
2 Number or name of caller

The following is displayed in place of the number:

- External Call, if no number is transmitted.
- Withheld, if the caller has withheld Calling Line Identification.
- Unavailable , if the caller has not arranged Calling Line Identification.

Handsfree operation

In handsfree mode, instead of holding the handset to your ear you can put it down e.g. on the table in front of you to allow others to participate in the call.

Activating/deactivating handsfree

Activating while dialling

Enter the number and press the handsfree key.

- You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode

Press the handsfree key.

Switch handsfree on and off during a call and when playing back the answering machine.

If you wish to place the handset in the base station during a call:

- Press and hold the handsfree key while placing the handset in the base station. If handsfree key does not light up, press the key again.

For how to adjust the volume, see page 26.

Operating the handset

Switching the handset on/off

Press the end call key long.

You will hear the confirmation tone.

Activating/deactivating the keypad lock


Press and **hold** the hash key.

You will hear the confirmation tone. The icon appears in the display when the keypad lock is activated.

The keypad lock deactivates automatically when you receive a call and activates again after the call.

Note:
The handset displays an advisory message if you press a key by accident while the keypad lock is on. To deactivate the keypad lock, press the hash key **and hold**.

Control key on the handset

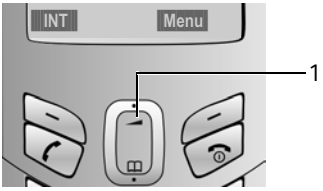

1 Control key

In this user guide, the side of the control key that you must press in the given operating situation is shown in black (top, bottom). Example: for "press the top of the control key".

The control key has a number of different functions:

When the handset is in idle status

Open the directory.

Adjust the ringer melody volume of the handset (page 27).

In lists and menus

/ Scroll up/down line by line.

In an input field

/ Move the cursor **left** or **right**.

During an external call


Open the directory.

Adjust loudspeaker volume for earpiece and handsfree mode.

Display keys

The current display functions are shown in the bottom display line in reversed highlights. The function of the display keys changes depending on the particular operating situation.

Example:

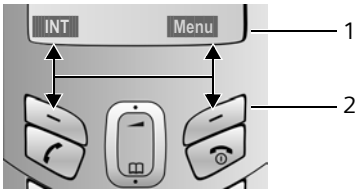

1 Current display key functions
2 Display keys

The most important display symbols are:

Back	Go back one menu level or cancel operation.
INT	Make an internal call (page 25).
Menu	Open the main menu or a context-dependent menu.
OK	Confirm highlighted selection.
<C	Delete key: backspace delete one character at a time.

Returning to idle status

You wish to return to idle status from anywhere in the menu:

▶ Press the end call key ☎ and hold.

Or:

▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Changes which you have not confirmed/stored by pressing OK will be rejected.

For an example of the display in idle status, page 1.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

▶ To open the main menu, press Menu with the handset in idle status.

Accessing a function

▶ Scroll to the function with the control key and press OK.

Or:

▶ Enter the number that is in front of the function in the menu tree (page 8).

The corresponding submenu (the next menu level) is opened.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

▶ Scroll to the function with the control key and press OK.

Or:

▶ Enter the number combination that is in front of the function in the menu tree (page 8).

A short press on the end call key ☎ returns you to the previous menu level / cancels the operation.

Correcting incorrect entries

◆ Navigate to the wrong input with the control key if ⇆ is displayed.

◆ Press <C to delete the character to the left of the cursor.

◆ Insert new character to the left of the cursor.

◆ When entering the time and date etc., edit the flashing character.

You will find explanations for the symbols and typographical conventions used in this user guide in the appendix, page 30.

Using the directory and lists

The options are:

- Directory
- Last number redial list
- SMS list
- Calls list
- Answering machine list

You can save 100 entries in the directory.

You can create a personalised directory for your own individual handset. However you can send the list or individual entries to other handsets (page 13).

Directory

You can store numbers and the associated names in the **directory**.

▶ With the handset in idle status, open the directory by pressing the key.

Length of an entry

Number: max. 32 digits
Name: max. 16 characters

Note:
You can assign a number from the directory to a key for speed dialling (page 13).

Storing the first number in the directory

→ OK → Directory empty New Entry?
Enter number and press OK.
Enter the name and press OK.

Storing a number in the directory

→ Menu → New Entry
Enter number and press OK.
Enter the name and press OK.

Selecting a directory entry

Open the directory.

You have the following options:

- Use to scroll to the entry until the required name is selected.
- Enter the first character of the name, or scroll to the entry with .

Dialling with the directory

→ (select entry; page 13)
Press the talk key. The number is dialled.

Managing directory entries

You have selected an entry (page 13).

Editing entries

Menu → Edit Entry
Edit the number if required, and press OK.
Edit the name if required, and press OK.

Using other functions

→ (select entry; page 13) → Menu

The following functions can be selected with :

Use Number
Edit or add to a stored number. Then dial or use other functions with Menu.

Delete Entry
Delete selected entry.

Send Entry
Send a single entry to another handset (page 13).

Delete List
Delete **all** directory entries.

Send List
Send the complete list to another handset (page 13).

Shortcut
Assign to the current entry for speed dialling to a selected key.

Using quick dial keys

▶ Press and **hold** the required quick dial key.

Sending the directory to another handset

Requirements:

- The sending and receiving handsets must both be registered to the same base station.
- The other handset and base station can send and receive directory entries.

→ (select entry; page 13) → Menu → Send Entry / Send List
Enter the internal number of the receiving handset and press OK.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

If you have sent a single entry, you can transfer another entry with OK.

Please remember:

- Entries with identical numbers are not overwritten in the receiving handset.
- The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Adding a displayed number to the directory

You can copy to the directory any numbers that appear in a list, e.g. the calls list or the last number redial list.

A number is displayed.

Menu ➔ Copy to Directory

▶ Complete the entry (page 13).

During the number transfer from the answering machine list, the message playback is interrupted.

Copying a number from the directory

You can open the directory in many operating situations e.g. to transfer a number. Your handset need not be in idle status.

	Open the directory.
	Select entry (page 13).

Last number redial list

The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, then the corresponding name will be displayed.

Dialling from the last number redial list

	Press the key **briefly**.
	Select an entry.
	Press the talk key again. The number is dialled.

Managing entries in the last number redial list

	Press the key **briefly**.
	Select an entry.
Menu	Press the display key.

The following functions can be selected with :

Use Number (as in the directory, page 13)

Copy to Directory
Copy an entry to the directory (page 14).

Delete Entry (as in the directory, page 13)

Delete List (as in the directory, page 13)

Opening lists with the message key

You can use the message key ✉ to open the following lists:

- SMS list
- Answering machine list (Gigaset C455)
- Calls list

An advisory tone sounds as soon as a **new entry** appears on a list. The key ✉ flashes. A message appears in the display.

When you press the flashing key ✉, you will see all the lists that contain new messages. If only one list contains new messages, this will be opened automatically.

Note:
If calls are stored in the network mailbox you will receive a message if the appropriate settings have been made (see the network mailbox instructions of your network provider).

Calls list

Requirement: CLIP (page 10)

The numbers of the last 10 missed calls are stored. Multiple calls from the same number are only stored once (the last call).

The calls list is displayed as follows:

```
Calls List:  01+02
```

Number of new entries + number of old, read entries

Answering machine list (Gigaset C455)

You can use the answering machine list to listen to the messages that are on the answering machine.

The answering machine list is displayed as follows:

```
Answ. Mach.:  01+02
```

Number of new messages + number of old, played back messages

Opening calls/answering machine list (Gigaset C455)

✉ ➜ Calls List: / Answ. Mach.: 01+02

Select entry.


The last incoming call is displayed in the **calls list**.

The **answering machine list** displays the last incoming new message. The playback starts.

New messages are placed after old messages when they have been played back.

List entry

Example of a list entry:

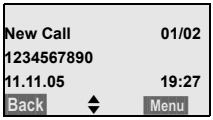

- Status of entry

  In the calls list

  New Call: new missed call.

  Old Call: entry already read.

  Call recv.: call taken.

  In the answering machine list

  Answer M (Gigaset C455): The answering machine took the call. A message was left.

  New Msg. (Gigaset C455): New message on the answering machine.

  Old Msg. (Gigaset C455): Previously heard message on the answering machine.
- Entry number

  01/02 means e.g.: first of a total of two entries.
- Number or name of caller

  You can add the number of the caller to the directory (page 14).
- Call date and time (if set, page 7).

You can delete the current entry with Menu Delete Entry .

Deleting the calls list

Caution! All **old and new** entries will be deleted.

✉ ➜ Calls List: ➜ Menu ➜ Delete List

Press and **hold** (idle status).

Note for Gigaset C455:
Deleting old messages from the answering machine list: page 22.

Making cost-effective calls

Make your calls via a network provider who offers very low call charges (call-by-call), have the call duration displayed on your handset after the call. You can store and manage several call-by-call numbers.

Automatic network provider code (preselection)

You can specify a call-by-call number (preselection number) which is **automatically** placed in front of certain numbers according to two lists when you dial them.

- The list "**with preselection**" contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.
- The list "**without preselection**" contains the "exception to the rule".

Example:

You have entered 08 for "with preselection". Now all numbers that start with 08 will be dialled with preselection.

However, if you want, for example, that 081 is still dialled without preselection, enter 081 for "without preselection".

Storing preselection numbers

Menu ➜ Settings ➜ Base ➜ Preselection ➜ Preselection Number

Enter or edit preselection number (call-by-call number).

OK Press the display key. The entry is stored.

Press and **hold** (idle status).

Saving or editing entries in the preselection lists

Each of the two lists can contain 11 entries with 4 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means, for example, that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have stored previously.

Menu ➜ Settings ➜ Base ➜ Preselection ➜ With Preselection / Without Preselection

	Select entry and press OK.
	Enter or edit first digits of number.
OK	Press the display key. The entry is stored.
	Press and **hold** (idle status).

Temporarily cancelling preselection

(press and hold) ➜ Menu ➜ Automatic Preselect off

Permanently deactivating preselection

- Delete the preselection number with <C and press OK.

Displaying the call duration

The duration of a call is displayed

- during the conversation,
- until about three seconds after the call has ended if you do not replace the handset in the charging cradle.

Note:
The actual duration of the call can vary from that shown by a few seconds.

SMS (text messages)

Your unit is supplied ready for you to send text messages immediately.

Requirements:

- Calling Line Identification (CLIP, page 10) is enabled for your phone connection.
- Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- You are registered with your service provider to send and receive SMS.

Text messages are exchanged between SMS centres that are operated by service providers. You must enter the SMS centre in the unit through which you wish to send and receive. You can receive SMS from **every** SMS centre that is entered if you have registered with your service provider. The registration wizard (page 17) will help you to register.

Your text message is sent through the SMS centre that is active. However, you can activate any other SMS centre to send a current message (page 19).

If no SMS centre is entered, the SMS menu only consists of the entry **Settings** . Enter an SMS centre (page 19).

Please remember:

- If your phone is connected to a PABX, please read page 19.
- You must be registered with your service provider to receive SMS text messages.
- Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such an SMS call on the first ring, the SMS will be lost. To prevent this, suppress the first ringtone for all external calls (page 27).

Registering for SMS using the registration wizard

You can use the registration wizard to register with all service providers whose number you have entered to send and receive SMS messages.

Precondition:

- You must have stored a number for at least one SMS centre.

When you call up the SMS menu for the first time, the wizard automatically registers you with accessible SMS centres whose number you have entered. You can also use the registration wizard to register with SMS centres at a later time.

Menu ➜ **SMS** (on 1st. call)

Menu ➜ **SMS** ➜ **Register to Service Centres** (later)

OK — Press the display key to confirm the prompt.

You can now receive text messages from any of the SMS centres whose number you have entered (page 19).

Writing/sending an SMS

An SMS may contain up to 160 characters.

Writing/sending an SMS

Menu ➜ **SMS** ➜ **Write Message**

Write an SMS. For how to enter the text, see page 33.

Menu **Send Text**

Select and press OK.

Enter the number with prefix (including your local area code) from the directory or key it in manually, and press OK.
For SMS to an SMS mailbox: put the mailbox ID at the **end** of the number.
The SMS is sent.

Note:
If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.

Draft message list

In the draft message list, you can save, edit later and send an SMS.

Saving an SMS in the draft message list


You are writing an SMS (page 17).

Menu ➜ **Save Text**

Opening the draft message list

Menu ➔ SMS ➔ Outgoing

The first entry in the list is displayed, e.g.:

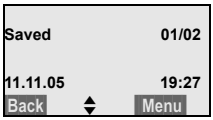

01/02: Current number/total number of SMS text messages

Reading or deleting individual SMS messages

▶ Open the draft message list.

Select SMS.

Menu Read SMS
Select and press OK to read the message. Scroll in the SMS using .

Or:

Menu Delete Entry
Select and press OK to delete the message.

Writing/editing an SMS

You are reading an SMS in the draft message list.

Menu Press the display key.

You have the following options:

Write Message
Write and then send a new SMS (page 17) or save.

Use text
Edit the text of the saved SMS and then send (page 17).

Deleting draft message list

▶ Open the draft message list.

Menu Delete List
Select and press OK.

OK Press the display key to confirm the delete. The list is cleared.

Press and **hold** (idle status).

Receiving an SMS

All received text messages are saved in the incoming message list. Linked text messages are displayed as **one** message. If this is too long or has not transferred completely, it will be split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

The display tells you if the message memory is full.

▶ Deleting text messages you no longer require (page 18).

Incoming list

The incoming message list contains:

- all received SMS messages, starting with the latest.
- messages that could not be sent on account of an error.

New text messages are signalled on all Gigaset C45 handsets by a message in the display, the flashing message key ✉ and an advisory tone.

Opening the incoming message list with the ✉ key


✉ Press.

The incoming message list is displayed as follows (example):



01+05: The number of new + the number of old, read messages

An entry in the list is displayed e.g as follows:

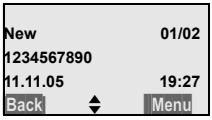

01/02: Current Number of the SMS currently in the display / total number of new SMS messages

Opening the incoming message list via the SMS menu

Menu ➔ SMS ➔ Incoming 01+05

Reading or deleting individual SMS messages

▶ Open the incoming message list.

▶ Continue as described at "Reading or deleting individual SMS messages", page 18.

A new message which you have read acquires the status Old.

Deleting incoming message list

All **new and old** SMS in the list are deleted.

▶ Open the incoming message list.

Menu Press the display key.

▶ Continue as described for "Deleting draft message list", page 18.

Replying to or forwarding text messages

You are reading an SMS (page 18).

Menu Press the display key.

You have the following options:

Reply
Write and send a reply SMS directly (page 17).

Use text
Edit the text in the SMS and then send it (page 17).

Send
Forward the text of an SMS to another recipient (page 17).

Adding a number to the directory

Adding the sender's number

You are reading an SMS in the incoming message list.

Menu Press the display key.

Continue see page 14.

Note:
You can create a special directory for text messages within your main directory by putting a star (*) before the names.
An appended mailbox ID will be copied to the directory.

Setting SMS centre:

Entering/changing SMS centres

- You should find out about the services and special functions offered by your service provider **before you make a new application** and before you delete preconfigured phone numbers.

Menu ➔ SMS ➔ Settings ➔ Service Centres

Select SMS centre (e.g. select Service Centre 1) and press OK.

You have the following options:

Active Send Serv. Centre
If the SMS messages are to be sent through this SMS centre, press OK to activate the SMS centre (✓ = on). If a different SMS centre was active previously, then this will be deactivated. For the SMS centres 2 and 3, the setting only applies to the next SMS.

SMS Centre No.
Enter the number of the SMS centre and press OK.

Sending an SMS through another SMS centre

- Activate the SMS centre (2 or 3) as the active send service centre (page 19).
- Send the SMS.

This setting only applies to the SMS that is being sent next. Afterwards the setting automatically reverts to Service Centre 1.

SMS to a PABX

- You can only receive an SMS when the **Calling Line Identification** (page 10) **is forwarded** to the extension of the PABX **(CLIP)**. The CLIP of the phone number for the SMS centre is evaluated in your **Gigaset**.
- Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre.
  If in doubt, test your PABX e.g. by sending an SMS to your own phone number, once with and once without the access code.
- When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS **on ISDN PABXs** is only possible via the MSN number assigned to your base station.

Activating/deactivating the SMS function

When you switch off you cannot send or receive any SMS with your phone.

Settings which you have made for sending and receiving text messages (the numbers of SMS centres) and any entries in the incoming message and draft message lists will be retained even after the function is deactivated.

Menu 4 3 9 2 6

0 OK Deactivate the SMS function.

Or:

1 OK Activate the SMS function (default settings).

SMS troubleshooting

Errors when sending

If an SMS cannot be sent for a longer period of time, it is moved to the incoming message list and given the status Error XX.

E0	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed, see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.

1. You have not requested the CLIP service (Calling Line Identification Presentation, page 10).
   - ▸ Ask your service provider to enable this service.
2. Text message transmission has been interrupted (e.g. by a call).
   - ▸ Re-send the text message.
3. Network provider does not support this feature.
4. No number or an invalid number is entered for the SMS centre activated as the send centre.
   - ▸ Enter phone number (page 19).

You receive a message whose text is incomplete.

1. Your phone memory is full.
   - ▸ Delete old messages (page 18).
2. The service provider has not yet sent the rest of the message.

The message is played back.

1. The "display call number" service is not activated.
   - ▸ Ask your service provider to activate this function (chargeable).
2. Mobile phone operator and network SMS service provider have not agreed on a cooperation.
   - ▸ Obtain information from your network SMS service provider.
3. Your terminal is recorded in the records of your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
   - ▸ Register your terminal (again) for SMS reception (page 17).

Messages are only received as voice messages during the day.

The terminal is stored in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.

- ▸ Register your terminal (again) for SMS reception (page 17).

You cannot access the SMS functions on your handset.

Another handset that is registered at the same base station is currently using the SMS functions.

- ▸ Wait until there is no other handset using the SMS functions.

Operating the base station answering machine

You can operate the answering machine that is integrated in the base station via the handset or using the keys on your base station (page 2).

Operation via the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key.

Switching answering machine on/off

Menu ➔ Voice Mail ➔ Answer Machine
(✓ = on)

After switching on, the remaining memory time is announced. Icon appears in the display. The key lights up on the base station.

The telephone is supplied with a pre-recorded announcement. This pre-recorded announcement is used if no personal announcement is available.

If the memory is full the answering machine switches itself off automatically. It activates again automatically when you delete old messages.

Recording your own announcement

Menu ➔ Voice Mail ➔ Announcements ➔ Record Announcement

OK Press the display key to start the recording.

You hear the ready tone (short tone).

▶ Now speak your announcement (at least 3 sec.).

Cancel recording with or Back. Restart the recording with OK.

OK Press the display key to end the recording.

After recording, the announcement is played back for you to check.

Please remember:

- Recording ends automatically when the max. recording time of 170 seconds is reached or if there is a break in speaking of more than 2 seconds.
- If you cancel the recording, the pre-recorded announcement is then used.
- The recording is cancelled if the answering machine memory is full.
  ▶ Delete old messages and repeat recording if required.

Playing back announcements

Menu ➔ Voice Mail ➔ Announcements ➔ Play Announcement

Press and **hold** (idle status).

You will hear the pre-recorded announcement if you have not recorded one of your own.

Deleting announcements

Menu ➔ Voice Mail ➔ Announcements ➔ Delete Announcement

OK Press the display key to confirm the prompt.

Press and **hold** (idle status).

The pre-recorded announcement is used again after a personal announcement is deleted.

Playing back messages

The date and time of each message is logged (provided this has been set, page 7). If Calling Line Identification is activated, then the caller's number is displayed. If the caller's number is stored in the directory, the respective name is displayed.

Playing back new messages

New messages that have not yet been heard are indicated by a message in the display and by the key flashing on the handset. The key flashes on the base station.

Press the message key.

Answ. Mach.: 01+02
Select as required and press OK.

Playback begins with the first new message.

Playing back old messages

See answering machine list, page 14.

Stopping and controlling playback

During message playback:

2	Pause playback. Press **2** again to resume
	Go to the start of the current message.
2 x	To previous message.
	To next message.
2 x	To next-but-one message.

After an interruption of over one minute, the answering machine returns to idle status.

Marking a message as new

You can mark a message you have already heard as new again.

During message playback:

Menu ➔ Mark as New

Adding the telephone number of a message to the directory

See "Adding a displayed number to the directory", page 14.

Deleting messages

You can delete old messages either all together or individually.

Deleting all old messages

During playback or pause:

Menu ➔ Delete all

OK Press the display key to confirm the prompt.

Deleting individual old messages

While playback is paused:

<C Press the display key.

Picking up a call from the answering machine

You can take a call while the answering machine is recording it.

✆ / 🔊 Press the talk or handsfree key.

Recording stops and you can speak to the caller.

If 3 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The ✉ key on the handset flashes.

You can accept the call even if it is not signalled on the handset.

Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine even if it is switched off.

Requirement: Sufficient storage space is available on the answering machine.

An external call is signalled on the handset.

Menu ➔ TAD Diversion

The answering machine answers the call immediately. The set time for the call acceptance (page 22) is ignored.

Activating/deactivating listen-in

While a message is recording, you can listen to it on the loudspeakers in the base and in the registered Gigaset C45 handsets.

Permanently activating/deactivating call screening

Menu ➔ Voice Mail ➔ Call Screening ➔ Handset / Base (✓ = on)

☎ Press and **hold** (idle status).

Listening in can be activated simultaneously on the Base and on the Handset .

Switching off listen-in for the current recording

☎ Press the end call key.

Setting up the answering machine

The answering machine has already been preset at the factory. Make individual settings using the handset.

Setting call acceptance

You can set when you want the answering machine to accept a call.

The options are: Immediately , 10 sec , 20 sec or 30 sec and Auto .

On Auto the following applies for call acceptance:

- If no new messages are present, the answering machine accepts a call after **20 seconds**.
- If new messages are present, the answering machine accepts a call after just **10 Seconds**.

Menu ➔ Voice Mail ➔ Ring Delay

Immediately / 10 sec / 20 sec / 30 sec / Auto
Select an option and press OK (✓ = on).

☎ Press and **hold** (idle status).

Please remember:

You can set your telephone so that on all calls the **first** ringtone is **suppressed** (page 27). This means that the time selected for the call acceptance predetermines how long the caller must wait before the answering machine answers the call.

Setting the recording time

You can set the maximum recording time of a message.

The options are: **30 sec** , **60 sec** , **120 sec** or **Maximum** .

Menu ➔ Voice Mail ➔ Message Length

Select a recording time and press OK (✓ = on).

Press and **hold** (idle status).

Changing language for voice prompt and pre-recorded announcement

Menu ➔ 4 3 9 2

Enter digit for the required language (**1** = English, **2** = French, **3** = Arab, **4** = Beep) and press OK.

In the "beep" setting, certain answering machine phrases are replaced by tones. The remaining phrases and the pre-recorded announcements are played back in English.

Resetting fast access on the answering machine

The integrated answering machine is factory-set for fast access. However, if you have set Network Mailbox for fast access (page 24), you can reset this setting.

Menu ➔ Voice Mail ➔ Set Key 1

Answer Machine

Select and press OK.

Press and **hold** (idle status).

When you have selected the answering machine, press and **hold** key **1**. You will be connected directly.

The setting for fast access applies to all registered handsets.

Using the network mailbox

The network mailbox is your network provider's answering machine. You cannot use the network mailbox unless you have **applied** to your network provider.

Configuring the network mailbox for fast access

With fast access, you can direct dial either the network mailbox or the integrated answering machine (Gigaset C455).

The integrated answering machine is preconfigured for fast access. You can configure the network mailbox instead. Ask your network provider about the network mailbox.

Configuring the network mailbox for fast access and entering the network mailbox number

Menu ➔ Voice Mail ➔ Set Key 1

Network Mailbox

Select and press OK (✓ = on).

Enter the network mailbox number and press OK.
The entry is stored.

Press and **hold** (idle status).

This setting is now valid for all registered handsets.

Calling the network mailbox

1 Press and **hold**. This connects you directly to the network mailbox.

Press handsfree key if required. You hear the network mailbox announcement.

Viewing a message from the network mailbox

When a message arrives for you, you get a call from the network mailbox. If you have requested Calling Line Identification, the display shows the network mailbox number. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number will be stored in the list of missed calls and the message key flashes (page 14).

Using several handsets

Registering handsets

You can register up to four handsets on your base station.

Automatic registration Gigaset C45 to Gigaset C455, see page 6.

Manual registration Gigaset C45 to Gigaset C455

You must activate manual registration of the handset at both the handset and the base station.

After it has registered, the handset returns to idle status. If several handsets are registered to the base, the internal number is shown in the display after registration, e.g. INT 2.

The registration process is cancelled after 60 seconds. If the handset has not registered within this time, repeat the process.

On the handset

Menu ➔ Settings ➔ Handset ➔ Register Handset

Enter the system PIN of the base station (the default is 0000) and press OK. Base is flashing in the display.

On the base station

Press and hold the registration/paging key on the base station (page 2) (min. 1 sec.).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

On the handset

▶ Start to register the handset as described in its user guide.

On the base station

Press and hold the registration/paging key on the base station (page 2) (min. 1 sec.).

Locating a handset ("Paging")

You can locate your handset using the base station.

- Press the registration/paging key on the base station (page 2) **briefly**.
- All handsets will ring at the same time ("paging"), even if the ringers are switched off.

Ending paging

◁ / ✆ **Briefly** press the registration/paging key on the base station (page 2) or press the talk key on the handset.

Making internal calls

Internal calls to other handsets registered on the same base station are free.

Calling other handsets

INT Press the display key. All handsets are called.

Ending a call

☎ Press the end call key.

Transferring a call to another handset

You can transfer an external call to another handset (connect).

INT Press the display key. All handsets are called.
The external caller hears the hold music.

When an internal party answers:

- If necessary announce the external call.

☎ Press the end call key.

The call is transferred. If the internal party does not answer, or their phone is in use, the call will automatically return to you.

Internal consultation calls

When you are speaking to an **external** participant you can simultaneously call an **internal** participant for consultation.

INT Press the display key. All handsets are called.
The external caller hears the hold music.

When an internal party answers you can speak to them.

Ending an enquiry call

Back Press the display key.

You are reconnected with the external caller.

Accepting a waiting call

If you get an **external** call while conducting an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if phone number identification is enabled.

☎ Press the end call key to end the internal call.

✆ Press the talk key to take the external call.

Listening in to an external call

You are conducting an external call. An internal caller can listen in on this call and take part in the conversation. All the participants are made aware of the 'listening in' by a signal tone.

Requirement: The Listening in function must be activated.

Activating/deactivating internal listening in

Menu ➔ Settings ➔ Base ➔ Listening in (✓ = on)

☎ Press and **hold** (idle status).

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect You want to listen in to the existing external call.

✆ Press and **hold** the talk key.

You are linked into the call. All participants hear a signal tone.

Ending listening in

☎ Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key ☎, the handset that has 'listened in' remains connected to the external caller.

Handset settings

Your handset is preconfigured, but you can change these settings to suit your individual requirements.

Changing the display language

Note:
Change the automatically assigned name of the handset, **before** changing the display language, e.g. from "INT1" to "Walid".

You can view the display texts in different languages.

Menu ➔ Settings ➔ Handset ➔ Language

The current language is indicated by ✓ .

Select a language and press OK.

Press and **hold** (idle status).

If you accidentally choose a language you do not understand:

Menu 4 2 2

Press keys one after the other.

Select the correct language and press OK.

Setting the display

You have a choice of four colour schemes and several different contrasts. You can also set a screensaver and the illumination.

Menu ➔ Settings ➔ Handset ➔ Display

You have the following options:

Screensaver
There are four different screensavers and the settings No Screensaver or Digital Clock .

Colour Scheme
Four colour schemes. When the illumination is switched off the display is shown in black and white regardless of the selected setting.

Contrast

Backlight
In Charger / Without Charger . Determines whether the illumination stays on permanently or is switched off after a certain time (✓ = permanently switched on).

Note:
If the illumination is switched on outside the charging cradle, the standby time for the handset is considerably reduced!

Activating/deactivating auto answer

When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key .

Menu ➔ Settings ➔ Handset

Auto Answer

Select and press OK (✓ = on).

Press and **hold** (idle status).

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels. You can only adjust the loudspeaker volume during a call.

You are conducting an external call.

Press the control key.

Adjust the volume and press OK.

Note:
The handsfree volume can only be adjusted when this function is set.

Changing ringtones

- Volume:
  Five volume levels (1–5; e.g. volume 2 =) and "crescendo" ring (6; volume increases with each ring =).
- Melody:
  List of pre-loaded ringer melodies. The first three melodies are the "classical" ring tones.

You can also set different melodies for the following functions:

- External Calls : For external calls
- Internal Calls : For internal calls
- Alarm Clock : For the alarm clock

For how to set the ringtones for the base station, see page 28.

Setting ringer volume

The ringer volume is the same for all types of ring.

Menu ➔ Audio Settings ➔ Ringer Volume

Or in idle status:

Press **briefly**.

Then:

Adjust the volume and press OK.

Press and **hold** (idle status).

Setting ringer melody

Set different ringer melodies for external calls, internal calls and the alarm clock.

Menu ➔ Audio Settings ➔ Ringer Melody

External Calls / Internal Calls / Alarm Clock

Select and press OK.

Select melody (✓ = on) and press OK.

Press and **hold** (idle status).

Activating/deactivating the ringer

You can turn off the ringer on your handset before you take a call or while the phone is in the idle state. You can take a call so long as it is displayed on the screen.

Deactivating the ringer

* Press the star key **and hold**, until the icon appears in the display.

Re-activating the ringer

* Press and **hold** the star key in idle status.

Activating/deactivating suppression of the first ringtone

The phone identifies an incoming SMS from the first network signal.

Menu 4 3 9 2 5

1 OK First ring muted.

Or:

0 OK First ring audible.

Please remember:

If first ringtone muting is deactivated, then every incoming SMS will be signalled by a ringtone. If you take this type of "call" at the first ringtone, you will lose the SMS.

Advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other:

- **Advisory tones**:
  - **Key click**: Each key press is acknowledged.
  - **Confirmation tone** (rising tone sequence): at the end of an entry/setting, when the handset is placed in the base station and on arrival of an SMS or a new entry in the answering machine list or the calls list.
  - **Error tone** (descending tone sequence): when you make an incorrect entry.
  - **Menu end tone**: when scrolling at the end of a menu.
- **Battery warning tone**: the battery requires charging.

You cannot deactivate the confirmation tone for placing the handset in the base station.

Activating/deactivating advisory tones

Menu ➔ Audio Settings ➔ Advisory Tones

Select and press OK (✓ = on).

Setting the battery warning tone

Menu ➔ Audio Settings ➔ Battery Low

On / Off / During Call

Select and press OK (✓ = on). The battery warning tone is activated or deactivated or sounds during a call.

Using the handset as an alarm clock

Activating/deactivating the alarm clock

Menu ➔ Alarm Clock ➔ Activation (✓ = on)

Or:

Press the alarm clock key.

After you activate the alarm clock, the menu for setting the wake up time opens automatically (page 28).

If the alarm clock is set, the wake up time appears with the icon in the display instead of the date.

Setting the wake up time.

Menu ➜ Alarm Clock ➜ Wakeup time

Enter the wake up time in hours and minutes, then press OK.

When the alarm clock rings…

Alarm repeat after 5 minutes

Snooze Press the display key or any key.

If you press Snooze three times the alarm clock switches off for 24 hours.

Switching off the alarm clock for 24 hours

Off Press the display key.

Restoring the handset default settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory, calls list, or SMS lists or the handset's registration to the base station.

Menu ➜ Settings ➜ Handset ➜ Reset Handset

OK Press the display key to confirm.

Press and **hold** (idle status).

Cancel the reset with .

Base station settings

The base station settings are carried out using a registered Gigaset C45 handset.

Changing the system PIN

You have to enter the system PIN when registering a handset to the base station.

You can change the base's 4-digit default system PIN ("0000") to a 4-digit PIN known only to yourself.

Menu ➜ Settings ➜ Base ➜ System PIN

Enter your new system PIN and press OK. For security the PIN is shown as four stars (****).

Press and **hold** (idle status).

Changing ringtones

- Volume:
  You can choose between five volumes and the "Crescendo" ring, see page 26. Select "0" to deactivate the ringtone of the base station.
- Melody:
  You can set a ringtone melody for external calls, see page 26.

Menu ➜ Settings ➜ Base ➜ Audio Settings ➜ Ringer Volume / Ringer Melody

For how to adjust the settings, see page 26.

Restoring the base station to factory settings

When the settings are restored all handsets are de-registered. Each individual setting is restored. Only the date and time are retained.

Resetting the base station using the menu

Menu ➜ Settings ➜ Base ➜ Base Reset

OK Press the display key to confirm.

Resetting the base station using a key on the base station

- Remove the base station mains adapter (page 5) from the power socket.

Press the registration/paging key (page 2) and hold down.

- Replug the mains unit into your power socket.

Continue to press the registration/paging key (page 2) until you hear a confirmation tone.

- Release the registration/paging key (page 2). The base station has now been reset.

Operating the base station on the PABX

The following settings are only needed when your PABX requires them. Please refer to the user guide for your PABX.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Dialling modes and flash time

Changing the dialling mode

You can set the dialling mode.

Menu **4 3 9 1 1**

1 OK Pulse dialling mode (DP).

Or:

0 OK Touch tone dialling (DTMF).

Press and **hold** (idle status).

Setting the flash time

You can set the flash time.

Menu **4 3 9 1 2**

Enter digits for the flash time and press OK.

0 = 80 ms; **1** = 100 ms; **2** = 120 ms; **3** = 180 ms; **4** = 250 ms; **5** = 300 ms; **6** = 600 ms; **7** = 800 ms

Press and **hold** (idle status).

Setting pauses

Changing pause after line seizure

You can set the length of the pause inserted between pressing the talk key and sending the phone number.

Menu **4 3 9 1 9**

Enter digit for the pause length (**1** = 1 sec.; **2** = 3 sec.; **3** = 7 sec.) and press OK.

Press and **hold** (idle status).

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

Menu **4 3 9 1 4**

Enter a digit for the length of the pause (**1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms) and press OK.

Press and **hold** (idle status).

Switching temporarily to tone dialling (DTMF)

If your PABX still operates with dial pulsing (DP), but you need tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to tone dialling for the call.

Requirement: You are conducting a call or have already dialled an external number.

* Press the star key. Tone dialling is now **activated for this call only**.

Appendix

Symbols and typographical conventions used

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

	Enter digits or letters.
Menu	The display functions currently in the bottom display line are shown in reversed highlights. Press the relevant display key to launch the function.
	Press the top or bottom of the control key, e.g. when scrolling.
/ **0** / * etc.	Press the illustrated key on the handset.
External Calls / Internal Calls (example)	Select one of the menu functions (External Calls or Internal Calls) from the list and press OK.
Menu ➜ Audio Settings ➜ Ringer Melody (example)	Press Menu. Select Audio Settings using and press OK. Select Ringer Melody using and press OK.

Care

- Wipe the base station and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

- **Switch the handset off and remove the batteries immediately.**
- Allow the liquid to drain from the handset.
- Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.).
- **Do not switch on the handset again until it is completely dry.**
  When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any questions about using your phone, visit us anytime at www.siemens.com/gigasetcustomercare. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
   - Press and **hold** the end call key .
2. The battery is flat.
   - Charge the battery or replace it (page 6).

The handset does not respond to a key press.

The keypad lock is activated.
- Press and **hold** the hash key # (page 11).

Base **is flashing in the display.**

1. The handset is outside the range of the base station.
   - Move the handset closer to the base.
2. The base station is not switched on.
   - Check the base station mains adapter (page 5).

Handset does not ring.

The ringtone is switched off.
- Activate the ringtone (page 27).

You cannot hear a ringtone/dialling tone.

Base station's phone cord has been replaced.
- When purchasing a new cord, ensure that it has the correct pin connections (page 5).

The incoming call number is not displayed although CLIP (page 10) **is set**.

Phone number identification is not enabled.
- The **caller** should ask his network provider to enable Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending sequence of tones).

Action has failed/invalid input.
- Repeat the operation.
  Watch the display and refer to the operating instructions if necessary.

The calls list does not indicate a time for a message.

Date/time are not set.
- Set the date/time (page 7).

The answering machine will not record any messages.

Its memory is full.
- Delete old messages.
- Play back new messages and delete.

Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

http://www.siemens.com/gigasetcustomercare

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi. 97 12 62 23 800
Argentina 0800-888-9878
Australia 1300 665 366
Austria .05 17 07 50 04 (0,065 Euro/Min.)
Bahrain 97 31 73 11 173
Belgium 0 78 15 66 79
Bosnia Herzegovina 033 276 649
Brazil. . . . . .
Grande Capitais e Regiões Metropolitanas:
. . . . . 4003 3020
. . . . . (US$ 0,59)
Demais localidades: 0800 707 1248
. . . . . (US$ 0,59)
Bulgaria. 02 873 94 88
Canada 701-355-3984
China 0 21 400 670 6007
Croatia . . . . . 016 10 53 81 (0,23 Kun)
Czech Republic 233 032 727
Denmark. 35 25 86 00
Dubai 97 14 39 69 944
Egypt. 202 7623441
Finland 09 23 11 34 25
France. 01 56 38 42 00
Germany.01805 333 222 (0,14 Euro/Min.)
Greece 801 1000 500
Hungary . . . . . .06 14 71 24 44 (27 Ft)
Ireland 18 50 77 72 77
Italy. 199 15 11 15
Kuwait 96 52 44 4200
Latvia 7 50 11 18
Lebanon. . . . . Digital Technologies SARL
. 00961-1240259
Luxembourg 40 66 61 56 40
Malaysia. 603 77124304
Malta . . . . . +353 21 4940 632
Mexico. 01 80 07 11 00 03
Netherlands
. . . . . .0900-3333102 (0,25 Euro/min.)
New Zealand 08 00 27 43 63
Norway 22 70 84 00
Oman. 96 82 47 09 281
Poland 0 801 140 160
Portugal 808781223
Romania 02 12 04 60 00
Russia. 8 (495) 228 1312
Serbia. 01 13 07 00 80
Singapore 62 27 11 18
Slovak Republic
. . . . . 02 59 68 22 66
Slovenija . . . . . 0 14 74 63 36 (6,30 Tolar)
South Africa. 08 60 10 11 57
Spain 902 103935
Sweden 08 750 99 11
Switzerland
. . . . . 0848 212 000 (0,08 SFr./Min.)
Taiwan 02 23 96 10 06
Thailand. 02 722 1118
Turkey 0 21 64 59 98 59
Ukraine . . . . . .+380-44-451-71-72
United Arab Emirates 0 43 66 03 86
United Kingdom 0 84 53 67 08 12

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Specifications

Recommended batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- Sanyo Twicell 650
- Sanyo Twicell 700
- Sanyo NiMH 800
- Panasonic 700 mAh "for DECT"
- GP 550 mAh
- GP 700 mAh
- GP 850 mAh
- Yuasa Technology AAA Phone 600
- Yuasa Technology AAA Phone 700
- Yuasa Technology AAA 800
- VARTA Phone Power AAA 700 mAh

The handset is supplied with two recommended batteries.

Handset operating times/charging times

The following information relates to batteries with a capacity of 650 mAh.

Standby time	approx 130 hours (5 days)
Calling time	approx. 13 hours
Charging time	approx. 6 hours

The operating and charging times apply only when using the recommended batteries.

Base station power consumption

In standby mode: approx. 2 W

During a call: approx. 3 W

General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)/DP (dial pulsing)
Flash time	250 ms
Base station dimensions	144 x 108 x 83 mm (L x W x H)
Handset dimensions	141 x 53 x 31mm (L × W × H)
Base station weight	219 g
Weight of handset with battery	116 g

Writing and editing a text message

The following rules apply when writing a text message:

- The cursor is controlled with ▲ ▼.
- Characters are added to the left of the cursor.
- Press the hash key # **briefly** to switch from "Abc" mode to "123", from "123" to "abc", and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key # **before** entering the letter.
- Press and **hold** the hash key # lang drücken: Shows the selection line of the characters assigned to the hash key.
- The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Editing text

When you press a key **and hold it**, the characters of that key appear in the bottom display line and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field. For how to enter special characters, see page 33.

The display briefly shows whether upper or lower case letters or digits is selected when you switch from one mode to the next. The bottom text line displays "abc -> Abc", "Abc -> 123" or "123 -> abc".

Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space (shown here as ␣)
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

Entering special characters

Standard characters

	1 *)	1 **)	0	*	#
1x	Space	Space	.	*	Abc--> 123
2x	1	↵	,	/	123 --> abc
3x	£	1	?	(	#
4x	$	€	!	)	@
5x	¥	£	0	<	\
6x	¤	$	+	=	&
7x		¥	-	>	§
8x		¤	:	%	
9x			¿		
10x			¡		
11x			"		
12x			'		
13x			;		
14x			_		

*) Directory and other lists
**) When writing an SMS

Accessories

Gigaset Handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset Handset C45

- Illuminated colour display (4096 colours)
- Various different screensavers
- Illuminated keypad
- Handsfree operation
- Polyphonic ringer melodies
- Phonebook for around 100 entries
- SMS (CLIP must be enabled)
- Alarm clock
- Headset socket

www.siemens.com/gigasetc45



All accessories and batteries are available from your mobile phone retailer.

SIEMENS™ Original Accessories

Only use original accessories. This will avoid possible health risks and damage, and also ensure that all the relevant regulations are complied with.

Index

Numerics

24 hours in advance (alarm clock) 28

A

Accessories 34
Activating
  advisory tones 27
  answering machine 21
  auto answer 26
  handsfree talking 10
  internal listening in 25
  keypad lock 11
  SMS function 19
  suppressing ringtone 27
Activating/deactivating SMS function 19
Advisory tones 27
Alarm clock 27
  key 1
Alarm repeat 28
Answering machine 21
Answering machine list 14
Answering machine, see also Network mailbox
Auto answer 10, 26
Automatic network provider code 15

B

Base station
  changing system PIN 28
  installing and connecting 5
  operating on PABX 29
  power consumption 32
  restoring default settings 28
  setting 28
Battery
  charging 7
  display 1, 7
  fitting 6
  icon 7
  recommended batteries 32
  warning tone 27
Belt clip 7

C

Call
  answering 10
  caller listening in 25
  diverting to answering machine 22
  ending 10
  external 10
  internal 25
  picking up from answering machine . . . 22
  transferring (connecting) 25
Call acceptance 22, 26
Call duration 15, 16
Call waiting, internal call 25
Calling back caller 15
Calling back from calls list 15
Calling Line Identification 10
Calls list 14
Cancelling(operation) 12
Care of the telephone 30
Changing PIN 28
Changing system PIN 28
Characters
  deleting 12
Charge status (battery) 1, 7
Charge status display 7
CLI, CLIP 10
Colour scheme 26
Confirmation tone 27
Connection socket for headset 1, 7
Consultation (internal) 25
Contrast 26
Control key 1, 11
Correcting incorrect input 12
Cost saving function (answering machine) .22
Customer Care 31

D

Deactivating
  advisory tones 27
  answering machine 21
  auto answer 26
  handsfree talking 10
  internal listening in 25
  keypad lock 11
  preselection 16
  SMS function 19
  suppressing ringtone 27
Dialling
  directory 13
  with quick dial 13
Dialling mode 29
Digital clock 26
Directory 13
  copying number from text 14
  opening 11
  order of entries 33
  selecting entry 13
  sending entry/list to handset 13
  storing entry 13
  storing number of sender (SMS) 19
  storing the first number 13
  using to enter numbers 14
Display
  call duration/charges 16
  changing display language 26
  colour scheme 26
  contrast 26
  in idle status 1
  network mailbox message 24
  number (CLI/CLIP) 10
  screensaver 26
  setting 26

Display keys 1, 11
Diverting external call to answering machine 22

E
Earpiece mode 11
Earpiece volume 26
Eco mode 5
Electricity consumption, see Power consumption
End call key 1, 10
Ending, call 10
Entering flash 1
Error tone 27

F
Fast access
answering machine 23
network mailbox 24

H
Handset
activating/deactivating 11
advisory tones 27
contact with liquid 30
de-registering 28
display language 26
idle status 12
loudspeaker volume 26
operating and charging times 32
registering 24
restoring default settings 28
searching for 25
setting (individual) 26
setting up for use 6
transferring a call 25
using several handsets 24
Handset charging times 32
Handset operating time 32
Handsfree
key 1
Handsfree talking 10
Hash key 1, 11
Headset 1, 7
Hearing aids 4

I
Idle status (display) 1, 12
Illumination 26
Incorrect input (correction) 12
Info tones 27
Installing, base station 5
Internal
consultation 25
listening in 25
making calls 25
Internal call 25
call waiting 25

K
Key click 27
Keypad lock 11
Keys
alarm clock key 1
assigning directory entry 13
control key 1, 11
display keys 1, 11
end call key 1, 10
end-call key 12
fast access 23
handsfree key 1
hash key 1, 11
Key 1 (fast access) 23
keypad lock 11
message key 1, 14
On/Off key 1
paging key 2
quick dial 13
recall key 1
star key 1, 27
talk key 1, 10

L
Last number redial 14
Liquid 30
List
answering machine list 14
calls list 14
draft message list (SMS) 17
entry 15
incoming message list (SMS) 18
last number redial list 14
missed calls 15
Listening in during recording 22
Listening in to call 25
Lock (keypad) 11
Loudspeaker volume 26

M
Mains adapter 4
Making calls
answering a call 10
external 10
internal 25
Making cost-effective calls 15
Medical appliances 4
Menu
back one menu level 12
end tone 27
menu guidance 12
overview 8
Message
copying number to the directory 22
deleting 22
key 1
marking as new 22
playing back 21

Message key 1
opening list 18
opening lists 14
Missed call 15

N

Network mailbox 24
Network provider code, automatic 15
Number
copying from directory 14
displaying caller's number (CLIP) 10
entry using directory 14
setting for SMS centre 19
storing in directory 13
storing in the directory 14
storing sender in the directory 19

O

On/Off key 1
Operation (preparing to use the phone) . . . 5
Order of entries in directory 33

P

PABX
operating base station on PABX 29
pause times 29
setting dialling mode 29
setting flash time 29
SMS 19
switching to touch tone dialling 29
Pack contents 5
Paging 2, 25
Pause times (PABX) 29
Phone jack assignment 5
Playing back
announcement (answering machine) . . 21
message (answering machine) 21
Playing back/deleting announcement
(answering machine) 21
Power consumption (base station) 32
Preselection 15
saving, changing entry 16

Q

Questions and answers 30
Quick dial 13

R

Recall key 1
Recording time (answering machine) 23
Registering (handset) 6, 24
Registration wizard (SMS) 17
Restoring default settings
base station 28
handset 28
Ringtone
changing 26, 28
setting melody 27
setting volume 11, 26
suppressing 27

S

Safety precautions 4
Screensaver 26
Searching
for handset 25
in directory 13
Sending
directory entry to handset 13
SMS 17
Service 31
Setting date 7
Setting flash time (PABX) 29
Setting melody (ringtone) 27
Setting time 7
Setting volume
earpiece 26
handset loudspeaker 26
loudspeaker 26
ringtone 26
Setting wake up time 28
Shortcut (digit combination) 8
Signal strength 1
SMS 17
deleting 18
draft message list 17
forwarding 19
incoming message list 18
reading 18
registration wizard 17
replying to and forwarding 19
self help with error messages 20
sending 17
storing number 19
to PABX 19
troubleshooting 20
writing 17
writing text 33
SMS Centre
changing number 19
setting 19
Snooze (alarm clock) 28
Special characters 33
Star key 1, 27
Suppressing
first ring 27

T

Talk key 1, 10
Technical data 32
Text message, see SMS
Touch tone dialling 29
Troubleshooting 30
SMS 20

U

Unknown 10
Unknown caller 10

V

Viewing network mailbox message 24
Volume
ringtone 26

W

Warning tone (battery) 27
Writing, editing text 33