Gigaset

SL780-SL785

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



Brief overview



Base



- 1 Display in idle status
- 2 Battery charge status (→ page 16)
- 3 Display keys (→ page 19)
- 4 Message key (→ page 35) Access to calls and message lists; Flashes: new message or new call

5 End call key, On/Off key End call cancel function go h

End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)

6 Hash key

Keypad lock on/off (press and hold in idle status);

toggles between upper/lower case and digits

- 7 Call-by-call list key (→ page 30) Open call-by-call list
- 8 Charging socket
- 9 Microphone
- 10 Recall key
 - Consultation call (flash)
 - Insert a dialling pause (press and hold)

11 Star key

Ring tone on/off (press and hold); with an open connection: switch between dial pulsing/touch tone dialling (press briefly); Text input: Open table of special characters

12 **Key** 1

Dial answering machine (SL785 only)/Network mailbox (press and hold)

13 Talk kev

Accept a call; open redial list (press briefly); start dialling (press and hold) When writing an SMS: send SMS

14 Speaker key


Switch between earpiece and speaker mode; Lights up: speaker activated; Flashes: incoming call

- 15 **Control key** (→ page 18)
- 16 Signal strength (→ page 16)
- 17 **Answering machine symbol** (SL785 only) Answering machine switched on;

Flashes: Answering machine is recording a message or is being operated by another internal party

Display symbols

The following symbols are displayed independently from the settings and the operating status of your telephone:

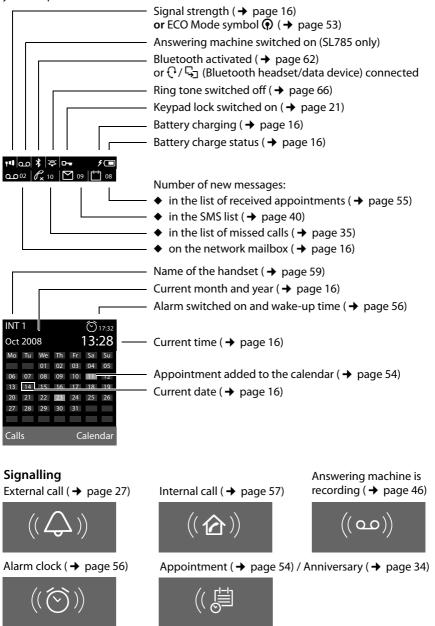

Contents

Brief overview	. 1
Display symbols	. 2
Safety precautions	. 6
Gigaset SL780/SL785 – more than just a telephone	. 7
First steps Check the pack contents Connecting the base Installing the base and charging cradle Setting up the handset for use Setting the date and time Connecting the USB data cable	9 10 . 11 . 14 . 16
What would you like to do next?	
Using the phone Control key Display keys Keys on the keypad Correcting incorrect entries Menu guidance Activating/deactivating the handset Activating/deactivating the keypad lock Illustration of operating steps in the user guide	. 18 . 19 . 19 . 20 . 21
Menu tree	24
Making calls Making an external call Ending a call Accepting a call Calling Line Identification Speaker talking Switch to mute	. 27 . 27 . 27 . 27
Making calls using network services	29
Using the directory and lists Directory/call-by-call list Redial list Incoming SMS message list Answering machine list (Gigaset SL785 only) Call lists Opening lists with the message key	34 34 34 34
Opening lists with the message key	. 33

Contents

Making cost-effective calls	
Linking call-by-call numbers with one number	
Automatic network provider code (preselection)	
SMS (text messages)	
Receiving an SMS	
SMS with vCard	
Notification by SMS	
SMS mailboxes	
Setting SMS centres	
Activating/deactivating first ring tone muting	
Activating/deactivating SMS function	
SMS troubleshooting	. 45
Operating the answering machine of the	
Gigaset SL785 base	
Operation via the handset	
Setting the recording parameters	
Resetting fast access for the answering machine using key 1	. 50
Operating when on the move (remote operation)	
Using the network mailbox	
Configuring fast access for the network mailbox	
ECO DECT	
Setting an appointment (calendar)	
Displaying missed appointments, anniversaries	
Setting the alarm clock	
Using several handsets	
Registering handsets	
De-registering handsets Locating a handset ("paging")	
Changing the base	
Making internal calls	. 57
Listening in to an external call	
Changing the name of a handset	
Using a handset as a room monitor	
Using Bluetooth devices	61

Handset settings	. 63
Quick access to functions and numbers	. 63
Changing the display language	. 64
Setting the display	
Activating/deactivating auto answer	
Changing the speaker/earpiece volume	
Changing ring tones	
Resource directory	
Activating/deactivating advisory tones	
Restoring the handset default settings	
Base settings	
Protecting against unauthorised access	
Activating/deactivating music on hold	
Repeater support	
, ,	
Connecting the base to the PABX	
Recall	
Saving an access code (outside line code)	
Setting pauses	
Customer service & product warranty – Australia and New Zealand	
Questions and answers	. 74
Environment	. 75
Appendix	. 76
Caring for your telephone	. 76
Contact with liquid	. 76
Specifications	
Writing and editing text	. 77
Additional functions via the PC interface	. 78
Accessories	. 80
Mounting the base to the wall	. 82
Index	83

Safety precautions

Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station.



Only use the **recommended**, **rechargeable batteries** (→ page 76) as this could otherwise result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the speaker function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base or charging cradle in bathrooms or shower rooms. The base and charging cradle are not splashproof (→ page 76).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user quide.



Please remove faulty bases from use or have them repaired by our Service, as they could interfere with other wireless services.

Please note

Not all of the functions described in this user guide are available in all countries.

Warning

This equipment will be rendered inoperable when main power fails.

Gigaset SL780/SL785 – more than just a telephone

Your telephone sets new standards for the way you communicate at home.

The configuration and user interface of the cordless phone are unique, providing you with first-class voice quality in speaker mode, while the various ports (Bluetooth, USB) offer you high flexibility.

The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

It can do a whole lot more:

- You can use Bluetooth™ for wireless communication with other devices (e.g. headsets) that also use this technology.
- Synchronise your address books on your telephone, mobile phone and PC with BluetoothTM or via the USB port using the Gigaset QuickSync software.
- You can save appointments and anniversaries in your phone and it will remind you of them in advance.
- You can designate important people as VIPs so you can identify important calls from the ring tone.
- If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient. VIP calls will still be connected.
- You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key.
- Gigaset Green Home Be environmentally aware when using your phone.
 For more information, see www.gigaset.com/service.

You can find additional information on your telephone at www.qiqaset.com/qiqasets178h.

Have fun using your new phone!

First steps

Check the pack contents



- 1 one Gigaset SL780/SL785 base
- 2 one base cover stand
- 3 one mains adapter for the base
- 4 one Gigaset SL78H handset
- 5 one battery
- 6 one battery cover
- 7 one belt clip
- 8 one charging cradle with mains adapter
- 9 one phone cord
- 10 one user guide

8

Connecting the base

 Connect the mains adapter 1 and phone jack 2 to the base and place the cables in the cable recesses.





 Place the cover in the notches on the back of the base and click into place (not if mounting on the wall).

- ► First connect the phone jack 4.
- ▶ Then connect the mains adapter 3.



Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 77).

Installing the base and charging cradle

The base and charging cradle are designed for use in enclosed dry rooms with a temperature range of $+5^{\circ}$ C to $+45^{\circ}$ C.

Install the base on a level, non-slip surface in a central location in your house or flat or mount the base on the wall → page 82.

Please note

Pay attention to the range of the base. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings.

The range is reduced when Eco Mode (→ page 53) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Setting up the handset for use

The display and keypad are protected by a plastic film. Please remove the protective film!

Inserting the battery and closing the battery cover

Warning

Use only the rechargeable batteries (→ page 76) recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- First insert the battery at the top (a).
- ▶ Then press the battery downwards ⓑ until it clicks into place.





- First, align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- ► Then press the cover until it clicks into place.

First steps

If you need to **reopen the battery cover** to connect the USB data cable or change the battery:

- Remove the belt clip (if attached).
- Place your fingernail into the notch at the bottom of the casing and pull the battery cover upwards.



To **change the battery**, place your fingernail in the cavity in the casing and pull the battery upwards.



Attaching/removing the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ To attach press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ To remove using your right thumb apply pressure to the centre right of the belt clip, push the fingernail of your left index finger between the clip and the casing and lift the clip upwards.



Placing the handset in the charging cradle

- ▶ Insert the mains adapter of the charging cradle into the mains socket.
- ▶ Place the handset in the charging cradle with its **display facing forward**.

The handset is registered with the base at the factory. You do not need to complete a registration. If you wish to use your handset with a different base or use further handsets with your base, you will have to register the handset manually page 56.

To charge the battery, leave the handset in the charging cradle.

Please note

Only place the handset in the charging cradle that is intended for it.

First battery charge and discharge

The correct charge status can only be displayed if the battery is first fully charged and discharged.



Place the handset in the charging cradle for six hours.


> Once the battery is fully charged, remove the handset from the charging cradle and do not put it back again until the battery is fully discharged.

Please note


- ◆ After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.
- Always repeat the charging and discharging procedure if you remove the battery from the handset and reinsert it.
- ◆ The battery may heat up during charging. This is not dangerous.
- After a time, the charge capacity of the battery will decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm and the calendar can be used.

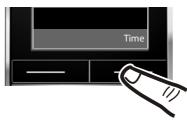

Press the key below Time on the display screen to open the input field.
 (If you have already set the time and date, open the input field via the menu → page 26.)

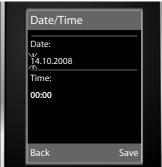

The **Date/Time** submenu is shown on the display.



Press the **right** or **left** control key to change the input position and correct an entry.






Press down on the control key to switch to the time input field.

► Enter the hours and minutes as four digit numbers via the keypad, e.g. ☐ + ☐ POPE ☐ 1 CO ☐ 5 PU for O7:15 am.

Change the input position with the control key if necessary.



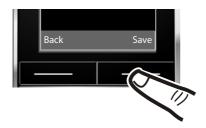

▶ Press the key below Save on the display screen to confirm your entry.



The display shows **Saved**. You will hear a confirmation tone.



▶ Press the key below Back on the display screen to return to idle status.

Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example. If the answering machine is activated, the answering machine icon awill be displayed in the header.

The following is displayed after successful registration:

- the strength of the reception signal between base and handset:
 - good to poor: ↑■■ ↑■ ↑
 - no reception: 🤄
- battery charge status:

outside the charger

- white: charged over 66 %
- white: charged between 33 % and 66 %
- white or red*: charged under 33 %
- If lashes red: battery almost empty (less than 10 minutes talktime)

in the charger

- **f f f f m f m** white: battery is charging
- *red: older firmware version, please update the handset's firmware (> page 78)

Your answering machine is set with a pre-recorded announcement.

Please note

- ◆ The range icon is only displayed in idle status if Eco Mode+ (→ page 53) is deactivated.
- The display of the calendar in idle status can be activated or deactivated (→ page 54).

Your phone is now ready for use!

Connecting the USB data cable

You can connect a standard USB data cable with a mini-B connector to the back of your handset to connect the handset to a PC. To use this function, the **Gigaset QuickSync** software must be installed (→ page 78).

- Remove the belt clip (if attached)(→ page 12).
- ▶ Remove the battery cover (→ page 12).
- ▶ Connect the USB data cable to USB socket 1.



مه 📭

INT 1


Oct 2008

Calendar

What would you like to do next?

Now you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.

If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone" \rightarrow page 18.

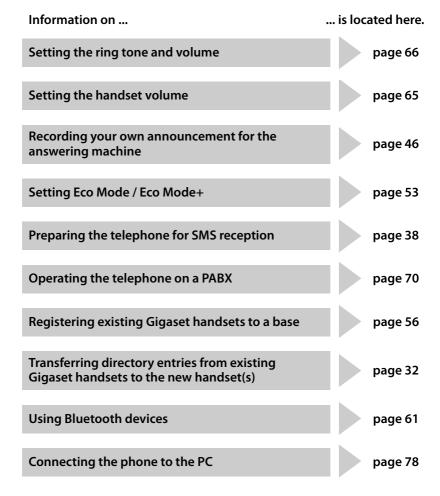

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 74) or contact our Customer Care team (→ page 72).

Using the phone

Control key

The control key has a number of different functions. The sides of the control key that you must press for different operating situations,(top, bottom, right, left, centre), are marked with a black triangle as indicated in the diagrams below, e.g. for "press right on the control key" or for "press the centre of



When the handset is in idle status

- Open the directory.
- Open the main menu.
- Open the list of handsets.
- Menu for setting the handset's call volume (→ page 65).

In the main menu, in submenus and lists

Scroll up/down line by line.

In input fields

the control kev".

You can use the control key to move the cursor up (1), down (1), right (1) or left (1). Press and hold (1) or (1) to move the cursor word by word.

During an external call

- Open the directory.
- Initiate an internal consultation call.
- Adjust the loudspeaker volume for earpiece and speaker mode.

Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.


- ◆ In idle status the key opens the main menu.
- ◆ In submenus, selection and input fields the key takes on the function of the display keys OK, Yes, Save or Change.

Please note

In these instructions functions are explained using the right control key and the display keys. However, if you prefer, you can use the control key as described above.

Display keys

The function of the display keys changes depending on the particular operating situation. Example:



Some important display keys:

Options Open a context-dependent menu.

OK Confirm selection.

C Delete key: Delete character/word by word from right to left.

Back Go back one menu level or cancel operation.

Save Store entry.

→→ Open the redial list.

Keys on the keypad

□ / □ + / * 4 etc.

Press the matching key on the handset.

Pi

Enter digits or letters.

Correcting incorrect entries

You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** to the left of the cursor with the display key < C (press and **hold** to delete the **word**)
- Insert characters to the left of the cursor.
- Overwrite the highlighted (flashing) character, e.g. when entering time and date.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

▶ When the handset is in idle status press the **right** → control key to open the main menu.

The main menu functions are shown in the display with icons. The selected function is marked by an orange circle around the symbol and the corresponding name is shown in the display header.

To access a function, i.e. to open the corresponding submenu (next menu level):

▶ Use the control key to select the required function and press the display key K.

Briefly press the display key Back or the end call key to revert back to idle status.



Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:

Scroll to the function with the control key and press OK.

Briefly press the display key Back or the end call key or the end call key to return to the previous menu level/cancel the operation.



Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

Or:

▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display key OK, Yes, Save or Change will be lost

An example of the display in idle status is shown on page 16.

Activating/deactivating the handset

With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

Press and **hold** the end call key again to switch the handset on.

Please note

When the handset is switched on, an animation of a clock will be displayed for several seconds.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated you will see the $\Box \blacksquare$ icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

Illustration of operating steps in the user guide

The operating steps are shown in abbreviated form.

Example:

The illustration:

→ Settings → Telephony → Auto Answer (☑ = on)

means:



▶ Press **right** on the control key to open the main menu.



 Use the right, left, down and up control key to navigate to the Settings submenu.

Press the display key OK to confirm your selection.



▶ Press down on the control key until the **Telephony** menu appears on the display.

 Press the display key OK to confirm your selection.



The **Auto Answer** function has already been selected.

▶ Press the display key Change to activate/deactivate the function.



Changes are effective immediately and do not have to be confirmed.

Press the key below Back on the display to jump back to the previous menu level.

or

Press and **hold** the end call key **to** return to idle status.

Menu tree


With the telephone in idle status, press (open main menu):

Select Services

* Bluetooth

Activation	→	page 62
Search for Headset	→	page 62
Search for DataDevice	→	page 62
Known Devices	→	page 62
Own Device	→	page 63

Additional Features



€ Call Lists

All Calls	→	page 34
Outgoing Calls	→	page 34
Accepted Calls	→	page 34
Missed Calls	→	page 34



SMS


You have activated an SMS mailbox (general or private) without a PIN

New SMS	→ page 38
Incoming	→ page 41
Draft	→ page 39

You have activated an SMS mailbox with a PIN or 2-3 mailboxes

Mailbox	New SMS	→ page 38
	Incoming	→ page 41
	Draft	→ page 39
Mailbox 1	New SMS	→ page 38
Mailbox 2 Mailbox 3	Incoming	→ page 41
Wallbox 3	Draft	→ page 39
Settings	Service Centres	→ page 44
	SMS Mailboxes	→ page 42
	Notification	→ page 42
	Status Report	→ page 39

Answering Machine

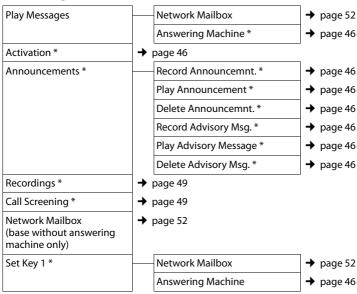


^{*}Only base with answering machine

Menu tree

Organizer Calendar Alarm Clock Missed Alarms → page 54 → page 56 → page 55 → page 30

Settings

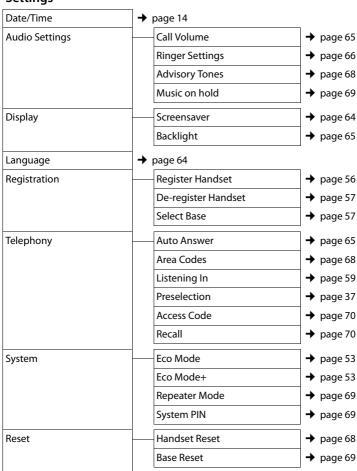

Making calls

If the backlight is deactivated (→ page 65) it is switched on by pressing any key. In this case the pressed key has no other function.

Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

Or:



Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key [].

You are shown the duration of the call while the call is in progress.

Please note

Dialling using the directory, the call-by-call list (page 1, page 30) or the calls and redial list (page 34/page 34) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

Continuing a call on a Bluetooth headset

Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 62).

Press the talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.

For further details about your headset, see the user guide issued with it.

Ending a call

0

Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing speaker key <

You can accept the call by:

- ▶ Pressing the talk key = .
- Pressing the speaker key <a>
 •
- ► Gigaset SL780: Press the display key
- ► Gigaset SL785: Press the display key → aD to divert the call to the answering machine (→ page 48).

If the handset is in the charging cradle and the **Auto Answer** function is activated (→ page 65), the handset will take a call automatically when you lift it out of the cradle.

To deactivate the ring tone, press the Silence display key. You can take the call as long as it is displayed on the screen.

Accepting a call on a Bluetooth headset

Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 62).

Only press the talk key on the headset when the headset rings; it can take up to 5 seconds.

For further details about your headset, see the user guide issued with it.

Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CLIP, CLI.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.


Making calls

- ◆ You have arranged CLIP with your network provider.
- ◆ The caller has requested CLI from the network provider.


Call display with CLIP/CLI

If the caller's number is saved in your directory, the caller's name will be displayed. If you have assigned a CLIP picture

(→ page 31) to the caller, this will be shown in the upper section of the display.

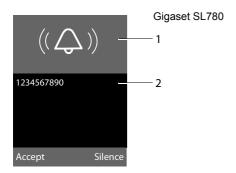

or

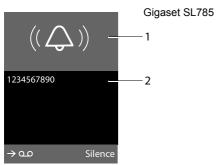

- 1 Ring tone icon or CLIP picture
- 2 Number or name of caller

The following is displayed in place of the number:


- External, if no number is transmitted.
- ◆ Unavailable, if the caller has not arranged Calling Line Identification.

Speaker talking

In speaker mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating speaker mode

Activating while dialling



You should inform your caller before you use the speaker function so that they know someone else is listening.

Switching between earpiece and speaker mode

Press the speaker key.

During a call and when listening to the answering machine (Gigaset SL785 only), activate or deactivate speaker mode.

If you wish to place the handset in the charging cradle during a call:

▶ Press and hold the speaker key <a>
■ while placing the handset in the base. If speaker key does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume, → page 65.

Switch to mute

You can deactivate the microphone in your handset during an external call.

Mute Press the display key to mute the handset. The display shows Microphone is off.

Mute off Press the display key to reactivate the microphone.

Making calls using network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- It is not possible to reprogram the network services.
- ▶ If you require assistance, please contact your network provider.

Using the directory and lists

The options are:

- Directory
- ◆ Call-by-call list
- ◆ Redial list
- Incoming SMS message list
- Call lists
- List of missed appointments
- Answering machine list (Gigaset SL785 only)

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (→ page 32).

Directory/call-by-call list

You can save a total of 500 entries in the directory and call-by-call list.

Please note —

For quick access to a number from the directory or the call-by-call list (using quick dial keys), you can assign the number to a key (→ page 63).

Directory

In the directory, you can save

- Up to three numbers and associated first names and surnames
- E-mail address
- ◆ Anniversaries with reminder
- ◆ VIP ring tone with VIP symbol
- ◆ CLIP pictures

Length of the entries

3 numbers: each max. 32 digits First name and surname:

each max. 16 characters

E-mail address: max. 60 characters

Call-by-call list

The call-by-call list is used to store the access codes for network providers ("Call-by-call numbers").

▶ Open the call-by-call list in idle status by pressing the → key.

Length of the entries

Number: max. 32 digits
Name: max. 16 characters

Storing a number in the directory

→ New Entry

▶ Change multiple line input:

First Name: / Surname:

Enter the first and/or surname. If you do not enter a name in either of the fields, the phone number is also saved and displayed in place of a surname. (For instructions on how to enter text and special characters, please see

→ page 77.)

Phone (Home): / Phone (Office): / Phone (Mobile):

Enter a number in at least one of the fields. When scrolling through the directory, the entries are highlighted by a prefixed symbol: 介/阿/ 何.

E-Mail:

Enter e-mail address.

Anniversary:

Select On or Off.

With setting On:

Enter Anniversary (Date) and Anniversary (Time) Anniversary (Signal) and select reminder type → page 33.

Caller Melody (VIP):

Mark a directory entry as a **VIP** (Very Important Person) by assigning a specific ring tone to it. VIP calls are recognised by the ring tone.

When scrolling through the directory, VIP entries are highlighted by the symbol.

Precondition: Calling Line Identification (→ page 27).

Caller Picture:

If required, select a picture to be displayed when the caller calls (see Resource directory, page 67).

Precondition: Calling Line Identification (CLIP).

Save

Press the display key.

Storing a number in the call-by-call list

→ New Entry

▶ Change multiple line input:

Name:

Enter name.

Number:

Enter the number.

Save

Press the display key.

Order of directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:

- 1. Space
- 2. Digits (0-9)
- 3. Letters (alphabetical)
- 4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

Selecting entries in the directory and call-by-call list

Open the directory or call-bycall list.

You have the following options:

- ◆ Use to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name (max. 8). if necessary scroll to the entry with the key.

The directory searches for the surname. If a surname has not been added, then it will search for the first name.

Dialling with the directory/ call-by-call list





Press the talk key. The number is dialled.

Managing directory/call-by-call entries

Viewing entries

→ (Select entry).

View

Press the display key. The entry is displayed.

Options

Press the display key.

The following functions can be selected with **(**:

Display Number

To edit or add to a saved number, or to save it as a new entry, press → III after the number is displayed.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 32).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

Editing entries

View Edit Press the display keys one after the other.

▶ Carry out changes and save.

Using other functions

✓ → ✓ (Select entry)→ Options (Open menu)

The following functions can be selected with :

Display Number

Save or modify a saved number and then dial with __ or save as a new entry; to do so, press > _ after the number appears on the display.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 32).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

Delete All

Delete **all** entries in the directory/call-by-call list.

Copy All

to Internal: Send the complete list to a handset (→ page 32).

vCard via Bluetooth: Send the complete list in vCard format via Bluetooth.

Available Memory

Display the available entries in the directory and call-by-call list (→ page 30).


Using quick dial keys

Press and hold the required quick dial key
 (→ page 63).

Sending the directory/call-by-call list to another handset

Preconditions:

- The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.
- → Options (Open menu) → Copy Entry /
- → Options (Open menu) → Copy Entry / Copy All → to Internal



You can transfer several individual entries one after the other by responding Yes to the Entry copied - Copy next entry? prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

- Entries with identical numbers are not overwritten on the receiving handset.
- The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- Entered anniversary reminders, pictures and sounds are not sent.

Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (→ page 62), you can transfer directory entries in vCard format, e.g. to exchange entries with your mobile phone.

The list of "Known Devices" (→ page 62) is displayed.

Select device and press OK.

Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (→ page 62) sends a vCard to your handset, this occurs automatically. You are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:



Enter the PIN for the **sending**Bluetooth device and press OK.

The transferred vCard is available as a directory entry.

Copying a displayed number to the directory

You can copy numbers displayed in a list, e.g. the call list or the redial list, or in an SMS to the directory.

A number is displayed:



▶ Complete the entry → page 30.

Gigaset SL785: The message playback is interrupted during the number transfer from the answering machine list.

Copying a number or e-mail address from the directory

In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

Depending on the operating situation, open the directory with or → ...



Select entry (→ page 31).

Saving an anniversary in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

Anniversaries are automatically recorded in the calendar (→ page 54).

View Edit Press the display keys one after the other.

Scroll to the Anniversary line.

Select **On**.

▶ Change multiple line input:

Anniversary (Date)

Enter day/month/year in 8-digit format.

Anniversary (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Anniversary (Signal)

Select the type of signal for the reminder.

Save Press the display key.

Please note

A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

Deactivating anniversaries

View Edit Press the display keys one after the other.

Scroll to the Anniversary line.

Select **Off**.

Save Press the display key.

Reminder call on an anniversary

In idle status, a reminder call is shown in the display of the handset (→ page 2) and signalled with the selected ring tone.

You can:

SMS Write an SMS.

Off Press the display key to

acknowledge and end the

reminder call.

When you are on the phone a reminder call is indicated on the handset with a **single** advisory tone.

Anniversaries that are indicated during a call and that are elapsed, are entered in the **Missed Alarms** list (**→** page 55).

Redial list

The redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the directory or the call-by-call list, then the appropriate name will be displayed.

Manual last number redial

Press the key **briefly**.

Select entry.

Press the talk key again.
The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key View.

Managing entries in the redial list

Press the key briefly.

Select entry.
Options
Open menu.

The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 30).

Display Number (as in the directory, page 32)

Delete Entry (as in the directory, page 32) **Delete All** (as in the directory, page 32)

Incoming SMS message list

All received SMS messages are saved in the incoming message list → page 40.

Answering machine list (Gigaset SL785 only)

You can use the **answering machine list** to listen to the messages that are on the answering machine.

Call lists

Precondition: Calling Line Identification (CLIP, page 27)

Your telephone stores various types of calls:

- Answered calls
- ◆ Outgoing calls
- ◆ Missed calls
- Calls recorded by the answering machine (Gigaset SL785 only)

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.

When in idle status, open the call lists by selecting the Calls display key or via the menu:



List entry

New messages are displayed at the top. Example of list entries:



- List type (in header)
- Status of entryBold: New entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 14)
- ◆ Type of entry:
 - Accepted calls (
 - Missed calls (€)
 - Outgoing calls (€,)
 - Calls recorded by the answering machine (o_o, Gigaset SL785 only)

Press the talk key 😑 to call the selected caller back.

Select the View display key to access additional information, including for example the number linked to the name

Select the Options display key to select the following options:

Copy to Directory

Copying a displayed number to the directory.

Delete Entry

Delete selected entry.

Delete All

Delete all entries.

When you quit the call lists, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

Opening lists with the message key

You can use the message key to open the following list selection:

- Answering machine list (Gigaset SL785 only) or network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (→ page 52).
- Incoming SMS message list (→ page 40)
 If several mailboxes are set up
 - (→ page 42), several lists are displayed.
- List of missed calls
- ◆ List of missed appointments
 - (→ page 55)

An advisory tone sounds as soon as a **new message** arrives in a list. The key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

lcon	New message
مه	in the answering machine list (Gigaset SL785 only) or on the network mailbox
\mathscr{C}_{x}	in the missed call list
\boxtimes	in the SMS list
[]	in the Missed Alarms list

The number of new entries is displayed to the right of the corresponding icon.



Please note -

If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

List selection

The lists displayed after pressing the message key depend on whether there are any new messages.

- ♦ 💌 key does not flash (no new messages): All the lists containing messages and the network mailbox list are displayed.
- received): You see all the lists containing **new** messages. If only one list contains new messages, this will be opened automatically.

Lists containing new messages are at the top of the list and are marked in a bold font.



Select a list with . To open, press OK.

Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

Linking call-by-call numbers with one number

You can insert the dialling code of a network provider ahead of the number ("linking").

...

Open call-by-call list.

Select entry (call-by-call

number).

Options

Press the display key.

Display Number

Select and press OK.



Enter number or select number from the directory (\rightarrow page 33).



Press the talk key. Both numbers

are dialled.

Automatic network provider code (preselection)

You can store a call-by-call number (preselection number), which is automatically placed in front of numbers when you dial them.

In the "With Preselection" list, specify the dialling codes or the first digits of the dialling codes with which you wish the preselection number to be used.

In the "Without Preselection" list enter the exception to the "With Preselection" list.

Example:

Preselection Number	0999
With Preselection	08
Without Preselection	081 084

All numbers that start with 08 except for 081 and 084, are dialled with the preselection number 0999.

Phone number		Dialled number
07112345678	→	07112345678
08 912345678	→	0999 08912345678
084 12345678	→	08412345678

Saving preselection numbers

→ Preselection Number

→ Preselection Number

75

Enter or change the preselection number (call-by-call number).

Save

Press the display key.

Save or change entries in the preselection lists

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "with preselection" list. This means, for example, that all national calls or calls to the mobile network are automatically linked to the preselection number you have saved previously.

→ → → Telephony → Preselection → With Preselection / Without Preselection

Select entry.



Enter or edit first digits of

number.

Save

Press the display key.

Temporarily cancelling preselection

☐ (press and hold) → Options
→ Preselection off → (Select number)

Permanently deactivating preselection

→ Preselection Number

→ Preselection Number

< C

Press and hold the display key until the preselection number is deleted.

Save

Press the display key.

SMS (text messages)

Your phone is supplied ready for sending SMS messages immediately.

Preconditions:

- Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS on the fixed line network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.
- ◆ To have reception you must be registered with your service provider. This is completed automatically when you send your first SMS.

Please note

If your phone is connected to a PABX, please read → page 44.

Writing/sending an SMS

Writing an SMS



Mailbox 2 Select mailbox if necessary and

press OK.

Enter mailbox PIN if necessary and press OK.

New SMS Select and press OK.

Write an SMS.

Please note

- For instructions on how to enter text and special characters, please see → page 77.
- ◆ An SMS may contain up to 612 characters. If there are more than 160 characters, the SMS is sent as a linked SMS (up to 4 SMS messages with 153 characters each). The top right of the display shows how many characters are still available and which part of a linked SMS is currently being written.

Sending an SMS

_ Press the talk key

Or:

SMS

Options Press the display key.

Send Select and press OK.

Select and press OK.

Select number with area code (even if you are in that area) from the directory or call-by-call list, or enter number directly. For sending SMS to an SMS mailbox: add the mailbox ID to the end of the number.

Send Press the display key. The SMS is

Please note -

- ◆ If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- ◆ If the memory is full, or if the SMS function on the base is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or wish to send later.

Setting input language

▶ You are writing an SMS.

Options Press the display key.

Select Language

Select and press OK. The current language is indicated by

Select the input language and press Select.

SMS status report

Precondition: Your network provider supports this feature.

If you have activated the status report, you will receive an SMS with a confirmation message after sending.

Activating/deactivating a status report

→ Settings

Status Report

Select and press Change (M = on).

Reading/deleting status report/saving number to directory

Popen the incoming message list (→ page 40) and then:

Select SMS with **State OK** or **State not OK** status.

Read Press the display key.

◆ Delete:

Options → Delete Entry → OK.

◆ Copy to directory:

Options → Copy to Directory → OK.

◆ Delete entire list:

Options → Delete All → OK.

Draft message list

You can save an SMS in the draft message list, and edit and send it later.

Saving an SMS in the draft message list

Writing an SMS (→ page 38).


Options Press the display key.

Save Select and press OK.

Opening the draft message list

→ M → if necessary (Mailbox, mailbox PIN) → **Draft**

The first list entry is displayed, e.g.



The number will be displayed in the first line, if the entry has been saved with the phone number, i.e. when the SMS was saved from the incoming message list.

Reading or deleting SMS messages

▶ Open the draft message list and then:

Select SMS.

Read Press the display key. The entry

will be displayed. Scroll line by

line using 🖨 .

Or delete the SMS with

Options → Delete Entry → OK.

Writing/changing an SMS

You are reading an SMS in the draft message list.

Options Open menu.

You have the following options:

Send

Send stored SMS.

Edit

Edit the text of the saved SMS and then send it (→ page 38).

Character Set

Display text in the selected character set.

Deleting draft message list

▶ Open the draft message list and then:


Options Open menu.

Delete All Select, press **OK** and confirm with Yes. The list is cleared.

Sending SMS messages to an e-mail address

If your service provider supports the **SMS as e-mail** feature, you can also send your SMS messages to e-mail addresses.

The e-mail address must be at the beginning of the text. You must send the SMS to the e-mail service of your SMS send centre.





Load the e-mail address from the directory or enter it directly. End the entry with a space or colon (depending on the service provider).

Enter the SMS text.

Options Press the display key.

Send Select and press OK.

E-mail Select and press OK. If the

number of the e-mail service is not entered (→ page 43), enter the number of the e-mail serv-

ice.

Send Press the display key.

Sending SMS messages as a fax

You can also send an SMS to a fax machine. **Precondition**: Your network provider supports this feature.

▶ Writing an SMS (→ page 38).

Options Press the display key.

Send Select and press OK.

Fax Select and press OK.

Select number from the directory or enter directly. Enter the number with area code (even if you are in the same area).

Send Press the display key.

Receiving an SMS

All received SMS messages are saved in the incoming message list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should regularly delete SMS messages from the list.

The display tells you if the SMS memory is full.

Please note

Each incoming SMS is signalled by a single ring (ring tone as for external calls). If you accept such a "call", the SMS will be lost. To prevent this ring, mute the first ring tone for all external calls (→ page 44).

Incoming message list

The incoming message list contains:

- All received SMS messages, starting with the most recent.
- SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset SL78H handsets by the ☑ icon in the display, the flashing message key ☐ and an advisory tone.

Opening the incoming message list with the key

Press.

The incoming message list is indicated by the mailbox name and the number of entries (example):



bold: new entries **normal font:** read entries

If necessary select a mailbox and open list by selecting OK (if necessary enter mailbox PIN and confirm by pressing OK).

The number and date of receipt are displayed in the entry list.



Opening the incoming message list via the SMS menu

→ M → if necessary select mailbox, enter mailbox PIN) → Incoming

Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.

▶ Open the incoming message list.

Options Open menu.

Delete All Select, press OK and confirm with Yes. The list is cleared.

Reading or deleting SMS messages

▶ Open the incoming message list, then:

Select SMS.

Press the display key. The entry will be displayed. Scroll line by line using 🜓.

Or delete the SMS with

Options → Delete Entry → OK.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

Changing the character set

▶ Reading an SMS

Options Press the display key.

Character Set

Text is shown in the selected character set.

Replying to or forwarding text messages

▶ Reading an SMS

Options Press the display key.

You have the following options:

Reply

Write and send a new SMS in reply to the sender (→ page 38).

Edit

Edit the text in the SMS and return it to the sender (→ page 38).

Forward

Forward the SMS to another number (→ page 38).

Copy number in the directory

Copying the sender's number

Proper the incoming message list and select entry (→ page 40).

Options → Copy to Directory

➤ Complete the entry → page 33.

Please note

An attached mailbox identifier is added to the directory.

Copying/dialling numbers from an SMS text

Read the SMS and scroll to the telephone number.

The digits are highlighted.

→Ⅲ Press the display key.

Complete the entry \rightarrow page 33.

Or:

Press the talk key to dial the number.

If you wish to use the number to send an SMS:

Save the number with the local area code (dialling code) in the directory.

SMS with vCard

The vCard is an electronic business card. It is displayed by the symbol in the body of the SMS.

A vCard can include:

- Name
- Private number
- Business number
- Mobile phone number
- **♦** Birthday

Entries in a vCard can individually be saved to the directory one after the other.

Opening the vCard

▶ Read the SMS containing the vCard.

View Press the display key.

To return to the body of the

SMS, press Back.

Save Press the display key.

When you save a number, the directory is opened automatically. The number and name are copied. If a birthday is entered on the vCard, the date is copied to the directory as an anniversary.

If necessary, edit the entry in the directory and save it. You will return to the vCard automatically.

Notification by SMS

You can be notified about missed calls or new answering machine messages (Gigaset SL785 only) via SMS.

Precondition: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to save the telephone number to which you wish the message to be sent.

→ Settings → Notification

▶ Change multiple line input:

To:

Enter the number to which the SMS should be sent.

On Missed Call:

Select **On** if you require SMS notification.

On Msg. on Answering Machine:

(Gigaset SL785 only)

Select **On** if you require SMS notification.

Save

Press the display key.

Warning

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

Please note:

- If you operate a number of devices (bases) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (*) to the number of a (preset) SMS centre.
- If you have forgotten your mailbox PIN, you can reset it by restoring the default settings of the base. This will delete all SMS messages from all mailboxes.

Setting up and changing a personal mailbox

Setting up a personal mailbox

→ Settings → SMS Mailboxes

Select mailbox, e.g. Mailbox 2 and press Edit.

▶ Change multiple line input:

Activation:

Activate or deactivate mailbox.

Name:

Enter name.

Box ID:

Select mailbox ID (0–9). You can only select the available numbers.

Protection:

Activate/deactivate PIN protection.

SMS PIN:

If necessary, enter 4-digit PIN.

Save Press the display key.

Active mailboxes are marked with ✓ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key ■.

Deactivating a mailbox

Set Activation to Off. Confirm message with Yes if necessary.

All SMS messages saved in this mailbox will be deleted.

Deactivating PIN protection

Set Protection to Off.

The mailbox PIN is reset to "0000".

Changing the name of a mailbox

→ Settings → SMS Mailboxes

→ (Select mailbox)

Edit Press the display key.

Enter new name.
Save Press the display key.

Changing a mailbox's PIN and ID

→ Settings → SMS Mailboxes

→ (Select mailbox)

Enter mailbox PIN if necessary and press OK.

Set Box ID, Protection and SMS PIN
 (→ page 43).

Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centres


SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.

Your SMS messages are sent via the SMS centre that is entered as the active send service centre. However, you can activate any other SMS centre as the active send service centre to send a current message (→ page 44).

If no SMS service centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (→ page 43).

Entering/changing SMS centres

 You should find out about the services and special functions offered by your service provider before you make a new application and/or before you delete pre-configured call numbers.





Select SMS centre (e.g. **Service Centr.** 1) and press **OK**.

▶ Change multiple line input:

Active Send:

Select Yes if SMS messages are to be sent via the SMS centre. For the SMS centres 2 to 4, the setting only applies to the next SMS.

SMS:

Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

E-mail:

Enter the number of the e-mail service.

Save

Press the display key.

Please note

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (precondition: your service provider supports this function).

Sending an SMS via another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- Send the SMS.

This setting only applies to the next SMS to be sent. After that, the setting returns to **Service Centr. 1**.

SMS on a PABX

- You can only receive an SMS when the Calling Line Identification is forwarded to the extension of the PABX (CLIP). The CLIP evaluation of the phone number for the SMS centre takes place in your Gigaset.
- Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre.
 If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.
- When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS messages on ISDN PABXs is only possible via the MSN number assigned to your base.

Activating/deactivating first ring tone muting

Mute the first ring.

1 º OK

Activating/deactivating SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings you have made for sending and receiving SMS messages (e.g. the numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after deactivation.

Open the main menu.

* ^ + 1 - + 5 | | - + 2 | 2 | mro 5 |

Enter the digits.

Deactivate SMS function.

Or:

OK Activate SMS function (default setting).

SMS troubleshooting

Error codes when sending

Calling Line Identification permanently with-held (CLIR) or Calling Line Identification not activated.

FE Error occurred during SMS transfer.

FD Connection to SMS centre failed; see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.

- You have not requested the CLIP service (Calling Line Identification Presentation).
 - Ask your service provider to enable this service.
- 2. SMS transmission has been interrupted (e.g. by a call).
 - Re-send the SMS.
- The network provider does not support this feature.

- No number or an invalid number is entered for the SMS centre set as the active send service centre.
 - ► Enter the number (→ page 43).

You receive an incomplete SMS.

- 1. Your phone's memory is full.
 - ▶ Delete old SMS messages (→ page 39).
- 2. The service provider has not yet sent the rest of the SMS.

You have stopped receiving SMS messages.

- 1. You have changed the ID of your mailbox.
 - ▶ Give your SMS contacts your new ID or undo the change (→ page 43).
- 2. You have not activated your mailbox.
 - ➤ Activate your mailbox (→ page 43).

The SMS is played back.

- The "display call number" service is not activated.
 - Ask your service provider to activate this function (chargeable).
- Your mobile phone operator and your fixed line network SMS service provider have not agreed on a co-operation.
 - Obtain information from your fixed line network SMS service provider.
- Your terminal has been recorded by your SMS provider as having no fixed line network SMS functionality, i.e. you are not registered with the provider.
 - ► Send any SMS to automatically register your telephone to receive SMS.

Messages are only received during the day.

The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are not registered with the provider.

- Obtain information from your fixed line network SMS service provider.
- Send any SMS to automatically register your telephone to receive SMS.

Operating the answering machine of the Gigaset SL785 base

You can access the answering machine via the handset or by remote operation (from another telephone/mobile phone). You can record your own announcement message or advisory message via the handset.

Answering machine mode

You can use the answering machine in two different modes.

- In Answer & Record mode, the caller hears the announcement and can then leave a message.
- In Answer only mode, the caller hears your announcement but cannot leave a message.

Operation via the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the speaker key

Activating/deactivating and setting the answering machine mode

You can choose between **Answer & Record**, **Answer only** and **Alternating**. By using the **Alternating** setting you can activate the answer and record mode for a set period, outside this period the caller will hear the advisory message.

 \rightarrow **Activation** (\checkmark = on)

Edit Press the display key.

▶ Change multiple line input:

Activation:

Select **On** or **Off** to activate/deactivate the answering machine.

Mode:

Select **Answer & Record**, **Answer only** or **Alternating**.

If the Alternating mode is selected:

Record from:

Enter hours/minutes for the start of the period in 4-digit format. (The time **must** be set on the phone

beforehand.)

Record until:

Enter hours/minutes for the end of the period in 4-digit format.

Save Press the display key.

When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set an appropriate announcement is made (Set time → page 14). The Q_O icon appears in the display.

The phone is supplied with pre-recorded announcements for answer and record mode and for answer only mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

If the messages memory is full and Activation: On has been selected, saving is interrupted and you will receive an instruction to delete old messages.

Recording a personal announcement/advisory message

→ Announcements

→ Record Announcemnt. / Record Advisory Msg.

OK Press the display key to start the recording.

You hear the ready tone (short tone).

► Now speak your announcement (at least 3 secs.).

Press the display key to end the recording.

Cancel recording with or Back. Restart the recording with oK.

After recording, the announcement is played back for you to check. You can rerecord the announcement with New.

Please note:

- Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- If you cancel the recording, the prerecorded announcement will be used again.
- If the answering machine's memory is full, it will switch to Answer only mode.
 - Delete old messages and the answering machine will automatically switch back to Answer & Record mode.
 Repeat recording if required.

Playing back announcements

If you have not recorded a personal announcement, the relevant pre-recorded announcement is played.

Record a new announcement while playing back the announcement:

New Press the display key.

If the answering machine's memory is full, it will switch to **Answer only** mode.

 Delete old messages and the answering machine will automatically switch back to Answer & Record mode. Repeat recording if required.

Deleting announcements/advisory messages

Yes Press the display key to confirm the prompt.

Once you have deleted your announcement, the relevant pre-recorded announcement will be used again.

Playing back messages

The date and time of each message is logged (provided this has been set, → page 14) and displayed during the playback. If Calling Line Identification is activated, the caller's number is displayed. If the caller's number is saved in the directory, their name is displayed.

Playing back new messages

New messages that have not yet been played back are indicated by the QQ symbol in the second display line and by the key flashing on the handset.

Press the message key.

Answer. Machine:

Select and press OK.

If there are new messages, playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time, you will hear an appropriate announcement before playback begins.

Playing back old messages

You can listen to old message if there are no more new messages. Begin playback as described under "Playing back new messages".

After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".

Stopping and controlling playback

again to resume.

During message playback:

2 abc

Pause playback. Press 2 abc

or

Options

Open menu.

Pause

Select and press OK.

To continue select Continue and press OK.

(**^** or 1 ∞

Go to the start of the current message.

Press twice to go back to the previous message.

or def ∃

Skip to next message.

Press twice to skip to the next but one message.

If playback is interrupted for over a minute, the answering machine returns to idle status.

Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

During message playback:

***** 4 Or:

Options

Press the star key.

Open menu.

Mark as New

Select and press OK.

An announcement informs you of the message's new status.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The key on the handset flashes.

Copying the phone number of a message to the directory

During playback or pause:

Options → Copy to Directory

▶ Complete the entry → page 33.

Deleting messages

You can either delete all old messages together or individually.

Deleting all old messages

During playback or pause:

Options → Delete Old List

OK

Press the display key to confirm

the prompt.

Yes

Press the display key to confirm the prompt.

Deleting individual old messages

During playback or pause:

Delete

Press the display key.

Picking up a call from the answering machine

You can pick up a call while the answering machine is recording or is being operated via remote operation:

/ Accept

Press the talk or display key.

Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The key on the handset flashes.

You can answer the call even if it is not signalled on the handset.

Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine even if it is deactivated.

Precondition: Sufficient memory space is available on the answering machine.

An external call is signalled on the handset:

عە → Select display key.

The answering machine immediately starts in recording mode and records the call. The set time for the call acceptance (→ page 49) is ignored.

Activating/deactivating two-way record

You can record an external call with the answering machine.

Inform the caller that the call is being recorded.

Options

Open menu.

Two-Way Record

Select and press OK.

Two-way record is indicated on the display by an advisory text and is added to the answering machine list as a new message.

End

Press the display key to stop two-way record.

The maximum recording time depends on the memory available on the answering machine. If the memory is full you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the answering machine list as a new message.

Please note

All persons using this device for recording telephone conversations shall comply with New Zealand law. This requires that at least one party to the conversation is to be aware that it is being recorded. In addition, the Principles enumerated in the Privacy Act 1993 shall be complied with inrespect to the nature of the personal information collected, the purpose forits collection, how it is used and what is disclosed to any other party.

Activating/deactivating call screening

During recording of a message you can screen a call via the loudspeaker of registered handsets.

Permanently activating/deactivating call screening

 \rightarrow \rightarrow Call Screening ($\stackrel{\frown}{\bowtie}$ = on)

Change

Select display key to activate/ deactivate the function.

Deactivating call screening for the current recording

You can switch off the function on the handset during the recording.

Silence

Press the display key.

Setting the recording parameters

The answering machine has already been preset at the factory. Make individual settings using the handset.



→ Page → Recordings

▶ Change multiple line input:

Length:

Select maximum recording time:

1 Min., 2 Min., 3 Min. or Maximum.

Quality:

Select recording quality Long Play, High or Excellent. If the quality is higher, the maximum recording time is reduced.

Ring Delay:

Select when the answering machine should accept a call:

No delay, after 10 sec., 18 sec., 30 sec. or Automatic.

Save

Press the display key.

Information about call acceptance

In **Automatic** mode, the following applies for call acceptance:

- If there are no new messages, the answering machine answers a call after 18 seconds.
- If new messages are present, the answering machine answers a call after 10 seconds.


When operating remotely (→ page 50) you can tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would already have accepted your call). There will be no call charges if you hang up now.

Please note:

You can configure your telephone so that the **first** ring tone is **muted** on all calls (→ page 44). This means that the time selected for the call acceptance predetermines how long the caller must wait before the answering machine answers the call.

Resetting fast access for the answering machine using key 1

By default, key 1 ∞ has been assigned for fast access to the integrated answering machine. However, if you have set the network mailbox for fast access (→ page 52), you can reset this setting.



Answering Machine

Select and press OK.

Once you have selected the answering machine, press and **hold** key 1 connected directly.

The setting for fast access applies to all registered handsets.

Operating when on the move (remote operation)

You can check and activate your answering machine from any other telephone (hotel, pay phone etc.), or initiate ringback from the answering machine with an SMS.

Preconditions:

- You have set a system PIN other than 0000 (→ page 69).
- The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

Calling the answering machine and playing back messages



Dial your own number.

When you hear your announcement, press and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad.

The following keys are used for operation:

- To return to the start of the current message.

 Press twice to go back to the previous message.
- Stop playback. Press again to resume.
- Go to the next message.
- Delete current message.

Activating the answering machine

▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answering machine cannot be deactivated remotely.

Initiating ringback from the answering machine with SMS and listening to messages

Precondition: You must have stored a notification number (→ page 42).

You can use the telephone (mobile phone or any other device with SMS functionality) for which you have stored the notification number in your phone to send an SMS to your answering machine when you are away from home. It will then call you back. The message playback begins when you accept the call and press any digit key.

The SMS must contain the following:

<System PIN><Ringback number>*

The ringback number is optional.

Examples:

4711 or *4711*089123456*

If a ringback number is entered, it is dialled; otherwise the notification number is dialled.

You can now operate the answering machine via the keypad, as described in the previous sections.

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

With fast access, you can dial the network mailbox or the integrated answering machine (Gigaset SL785 only) directly.

Gigaset SL780: Fast access is preset for the network mailbox. You only need to enter the number of the network mailbox.

Gigaset SL785: The integrated answering machine is preset for fast access. You can configure the network mailbox instead. Ask your network provider about this.

Configuring fast access for the network mailbox and entering the network mailbox number

Gigaset SL780:



Network Mailbox

Select and press Select (© = selected).

Gigaset SL785:



Enter the number for the network mailbox.

Save

Press the display key.

The setting for fast access applies to all Gigaset SL78H handsets.

Calling the network mailbox

Press and **hold**. You are connected straight to the network mailbox.

Press speaker key if required. You will hear the network mailbox announcement.

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed call list and the message key flashes (→ page 35).

ECO DECT

You are helping to protect the environment with your Gigaset SL780/SL785.

Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reducing radiation

The radiation from your telephone is reduced **automatically**:

The closer the handset is to the base, the lower the radiation.

You can reduce the radiation from the handset and base even more by using **Eco Mode**:

◆ Eco Mode

Reduces the radiation of the base station and handset by 80% - whether you are making a call or not. **Eco Mode** reduces the range of the base station by approx. 50%. Using **Eco Mode** always makes sense when a reduced range is sufficient.

Switching off radiation

◆ Eco Mode+

When you activate **Eco Mode+** the radiation of base and handset is switched off automatically and only turns on when calls are made.

This is also true when multiple handsets are used, if the handsets support **Eco Mode+**.

Eco Mode / Eco Mode+ can be activated/ deactivated independently of one another and can also be used with multiple handsets.

Activate/deactivate Eco Mode / Eco Mode+:

→ Settings → System → Eco Mode / Eco Mode+

Change Press the display key ($\mathbf{\Sigma} = \mathbf{on}$).

Status displays

Display icon	
	Reception strength:
ाम । स्था । स्था । क	good to poorno reception
📢 white	Eco Mode deactivated
📢 green	Eco Mode enabled
white	Eco Mode+ enabled (displays instead of the reception strength icon when in idle status)
green	Eco Mode and Eco Mode+ activated

Please note

- ◆ When using Eco Mode+ you can ensure that the range of the base is sufficient by pressing and holding the talk key □. You hear the dial tone if the base can be reached.
- ◆ When Eco Mode+ is enabled:
 - call setup is delayed by approx.
 2 seconds.
 - handset standby time is reduced by approx. 50%.
- Registering handsets that do not support Eco Mode+ causes the mode to be deactivated on the base and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base.
- ◆ Eco Mode / Eco Mode+ and repeater support (→ page 69) cancel each other out, i.e. if you use a repeater you cannot use Eco Mode and Eco Mode+.

Setting an appointment (calendar)

You can use your handset to remind yourself of up to thirty appointments. Anniversaries entered in the directory (→ page 33) are automatically recorded in the calendar.


You can select whether the graphic calendar should be displayed in idle status. To do this, select

Calendar → Options → Show cal. in idle (✓ = display)

Press Change to activate/deactivate the function ($\overline{M} = \text{on}$).

Saving an appointment

Precondition: The date and time have already been set (→ page 14).






- ◆ The current day is selected (highlighted in orange).
- Days on which appointments have already been saved are highlighted in orange.

Select the desired day in the graphic calendar.

The selected day is highlighted in orange. The current day is highlighted in white.



- ◆ If appointments have already been entered, this will open the list of existing appointments on that day.
 Select <New Entry> → OK to open the data input window.
- If no appointments have been entered, the data input window will open immediately to add the new appointment.
- ▶ Change multiple line input:

Appointment:

Select On or Off.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format.

Text:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Save


Press the display key.

Please note

If you have already saved thirty appointments, you will have to first delete an existing appointment before adding a new one.

Signalling appointments and anniversaries

In idle status, an appointment reminder is signalled with the selected ring tone (→ page 66) and will sound for 60 seconds. The name is displayed for anniversaries, while the entered text is displayed for appointments along with the date and time.

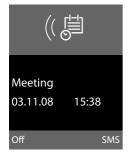

You can either deactivate or answer an appointment reminder:

Off

Press the display key to deactivate the appointment reminder.

Or:


SMS

Press the display key to accept the appointment reminder with an SMS.

Please note

During a call, the appointment reminder is signalled by a short tone.

Managing appointments



Editing individual appointments

Select a day in the graphic calendar and press the control key

(Days on which appointments have already been saved are highlighted in orange in the calendar).

Select appointment for the day. You have the following options:

View

Select the display key and edit or confirm the entry.

Or:

Options

Open the menu for editing, deleting and activating/deactivating.

Deleting all appointments

In the monthly view:

Options → Delete all appoint. → OK

Confirm the security prompt with Yes. All appointments are deleted.

Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 33) are displayed in the **Missed Alarms** list if:

- You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.

The symbol \Box and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

→ Missed Alarms

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete appointment

SMS Write an SMS.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting the alarm clock

Precondition: The date and time have already been set (→ page 14).

Activating/deactivating the alarm clock and setting the wake-up time





▶ Change multiple line input:

Activation:

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

Occurence:

Select Daily or Monday-Friday.

Volume:

Set the volume (1-6).

Melody:

Select melody.

Save

Press the display key.

In idle status, the 🗑 icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ring tone (\rightarrow page 2). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off.

During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Precondition: A wake-up call is sounding.



Press the display key. The wakeup call is deactivated.

or



Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Using several handsets

Registering handsets

You can register up to six handsets to your base.

A Gigaset SL78H handset can be registered on up to four bases.

Manually registering the Gigaset SL78H to the Gigaset SL780/SL785

You must activate manual registration of the handset on both the handset (1) and the base (2).

Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.

1) On the handset

The handset must not be registered to a base.

Register

Press the display key.

The handset is already registered to a base:





Select base, e.g. Base 3 and press OK.



If required, enter the system PIN for the base and press OK.

A message displays that a search for a base that is ready for registration is being carried out.

2) On the base

Within 60 seconds press and hold the registration/paging key on the base (→ page 1) (approx. 3 seconds).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

1) On the handset


Start to register the handset as described in its user quide.

2) On the base

Press and **hold** the registration/paging key on the base (→ page 1) (approx. 3 sec.).

De-registering handsets

You can de-register any other registered handset from any registered Gigaset SL78H handset.





Select the internal subscriber you wish to deregister and press

OK.

(The handset you are currently using is highlighted with <).



Enter the current system PIN

and press Save.

Yes

Press the display key.

Locating a handset ("paging")

You can locate your handset using the base.

- ▶ Briefly press the registration/paging key on the base (→ page 1).
- ▶ All handsets will ring simultaneously ("paging"), even if the ring tones are deactivated.

Ending paging

▶ Briefly press the registration/paging key on the base or press the talk key 🖃 on the handset.

Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (Best Base).



→ P → Registration → Select Base

Select one of the registered bases or **Best Base** and press Select.

Making internal calls

Internal calls to other handsets registered to the same base are free of charge.

Calling a specific handset

Initiate internal call.

Enter the number of the hand-

set.

Or:

Initiate internal call.

Select handset.

= Press the talk kev.

Calling all handsets ("group call")

Initiate internal call.

***** 4

Press the star key.

or

Call All

Select menu option and

Press the talk key.

All handsets are called.

Ending a call

Press the end call key.

Transferring a call to another handset

You can transfer an external call to another handset (connect).

Open the list of handsets. The external participant hears hold music if activated (→ page 69).

Select a handset or **Call All** and press **OK**.

When the internal participant answers:

▶ If necessary announce the external call.

0

Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or the line is busy, press the display key End to return to the external call.

When transferring a call you can also press the end call key <u>a</u> before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you.

Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** participant at the same time for consultation or hold a conference call between all 3 participants.

You are conducting an external call:

Open the list of handsets.
The external participant hears hold music if activated
(→ page 69).

Select handset and press OK. You are connected to the internal participant.

either:

End

Press the display key. You are reconnected with the external subscriber. Or:



Press the display key.
All 3 participants are connected with each other.

Please note

This equipment may not provide for the effective handover of a call to another device connected to the same line.

Ending a conference call

Ō

Press the end call key.

If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

Call waiting

Many Telecommunication providers in Australia and New Zealand offer a Call waiting service on your Home Phone Line. Please speak to your service provider to check if your Home Phone line is activated for this service (charges may apply).

The most common providers instructions for Call waiting are as follows.

Please note

These processes depend on the network provider and are subject to change.

Australia:

Telstra:

To answer an incoming call when you're already on a call, or to switch between calls:

▶ Press the Recall key ☐ and listen for the dial tone, then press ☐ abc .

To hang up on one call and return to the other:

Press the Recall key n on your phone and listen for the dial tone, then press
1 oc
1

To reject an incoming call when you are already on a call:

Push the Recall key on your phone and listen for the dial tone, then press
 again.

For more information please contact Telstra.

Optus:

You are on the phone and hear the beeps.

To put the first caller on hold and talk to the new caller (the caller on hold will hear nothing):

▶ Press the Recall key ☐ on your phone.

To return to the first caller:

Press the Recall key and put the new caller on hold. You can alternate between the calls in this way.

Or

Hang up the first call. The phone will ring again with the second caller. This means that you will not be able to go back to the first caller.

For more information please contact Optus.

New Zealand:

Telecom NZ:

You are on the phone and hear four beeps.

To talk to the second caller:

▶ Press the Recall key ☐ on your phone.

To return to the first caller:

Press the Recall key R again and you will be able to continue your original conversation.

For more information please contact Telecom NZ.

Listening in to an external call

Precondition: The **Listening In** function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

Activating/deactivating listening in



Press Change to activate/deactivate the function ($\overline{M} = \text{on}$).

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.

Pre

Press and **hold** the talk key.

You can listen in to the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in

0

Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key <u>a</u>, the handset that has "listened in" remains connected to the external participant.

Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

Open the list of handsets. Your own handset is indicated by ◀.



Select handset. Open menu.

Options Rename



Enter name.

Save

Press the display key.

Changing a handset's internal number

A handset is automatically assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1-6).

Open the list of handsets. Your own handset is indicated by **◄**.

Options

Open menu.

Assign Handset No.

Select and press OK.

Select number. Only numbers that have not been assigned are displayed.

Save

Press the display key to save the input.

Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon. as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated without a ring tone and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function remains activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

Warning!

- ◆ You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charging cradle. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the destination number

→ ☆ → Room Monitor

▶ Change multiple line input:

Activation:

Select **On** to activate.

Alarm to:

Select Internal or External.

External number: Select the number from the directory (press display key [1]) or enter it directly.

Internal number: Select display key Change → Select handset or Call All if you want to call all registered handsets

In idle status, the destination number or the internal destination number is displayed.

Sensitivity:


Select noise level sensitivity (**Low** or **High**).

Press Save to save the settings.

When the room monitor function is activated, the idle display looks as shown below:



Changing the set destination number



 Enter and save number as described in "Activating the room monitor and entering the destination number"
 (→ page 60).

Cancel/deactivate room monitor

Press the end call key to cancel the call when the room monitor is activated.

In the idle status press the display key Off to deactivate the room monitor mode.

Deactivating the room monitor remotely

Preconditions: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

▶ Accept the call from the room monitor and press keys 9 #.

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ring tone) on the handset will remain activated until you press the display key Off on the handset.

To reactivate the room function with the same phone number:

Turn on the activation again and save with Save (→ page 60).

Using Bluetooth devices

Your Gigaset SL78H handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register 1 Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or exchange data with the computer (→ page 78).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ page 68).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

Please note

- You can operate headsets on your handset that have the headset or speaker profile. If both profiles are available, the speaker profile will be used to communicate.
- It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialled from the headset.

Activating/deactivating Bluetooth mode



Press Change to activate or deactivate Bluetooth mode ($\mathbf{M} = \text{activated}$).

In idle status, the \$ icon on the handset shows that Bluetooth mode is activated (\rightarrow page 2):

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

Please note

- If you register a headset, any headset that is already registered will be overwritten
- If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please deactivate this connection before you start the registration process.

→ * → Search for Headset / Search for DataDevice

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

Options

Press the display key.

Trust Device

Select and press OK.



Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

Please note -

- Enter a PIN of your choice for the data device. Then confirm the PIN on the data device.
- Enter the preset PIN for the headset (usually: 0000). For further information, please refer to the headset manufacturer's user guide.

The device is saved in the list of known devices.

Cancelling/repeating current search

To cancel search:

Cancel Press the display key.

Repeat search if necessary:

Options Press the display key.

Repeat Search

Select and press OK.

Editing the list of known (trusted) devices

Open list

→ * → Known Devices

A corresponding icon appears next to each device name in the list displayed:

lcon	Meaning
Θ	Bluetooth headset
<u> </u>	Bluetooth data device

If a device is connected, the corresponding symbol \$ is shown in the header of the display.

Viewing entries

Open list → 🖵 (select entry)

View

Press the display key.
Device name and address are displayed.
Back with OK.

Deregistering Bluetooth devices

Open list → 😱 (select entry)

Options Press the display key.

Delete Entry

Select and press OK.

Please note -

If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

Changing the name of a Bluetooth device

Open list → 🖵 (select entry)

Press the display key. Options

Edit Name Select and press OK.

Change the name. Save Press the display key

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

Reject

Press the display key. Back

Accept



Enter the PIN for the Bluetooth device you want to accept and press OK.


If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Once the PIN has been confirmed, save to the list of known devices:

- Yes Press the display key.
- No Press the display key: use temporarily.

Changing the Bluetooth name of the handset

You can change the handset name used to identify it on the display of another Bluetooth device.



Change Press the display key



Change the name.

Press the display key

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Ouick access to functions and numbers

You can assign a number or a function to each of the digit keys + and 2 b to

The left and right display keys have a function pre-selected by default. You can change the assignment (→ page 64).

The number is then dialled or the function started by simply pressing a key.

Assigning digit keys

Precondition: You have not yet assigned a number or function to the digit key.

Press and hold the digit key.

The list of possible key assignments is opened. The following can be selected:

Ouick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

Select an entry and press OK.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display kev.

Room Monitor

Assign menu for setting and activating the room monitor to a key (\rightarrow page 60).

Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 56).

Calendar

Open calendar/enter new appointment.

Bluetooth

Assign the Bluetooth menu to a key.

Handset settings

Redial

Display the redial list.

More Functions...

More features are available:

INT

Internal calls (→ page 57).

SMS

Assign menu for SMS functions to a key (→ page 38).

SMS Notification

Assign menu for activating SMS notification to a key (→ page 42).

Starting the function, dialling the number

Press and **hold** the digit key in idle status of the handset, or **briefly** press the display key.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

Changing key assignments

Display key

Press and hold the left or right display key.

The list of possible key assignments is opened.

Proceed as described when first assigning the digit key (→ page 63).

The selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

Digit key

▶ **Briefly** press the digit key.




Press the display key. The list of possible key assignments is displayed.

Proceed as is described when first assigning the key with a quick dial (→ page 63).

Changing the display language

You can view the display texts in different languages.



The current language is indicated by a **①**.

Select language and press Select.

If you accidentally choose a language you do not understand:



Press keys in sequence and confirm by selecting OK.

Select the correct language and press the **right display key**.

Setting the display

Setting the screensaver

When in idle status, a picture, a Slideshow (all the pictures are displayed one after the other) in the Screensavers folder of the Resource Directory (→ page 67) or the time can be displayed as a screensaver. This will replace the idle status display. It may conceal the calendar, date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the **Screensaver** menu option is marked with ✓.



The current setting is displayed.

▶ Change multiple line input:

Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

Selection:

Select screensaver or

View

Press the display key. The active screensaver is displayed.

Select screensaver and press OK.

Save

Press the display key.

When the screensaver conceals the display. **briefly** press to show the idle display.

Please note -

If the analogue clock has been set as screensaver, the **second hand** is shown only when the handset is in the charger.

Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed. If the backlight is deactivated it is switched on by pressing any key. In this case the pressed key has no other function.





The current setting is displayed.

▶ Change multiple line input:

In Charger

Select On or Off.

Out of Charger

Select On or Off.

Please note

With the On setting, the standby time of the handset can be significantly reduced.

Save

Press the display key.

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key = .

Change

Press display key ($\mathbf{M} = \mathsf{on}$).

Changing the speaker/ earpiece volume

You can set the loudspeaker volume for speaker talking and the earpiece volume to five different levels

In idle status:

Open the menu for setting the

Call Volume.

Set the earpiece volume. Scroll to the **Speaker** line.

Set the speaker volume.

Save

Press display key if necessary to save the setting permanently.

Setting the volume during a call:

Press the control key.

Select volume.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key Save.

If is assigned with another function:

Options

Open menu.

Volume

Select and press OK.

Configure setting (see above).

Please note

You can also set the call volume using the menu (→ page 26).

Changing ring tones

Volume:

◆ Ring tones:


You can select various ring tones, melodies or any sound from the resource directory (→ page 67).

You can set different ring tones for the following functions:

- ◆ Extern. Calls: for external calls
- ◆ Intern. Calls: for internal calls
- ◆ Appts: for set appointments(→ page 54)

Set the volume and melody depending on the type of signalling required.

In idle status:



Select setting, e.g. Extern. Calls

and press OK.

Select melody.

Set volume (1–6).

Scroll to the next line.

Save Press the display key to save the setting.

Additionally for external calls:

Once you have selected the melody, you can specify a time period when you do not want the telephone to ring, e.g. during the night.

Time Control:

Select On or Off.

Mute ring tone from:

Enter the start of the period in 4-digit format.

Mute ring tone until:

Enter the end of the period in 4-digit format.

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the directory (VIP).

Activating/deactivating the ring tone

You can deactivate the ring tone on your handset before you answer a call or when the handset is in idle status; the ring tone can be deactivated permanently or just for the current call. The ring tone cannot be reactivated while an external call is in progress.

Deactivating the ring tone permanently

* A Press and **hold** the star key.

The 👺 icon appears in the display.

Reactivating the ring tone

* 4 Press and **hold** the star key.

Deactivating the ring tone for the current call

Silence Press the display key.

Activating/deactivating the alert tone

In place of the ring tone you can activate an alert tone. When you get a call, you will hear a short tone ("Beep") instead of the ring tone.

Press and hold the star key and within 3 seconds:

Beep

Press the display key. A call will now be signalled by **one** short alert tone.

The 4 icon appears in the display.

Resource directory

The resource directory on the handset manages sounds, which you can use as ring tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling Line Identification (CLIP). The resource directory can manage the following media types:

Sound	Format
Ring tones	Standard
Monophonic	Standard
Polyphonic	Standard
Imported sounds	WMA, MP3, WAV
Picture – CLIP picture – Screensaver	BMP, JPG, GIF 240 x 120 pixels 240 x 320 pixels

The icon is displayed in front of the name in the resource directory. Various mono and polyphonic sounds and pictures are preconfigured on your handset.

You can listen to the available sounds and view the pictures.

You can download pictures and sounds from a PC (→ page 78). If there is not enough memory available, you must first delete one or more pictures or sounds.

Playing back sounds/viewing CLIP pictures

→ ★ → Resource Directory
→ Screensavers / Caller Pictures /
Sounds (select entry)

Pictures:

View

Press the display key. The selected picture is displayed. Switch between pictures using the key.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Sounds:

The selected sound is played back immediately. Switch between the sounds using the key.

You can set the volume during playback.

Volume Press the display key.

Set volume.

Save Press the display key.

Deleting/renaming a picture/ sound

You have selected an entry.

Options Open menu.

If a picture/sound cannot be deleted, these options are not available. You can select the following functions:

Delete Entry

The selected entry is deleted.

Edit Name

Change the name (max. 16 characters) and press Save. The entry is stored with the new name.

Checking the memory

You can check how much memory is available for sounds and pictures.

→ ☆ → Resource Directory
→ Capacity

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key click**: every key press is confirmed.
- **◆** Acknowledge tones:
 - Confirmation tone (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the answering machine list or call list
 - Error tone (descending tone sequence): when you make an incorrect entry
 - Menu end tone: when scrolling to the end of a menu
- Battery low beep: the battery requires charging.

In idle status:

→ Audio Settings → Advisory Tones

▶ Change multiple line input:

Key Tones:

Select On or Off.

Confirmation:

Select On or Off.

Battery:

Select **On**, **Off** or **In Call**. The battery warning tone is only activated/deactivated and only sounds during a call.

Save

Press the display key.

Setting your own area code

In order to transfer phone numbers (e.g. in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already preset.

→ / → Telephony → Area Codes

Check that the (pre)set area code is correct.

▶ Change multiple line input:

Select/change input field.

Navigate in the input field.

If necessary, delete number:

press the display key.

Enter number.

Press the display key.

Example:

Save



Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset

- ◆ Registration to the base
- ◆ Date and time
- ◆ Entries in the calendar
- Entries in the directory, call-by-call list, call lists, SMS lists and the content of the resource directory



Yes Press the display key.

Base settings

The base settings are carried out using a registered Gigaset SL78H handset.

Protecting against unauthorised access

Protect the system settings of the base with a PIN known only to you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base or when restoring the default settings.


Changing the system PIN

You can change the 4-digit system PIN set on the base (default setting: 0000) to a 4-digit PIN known only by you.

Gigaset SL785: Setting a system PIN facilitates remote operation of the answering machine → page 50.









Enter your new system PIN and press OK.

Resetting the system PIN

If you have forgotten your system PIN you can reset the base to the original code 0000:


Disconnect the power cord from the base. Hold down the registration/paging key on the base while reconnecting the power cable to the base. Release the key after a while.

The base has now been reset and the system PIN 0000 set.

Please note

All handsets are deregistered and must be re-registered. All settings are restored to the factory settings.

Activating/deactivating music on hold




Press Change to activate or deactivate the music on hold ($\mathbf{M} = \mathsf{on}$).

Repeater support

With a repeater you can increase the range and reception strength of your base. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Precondition: A repeater is registered. Eco mode is deactivated.



Press Change to deactivate repeater mode $(\overline{M} = on).$


Please note

Repeater support and eco mode (→ page 53) cancel each other out, i.e. both functions cannot be used at the same time.

Restoring the base to the factory settings

When the settings are restored

- date and time will be retained
- handsets are still registered
- the system PIN is not reset



Enter the system PIN and press

Yes

Press the display key.

Connecting the base to the PABX

The following settings are only necessary when your PABX requires them; see the PABX user quide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Recall

The current setting is indicated by

.

Setting recall

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.






Select recall and press Select. (= set value). Possible values are:

80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 400 ms, 600 ms, 800 ms.

Saving an access code (outside line code)

Precondition: You may have to enter an access code for external calls in your PABX, e.g. "0".







Enter or change access code, max. 3 digits.

Save

Press the display key.

If an access code has been saved:

- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, call list or answering machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers and SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using < C.

Setting pauses

Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key and sending the number.

Press keys.

Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press OK.

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

 Open the main menu.

 ★ ↓ □ ♥ # □ ↑ □ ★ □ ↑ □ 2 □ □

Press keys.

H

Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press \overline{OK} .

Changing a dialling pause (pause after access code)

Precondition: You have saved an access code (→ page 70).

Open the main menu.

★ △ | → # | □ + | 5 | ⊌ | → # | 1 ∞ | 1 ∞ |

Press keys.

P7:

Enter number for the length of the pause (1 = 1 sec.; 2 = 2 sec.; 3 = 3 sec.; 4 = 6 sec.) and press OK.

To insert a dialling pause: press and hold

P for 2 seconds. A P appears in the display.

Customer service & product warranty – Australia and New Zealand

IMPORTANT

Please retain your sales receipt as proof of the date of purchase.

Customer Service

If you require assistance in operating this product please contact us

AUS: 1300 780 878 or by e-mail at the Customer Care section of our website at

www.gigaset.com/au

NZ: 0800 780 878 or by e-mail at the Customer Care section of our website at

www.gigaset.com/au

If you are trying to access a Network Service and require assistance specifically related to the network service or would like to subscribe to the service, contact your service provider.

Product Warranty

Subject to the conditions below, this product, excluding battery and accessory devices, is guaranteed against any defect in materials or workmanship under conditions of normal use for a period of 12 months from date of purchase.

The benefits conferred by this warranty are in addition to other warranties and remedies that are implied under the Australian Trade Practices Act and similar Country, State and Territory laws (Statutory Rights).

Subject to your Statutory Rights, the goods will not be eligible for service under this warranty if:

- 1. Proof of purchase cannot be provided;
- 2. The defect was caused by an accident, misuse, abuse, improper installation or operation, vermin infestation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by Gigaset; or
- 3. The product has been damaged by lightning or a mains power surge.
- 4. The Phone was not imported into Australia by Gigaset Communications GmbH.

To obtain service during the terms of this warranty call the Information Line on

AUS: 1300 780 878 or by e-mail at the Customer Care section of our website at

www.gigaset.com/au

NZ: 0800 780 878

If it is necessary to have the product serviced, the Customer Service Representative will inform you of the product return process.

Please ensure that:

- 1. You provide proof of purchase;
- 2. Your product is suitably packaged; and
- 3. You have included all components from the original purchase.

Subject to your Statutory Rights:

- Any claim under this warranty is limited to the cost of repair or replacement of the product;
 and
- 2. If the goods are found to be in sound working order by the authorised service centre, you may be charged a fee for service and for any other direct costs associated with having the product delivered for service.

Replacement or repair services are only offered for products purchased in Australia and New Zealand that bear Gigaset Communications GmbH local registered N Number and Telepermit markings.





Please have your proof of purchase ready when calling.

Bluetooth [⋠] Qualified Design Identity

The Bluetooth QD ID for your Gigaset SL78H is: B013322.

Questions and answers

If you have any questions about using your phone, visit us at

<u>www.gigaset.com/service</u> at any time. The table below contains a list of common problems and possible solutions.

Registration or connection problems with a Bluetooth headset.

- Reset the Bluetooth headset (see the user guide for your headset).
- Delete registration data from the handset when deregistering the device (→ page 62).
- ▶ Repeat the registration process (→ page 62).

The display is blank.

- 1. The handset is not switched on.
- 2. The battery is flat.
 - Charge the battery or replace it (→ page 11).

"No Base" flashes in the display.

- 1. The handset is outside the range of the base.
 - ▶ Move the handset closer to the base.

The range of the base is reduced because eco mode is activated.

- Deactivate eco mode (→ page 53) or reduce the distance between the handset and the base.
- 2. Check the mains adapter of the base.
 - Check the base's mains adapter
 (→ page 9).

"Please register handset" flashes in the display.

Handset has not been registered with the base or has been deregistered.

▶ Register the handset (→ page 56).

Handset does not ring.

The ring tone is deactivated.

Activate the ring tone (→ page 66).

You cannot hear a ring tone/dialling tone from the fixed line network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

 Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (page 9).

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

➤ Reset the system PIN to 0000 (→ page 69).

Forgotten the system PIN.

▶ Reset the system PIN to 0000 (→ page 69).

The other party cannot hear you.

You have pressed the Mute display key. The handset is "muted".

► Activate the microphone again (→ page 28).

The number of the caller is not displayed despite CLIP.

Calling Line Identification is not enabled.

▶ The caller should ask the network provider to release Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

 Repeat the operation.
 Watch the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set for dial pulsing.

▶ Set your PABX to touch tone dialling.

Gigaset SL785 only

No time is specified for a message in the call list.

Date and time have not been set.

Set the date/time (→ page 14).

The answering machine announces "PIN is incorrect" during remote operation.

- 1. You have entered the wrong system PIN.
 - ▶ Enter the system PIN again.
- 2. The system PIN is still set to 0000.
 - ▶ Change the system PIN (→ page 69).

The answering machine is not recording any messages/has switched over to answer only.

Its memory is full.

- ▶ Delete old messages.
- Play back new messages and delete.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, carry social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet under www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001

ISO 14001 (Environment): certified since September 2007 by TüV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since 17/02/1994 by TüV Süd Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 53) saves energy and is an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precon-

dition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Appendix

Caring for your telephone

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid 🖄



If the handset has come into contact with liquid:

- 1. Switch off the handset and remove the battery pack immediately.
- 2. Allow the liquid to drain from the handset.
- Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).
- 4. Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

Specifications

Recommended batteries

Technology: Lithium ion (Li-lon):

Voltage: 3.7 V

Capacity: 750 - 830 mAh

Type: V30145-K1310-X444

V30145-K1310-X445

The handset is supplied with the recommended battery. Only an original battery may be used.

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.gigaset.com/service

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times).

	Capacity (mAh) approx. 800
Standby time (hours)*	200/55
Talktime (hours)	14
Operating time for 1.5 hrs of calls per day (hours)**	120
Charging time in charger (hours)	3,0

^{*} without/with display backlight

(Setting the display backlight → page 65)

General specifications


DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base power supply	230 V ~/50 Hz
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (touch tone dial- ling)

^{**}without display backlight

Base power consumption

In standby condition	approx. 1.3 W
During a call	approx. 1.5 W

Pin connections on the telephone jack



Writing and editing text

The following rules apply when writing text:

- ◆ Each key between □ + and ways 9 is assigned several letters and characters.
- ◆ Control the cursor with <a> □ <a> □ <a> □ to move the cursor word by word.
- Characters are inserted to the left of the cursor.
- Press the star key * a to show the table of special characters. Select the required character, press the display key Insert to insert the character at the cursor position.
- ◆ Press and hold □ + to wayz to enter digits.
- Press display key < to delete the character to the left of the cursor. Press and hold to delete the word to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key \neg # to change the text input mode.

123	Writing digits
Abc	Upper case *
abc	Lower case

^{* 1}st letter in capitals, all others in lower case

The active mode is indicated at the top right of the screen.

Writing an SMS/name

▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

Briefly press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
J oo	1) 	4 ²⁾	1							
2 abc	a	b	С	2	ä	á	à	â	ã	ç
def 3	d	е	f	3	ë	é	è	ê		
4 ghi	g	h	i	4	ï	í	ì	î		
5 jkl	j	k	ı	5						
mno 6	m	n	0	6	ö	ñ	ó	Ò	ô	Õ
7 pqrs	р	q	r	S	7	ß				
8 tuv	t	u	٧	8	ü	ú	ù	û		
wxyz 9	W	Х	у	Z	9	ÿ	ý	æ	Ø	å
0 +	٠	,	?	!	0					

- 1) Space
- 2) Line break

Additional functions via the PC interface

To enable your handset to communicate with the PC the "Gigaset QuickSync" program must be installed on your PC (free to download at www.gigaset.com/gigasets1780).

Transferring data

After installing "Gigaset QuickSync", connect the handset to your computer using Bluetooth (→ page 61) or a USB data cable (→ page 16). If you want to use the Bluetooth connection, your computer must be equipped with a suitable dongle.

Please note

- If the USB data cable is plugged in, a Bluetooth connection cannot be established.
- If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.

You can

- synchronise your handset directory with Outlook,
- download CLIP pictures (.bmp) from the computer to the handset,
- download pictures (.bmp) as a screensaver from the computer to the handset
- download sounds (ring tones) from the computer to the handset.

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time the keypad is disabled, and incoming calls will be ignored.

Completing a firmware update

- ➤ Connect your phone to your PC using a USB data cable (→ page 16).
- Start the "Gigaset QuickSync" program on your PC.
- Establish a connection to your handset.
- ▶ Select [Settings] → [Device properties] to open the [Device] tab
- ▶ Click on [Firmware update]

This launches the firmware update.

The update process can take up to 10 minutes (not including the download time). Do not interrupt the process or remove the USB data cable.

The data is initially loaded from the update server on the Internet. The amount of time this takes is dependent on the speed of your Internet connection.

The display on your phone is switched off and the message key and the speaker key start flashing.

Once the update is complete, your phone will automatically restart.

Procedure in case of an error

If the update procedure fails or your phone does not work properly following the update, repeat the update procedure as follows:

- ► Close the "Gigaset QuickSync" program on the PC.
- Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 12).
- ▶ Replace the battery.
- Complete the firmware update as described.

If the update procedure fails several times or you can no longer connect to the PC, proceed as follows:

- ▶ Close the "Gigaset QuickSync" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 12).
- ▶ Press and hold keys Ч को and ™ 6 with the index and middle finger.



- ▶ Replace the battery.
- ▶ Release keys ᠳ and and . The message key and the speaker key ᠳ will flash alternately.
- ▶ Complete the firmware update as described.

Accessories

Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset SL78H handset

- ◆ Illuminated graphical colour display (256k colours)
- Illuminated keypad
- Speaker talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 500 entries
- ◆ CLIP picture
- ◆ SMS (precondition: CLIP must be enabled)
- PC interface e.g. for managing directory entries, ring tones and screensavers
- ◆ Bluetooth
- ◆ Room monitor

www.gigaset.com/gigasetsl78h

Gigaset SL37H handset

- ◆ Illuminated graphical colour display (65k colours)
- Illuminated keypad
- Speaker talking
- Polyphonic ring tones
- ♦ Directory for around 250 entries
- ◆ CLIP picture
- ◆ SMS (precondition: CLIP must be enabled)
- PC interface e.g. for managing directory entries, ring tones and screensavers
- Headset socket
- Bluetooth
- ◆ Room monitor
- ♦ Walky-talky function

www.gigaset.com/gigasetsl37h



Gigaset C610H handset

- ◆ Illuminated graphic colour display (65k colours)
- ♦ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for around 150 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Room monitor

www.gigaset.com/gigasetc610h




All accessories and batteries are available from your phone retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

Mounting the base to the wall





A
Access code 70
for a PABX
Access protection 69
Accessories
Acknowledge tones 68
Activating
advisory tones 68
answering machine 46
answering machine
(remote operation)51
appointment 54
call acceptance 65
handset 21
internal listening in 59
keypad lock 21
muting ring tone44
room monitor 60
two-way record 49
Advisory tones
Alarm clock
Alert tone 66
Anniversary
deactivating
missed
saving in directory 33
Announcement (answering machine) 47
Answer only mode
(answering machine)
Answering machine 46
activating/deactivating
deleting messages
playing back messages 47
recording a personal announcement/
answer only
remote operation
scrolling back
scrolling forward
Answering machine list
Network mailbox
INGERMOLK HIGHDOX

Appointment / appiversary	54
Appointment/anniversary display missed	
Appointments	55
activating/deactivating	55
deleting	55
managing	55
Area code	,
setting own area code	68
Assigning a key	
Assigning a number key	
Automatic	
call acceptance 27,	65
network provider preselection	36
В	
Base	
changing	
connecting	
connecting to PABX	
power consumption	
restoring factory settings	
setting	
setting up	
system PIN	05
Battery charging	1 3
display	
icon	
inserting	
recommended batteries	76
tone	
Best base	
Birthday, see Anniversary	٠,
Bluetooth	
accepting a call	27
activate	
changing device name	
deregistering devices	
list of known devices	
registering devices	
setting own area code	
transferring directory (vCard)	
, , , ,	

C	Connecting, base to PABX
Calendar	Consultation call (internal) 58
Call	Control key
accepting 27	Correcting incorrect entries 19
accepting (Bluetooth)	Customer service & product warranty - Aus-
diverting (connecting) 58	tralia and New Zealand 72
ending	_
external	D
internal 57	Deactivating
party listening in	advisory tones 68
, , ,	answering machine 46
picking up from answering machine 48	appointment 54
transferring (connecting) 59	call acceptance 65
two-way record	handset
Call acceptance	internal listening in
Call duration	keypad lock 21
Call list	muting ring tone44
Call screening during recording 49	room monitor 61
Call waiting, incoming call 58	two-way record 49
Call-by-call	Delete key
Call-by-call list key	Deleting
Call-by-call numbers30, 36	announcement for answering
Calling	machine 47
external 27	characters
internal 57	message
Calling Line Identification 27	Deregistering (handset)
Cancelling preselection 37	Deregistering devices (Bluetooth) 62
Caring for your telephone 76	Destination number (room monitor) 60
Changing	Dialling
destination number 61	call-by-call list
device name (Bluetooth) 63	directory
dialling mode70	pause
display language64	quick dial63
earpiece volume 65	using quick dial
internal number of a handset 60	Directory
name of a handset 59	copying number from text
pauses	
ring tone	managing entries
speaker volume	opening
system PIN69	order of entries
Character set	saving anniversary
Charge status display	saving entry
CLI, CLIP	saving the sender's number (SMS) 41
CLIP picture28, 31, 67	sending entry/list to handset
Conference (internal)	transferring a vCard (Bluetooth) 32
Confirmation tone	using to enter numbers

Display	Н
backlight	Handset
changing display language 64	activating/deactivating
in idle status 20	advisory tones 68
memory (directory/call-by-call) 32	changing internal number 60
memory (resource directory) 67	changing name59
missed appointments/anniversaries 55	changing the number 60
network mailbox message 52	changing to a different base 57
number (CLI/CLIP)27	changing to best reception 57
screensaver64	contact with liquid
setting	de-registering56, 57
Display keys	display backlight65
assigning63	display language64
Disposal	diverting a call
Draft message list (SMS)	earpiece volume
F	idle status
E	list
Earpiece mode	locating
Earpiece volume	muting 28
ECO DECT 53	paging
Eco Mode	registering
Eco Mode+	registering to a different base 57
E-mail address	restoring to factory settings 68
copying from the directory 33	screensaver
End call key	setting
Ending, call	setting up
Entry	speaker volume
saving, changing (preselection) 37	using room monitor
selecting from directory	using several 56
Environment	Handset operating time
Error tone 68	in room monitor mode
External call	Hash key
diverting to ans. mach 48	Headset (Bluetooth) 61
F	Hearing aids
Fast access	Help 74
answering machine	·
network mailbox	I
Fax (SMS)	Icon
Firmware Update	alarm clock 56
Tilliware opuate	answering machine 46, 49
G	battery16
General troubleshooting	display
Group call	for new messages
	keypad lock 21
	new message 47
	new SMS
	ring tone 66

Idle status	Listening in to a call 59
display 20	Locating, handset 57
returning to 20	Lock
Incoming call	activating/deactivating keypad lock 21
call waiting	M
Incoming message list (SMS) 40	
Incorrect input (correction)	Mailbox ID, see SMS
Input language (SMS)	Mailboxes, see SMS
Installing, base	Mains adapter6
Internal	Making calls
conference	accepting a call
consulting 58	cost-effective calls
listening in	external
making calls 57	internal 57
Internal call	Manual last number redial 34
1/	Medical appliances
K	Memory
Key 1 (fast access)	directory/call-by-call 32
Keypad lock	resource directory67
Keys	Menu
call-by-call list1	end tone
control key	opening
delete key	overview
display keys	prompting 20
end call key	Message key1
fast access	open list 40
hash key	opening lists
message key1	Messages 46
on/off key	copy the number to the directory 48
quick dial 32	deleting 48
recall key	marking as "new" 48
speaker key1	new message icon 47
star key1	playing back47
talk key1, 27	Microphone1
	Missed
L	anniversary 55
Language, display 64	appointment 55
Last number redial 34	calls
Linking, see SMS	Music on hold
Liquid	Muting
List	first ring 44
answering machine34, 35	handset
call list	
call-by-call list	N
handsets	Name
known devices (Bluetooth) 62	of a handset
missed calls34	Network mailbox 52
network mailbox	Network provider preselection,
SMS draft message list 39	automatic
SMS incoming message list 40	Network services 29
SMS list 34	Notification by SMS 42

Number as destination for room monitor 60 copying from an SMS text 41 copying from directory 33	Q Questions and answers
copying to directory	R Range 10 Recall 70 Recall key 1,71
0	Reception booster, see Repeater Recording
On/Off key 1 Order in directory 31	two-way record
P	Recording time 49
PABX	Registering (handset)
connecting base	Registering devices (Bluetooth) 62
pauses 71	Registration key1
saving access code 70	Reminder call
setting dialling mode 70	Remote operation
setting recall70	Resource directory
SMS 44	Ring tone
Pack contents8	changing
Paging 57	muting44
Paging key1	setting volume
Pause	Room monitor 60
after access code	C
after line seizure	S
after recall key	Saving (access code)
Picture	Screensaver
deleting	Searching in directory
renaming67	Sending
Picture CLIP31, 67	directory entry to handset
PIN change	Setting
system PIN	date
Pin connections	screensaver
Playing back	time
announcement (answering machine) . 47	Setting up
message (answering machine) 47	handset
Power consumption (base)	Signal tone, see Advisory tones
Preselection 36	, , , , , , , , , , , , , , , , , , , ,
cancelling	
Protecting the phone against access 69	

SMS38
active send service centre 43
changing mailbox43
deleting39, 41
diverting 41
draft message list
incoming message list 40
input language 39
linked
list
mailbox ID
mailboxes 42
notification by SMS42
PIN protection 43
reading39, 41
receiving 40
replying to or diverting 41
saving number41
self help with error messages 45
sending as a fax
sending to a personal mailbox 43
sending to an e-mail address 40
status report
troubleshooting 45
vCard 42
writing
SMS centre
changing number44
setting
SMS to PABXs
Snooze mode 56
Sound, see Ring tone
Speaker
key1
talking
Special functions70
Specifications
Star key1
System settings 69

T
Talk key1, 27Telephone jack, pin connections77Text message, see SMS70Touch tone dialling70Troubleshooting (SMS)45
U Update
V
vCard (SMS)
earpiece. 65 earpiece volume 65 handset speaker volume 65 loudspeaker 65 ring tone 66 setting 66
W
Warning tone, see Advisory tones Writing (SMS)

Issued by Gigaset Communications GmbH Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011 All rights reserved. Subject to availability. Rights of modification reserved. www.gigaset.com