

Gigaset

E630 H

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Overview of handset



- 1 LED light / Visual call signal (→ page 31, → page 31)
- 2 Display in idle status
- 3 Status bar (→ page 36)
Icons display current settings and operating status of the phone
- 4 Side keys (→ page 15)
- 5 Display keys (→ page 15)
- 6 End call key, on/off key
End call, cancel function, go back one menu level (press **briefly**), back to idle status (press and **hold**), switch handset on/off (press and **hold** in idle status)
- 7 Message key (→ page 16)
Access to the calls and message lists;
Flashing: new message or new call
- 8 Profile key (→ page 31)
- 9 Hash key
Keypad lock on/off (press and **hold** in idle status);
Toggles between upper/lower case and digits
- 10 Connection socket for headset (→ page 7)
- 11 Microphone
- 12 Star key
With an open connection: switch from pulse dialling to tone dialling (press **briefly**);
When inputting text: Open special characters table
- 13 Key 1
Select network mailbox (press and **hold**)
- 14 Recall key
- Consultation call (flash)
- Insert a dialling pause (press and **hold**)
- 15 Answer call key / Handsfree key
Dial number displayed;
Accept call; switch from earpiece to handsfree mode;
Open the redial list (press **briefly**);
start dialling (press and **hold**);
- 16 Control key / Menu key (→ page 14)

Gigaset service contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

Service Centre UK: 0845 0318190
(local call cost charge)

Service Centre Ireland: 0818 200 033

Please have your proof of purchase ready when calling.









Contents

| | |
|---|----|
| Overview of handset | 1 |
| Safety precautions | 4 |
| Getting started | 5 |
| Understanding the operating steps in the user guide | 13 |
| Getting to know your phone | 14 |
| Making calls | 18 |
| Adjusting the telephone settings | 21 |
| Restoring phone to default setting | 26 |
| ECO DECT | 26 |
| Multiple handsets | 27 |
| Phonebook (Address book) | 28 |
| Call list | 30 |
| Sound profiles | 31 |
| Spot LED | 31 |
| Calendar | 32 |
| Alarm clock | 33 |
| Baby monitor | 34 |
| Display icons | 36 |
| Menu tree | 38 |
| Service (Customer Care) | 39 |
| Environment | 45 |
| Appendix | 46 |
| Index | 48 |

Safety precautions

Warning

Read the safety precautions and the user guide before use.
Explain their content and the potential hazards associated with using the device to your children.

| | |
|--|--|
|  | Use only the power adapter indicated on the device. |
|  | Use only rechargeable batteries that correspond to the specification (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced. |
|  | Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications"). |
|  | Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier. |
|  | The base and charger are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms. |
|  | Do not use the devices in environments with a potential explosion hazard (e.g. paint shops). |
|  | If you give your Gigaset to a third party, make sure you also give them the user guide. |
|  | Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services. |

Please note

- ◆ The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.
- ◆ Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!

Getting started

Checking the contents of the package

- ◆ One handset,
- ◆ One charging cradle incl. power adapter,
- ◆ One battery cover (rear cover for the handset),
- ◆ One locking disc for the battery cover,
- ◆ Two batteries,
- ◆ One belt clip,
- ◆ One rubber cover for the headset socket,
- ◆ One user guide.

Installing the charging cradle

The charging cradle is designed for use in closed, dry rooms in a temperature range of +5°C to +45°C.


- ▶ Set up the charging cradle on a flat, non-slip surface.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

Notes

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.
- ◆ Pay attention to the range of the base. This is up to 50 m inside buildings and up to 300 m in unobstructed outdoor areas. The range is reduced when **Maximum Range** is deactivated.

Connecting the charging cradle

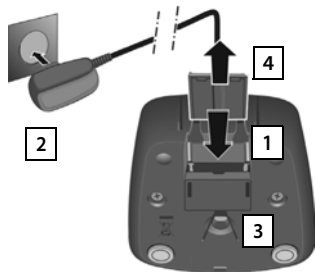

- ▶ Connect the flat plug to the charging cradle **1**.
- ▶ Plug the power adapter into the power socket **2**.

If you have to remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3** and disconnect the plug **4**.

Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film!**

Inserting the batteries and closing the battery cover


Caution

Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 46), as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the right direction (for correct +/- direction, see diagram).
- ▶ Hold the battery cover at a slight angle and insert the bottom into the casing first **1**.
- ▶ Then press the cover **2** until it clicks into place.
- ▶ Insert the locking disc as shown (at an angle of approx. 20°) **3**. Pay attention to the arrow markings.
- ▶ Turn locking disc clockwise to the end stop **4**. The locking disc is closed once the markings on the disc are aligned with those on the cover **5**.

To **open the battery cover**, for example to change the batteries:


- ▶ Turn the locking disc anti-clockwise to the end stop **6** (approx. 20°) and remove **7**.
- ▶ Place your fingernail in the notch on the side between the cover and the casing **8** and remove the cover **9**.

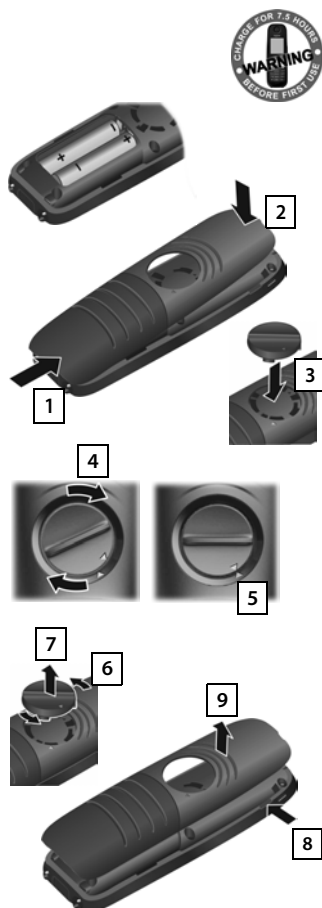

Belt clip

The handset has notches on each side to attach the belt clip.

- ◆ **To attach** — press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- ◆ **To remove** — press the centre of the belt clip firmly with your right thumb, push the fingernail of your left thumb up between the clip and the casing and pull the clip in an upward direction.

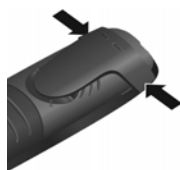

Connecting the headset



You can connect a headset to the underside of your telephone with the 2.5 mm jack connector **1**. For information on recommended headsets, see the relevant product page at www.gigaset.com.



If you **do not** wish to connect a headset, please insert the rubber cover supplied **2** to guarantee the unit is still splash proof.

Charging the batteries

The batteries are supplied partially charged. Please charge completely before use. (The batteries are fully charged when the power icon ⚡ disappears from the display.)

- ▶ Charge the handset in the charging cradle for **7.5 hours**.



Notes

- ◆ The handset may only be placed in the designated base/charging cradle.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.

Changing the display language


You can also change the display language via the menu:

▶ ▶ OK ▶ Language ▶ OK ▶ Select language ▶ Select

or, if you do not understand the language currently set, go to:



▶ Press right on the control key.




▶ Press keys and **slowly** one after the other.

Example



The language selection display appears.
The current language (e.g. English) is selected.

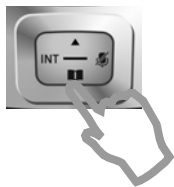

▶ Press the down control key ...


Example



... until the language you wish to use is displayed e.g. French.

▶ Press the **right** key, directly under the display, to select the language.

Example

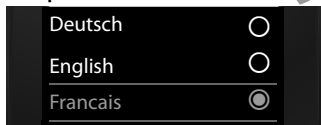




The selection is marked with .

▶ Press and **hold** the End call key to return to idle status.

Registering the handset

The registration process depends on the base. You must initiate registration on the handset **and** on the base. Both must be carried out **within 60 secs**.

- ▶ **On the base:** Press and **hold** (min. 3 secs) the Registration/paging key.
- ▶ **On the handset,** press the display key **Register**.
Or:
 ▶  ▶ **OK** ▶  **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK**


Display shows: **Searching for a base in registration mode**.
The connection to the base will be established; this may take some time.

- ▶ Enter the system PIN if required (factory setting: **0000**). ▶ **OK**

When registering, the display screen shows: **Handset is registering**


After registering successfully, the display screen shows: **Handset registered**

Your handset can be registered on up to four bases. To see how to use your handset with multiple bases and de-register a handset, refer to the user guide for the base.

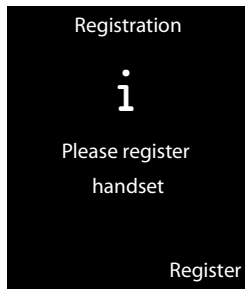

Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

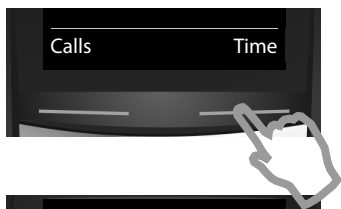

- ▶ Press the key **Time** below the display screen to open the input field.

(If you have already set the date/time, open the input field via the menu:

☰ ▶ ⚙ ▶ OK ▶ Date/Time ▶ OK)

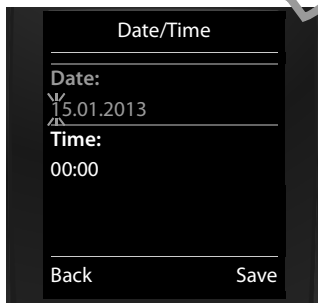


The submenu **Date/Time** is shown on the display.

- ▶ The active input position flashes.
Enter the day, month and year as an 8-digit number via the keypad, e.g.

| | | | | | | |
|---|---|---|---|---|---|---|
| 1 | 4 | 0 | 2 | 0 | 1 | 3 |
|---|---|---|---|---|---|---|

 for 14.10.2013.

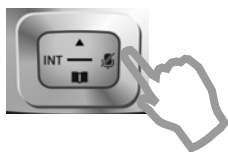

Press the **right** or **left** control key to change the input position, e.g. to correct an entry.




- ▶ Press the **down** control key to switch to the time input field.
- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g.,

| | | | |
|---|---|---|---|
| 0 | 7 | 1 | 5 |
|---|---|---|---|

 for 07:15 am.
Change the input position with the control key if necessary.
- ▶ Press the key **Save** below the display screen to save the entry.



Display shows: **Saved**. You will hear a confirmation tone.

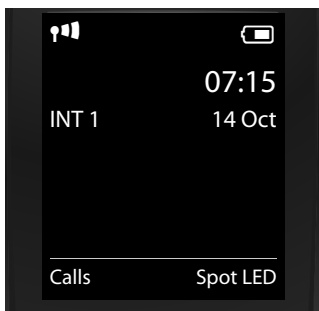

You will automatically return to idle status.

Your phone is now ready for use.

What would you like to do next?

After successfully setting up the phone, you can make calls straight away, customise your Gigaset according to your requirements or firstly familiarise yourself with the operation.

Setting ringtones

Assign specific tunes to internal and external calls, reminders (→ page 23), wake-up calls (→ page 33) and to certain callers (→ page 28).

Protecting yourself against unwanted calls

Set your phone up so that it doesn't ring if there is an anonymous call or use the time control (→ page 24).

Adjusting your phone to your surroundings

Use 3 sound profiles to adjust your phone to a quiet or loud background (→ page 31).

Register an existing Gigaset handset and add it to the phonebook

Use available handsets to continue calling from your new base. Transfer directory entries from these handsets to your new handset (→ page 29).











Configuring ECO DECT settings

Reduce the transmission power (emissions) of your phone (→ page 26).

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 40) or contact our Customer Service team (→ page 39).

Understanding the operating steps in the user guide

The keys on your Gigaset handset are set out in these operating instructions as follows:

| | |
|--|---|
|  /  /  | Answer call key / Menu key / End call key |
|  to  | Number / Letter keys |
|  /  | Star key / Hash key |
|  /  /  | Message key / Recall key / Profile key |










Overview of display icons (→ page 36).

Example: Activating/deactivating Auto Answer

Illustration in the user guide:


 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** (☑ = activated)

Follow this procedure:

- ▶ : With the handset in idle status, press the **right** control key to open the main menu.
- ▶ : Navigate to the  icon using the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Settings**.
- ▶  **Telephony**: Scroll to the entry **Telephony** with the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Telephony**.
- ▶ **Auto Answer**: The activate/deactivate auto answer function is selected.
- ▶ **Change** (☑ = activated): Press the display key **Change** or the middle of the control key  to alternate between activating or deactivating (☑ = activated, ☐ = deactivated).


Getting to know your phone

Switching the handset on/off

- ▶ Press and **hold** the End call key  in idle status to switch the handset on or off.


Locking/unlocking the keypad

The keypad lock prevents any accidental use of the phone. If you press a key when the keypad is locked, a message is displayed.

- ▶ Press and hold the  key to lock or unlock the keypad.

If a call is signalled on the handset, the keypad automatically unlocks, and you can accept the call. It then locks again when the call is finished.





Control key

In the description below, the side of the control key (up, down, right, left, middle) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".






The control key allows you to navigate within menus and entry fields. In idle status or during an external call, it has the following functions:

When the handset is in idle status

-  Open the phonebook.
-  or  Open the main menu.
-  Open list of handsets.

During an external call

-  Open the phonebook.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Functions when pressing the centre of the control key



The key has different functions, depending on the operating situation.

- ◆ **In idle status**, it opens the main menu.
- ◆ **In submenus, selection and entry fields**, the key takes on the function of the display keys **OK, Yes, Save, Select** or **Change**.

Note

These instructions demonstrate opening the main menu by pressing the right of the control key and confirming the functions by pressing the appropriate display key. However, if you prefer, you can also press the middle of the control key.

Side keys


-  /  Press these keys on the right-hand side of the handset to set the volume for the **earpiece, ringtone, handsfree mode, alarm clock, appointments** and the **headset** depending on the situation.

Display keys

The display keys have a function preset by default in idle status, but the keys can be re-assigned (→ page 25).

The functions of the display keys change depending on the operating situation.

Example

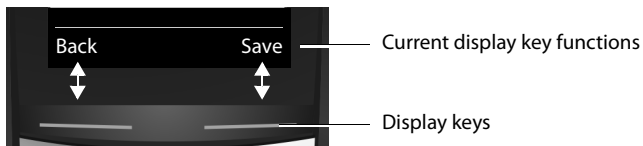

Some of the important display keys are:

- Options** Open a menu for further functions.
- OK** Confirm selection.
- Back** Skip back one menu level or cancel operation.
- Save** Save entry.

Overview of icons on the display keys (→ page 37).

Menu guidance


The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → page 38.


Main menu (first menu level)

- ▶ When the handset is in idle status, press **right** on the control key  to open the main menu.


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Use the control key  to navigate to the required function and press the display key **OK**.

Returning to idle status: **Briefly** press the display key **Back** or End call key .

Example

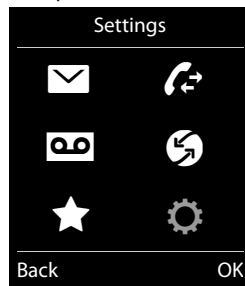

Getting to know your phone

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function using the control key (⏪) and press **OK**.

Returning to the previous menu level: **Briefly** press the display key **Back** or End call key (⏪).

Returning to idle status


From any menu:

- ▶ Press and **hold** the End call key (⏪).

Or:

- ▶ If you do not press a key, the display **automatically** returns to idle status after 2 minutes.

Example

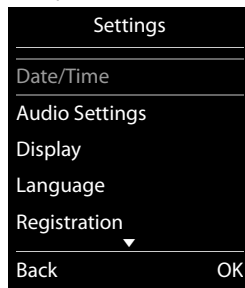





Message lists

Any messages you receive are saved in the message lists.

An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes. Icons for message types and the number of new messages are shown on the idle display.

New messages available:

- ◆  On the answer machine (depending on the base)/network mailbox
- ◆  In the missed calls list
- ◆  In the SMS list (depending on the base)
- ◆  In the missed alarms list

Open the message list by pressing the Message key (Ⓜ). You can access the following message lists:


- ◆ **Answer Mach.:** Answer machine list (depending on the base)
- ◆ **Mailbox:** Network mailbox (if your network provider supports this function and the number of the network mailbox has been stored.)
- ◆ **SMS:** Incoming SMS message list (depending on the base)
- ◆ **Missed Calls:** Missed call list (see "Call list" → page 30)
- ◆ **Missed Alarms:** Missed appointments list

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Opening the list: (Ⓜ) Select required list. ▶ **OK**

Exception: If you select the **network mailbox**, the number of the network mailbox will be selected. Lists are not opened on the display.

Example

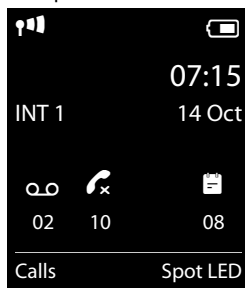


Entering numbers and text

If several number and/or text fields are displayed (e.g. **First Name** and **Surname** in a phonebook entry), the field is automatically activated. The following fields must be activated by navigating with the control key (↩). A field is activated when a cursor is blinking inside it.

Correcting incorrect entries

- ◆ Deleting **characters** before the cursor: press the display key **<C** briefly.
- ◆ Deleting **words** before the cursor: press and **hold** the display key **<C**.

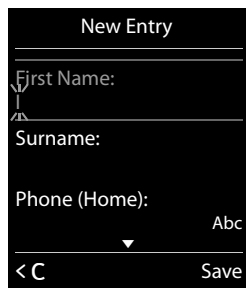


Entering text

- ◆ **Letters/Characters:** Multiple letters and characters are assigned to each key between **0-9** and **0-9#***. The characters are shown according to the key in a selection line at the bottom left of the display. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character.
- ◆ **Placing the cursor:** Letters/characters are inserted at the cursor position. You can insert the cursor by pressing the control key (↩), or (↩) in fields with multiple characters.
- ◆ **Typing lower case, upper case and numbers:** Press the hash key **#<->** to switch between lower case, upper case or numbers for the **following letters**.
When editing a phonebook entry, the first letter and each letter following a space is automatically in upper case.
- ◆ **Special characters:** Press the star key ***<|>** to open the special characters table. Navigate to the character desired using the star key and press the display key **Insert** to select it.
- ◆ **Special letters:** Umlauts or other marked/diacritic characters can be selected by pressing the corresponding letter several times. See the character table → page 47.

Making calls

Making an external call

▶ Enter number, **briefly** press the Answer call key .

Or:

▶ Press and **hold** the Answer call key , enter number.

You can cancel the dialling process with the End call key .

Dialling with the redial list


The redial list contains the 20 numbers last dialled with the handset. You can manage this similarly to your phone's message lists (→ page 16).

▶ Press the Answer call key  **briefly** to open the redial list.

▶  Select entry. ▶ Press the Answer call key . The number is dialled.

When a name and corresponding phone number are displayed: Press the display key **View**.

Managing entries in the redial list:



▶ Open redial list. ▶  Select entry. ▶ **Options**

You can select the following functions:

◆ **Copy to Directory** ▶ **OK**

Copy an entry to the phonebook (→ page 28).

◆ **Display number** ▶ **OK**

Copy a number into the display and edit it or add to it, then select with  or save as a new entry in the phonebook with .

◆ **Delete entry** ▶ **OK**

Delete the selected entry.

◆ **Delete all** ▶ **OK**

Delete all entries.


Dialling from the call list

 ▶  ▶ **OK** ▶  Select list. ▶ **OK**

▶  Select entry. ▶ 

▶ The number is dialled.

Notes



- ◆ You can also bring up the call list using the display key **Calls**, but you must assign a display key accordingly (→ page 25).
- ◆ You can also open the list **Missed calls** using the Message key .

Example



Dialling with the phonebook

 ▶  Select entry. ▶ 


▶ If multiple numbers are entered: Select the number with  and press the Answer call key  or OK.

▶ The number is dialled.

One touch call


You can set up your phone so that you can dial a specific number when you press **any key on the keyboard**. This allows children, who are unable to enter a number, to call a certain number, for example.

 ▶  ▶ OK ▶  One Touch Call ▶ OK

▶ **Activation:**  On / Off

▶ **Call to:** Enter or change the number that you wish to dial.

▶ **Save**

The activated One Touch Call appears on the idle display. The saved number is dialled by pressing any key. Press the End call key  to cancel dialling.

Ending one touch call mode:

▶ Press the display key OFF. ▶ Press and **hold** the  key.

Or:

▶ Press and **hold** the  key.






Accepting a call

You have the following options:

▶ Press .

▶ If **Auto Answer** is switched on (→ page 22), remove the handset from the charging cradle.

Activate/deactivate Simple Auto Answer

In addition to using the Answer call key , you can also answer a call using the keys  ... ,  and .

 ▶  ▶ OK ▶  Telephony ▶ OK ▶  Easy Acceptance ▶ **Change**  = activated


Please note: Changes are only saved permanently in **Profile Personal** (→ page 31).

Handsfree mode










If you are going to let someone listen in, you should tell the other party that this is happening.

▶ Press .

Placing the handset in the charging cradle during a call:

▶ Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

Adjusting the loudspeaker volume


- ◆ Accessing the settings **via the menu**:
 - ▶  ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK
 - ▶ **Earpiece:**  Volume can be set at 5 levels for the earpiece and headset.
 - ▶ **Speaker:**  Set the volume at 5 levels.
 - ▶ **Save**
- ◆ Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece, headset):
 - ▶ Press side keys / (→ page 1) or control key  ▶ .
 - ▶ The setting is saved automatically after 2 seconds or press the display key **Save**. The screen reverts back to its previous display.

Note

Changes are only saved permanently in **Profile Personal** (→ page 31).

Switching the microphone on/off (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Press  to switch the microphone on/off.

Adjusting the telephone settings

The handset and base station are preconfigured, but you can change the settings to suit your individual requirements.

The settings can be changed via the menu **Settings** whilst on a call or in idle status.

Changing the display language


☰ ▶ ⚙ ▶ OK ▶ 🗣 Language ▶ OK ▶ 🗣 Select languages ▶ Select (● = selected)

Setting your country and local area codes

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards). Some of these numbers are already preset. Please ensure that the prefix is correctly separated from the rest of the area code.

☰ ▶ ⚙ ▶ OK ▶ 📞 Telephony ▶ OK
 ▶ 🗣 Area Codes ▶ OK ▶ 🗣 Navigate to the entry field,
 delete the number using **<C** if needed ▶ Enter the number
 ▶ Save

Example

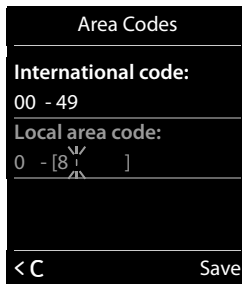

Adjusting the handset display settings


Setting a screensaver

You can set a screensaver for the display when in idle status. You can choose from an analogue clock, a digital clock or an image.

To show the display in idle status, **briefly** press 📞 .

☰ ▶ ⚙ ▶ OK ▶ 📺 Display ▶ OK
 ▶ Screensaver (✓ = activated) ▶ Edit
 ▶ Activation: 📺 On / Off
 ▶ Selection:
 📺 Digital Clock / Analog Clock / [Images]
 Or:
 ▶ View (View screensaver)
 ▶ 🗣 Select screensaver ▶ OK
 ▶ Save

Example

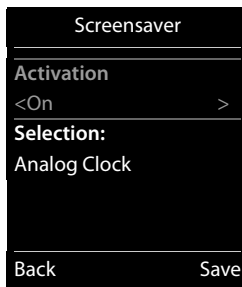

Setting the colour scheme

You can set the display to show a dark or a light background.

☰ ▶ ⚙ ▶ OK ▶ 📺 Display ▶ OK ▶ 🗣 Colour Schemes ▶ OK
 ▶ 🗣 Colour Scheme 1 / Colour Scheme 2 ▶ Select (● = selected)

Adjusting the telephone settings

Setting the display backlight

The display backlight is always lit when the handset is not in the base/charging cradle or when a key is pressed. Any **digit keys** pressed appear on the display for pre-dialling.

You can also activate/deactivate the display backlight for idle status:

 ▶  ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Backlight** ▶ **OK**

In Charger:  **On / Off**

Out of Charger:  **On / Off**

▶ **Save**

Note

The handset's standby time can be significantly reduced if the display backlight is activated.

Activating/deactivating visual call

Incoming calls are signalled visually (e.g. in noisy environments).


 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **LED Call Signal** ▶ **Change** = activated)

Please note: Changes are only saved permanently in **Profile Personal** (→ page 31).

Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as you remove it from the charging cradle.

 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** = activated)

Regardless of the setting **Auto Answer**, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

Setting earpiece profiles

You can set various profiles for the **earpiece** to optimally adapt your phone to your environment. Check which is the most comfortable for you.

 ▶  ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Earpiece Profiles** ▶ **OK** ▶  **Select profile** ▶ **Select** (● = selected)

Earpiece Profiles: **High** and **Low**. The default is **Low**.

Setting the handset ringtones

Setting the ringtone volume

☰ ▶ ⚙ ▶ OK ▶ 📞 Audio Settings ▶ OK
▶ 📞 Ringtones (Handset) ▶ OK ▶ Volume ▶ OK

▶ For internal calls and alarms:

📞 Volume can be set at 5 levels or crescendo (increasing volume) for internal calls and anniversaries.

▶ External Calls:

📞 Volume can be set at 5 levels or crescendo (increasing volume) for external calls.

▶ Save

When the telephone rings, you can permanently change the ringtone volume using the side keys $\boxed{+}$ (louder) or $\boxed{-}$ (quieter).

Please note: Changes are only saved permanently in **Profile Personal** (→ page 31).

Setting the ring melody

☰ ▶ ⚙ ▶ OK ▶ 📞 Audio Settings ▶ OK ▶ 📞 Ringtones (Handset) ▶ OK
▶ 📞 Melodies ▶ OK

▶ **Internal Calls:** 📞 Setting the volume/melody for internal calls and anniversaries.

▶ **External Calls:** 📞 Setting volumes/melodies for external calls.

▶ Save

Activating/deactivating the ringtone

Deactivating the ringtone permanently: Using the Profile key $\boxed{\triangle}$, set the **Profile Silent** (→ page 31). 📞 appears in the status bar.

Activating the ringtone permanently: Using the Profile key, $\boxed{\triangle}$ set the **Profile Loud** or **Profile Personal** (→ page 31).

Deactivating the ringtone for a **current call**: Press **Silence** or 📞.


Silent alert

Incoming calls and other messages are indicated by a silent alert.

☰ ▶ ⚙ ▶ OK ▶ 📞 Audio Settings ▶ OK ▶ 📞 Silent Alert ▶ Change (☑ = activated)

Please note: Changes are only saved permanently in **Profile Personal** (→ page 31). This setting is saved in the **Profile Silent**.

Example

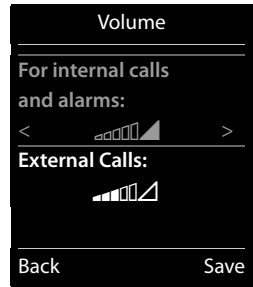

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

▶ ▶ OK ▶ Audio Settings ▶ OK ▶ Advisory Tones ▶ OK

▶ **Key Tones:** On / Off

Tone when keys are pressed.

▶ **Confirmation:** On / Off

Confirmation/error tone after making entries, advisory tone when a new message has been received.

▶ **Battery:** On / Off

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds). There is no battery warning when the baby monitor is activated.

▶ Save

Please note: Changes are only saved permanently in **Profile Personal** (→ page 31).

Protection against unwanted calls

Setting time control for external calls

You can specify a time period when you do not want the telephone to ring.

▶ ▶ OK ▶ Audio Settings ▶ OK

▶ Ringtones (Handset) ▶ OK ▶ Time Control ▶ OK

▶ **For external calls:** On / Off

If activated:

▶ **Suspend ring. from:** Enter the start of the period.

▶ **Suspend ring. until:** Enter the end of the period.

▶ Save

Example

| Time Control | |
|----------------------------|-------|
| For external calls: | |
| On | |
| Suspend ring. from: | 22:00 |
| Suspend ring. until: | 07:00 |
| Back | Save |

Note

During this period, your phone will continue to ring for numbers to which you have assigned a VIP ringtone in the phonebook.

Protection from anonymous callers

You can set your phone so that it doesn't ring for anonymous calls (callers who have withheld Calling Line Identification). The call is only signalled on the display. The setting only applies to handsets for which the setting is configured.

▶ ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (Handset) ▶ OK ▶ Anon. Calls Silent ▶ Change = function activated)

Quick access to numbers and functions


The **digit keys** **0** and **2** up to **9** can be assigned to a **number from the phonebook**.

The left and right **display keys** have a **function** preset by default, but the keys can be re-assigned (→ page 25).

You can then dial the number or start the function by simply pressing a key.

Assigning digit keys

Prerequisite: You must assign a number to the digit key.

- ▶ Press and **hold** the digit key.
Or:
▶ **Briefly** press the digit key. ▶ Press the display key **QuickDial**.
- ▶ The phonebook opens. ▶  Select entry. ▶ **OK**

The entry is saved to the corresponding digit key.

Note

If you delete or edit the entry in the phonebook at a later date, this will not affect the assignment to the number key.

Selecting numbers/changing an assignment

Prerequisite: You must have assigned a number to the digit key.

When the handset is in idle status

- ▶ Press and **hold** the digit key: The number is dialled immediately.


Or:

- ▶ **Briefly** press the digit key: Press the left-hand display key with the number/name (abbreviated if necessary) to dial the number.

Or:

Press the display key **Change** to change the key assignment, or press the display key **Clear Key** to delete the assignment.

Assigning display keys

- ▶ In idle status, press and **hold** the left or right-hand display key. ▶ The list of possible key assignments is opened. ▶  Select entry ▶ **OK**

Choose from the following functions:

| | |
|--------------------------|--|
| Baby Monitor | Set and activate the baby monitor (→ page 34). |
| Alarm Clock | Set and activate the alarm clock (→ page 33). |
| Calendar | Open calendar (→ page 32). |
| One Touch Call | Set up one touch call (→ page 19). |
| Redial | Show redial list (→ page 18). |
| Spot LED: | LED light (torch function) on/off (→ page 31). |
| More Functions... | You can also choose further functions: |
| Call Lists | Show call list (→ page 30). |
| SMS | Open SMS menu (depending on the base). |

Restoring phone to default setting

You can reset individual modifications to handset settings.

The following are **not** affected by the reset:

- ◆ Date / time,
- ◆ Registration of handsets to the base and the current selection of the base,
- ◆ Entries in the calendar and phonebook,
- ◆ Redial list.

When resetting the handset (**Handset Reset**), audio and display settings will be deleted.

Resetting the handset

 ▶  ▶ OK ▶  System ▶ OK ▶  Handset Reset ▶ OK ▶ Confirm security prompt with Yes



ECO DECT uses less energy and reduces transmission power.

Reducing radiation (depending on the base)

The radiation can only be reduced if your base supports this function.

Your telephone's transmission power is **automatically** reduced according to the distance to the base.

You can reduce the radiation from the handset and the base even further by




- ◆ deactivating **Maximum Range**,
- ◆ activating **No Radiation**.


For more details, see the user guide for your base station.

Multiple handsets

Making internal calls



Internal calls to other handsets registered to the same base are free of charge.


 (press briefly) ▶ The list of handsets is opened. Your own handset is marked <. ▶ 
Select the handset or **Call all** (group call) from the list if required. ▶ 

Holding down  immediately starts a call on **all** registered handsets.


Internal consultation/internal transfer

You receive a call from an **external** participant and would like to transfer the call to an **internal** participant or wish to consult him/her.


 ▶ The list of handsets is opened. ▶ If more than two handsets are registered to the base, select one handset or **Call all**. ▶  or **OK**

Holding a consultation call: You are speaking to the internal participant and are returning to your external call: ▶ **Options** ▶  **End active call** ▶ **OK**

Transferring an external call: You have two options to transfer the call:

- ▶ Wait until the participant called answers, then hang up:
Press the End call key .


Or:

- ▶ Hang up before the participant calls: Press the End call key .


If the participant called does not answer or does not transfer the call, end the consultation with **End**.


Establishing a conference call/call swapping

You are taking a call while a second call is being held. Both callers are indicated on the display.

- ▶ **Call swapping:** You can switch between both participants using .

- ▶ **Establishing a three-way conference call:** Press **Conf**.

Ending a conference call: Press **End Conf**. You are reconnected with the external participant. You can switch again between both participants using .

Each of the callers can end their participation in the conference call by pressing the End call key .

Accepting/rejecting call waiting

If you get an external call while conducting an internal call, you will hear the call waiting tone. If the number is transferred, you will see it or the name of the caller on the display.

- ▶ **Rejecting a call:** ▶ Press the display key **Reject**.
- ▶ **Accepting a call:** ▶ Press the display key **Accept**. You are now speaking to the new caller. The previous call is placed on hold.

Ending the current call and returning to the call on hold:

- ▶ **Options** ▶  **End active call** ▶ **OK**.

Phonebook (Address book)

In a **phonebook entry**, you can store first names and surnames, up to three numbers, an anniversary with a reminder, and caller melody.


You can create the directory (with up to 200 entries) individually for each of your handsets. You can also send lists/entries to other handsets (→ page 29).

Length of the entries



3 numbers: Max. 32 digits each
 First name and surname: Max. 16 characters each


Managing directory entries

Opening phonebook


Press the key  in idle status or, depending on the situation, the display key .

Creating a new entry



- ▶ Open directory. ▶  <New Entry> ▶ OK
- ▶ Switch between the input fields using  and enter the relevant components of the entry (names, numbers, anniversary, ringtone).
 Navigate downwards to display further components.
- ▶ Press the display key **Save**.

To create an entry, you must enter at least one number. If you have assigned a caller melody, the entry in the phonebook is supplemented with the symbol .

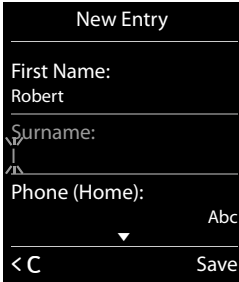


Example



Displaying/changing an entry

- ▶ Open phonebook. ▶  Select the desired entry.
 - ▶ **View** ▶ Display all components of the entry. ▶ **Edit**
- Or:
- ▶ **Options** ▶  **Edit entry** ▶ OK

Deleting an entry

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options** ▶  **Delete entry** ▶ OK
- Delete **all** entries in the directory:
- ▶ Open phonebook. ▶ **Options** ▶  **Delete List** ▶ OK

Defining the order of the contacts entries

You can define whether the entries are to be sorted by first name or surname.

- ▶ Open phonebook. ▶ **Options** ▶ Press **Sort by Surname** or **Sort by First Name**.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.



The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetical) | Other characters


Displaying the number of entries that are available in the directory

- ▶ Open phonebook. ▶ Options ▶  Available Memory ▶ OK

Selecting a phonebook entry, searching in the phonebook

- ▶ Open phonebook.
- ▶ Scroll to the name you are searching for using . **Holding down**  scrolls continuously upwards or downwards through the phonebook.

Or:

- ▶ Enter the first few letters (max. 8 letters) using the keypad. The display jumps to the first name that begins with these letters. If necessary, scroll on to the desired entry using .

Transferring an entry/phonebook to another handset

Prerequisites:





- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

You can transfer the entire directory, an individual entry or several individual entries.





Notes

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.
- ◆ When transferring an entry between two vCard handsets:
If the recipient does not yet have an entry with that name, a new entry is created.
If there is already an entry with that name, this entry is expanded with the new numbers.
If the entry contains more numbers than the recipient permits, a further entry is created with the same name.
- ◆ If the recipient is not a vCard handset: A separate entry is created and sent for each number.
- ◆ Your handset receives entries from a non-vCard handset: Entries with numbers that are already stored are discarded, otherwise a new entry is created.






Transferring individual entries

- ▶ Open phonebook. ▶  Select the desired entry. ▶ Options
- ▶  Copy Entry ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

Transferring the entire directory






- ▶ Open phonebook. ▶  Select the desired entry. ▶ Options
- ▶  Copy List ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

Transferring a displayed number to the phonebook

- ▶ The number is displayed or highlighted.
- ▶ Press display key  or **Options** ▶  **Copy to Directory.** ▶ **OK**
 - ▶ **<New Entry>** ▶ **OK** ▶  Select number type. ▶ **OK**
 - ▶ Complete the entry. ▶ **OK**
- Or:
 - ▶  Select entry. ▶ **OK** ▶  Select number type. ▶ **OK**
 - ▶ The number is entered or an existing number is overwritten (answer the prompt using **Yes/No**).
- ▶ **Save**

Call list








Your telephone stores calls in various lists. Opening the lists:

- ◆ **Missed calls list:** Message key  ▶  **Missed Calls:** ▶ **OK**
- ◆ **List selection:**  ▶  ▶ **OK** ▶  Select list. ▶ **OK**


The last 20 entries are displayed in the call list.

List entry

The following information is displayed in the list entries:

- ◆ The list type (in the header row)
- ◆ Icon for the type of entry:
 -  (Missed calls),  (Accepted calls),  (Outgoing calls)
- ◆ Caller's number. If the number is stored in the phonebook, name and number type are displayed instead ( Phone (Home),  Phone (Office),  Phone (Mobile)). For missed calls, the number of missed calls from this number is also shown in square brackets.
- ◆ Date and time of call (if set).
- ▶  Select entry. ▶ **Options**
- ▶ **View:** All available information is displayed, e.g. the corresponding number when a name is displayed.
- ▶ **Options:** You can delete the entry or transfer the number to the phonebook (→ page 30).


Example

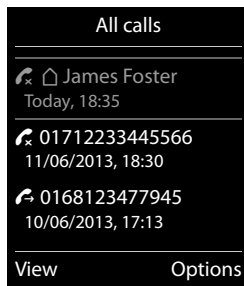

Calling back a caller from the call list:

- ▶  Select entry. ▶ Press the Answer call key .


Sound profiles


You can call up the 3 sound profiles that are adapted for your handset to your surroundings consecutively by using the  key. The profile is switched immediately without a prompt. By default, **Profile Personal** is activated.

 ▶ **Profile Loud** ▶  ▶ **Profile Silent** ▶  ▶ **Profile Personal**

The profiles are set as follows by default:

| Default setting | | Profile Loud | Profile Silent | Profile Personal |
|----------------------------------|-------------------|--------------|-----------------------|------------------|
| Silent alert (→ page 23) | | On | like Profile Personal | Off |
| Ringer (→ page 23) | | On | Off | On |
| Ringtone volume (→ page 23) | Internal | 5 | Off | 3 |
| | External | 5 | Off | 3 |
| Handset volume (→ page 20) | Handset | 5 | 3 | 3 |
| | Handsfree | 5 | 3 | 3 |
| LED light for a call (→ page 22) | | Yes | No | No |
| Simple Auto Answer (→ page 19) | | Yes | No | No |
| Advisory tones (→ page 24) | Key click | Yes | No | Yes |
| | Confirmation tone | Yes | No | Yes |
| | Battery tone | Yes | Yes | Yes |

When switching to **Profile Silent** you can activate an alert tone by pressing the **Beep** display key.  appears in the status bar.

Changes in **Profile Loud** and **Profile Silent** only apply provided that the profile is not changed (by pressing the  Profile key). Changes to **Profile Personal** are stored permanently for this profile.

The set profile remains set when switching the phone off and back on.

Spot LED

You can use your telephone as a torch.

Activating/deactivating the torch function

Press the **Spot LED** display key (→ page 25).

Or:

 ▶  ▶ OK ▶ **Spot LED** ▶ OK

After 2 minutes the function is automatically deactivated or press the **OFF** display key.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be highlighted.



Saving appointments to the calendar

Prerequisite: Date and time are set (→ page 10).

▶ ▶ OK ▶ **Calendar** ▶ OK

▶ Select the desired day. ▶ OK

- ◆ Appointments that have already been stored are shown.
<New Entry> ▶ OK opens the window to enter an additional appointment.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

Activation: On/Off

The following information can be added:

- ◆ **Date:** The selected day is preset. Enter new data to change.
 - ◆ **Time:** Time (hour and minute) of the appointment.
 - ◆ **Text:** Appointment name (e.g. dinner, meeting).
 - ◆ **Signal:** Select the melody of the reminder signal or deactivate the acoustic signalling.
- ▶ **Save**

Signalling of appointments/anniversaries

Anniversaries are transferred from the phonebook and displayed as an appointment. An appointment/anniversary is displayed in idle status and signalled for 60 seconds with the selected ringtone.

You can deactivate the reminder call:

- ▶ Press **OFF** to acknowledge and end the reminder call.


When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.

During the reminder call you can turn the ringtone volume (up) or (down) continuously using the side keys.




Displaying missed appointments/anniversaries


The following appointments and anniversaries are stored in the **Missed Alarms** list:

- ◆ The appointment/anniversary call was not acknowledged.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the head of the list.

To open the list: ▶ Message key  ▶  Missed Alarms ▶ OK



Or via the menu:  ▶  ▶ OK ▶  Missed Alarms ▶ OK

▶  scroll in the list if required

Information about the appointment/anniversary is displayed. You can:

- ▶ Delete an appointment/anniversary: **Delete**

Displaying/changing/deleting stored appointments

 ▶  ▶ OK ▶  Calendar ▶ OK ▶  Select the desired day. ▶ OK ▶ The appointment list is displayed. ▶  Select the desired appointment.

- ▶ **View:** Display appointment settings, change, if required using **Edit**.

Or:




- ▶ **Options:** Change settings or delete appointments.
 - **Edit entry** ▶ OK
 - **Delete entry** ▶ OK
 - **Activate/Deactivate** ▶ OK
 - **Delete all Appoints.** ▶ OK ▶ Confirm prompt with **Yes**. All appointments for the **selected day** are deleted.

Alarm clock

Prerequisite: Date and time are set (→ page 10).



You can activate/deactivate and set the alarm clock as follows:

 ▶  ▶ OK ▶ Alarm Clock ▶ OK ▶ Activation:  On/Off


- ▶ Changing the settings:
 - **Time:** Set the hour and minute for the wake-up time (time setting → page 10).
 - **Occurrence:**  **Daily/Monday-Friday**
 - **Volume:**  Volume can be set at 5 levels or crescendo (increasing volume).
 - **Melody:**  Select a ringtone for the alarm call.
- ▶ Press the display key **Save**.

When the alarm clock is activated, the icon  and the alarm time is displayed in idle status.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

During the sounding of the alarm you can turn the volume  (up) or  (down) continuously using the side keys.

Example

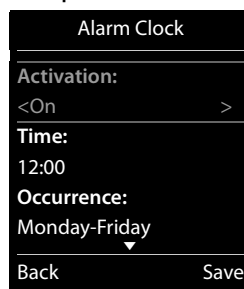

Deactivating the alarm call/repeating after a pause (snooze mode)

Prerequisite: One alarm call sounds.

▶ **Deactivating until the next alarm call:** Press **OFF**.

Or:

▶ **Snooze mode:**

Press **Snooze** or any key. The wake-up call is deactivated and then repeated after 5 minutes.

Or:

Press nothing. The alarm call is deactivated after 60 seconds and then repeated after 5 minutes. After the fourth repetition, the alarm call is deactivated for 24 hours.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The baby monitor alarm to an external number is cancelled after approximately 90 seconds.

In baby monitor mode, incoming calls are only signalled on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and pressing the middle of the control key.

You can answer the baby monitor alarm using the **Two Way Talk** function. Deactivate/activate the speaker of the handset with this function.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.

Caution

Ensure the following points:

- ◆ The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- ◆ The baby monitor is activated 20 seconds after switching on.

Please always check the functionality when you switch on:

- ◆ Test the sensitivity.
- ◆ Check the connection if you are forwarding the baby monitor alarm to an external number.
- ◆ Make sure that the answer machine at the target number is switched off.

Activating/deactivating and setting the baby monitor

- ☰ ▶ ★ ▶ OK ▶ 🔄 Baby Monitor ▶ OK
- ▶ **Activation:** ☑ On/Off
- ▶ Setting the baby monitor:
 - **Send alarm to:** ☑ **Internal** (at least 2 handsets are registered)/ **External**
If **Internal** is selected:
 - ▶ **Handset:** Press the **Change** display key. ▶ 🔄 Select handset. ▶ OK
 - If **External** is selected:
 - ▶ **Number:** Enter the number directly or select from the phonebook (press the display key 🗑).
 - **Two Way Talk:** ☑ On/Off
 - **Sensitivity:** ☑ High/Low
- ▶ **Save**

The target number is displayed in idle status when the baby monitor alarm is activated. The baby monitor is deactivated using the **OFF** display key.

Cancelling the baby monitor alarm

Cancelling during a baby monitor alarm: Press 📞.


Deactivating the baby monitor remotely

Prerequisites: The baby monitor alarm is forwarded to an external destination number. The recipient's phone supports tone dialling.

- ▶ Accept the baby monitor alarm and press the 📞 # keys.

The call is ended. The baby monitor is deactivated and the handset is in idle status.

Baby monitor activated

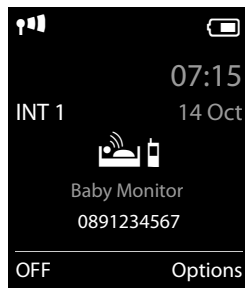

Display icons

Icons in the status bar

The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

| Icon | Meaning |
|------|--|
| | Signal strength (No Radiation off) |
| | 76% - 100% |
| | 51% - 75% |
| | 26% - 50% |
| | 1% - 25% |
| | Red: no connection to the base |
| | No Radiation activated: white, if Maximum Range is on; green, if Maximum Range is off |
| | Profile Silent activated (The ringtone is switched off) |
| | "Beep" ringtone activated |
| | Key lock |

| Icon | Meaning |
|------|--|
| | Battery charge status: White: charged over 66% |
| | White: charged between 34 and 66% |
| | White: charged between 11 and 33% |
| | Red: charged below 11% |
| | Flashes red: battery almost empty (approx. 5 minutes talktime remaining) |
| | Battery is charging (current charge status): |
| | 0% - 10% |
| | 11% - 33% |
| | 34% - 66% |
| | 67% - 100% |



Menu icons



| | |
|--|----------------|
| | SMS |
| | Call Lists |
| | Answer Machine |

| | |
|--|---------------------|
| | Select Services |
| | Additional Features |
| | Settings |

Display key icons

The following icons indicate the current function of the display keys according to the operating situation:

| Icon | Action |
|--|--------------------|
|  | Last number redial |
|  | Deleting text |

| Icon | Action |
|---|------------------------------|
|  | Opening phonebook |
|  | Copy number to the phonebook |

Display icons for signalling of



Establishing a call
(outgoing call)



Connection
established



No connection
established/connection
terminated



External call



Internal call



Reminder call for
anniversary



Reminder call for
appointment



Alarm call

Other display icons



Information



(Security) prompt



Please wait...



Action complete
(green)



Action failed (red)

Menu tree

Opening the main menu: Press  whilst the telephone is in idle status.

Note

Not all functions described in this user guide are available in all countries or with all network providers.

 **Call Lists** (depending on base)

 **Answer Machine** (depending on base)

 **Select Services** (depending on base)

★ Additional Features

| | |
|----------------|-----------|
| Spot LED | → page 31 |
| Calendar | → page 32 |
| Baby Monitor | → page 34 |
| One Touch Call | → page 19 |
| Missed Alarms | → page 33 |

Settings

| | | | | | | | | | | | |
|---------------------|---|------------------|-----------|-------------------|-----------|-----------------|-----------|--------------|-----------|---------------------|-----------|
| Date/Time | → page 10 | | | | | | | | | | |
| Audio Settings | <table border="1"> <tr> <td>Handset Volume</td> <td>→ page 20</td> </tr> <tr> <td>Earpiece Profiles</td> <td>→ page 22</td> </tr> <tr> <td>Advisory Tones</td> <td>→ page 24</td> </tr> <tr> <td>Silent Alert</td> <td>→ page 23</td> </tr> <tr> <td>Ringtones (Handset)</td> <td>→ page 23</td> </tr> </table> | Handset Volume | → page 20 | Earpiece Profiles | → page 22 | Advisory Tones | → page 24 | Silent Alert | → page 23 | Ringtones (Handset) | → page 23 |
| Handset Volume | → page 20 | | | | | | | | | | |
| Earpiece Profiles | → page 22 | | | | | | | | | | |
| Advisory Tones | → page 24 | | | | | | | | | | |
| Silent Alert | → page 23 | | | | | | | | | | |
| Ringtones (Handset) | → page 23 | | | | | | | | | | |
| Display | <table border="1"> <tr> <td>Screensaver</td> <td>→ page 21</td> </tr> <tr> <td>Colour Schemes</td> <td>→ page 21</td> </tr> <tr> <td>Backlight</td> <td>→ page 22</td> </tr> </table> | Screensaver | → page 21 | Colour Schemes | → page 21 | Backlight | → page 22 | | | | |
| Screensaver | → page 21 | | | | | | | | | | |
| Colour Schemes | → page 21 | | | | | | | | | | |
| Backlight | → page 22 | | | | | | | | | | |
| Language | → page 21 | | | | | | | | | | |
| Registration | <table border="1"> <tr> <td>Register Handset</td> <td>→ page 9</td> </tr> </table> (further submenus depending on base) | Register Handset | → page 9 | | | | | | | | |
| Register Handset | → page 9 | | | | | | | | | | |
| Telephony | <table border="1"> <tr> <td>Auto Answer</td> <td>→ page 22</td> </tr> <tr> <td>Easy Acceptance</td> <td>→ page 19</td> </tr> <tr> <td>LED Call Signal</td> <td>→ page 22</td> </tr> <tr> <td>Area Codes</td> <td>→ page 21</td> </tr> </table> (further submenus depending on base) | Auto Answer | → page 22 | Easy Acceptance | → page 19 | LED Call Signal | → page 22 | Area Codes | → page 21 | | |
| Auto Answer | → page 22 | | | | | | | | | | |
| Easy Acceptance | → page 19 | | | | | | | | | | |
| LED Call Signal | → page 22 | | | | | | | | | | |
| Area Codes | → page 21 | | | | | | | | | | |
| System | <table border="1"> <tr> <td>Reset Handset</td> <td>→ page 26</td> </tr> </table> (further submenus depending on base) | Reset Handset | → page 26 | | | | | | | | |
| Reset Handset | → page 26 | | | | | | | | | | |

Service (Customer Care)

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service



After purchasing your Gigaset phone, please register it at:

www.gigaset.com/register

Your personal customer account gives you rapid access to our customer advisers, the online forum and much more.



Visit our Customer Care pages:

www.gigaset.com/service

Here you will find:

- ◆ Frequently asked questions
- ◆ Free software and user manual downloads
- ◆ Compatibility checks



Contact our Customer Care staff:

Couldn't find a solution in the FAQs section?

We are happy to help...

... by eMail: www.gigaset.com/contact

... by telephone:

United Kingdom

www.gigaset.com/uk/service

Service Hotline: 0845 0318190

(local call cost charge)

Ireland

www.gigaset.com/ie/service

Service Hotline: 0818 200 033

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).





In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Questions and answers

If you have any queries about the use of your telephone, suggested solutions are available on our web-site at

www.gigaset.com/service ▶ FAQ ▶ First steps for troubleshooting.

The table below also lists steps for troubleshooting.

| |
|---|
| <p>You are not sure whether your device is equipped with an integrated answer machine.</p> <p>▶ Open the answer machine menu:  ▶  ▶ OK</p> <p>Your device is equipped with an integrated answer machine if the submenu Activation is available.</p> |
| <p>The display is blank.</p> <ol style="list-style-type: none">1. The handset is not activated. ▶ Hold down .2. The battery is empty. ▶ Charge the battery or replace it (→ page 6).3. The key and display lock is activated. ▶ Hold down the hash key . |
| <p>"No Base" flashes on the display.</p> <ol style="list-style-type: none">1. The handset is outside the range of the base. ▶ Move the handset closer to the base.2. The base is not activated. ▶ Check the base power adapter.3. The base's range is reduced because Maximum Range is deactivated. ▶ Activate Maximum Range (→ page 26) or reduce the distance between the handset and base. |
| <p>"Please register handset" or "Place handset in base" flashes on the display.</p> <p>The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than six DECT registrations).</p> <p>▶ Register the handset again (→ page 9).</p> |
| <p>Your settings are not accepted.</p> <p>▶ Ensure that you have set the Profile Personal before you make changes to the device settings (→ page 31).</p> |
| <p>The handset does not ring.</p> <ol style="list-style-type: none">1. The ringtone is deactivated. ▶ Activate ringtone (→ page 23).2. Call forwarding is set. ▶ Deactivate call forwarding.3. The phone does not ring if the caller has withheld his number. ▶ Activate the ringtone for unknown calls (→ page 24).4. The phone does not ring during a specific period or for certain numbers. ▶ Check time control for external calls (→ page 24). |
| <p>The other party cannot hear you.</p> <p>The handset is "muted".</p> <p>▶ Activate the microphone again (→ page 20).</p> |

The caller's number is not displayed.

1. **Calling Line Identification (CLI)** is not approved for the caller.
 - ▶ The **caller** should ask the network provider to enable Calling Line Identification (CLI).
2. **Caller display (CLIP)** is not supported by the network provider or is not enabled for you.
 - ▶ Caller display (CLIP) is enabled by the network provider.
3. Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.
 - ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
 - ▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, phone number identification, caller ID, etc. in the system's user guide or ask the system manufacturer.

You hear an error tone when keying an input.

Action has failed/invalid input.

- ▶ Repeat the process.
- ▶ Read the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set to pulse dialling.

- ▶ Set your PABX to tone dialling.

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs

CE 0682

Guarantee Certificate United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee Certificate Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - ◆ The device is opened (this is classed as third party intervention)
 - ◆ Repairs or other work done by persons not authorised by Gigaset Communications.
 - ◆ Components on the printed circuit board are manipulated
 - ◆ The software is manipulated
 - ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - ◆ Devices fitted with accessories not authorised by Gigaset Communications
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

Your handset display has a resolution of 128 x 160 pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation.

This is normal and no reason for a warranty claim.

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

| Description | Maximum number of permitted pixel errors |
|--|--|
| Colour illuminated sub-pixels | 1 |
| Dark sub-pixels | 1 |
| Total number of coloured and dark sub-pixels | 1 |

Note

Signs of wear on the display and housing are excluded from the warranty.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

Your handset is splash proof.

If it comes into contact with water, knock the water out of the microphone opening and remove any water on the handset with an absorbent cloth. Your handset is ready for use.

If your handset comes into contact with a larger amount of liquid take the following steps:

- 1 Disconnect the power supply.**
- 2 Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.**
- 4 Pat all parts dry.**
- 5 Place the device in a dry, warm place **for at least 72 hours (not** in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).**
- 6 Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology: 2 x AAA NiMH

Voltage: 1.2 V

Capacity: 800 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

| | |
|---|-----------------|
| Standby time (hours) * | 310 * 160 ** |
| Talktime (hours) | 14 |
| Operating time for 1.5 hours of calls per day (hours) * | 125 * 100 ** |
| Charging time in charging cradle (hours) | 7.5 |

* No Radiation deactivated, without display backlight in idle status

** No Radiation activated, without display backlight in idle status

General specifications

DECT

| | |
|--|---|
| DECT standard | Supported |
| GAP standard | Supported |
| No. of channels | 60 duplex channels |
| Radio frequency range | 1880-1900 MHz |
| Duplex method | Time division multiplexing, 10 ms frame length |
| Repetition frequency of the transmission pulse | 100 Hz |
| Duration of the transmission pulse | 370 µs |
| Channel grid | 1728 kHz |
| Bit rate | 1152 kbit/s |
| Modulation | GFSK |
| Language code | 32 kbit/s |
| Transmission power | 10 mW average power per channel, 250 mW pulse power |
| Range | Up to 50 m indoors, up to 300 m outdoors |
| Environmental conditions for operation | +5°C to +45°C, 20% to 75% relative humidity |

Character charts

Standard characters

Press the relevant key the number of times indicated.

| | 1x | 2x | 3x | 4x | 5x | 6x | 7x | 8x | 9x | 10x |
|---|----|----|----|----|----|----|----|----|----|-----|
| 1 | 1 | | | | | | | | | |
| 2 | a | b | c | 2 | ä | á | à | â | ã | ç |
| 3 | d | e | f | 3 | ë | é | è | ê | | |
| 4 | g | h | i | 4 | ï | í | ì | î | | |
| 5 | j | k | l | 5 | | | | | | |
| 6 | m | n | o | 6 | ö | ñ | ó | ò | ô | õ |
| 7 | p | q | r | s | 7 | ß | | | | |
| 8 | t | u | v | 8 | ü | ú | ù | û | | |
| 9 | w | x | y | z | 9 | ÿ | ý | æ | ø | å |
| 0 | | . | , | ? | ! | | 0 | | | |

1) Space

2) Line break

Index

- A**
- Address book, see Phonebook
 - Advisory tones 24
 - Alarm clock 33
 - Anniversary 28
 - displaying missed 33
 - Anonymous calls off 24
 - Answer call key 1
 - Answer machine
 - answer machine list 16
 - Appointment
 - displaying missed 33
 - Area code
 - setting own area code 21
 - Assigning number key 25
 - Authorisation 41
 - Auto Answer 22
 - simple 19
- B**
- Baby monitor 34
 - Backlight, display 22
 - Base
 - setting up 5
 - Base station
 - changing the settings 21
 - Battery
 - charging 7
 - charging status 36
 - display 1
 - icon 1
 - inserting 6
 - Birthday, see Anniversary
- C**
- Call
 - accepting 19
 - accepting automatically 22
 - external 18
 - internal 27
 - transferring (connecting) 27
 - transferring internally (connecting) 27
 - Call lists 30
 - deleting an entry 30
 - Call protection 24
 - Call signal, visual 22
 - Call waiting
 - external during an internal call 27
 - internal during an external call 27
 - Calling
 - external 18
 - internal 27
 - Care 46
 - Care of the device 46
 - Changing
 - display language 8
 - Changing the phone settings 21
 - Changing the settings 21
 - Character charts 47
 - Charge status indicator 1
 - Charge status of the batteries 36
 - Charging cradle (handset)
 - connecting 5
 - setting up 5
 - Charging time of handset 47
 - Colour scheme 21
 - Connecting the headset 7
 - Consultation call
 - internal 27
 - Contact with liquid 46
 - Contents of the package 5
 - Control key 1, 14
 - Correcting incorrect entries 17
 - Correction of incorrect entries 17
 - Customer Care 39
- D**
- Deactivating
 - baby monitor 35
 - Default setting 26
 - Dialling
 - from the call list 18
 - using speed dial 25
 - using the redial list 18
 - with directory 19
 - Directory
 - saving entry 28
 - Display
 - backlight 22
 - changing display language 8
 - colour scheme 21
 - network mailbox message 16
 - phonebook memory 29
 - screensaver 21
 - setting 21
 - setting the backlight 22

- Display icons 36
- Display keys 1, 15
 - assigning 25
 - icons 37
- Displays
 - missed appointments/anniversaries ... 33
- Disposal 45
- E**
- Earpiece profile 22
- Earpiece volume 20
- ECO DECT 26
- Emergency numbers
 - not possible 4
- End call key 1
- End call/End key 18
- Ending a conference call 27
- Entering special characters 17
- Entering special letters 17
- Entering text 17
- Entering umlauts 17
- Environment 45
- Exclusion of liability 44
- External call
 - transferring internally (connecting) ... 27
- External calls
 - time control for ringtone 24
- F**
- Factory settings 26
- Field strength 36
- G**
- Getting started 5
- Guarantee Certificate 42
- H**
- Handset
 - advisory tones 24
 - changing the settings 21
 - colour scheme 21
 - connecting the charging cradle 5
 - display backlight 22
 - display language 8, 21
 - earpiece volume 20
 - idle status 16
 - list 14
 - muting 20
 - registering 9
 - restoring to default setting 26
 - screensaver 21
 - setting 21
 - setting up 6
 - speaker volume 20
 - switching on/off 14
 - transferring a call 27
 - use as a baby monitor 34
 - using multiple 27
- Handsfree mode 19
- Handsfree volume 20
- Hash key 1
- Headset socket 7
- Hearing aids 4
- Help 40
- I**
- Icon
 - alarm clock 33
- Icons
 - displaying new messages 16
 - on display keys 37
 - status bar 36
- Idle status
 - returning to 16
- Incoming message list (SMS) 16
- Incoming SMS message list 16
- Internal
 - making calls 27
- Internal call 27
 - call waiting 27
- Internal consultation call 27
- K**
- Key
 - assigning to a function or number ... 25
 - Profile key 1
- Key 1 (fast access) 1
- Keys
 - Answer call key 1
 - control key 1, 14
 - display keys 1, 15
 - End call key 1
 - End call/End key 18
 - fast access 1
 - Hash key 1
 - Message key 1
 - On/off key 1
 - profiles 31
 - Recall key 1
 - side key 15
 - Star key 1

Index

- L**
- Language
 - display 8
 - LED light 1, 31
 - Liquid 46
 - List
 - accepted calls 30
 - answer machine 16
 - call lists 30
 - handsets 14
 - incoming SMS message list 16
 - missed calls 30
 - outgoing calls 30
 - List entry 30
 - Locking/unlocking the keypad 14
 - Lower/upper case 17
- M**
- Making calls
 - accepting a call 19
 - external 18
 - internal 27
 - Managing the calendar 32
 - Marked characters 17
 - Medical equipment 4
 - Melody
 - ringtone for internal/external calls 23
 - Memory in the phonebook 29
 - Menu
 - opening 14
 - tree 38
 - Message key 1
 - Message lists 16
 - opening 16
 - Microphone 1
 - Missed anniversaries/appointments 33
 - Missed call 30
 - Muting the handset 20
- N**
- Number
 - copying to the phonebook 30
 - Numbers
 - entering 17
- O**
- On/off key 1
 - One touch call 19
 - Operating time of handset 47
 - Order in the phonebook 28
- P**
- Phone
 - restoring to default setting 26
 - setting 21
 - Phonebook 28
 - copying number from text 30
 - opening 14
 - order of entries 28
 - sending entry/list to handset 29
 - sending to handset 29
 - Power adapter 4
 - Profile key 1, 31
 - Profiles 31
 - Protection against unwanted calls 24
 - Protection from anonymous callers 24
- Q**
- Questions and answers 40
- R**
- Range 5
 - reducing 26
 - Recall key 1
 - Redial list 18
 - Reducing radiation 26
 - Reducing transmission power 26
 - Registering (handset) 9
 - Restoring to default setting 26
 - Restoring to factory settings 26
 - Ringtone
 - changing 23
 - melody for internal/external calls 23
 - silencing for anonymous calls 24
 - time control for external calls 24
 - Ringtones 23
- S**
- Safety precautions 4
 - Saving a number in the directory 28
 - Screensaver 21
 - Searching
 - in directory 29
 - Selecting an entry from the phonebook 29
 - Sending
 - phonebook entry to handset 29
 - Service 39
 - Setting an appointment 32
 - Setting options
 - phone 21
 - Setting the date 10, 38
 - Setting the display language 21

| | |
|---|--------|
| Setting the time. | 10, 38 |
| Setting up | |
| handset | 6 |
| Side key | 15 |
| Signal tone, see Advisory tones | |
| Silent alert | 23 |
| Simple Auto Answer | 19 |
| SMS | |
| incoming message list. | 16 |
| Snooze mode (alarm) | 34 |
| Sound profiles | 31 |
| Sound, see Ringtone | |
| Speaker. | 19 |
| Speed dial | 25 |
| Star key. | 1 |
| Status bar | 1 |
| icons. | 36 |
| Switching microphone (handset) on/off | 20 |

T

| | |
|---|----|
| Technical data | 46 |
| Telephone | |
| operating. | 14 |
| Three-way conference call | |
| ending. | 27 |
| Time control | |
| ringtone for external calls | 24 |
| Torch function. | 31 |
| Transferring an external call internally. | 27 |
| Troubleshooting | |
| general | 40 |

U

| | |
|----------------------------|----|
| Upper/lower case | 17 |
|----------------------------|----|

V

| | |
|--|-------|
| Viewing network mailbox message. | 16 |
| VIP ringtone. | 28 |
| Visual call signal | 1, 22 |
| Volume | |
| handset handsfree/earpiece volume. | 20 |

W

| | |
|----------------------------------|--|
| Warning tone, see Advisory tones | |
|----------------------------------|--|

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2013
Subject to availability.
All rights reserved. Rights of modification reserved.
www.gigaset.com

This user guide is made from 100% recycled paper.