

# Gigaset

## PREMIUM 100A

You can find the most up-to-date  
user guide at

[www.gigaset.com/manuals](http://www.gigaset.com/manuals)



---

# Contents

<b>Overview</b> .....	<b>4</b>
Handset .....	4
Base .....	5
Illustration in the user guide .....	6
<b>Safety precautions</b> .....	<b>7</b>
<b>Getting started</b> .....	<b>8</b>
Contents of the package .....	8
Base .....	9
Handset .....	10
<b>Using the telephone</b> .....	<b>13</b>
Getting to know your telephone .....	13
Making calls .....	16
Provider-specific functions (network services) .....	22
Call lists .....	26
Message lists .....	27
Directory .....	29
<b>Answer machine</b> .....	<b>33</b>
Local answer machine .....	33
Network mailbox .....	38
Set fast access for the answer machine .....	39
<b>Additional functions</b> .....	<b>40</b>
Sound profiles .....	40
Calendar .....	40
Alarm clock .....	43
Baby monitor .....	44
ECO DECT .....	45
Protection against unwanted calls .....	46
SMS (text messages) .....	50
Resource Directory .....	53
<b>Expanding the functionality of the telephone</b> .....	<b>54</b>
Multiple handsets .....	54
Repeater .....	56
Operation with a router .....	57
Operation with a PABX .....	57
<b>Adjusting the telephone settings</b> .....	<b>59</b>
Handset .....	59
System .....	65

<b>Appendix</b> .....	<b>67</b>
Service (Customer Care) .....	67
Manufacturer's advice .....	69
Technical data .....	71
Display icons .....	74
Menu overview .....	76
<b>Index</b> .....	<b>79</b>



Not all functions described in the user guide are available in all countries or from all network providers.

# Overview

## Handset



- 1 **Display**
- 2 **Status bar** (→ p. 74)  
Icons display current settings and operating status of the telephone
- 3 **Volume keys** (→ p. 14)  
for receiver/headset, ringtone, handsfree mode and appointment reminders
- 4 **Display keys** (→ p. 14)  
Various functions, depending on the operating situation

- 5 **End call key / On/off key**  
End call; Cancel function; one level back ▶ Press **briefly**  
Back to idle mode; Switch the handset on/off ▶ Press and **hold**
- 6 **Message key** (→ p. 27)  
Access to the call and message lists; **Flashes:** new message or new call
- 7 **Profile key**  
Switch between sound profiles
- 8 **Hash key**  
Lock/unlock the keypad ▶ Press and **hold**  
Toggle between upper/lower case and digits ▶ Press **briefly**
- 9 **USB connection socket**  
For data exchange between the handset and PC
- 10 **Microphone**
- 11 **Star key**  
Open special characters table ▶ Press **briefly**
- 12 **Headset connection** (2.5 mm jack)
- 13 **Key 1**  
Select answer machine/network mailbox ▶ Press and **hold**
- 14 **Recall key**  
Consultation call (flash) ▶ Press **briefly**  
Insert a dialling pause ▶ Press and **hold**
- 15 **Talk key / Handsfree key**  
Accept call; dial number displayed; switch between earpiece mode and handsfree mode; send SMS; open the redial list ▶ Press **briefly**  
Start dialling ▶ Press and **hold**
- 16 **Control key / Menu key** (→ p. 13)  
Open a menu; navigate in menus and entry fields; access functions



If multiple functions are listed, the button function depends on the situation.

Subject to technical and visual modifications as part of the product improvement process.

## Base

### A Registration/paging key

Locate a handset (paging)


Register a handset

▶ Press **briefly**





▶ Press and  
**hold**

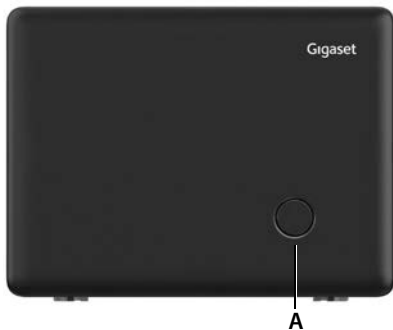















The colour and shape of your device may be different from the illustration.



## Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.








### Keys

 or 	Talk key	 or 	Handsfree key
	End call key	 to 	Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		Profile key
OK, Back, Select, Change, Save, ...		Display keys	

### Procedures

Example: Switching Auto answer on/off

- ▶  ▶   Settings ▶ OK ▶  Telephony ▶ OK ▶ Auto Answer ▶ Change  = activated)

Symbols	Meaning
▶	Every arrow initiates an action.
▶ 	When in idle status press the <b>centre</b> of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select <b>OK</b> to confirm. The submenu <b>Settings</b> opens.
▶  <b>Telephony</b>	Select the <b>Telephony</b> entry using the control key  .
▶ OK	Select <b>OK</b> to confirm. The submenu <b>Telephony</b> opens.
▶ <b>Auto Answer</b>	The function to switch Auto answer on/off appears as the first menu item.
▶ <b>Change</b>	Select <b>Change</b> to activate or deactivate. Function is activated <input checked="" type="checkbox"/> /deactivated <input type="checkbox"/> .

# Safety precautions



Read the safety precautions and the user guide before use.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → [www.gigaset.com/service](http://www.gigaset.com/service)). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Keep small cells and batteries, which can be swallowed, out of the reach of children.

Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing.

In the case of a swallowed cell or battery, seek medical care immediately.



To prevent loss of hearing, avoid listening at high volume over long periods of time.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

# Getting started

## Contents of the package

- One **base**,
- One power adapter for the base,
- One phone cable,
- One **handset**,
- One battery cover,
- Two batteries,
- One belt clip,
- One user guide

Models with multiple handsets, per handset:

- One handset,
- One charging cradle incl. power adapter,
- Two batteries, one battery cover and one belt clip



The base station and charging cradle are designed for use in closed, dry rooms within a temperature range of +5 °C to +45 °C.


Position the base on a level, non-slip surface at a central point in the flat or house. The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.



## Base

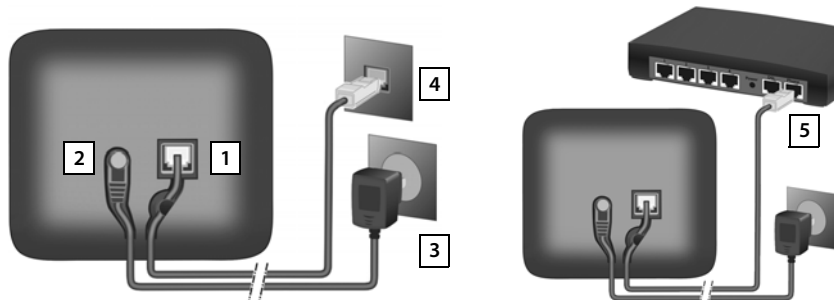

- ▶ Insert the phone cable into the connection socket **1** at the rear of the base until it clicks into place.
- ▶ Insert the power cable from the power adapter into the connection socket **2**.
- ▶ Depending on the model, if included in the delivery: Click the cover into place in the notches on the back of the base (not if mounting on a wall).
- ▶ Plug in the power adapter **3** and the phone jack **4**.

If connecting to a router:

- ▶ Plug the phone cable into the telephone connection socket on the router **5**.




The network cable must **always be connected** in order to function, as the phone will not operate without a power supply.

## Handset

### Connecting the charging cradle (if included)

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

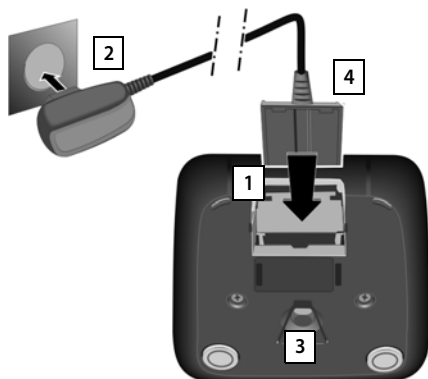

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

### Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**

### Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries (for correct +/- direction, see diagram).


- ▶ Fit the battery cover from the top.
- ▶ Press the cover until it clicks into place.


To re-open the battery cover:

- ▶ Insert a fingernail behind the notch at the top of the cover and slide it downwards.

## Charging the batteries

- ▶ Charge the batteries fully prior to first use in the base station/charging cradle or using a standard USB mains adapter.



The batteries are fully charged when the power icon  disappears from the display.



The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the batteries.

Handsets contained in the package have already been registered to the base station. In the event that a handset is not registered however, (indicated by **Please register handset**), register the handset manually (→ p. 54).

## Attaching the belt clip





The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.



## Changing the display language

You can change the display language if the phone is set to a language not required.

- ▶ Press the centre of the control key .
- ▶ Press the keys **9** and **5** **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .

Example



## Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.


- ▶ Press the display key **Set Time**

or, if the date and time have already been set:


- ▶  ▶   **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**

The active input position flashes.


Change input position: ▶ 

To switch between the entry fields: ▶ 

Enter date:

- ▶  enter the day, month and year in 8-digit format.


Enter time:

- ▶  enter hours and minutes in 4-digit format.


Save settings:

- ▶ Press the display key **Save**. . . . **Saved** is shown in the display and a confirmation tone sounds.


Return to idle status:

- ▶ Press and **hold** the End call key 

**The telephone is now ready for use.**

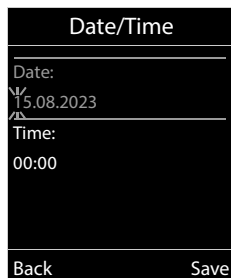

## Connecting the headset


- ▶ Connect the headset with 2.5 mm jack to the left side of the handset .


The headset volume corresponds with the setting for the receiver volume (→ p. 61).




## Connecting the USB data cable

For data exchange between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset .


 Connect the handset **directly** to the PC, **not** via a USB hub.

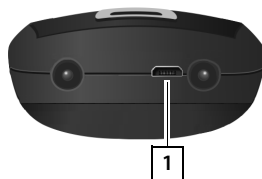


# Using the telephone

## Getting to know your telephone


### Switching the handset on/off


Switch on: ▶ Press and **hold** the End call key  on the handset when switched off

Switch off: ▶ When the telephone is in idle status, press and **hold** the End call key 

### Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the symbol  appears in the display.





If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

### Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key" or  for "press the centre of the control key".

#### In idle status

Open the directory

Open the list of available online directories

Open the main menu

Open the list of handsets



Press **briefly**



Press and **hold**



or 



#### In submenus, selection and entry fields

Confirm a function



#### During a conversation

Open the directory

Open the list of available online directories

Mute the microphone

Initiate an internal consultation call



Adjust the loudspeaker volume for receiver and handsfree mode



Press and **hold**




## Volume keys

Set volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ▶  
Press the volume keys  /  on the right side of the handset

## Display keys

The display keys perform a range of functions depending on the operating situation.

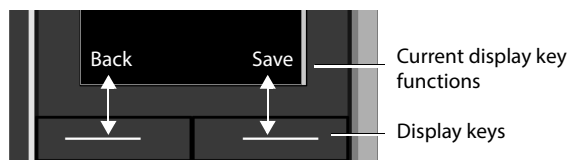

Display key icons → p. 74









The display keys have a function preset by default in idle status. Changing the assignment: → p. 64



## Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.

### Select/confirm functions


Confirm selection using	<b>OK</b> or press the centre of the control key 
One menu level back using	<b>Back</b>
Change to idle display using	 Press and <b>hold</b>
Switch function on/off using	<b>Change</b> on  / off 
Activate/deactivate option using	<b>Select</b> activated  / not activated 

### Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ use the control key  to select a submenu ▶ **OK**


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

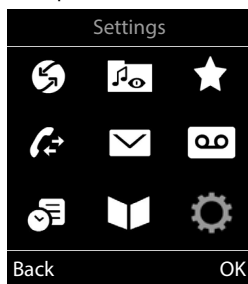

## Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ use the control key  to select a function ▶ **OK**


Return to the previous menu level:

▶ Press the display key **Back**

or

▶ **Briefly** press the End call key 


## Returning to idle status

▶ Press and **hold** the End call key 





If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.
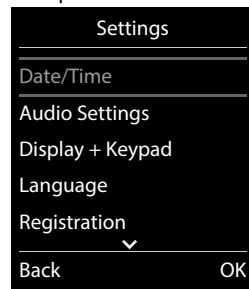
### Example





## Entering text




### Input position




- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

### Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**


### Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash  key  
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ use  to navigate to the desired character ▶ **Insert**



The availability of special characters depends on the language setting.

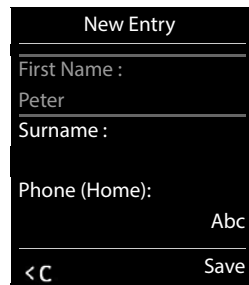


## Making calls

### Making calls

- ▶  enter the number ▶ **briefly** press the Talk key 

or

- ▶ Press and **hold** the Talk key  ▶  enter the number

- Cancel dialling: ▶ Press the End call key 



Information for Calling Line Identification: → p. 22

If the display backlight is deactivated, you can reactivate it by pressing any key. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

### Dialling from the directory

- ▶  open the directory ▶  select an entry ▶ press the Talk key 

If multiple numbers are entered:




- ▶  select a number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

### Dialling from the redial list

The redial list contains the 20 numbers last dialled with the handset.



- ▶ **Briefly** press the Talk key  ... the redial list is opened ▶  select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶  browse numbers if necessary ▶ when the desired number is reached press the Talk key 






## Managing entries in the redial list

- ▶ Briefly press the Talk key  ... the redial list is opened ▶  select an entry ▶ **Options** ... possible options:


Copy an entry to the directory:

- ▶  **Copy to Directory** ▶ OK

Copy the number to the display:

- ▶  **Display Number** ▶ OK ▶ Use as required  to change or add ▶  save as a new entry in the directory


Delete the selected entry:


- ▶  **Delete Entry** ▶ OK

Delete all entries:

- ▶  **Delete List** ▶ OK

Set automatic line seizure:






- ▶  **Automatic Redial** ▶ OK ... the dialled number is automatically dialled at fixed intervals (at least every 20 secs). The handsfree key flashes, "open listening" is activated.

The participant answers: ▶ Press the Talk key  ... the function is terminated

The participant does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.


## Dialling from the call list

The call lists (→ p. 26) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶  **Call Lists** ▶ OK ▶  select a list ▶ OK ▶  select an entry ▶ press the Talk key 










The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed Calls** list can also be opened by pressing the Message key .


## One touch call


A saved number is dialled by pressing **any** key. This allows children who are not yet able to enter a number to call a certain number, for example.

Activate one touch call mode:


- ▶  ▶   **Additional Features** ▶ OK ▶  **One Touch Call** ▶ OK ▶  activate **Activation** ▶  **Call to** ▶  enter the number ▶ **Save**... the active one touch mode is shown in the idle display

Make a one touch call: ▶ Press any key... the saved number is dialled

Cancel dialling: ▶ Press the End call key 

End one touch call: ▶ Press and **hold** the End call key 



Example

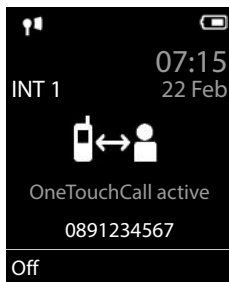

## Enter a dial pause when dialling

- ▶ Press and hold the hash  key. A P is shown on the display

## Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk / Handsfree key  .

Accept a call:

- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶  **Q.D**
- Accept a call on the headset

Switch off ringtone: ▶ **Silence**... the call can be accepted for as long as it is shown on the display

## Information about the caller





The caller's number is sent (→ p. 22).

The caller's phone number is displayed.

If the caller's number is saved in the local directory, the name is displayed.

## Accepting/rejecting call waiting




A call waiting tone indicates a call during an external call. The number or the name of the caller is displayed if the phone number is transferred.

- Reject a call: ▶ **Options** ▶  **Reject waiting call** ▶ **OK**
- Accept a call: ▶ **Accept** ▶ speak to the new caller. The previous call is placed on hold.
- End the call, resume the on-hold call: ▶ Press the End call key .




## Making internal calls



Multiple handsets have been registered to the base station (→ p. 54).

- ▶  Press **briefly** ... the handset list is opened, this handset is indicated by < ▶  select handset or **Call All** (group call) ▶ Press the Talk key 

Fast access for group call:

- ▶  Press **briefly** ▶ 
- or ▶  press and **hold**



Internal calls to other handsets registered to the same base station are free of charge.

You hear the busy tone if:

- There is already an internal connection
- The handset being called is not available (deactivated, outside of range).
- The internal call is not accepted within 3 minutes.

## Internal consultation call/Internal transfer


Call an **external** participant and transfer the call to an **internal** participant or hold a consultation call with him or her.

- ▶  ... the list of handsets is opened ▶  select a handset or **Call All** ▶ **OK** ... the internal participant(s) are called ... possible options:


Hold a consultation call:

- ▶ Speak to the internal participant


Return to the external call:

- ▶ **Options** ▶  **End Active Call** ▶ **OK**

Transfer the external call when the internal participant has answered:

- ▶ Announce an external call ▶ Press the End call key 

Transfer the external call before the internal participant answers:

- ▶ Press the End call key  ... the external call is forwarded immediately. If the internal participant does not answer or the line is busy, the external call will automatically return to you.

End the internal call if the internal participant does **not** answer or the line is busy:

- ▶ **End** ... You return to the external call

## Accepting/rejecting call waiting

An external call arriving during an internal call is indicated with a call waiting tone. If the number is transferred, you will see the number or the name of the caller on the display.

- Rejecting a call: ► **Reject**  
The call waiting tone is turned off. The call continues to be indicated on the other registered handsets.
- Accepting a call: ► **Accept** ... Speak to the new caller, the previous call is placed on hold.

## Internal call waiting during an external call

If an internal participant attempts to call you while you are involved in an external or internal call, this call is shown on the display (**Call Waiting**).

- End display: ► Press any key
- Accept the internal call: ► End your current call  
The internal call is indicated in the usual way. You can accept the call.

## Listening in to an external call

You are conducting an external call. An internal participant can listen in to this call and take part in the conversation (conference).



The **Listening In** function must be activated.

## Activating/deactivating internal listening in

- ► ► **Settings** ► OK ► **Telephony** ► OK ► **Listening In** ►  
Change = activated)

## Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You can listen in to the external call.

- Press and hold ... all participants will hear a signal tone

## Ending listening in

- Press ... all participants will hear a signal tone


---

## During a conversation

---

### Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ Place the handset in the charging cradle ▶ hold  for a further 2 seconds

---

### Call volume

Applies for the mode currently being used (handsfree, receiver or headset, when the handset has a headset connector):

- ▶ Press the volume keys  /  or  ▶ use  /  or  to set the volume ▶ **Save**




The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

---

### Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

or: ▶ **Briefly** press the Profile key 

## Provider-specific functions (network services)

Network services depend on the network (analogue fixed line network or IP telephony) and on the network provider (Service provider or phone system) and must be requested from that provider if required.


You will find a description of the features on your network provider's website or at one of their store branches.

If you require assistance, please contact your network provider.




Requesting network services may incur **additional costs**. Please consult your network provider.

Network services fall into two distinct groups:

- Network services that are activated when in idle status for the following call or all subsequent calls (for example, "calling anonymously"). These are activated/deactivated via the  **Select Services** menu.
- Network services that are activated during an external call, (for example, "consultation call", "swapping between two callers"). These are made available during an external call either as an option or by using a display key (e.g. **Ext. Call**).



To activate/deactivate the features, a code is sent to the telephone network.

- ▶ After a confirmation tone from the telephone network, press .

It is not possible to reprogram the network services.

## Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and may be displayed on the recipient's display (CLIP = CLI presentation). If the caller's number is withheld, it will not be displayed to the recipient. The call is made anonymously (CLIR = CLI Restriction).

### Caller display for incoming calls

#### Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

#### No Calling Line Identification

Instead of name and number, the following is displayed:

- **External:** No number has been transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

## Calling Line Identification for outgoing calls

### Switching Calling Line Identification on/off for all calls

These settings apply to all registered handsets.

- ▶  ▶   Select Services ▶ OK ▶  All Calls Anonym. ▶ Change  = activated)


### Deactivating Calling Line Identification for the next call

- ▶  ▶   Select Services ▶ OK ▶  Next Call Anonym. ▶ OK ▶  enter the number ▶ Dial ... the connection is established without Calling Line Identification

## Call waiting during an external call

During an **external** call, a call waiting tone indicates another external caller. If the number is being transferred, you will see the number or the name of the caller on the display.


Reject waiting caller:

- ▶ **Options** ▶  Reject waiting call ▶ OK ... the waiting caller hears the busy tone






Accept the waiting call:

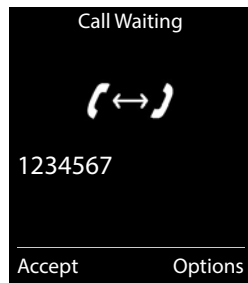- ▶ **Accept**

Once you have accepted the waiting call, you can switch between the two callers (**Call swapping** → p. 25) or speak to both simultaneously.



### Activating/deactivating call waiting

- ▶  ▶   Select Services ▶ OK ▶  Call Waiting ▶ OK ... then
  - Switch on/off: ▶ **Status:**  select On or Off
  - Activate: ▶ **Send**

Call waiting is activated or deactivated for all registered handsets.

## Ringback

### If busy/no answer

If a call recipient is unavailable, you can initiate a ringback.

- **If busy:** The ringback takes place as soon as the participant in question terminates the current call.
- **If no answer:** The ringback takes place as soon as the participant in question has made another call.

### Initiate ringback

- ▶ **Options** ▶  Ringback ▶ OK ▶ Press the End call key 


## Canceling ringback

- ▶  ▶  ▶  **Select Services** ▶ OK ▶  **Ringback Off** ▶ OK ... You will receive a confirmation from the telephone network ▶ Press the End call key 



You can only activate one ringback at a time. Activating a ringback will automatically cancel any ringback that is already active.

The ringback can only be received on the handset that activated the ringback.

If the ringback is indicated before you are able to cancel it: ▶ Press the End call key 

## Call divert

When diverting a call, the call is forwarded to another connection.

- ▶  ▶  ▶  **Select Services** ▶ OK ▶  **Call Divert** ▶ OK ... then

Switch on/off: ▶ **Status:**  select **On** or **Off**

Enter the number for call diverting:

- ▶  **To Phone Number** ▶  enter the number

Set the time for call divert:


- ▶  **When** ▶  select the time for call divert

**All Calls:** Calls are diverted immediately

**No Answer:** Calls are diverted if no one accepts the call within several rings.

**When Busy:** Calls are diverted if the line is busy.

Activate: ▶ **Send**

A connection is established to the telephone network ... a confirmation is sent from the telephone network ▶ Press the End call key 




Diverting calls may incur **additional costs**. Please consult your network provider.



## Calls with three participants


### Consultation calls

Make another external call during an external call. The first call is placed on hold.


- ▶ **Ext. Call** ▶  enter the number of the second participant . . . the active call is placed on hold and the second participant is called

If the second participant does not answer: ▶ **End**

### Ending a consultation call

- ▶ **Options** ▶  **End Active Call** ▶ **OK** . . . the connection to the first caller is reactivated



or

- ▶ Press the End call key  . . . a recall to the first participant is initiated




### Call swapping


Switching between two calls. The other call is placed on hold.


- ▶ During an external call, dial the number of a second participant (consultation call) or accept a waiting caller . . . the display shows the numbers and/or names of both call participants, the current participant is marked with 
- ▶ use the control key  to switch back and forth between participants

### Ending a currently active call

- ▶ **Options** ▶  **End Active Call** ▶ **OK** . . . the connection to the other caller is reactivated

or

- ▶ Press the End call key  . . . a recall to the first participant is initiated

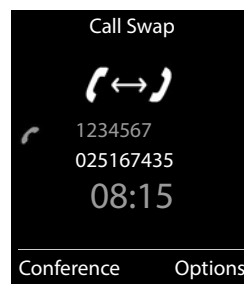








## Call lists






The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.

### List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
  -  **Missed Calls**
  -  **Accepted Calls**
  -  **Outgoing Calls** (redial list)
  -  **Call on the answer machine**
- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Date and time of call (if set)

Example

All Calls	
  Frank	
Today, 15:40	[3]
 089563795	
13.05.23, 18:32	
  Susan Black	
12.05.23, 13:12	
View	Options

### Opening the call list









Via the display key:  **Calls**  select list  OK

Via the menu:   **Call Lists**  OK  select list  OK

Via the Message key (missed calls):

 Press the Message key  **Missed Calls:**  OK

### Calling back a caller from the call list

  **Call Lists**  OK  select list  OK  select entry  Press the Talk key 

### Additional options

  **Call Lists**  OK  select list  OK ... possible options:

View an entry:  select entry  **View**





Number into directory:

 select entry  **Options**  **Copy to Directory**  OK





Number into blacklist:

 select entry  **Options**  **Copy to Blacklist**  OK

Request SMS information about a call number (might require payment):

 select entry  **Options**  **SMS Enquiry**  OK

Delete an entry:


 select entry  **Options**  **Delete Entry**  OK

Delete list:

 **Options**  **Delete List**  OK  Yes





## Message lists


Notifications about missed calls, messages on the answering machine/network mailbox, missed SMS messages and missed alarms are saved in the messages list and can be shown on the handset display.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated).



Icons for message types and the number of new messages are shown on the idle display.


Notification for the following message types is available:

-  on the answer machine/network mailbox
-  in the missed calls list
-  in the SMS message list
-  in the missed alarms list


 The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed  
An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.  
An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.
- ▶  Select a list ▶ **OK** ... the calls or messages are listed  
Network mailbox: The network mailbox number is dialled.

 The message list contains an entry for every answering machine assigned to the handset, such as a network mailbox.

Example

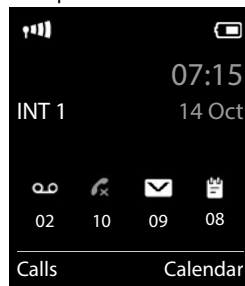




Example

Messages & Calls	
<b>Missed Alarms:</b>	(2)
Missed Calls:	(5)
<b>Mailbox:</b>	(1)
Answer Mach.:	
Back	OK

## Activating/deactivating Message key flashing


Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated for each message type.

In idle status:

- ▶  ▶ Press keys      ... the number 9 appears in the display ▶ use  to select the message type:
  - Messages on the network mailbox ▶
  - missed calls ▶
  - new SMS ▶
  - Messages on the answer machine ▶
- The number 9 followed by the entry (e.g. 975) is displayed, the current setting for the select message type flashes in the entry field (e.g. 0) ▶ use  to set the action for the arrival of new messages:
  - The Message key flashes ▶
  - The Message key does not flash ▶
- ▶ Confirm selected setting with **OK**

or

- ▶ return to idle display without making changes: ▶ **Back**

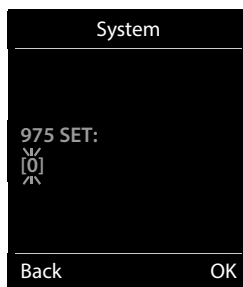

## Directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets.

### Opening the directory

▶ Briefly press  in idle status

or

▶  ▶  ▶  Directory ▶ OK




### Directory entries

Number of entries: up to 500


Information: First name and surname, up to three telephone numbers, e-mail address, anniversary with alert, VIP ringtone with VIP icon, CLIP-picture

Length of the entries: Numbers: max. 32 digits  
First name, surname: max. 16 characters  
E-mail address: max. 64 characters




### Creating an entry

▶  ▶  <New Entry> ▶ OK ▶  switch between the entry fields and enter data for an entry:


Names/numbers:

▶  enter first names and/or surnames, at least one number (personal, office, or mobile) and an e-mail address, if applicable


Anniversary:

▶  activate/deactivate **Anniversary** ▶  enter date and time ▶  select type of alert (**Optical only** or a ringtone)

Caller Melody (VIP) :


▶  select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Caller Picture :

▶  select a picture that is to be displayed during a call from the participant (→ Resource Directory).

Save entry: ▶ **Save**

Example

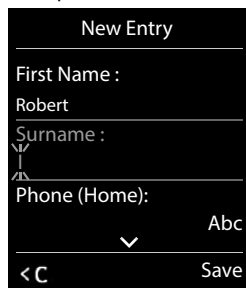

New Entry

First Name :  
Robert

Surname :  
▼

Phone (Home):  
▼ Abc

< C Save



The entry is only valid if it contains at least one number.



For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

## Searching for/selecting a directory entry

▶ ▶ browse searched names

or

▶ ▶ enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ continue browsing to the desired entry, if needed

Scroll through directory: ▶ ▶ Press and hold

## Displaying/changing an entry

▶ ▶ select entry ▶ **View** ▶ select the field to be changed ▶ **Edit**

or

▶ ▶ select an entry ▶ **Options** ▶ **Edit Entry** ▶ **OK**

## Deleting entries

Delete the **selected** entry:

▶ ▶ select an entry ▶ **Options** ▶ **Delete Entry** ▶ **OK**

Delete **all** entries:

▶ ▶ **Options** ▶ **Delete All** ▶ **OK** ▶ **Yes**

## Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

▶ ▶ **Options** ▶ **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

## Displaying the number of entries available in the directory

▶  ▶ Options ▶  Available Memory ▶ OK

## Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- From the text of an SMS
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or Options ▶  Copy to Directory ▶ OK ... possible options:

Create a new entry:

▶ <New Entry> ▶ OK ▶  select number type ▶ OK ▶ complete entry ▶ Save

Add number to an existing entry:

▶  select an entry ▶ OK ▶  select number type ▶ OK ... the number is entered or a prompt to overwrite an existing number is displayed ▶ if required, answer the prompt with Yes/No ▶ Save

## Copying an entry/directory



The sending and receiving handset must both be registered to the same base station. The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

### Both handsets support vCards

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.

### The recipient handset does not support vCards






A separate entry is created and sent for each number.

### The sending handset does not support vCards

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

---

### Copying individual entries

- ▶  ▶  select the desired entry ▶ **Options** ▶  **Copy entry** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**



Use **vCard via SMS** to send a directory entry in vCard format by SMS.

---

### Copying the entire directory

- ▶  ▶ **Options** ▶  **Copy all** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  select the receiving handset ▶ **OK** ... the entries are copied one after the other



# Answer machine

## Local answer machine










### Switching the answer machine on/off

The answer machine can be set to the following modes:

**Answer & record** The caller hears an announcement and is able to leave a message.

**Answer only** The caller hears an announcement but cannot leave a message.

**Alternating** The mode switches between **Answer & record** and **Answer only** at pre-determined times.

- ▶  ▶   **Voice Mail** ▶ OK ▶  **Activation** ▶ OK ... then
  - Switch on/off: ▶ **Activation:**  select **On** or **Off**
  - Set mode: ▶  **Mode** ▶  select mode
  - Set the time for **Alternating** mode:
    - ▶  switch between **Record from** and **Record until** ▶  enter hours/minutes in 4-digit format to set the start and end of the period. (The time **must** be set.)
  - Save settings: ▶ **Save**

## Operation using the handset

### Playing back messages

- ▶ Press and hold the  key



Key 1 is assigned to the answer machine.

or


















- ▶ Press the Message key  ▶  **Answer Mach.:** ▶ OK

or

- ▶  ▶   **Voice Mail** ▶ OK ▶ **Play Messages** ▶ OK ▶  select **Voice Mail** (when a network mailbox is set up) ▶ OK


The answer machine begins immediately with message playback. New messages are played back first.


## Actions during playback

- Stop playback: ▶ Press **2** /  or use the display key: ▶ **Options**
- Continue playback: ▶ Press **2** /  again or use the display key: ▶  **Continue**
- Go to the start of the current message: ▶ Press key **1** 
- Repeat the last 5 seconds of the message: ▶ Press key **4** 
- Skip to the next message: ▶ Press  or key **3** 
- Skip to previous message during the time stamp playback:
  - ▶ Press  or key **1** 
- Skip to next message during the time stamp playback:
  - ▶ Press key **4** 
- Mark a message as "new": ▶ Press key **\***  or use the display key ▶ **Options** ▶  **Mark as new** ▶ **OK**  
An "old" message that has already been played back is displayed as a "new" message again. The  key on the handset flashes.
- Copying the phone number from a message to the directory: ▶ **Options** ▶  **Copy to Directory** ▶ complete entry using 
- To delete a single message: ▶ Press **Delete** or key **0** 
- Delete all old messages: ▶ **Options** ▶  **Delete old list** ▶ **OK** ▶ **Yes**

## Picking up a call from the answer machine

You can pick up a call while the answer machine is recording or is being operated remotely:

- ▶ Press the Talk key  or use display key **Accept** ... recording is interrupted ... speak to the caller


If three seconds of the message have already been recorded when you accept the call, the message is saved. The Message key  on the handset flashes.

## Forwarding an external call to the answer machine




An external call is indicated on the handset.

The answer machine is activated, is not in use and still has enough memory.

- ▶ Press the display key  ... The answer machine starts immediately in answer and record mode and records the call. The set time for ring delay (→ S. 38) is ignored

## Activating/deactivating two-way record

Record an **external** call with the answering machine. Tell the other person that the call is being recorded.




- ▶ **Options** ▶  **Two-way Record** ▶ **OK** ... two-way recording is indicated in the display by an advisory text and placed in the answer machine list as a new message

End two-way recording: ▶ **End**



## Activating/deactivating call screening

During recording of a message you can screen a call via the handset loudspeaker:

Permanently switching call screening on/off:

- ▶  ▶  **Voice Mail** ▶ **OK** ▶  **Call Screening** ▶ **Change**  = activated) ... call screening is switched on/off for all registered handsets

Switching off call screening for the current recording:

- ▶ Press the display key **Silence** or the End call key  ▶ Pick up call using 


## Operating when on the move (remote operation)

Access answer machine or switch answer machine on from another telephone (e.g. hotel, mobile phone).



The system PIN is set to something other than 0000 and the other telephone has tone dialling (DTMF).

## Switching on the answer machine

- ▶ Call the telephone connection and let it ring until the announcement "Please enter PIN" (approx. 50 seconds) ▶  enter the telephone's system PIN within 10 seconds ... the answer machine is switched on, the remaining memory is announced, messages are played back



Incorrect PIN is entered or entry takes too long (more than 10 seconds): The connection is interrupted. The answering machine remains off.

An answering machine cannot be disabled remotely.

## Checking the answer machine



The answer machine is activated.

- ▶ Call the telephone connection ▶ during the announcement press key **9** ... playback of the announcement is interrupted ▶ Enter system PIN

You are informed whether any new messages have been recorded. Message playback begins.

The answer machine is operated using the following keys:

During the time stamp playback: Skip to previous message. **1**

During message playback: Go to the start of the current message.

Pause playback. Press again to resume. **2**

After a pause of approx. 60 seconds, the connection is ended.

Go to the next message. **3**


Repeat the last 5 seconds of the message playback. **4**

During message playback: Delete current message. **0**

Change the status of a previously played back message to "new". **\***

The next message starts to play. The remaining memory is announced at the end of the last message.

## Cancelling remote operation

- ▶ Press the End call key  or replace the receiver







The answer machine will terminate the connection under the following circumstances:

- The entered system PIN is incorrect.
- There are no messages on the answer machine.
- After the remaining memory announcement.

## Settings

### Recording a personal announcement/advisory message

The phone is supplied with pre-recorded announcements for announcement and advisory mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

- ▶  ▶  ▶ **Voice Mail** ▶ **OK** ▶  ▶ **Announcements** ▶ **OK** ▶  switch between **Record Announcement** and **Rec. Advisory Msg.** ▶ **OK** ▶ **OK** ▶ record your announcement message (at least 3 seconds) ... possible options:


Complete the recording and save:

- ▶ **End** ... the announcement is played back for you to check

Repeat the recording:

- ▶ **New**

Cancel the recording:

- ▶ Press the End call key  or **Back**

Resume the recording:

- ▶ **OK**







Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.


If the recording is cancelled, the default announcement is used.

The recording is cancelled or not started if the answer machine memory is full.

- ▶ Delete old messages ... the answer machine switches back to **Answer & record** mode ▶ repeat the recording, if needed

### Listening to announcements/advisory messages

- ▶  ▶  ▶ **Voice Mail** ▶ **OK** ▶  ▶ **Announcements** ▶ **OK** ▶  switch between **Play Announcement** and **Play Advisory Msg.** ▶ **OK** ... the announcement is played back ... possible options:

Cancel playback: ▶ Press the End call key  or **Back**

Cancel playback and record a new announcement:

- ▶ **New**

If the answer machine's memory is full, it will switch to **Answer only** mode.

- ▶ Delete old messages ... the answer machine switches back to **Answer & record** ▶ repeat any recording

### Deleting announcements/advisory messages

- ▶  ▶  ▶ **Voice Mail** ▶ **OK** ▶  ▶ **Announcements** ▶ **OK** ▶  switch between **Delete Announcem.** and **Del. Advisory Msg.** ▶ **OK** ▶ **Yes**

Once the announcement has been deleted, the relevant pre-recorded announcement is used again.

## Setting recording parameters

- ▶ ▶ ▶ **Voice Mail** ▶ OK ▶ ▶ **Recordings** ▶ OK ... then  
Maximum recording time:
  - ▶ **Length:** use to select timeframe
- Recording quality:
  - ▶ **Quality** ▶ use to switch between **Long Play** and **Excellent**  
(at higher quality, the max. recording time will decrease)
- When should a call be picked up:
  - ▶ **Ring Delay** ▶ use to select a time
- Save settings:
  - ▶ **Save**

The following apply when setting is **Automatic**:

- No new messages available: a call will be picked up after 18 seconds.
- New messages available: a call will be picked up after 10 seconds.

When checking messages remotely (→ S. 35) it is therefore apparent after 15 seconds that there are no new messages waiting. No call costs are incurred if the call is ended immediately.

- The answering machine saves recordings in high quality. On some devices, you can set the recording quality. A lower quality prolongs the maximum record time. The opposite also applies.

## Network mailbox

### Enter number

- ▶ ▶ ▶ **Voice Mail** ▶ OK ▶ ▶ **Network Mailbox** ▶ OK
- ▶ ▶ enter or amend the network mailbox number ▶ **Save**

- To activate/deactivate the network mailbox use the phone number and a function code of your network provider. Please contact the network provider if you require any further information.

### Playing back messages

- ▶ Press and hold



Key 1 has been assigned to the network mailbox.


or

- ▶ Press the Message key ▶ **Network Mailbox** ▶ OK


or

- ▶ ▶ ▶ **Voice Mail** ▶ OK ▶ **Play Messages** ▶ OK ▶ ▶ **Network Mailbox** ▶ OK
- Listen to announcement out loud: ▶ Press the handsfree key


## Set fast access for the answer machine

It is possible to call a network mailbox or the telephone's local answer machine directly by pressing key .

### Assigning key 1 / Changing assignment




Settings for the fast access are device-specific. A different answer machine can be assigned to key  on each registered handset.

- ▶  ▶   **Voice Mail** ▶ OK ▶  **Set Key 1** ▶ OK ▶  select answer machine ▶ **Select**  = selected)

Return to idle status: ▶ Press and **hold** the End call key 

### Network mailbox


If no number has yet been saved for the network mailbox:

- ▶  make a change in the line **Network Mailbox** ▶  enter the number of the network mailbox ▶ **Save** ▶ Press and **hold** the End call key  (idle status)


## Additional functions

### Sound profiles

The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**.

▶  switch between the profiles ... the profile is changed straight away without a prompt  
The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ▶ after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Profile Loud** and **Profile Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

### Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2023						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK



## Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ▶ **Organizer** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ select desired day ▶ **OK** ... then
- Switch on/off: ▶ **Activation:** select **On** or **Off**
- Enter date: ▶ **Date** ... the selected day has been pre-set ▶ enter new date
- Enter time: ▶ **Time** ▶ enter hours and minutes of the appointment
- Set name: ▶ **Text** ▶ enter a description of the appointment (e.g. evening meal, meeting)
- Set alarm tone: ▶ **Signal** ▶ select the melody of the reminder alarm or deactivate the acoustic signal
- Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ **OK** ▶ then enter information for the appointment.

## Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **Off**

Respond with SMS: ▶ Press the display key **SMS** ... the SMS menu is displayed

Permanently modify the ringtone volume: ▶ Press the volume keys / during the reminder



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

## Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:



- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

## Opening the list

- ▶ Press the Message key  ▶  **Missed Alarms:** ▶ OK ▶  browse through the list of any appointments

or

- ▶  ▶  **Organizer** ▶ OK ▶  **Missed Alarms** ▶ OK






Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ **Delete**

Compose an SMS: ▶ **SMS** (only if the list has been opened via the menu) ... the SMS menu is opened

---

## Displaying/changing/deleting stored appointments

- ▶  ▶  **Organizer** ▶ OK ▶  **Calendar** ▶ OK ▶  select day ▶ OK ... the appointment list is displayed ▶  select date ... possible options:

Display appointment details:

- ▶ **View** ... the appointment settings are displayed

Change appointment:


- ▶ **View** ▶ **Edit**  
or ▶ **Options** ▶  **Edit Entry** ▶ OK

Activate/deactivate appointment:

- ▶ **Options** ▶  **Activate/Deactivate** ▶ OK

Delete appointment: ▶ **Options** ▶  **Delete Entry** ▶ OK

Delete all appointments for a day:

- ▶ **Options** ▶  **Delete all Appoints.** ▶ OK ▶ **Yes**

## Alarm clock



Date and time have been set.

### Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ **Organizer** ▶ OK ▶ **Alarm Clock** ▶ OK ... then
  - Switch on/off: ▶ **Activation:** select **On** or **Off**
  - Setting the wake-up time:
    - ▶ **Time** ▶ enter hours and minutes
    - Set days: ▶ **Occurrence** ▶ switch between **Monday-Friday** and **Daily**
    - Set the volume: ▶ **Volume** ▶ set volume in 5 levels or select **crescendo** (increasing volume)
    - Set alarm: ▶ **Melody** ▶ select a ringtone for the alarm
    - Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

### Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

### Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **Off**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

## Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The microphone of the handsfree device is always used, even if a headset is connected.

The answer machine for the destination number must be switched off.

After switching on:


- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

### Activating and setting the baby monitor

- ▶ ▶ **Additional Features** ▶ OK ▶ **Baby Phone** ▶ OK ... then
- Switch on/off:
  - ▶ **Activation:** select **On** or **Off**
- Enter destination:
  - ▶ **Alarm to** ▶ select **External** or **Internal**
  - External:** ▶ **Number** ▶ select number or select a number from the directory: ▶
  - Internal:** ▶ **Handset** ▶ **Change** ▶ select the handset ▶ OK
- Activate/deactivate two-way talk:
  - ▶ **Two Way Talk** ▶ select **On** or **Off**
- Set microphone sensitivity:
  - ▶ **Sensitivity** ▶ select **High** or **Low**
- Save settings: ▶ **Save**

The destination number is displayed in idle display when the baby monitor is activated.

#### Baby Phone activated

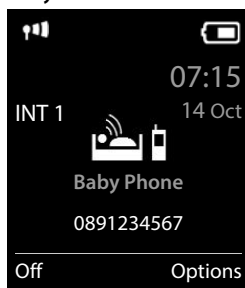

## Deactivate baby monitor / Cancel alarm

Deactivate the baby monitor:

- ▶ In idle status press the display key **Off**

Cancel the alarm:



- ▶ Press the End call key  during an alarm

## Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

- ▶ Accept alarm call ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **Off**.



The baby monitor cannot be reactivated remotely.

Reactivate: → p. 44

## ECO DECT

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

### Reducing radiation by up to 80%

- ▶  ▶   Settings ▶ OK ▶  ECO DECT ▶ OK ▶ Maximum Range ▶ Change  = deactivated)



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

### Deactivating radiation in idle status

- ▶  ▶   Settings ▶ OK ▶  ECO DECT ▶ OK ▶  No Radiation ▶ Change  = activated)




To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.


In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.









- ▶ Press and **hold** the Talk key  ... the dialling tone sounds.

## Protection against unwanted calls


### Time control for external calls



Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Ringtones (H/Set)** ▶ OK ▶  **Time Control** ▶ **Change ... then**
- Switch on/off: ▶  select **On** or **Off**
- Enter time: ▶  switch between **Suspend ring. from** and **Suspend ring. until** ▶  enter start and end in 4-digit format
- Save: ▶ **Save**

Example

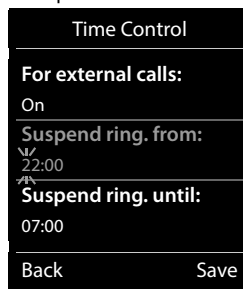

The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

## Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

### For one handset

- ▶ ▶ ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (H/Set) ▶ OK ▶ Anon. Call Silenc. ▶ Edit ( = activated) ... the call is only signalled on the display

### For all handsets

- ▶ ▶ ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Anonymous Calls ▶ Edit ( = activated) ▶ Protection Mode:
 

<b>No Protection</b>	Anonymous calls are indicated in the same way as identified numbers.
<b>Silent Call</b>	The telephone will not ring and the incoming call will only appear in the display.
<b>Block Call</b>	The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
Save settings:	▶ <b>Save</b>

## Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶ ▶ ▶ Settings ▶ OK ▶ Audio Settings ▶ OK ▶ Ringtones (H/Set) ▶ OK ▶ Silent Charging ▶ Change ( = ringtone is switched off when in charging cradle)

## Black list

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

The black list is enabled when **Silent Call** or **Block Call** is selected as the protection mode.

### Displaying/editing the black list

- ▶ ▶ ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Black List ▶ Edit ▶ Blocked Numbers ▶ OK ... the list of blocked numbers is displayed ... possible options:
  - Create an entry: ▶ **New:** use to enter a number ▶ **Save**
  - Delete an entry: ▶ select an entry ▶ **Delete** ... the entry is deleted

### Transferring a number from a call list to the black list

- ▶ ▶ ▶ Call Lists ▶ OK ▶ Accepted Calls/Missed Calls ▶ OK ▶ select entry ▶ **Options** ▶ **Copy to Blacklist** ▶ OK

## Setting the protection mode

▶  ▶   **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Black List** ▶ Edit ▶  
 **Protection Mode** ▶ OK ▶  select desired protection:

- |                      |   |
|----------------------|---|
| <b>No Protection</b> | All calls are indicated, including from callers whose numbers are on the black list.                                  |
| <b>Silent Call</b>   | The telephone will not ring and the incoming call will only appear in the display.                                    |
| <b>Block Call</b>    | The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone. |
| Save settings:       | ▶ <b>Save</b>   |





## SMS (text messages)

It is possible to send SMS messages as soon as the telephone has been connected.



Calling Line Identification is enabled (→ p. 22).  
The network provider supports the SMS service.

## Writing and sending SMS messages



An SMS may be up to 612 characters in length. If the number of characters exceeds 160, the SMS is sent as **linked SMS** messages (up to four individual SMS messages).

▶ ▶ ▶ SMS ▶ OK ... then

- Write an SMS: ▶ New SMS ▶ OK ▶ enter SMS text
- Send an SMS: ▶ Press the End call key
- Enter number: From the directory: ▶ ▶ select number ▶ OK  
or ▶ enter number directly
- Send: ▶ **Send**



The number must include the local area code (even if you are in that area).

If an external call comes in, or if you interrupt writing for more than 2 minutes, the text is automatically saved in the draft message list.

If your network provider supports this feature:

- You can also send an SMS as a fax.
- You can also send an SMS to an email address. In such case, enter the email address at the start of the SMS text.



**Sending SMS messages** may incur **additional costs**. Please consult your network provider.

## Temporary storing of an SMS (draft message list)

You can temporarily store text messages, change and send them later.



▶ ▶ ▶ SMS ▶ OK ▶ New SMS ▶ OK ▶ write SMS ▶ Options ▶  
 Save ▶ OK

## Receiving an SMS

Incoming SMS messages are saved in the incoming message list, linked SMS messages are generally displayed as **one** SMS.


### SMS message list

The incoming SMS message list contains all the received SMS messages and those SMS messages that could not be sent due to an error.

New SMS messages are indicated on all Gigaset handsets by the  icon on the display, the flashing Message key  and an advisory tone.

### Open the SMS message list

With the Message key:

- ▶  ... The message list is opened (number of available SMS texts, **bold** = new entries, **not bold** = read entries)

Open list: ▶  select SMS: ▶ OK

Via the SMS menu:


- ▶  ▶  SMS ▶ OK ▶  Incoming ▶ OK

### Reading and managing SMS messages

- ▶  ▶  SMS ▶ OK ▶  Incoming ▶ OK ▶  select SMS ▶  Read






### Saving numbers from SMS text to the directory


If a telephone number in the SMS text is recognised, it is automatically highlighted.

Save the number in the directory: ▶ 

## SMS notification

Receive notifications of **missed calls** and/or **new messages on the answer machine**.

- ▶  ▶  SMS ▶ OK ▶  Settings ▶ OK ▶  Notification ▶ Change ( = activated) ... then

Enter number: ▶ To:  enter the number to which the SMS should be sent

Missed calls: ▶  Missed Calls ▶  select On or Off

Answer machine: ▶  For AM messages ▶  select On or Off

Save settings: ▶ Save



Do not enter your own fixed line network number for notification of missed calls. This can create an endless loop that will incur charges.

**SMS notification** may incur **additional costs**.

## SMS service centres

The number for at least one SMS service centre must be saved in the device to be able to send SMS messages. The SMS service centre number can be obtained from the service provider.

Your SMS messages are sent via the SMS service centre that is entered as the active send centre. Only one SMS service centre can be the active send centre at any one time.

### Entering/changing the SMS service centre, setting the send service centre

▶ ▶ SMS ▶ OK ▶ Settings ▶ OK ▶ Service Centres ▶ OK ▶ select SMS service centre (✔ = current send service centre) ▶ Edit ... then

Activate send service centre:

Active Send: select Yes or No (Yes = SMS messages are sent via the SMS service centre)

Enter the number of the SMS service:

▶ SMS Service Centre Number ▶ enter the number

Save settings:

▶ Save

## Activating/deactivating first ring muting

Every incoming SMS is indicated by a single ring. If such a "call" is answered, the SMS is lost. To prevent this, mute the first ring for all external calls. In idle status:

▶ ▶ \* # 0 5 # 1 9 ... the current setting flashes in the input field (e.g. 1) ... then

Do not mute the first ringtone:

▶ 0 ▶ OK

Mute the first ringtone (default setting):

▶ 1 ▶ OK















## SMS troubleshooting

- E0 Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
- FE Error occurred while sending SMS.
- FD Connection to SMS service centre failed.

## Resource Directory

Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory.

### Managing images (for screensaver and CLIP) and sounds

- ▶  ▶   **Resource Directory** ▶ **OK** ... possible options:
  - View image: ▶  **Screensavers / Caller Pictures** ▶ **OK** ▶  select picture ▶ **View** ... the selected picture is displayed
  - Play sound: ▶  **Sounds** ▶ **OK** ▶  select sound ... the selected sound is played
    - Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶  select volume ▶ **Save**
  - Rename picture/sound:
    - ▶  **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶  select sound/image ▶ **Options** ▶ **Rename** ▶  delete name ▶  enter new name ▶ **Save** ... the entry is saved with the new name
  - Delete picture/sound:
    - ▶  **Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶  select sound/picture ▶ **Options** ▶ **Delete Entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

### Check memory

Display the available memory for screensavers and CLIP-pictures.

- ▶  ▶   **Resource Directory** ▶ **OK** ▶  **Capacity** ▶ **OK** ... the percentage of available memory is displayed

# Expanding the functionality of the telephone

## Multiple handsets

Up to six handsets can be registered to the base station.

Each registered device is assigned an internal number (1 – 6) and an internal name (INT 1 – INT 6). The number or name assigned can be changed.

If all internal numbers have already been assigned at the base station: ► de-register a handset that is no longer needed

## Registering the handset

A handset can be registered on up to four base stations.



Registration must be initiated on the base station **and** on the handset.  
Both must be carried out **within 60 secs.**

### On the base station

► Press and hold the Registration/Paging key on the base station (approx. 3 secs)

### On the handset

► ► ► Settings ► OK ► Registration ► OK ► Register Handset ► OK ... an available base station is sought ► Enter system PIN (default setting: 0000) ► OK



If the handset is already registered with four bases, select the base to be replaced by the new base.



Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. INT 1. If not, repeat the procedure.





Maximum possible number of handsets registered to the base station (all internal numbers assigned): The handset with the highest internal number is replaced by the new one. If this is not possible, because a conversation is being held on this handset, for example, the message **No free Internal Number** is given. ► De-register a handset that is no longer required and repeat the registration procedure

## Registering a handset to multiple base stations

Your handset can be registered to up to four base stations. The active base station is the base station to which the handset was last registered. The other base stations remain saved in the list of available base stations.

- ▶  ▶   Settings ▶ OK ▶  Registration ▶ OK ▶ Select Base ▶ OK ... possible options:

Change active base station:







- ▶ use  or **Best Base** to select base station ▶ Select  = selected)

**Best Base:** The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

Change name of a base station:

- ▶ use  to select a base station ▶ Select  = selected) ▶ Name ▶ change name ▶ Save

## De-registering the handset

- ▶  ▶   Settings ▶ OK ▶  Registration ▶ OK ▶  De-reg. Handset ▶ OK ... the handset being used is selected ▶ use  to select a different handset if desired ▶ OK ▶ enter system PIN if desired ▶ OK ▶ confirm de-registration with **Yes**


If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).


## Locating a handset (Paging)

- ▶ **Briefly** press the Registration/paging key on the base station.

All handsets will ring at the same time (paging), even if ringtones are switched off. **Exception:** handsets on which the baby monitor is activated.



### Ending the search

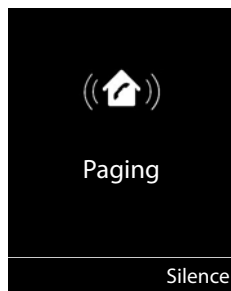

- ▶ **Briefly** press the registration/paging key on the base station
- or ▶ Press the End call key  on the handset
- or ▶ Press the display key **Silence** on the handset
- or ▶ No action. After approx. 30 seconds, the paging call will end automatically.



## Changing the handset name and internal number

When registering multiple handsets, they will automatically be assigned the names **INT 1**, **INT 2** etc. Each handset will automatically be assigned the lowest unassigned internal number. The internal number is shown as the name of the handset on the display e.g. **INT 2**. You can change the names and the numbers of handsets. The name must not exceed 10 characters in length.

▶  ... the list of handsets is opened, the current handset is highlighted with < ▶ use  to select a handset ... possible options:

Edit name: ▶ **Options** ▶  **Rename** ▶ **OK** ▶ use **<C** to delete the current name ▶ use  to enter a new name ▶ **OK**

Edit number: ▶ **Options** ▶  **Edit Handset No.** ▶ **OK** ▶ use  to select a number ▶ **Save**

## Repeater

A repeater increases the receiving range between the Gigaset handset and the base station.

The registration procedure for a repeater depends on the version of the repeater being used.

- Repeater without encryption, e.g. Gigaset repeater prior to Version 2.0
- Repeater with encryption, e.g. Gigaset repeater later than Version 2.0

Further information about the Gigaset repeater can be found in the repeater user guide and at → [www.gigaset.com](http://www.gigaset.com).

### Repeater without encryption

#### Activate Maximum Range/deactivate No Radiation

▶  ▶  ▶  **Settings** ▶ **OK** ▶  **ECO DECT** ▶ **OK** ▶ **Maximum Range** ▶ **Change** ( = activated) ▶  **No Radiation** ▶ **Change** ( = deactivated)

#### Disabling encryption

▶  ▶  ▶  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Encryption** ▶ **Change** ( = deactivated)

#### Registering a repeater

▶ Connect the repeater to the mains power supply ▶ Press and **hold** the Registration/paging key on the telephone base station (min. 3 secs) ... the repeater is automatically registered

It is possible to register more than one Gigaset repeater.



## Repeater with encryption



Encryption is activated (default setting).

### Registering a repeater

- ▶ Connect the repeater to the mains power supply ▶ Press and **hold** the Registration/paging key on the telephone base station (min. 3 secs) ... the repeater is automatically registered

Up to 2 repeaters may be registered.

The ECO DECT function **Maximum Range** is activated and the **No Radiation** function is deactivated. The settings cannot be changed whilst the repeater is registered.

As soon as a repeater is registered, it will appear in the repeater list under

**Settings** ▶ **System** ▶ **Repeater**

### De-registering a repeater

- ▶ ▶ **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Repeater** ▶ **OK** ▶ use to select repeater ▶ **De-reg.** ▶ **Yes**

## Operation with a router

When operating on the analogue connection of a router, any **echoes** that may occur can be reduced by activating **XES mode 1** (XES = eXtended Echo Suppression).

If the **XES mode 1** does not sufficiently suppress the occurring echoes: activate **XES mode 2**.

- ▶ ▶ \* ## 0 5 ## 7 0 ▶ press one of the following keys
  - ▶ **OK** Normal mode
  - ▶ **OK** XES mode 1
  - ▶ **OK** XES mode 2



If there are no problems with echoes, the normal mode (factory settings) should be activated.

## Operation with a PABX

To find out which settings are required for a PABX, please refer to the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

### Setting the flash time

- ▶ ▶ **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Recall** ▶ **OK** ... possible flash times are listed ▶ use to select flash time ▶ **Select** ( = selected)

## Saving an access code (outside line code)

Setting the access code (e.g. "0") for dialling using the fixed line network.

- ▶ ▶ ▶ **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Access Code** ▶ **OK** ... then
  - Fixed line network: ▶ **Access external line with:** use to enter or change access code, max. 3 digits
  - Rule: ▶ **For** ▶ use to select when the access code should be dialled
    - Call Lists:** The access code will only prefix numbers from a list (list of answered calls, list of missed calls, SMS list, answer machine list).
    - All Calls:** The access code prefixes all numbers dialled.
    - Off:** The access code is deactivated and does not prefix any telephone number.
  - Save: ▶ **Save**



The access code never prefixes any SMS service centre numbers.

## Setting pauses

- ▶ ▶ ▶ ▶ ▶ ▶ ▶ ... then
  - Pause after line seizure:
    - 1 sec ▶ ▶ ▶ ▶ **OK**
    - 3 secs ▶ ▶ ▶ ▶ **OK**
    - 7 secs ▶ ▶ ▶ ▶ **OK**
  - Pause after Recall key (flash):
    - 800 ms ▶ ▶ ▶ ▶ **OK**
    - 1600 ms ▶ ▶ ▶ ▶ **OK**
    - 3200 ms ▶ ▶ ▶ ▶ **OK**
  - Dialling pause (pause after access code):
    - 1 sec ▶ ▶ ▶ ▶ **OK**
    - 2 secs ▶ ▶ ▶ ▶ **OK**
    - 3 secs ▶ ▶ ▶ ▶ **OK**
    - 6 secs ▶ ▶ ▶ ▶ **OK**

### To enter dialling pause when dialling

- ▶ Press and **hold** the hash key ... a **P** appears in the display.

# Adjusting the telephone settings

## Handset

### Changing the language

- ▶ ▶ **Settings** ▶ OK ▶ **Language** ▶ OK ▶ select language ▶  
Select (= selected)

If the handset has been set to an incomprehensible language:

- ▶ ▶ Press the keys **9** **5** **slowly** one after the other ▶ select the correct language ▶ press the right display key

## Display and keypad

### Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Screensaver** ▶ **Edit**  
( = on) ... then
  - Switch on/off: ▶ **Activation:** select **On** or **Off**
  - Select screensaver: ▶ **Selection** ▶ select a screensaver (**Digital Clock / Analog Clock / <Pictures> / Slideshow**)
  - View screensaver: ▶ **View**
  - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.



All pictures from the **Screensaver** folder of the **Resource Directory** are available to select.

### End screensaver

- ▶ **Briefly** press the End call key ... the idle display appears








### Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶ ▶ **Settings** ▶ OK ▶ **Display + Keypad** ▶ OK ▶ **Large Font** ▶ **Change**  
( = on)

## Colour scheme

You can choose from a range of colour combinations for the display.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Colour Schemes** ▶ OK ▶ use  to select the desired colour scheme ▶ **Select**  = selected)

## Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Display Backlight** ▶ OK ... then

Backlight in the charging cradle:

- ▶ **In Charger:**  select **On** or **Off**

Backlight when not in the charging cradle:

- ▶  **Out of Charger** ▶  select **On** or **Off**

Save selection:

- ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is activated.

## Keypad illumination

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Key Illumination** ▶ **Change**  = on)

## Activating/deactivating automatic keypad lock


Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Display + Keypad** ▶ OK ▶  **Auto Keypadlock** ▶ **Change**  = on)

## Auto answer


When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶  ▶  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change**  = activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

## Changing the earpiece and speaker volume



You can set the volume of the earpiece and speaker at 5 levels independently of each other.


 Changes are only saved permanently in **Profile Personal**.

### During a conversation

▶ Press the volume keys  /  on the right side of the handset

or

▶  **Handset Volume** ▶  select volume ▶ **Save ...** the setting is saved

 The setting is automatically saved after around 3 seconds without saving.

### In idle status

▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ...

then

For the earpiece: ▶ **Earpiece:** use  to set the volume

For the speaker: ▶  **Speaker** ▶ use  to set the volume

Save settings: ▶ **Save**

## Earpiece and handsfree profile

Select **earpiece** and **handsfree** profiles to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable for you and the other party.

▶  ▶  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Acoustic Profiles** ▶  **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶  select profile ▶ Select  = selected)








**Earpiece Profiles:** High or Low (default settings)

**Handsfree Profiles:** Profile 1 (default settings) ... Profile 4


## Ringtones



### Ringtone volume

Volume can be set at 5 levels or crescendo (increasing volume).

- ▶  ▶   Settings ▶ OK ▶  Audio Settings ▶ OK ▶  Ringtones (H/Set) ▶ OK ▶ Volume ▶ OK ▶  select Internal Calls and Alarms or External Calls ▶  set volume ▶ Save

Example

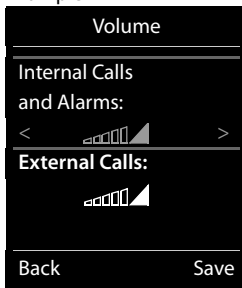









**When the telephone rings**, you can permanently change the ringtone volume using the volume keys  (louder) or  (quieter).

Changes are only saved in **Profile Personal**.



### Ringtone melody

Set a variety of ringtones for internal and external calls.

- ▶  ▶   Settings ▶ OK ▶  Audio Settings ▶ OK ▶  Ringtones (H/Set) ▶ OK ▶  Melodies ▶ OK ▶  select the connection ▶  select the ringtone/melody in each case ▶ Save

### Activating/deactivating the ringtone


#### Deactivating the ringtone permanently

- ▶ Use the  key to set Profile Silent ... the  icon appears in the status bar

#### Activating the ringtone permanently

- ▶ Use the  key to set Profile Loud or Profile Personal


#### Deactivating the ringtone for the current call

- ▶ Press Silence or the End call key 

## Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Press the Profile key  to select **Profile Silent** ▶ press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ Press the Profile key  to change profile

## Activating/deactivating advisory tones

The handset notifies acoustically about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

- ▶  ▶   **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then

Tone when keys are pressed:

- ▶ **Key Tones:**  select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶  select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶  select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:**  select **On** or **Off**

Save settings:




- ▶ **Save**




There is no battery warning when the baby monitor is switched on.

## Fast access to numbers and functions

### Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys  and  to .





- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶  select an entry ▶ OK ▶  select a number if necessary ▶ OK ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

### Dialling a number

▶ Press and **hold** the digit key ... the number is dialled immediately

or

▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ press the display key ... the number is dialled

### Changing the digit key assignment

▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:  
 Change the assignment: ▶ select an entry ▶ **OK** ▶ select a number if required ▶ **OK**  
 Delete the assignment: ▶ **Clear Key**

---

### Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ select the function ▶ **OK** ... The assignment of the display key is changed

Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**

### Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

---

### Resetting a handset

Reset any individual settings and changes that you have made.

▶ ▶ **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Handset Reset** ▶ **OK** ▶ **Yes** ... the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists
- SMS lists



## System

### Date and time

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time must be set.

If the date and time have not yet been set on the handset, the display key **Set Time** appears.

- ▶ Press the display key **Set Time**

or

- ▶ ▶ **Settings** ▶ OK ▶ **Date/Time** ▶ OK ... then
  - Set the date: ▶ **Date:** use to enter the day, month and year in 8-digit format
  - Set the time: ▶ **Time** ▶ enter hours and minutes in 4-digit format
  - Save settings: ▶ **Save**

### Own area code

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards).


Some of these numbers are already preset.

- ▶ ▶ **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Area Codes** ▶ OK ▶ Check (pre-)set area code

Edit the number:

- ▶ select/switch entry field ▶ change entry position ▶ delete digit if desired ▶ enter digit ▶ **Save**

Example

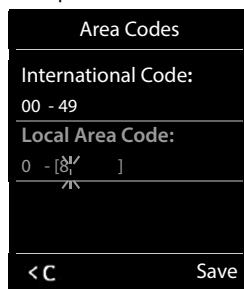

### Activating/deactivating music on hold

- ▶ ▶ **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Music on hold** ▶ Change  = activated)

### Changing the system PIN

Secure the telephone's system settings with a system PIN. You must enter the system PIN when, for example, (de)registering a handset or resetting to the default settings.

Change the telephone's 4-digit system PIN (default setting: 0000):

- ▶ ▶ **Settings** ▶ OK ▶ **System** ▶ OK ▶ **System PIN** ▶ OK ▶ use to enter the current PIN (if other than 0000) ▶ OK ▶ use to enter new system PIN ▶ **Save**

## Resetting system PIN

Resetting the base station to the original PIN **0000**:

- ▶ Unplug the network cable from the base station ▶ Press and hold the Registration/Paging key on the base station ▶ At the same time reconnect the network cable to the base station ▶ Press and hold the key for at least 5 secs . . . the base station is reset and the system PIN is set to **0000**



All handsets are de-registered and must be re-registered. All settings are returned to default settings.

## Restoring the phone to default settings

- ▶ ▶ ▶ **Settings** ▶ OK ▶ **System** ▶ OK ▶ **Base Reset** ▶ OK ▶ use to enter system PIN ▶ OK ▶ Yes . . . the base station is restarted. The restart takes around 10 seconds



When the settings are reset

- the date and time are retained,
- handsets are still registered,
- the system PIN is retained,
- **Maximum Range** is activated and **No Radiation** is deactivated.

# Appendix

## Service (Customer Care)

Step by step towards your solution with Gigaset Customer Care

[www.gigaset.com/service](http://www.gigaset.com/service).



### Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



### Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... **online:**

via our contact form on the customer service page

... **by telephone:**

**United Kingdom**

**Service Hotline: 020 36953111**

(local call cost charge)

**Ireland**

**Service Hotline: 0818 200 033**

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

For questions about VoIP access, please contact the respective service provider.

## Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for 12 months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
- The device is opened (this is classed as third party intervention)

- Repairs or other work done by persons not authorised by Gigaset Communications.
- Components on the printed circuit board are manipulated
- The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by:  
Gigaset Communications GmbH, Frankenstraße 2, D-46395 Bocholt
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

## Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

---

## Manufacturer's advice

---

### Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type is in compliance with Directive 2014/53/EU and the Radio Equipment Regulations 2017: Gigaset Premium 100 A / Gigaset Box 100 A

The full text of the EU and UK declaration of conformity is available at the following internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

---

### Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: [www.gigaset.com/privacy-policy](http://www.gigaset.com/privacy-policy)

---

### Environment

#### Environmental management system

Further information on environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

---

## Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

---

## Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

---

## Contact with liquid

If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Technical data

### Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

### Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	300/180 *
Talktime (hours)	12
Operating time with 1.5 hours of calls per day (hours)	120/90 *
Charging time in base station (hours)	5
Charging time in charging cradle (hours)	7

\* With **No Radiation** function disabled / with **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

### Power consumption of the handset in the charging cradle (if included)

When charging:	approx. 1.50 W
To maintain the charge status:	approx. 0.50 W

### Base power consumption


Standby:	approx. 0.50 W
During a call:	approx. 0.60 W

### General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK

Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)

### Pin connections on the telephone jack

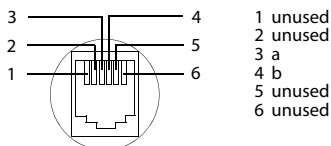

### Power adapter for the handset

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C705 / C710
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W



## Power adapter for the base

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furong Industrial Area, Xinqiao, Shajing, Baoan District, Shenzhen 518125 China
Model identifier	C707/C769 / C771/C785
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	6.5 V
Output current	0.3 A
Output power	1.95 W
Average active efficiency	> 71.5 %
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

## Character charts

### Standard characters

Press the relevant key several times.







	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	␣ <sup>1)</sup>	.	,	?	!	← <sup>2)</sup>	0			

- 1) Space
- 2) Line break




## Display icons









The following icons are displayed depending on the settings and the operating status of your telephone.



### Icons in the status bar

Icon	Meaning
	Signal strength ( <b>No Radiation</b> off) 1% -100%
	white, if <b>Maximum Range</b> on; green, if <b>Maximum Range</b> off
	Red: no connection to the base station
	<b>No Radiation</b> activated: white, if <b>Maximum Range</b> on; green, if <b>Maximum Range</b> off
	Answer machine activated indicator <b>Flashes:</b> Answer machine is recording a message or is being operated by another internal participant
	<b>Profile Silent</b> activated (Ringtone switched off)






### Display key icons






Icon	Meaning
	Last number redial
	Delete text
	Open the directory

Icon	Meaning
	"Beep" ringtone activated
	Keypad lock activated
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%





Icon	Meaning
	Copy number to the directory
	Divert a call to answer machine




## Display icons to indicate . . .

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording

## Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

## Menu overview



Not all functions described in the user guide are available in all countries or from all network providers.

Open the main menu: ► when handset is in idle status press



### Select Services

Call Divert	→ p. 24
Call Waiting	→ p. 23
All Calls Anonym.	→ p. 23
Ringback Off	→ p. 24



### Resource Directory

Screensavers	→ p. 53
Caller Pictures	
Sounds	
Capacity	



### Additional Features

Baby Phone	→ p. 44
One Touch Call	→ p. 18



### Call Lists

All Calls	→ p. 26
Outgoing Calls	
Accepted Calls	
Missed Calls	



### SMS

New SMS	→ p. 50
Incoming	→ p. 51
Draft	→ p. 50
Settings	→ p. 52
	→ p. 51

Service Centres

Notification

**Voice Mail**

Play Messages	Network Mailbox	→ p. 38
	Voice Mail	→ p. 33
Activation		→ p. 33
Announcements	Record Announcem.	→ p. 37
	Play Announcement	→ p. 37
	Delete Announcem.	→ p. 37
	Rec. Advisory Msg.	→ p. 37
	Play Advisory Msg.	→ p. 37
	Del. Advisory Msg.	→ p. 37
Recordings		→ p. 38
Call Screening		→ p. 35
Network Mailbox		→ p. 38
Set Key 1		→ p. 39

**Organizer**

Calendar	→ p. 40
Alarm Clock	→ p. 43
Missed Alarms	→ p. 41

**Directory**

→ p. 29



## Settings

Date/Time			→ p. 65	
Audio Settings	Handset Volume		→ p. 61	
		Acoustic Profiles	→ p. 61	
	Advisory Tones	Earpiece Profiles	→ p. 61	
			Handsfree Profiles	→ p. 61
	Ringtones (H/Set)	Volume	→ p. 63	
			Melodies	→ p. 62
			Time Control	→ p. 62
Music on hold	Anon. Call Silenc.	→ p. 47		
	Silent Charging	→ p. 47		
Display + Keypad	Screensaver		→ p. 65	
	Large Font		→ p. 59	
	Colour Schemes		→ p. 59	
	Display Backlight		→ p. 60	
	Key Illumination		→ p. 60	
	Auto Keypadlock		→ p. 60	
Language			→ p. 60	
Registration	Register Handset		→ p. 59	
	De-reg. Handset		→ p. 54	
	Select Base		→ p. 55	
Telephony	Auto Answer		→ p. 55	
	Area Codes		→ p. 54	
	Listening In		→ p. 55	
	Access Code		→ p. 60	
	Recall		→ p. 60	
	Anonymous Calls		→ p. 19	
	Black List	Blocked Numbers	→ p. 58	
			Protection Mode	→ p. 58
System	Handset Reset		→ p. 57	
	Base Reset		→ p. 47	
	Encryption		→ p. 47	
	Repeater	only when at least one repeater has been registered	→ p. 47	
	System PIN		→ p. 48	
ECO DECT	Maximum Range		→ p. 64	
	No Radiation		→ p. 66	

# Index

- 
- A**
- Access code (PABX) ..... 58
  - Activating/deactivating message LED ..... 28
  - Advisory tones ..... 63
  - Alarm ..... 43
  - Alarm clock ..... 43
  - switch on/off ..... 43
  - Alert tone (beep) ..... 40
  - Anniversary, see Appointment
  - Announcement (answer machine) ..... 37
  - deleting ..... 37
  - Announcement mode (answer machine) ..... 33
  - Anonymous calling ..... 22
  - Answer machine ..... 33
  - activating/deactivating ..... 33
  - announcement mode ..... 33
  - calling back a caller ..... 26
  - deleting messages ..... 34
  - playing back messages ..... 33, 38
  - recording a personal announcement/  
    advisory message ..... 37
  - remote operation ..... 35
  - set fast access ..... 39
  - skipping ahead ..... 34
  - skipping back ..... 34
  - Answer, auto ..... 60
  - Appointment
  - display missed ..... 41
  - missed ..... 41
  - notification ..... 41
  - setting ..... 40
  - Assigning key 1 ..... 39
  - Assigning number key ..... 63
  - Authorisation ..... 69
  - Auto answer ..... 60
  - Automatic
  - redial ..... 17
- 
- B**
- Baby monitor ..... 44
  - activation ..... 44
  - deactivation ..... 45
  - Backing up system settings ..... 65
  - Base
  - connecting to the mains power supply/telephone  
    network ..... 9
  - Base power consumption ..... 71
- Base station
  - changing ..... 55
  - changing the name ..... 55
  - connecting to the PABX ..... 57
  - connecting to the router ..... 9, 57
  - restoring to default settings ..... 66
  - setting ..... 65
  - system PIN ..... 65, 66
  - Battery
  - charging status ..... 74
  - inserting ..... 10
  - Beep (alert tone) ..... 40
  - Best base station ..... 55
  - Black list ..... 47
  - copying a number from a call list ..... 47
  - Broken display ..... 7
- 
- C**
- Calendar ..... 40
  - Call
  - accepting ..... 18
  - anonymous ..... 23
  - external ..... 16
  - internal ..... 19
  - participant listening in ..... 20
  - transferring internally (connecting) ..... 19
  - two-way recording ..... 35
  - Call back a caller ..... 23
  - Call block ..... 48
  - Call divert ..... 24
  - Call list
  - copying a number to the directory ..... 26
  - delete ..... 26
  - delete an entry ..... 26
  - dialling ..... 17
  - entry ..... 26
  - opening ..... 26
  - Call lists ..... 26
  - Call protection ..... 46
  - Call screening during recording ..... 35
  - Call swapping
  - two external calls ..... 25
  - Call waiting, external ..... 23
  - accepting/rejecting ..... 19, 20
  - Call waiting, internal
  - accept ..... 20
  - Call, anonymous ..... 22, 23
  - protection from ..... 47

- Caller display ..... 22
  - Calling
    - external ..... 16
    - internal ..... 19
  - Calling Line Identification ..... 22
    - none ..... 22
    - switching off temporarily ..... 23
    - switching on/off ..... 23
  - Cancel the alarm (baby monitor) ..... 45
  - Care ..... 70
  - Care of the device ..... 70
  - Changing
    - display language ..... 59
    - earpiece volume ..... 61
    - speaker volume ..... 61
    - system PIN ..... 65, 66
  - Changing the name of the handset ..... 56
  - Changing the PIN ..... 65
  - Changing the system PIN ..... 65
  - Character charts ..... 73
  - Charge status of the batteries ..... 74
  - Charging the batteries ..... 11
  - Charging time of handset ..... 71
  - CLI, Calling Line Identification ..... 22
  - CLIP image
    - view in resource directory ..... 53
  - CLIP, CLI Presentation ..... 22
  - CLIP-picture, in directory ..... 29
  - CLIR, CLI Restriction ..... 22
  - Colour scheme ..... 60
  - Connecting the charging cradle (handset) ..... 10
  - Connecting the headset ..... 12
  - Connecting the power cable ..... 9
  - Connecting the USB data cable ..... 12
  - Connections with the base station ..... 55
  - Consultation call
    - ending ..... 25
    - external ..... 25
    - internal ..... 19
  - Contact with liquid ..... 70
  - Contents of the package ..... 8
  - Control key ..... 4, 13
  - Correcting incorrect entries ..... 15
  - Customer Care ..... 67
- 
- D**
- Data protection ..... 69
  - Deactivating wireless module ..... 45
  - DECT encryption ..... 56
  - Deleting
    - messages ..... 34
  - De-registering (handset) ..... 55
  - Dialling
    - from the call list ..... 17
    - from the directory ..... 16
    - from the redial list ..... 16
    - using quick dial ..... 63
  - Dialling pause ..... 58
- Directory ..... 29
    - copying numbers ..... 31
    - dialling numbers ..... 16
    - entry ..... 29
    - memory ..... 31
    - opening ..... 29
    - order of entries ..... 30
    - saving an entry ..... 29
    - searching ..... 30
    - selecting an entry ..... 30
    - sending entry/list to handset ..... 32
    - sending to handset ..... 32
  - Display
    - activating/deactivating new message ..... 28
    - anonymous ..... 22
    - backlight ..... 60
    - broken ..... 7
    - changing display language ..... 59
    - colour scheme ..... 60
    - directory memory ..... 31
    - external ..... 22
    - large font ..... 59
    - missed appointment/anniversary ..... 41
    - network mailbox message ..... 27
    - screensaver ..... 59
    - setting ..... 59
    - unknown ..... 22
  - Display icons ..... 74
  - Display keys ..... 4, 14
    - assigning ..... 63
    - icons ..... 74
  - Disposal ..... 70
  - Draft message list (SMS) ..... 50
- 
- E**
- Earpiece profile ..... 61
  - Earpiece volume ..... 21
  - Echo, when operating a router ..... 57
  - ECO DECT ..... 45
  - Emergency numbers
    - not possible ..... 7
  - Encryption
    - enabling/disabling ..... 56
  - End call key ..... 4, 16
  - Entering special characters ..... 15
  - Entering text ..... 15
  - Entering the number
    - of the network mailbox ..... 38
  - Entering umlauts ..... 15
  - Environment ..... 69
  - Exclusion of liability ..... 68
  - External call
    - forwarding to answer machine ..... 34
- 
- F**
- Fast access ..... 16, 39
  - Flash time ..... 57



- 
- G**
- Getting started ..... 8
  - Guarantee Certificate ..... 67
- 
- H**
- Handset**
- automatic keypad lock ..... 60
  - changing the name ..... 56
  - changing the number ..... 56
  - changing the settings ..... 59
  - changing to a different base station ..... 55
  - changing to best reception ..... 55
  - colour scheme ..... 60
  - connecting the charging cradle ..... 10
  - de-registering the handset ..... 55
  - display backlight ..... 60
  - display language ..... 59
  - earpiece volume ..... 61
  - handset volume ..... 21
  - handsfree volume ..... 21
  - idle status ..... 15
  - keypad illumination ..... 60
  - muting ..... 21
  - overview ..... 4
  - paging ..... 55
  - registering ..... 54
  - registering to another base station ..... 55
  - resetting ..... 64
  - searching for ..... 55
  - setting up ..... 10
  - speaker volume ..... 61
  - switch on/off ..... 13
  - use as a baby monitor ..... 44
- Handsfree key ..... 21
  - Handsfree mode ..... 21
  - Handsfree volume ..... 21
  - Hash key ..... 4
  - Headset connection ..... 4
  - Headset socket ..... 12
- Hearing**
- prevent loss of ..... 7
  - Hearing aids ..... 7
- 
- I**
- Icons**
- alarm clock ..... 43
  - displaying new messages ..... 27
  - indications ..... 75
  - new SMS ..... 51
  - on display keys ..... 74
  - status bar ..... 74
- Idle status
  - returning to ..... 15
- Illumination, keypad ..... 60
  - Indications, icons ..... 75
- 
- Internal**
- consultation ..... 19
  - listening in ..... 20
  - making calls ..... 19
- International code ..... 65
- 
- K**
- Key (base), registration/paging ..... 5
  - Key, assigning ..... 63
  - Keypad illumination ..... 60
  - Keypad lock, automatic ..... 60
- Keys**
- control key ..... 4, 13
  - display keys ..... 4, 14
  - end call key ..... 4, 16
  - handsfree ..... 21
  - hash key ..... 4
  - menu key ..... 13
  - message key ..... 4
  - on/off key ..... 4
  - paging key ..... 5
  - profile key ..... 4, 40
  - talk key ..... 4
  - volume ..... 14
  - volume keys ..... 4
- 
- L**
- Language
  - display ..... 59
  - Language, display ..... 11
  - Large font ..... 59
  - Linked, see SMS
  - Liquid ..... 70
- List**
- SMS draft message list ..... 50
  - SMS message list ..... 51
  - Listening in to an external call ..... 20
  - Local area code ..... 65
  - Locking/unlocking the keypad ..... 13
  - Loss of hearing ..... 7
  - Lower/upper case ..... 15
- 
- M**
- Mains unit**
- base ..... 73
  - handset ..... 72
- Making calls**
- accepting a call ..... 18
  - external ..... 16
  - internal ..... 19
- Manufacturer's advice ..... 69
  - Maximum Range ..... 45
  - Medical equipment ..... 7
  - Melody
  - ringtone for internal/external calls ..... 62

- Memory in the directory . . . . . 31  
 Memory, resource directory . . . . . 53  
 Menu key . . . . . 13  
 Message  
   marking as "new" . . . . . 34  
 Message key . . . . . 4  
   opening list . . . . . 51  
 Message list (SMS) . . . . . 51  
 Message lists . . . . . 27  
 Messages  
   copying number to the directory . . . . . 34  
 Microphone . . . . . 4  
   switch on/off . . . . . 21  
 Missed anniversaries/appointments . . . . . 41  
 Music on hold . . . . . 65  
 Mute the first ringtone . . . . . 52  
 Muting the handset . . . . . 21
- 
- N**
- Network mailbox . . . . . 38  
   defining for fast access . . . . . 39  
   entering number . . . . . 38  
 Network MB, see Network mailbox  
 Network provider . . . . . 22  
 Network services, provider-specific . . . . . 22  
 Number  
   copying to the directory . . . . . 31  
   do not transfer . . . . . 23  
   saving in the directory . . . . . 29  
   withhold . . . . . 23  
 Numbers  
   entering . . . . . 15
- 
- O**
- On/Off button . . . . . 4  
 On/off key . . . . . 4  
 One touch call . . . . . 18  
 Operating time of handset . . . . . 71  
 Outside line code (PABX) . . . . . 58  
 Overview  
   handset . . . . . 4
- 
- P**
- PABX  
   connecting to the base station . . . . . 57  
   pauses . . . . . 58  
   saving access code . . . . . 58  
   setting flash time . . . . . 57  
 Paging . . . . . 5, 55  
 Pause  
   after access code . . . . . 58  
   after line seizure . . . . . 58  
   after Recall key . . . . . 58  
 Phone  
   setting . . . . . 65  
 Phone directory, see Directory . . . . . 16  
 Phonebook, see Directory . . . . . 16
- Picking up  
   a call from answer machine . . . . . 34  
 Picture  
   as CLIP image . . . . . 53  
   as screensaver . . . . . 53  
   delete . . . . . 53  
   rename . . . . . 53  
 Play sound . . . . . 53  
 Playing back  
   announcement (answer machine) . . . . . 37  
 Playing back messages . . . . . 33  
 Power adapter . . . . . 7, 72  
   base . . . . . 73  
   handset . . . . . 72  
 Profile key . . . . . 4, 40  
 Profiles . . . . . 40  
 Protection from calls  
   anonymous . . . . . 47  
   black list . . . . . 47  
   switch off ringtone when in charging  
     cradle . . . . . 47  
     time control . . . . . 46
- 
- Q**
- Quick dial . . . . . 16, 39
- 
- R**
- Radiation  
   reducing . . . . . 45  
 Radiation-free . . . . . 45  
 Recall key . . . . . 58  
 Reception booster, see Repeater  
 Recording  
   two-way recording . . . . . 35  
 Recording quality (answer machine) . . . . . 38  
 Recording quality (answering machine) . . . . . 38  
 Recording time . . . . . 38  
 Redial list . . . . . 16, 26  
 Registering (handset) . . . . . 54  
 Registration/paging key . . . . . 5  
 Remotely operating the answer machine . . . . . 35  
 Repeater . . . . . 56  
 Resource Directory . . . . . 53  
   memory . . . . . 53  
 Resource directory  
   view CLIP image . . . . . 53  
 Ring delay (answer machine) . . . . . 38  
 Ringback  
   cancelling . . . . . 24  
   initiate . . . . . 23  
 Ringtone  
   changing . . . . . 62  
   melody for internal/external calls . . . . . 62  
   muting . . . . . 52  
   muting first . . . . . 52  
   switch off when in charging cradle . . . . . 47  
   time control . . . . . 46  
   volume . . . . . 62

- Ringtone . . . . . 62
  - Router, connecting the base station . . . . . 9, 57
- 
- S**
- Safety precautions . . . . . 7
  - Screensaver . . . . . 59
  - Searching
    - handset . . . . . 55
  - Searching in directory . . . . . 30
  - Sending
    - entire directory to handset . . . . . 32
    - SMS messages . . . . . 50
  - Service . . . . . 67
  - Service provider, see Network provider
  - Setting the date . . . . . 12, 65
  - Setting the system . . . . . 65
  - Setting the time . . . . . 12, 65
  - Setting up the base . . . . . 8
  - Setting up the charging cradle (handset) . . . . . 8
  - Setting up the handset . . . . . 10
  - Show new messages . . . . . 27
  - Signal strength . . . . . 74
  - SMS
    - deleting . . . . . 51
    - draft message list . . . . . 50
    - incoming message list . . . . . 51
    - linked . . . . . 50
    - message list . . . . . 51
    - reading . . . . . 51
    - receiving . . . . . 51
    - send centre . . . . . 52
    - temporary storing . . . . . 50
    - troubleshooting . . . . . 52
    - writing/sending . . . . . 50
  - SMS message list (SMS) . . . . . 51
  - SMS notification . . . . . 51
  - SMS service centre
    - changing the number . . . . . 52
    - setting . . . . . 52
  - Snooze mode (alarm) . . . . . 43
  - Sound
    - delete . . . . . 53
    - playback . . . . . 53
    - rename . . . . . 53
  - Sound profiles . . . . . 40
  - Sounds for ringtones . . . . . 53
  - Speaker . . . . . 21
  - Status bar . . . . . 4
    - icons . . . . . 74
  - Symbols, see Icons . . . . . 74
  - System PIN
    - changing . . . . . 65, 66
    - resetting . . . . . 66
- 
- T**
- Talk key . . . . . 4
  - Technical data . . . . . 71
  - Telephone
    - operating . . . . . 13
  - Time control for external calls . . . . . 46
  - Transferring, external call internally . . . . . 19
  - Troubleshooting
    - SMS . . . . . 52
- 
- U**
- Upper/lower case . . . . . 15
  - USB data cable . . . . . 12
  - Using
    - multiple handsets . . . . . 54
- 
- V**
- Viewing network mailbox message . . . . . 27
  - VIP group, classify directory entry . . . . . 29
  - VIP ringtone . . . . . 29
  - Volume
    - earpiece . . . . . 61
    - handset speaker volume . . . . . 61
    - handset speaker/earpiece volume . . . . . 21
    - speaker . . . . . 61
  - Volume keys . . . . . 4, 14
- 
- W**
- Withheld number . . . . . 22
  - Writing (SMS) . . . . . 50
- 
- X**
- XES mode . . . . . 57

Issued by

Gigaset Communications GmbH  
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2023

Subject to availability.

All rights reserved. Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)

This user guide is printed on 100 % recycled paper which is certified by the Blue Angel eco label.