

Gigaset

S850 A GO

You can find the most up-to-date
user guide at

www.gigaset.com/manuals



User guide online on your
smartphone or tablet:

Download the Gigaset Help app



Gigaset GO: For the fixed line network with a future

Make telephony at home flexible with this Gigaset GO phone. There are three connection alternatives, as well as all the GO functions.

Making calls using the analogue fixed line network

Connect the phone to your analogue fixed line connection (PSTN). Plug the phone cable into the fixed line connection. You can then

- Use the analogue line to make phone calls
- Use the integrated answer machine
- Use the other functions of your Gigaset phone (directory, call lists etc.)

Making calls over the Internet

Connect the phone to a router. In this case, ignore the phone cable and plug the network cable into a LAN connection on your router. Register the phone with your internet telephony provider (IP). With this connection, you can

- Make two calls at the same time
- Assign a separate number to each handset
- Make calls using different telephony providers
- Set up three answer machines with individual recording and advisory texts
- Use the other functions of your Gigaset phone (directory, call lists etc.).

Making calls using the analogue fixed line network and over the Internet

If you have both an analogue fixed line connection and an Internet connection, you can use the functions of both connections, e. g. make a fixed line call and two Internet calls at the same time.

New functions of the Gigaset GO phones

In addition to the functions of previous analogue or IP phones, Gigaset GO phones also offer further new options:

- Make calls between Gigaset GO phones across the world free of charge via Gigaset.net
- Display online services information, e. g. weather tickers
- Use online directories (not available in all countries)
- Use cloud services and smartphone apps for connecting between fixed line network phones and smartphones: e. g. receive notifications on your smartphone if there is an incoming call or a voice message on the GO phone at home or transfer smartphone contacts to the GO phone

➔ Further information about Gigaset GO can be found at
www.gigaset.com/go



Contents


Overview	6
Handset	6
Base station	6
Set-up (overview)	7
Illustration in the user guide	8
Safety precautions	9
Getting started	10
Contents of the package	10
Handset	11
Base station	13
Setting up an IP account	15
Using the telephone	19
Getting to know your telephone	19
Making calls	23
Making calls via the Internet (VoIP)	28
Provider-specific functions (network services)	31
Message lists	36
Call lists	38
Local handset directory	39
Online directories	43
Gigaset.net directory	45
Answer machine	47
Local answer machine	47
Network mailbox	53
Set fast access for the answer machine	54
Additional functions	55
Sound profiles	55
Calendar	56
Alarm clock	58
Baby monitor	59
ECO DECT	60
Protection against unwanted calls	61
SMS (text messages)	63
Resource Directory	70
Bluetooth	71
Additional functions using the PC interface	73
E-Mail notifications	75
Info Centre	78

Contents

Expanding the functionality of the telephone	82
Multiple handsets	82
Repeater	85
Operation with a PABX	86
Adjusting the telephone settings	88
Handset	88
System	96
Internet telephony (VoIP)	100
Web configurator	103
Appendix	119
Service (Customer Care) - United Kingdom and Ireland	123
Manufacturer's advice	124
Technical data	126
Display icons	129
Menu overview	131
Index	134
Open Source Software	141



Not all functions described in the user guide are available in all countries or from all network providers.

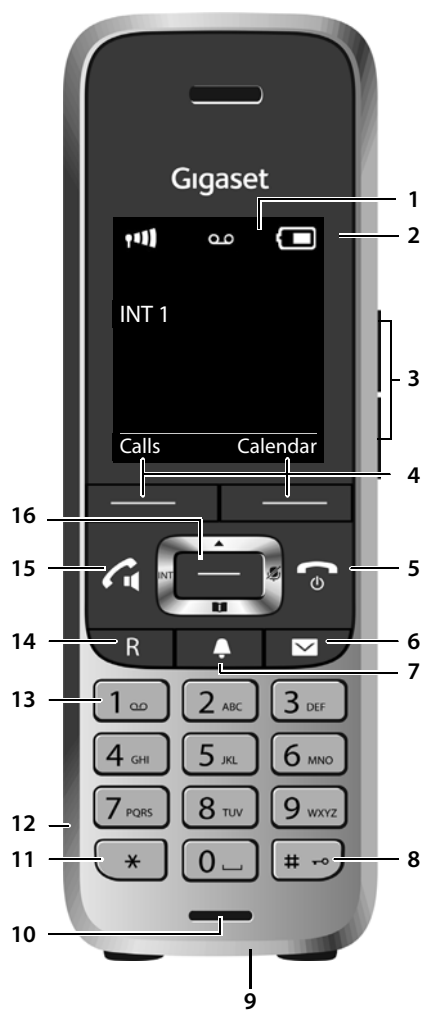

Overview

Handset

- 1 **Display**
- 2 **Status bar** (→ p. 129)
Icons display current settings and operating status of the phone
- 3 **Volume keys** (→ p. 20)
for **receiver/headset**, **ringtone**, **handsfree mode** and **appointment reminders**
- 4 **Display keys** (→ p. 20)
Various functions, depending on the operating situation
- 5 **End call key, On/off key**
End call; cancel function;
Go back one menu level ▶ Press **briefly**
Return to idle status ▶ Press and **hold**

Switch the handset on/off (in idle status) ▶ Press and **hold**
- 6 **Message key** (→ p. 36)
Access to the calls and message lists;
Flashes: new message or new call
- 7 **Profile key**
Switch between sound profiles
- 8 **Hash key**
Lock/unlock the keypad (in idle status) ▶ Press and **hold**
Toggle between upper/lower case and digits (when inputting text) ▶ Press **briefly**
- 9 **USB connection socket**
For data exchange between the handset and PC
- 10 **Microphone**
- 11 **Star key**
Switch between pulse dialling/tone dialling (during existing connection) ▶ Press **briefly**
- 12 **Headset connection**
(2.5 mm jack)
- 13 **Key 1**
Select answer machine/network mailbox ▶ Press and **hold**
- 14 **Recall key**
Consultation call (flash) ▶ Press **briefly**
Insert a dialling pause ▶ Press and **hold**
- 15 **Talk key / Handsfree key**
Accept call; dial number displayed; switch between receiver and handsfree mode; send SMS (when composing an SMS)
Open the redial list ▶ Press **briefly**
Start dialling ▶ Press and **hold**
- 16 **Control key / menu key** (→ p. 20)
Open a menu; navigate in menus and entry fields; access functions (depending on the situation)

Base station

- A **Registration/paging key**
Locate a handset (paging); Show IP address on handset ▶ Press **briefly**
Register handset ▶ Press and **hold**

Illuminated: LAN connection active (phone is connected to router)
Flashes: Base station in registration mode

Set-up (overview)

Fixed line network and Internet telephony

Setting up the handset for use



Connecting the base to the mains power supply



Fixed line network telephony

Connecting the base to the analogue telephone network



Internet telephony (IP)

Connecting the base to a router



Setting up an IP account

- ▶ Press the Message key on the handset



or

- ▶ use the web configurator on a PC/tablet
→ www.gigaset-config.com

Done!

GO functions

- ▶ Connect the base to router
- ▶ Download apps onto your smartphone (e.g. Gigaset elements)
- ▶ Register your phone with Gigaset elements

Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

Keys

	or	Talk key		or	Handsfree key
		End call key			Number / letter keys
		Control key rim / centre			Message key
		Recall key			Star key
		Hash key			Profile key
OK, Back, Select, Change, Save, ...			Display keys		

Procedures

Example: Switching Auto answer on/off

► ► ... use to select **Settings** ► OK ► **Telephony** ► OK ► **Auto Answer** ► **Change** (= on)

Step	Follow this procedure
►	When in idle status press the centre of the control key. The main menu opens.
►	Navigate to the icon using the control key .
► OK	Select OK to confirm. The submenu Settings opens.
► Telephony	Select the Telephony entry using the control key .
► OK	Select OK to confirm. The submenu Telephony opens.
► Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
► Change	Select Change to activate or deactivate. Function is activated /deactivated .

Safety precautions



Read the safety precautions and the user guide before use.

The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.

Use only the cables supplied for fixed line and LAN connection and connect these to the intended ports only.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

Getting started

Contents of the package

- One **base station**,
- One power adapter for the base station,
- One phone cable,
- One LAN cable,
- One **handset**,
- One battery cover,
- Two batteries,
- One charging cradle incl. power adapter,
- One belt clip,
- One user guide

Models with multiple handsets, per handset:

- One handset,
- One charging cradle incl. power adapter,
- Two batteries, one battery cover and one belt clip



The base station and charging cradle are designed for use in closed, dry rooms within a temperature range of +5 °C to +45 °C.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.


Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

Handset

Connecting the charging cradle (if included)

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

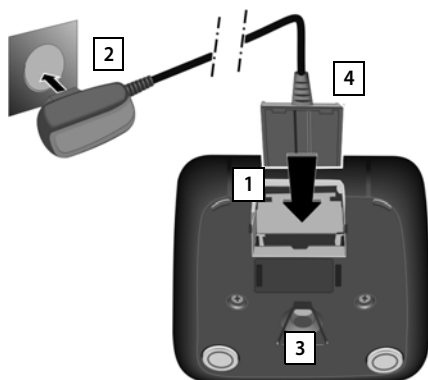

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**

Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.



- ▶ Insert the batteries (for correct +/- direction, see diagram).
 - ▶ Fit the battery cover from the top.
 - ▶ Press the cover until it clicks into place.
- To re-open the battery cover:
- ▶ Insert a fingernail behind the notch at the top of the cover and slide it downwards.

Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle or using a standard USB mains adapter (→ p. 13).



The batteries are fully charged when the power icon  disappears from the display.



The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Handsets contained in the package have already been registered to the base station.

In the event that a handset is not registered however, (indicated by "**Please register handset**"), register the handset manually (→ p. 82).

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.



Changing the display language

You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ Press the centre of the control key .
- ▶ Press the keys  and  **slowly** and successively ... the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .



Connecting the headset

- ▶ Connect the headset with 2.5 mm jack to the left side of the handset **1**.

or

- ▶ Connect headset via Bluetooth (→ p. 71).

The headset volume corresponds with the setting for the receiver volume (→ p. 90).




Connecting the USB data cable

For data exchange between the handset and PC:

- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.




Connect the handset **directly** to the PC, **not** via a USB hub.

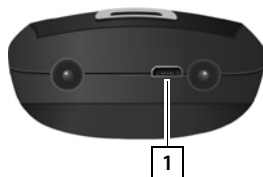

Base station

Connecting to the mains power supply

- ▶ Insert the power cable of the power adapter into the upper connection socket **1** at the rear of the base station.
- ▶ Push both cables into the appropriate cable channels **2**.
- ▶ Insert the power adapter into the power socket **3**.

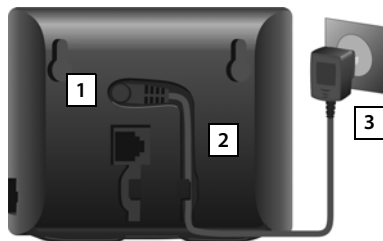

Only use the **supplied** network cable.

The network cable must **always be connected** in order to function, as the phone will not operate without a power supply.

Connecting to the analogue fixed line network

- ▶ Insert the phone cable into the lower connection socket **1** at the rear of the base station.
- ▶ Push both cables into the appropriate cable channels **2**.
- ▶ Insert the phone cable into the fixed line network connection **3**.



Only use the **supplied** phone cable. The pin connections of phone cables may vary.

You can now use your phone to make calls via the fixed line network and you can be reached on your fixed line network number.

An answer machine in the base station is set with a pre-recorded announcement in answer and record mode.

Connecting to the Internet

You will need to connect the phone to the Internet for Internet telephony (IP) and access to the Internet and home network and Gigaset GO functions.



For connecting to the Internet: a router connected to the Internet.

For Internet telephony: a broadband Internet connection (e.g. DSL) with a flat rate.

Connecting the base to a router

- ▶ Insert a jack from the Ethernet cable supplied into the LAN connection socket at the side of the base station **1**.
- ▶ Insert the second jack of the Ethernet cable into an LAN connection socket on the router **2**.



As soon as the cable between the telephone and the router is plugged in and the router is switched on, the key on the front of the base station lights up (paging key).

The phone is now connected to the Internet.



In order to be able to use all Gigaset GO functions, you may need to install apps on your smartphone and apply settings in the phone's web configurator, e.g. registering your phone with Gigaset elements.

Further information about the settings → [web configurator](#)

Further information about Gigaset GO can be found at → www.gigaset.com/go

Data protection notice

When the device is connected to the router, it will automatically contact the Gigaset Support Server. It will send the following device-specific information daily:

- Serial number/item number
- MAC address
- Private IP address for the Gigaset in the LAN/its port numbers
- Device name
- Software version

On the support server, this information is linked to the existing device-specific information:

- Gigaset.net phone number
- System-related/device-specific passwords

Further information about the data stored in relation to the Gigaset.net Service can be found at:

→ www.gigaset.net/privacy-policy

Setting up an IP account

So that you are able to make calls via the Internet (VoIP), you must have at least one IP account with an Internet telephony provider. You can register using the access data that you receive from your provider (user name, authentication name, password etc.).

To register the phone with your provider, please use:

- The VoIP wizard on the handset
- Or the web configurator on a PC or tablet (→ p. 107)



You can configure up to six IP accounts.

Registering using the VoIP wizard on the handset

As soon as the handset battery has sufficient charge, the Message key on the handset will flash.



- Press the Message key ► **Yes** ... the wizard starts ► ... scroll through the displayed text ► **OK**



If the wizard does not start properly or you have terminated it: ► Start the VoIP wizard using the handset menu

- ► ... Use to select **Settings** ► **OK** ► **Telephony** ► **OK** ► **VoIP Wizard**

If "**New firmware available**" is shown on the display, there is a firmware update available for your phone.

To update firmware: ► **Yes** ... the new firmware is loaded (takes approx. 6 mins.)
The Message key will then flash again.

- To start configuration: Press the Message key .

Setting up an IP account

The display shows the possible IP accounts (IP 1 to IP 6). Accounts that are already configured are marked with .

- ... Use  to select the required account ► OK

Select IP Account	
IP 1	☒
IP 2	☐
IP 3	☐
IP 4	☐
IP 5	☐
Back	OK



If no Internet connection can be established, a corresponding error message will be generated. For more information, see "Questions and answers" → Appendix

- Terminate the VoIP wizard: ► OK ... The VoIP wizard will close ► Troubleshoot if necessary ► Open the wizard again later via the menu to configure the IP account.

The wizard establishes a connection to the Gigaset configuration server on the Internet. Various profiles with general configuration data for different providers can be downloaded here.

Select provider

A list of countries is loaded.

- ... Use  to select the country in which you want to use the phone ► OK ... a list of providers in this country is displayed ► ... use  to select provider ► OK ... the general configuration data for your provider is downloaded and stored in the phone

Select a Provider	
Provider 1	
Provider 2	
Provider 3	
Provider 4	
Provider 5	
Back	OK



If your provider does not appear in the list:

- Terminate the wizard: ► Press and **hold** the End call key  ... the handset returns to idle status ► ... set up the IP account using the web configurator

Entering user data for your IP account

You are required to enter your personal access data for your IP account, e. g. **User ID, Password,** ... (depending on the provider).

- Enter registration data ► confirm each entry using OK



Pay attention when entering access data, as it is case sensitive.

- To switch between lowercase, uppercase and number entry mode: ► Press the key 
- To delete incorrectly entered characters: ► Press the display key 
- To navigate within an entry field: ► Press right/left on the control key 

Message on successful transfer: **Your IP account is registered at your provider.**

The fixed line network connection is assigned to the handsets as a send connection. Please change the send connection to make calls over the Internet.

Send and receive connections

Assign the available phone connections (fixed line network, Gigaset.net and up to six IP connections) to the end devices as receive and, where necessary, send connections. End devices are the registered handsets and the three base answer machines.

- **Receive connection:** Phone numbers you may be called on. Incoming calls are forwarded to the end devices for which the relevant connection is assigned as receive connection.
- **Send connection:** A line that you use for an outgoing call. The corresponding number will be transferred to the recipient. You can assign each end device a number or the associated connection as a send connection.

Each connection (number) of your phone can be both a send as well as a receive connection and can be assigned to several end devices. It may only be assigned to one answer machine as a receive connection.

Default assignment

- All configured connections are assigned to the handsets and answer machine 1 as receive connections on delivery.
- The fixed line network connection is assigned to the handsets as a send connection. If you have **no** fixed line network connection, no send connection is assigned.

Change send connections

►  ► ... Use  to select  **Settings** ► OK ►  **Telephony** ► OK ► **Send Connections** ► OK


Select handset:

- ... Use  to select the handset on which you wish to change the default assignment ► OK ... the current connection for outgoing calls assigned to the handset is displayed: **Fixed Line** (if you have a fixed line network connection)

Change assignment:

- ... use  to select the desired connection or select **Sel. at each call** ► **Save**
- Sel. at each call:** For each call, the line on which the call is established can be selected.

You can now change the default assignment one after the other for all registered handsets.

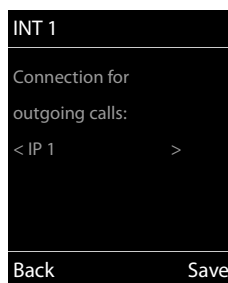

Setting up an IP account

Change receive connection

- ▶  ▶ ... Use  to select  Settings ▶ OK ▶  Telephony ▶ OK ▶ Rec. Connections ▶ OK

Select handset or answer machine:

- ▶ ... Use  to select the handset or answer machine on which you wish to change the default assignment ▶ OK ... the display shows an entry for each available phone connection (IP 1– IP 6, Gigaset.net, **Fixed Line**)

Change assignment:

- ▶ ... Use  to select the desired connection ▶ ... use  to select **Yes** or **No** (Yes = calls to this connection will be diverted to the handset/answer machine) ▶ **Save**

INT 1	
Receive calls for	
IP 1:	
< Yes	>
Receive calls for	
Gigaset.net:	
Back	Save



Only one receive connection can be assigned per answer machine.

One connection can only be assigned to **one** answer machine as a receive connection. If you assign a receive connection to an answer machine and this connection is already assigned to another answer machine, the "old" assignment is deleted.

Using the telephone

Getting to know your telephone

Switching the handset on/off

- Switch on: ▶ Press and **hold** the End call key  on the handset when switched off
- Switch off: ▶ When the telephone is in idle status, press and **hold** the End call key 
-

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the symbol  appears in the display.



If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Control key




The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key" or  for "press the centre of the control key".

In idle status

- Open the directory
- Open the list of available online directories
- Open the main menu
- Open the list of handsets




In submenus, selection and entry fields

- Confirm a function



During a conversation

- Open the directory
- Open the list of available online directories
- Mute the microphone
- Initiate an internal consultation call
- Adjust the loudspeaker volume for receiver and handsfree mode

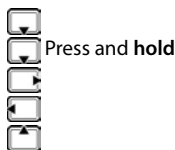

Volume keys

Set volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ►
Press the volume keys  /  on the right side of the handset

Display keys

The display keys perform a range of functions depending on the operating situation.



Current display key functions

Display keys

Display key icons ➔ p. 129.



The display keys have a function preset by default in idle status. Changing the assignment: ➔ p. 94

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels → p. 131


Select/confirm functions

Confirm selection using	OK or press the centre of the control key 
One menu level back using	Back
Change to idle display using	 Press and hold
Switch function on/off using	Change on  / off 
Activate/deactivate option using	Select activated  / not activated 

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ OK

Example

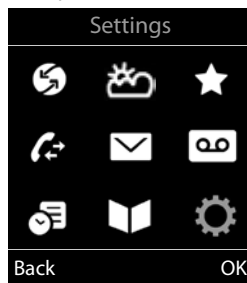

The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Submenus

The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ OK


Return to the previous menu level:

▶ Press the display key **Back**

or

▶ **Briefly** press the End call key 

Example

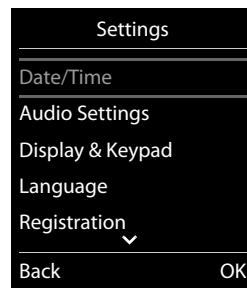

Returning to idle status

▶ Press and **hold** the End call key 



If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.

Entering text

Input position

- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it.
- ▶ Use  to move the position of the cursor.

Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  **C** Press **briefly**
- Delete **words** to the left of the cursor: ▶  **C** Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash  key
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**

New Entry

First Name :

Peter

Surname :

Phone (Home):

Abc

< C

Save



The availability of special characters depends on the language setting.

Making calls

Making calls

- ▶ ... use  to enter the number ▶ **briefly** press the Talk key 

The connection is selected by the send connection set for the handset (line). To use another line:

- ▶ Press and **hold** the Talk key  ▶ ... use  to select the line ▶ **Dial** ▶ ... use  to enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Cancel dialling: ▶ Press the End call key 



Information for Calling Line Identification: → p. 31

If the display backlight is deactivated, you can reactivate it by pressing any key. **Digit keys** that are pressed appear in the display for pre-dialling, **other keys** have no further function.

Dialling from the directory

- ▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:

- ▶ ... use  to select a number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Choose from: a public directory → p. 43, the Gigaset.net directory → p. 45

Dialling from the redial list

The redial list contains the 20 numbers last dialled with the handset.

- ▶ **Briefly** press the Talk key  ... the redial list is opened ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶ ... use  to browse numbers if necessary ▶ ... when the desired number is reached press the Talk key 

Managing entries in the redial list

- ▶ **Briefly** press the Talk key  ... the redial list is opened ▶ ... use  to select an entry ▶ **Options** ... possible options:
 - Copy an entry to the directory: ▶  **Copy to Directory** ▶ **OK**
 - Copy the number to the display:
 - ▶  **Display number** ▶ **OK** ▶ ... use  to amend or add numbers if necessary ... use  to save as a new entry in the directory
 - Delete the selected entry: ▶  **Delete entry** ▶ **OK**
 - Delete all entries: ▶  **Delete List** ▶ **OK**
 - Set automatic line seizure:
 - ▶  **Automatic Redial** ... the dialled number is automatically dialled at fixed intervals (at least every 20 secs). The handsfree key flashes, "open listening" is activated.
 - The participant answers: ▶ Press the Talk key  ... the function is terminated
 - The participant does not answer: The call is interrupted after around 30 secs. The function is terminated after pressing any key or after ten unsuccessful attempts.

Dialling from the call list

The call lists (→ p. 38) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select a list ▶ **OK** ▶ ... use  to select an entry ▶ Press the Talk key 

Example

All calls	
  Frank	14.02.18, 15:40
 089563795	13.02.18, 15:32
  Susan Black	11.02.18, 13:20
View	Options



The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

The **Missed calls** list can also be opened by pressing the Message key .

One touch call

A saved number is dialled by pressing **any** key. This allows children who are not yet able to enter a number to call a certain number, for example.


Activate one touch call mode:

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **One Touch Call** ▶ **OK** ▶ ... use  to activate **Activation** ▶  **Call to** ▶ ... use  to enter the number ▶ **Save** ... the active one touch mode is shown in the idle display

Make a one touch call: ▶ Press any key ... the saved number is dialled

Cancel dialling: ▶ Press the End call key 

End one touch call: ▶ Press and **hold** the End call key 

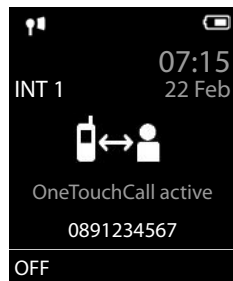

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk key .

Accept a call:

- Press the Talk key 
- If **Auto Answer** is activated: ► Remove the handset from the charging cradle
- Forward to the answer machine: ►  (for calls to the fixed line number)
- Accept a call on the headset

Switch off ringtone: ► **Silence** ... the call can be accepted for as long as it is shown on the display

Information about the caller

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.



The caller's number will be transferred (→ p. 31).

Accepting/rejecting call waiting

A call waiting tone indicates a call during an external call. The number or the name of the caller is displayed if the phone number is transferred.

- Reject a call: ► **Options** ►  **Reject waiting call** ► **OK**
- Accept a call: ► **Accept** ► ... speak to the new caller. The previous call is placed on hold.
- End the call, resume the on-hold call: ► Press the End call key .

Making internal calls

-  Press **briefly** ... the handset list is opened, this handset is indicated by < ► ... use  to select handset or **Call all** (group call) ► Press the Talk key 



Multiple handsets have been registered to the base station (→ p. 82).

Fast access for group call:

-  Press **briefly** ► 
- or ►  press and **hold**



Internal calls to other handsets registered to the same base station are free of charge.

You hear the busy tone if:

- There is already an internal connection
- The handset being called is not available (deactivated, outside of range).
- The internal call is not accepted within 3 minutes.

Internal consultation call/internal transfer

Call an **external** participant and transfer the call to an **internal** participant or hold a consultation call with him or her.

- ▶  ▶ ... the list of handsets is opened ▶ ... use  to select a handset or **Call all** ▶ **OK**
... the internal participant(s) are called ... possible options:

Hold a consultation call:

- ▶ Speak to the internal participant

Return to the external call:

- ▶ **Options** ▶  **End active call** ▶ **OK**

Transfer the external call when the internal participant has answered:

- ▶ Announce an external call ▶ Press the End call key 

Transfer the external call before the internal participant answers:

- ▶ Press the End call key  ... the external call is forwarded immediately. If the internal participant does not answer or the line is busy, the external call will automatically return to you.

End the internal call if the internal participant does **not** answer or the line is busy:

- ▶ **End** ... You return to the external call

Accepting/rejecting call waiting

An external call arriving during an internal call is indicated with a call waiting tone. If the number is transferred, you will see the number or the name of the caller on the display.

- Rejecting a call: ▶ **Reject**
The call waiting tone is turned off. The call continues to be indicated on the other registered handsets.
- Accepting a call: ▶ **Accept** ... Speak to the new caller, the previous call is placed on hold.

Internal call waiting during an external call

If an internal participant attempts to call you while you are involved in an external or internal call, this call is shown on the display (**Call Waiting**).

- End display: ▶ Press any key
- Accept the internal call: ▶ End your current call
The internal call is indicated in the usual way. You can accept the call.

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ ... Place the handset in the charging cradle ▶ ... hold  for a further 2 seconds

Call volume

Applies to the current mode (handsfree, receiver or headset if the handset has a headset connection):

- ▶ Press the volume keys  /  or  ▶ ... Use  /  or  to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

Making calls via the Internet (VoIP)

Internet telephony (VoIP) is available via provider VoIP accounts and Gigaset.net.



The phone is connected to the Internet.

VoIP via a provider: At least one VoIP account has been set up (→ p. 100).

VoIP via Gigaset.net: The phone has been registered to Gigaset.net (→ p. 101).

Send and receive connections are assigned (→ p. 101).

Maximum number of VoIP accounts: 6

Maximum number of concurrent IP calls: 2

This chapter contains information on requirements for making calls via VoIP.

Making a call

Permanently assigned send connection



A fixed send connection is assigned to the handset.

Use assigned send connection:

- ▶ Use  to enter the number ▶ **Briefly** press the Talk key 

Change the send connection:

- ▶ Press and **hold** the Talk key  ▶ ... Use  to select the connection ▶ **Dial** ▶ ... Use  to enter the number ... The number is dialled approximately 3.5 seconds after the last digit is entered



Numbers ending with the suffix #9 are automatically dialled via the Gigaset.net connection (→ p. 100). The calls are free of charge.

Selecting a connection at each call



Instead of a send connection, "**Sel. at each call**" is assigned to the handset.

- ▶ Use  to enter the number ▶ Press the Talk key  ▶ ... Use  to select the connection ▶ **Dial**

Using an alternative connection/connection list on the display key



An "alternative connection" or the list of all configured connections is assigned to a display key.

- ▶ Press the display key **Sel. Line** ▶ ... Use  to select the connection ▶ **Dial** ▶ ... Use  to enter the number ... The number is dialled approximately 3.5 seconds after the last digit is entered

Any dialling plan that has been defined for the dialled phone number is ignored. The selected send connection is always used.

Calling an IP address (provider-dependent)

- ▶ Use the star key  to separate the sections of the IP address (e.g. 149*246*122*28).
- ▶ Use the hash key  to attach the SIP port number of the call participant to the IP address (e.g. 149*246*122*28#5060).

If the VoIP provider does not support the dialling of IP addresses, each part of the address will be interpreted as a normal phone number.

Incoming calls



Only calls to the receive connections assigned to the handset are signalled.

If no receive connections have been assigned, all incoming calls are signalled on all registered handsets.

If receive connections are configured but a connection is not assigned to a handset or answer machine, calls for this connection are not signalled.

If the number is only assigned to an answer machine, the call will not be signalled. If the answer machine is switched on, it will accept the call.

Accept a call: ▶ Press the Talk key .

Reject a call: ▶ Press the End call key .

Diverting a call to answer machine: ▶ **Options** ▶ **Divert to AM**

Call transfer

Connecting an external call to a VoIP connection with a second external participant (depending on the provider).

- ▶ Use the display key **Ext. Call** to establish an external consultation call ▶ ... Use  to enter the number of the second participant ... The active call is placed on hold ... The second participant is called and picks up ▶ Press the  key ... the call is transferred



Further settings for call transfer in Web configurator

▶ **Settings** ▶ **Telephony** ▶ **Advanced VoIP Settings**

Call transfer – ECT (Explicit Call Transfer)



The feature is supported by the network provider.

Activate/deactivate ECT

- ► ... use to select Select Services ► OK ► Transfer (ECT) ►
Change = on)

Transferring a call

You are making an **external** call via a VoIP connection and wish to transfer the call to another external participant. The external call is held in the same way as it is during call transfer.

- Press the End call key (during a conversation or before the second participant has answered).

Provider-specific functions (network services)

Network services depend on the network (analogue fixed line network or IP telephony) and on the network provider (service provider) and must be requested from that provider if required.

You will find a description of the features on your network provider's website or at one of their store branches.

If you require assistance, please contact your network provider.



Requesting network services may incur **additional costs**. Please consult your network provider.

Network services fall into two distinct groups:

- Network services that are activated when in idle status for the following call or all subsequent calls (for example, "calling anonymously"). These are activated/deactivated via the  **Select Services** menu.
- Network services that are activated during an external call, (for example, "consultation call", "swapping between two callers"). These are made available during an external call either as an option or by using a display key (e.g. **Ext. Call**).



To activate/deactivate the features, a code is sent to the telephone network.

► After a confirmation tone from the telephone network, press .

It is not possible to reprogram the network services.

Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and may be displayed on the recipient's display (CLIP = CLI presentation). If the caller's number is withheld, it will not be displayed to the recipient. The call is made anonymously (CLIR = CLI Restriction).

Caller display for incoming calls

Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- **External:** No number has been transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

Calling Line Identification for outgoing calls

Switching Calling Line Identification on/off for all calls

These settings apply to all registered handsets.

- ▶  ▶ ... use  to select  Select Services ▶ OK ▶  All Calls Anonym. ▶
Change  = activated)

Deactivating Calling Line Identification for the next call

- ▶  ▶ ... use  to select  Select Services ▶ OK ▶  Next Call Anonym. ▶ OK ▶ ...
use  to enter the number ▶ Dial ... the connection is established without Calling Line Identification

Transferring the name from the online directory

It is also possible to display the name of the caller as stored in the online directory instead of the number.



The provider of the online directory supports this function.

The "Display caller name" function has been activated via the Web configurator.

The caller has authorised Calling Line Identification and has not withheld the function.

The telephone is connected to the Internet.

The caller's number is not saved in the handset's local directory.

Call waiting during an external call

During an **external** call, a call waiting tone indicates another external caller. If the number is being transferred, you will see the number or the name of the caller on the display.


Reject waiting caller:

- ▶ **Options** ▶  Reject waiting call ▶ OK ... the waiting caller hears the busy tone

Accept the waiting call:

- ▶ **Accept**

Once you have accepted the waiting call, you can switch between the two callers ("**Call swapping**" → p. 35) or speak to both simultaneously.

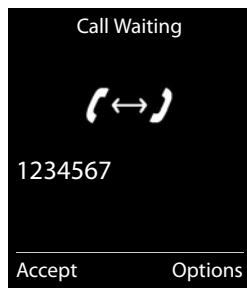

Activating/deactivating call waiting

- ▶  ▶ ... use  to select  Select Services ▶ OK ▶  Call Waiting ▶ OK ... then
Switch on/off: ▶ **Status:** ... use  to select **On** or **Off**
Activate: ▶ **Send**

Call waiting is activated or deactivated for all registered handsets.

Ringback

If busy/no answer

If a call recipient is unavailable, you can initiate a ringback.

- **If busy:** The ringback takes place as soon as the participant in question terminates the current call.
- **If no answer:** The ringback takes place as soon as the participant in question has made another call.

Initiate ringback

► Options ►  Ringback ► OK ► Press the End call key 

Cancelling ringback

►  ► ... use  to select  Select Services ► OK ►  Ringback Off ► OK ... You will receive a confirmation from the telephone network ► Press the End call key 



You can only activate one ringback at a time. Activating a ringback will automatically cancel any ringback that is already active.

The ringback can only be received on the handset that activated the ringback.

If the ringback is indicated before you are able to cancel it: ► Press the End call key 

Call divert

When diverting a call, the call is forwarded to another connection.

A distinction is made between

- Diverting calls to an external phone number and
- Diverting calls internally

Diverting calls to an external connection



A call divert can be set up for every connection (fixed line number and VoIP connection) that has been assigned to the handset as a receive connection (→ p. 101).

- ▶ ▶ ... use to select **Select Services** ▶ OK ▶ **Call Divert** ▶ OK ▶ ... use to select receive connection ▶ OK ▶ ... then
- Switch on/off: ▶ **Status:** ... use to select **On** or **Off**
- Enter the number for call diverting:
 - ▶ **To Phone Number** ▶ ... use to enter the number
 - ▶ Enter a different Gigaset.net number to divert the Gigaset.net number.
- Set the time for call divert:
 - ▶ **When** ▶ ... use to select the time for call divert
 - All Calls:** Calls are diverted immediately
 - No Answer:** Calls are diverted if no one accepts the call within several rings.
 - When Busy:** Calls are diverted if the line is busy.
- Activate: ▶ **Send**

For call divert with a fixed line connection: A connection is established to the telephone network ... a confirmation is sent from the telephone network ▶ Press the End call key



Diverting calls may incur **additional costs**. Please consult your network provider.

Internal Call Divert

Divert **external** calls that are made to one of the receive connections of the handset (→ p. 101), to a different handset.

- ▶ ▶ ... use to select **Select Services** ▶ OK ▶ **Call Divert** ▶ OK ▶ **Internal** ▶ OK ▶ ... then
- Switch on/off: ▶ **Activation** ... use to select **On** or **Off**
- Select the handset:
 - ▶ **To Handset** ▶ ... use to select an internal participant
 - No Handset** is displayed if internal Call Divert has not been set previously or if the previously set handset is no longer registered.
- Delay time for answering the call:
 - ▶ **Ring Delay** ▶ ... use to select **None** / **10 sec.** / **20 sec.** / **30 sec.**
 - None:** The call is immediately diverted.
- Activate: ▶ **Save**

Internal calls are diverted once only. If calls to the handset are diverted to another handset (e.g. INT 1) that also has call divert activated (e.g. to INT 2), this second call divert is not initiated. The calls are indicated on handset INT 1.



Any call that has been diverted is entered in the call lists.

Calls with three participants

Consultation calls

Make another external call during an external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶ ... use  to enter the number of the second participant ... the active call is placed on hold and the second participant is called


If the second participant does not answer: ▶ **End**

Ending a consultation call

- ▶ **Options** ▶  **End active call** ▶ **OK** ... the connection to the first caller is reactivated

or

- ▶ Press the End call key  ... a recall to the first participant is initiated

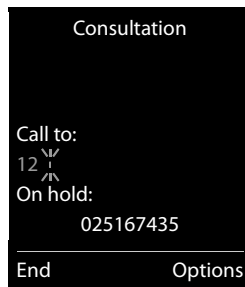

Call swapping

Switching between two calls. The other call is placed on hold.


- ▶ During an external call, dial the number of a second participant (consultation call) or accept a waiting caller ... the display shows the numbers and/or names of both call participants, the current participant is marked with 
- ▶ Use the control key  to switch back and forth between participants

Ending a currently active call

- ▶ **Options** ▶  **End active call** ▶ **OK** ... the connection to the other caller is reactivated

or

- ▶ Press the End call key  ... a recall to the first participant is initiated

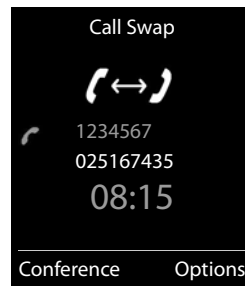

Message lists

Notifications about missed calls, messages on the answer machine/network mailbox, received SMS messages and missed alarms are saved in the messages list.


As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated → p. 37).

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

-  on the answer machine/network mailbox
-  in the missed calls list
-  in the SMS message list
-  in the missed alarms list

Example

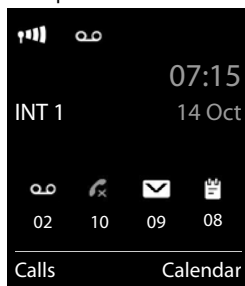

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed
- An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.
- An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.
- ▶ ... use  to select a list ▶ **OK** ... the calls or messages are listed

Network mailbox: The network mailbox number is dialled.

Example

Messages & Calls	
Missed Alarms:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Answer Mach.:	
Back	OK



The message list contains an entry for every answer machine assigned to the handset, e.g. for the local answer machine or for a network mailbox.

Activating/deactivating Message key flashing

Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated for each message type.

In idle status:

- ▶  Press keys      ... the number 9 appears in the display ▶ ... use  to select the message type:

- | | |
|---------------------------------|---|
| Messages on the network mailbox | ▶   |
| missed calls | ▶   |
| new SMS | ▶   |
| Messages on the answer machine | ▶   |


... the number 9 followed by the entry (e.g. 975) is displayed, the current setting for the select message type flashes in the entry field (e.g. 0) ▶ ... use  to set the action for the arrival of new messages:

- | | |
|--------------------------------|---|
| The Message key flashes | ▶  |
| The Message key does not flash | ▶  |

- ▶ ... confirm selected setting with **OK**

or

- ▶ return to idle display without making changes: ▶ **Back**

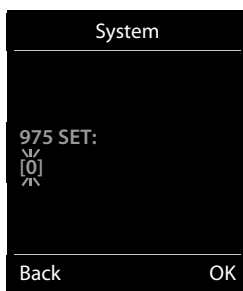

Gigaset GO: The telephone will send a notification of newly received calls to your smartphone.



The **Gigaset elements** app has been installed on the smartphone.

The telephone has been registered with **Gigaset elements** (→ web configurator).

Further information about Gigaset GO can be found at

→ www.gigaset.com/go

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.

List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:
 -  **Missed calls,**
 -  **Accepted calls,**
 -  **Outgoing calls** (redial list),
 -  Call on the answer machine
- Caller's number. If the number is stored in the directory, the name and number type ( **Phone (Home)**,  **Phone (Office)**,  **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls	
  Frank	
Today, 15:40	[3]
 089563795	
13.05.18, 18:32	
  Susan Black	
12.05.18, 13:12	
View	Options

Opening the call list

Via the display key: ▶ **Calls** ▶ ... use  to select the list ▶ **OK**

Via the menu: ▶  ▶ ... use  to select **Call Lists** ▶ **OK** ▶ ... use  to select the list ▶ **OK**

Via the Message key (missed calls):

▶ Press the Message key  ▶  **Missed Calls:** ▶ **OK**

Calling back a caller from the call list

▶  ▶ ... use  to select **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK** ▶ ... use  to select entry ▶ Press the Talk key 

Additional options

▶  ▶ ... use  to select **Call Lists** ▶ **OK** ▶ ... use  to select list ▶ **OK** ...possible options:

View an entry: ▶ ... use  to select entry ▶ **View**

Copy the number to the directory:

▶ ... use  to select entry ▶ **Options** ▶  **Copy to Directory**

Delete an entry: ▶ ... use  to select entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete list: ▶ **Options** ▶  **Delete List** ▶ **OK** ▶ **Yes**

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets (→ p. 41).

Opening the directory

- ▶ Briefly press  in idle status

or

- ▶  ▶ ... use  to select  **Directory** ▶ **OK**

Directory entries

Number of entries: up to 500

Information: First name and surname, up to three telephone numbers, e-mail address, anniversary with alert, VIP ringtone with VIP icon, CLIP-picture

Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters
E-mail address: max. 64 characters

Creating an entry

- ▶  ▶  <New Entry> ▶ **OK** ▶ ... use  to switch between the entry fields and enter data for an entry:

Names/numbers:

- ▶ ... use  to enter first names and/or surnames, at least one number (personal, office, or mobile) and an e-mail address, if applicable

Anniversary:

- ▶ ... use  to activate/deactivate **Anniversary** ▶ ... use  to enter date and time ▶ ... use  to select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP) :


- ▶ ... use  to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the .

Caller Picture :

- ▶ ... use  to select a picture that is to be displayed during a call from the participant (→ Resource Directory).

Save entry: ▶ **Save**

Example

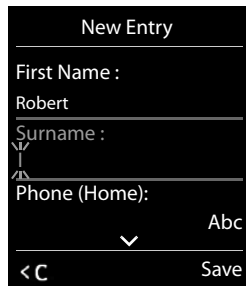


The entry is only valid if it contains at least one number.



For **Caller Melody (VIP)** and **Caller Picture**: the telephone number of the caller must be supplied.

Searching for/selecting a directory entry

► ► ... use to browse searched names

or

► ► ... use to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ► ... use to continue browsing to the desired entry, if needed

Scroll through directory: ► ► Press and hold

Displaying/changing an entry

► ► ... use to select entry ► **View** ► ... use to select the field to be changed ► **Edit**

or

► ► ... use to select an entry ► **Options** ► **Edit entry** ► **OK**

Deleting entries

Delete the **selected** entry: ► ► ... use to select an entry ► **Options** ► **Delete entry** ► **OK**

Delete **all** entries: ► ► **Options** ► **Delete all** ► **OK** ► **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

► ► **Options** ► **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

► ► **Options** ► **Available Memory** ► **OK**

Copying number to the directory

Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- From the text of an SMS
- From a public online directory or classified directory
- When dialling a number

The number is displayed or highlighted.

- Press the display key  or **Options** ►  **Copy to Directory** ► **OK** ... possible options:

Create a new entry:

- **<New Entry>** ► **OK** ► ... use  to select number type ► **OK** ► complete entry ► **Save**

Add number to an existing entry:

- ... use  to select an entry ► **OK** ► ... use  to select number type ► **OK** ... the number is entered or a prompt to overwrite an existing number is displayed ► ... if required, answer the prompt with **Yes/No** ► **Save**

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.

The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.

The recipient handset does not support vCards:

A separate entry is created and sent for each number.

The sending handset does not support vCards:

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

- ▶  ▶ ... use  to select the desired entry ▶ **Options** ▶  **Copy entry** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**



Use **vCard via SMS** to send a directory entry in vCard format by SMS.

Copying the entire directory

- ▶  ▶ **Options** ▶  **Copy all** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entries are copied one after the other

Copying a vCard using Bluetooth

Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.



Bluetooth mode is activated.

The other handset/mobile phone supports Bluetooth.

- ▶  ▶ ... use  to select an entry if needed ▶ **Options** ▶  **Copy entry / Copy all** ▶  **vCard via Bluetooth** ... the **Known Devices** list is displayed ▶ ... use  to select device ▶ **OK**

Receiving a vCard using Bluetooth

If a device in the **Known Devices** list sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ▶ ... use  to enter the PIN of the **sending** Bluetooth device ▶ **OK** ... the copied vCard is available as a directory entry

Copying directory entries from a smartphone (Gigaset GO)



The phone is connected to the Internet.

The **Gigaset ContactsPush** app has been installed on the smartphone.

Further information is available at ➔ www.gigaset.com/contactspush

Synchronising the phonebook with the PC address book (Gigaset QuickSync)



The Gigaset QuickSync programme has been installed on the computer.

The handset is connected via Bluetooth or via a USB data cable to the computer.

Free download and further information at ➔ www.gigaset.com/quicksync

Online directories

Depending on the provider you can use public online directories, e. g. online directory and Yellow Pages.



The online directory is configured via the Web configurator.

Exclusion of liability

Gigaset Communications GmbH assumes no guarantee or liability for the availability of this service. The service may be discontinued at any time.

Opening an online directory/Yellow Pages

- ▶ Press and **hold** ... The list of online directories is displayed with provider-specific names ▶ ... Use to select the online directory or Yellow Pages from the list ▶ **OK**



Calls to the online directory are always free of charge.

Searching for an entry

- ▶ Press and **hold** ▶ ... Use to select a directory/Yellow Pages ▶ **OK** ▶ ... Use to enter search criteria ▶ ... Use to switch between the entry fields ▶ **Search** ... then

Searching for a telephone number: ▶ Enter name and town/city

Name/category: ▶ ... use to enter the name or the category (max. 30 characters)

Town/city: The names of towns/cities most recently entered are displayed (maximum 5).

- ▶ ... Use to enter the name of the town/city in which the participant you are searching for lives (max. 30 characters)
- ▶ or select one of the displayed town/city names using

Start search: ▶ **Search** ... the search will be started

Town/city details unclear: ... possible town/city names are displayed ▶ ... use to select a town/city name ▶ **OK**

Searching for a name (reverse search): ▶ Enter the number

Number: ▶ ... Use to enter the number (max. 30 characters)

Start search: ▶ **Search** ... the search is started



The selected online directory supports the number search.

Online directories

No entries found to match the search criteria given:

- ▶ Start a new search: ▶ **New**
- ▶ Change search criteria: ▶ **Change**

Too many entries found:

- ▶ Start a refined search: ▶ **Refine**
- ▶ The number of hits appears in the display (depends on the provider).
Display hit list: ▶ **View**

Start a refined search

The refined search limits the number of hits returned by a previous search using additional search criteria (first name and/or street).

▶ **Refine**

or

▶ **Options** ▶  **Refine Search** ▶ **OK**

... The search criteria are transferred from the previous search and are entered into the corresponding fields ▶ ... Edit or add search criteria, e.g. enter first names or street ▶ **Search**

Search result (hit list)

The first entry found is displayed. The consecutive number of the entry displayed and the hit number is visible at the top right (e.g. 1/50).

Scroll through the list: ▶ 

Display the full entry:

- ▶ **View** ... all entry information is displayed in full ▶ ... use  to scroll through the entry

Refine search criteria and restrict hit list:

- ▶ **Options** ▶  **Refine Search** ▶ **OK** (→ p. 43)

Start a new search:

- ▶ **Options** ▶  **New Search** ▶ **OK**

Copy an entry to the local directory:

- ▶ **Options** ▶  **Copy to Directory** ▶ **OK** ▶ ... Use  to select <New Entry> or an existing entry ▶ **OK** ▶ **Save** ... The entry is saved, the complete name is transferred to the **Surname** field of the local directory

Example

Online Directory	1/50
Sand, Marie Elisabe ...	
0049123456789	
Parkstraße 11	
Berlin 12345	
View	Options

Calling participants

▶  Select entry ▶ Press the Talk key 

If the entry only contains one phone number, this is the one that is dialled.

If the entry contains more than one number, a list of numbers is displayed.

▶  Select number ▶ **Dial**

Gigaset.net directory

The Gigaset.net directory contains all participants registered on Gigaset.net.

Opening the Gigaset.net directory

- ▶  Press and **hold** ... The list of online directories is opened ▶  **Gigaset.net** ▶ **OK** ...
The Gigaset.net directory is opened

or

- ▶ ... Use  to dial the phone number of the Gigaset.net directory (1188#9) ▶ Press the Talk key  ... The Gigaset.net directory is opened



When the Gigaset.net directory is opened for the first time: ▶ Register with Gigaset.net
(→ p. 101)

Searching for participants on the Gigaset.net directory

- ▶  Press and **hold** ▶  **Gigaset.net** ▶ **OK** ▶ ... use  to enter a name or part of a name
(max. 25 characters) ▶ **Options** ▶  **Search** ▶ **OK**

Search successful: A hit list is displayed containing all the names that begin with the specified character string. The consecutive number of the marked entry and the hit number is visible at the top right (e.g. 1/5).

- ▶ ... Use  to scroll through the hit list

No matching entry found:

Start a new search: ▶ **New**

Change search criteria: ▶ **Change** ... the defined name is copied ▶
... Change or extend name ▶ ... Repeat search

Too many matching entries, no hit list:

Start a refined search: ▶ **Refine** ... the defined name is copied ▶
... extend the name using  ▶ ... Repeat search

Hit list too long:

Start a refined search: ▶ **Options** ▶  **Refine Search** ▶ **OK** ... the defined name is copied ▶
... extend the name using  ▶ ... Repeat search

Desired participants not found:

Start a new search: ▶ **Options** ▶  **New Search** ▶ **OK** ▶ ... enter new name using  ▶ ...
Repeat search

Example:

Gigaset.net	1/5
Saal, Frank	
Sailor, Ben	
Sailor, Anna	
Sand, Marie Elisabe	
Sand, Otto	
View	Options

Displaying an entry

- ▶ ... Use  to select participant from the hit list ▶ **View** ... The display shows the Gigaset.net number and the participant's name. The name may appear over a number of lines
- ▶ ... Use  to display the name and number of the next/previous participant in the hit list

Copying an entry to the local directory

- ▶ ... use  to select entry ▶ **Options** ▶  **Copy to Directory** ▶ **OK** ▶ ... use  to select <New Entry> or an existing entry ▶ **OK** ▶ change entry if necessary ▶ **Save** ... The entry is saved, number and name (abbreviated if necessary, max. 16 characters) are copied to the local directory

Calling a Gigaset.net participant

- ▶ From the Gigaset.net directory: ▶ ... Use  to select participant in the hit list ▶ Press the Talk key 

or

- ▶ Enter number directly (in idle status): ▶ ... Use  to enter a Gigaset.net number (including #9) ▶ Press the Talk key 

or

- ▶ From the local directory: ▶  Briefly press ▶ ... Use  to select a Gigaset.net phone number ▶ Press the Talk key 



Every number ending with #9 is automatically dialled via Gigaset.net.

Calls to the Gigaset.net directory are always **free of charge**.

Editing and deleting your own entry

- ▶  Press and hold ▶  **Gigaset.net** ▶ **OK** ▶ **Options** ▶  **Own Details** ▶ **OK** ... The Gigaset.net number and the current name are displayed.

Entering/editing a name:

- ▶ **Change** ▶ ... Use  to delete the name if necessary ▶ ... Use  to change the name or enter a new name (max 25 characters) ▶ **Save**



Note the data protection notice → p. 101.

If the name is deleted, the entry is deleted from the directory and will not longer be "visible" to other Gigaset.net participants. The Gigaset.net number can still be reached.

Display a number during a call: ▶ **Options** ▶  **Service Info** ▶ **OK**

Answer machine

Local answer machine



Once the telephone has been set up, an answer machine (AB1) is activated. There are two further answer machines available if, in addition to the fixed line connection, VoIP connections have been configured and one or more receive connections have been assigned to the answer machines.

Each answer machine only accepts calls that are addressed to one of its receive connections and can only be operated using handsets to which at least one of its receive connections has been assigned.

Receive connections can be set up using the web configurator.

Switching the answer machine on/off

The answer machine can be set to the following modes:

Answer & record The caller hears an announcement and is able to leave a message.

Answer only The caller hears an announcement but cannot leave a message.

Alternating The mode switches between **Answer & record** and **Answer only** at pre-determined times.

▶ ▶ ... use to select **Answer Machine** ▶ OK ▶ **Activation** ▶ OK ▶ ... use to select **Answer Machine** (if more than one answer machine is available) ▶ **Change** ... then

Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**

Set mode: ▶ **Mode** ▶ ... use to select mode

Set the time for **Alternating** mode:

▶ ... use to switch between **Record from** and **Record until** ▶ ... use to enter hours/minutes in 4-digit format to set the start and end of the period. (The time **must** be set.)

Save settings: ▶ **Save**

Operation using the handset

Playing back messages

- ▶ Press and hold the  key



Key 1 is assigned to the answer machine.

or

- ▶ Press the Message key  ▶  **Answer Mach.:** ▶ OK

or

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶ **Play Messages** ▶ OK ▶ ... use  to select **Answer Machine** (if more than one answer machine is available) ▶ OK

The answer machine begins immediately with message playback. New messages are played back first.

Actions during playback

- Stop playback: ▶  /  or use the display key: ▶ **Options**
- Continue playback: ▶ Press  /  again or use the display key: ▶  **Continue**
- Go to the start of the current message: ▶ Press key 
- Repeat the last 5 seconds of the message: ▶ Press key 
- Skip to the next message: ▶ Press  or key 
- Skip to previous message during the time stamp playback:
 - ▶ Press  or key 
- Skip to next message during the time stamp playback:
 - ▶ Press key 

- Mark a message as "new": ▶ Press key  or use the display key ▶ **Options** ▶  **Mark as new** ▶ OK

An "old" message that has already been played back is displayed as a "new" message again. The  key on the handset flashes.

- Copying the phone number from a message to the directory: ▶ **Options** ▶  **Copy to Directory** ▶ ... complete entry using 
- To delete a single message: ▶ Press **Delete** or key 
- Delete all old messages: ▶ **Options** ▶  **Delete old list** ▶ OK ▶ Yes

Picking up a call from the answer machine

You can pick up a call while the answer machine is recording or is being operated remotely:

- ▶ Press the Talk key  or use display key **Accept** ... recording is interrupted ... speak to the caller

If three seconds of the message have already been recorded when you accept the call, the message is saved. The Message key  on the handset flashes.

Forwarding an external call to the answer machine



An external call is indicated on the handset.

The answer machine is activated, is not in use and still has enough memory.

- ▶ Press the display key  ... The answer machine starts immediately in answer and record mode and records the call. The set time for ring delay (→ p. 52) is ignored

Activating/deactivating two-way record

Pick up an **external** call with the answer machine:

- ▶ Inform the caller of the two-way recording ▶ **Options** ▶  **Two-way Record** ▶ **OK** ... two-way recording is indicated in the display by an advisory text and placed in the answer machine list as a new message

End two-way recording: ▶ **End**

Activating/deactivating call screening

During recording of a message you can screen a call via the handset loudspeaker:

Permanently switching call screening on/off:

- ▶  ▶ ... use  to select  **Answer Machine** ▶ **OK** ▶  **Call Screening** ▶ **Change**  (= on) ... call screening is switched on/off for all registered handsets

Switching off call screening for the current recording:

- ▶ Press the display key **Silence** or the End call key  ▶ ... Pick up call using 

Operating when on the move (remote operation)

Access answer machine or switch answer machine on from another telephone (e.g. hotel, mobile phone).



The system PIN is set to something other than 0000 and the other telephone has tone dialling (DTMF).

Switching on the answer machine

- ▶ Call the telephone connection and let it ring until the announcement "Please enter PIN" (approx. 50 seconds) ▶ ... use  to enter the telephone's system PIN within 10 seconds ... the answer machine is switched on, the remaining memory is announced, messages are played back



Incorrect PIN is entered or entry takes too long (more than 10 seconds): The connection is interrupted. The answer machine will remain deactivated.

The answer machine cannot be deactivated remotely.

Checking the answer machine



The answer machine is activated.

- Call the telephone connection ► ... during the announcement press key **9** ... playback of the announcement is interrupted ► Enter system PIN

You are informed whether any new messages have been recorded. Message playback begins.

The answer machine is operated using the following keys:

During the time stamp playback: Skip to previous message. **1**

During message playback: Go to the start of the current message.

Pause playback. Press again to resume. **2**

After a pause of approx. 60 seconds, the connection is ended.

Go to the next message. **3**

Repeat the last 5 seconds of the message playback. **4**

During message playback: Delete current message. **0**

Change the status of a previously played back message to "new". *****

The next message starts to play. The remaining memory is announced at the end of the last message.

Cancelling remote operation

- Press the End call key  or replace the receiver



The answer machine will terminate the connection under the following circumstances:

- The entered system PIN is incorrect.
- There are no messages on the answer machine.
- After the remaining memory announcement.

Settings

Recording a personal announcement/advisory message

The phone is supplied with pre-recorded announcements for announcement and advisory mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Announcements** ▶ OK ▶ ... use  to switch between **Record Announcem.** and **Rec. Advisory Msg.** ▶ OK ▶ ... use  to select **Answer Machine** (if more than one answer machine is available) ▶ OK ▶ OK ▶ ... record your announcement (at least 3 seconds) ... possible options

Complete the recording and save:

- Cancel the recording: ▶ **End** ... the announcement is played back for you to check
- Resume the recording: ▶ Press the End call key  or **Back**
- Repeat the recording: ▶ **OK**
- ▶ **New**



Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.

If the recording is cancelled, the default announcement is used.

The recording is cancelled or not started if the answer machine memory is full.

- ▶ Delete old messages ... the answer machine switches back to **Answer & record** mode ▶ ... repeat the recording, if needed

Listening to announcements/advisory messages

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Announcements** ▶ OK ▶ ... use  to switch between **Play Announcement** and **Play Advisory Msg.** ▶ OK ▶ ... use  to select **Answer Machine** (if more than one answer machine is available) ▶ OK ... the announcement is played back ... possible options:

- Cancel playback: ▶ Press the End call key  or **Back**
- Cancel playback and record a new announcement: ▶ **New**

If the answer machine's memory is full, it will switch to **Answer only** mode.

- ▶ Delete old messages ... the answer machine switches back to **Answer & record** ▶ ... repeat any recording

Deleting announcements/advisory messages

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Announcements** ▶ OK ▶ ... use  to switch between **Delete Announcem.** and **Del. Advisory Msg.** ▶ OK ▶ ... use  to select **Answer Machine** (if more than one answer machine is available) ▶ OK ▶ **Yes**

Once the announcement has been deleted, the relevant pre-recorded announcement is used again.

Setting recording parameters

►  ► ... use  to select  **Answer Machine** ► OK ►  **Recordings** ► OK ... then

Maximum recording time:

► **Length:** ... use  to select timeframe

Recording quality:

►  **Quality** ► ... use  to switch between **Long Play** and **Excellent** (at higher quality, the max. recording time will decrease)

When should a call be picked up:

►  **Ring Delay** ► ... use  to select a time

Save settings:

► **Save**

The following apply when setting is **Automatic**:

- No new messages available: a call will be picked up after 18 seconds.
- New messages available: a call will be picked up after 10 seconds.

When checking messages remotely (→ p. 49) it is therefore apparent after 15 seconds that there are no new messages waiting. No call costs are incurred if the call is ended immediately.

Network mailbox

Each network mailbox accepts incoming calls made via the corresponding line (fixed line network or corresponding VoIP phone number). In order to record all calls, a network mailbox should be set up for both the fixed line network and the VoIP connection.



Fixed line network connection: The network mailbox has been **requested** from the network provider.



The network mailbox is automatically called via the corresponding connection. An automatic area code specific to the phone is **not** prefixed.

The network mailbox messages can be played back using the phone's keypad (digit codes). For VoIP, you need to use the web configurator to define how the digit codes are to be converted to DTMF signals and transmitted. Ask your VoIP provider which type of DTMF transmission it supports.

Activating/deactivating the network mailbox, entering a number

On the handset, you can manage the network mailboxes that are assigned to one of its receive connections.

▶ ▶ ... use to select **Answer Machine** ▶ OK ▶ **Network Mailbox** ▶ OK ▶ ... use to select connection if applicable ▶ OK ... then

For a fixed line network/connection

▶ ... use to enter or amend the network mailbox number ▶ **Save**



To activate/deactivate the network mailbox for the fixed line network connection use the phone number and a function code of your network provider. Please contact the network provider if you require any further information.

For a VoIP connection

Activate/deactivate network MB:

▶ **Status** ... use to select **On** or **Off**

Enter number:

▶ **Network Mailbox** ▶ ... use to enter or amend the network mailbox number

With some VoIP providers, the phone number has already been downloaded together with the general VoIP provider data and saved to the base station.

Save settings:

▶ **Save**

Playing back messages

- ▶ Press and hold 



Key 1 has been assigned to the network mailbox.

or

- ▶ Press the Message key  ▶ ... use  to select network mailbox (**Net AM: Fixed Line / Mailbox: IP1**) ▶ OK

or

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶ **Play Messages** ▶ OK ▶ ... use  to select network mailbox (**Mailbox: Net AM: Fixed Line / Mailbox: IP1**) ▶ OK

Listen to announcement out loud: ▶ Press the handsfree key 

Set fast access for the answer machine

It is possible to call a network mailbox or the telephone's local answer machine directly by pressing key .

Assigning key 1, changing assignment

Settings for the fast access are device-specific. A different answer machine can be assigned to key  on each registered handset. The answer machine for the handset's receive connections are offered, e.g. **Net AM: Fixed Line, Mailbox: IP1, Answer Machine**.

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Set Key 1** ▶ OK ▶ ... use  to select answer machine ▶ **Select** ( = selected)

Return to idle status: ▶ Press and hold the End call key 

Network mailbox

If no number has yet been saved for the network mailbox:

- ▶ ... use  to make a change in the line **Network Mailbox** ▶ ... use  to enter the number of the network mailbox ▶ **Save** ▶ Press and hold the End call key  (idle status)

Additional functions

Sound profiles

The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**.

- Use  to switch between the profiles ... the profile is changed straight away without a prompt

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ► after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Loud** and **Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2018						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ... use to select **Organizer** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select desired day ▶ OK ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Enter date: ▶ **Date** ... the selected day has been pre-set ▶ ... use to enter new date
 - Enter time: ▶ **Time** ▶ ... use to enter hours and minutes of the appointment
 - Set name: ▶ **Text** ▶ ... use to enter a description of the appointment (e.g. evening meal, meeting)
 - Set alarm tone: ▶ **Signal** ▶ ... use to select the melody of the reminder alarm or deactivate the acoustic signal
 - Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ OK ▶ ... Then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **OFF**

Respond with SMS: ▶ Press the display key **SMS** ... the SMS menu is displayed

Permanently modify the ringtone volume: ▶ ... Press the volume keys / during the reminder



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

- ▶ Press the Message key ▶ **Missed Alarms:** ▶ OK ▶ ... use to browse through the list of any appointments

or

- ▶ ▶ ... use to select **Organizer** ▶ OK ▶ **Missed Alarms** ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ **Delete**

Compose an SMS: ▶ **SMS** (only if the list has been opened via the menu) ... the SMS menu is opened

Displaying/changing/deleting stored appointments

- ▶ ▶ ... use to select **Organizer** ▶ OK ▶ **Calendar** ▶ OK ▶ ... use to select day ▶ OK ... the appointment list is displayed ▶ ... use to select date ... possible options:

Display appointment details:

- ▶ **View** ... The appointment settings are displayed

Change appointment: ▶ **View** ▶ **Edit**

- or ▶ **Options** ▶ **Edit entry** ▶ OK

Activate/deactivate appointment:

- ▶ **Options** ▶ **Activate/Deactivate** ▶ OK

Delete appointment: ▶ **Options** ▶ **Delete entry** ▶ OK

Delete all appointments for a day:

- ▶ **Options** ▶ **Delete all Appoints.** ▶ OK ▶ Yes

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Setting the wake-up time: ▶ **Time** ▶ ... use to enter hours and minutes
 - Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
 - Set the volume: ▶ **Volume** ▶ ... use to set volume in 5 levels or select **crescendo** (increasing volume)
 - Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
 - Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ▶ **OFF**

Repeat the alarm (snooze mode): ▶ Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶ ▶ ... use to select **Additional Features** ▶ OK ▶ **Baby Monitor** ▶ OK ... then

Switch on/off:

- ▶ **Activation:** ... use to select **On** or **Off**

Enter destination:

- ▶ **Send alarm to** ▶ ... use to select **External** or **Internal**

External: ▶ **Number** ▶ ... use to select number or select a number from the directory: ▶

Internal: ▶ **Handset** ▶ **Change** ▶ ... use to select the handset ▶ OK

Activate/deactivate two-way talk:


- ▶ **Two Way Talk** ▶ ... use to select **On** or **Off**

Set microphone sensitivity:

- ▶ **Sensitivity** ▶ ... use to select **High** or **Low**

Save settings: ▶ **Save**

Baby Monitor activated

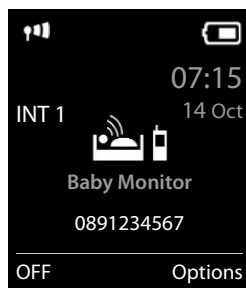

The destination number is displayed in idle display when the baby monitor is activated.

Deactivate baby monitor / cancel alarm

Deactivate the baby monitor: ▶ In idle status press the display key **OFF**

Cancel the alarm: ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

▶ Accept alarm call ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **OFF**.



The baby monitor cannot be reactivated remotely.

Reactivate: ➔ p. 59

ECO DECT

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

Reducing radiation by up to 80%

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **ECO DECT** ▶ OK ▶ **Maximum Range** ▶ **Change** ( = off)



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

Deactivating radiation in idle status

▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **ECO DECT** ▶ OK ▶  **No Radiation** ▶ **Change** ( = on)



To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.

In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.

- ▶ Press and **hold** the Talk key ... the dialling tone sounds.

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio**
Settings ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶
Time Control ▶ OK ▶ ... then
- Switch on/off: ▶ use to select **On** or **Off**
- Enter time: ▶ use to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use to enter start and end in 4-digit format
- Save: ▶ **Save**

Example

Time Control	
For external calls:	
On	
Suspend ring. from:	22:00
Suspend ring. until:	07:00
Back	Save



The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Anon. Calls Silent** ▶ **Edit** (☒ = on) ... the call is only signalled on the display

Black list

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

Displaying/editing the black list

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Black List** ▶ **Edit** ▶ **Blocked Numbers** ▶ OK ... the list of blocked numbers is displayed ... possible options:
 - Create an entry: ▶ **New** ▶ ... use to enter a number ▶ **Save**
 - Delete an entry: ▶ ... use to select an entry ▶ **Delete** ... the entry is deleted

Transferring a number from a call list to the black list

- ▶ ▶ ... use to select **Call Lists** ▶ OK ▶ ... use to select **Accepted calls/ Missed calls** ▶ OK ▶ ... use to select entry ▶ **Options** ▶ **Copy to Blacklist** ▶ OK

Setting the protection mode

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Black List** ▶ **Edit** ▶ **Protection Mode** ▶ OK ▶ ... use to select desired protection:
 - No Protection** All calls are indicated, including from callers whose numbers are on the black list.
 - Silent Call** The telephone will not ring and the incoming call will only appear in the display.
 - Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
- Save settings: ▶ **Save**

Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Silent Charging** ▶ **Change** (☒ = ringtone is switched off when in charging cradle)

SMS (text messages)

It is possible to send SMS messages as soon as the telephone has been connected to the fixed line network.



Calling Line Identification is enabled (→ p. 31).

The network provider supports the SMS service.

If no SMS service centre is entered, the submenu **SMS** only consists of the entry **Settings**.



SMS messages can also be sent and received via VoIP. The lines for sending SMS messages must be expressly set. It is not possible to receive SMS messages via Gigaset.net.

Writing and sending SMS messages



An SMS may be up to 612 characters in length. If the number of characters exceeds 160, the SMS is sent as **linked** SMS messages (up to four individual SMS messages).

The remaining number of characters is shown in the top right corner of the display, followed by an indication in brackets of which part of a linked SMS is currently being written. Example: **405(2)**.

▶ ▶ ... use to select **Messaging** ▶ **OK** ▶ **SMS** ▶ **OK** ... then

Write an SMS: ▶ **New SMS** ▶ **OK** ▶ ... use to enter SMS text

Send an SMS: ▶ Press the End call key

or ▶ **Options** ▶ **Send** ▶ **OK** ▶ **SMS** ▶ **OK**

Enter number (**Send SMS to**):

From the directory: ▶ ▶ ... use to select number ▶ **OK**

or ▶ ... use to enter number directly

If sending SMS messages to an SMS mailbox: add the mailbox ID to the **end** of the number.

Send: ▶ **Send**



The number must include the local area code (even if you are in that area).

If an external call comes in, or if you interrupt writing for more than 2 minutes, the text is automatically saved in the draft message list.



Sending SMS messages may incur additional costs. Please consult your network provider.

Sending SMS messages to an e-mail address



The network provider supports this feature.

- ▶ ▶ ... use to select **Messaging** ▶ **OK** ▶ **SMS** ▶ **OK** ▶ **New SMS** ▶ **OK** ... then
- Enter address: ▶ ... use to enter the e-mail address at the start of the SMS message or
- ▶ **Options** ▶ **Insert eMail address** ▶ ... use to select a directory entry containing an e-mail address ▶ **OK**
- Write text: ▶ ... use to complete the SMS message
- Send: ▶ **Options** ▶ **Send** ▶ **OK** ▶ ... use to enter the number of the e-mail service (if not entered) ▶ **Send** ... the SMS is sent to the e-mail service of the SMS send service centre

Temporary storing of an SMS (draft message list)

You can temporarily store text messages, change and send them later.

Saving SMS in the draft message list

- ▶ ▶ ... use to select **Messaging** ▶ **OK** ▶ **SMS** ▶ **OK** ▶ **New SMS** ▶ **OK** ▶ ... use to write SMS ▶ **Options** ▶ **Save** ▶ **OK**

Opening and editing an SMS from the draft message list

- ▶ ▶ ... use to select **Messaging** ▶ **OK** ▶ **SMS** ▶ **OK** ▶ **Draft** ▶ **OK** ▶ ... use to select saved SMS ... possible options:
- Read draft: ▶ **Read**
- Edit: ▶ **Options** ▶ **Edit** ▶ **OK**
- Send SMS: ▶ **Options** ▶ **Send** ▶ **OK**
- Delete an entry: ▶ **Options** ▶ **Delete entry** ▶ **OK**
- Delete all entries: ▶ **Options** ▶ **Delete List** ▶ **OK** ▶ **Yes**

Receiving an SMS

Incoming SMS messages are saved in the incoming message list, linked SMS messages are generally displayed as **one** SMS.

SMS message list

The incoming SMS message list contains all the received SMS messages and those SMS messages that could not be sent due to an error.

New SMS messages are indicated on all Gigaset handsets by the icon on the display, the flashing Message key and an advisory tone.

Open the SMS message list

- With the Message key:  ... the messages list is opened
The messages list shows the number of SMS messages it contains: **bold** = new messages, **not bold** = read messages
Open list: ... use  to select **SMS**:  OK

SMS: (2)

- Via the SMS menu:  ... use  to select  **Messaging**  OK  **SMS**  OK  **Incoming**  OK

Every entry in the list contains:

- the number or name of the sender,
- the send/receive connection to which the SMS is addressed,
- arrival date and time.

0123727859362922
for Fixed Line
10/02/18 09:07

Functions of the incoming message list

-  ... use  to select  **Messaging**  OK  **SMS**  OK  **Incoming**  OK
... possible options:

Call the sender of the SMS:

- ... use  to select an SMS  Press the Talk key 

Delete an entry:  **Options**  **Delete entry**  OK

Save the number in the directory:

-  **Options**  **Copy to Directory**  OK

Delete all entries in the SMS message list:

-  **Options**  **Delete List**  OK  Yes

Reading and managing SMS messages

-  ... use  to select  **Messaging**  OK  **SMS**  OK  **Incoming**  OK
OK ... use  to select SMS  **Read** ... possible options:

Answer SMS:  **Options**  **Reply**  OK

Edit SMS text and send to recipient of your choice:

-  **Options**  **Edit**  OK ... use  to edit text  **Options**  **Forward**  OK

Forward SMS to recipient of your choice:

-  **Options**  **Forward**  OK

Display text in a different character set:

-  **Options**  **Character Set**  OK ... use  to select character set  **Select**  = selected)

Saving numbers from SMS text to the directory

If a telephone number in the SMS text is recognised, it is automatically highlighted.

- Save the number in the directory: ► 
If the number is to also be used to send an SMS, save the number including the local area code (dialling code).
- Dial a number: ► Press the Talk key 
- Select the next number, if an SMS contains multiple numbers: ► ... use  to scroll down until the first number has disappeared from the display.



The +-icon is not copied for international area codes.

- You should then enter "00" at the start of the number.

SMS with vCard

The vCard is an electronic business card. It is indicated by the  icon in the SMS text. A vCard can contain a name, home number, work number, mobile number and a birthday. Individual entries in a vCard can be saved to the directory one after the other.

When reading an SMS containing the vCard: ► **View** ► **Save**

The directory is opened automatically. The number and name are copied. If a birthday is entered on the vCard, the date is copied to the directory as an anniversary. If necessary, edit the entry in the directory and save it. You will return to the vCard automatically.

SMS notification

Receive notifications of **missed calls** and/or **new messages on the answer machine**.

-  ► ... use  to select  **Messaging** ► **OK** ►  **SMS** ► **OK** ►  **Settings** ► **OK** ►  **Notification** ► **Change** ( = on) ... then
- Enter number: ► **To** ... use  to enter the number to which the SMS should be sent
- Missed calls: ►  **Missed calls** ► ... use  to select **On** or **Off**
- Answer machine: ►  **For AM messages** ► ... use  to select **On** or **Off**
- Save settings: ► **Save**



Do not enter your own fixed line network number for notification of missed calls. This can create an endless loop that will incur charges.

SMS notification may incur **additional costs**.

SMS service centres

The number for at least one SMS service centre must be saved in the device to be able to send SMS messages. The SMS service centre number can be obtained from the service provider.

SMS messages are received from **every** entered SMS service centre as long as they are registered with their service provider.

Your SMS messages are sent via the SMS service centre that is entered as the active send centre. However, you can activate any other SMS service centre as the active send service centre to send a current message.

Entering/changing the SMS service centre, setting the send service centre

► ► ... use to select **Messaging** ► **OK** ► **SMS** ► **OK** ► **Settings** ► **OK** ► **Service Centres** ► **OK** ► ... use to select SMS service centre (= current send service centre) ► **Edit** ... then

Activate send service centre:

► **Active Send:** ... use to select **Yes** or **No** (**Yes** = SMS messages are sent via the SMS service centre)

For the SMS service centres 2 to 4, the setting only applies to the next SMS.

Enter the number of the SMS service:

► **SMS Service Centre Number** ► ... use to enter the number

Enter the number of the e-mail service:

► **eMail Service no.** ► ... use to enter the number

Select send connection:

► **Send via** ► ... use to select the fixed line network or VoIP connection that you want to use to send the SMS messages.

Save settings: ► **Save**



If you have agreed a flat fixed line network rate, the chargeable numbers with dialling code 0900 are often blocked. If, in this case, a 0900 number is entered for the SMS service centre, you will not be able to send text messages from your phone.

If the attempt to send fails, the SMS is saved in the incoming messages list and indicated as failed. VoIP connection: Even if the **Automatic fallback to fixed line** option is activated (→ web configurator), the telephone will not attempt to send the SMS via the fixed line network.

If the selected send connection is deleted from the configuration, the fixed line network connection is used.

SMS to PABXs

- The **Call Line Identification** must be **forwarded** to the extension of the PABX (CLIP).
 - If necessary, the access code/outside line code must be prefixed to the number of the SMS service centre (depending on your PABX). To test: Send an SMS to your own number, once with the access code and once without.
 - If the SMS is sent without the extension number, it will not be possible for the recipient to answer directly.
-

Activating/deactivating first ring muting

Every SMS addressed to your fixed line network connection is indicated by a single ring. If such a "call" is answered, the SMS is lost. To prevent this, mute the first ring for all external calls. In idle status:

▶  ▶ * # 0 5 # 1 9 ... the current setting flashes in the input field (e.g. 1) ... then

Do not mute the first ringtone:

▶  ▶ OK

Mute the first ringtone (default setting):

▶  ▶ OK

Activating/deactivating the SMS function

The settings you have entered for sending and receiving SMS messages (e.g. the numbers of the SMS service centres) and the entries in the incoming and draft lists are saved even after deactivation.

▶  ▶ * # 0 5 # 2 6 ... the current setting flashes in the input field (e.g. 1) ... then

Deactivate the SMS function:

▶  ▶ OK

Activate the SMS function (default setting):

▶  ▶ OK

SMS troubleshooting

- EO Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
- FE Error occurred while sending SMS.
- FD Connection to SMS service centre failed, see self-help.

Self-help with errors

You cannot send messages

- You have not requested the CLIP service (Calling Line Identification Presentation).
 - ▶ Ask your network provider to enable the feature.
- SMS sending was interrupted (e.g. by a call).
 - ▶ Re-send the SMS.
- The network provider does not support this feature.
- No number or an incorrect one has been entered for the send service centre.
 - ▶ Enter the number (→ p. 67).

SMS text is incomplete

- The phone's memory is full.
 - ▶ Delete old SMS messages.
- The network provider has not yet sent the rest of the SMS.

You have stopped receiving SMS messages

Call divert has been activated for **All calls**.

- ▶ Change call divert (→ p. 33).

The SMS is played back

- The "display call number" service is not activated.
 - ▶ Ask the network provider to enable this feature (subject to a fee).
- Your mobile phone operator and SMS service provider are not working in partnership.
 - ▶ Obtain information from your SMS service provider.
- The phone is not registered with the SMS service provider.
 - ▶ Send an SMS to register the phone for receiving SMS.

Resource Directory

Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ Gigaset QuickSync).

Media types:

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Manage CLIP pictures/sounds

▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Resource Directory** ▶ **OK** ... possible options:

View CLIP-picture: ▶ **Caller Pictures** ▶ **OK** ▶ ... use to select picture ▶ **View** ... the selected picture is displayed

Play sound: ▶ **Sounds** ▶ **OK** ▶ ... use to select sound ... the selected sound is played

Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ ... use to select volume ▶ **Save**

Rename picture/sound:

▶ Select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/image ▶ **Options** ▶ **Rename** ▶ ... use to delete name, use to enter new name ▶ **Save** ... the entry is saved with the new name

Delete picture/sound: ▶ Select **Caller Pictures / Sounds** ▶ **OK** ▶ ... use to select sound/picture ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Resource Directory** ▶ **OK** ▶ **Capacity** ▶ **OK** ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. for connecting a Bluetooth headset.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset



The headset features the **Headset** or **Handsfree Profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 5 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.

In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶ **Activation** ▶ **Change** = activated)
If the local area code is still not saved: ▶ ... use to enter local area code ▶ **OK**

When in idle status, the activated Bluetooth mode is indicated on the handset by the icon.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select **Additional Features** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶ **Search for Headset / Search Data Device** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:
Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices
Display information about a device:
▶ ... use to select a device, if applicable ▶ **View** ... the device name and device address are displayed

Bluetooth

- Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**
- Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Open the list

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶  **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device
 -  Bluetooth headset
 -  Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶  **Known Devices** ▶ **OK** ▶ ... use  to select entry ... possible options:
 - View an entry: ▶ **View** ... the device name and device address are displayed ▶ Press **OK** to go back
 - De-register a Bluetooth device:
 - ▶ **Options** ▶ **Delete entry** ▶ **OK**
 - Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use  to edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, a prompt will appear asking you to enter the PIN of the Bluetooth device (Bonding).

- Reject: ▶ **Briefly** press the End call key 
- Accept: ▶ ... use  to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... Wait for PIN confirmation ... then
 - Add the device to the list of known devices: ▶ **Yes**
 - Use the device temporarily: ▶ **No** ... the Bluetooth connection can be used, as long as the device is located within transmission range or until it is switched off

Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶ **Bluetooth** ▶ **OK** ▶  **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use  to change the name ▶ **Save**

Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.

Free to download at → www.gigaset.com/quicksync

QuickSync functions:

- Sync the handset's directory with Microsoft® Outlook®
 - Upload CLIP-pictures (.bmp) from the computer to the handset
 - Upload pictures (.bmp) as screensavers from the computer to the handset
 - Upload sounds (ringtone melodies) from the computer to the handset
 - Update firmware
 - Cloud synchronisation with Google™
- Connecting the handset to the computer via Bluetooth or via a USB data cable.



Connect the handset **directly** to the PC and **not** via a USB hub.

Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- Launch the **Gigaset QuickSync** program on the computer.

The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.

Carrying out a firmware update

- Connect the telephone and the PC using a **USB data cable** ► Launch **Gigaset QuickSync** ► Establish connection to the handset
- Start firmware update in **Gigaset QuickSync** ... Information about this can be found in **Gigaset QuickSync** help feature

The update process may take up to 10 minutes (not including download time).



Do not interrupt the process and do not remove the USB data cable.

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.

The display on your telephone is switched off, the Message key  and the Talk key  flash. Once the update is complete, your telephone will automatically restart.

Procedure in the event of an error

If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the "Gigaset QuickSync" program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery ▶ Re-insert the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:

- ▶ End the "Gigaset QuickSync" program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery
- ▶ Press and hold keys **4** and **6** at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys **4** and **6** ... the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above



Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.

E-Mail notifications

The phone periodically connects to the incoming e-mail server and checks for new messages.



An e-mail account is set up with an Internet provider.

The incoming e-mail server uses the POP3 protocol.

The name of the incoming e-mail server and your personal access data (account name, password) are stored in the phone (→ Web configurator).

The receipt of new e-mail messages is displayed on the handset: An advisory tone sounds, the Message key flashes and the icon is displayed in idle status.



The icon is also displayed when you have new SMS messages.

If authentication of the telephone is carried out by the incoming e-mail server via a secure connection (TLS authentication) and this fails, the e-mail messages are not downloaded to the telephone.

Notification when pressing the Message key : **Certificate error - Please check your certificates in the Web configurator.**

- ▶ Confirm notification using **OK** ... On the **Security** page in the Web configurator, you will find information on the possible causes and measures.

Opening the incoming e-mail list

▶ ▶ ... use to select **Messaging** ▶ **OK** ▶ **eMail** ▶ **OK**

or: There are new e-mail messages (the Message key flashes)

▶ press ▶ **eMail** ▶ **OK**

The phone establishes a connection to the incoming e-mail server. A list of e-mail messages that are stored there is displayed.

- New unread messages appear above old read messages.
- The following details are displayed for each e-mail: name or e-mail address of the sender (on one line, abbreviated if necessary) and date and time (date and time will only display correct values if sender and recipient are located in the same time zone).
- **Bold:** New message. E-mail messages that were not present in the incoming e-mail server when the inbox was last opened are identified as "new", regardless of whether or not they have been read.



E-mail messages classified as spam by the provider are stored in a separate folder and are not shown in the incoming e-mail list.

Some e-mail providers allow you to change this setting: ▶ Deactivate spam protection or display spam e-mails in the incoming email list.

Other e-mail providers may send a message to the inbox when a new spam e-mail is received. The date and sender of this mail are repeatedly updated, so that it is always displayed as a new message.

eMail Incoming	
Frank.Miller@mail.p.com	
10/02/2018 15:40	
Happy Birthday	
Anna Sand	
10/02/2018	10:38
Read	Delete

Messages when establishing a connection

The following problems may occur when connecting to the incoming e-mail server. The messages are displayed in the display for a few seconds.

Server not accessible

- The connection to the incoming e-mail server could not be established:
 - Incorrect entry for the name of the incoming e-mail server.
 - Temporary problems with the incoming e-mail server (server is down or is not connected to the Internet).
 - ▶ Check settings in the Web configurator.
 - ▶ Try again later.

Currently not possible

- The resources your phone requires to make the connection are busy, e.g.:
 - The permitted number of VoIP connections has already been reached.
 - One of the registered handsets is currently connected to the incoming e-mail server.
 - ▶ Try again later.

Login failed

- Error when logging in to the incoming e-mail server.
 - Incorrect entries for name of incoming e-mail server, user name and/or password.
 - ▶ Check settings in the Web configurator.

Mailbox settings incomplete

- Entries for name of incoming e-mail server, user name and/or password are incomplete.
 - ▶ Check/add to settings.

Reading e-mails

►  ► ... Use  to select  **Messaging** ► OK ►  **eMail** ► OK ► ... Use  to select an e-mail ► **Read**

The subject of the e-mail (maximum 120 characters) and the first few characters of the text (maximum 560 characters) are displayed.

Scroll through the message: 

Return to inbox: ► **Back**



If the e-mail does not contain any standard text, the message **eMail can't be displayed** will briefly appear.

View sender's address:

► **Options** ►  **From** ► OK ... The sender's e-mail address is displayed, over several lines if necessary (maximum 60 characters).

Return to inbox: ► **Back**

Example:

eMail	
Subject:	
Invitation	
Text:	
Hi Anna, I passed my test!	
Back	Options

Example:

eMail	
From:	
Anna.Sand@mailp.com	
Back	Options

Deleting an e-mail

►  ► ... Use  to select  **Messaging** ► OK ►  **eMail** ► OK ► ... Use  to select an e-mail in the incoming e-mail list ► **Delete** ... The e-mail is deleted from the incoming e-mail server

or

► Open message ► **Options** ►  **Delete** ► OK ► **Yes** ... The e-mail is deleted from the incoming e-mail server

Info Centre

The Info Centre makes information from the Internet (e. g. messages or the weather forecast) available for display on a Gigaset telephone. These info services are constantly updated. A default selection has already been defined for the telephone.

Data protection notice

The inventory data corresponds to that of the VoIP service.

When you use the service for the first time, a standard profile is created with configuration data for the device. You can then change and store the configuration data specific to your device, for example, the city for the weather forecast or the date of birth for the biorhythm. You can delete this configuration data again at any time.

The information services use the HTTP protocol.

Further information about the data stored in relation to the Gigaset.net service:

→ www.gigaset.net/privacy-policy

Information on gigaset.net info services: → www.gigaset.com/nextg/apps

Customising info services

Change the default setting for the Info Centre (standard profile) on the Gigaset.net website www.gigaset.net:

- Via the Web configurator: ▶ Open the page **Settings ▶ Info Services** ▶ ... Click on the link gigaset.net/myaccount ... You are automatically logged in with the username and password that have been assigned to your phone by default.

or

- Via a computer web browser: ▶ Enter the address www.gigaset.net ▶ ... Enter the user ID and password on the Gigaset.net website. You can find both on the web configurator page **Settings ▶ Info Services**.

The Gigaset.net website is displayed.

"Info Centre" tab

The page has an icon for every info service provided by Gigaset.net (e.g. weather, horoscope), and an icon for personal applications that you wish to add to your Info Centre.

"Screensaver" tab

Info services for the screensaver **Info Services**

Activating/deactivating a service

An info service is offered in the Info Centre of the registered handset if the relevant icon is orange and the option at the top right of the icon is activated.

Activating/deactivating a service: ▶ Click option

☒ = activated)

Example:



active



inactive

Customising info services

Customising information for an info service:

- ▶ Click the icon that belongs to an info service (e. g. weather) ... This will open another web page to customise the RSS feeds.

The web pages for the individual info services describe which settings can be made.

Example "Weather information"

- ▶ Click on the weather information icon ... A web page for configuring the weather information for the Info Centre is opened

The world weather is already set. In addition, you can select up to nine further cities (worldwide).

- ▶ Enter the name of the desired city ▶ Click on the magnifying glass icon ... The cities that start with the specified name are listed ▶ Click the list ▶ Select the desired city
- ▶ Add Info Centre location: ▶ Right-click the arrow icon ... The web page lists all the locations for which the Info Centre provides weather information.
- ▶ Remove city from the list: ▶ Click on the icon behind the city name



Configuring weather information on handset:

- ▶ Use to select Info Centre ▶ Weather ▶ OK ▶ Add location ▶ OK ... Use to enter location name ▶ OK ... A list of locations with the specified name is displayed ▶ Select location ▶ OK ▶ Save

Starting Info Centre, selecting info services

- ▶ Use to select Info Centre ▶ OK ... A list of available info services is displayed ▶ ... Use to select info service ▶ OK

To access certain info services (personalised services), you have to log in with a user name and password.

Messages when loading requested information

The information is loaded from the Internet. If the information for an info service cannot be displayed, one of the following messages appears:

Requested page can't be reached.

- Time limit exceeded (timeout) when loading the information or Internet server for the info services cannot be accessed. ▶ Check Internet connection and try again later.

Coding error on requested page

- The content of the requested info service is coded in a format that the handset cannot display.

Can't display requested page

- General error when loading the info service.

Login failed.

- Registration data has not been correctly entered. ► Reselect the info service and repeat the login process. Please remember that data is case sensitive.
- You are not authorised to access this info service.

Logging in for personalised info services

If a special login process with user name and password is required to access an info service:

- ... Use  to enter **Authent. Name** ► **Save** ► ... Use  to enter **Password** ► **Save** ... If login was successful, the requested info service is displayed

If login failed, a message to this effect is displayed → Messages when loading requested information, p. 79.



Pay attention when entering registration data, as it is case sensitive.

Operating Info Centre

Depending on the requested info service:

- Scroll through an info service: ► Press the control key 
- Return to the previous page: ► Press the left display key.
- Return to the Info Centre menu: ► **Briefly** press the End call key .
- Go offline: ► Press and **hold** the End call key  ... The handset returns to idle status
- Enter text: ► ... Use  to select a line ... The cursor flashes in the text field ► ... Use  to enter text ► ... Close the entries using the right display key ... The data is sent
- Make a selection: ► ... Use  to select a line in which a selection is possible ► ... Use  to make a selection ► ... Complete the selection using the left display key ... The data is sent
- Set option: ► ... use  to select a line that offers the options ... The line is marked ... then
Activate/deactivate option: ►  or press the left display key (e.g. OK)
Complete entry: ► Press the left display key ... The data is sent

Hyperlink to further information

A hyperlink to further information is displayed by the ► icon.

If a page with hyperlinks is opened, the first hyperlink is highlighted.

- Use  to select another hyperlink if required ► **Link** ... The corresponding page is opened

Hyperlink to a phone number

A hyperlink to a phone number offers the **Call** function on the right display key.

Select the phone number (Click-2-Call): ► **Call** ... The number is dialled directly depending on the provider or it appears first in the display ► Confirm using **Yes** if necessary

Copy an entry to the local directory: ► ... Use  to select hyperlink ► 

Accessing info services using quick dial

Every info service available on Gigaset.net is assigned a quick dial. Examples:

Info service	Quick dial	Info service	Quick dial
News	1#92	Horoscope	7#92
Weather	2#92	Biorhythm	8#92
My eBay	3#92	My Friends	9#92
Encyclopaedia	4#92	My Applications (personal info services/applications that you have defined)	99#92
Translator	5#92		
Unit Converter	6#92		

The list of info services is one example. Each info service is provider-dependent.

The numbers 11 to 98 are reserved for info services/applications that are provided via Gigaset.net.

Open up a service: ► ... Use  to enter the quick dial for a service ► Press the Talk key  ... The Info Centre page with this service/this application is loaded and displayed



Open up an info service using digit key: ► Enter the quick dial for an info service in the directory ► Assign directory entry to a digit key on the handset ► Press and **hold** the digit key

Displaying information from the Internet as a screensaver



The **Info Services** screensaver is activated on the handset.

The info services display is activated via the Web configurator.

Info services appear on the display approximately ten seconds after the handset returns to idle status. Depending on the information feed selected, a display key appears on the right of the screensaver.

To open further information: ► Press the right display key.

To revert to idle status: ► Press and **hold** the End call key 

Selecting information for the screensaver

The default setting for the screensaver **Info Services** is the weather forecast.

Changing default setting:

- On the PC using your account on the Gigaset.net server (→ p. 78)
 - On the handset using the Info Centre
-  ► ... Use  to select  **Info Centre** ►  **Screensaver** ► OK ► ... Use  to select the info service ► OK ► Enter additional settings for the selected info service if required ► **Save**

Expanding the functionality of the telephone

Multiple handsets

Up to six handsets can be registered to the base station.

Each registered device is assigned an internal number (1-6) and an internal name (INT 1 – INT 6). The number or name assigned can be changed.

If all internal numbers have already been assigned at the base station: ► de-register a handset that is no longer needed



When a Gigaset handset is registered, the base station transfers entries for the following online directories to the local directory on the handset to enable the online directories to be used on the new handset as well.

- The currently set online directory with a provider-specific name (e.g. **KT Phone-book**).
- The currently set classified directory with a provider-specific name (e.g. **KT Y.Pages**).
- The Gigaset.net directory with the name **Gigaset.net**.

Successful registration is acknowledged with the message **Data Transfer x entries received**.

Registering the handset

A handset can be registered on up to four base stations.



Registration must be initiated on the base station **and** on the handset. Both must be carried out **within 60 secs**.

On the base station

- Press and **hold** the Registration/Paging key on the base station (approx. 3 secs) ... the paging key flashes when the base station is in registration mode.

On the handset

-  ► ... use  to select  **Settings** ► **OK** ►  **Registration** ► **OK** ► **Register Handset** ► **OK** ► ... use  to select the base station (if the handset has already been registered to four base stations) ► **OK** ... an available base station is sought ► ... Enter system PIN (default setting: **0000**) ► **OK**

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If not, repeat the procedure.



Maximum possible number of handsets registered to the base station (all internal numbers assigned): The handset with the highest internal number is replaced by the new one. If this is not possible, because a conversation is being held on this handset, for example, the message **No available internal number** is given. ▶ De-register a handset that is no longer required and repeat the registration procedure.

All base station connections are assigned to a handset as receive connections as soon as registration is complete. The fixed line connection is assigned as the send connection. Change assignment → p. 101.

Registering a handset to multiple base stations

Your handset can be registered to up to four base stations. The active base station is the base station to which the handset was last registered. The other base stations remain saved in the list of available base stations.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Registration** ▶ OK ▶ **Select Base** ▶ OK ... possible options:

Change active base station:

- ▶ ... use or **Best Base** to select base station ▶ **Select** (= selected)

Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

Change name of a base station:

- ▶ ... use to select a base station ▶ **Select** (= selected) ▶ **Name** ▶ change name ▶ **Save**

De-registering the handset

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Registration** ▶ OK ▶ **De-register Handset** ▶ OK ... the handset being used is selected ▶ ... use to select a different handset if desired ▶ OK ... enter system PIN if desired ▶ OK ▶ ... Confirm de-registration with **Yes**

If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).

Locating a handset (Paging) / Finding the telephone's IP address


- ▶ **Briefly** press the Registration/paging key on the base station.

All handsets will ring at the same time ("paging"), even if ringtones are switched off. **Exception:** handsets on which the baby monitor is activated.

The current (local) **IP address** for the base station appears in the handset displays.

Ending the search

- ▶ **Briefly** press the registration/paging key on the base station
- or ▶ Press the End call key  on the handset
- or ▶ Press the display key **Silence** on the handset
- or ▶ No action. After approx. 30 seconds, the paging call will end automatically.

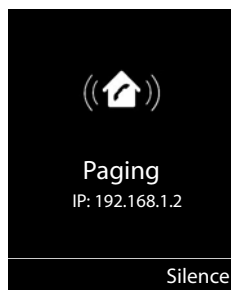

Changing the handset name and internal number

When registering multiple handsets, they will automatically be assigned the names "INT 1", "INT 2" etc. Each handset will automatically be assigned the lowest unassigned internal number. The internal number is shown as the name of the handset on the display e.g. INT 2. You can change the names and the numbers of handsets. The name must not exceed 10 characters in length.

- ▶  ▶ ... the list of handsets is opened, the current handset is highlighted with < ▶ ... use  to select a handset ... possible options:
 - Edit name: ▶ **Options** ▶  **Rename** ▶ **OK** ▶ ... use  to delete the current name ▶ ... use  to enter a new name ▶ **OK**
 - Edit number: ▶ **Options** ▶  **Edit Handset No.** ▶ **OK** ▶ ... use  to select a number ▶ **Save**

Repeater

A repeater increases the receiving range between the Gigaset handset and the base station. The registration procedure for a repeater depends on the version of the repeater being used.

- Repeater without encryption, e.g. Gigaset repeater prior to Version 2.0
- Repeater with encryption, e.g. Gigaset repeater later than Version 2.0

Further information about the Gigaset repeater can be found in the repeater user guide and at → www.gigaset.com.

Repeater without encryption

Activate Maximum Range/deactivate No Radiation

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **ECO DECT** ▶ OK ▶ **Maximum Range** ▶ Change ( = on) ▶  **No Radiation** ▶ Change ( = off)

Deactivate encryption

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Encryption** ▶ Change ( = deactivated)

Registering a repeater

- ▶ Connect the repeater to the mains power supply ▶ Press and **hold** the Registration/paging key on the telephone base station (min. 3 secs) ... the repeater is automatically registered
- It is possible to register more than one Gigaset repeater.

Repeater with encryption



Encryption is activated (default setting).

Registering a repeater

- ▶ Connect the repeater to the mains power supply ▶ Press and **hold** the Registration/paging key on the telephone base station (min. 3 secs) ... the repeater is automatically registered
- Up to 2 repeaters may be registered.

The ECO DECT function **Maximum Range** is activated and the **No Radiation** function is deactivated. The settings cannot be changed whilst the repeater is registered.

As soon as a repeater is registered, it will appear in the repeater list under

 **Settings** ▶ **System** ▶ **Repeater**

De-registering a repeater

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Repeater** ▶ OK ▶ ... use  to select repeater ▶ **De-reg.** ▶ **Yes**

Operation with a PABX

To find out which settings are required for a PABX, please refer to the PABX user guide. You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Setting Tone or Pulse dialling mode

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Dialling Mode** ▶ OK ▶ ... use  to select **Tone or Pulse** ▶ **Select** ( = selected)

Setting the flash time

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Recall** ▶ OK ▶ ... possible flash times are listed ▶ ... use  to select flash time ▶ **Select** ( = selected)

Saving an access code (outside line code)

Setting the access code (e.g. "0") for dialling using the fixed line network and using VoIP.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Access Code** ▶ OK ▶ ... then

Fixed line network: ▶ **Access external line with:** ... use  to enter or change access code, max. 3 digits

VoIP: ▶ **Access external line with:** ... use  to enter or change access code, max. 4 digits.

Rule: ▶ **For** ▶ ... use  to select when the access code should be dialled

Call Lists: The access code will only prefix numbers from a list (list of answered calls, list of missed calls, SMS list, answer machine list).

All calls: The access code prefixes all numbers dialled.

Off: The access code is deactivated and does not prefix any telephone number.

Save: ▶ **Save**



The access code never prefixes any emergency numbers or SMS service centre numbers.

The access code never prefixes any SMS service centre numbers.

Setting pauses

►  ►  ►  0  5  ► ... then

Pause after line seizure:	1 sec	►  6 ►  ► OK
	3 secs	►  6 ► 2 ► OK
	7 secs	►  6 ► 3 ► OK
Pause after Recall key:	800 ms	►  2 ►  ► OK
	1600 ms	►  2 ► 2 ► OK
	3200 ms	►  2 ► 3 ► OK
Dialling pause (pause after access code):	1 sec	►   ►  ► OK
	2 secs	►   ► 2 ► OK
	3 secs	►   ► 3 ► OK
	6 secs	►   ► 4 ► OK

To enter dialling pause when dialling:

- Press and **hold** the hash key  ... a **P** appears in the display.

Switching temporarily to tone dialling (Tone)

After dialling the external number or after establishing the connection:

- Press the Star key  **briefly**.

After the call ends, pulse dialling is automatically reactivated.

Adjusting the telephone settings

Handset

Changing the language

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Language** ▶ OK ▶ ... use  to select language ▶ **Select** ( = selected)

If the handset has been set to an incomprehensible language:

- ▶  ▶ Press the keys **9** **5** **slowly** one after the other ▶ ... use  to select the correct language ▶ press the right display key

Display and keypad

Screensaver

A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Screensaver** ▶ **Edit** ( = on) ... then
- Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**
- Select screensaver: ▶  **Selection** ▶ ... use  to select a screensaver (**Digital Clock / Analog Clock / Info Services / <Pictures> / Slideshow**)
- View screensaver: ▶ **View**
- Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.



All pictures from the **Screensaver** folder of the **Resource Directory** are available to select.

End screensaver

- ▶ **Briefly** press the End call key  ... the idle display appears

Notes on displaying Info Services



Info Services are activated via the web configurator.
The telephone is connected to the Internet.



The type of info service available to your phone is set on the Internet on the Gigaset.net server. Changing the setting → p. 78.

If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in the idle display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Info Ticker** ▶ Edit (= on)

The text appears as soon as the telephone changes to idle status. If a message is shown in the idle display, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Large Font** ▶ Change (= on)

Colour scheme

You can choose from a range of colour combinations for the display.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Colour Schemes** ▶ OK ▶ ... use to select the desired colour scheme ▶ Select = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Display Backlight** ▶ OK ... then

Backlight in the charging cradle:

- ▶ **In Charger:** ... use to select **On** or **Off**

Backlight when not in the charging cradle:

- ▶ **Out of Charger** ▶ ... use to select **On** or **Off**

Save selection:

- ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is activated.

Keypad illumination

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Key Illumination** ▶ **Change** ( = on)

Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Auto Keypadlock** ▶ **Change** ( = on)

Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** ( = on)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

Changing the earpiece and speaker volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.

-  Changes are only saved permanently in **Profile Personal**.

During a conversation

- ▶ Press the volume keys  /  on the right side of the handset

or

- ▶  **Handset Volume** ▶ ... use  to select volume ▶ **Save** ... the setting is saved

-  The setting is automatically saved after around 3 seconds without saving.

In idle status

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ... then

For the earpiece: ▶ **Earpiece:** ... use  to set the volume

For the speaker: ▶  **Speaker** ▶ ... use  to set the volume

Save settings: ▶ **Save**

Earpiece and handsfree profile

Select **earpiece** and **handsfree** profiles to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable for you and the other party.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Acoustic Profiles** ▶ **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ ... use to select profile ▶ **Select** = selected)

Earpiece Profiles: High or Low (default settings)

Handsfree Profiles: Profile 1 (default settings) ... Profile 4


Ringtones

Ringtone volume

Volume can be set at 5 levels or crescendo (increasing volume).

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ ... use to select **For internal calls and alarms** or **External Calls** ▶ ... use to set volume ▶ **Save**

Example

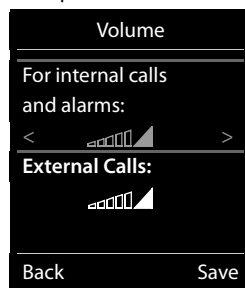

When the telephone rings, you can permanently change the ringtone volume using the volume keys (louder) or (quieter).

Changes are only saved in **Profile Personal**.

Ringtone melody

Set a variety of ringtones for internal and external calls for every available send/receive connection of the telephone (**Landline, IP1, Gigaset.net**) or set the same ringtone for **All calls**.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Ringtones (Handset)** ▶ OK ▶ **Melodies** ▶ OK ▶ ... use to select the connection ▶ ... use to select the ringtone/melody in each case ▶ **Save**

Activating/deactivating the ringtone

Deactivating the ringtone permanently

- ▶ Use the key to set **Profile Silent** ... the icon appears in the status bar

Activating the ringtone permanently

- ▶ Use the  key to set **Profile Loud** or **Profile Personal**

Deactivating the ringtone for the current call

- ▶ Press **Silence** or the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ ... Press the Profile key  to select **Profile Silent** ▶ press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ ... Press the Profile key  to change profile

Activating/deactivating advisory tones

The handset notifies acoustically about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then

Tone when keys are pressed:

- ▶ **Key Tones:** ... use  to select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶ ... use  to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶ ... use  to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:** ... use  to select **On** or **Off**

Save settings:

- ▶ **Save**



There is no battery warning when the baby monitor is activated.

Fast access to numbers and functions

Number keys: It is possible to assign a **number from the directory** to the keys  and  to .

Display keys: The left and right display keys have a **function** preset by default, but the keys can be re-assigned.

You can then dial the number or start the function by simply pressing a key.

Assigning a number to digit keys (quick dial)



A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ ... use  to select an entry ▶ **OK** ▶ ... use  to select a number if necessary ▶ **OK** ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:

Change the assignment: ▶ ... use  to select an entry ▶ **OK** ▶ ... select a number if required ▶ **OK**

Delete the assignment: ▶ **Clear Key**

Assigning display keys / Changing assignments

- Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ► ... use  to select function ► **OK** ... possible options:

Quick Dial	Assign a number from the directory to the display key
Timer	Set, enable and disable the timer
Alarm Clock	Set and activate/deactivate the alarm clock
Calendar	Open calendar
One Touch Call	Set up one touch call
Bluetooth	Open Bluetooth menu
Redial	Show redial list
eMail	Open the e-mail submenu for receiving and reading e-mail notifications
More Functions...	► OK ► ... use  to select other function
Send Connections	Set send connection for the next call
Line Selection	Open the connection selection menu
Call Lists	Show call lists
Withhold Number	Withhold phone number identification for next call
Call Divert	Activate/deactivate Call Divert
eMail	Open the e-mail submenu for receiving and reading e-mail notifications
Info Centre	Start the Info Centre and open the list of available Info Services – go online.
Net Directories	Display the list of network directories

Starting a function

With the telephone in idle status: ► **Briefly** press ... the assigned function is executed

Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).

If new firmware is available for the handset a message to this effect will be displayed.

- Start the firmware update with **Yes**.

Start the firmware update manually:

-  ► ... use  to select  **Settings** ► **OK** ►  **System** ► **OK** ►  **Handset Update** ► **OK** ► **Update** ► **OK** ► **OK** ... if there is new firmware, the update will start



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Resetting the handset to the default settings

Reset any individual settings and changes that you have made.

►  ► ... use  to select  **Settings** ► OK ►  **System** ► OK ►  **Handset**
Reset ► OK ► Yes ... the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists
- SMS lists

System

The following settings can be set via the menu on a registered handset or using the web configurator of the telephone/router.

Setting the date and time manually

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time must be set.



The address of a time server in the Internet is stored in the phone. The date and time are taken from this time server provided the phone is connected to the Internet and synchronisation with the time server is activated. Manual settings are overwritten in this case.

If the date and time have not yet been set on the handset, the display key **Time** appears.

- ▶ Press the display key **Time**

or

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Date/Time** ▶ OK ... then
 - Set the date: ▶ **Date:** ... use to enter the day, month and year in 8-digit format
 - Set the time: ▶ **Time** ▶ ... use to enter hours and minutes in 4-digit format
 - Save settings: ▶ **Save**

Own area code

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards).

Some of these numbers are already preset.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Area Codes** ▶ OK ▶ Check (pre-)set area code

Example

Area Codes	
International code:	00 - 49
Local area code:	0 - [8]]
< C Save	

Edit the number:

- ▶ ... use to select/switch entry field ▶ ... use to change entry position ▶ ... delete digit if desired ▶ ... use to enter digit ▶ **Save**

Activating/deactivating music on hold

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Audio Settings** ▶ OK ▶ **Music on hold** ▶ **Change** (= on)

Setting the IP address of the base station in LAN



Your base station is connected to a router or a PC.

An IP address is required in order for the LAN to "recognise" your phone. The IP address can be assigned to the phone automatically (by the router) or manually.

- If the address is assigned **dynamically** the router's DHCP server automatically assigns an IP address to the phone. The IP address can be changed according to router settings.
- In the case of manual/**static** assignment, you assign a static IP address to the phone. This may be necessary depending on your network configuration (e.g. if your phone is connected directly to a PC).



To assign the IP address dynamically, the DHCP server on the router must be activated. Please also read the user guide for your router.

- ▶ ▶ ... use to select **Settings** ▶ **OK** ▶ **System** ▶ **OK** ▶ **Local Network** ▶ **OK** ▶ ... use to enter the system PIN (if the system PIN differs from 0000) ▶ **OK** ... then
- Address type: ▶ **IP Address Type:** ... use to select **Static** or **Dynamic**
 With **IP Address Type Dynamic**: The following fields show the current settings that the phone obtained from the router. These settings cannot be changed.
 With **IP Address Type Static**: ▶ Enter settings for the following fields.
- IP address: ▶ **IP Address** ▶ ... use to enter the IP address (overwrite current setting)
- Subnet mask: ▶ **Subnet Mask** ▶ ... use to enter the subnet mask (overwrite current setting)
- Standard-Gateway: ▶ **Default Gateway** ▶ ... use to enter the IP address of the standard gateway
 The local network is connected to the Internet via the standard gateway. This is generally your router.
- DNS-Server: ▶ **DNS Server** ▶ ... use to enter the IP address of the preferred DNS server
 The DNS server (Domain Name System) converts the symbolic name of a server (DNS name) into the public IP address for the server when the connection is made. You can specify your router's IP address here. The router forwards phone address requests to its DNS server.
- Save: ▶ **Save**



It is also possible to make the settings via the Web configurator.

Display current IP address: ▶ Press the Paging key on the base station

Updating the phone firmware

The firmware update is downloaded directly from the Internet by default. The relevant web page is preconfigured in your phone.



The phone is connected to the Internet (i.e. connected to a router).

The phone is in idle status i.e. no calls are being made, there is no internal connection between registered handsets and the menu is not open on any handset.

Starting the firmware update manually

► ► ... use to select **Settings** ► **OK** ► **System** ► **Base Update** ► **OK** ► ... use to enter the system PIN ► **OK** ... the telephone establishes an Internet connection to the configuration server ► **Yes**



The firmware update can take up to 6 minutes, depending on the quality of your DSL connection.

When updating from the Internet, checks are made to ensure that no newer version of the firmware exists. If this is not the case, the operation is terminated and a message is issued to that effect.

Updating firmware automatically

The phone will check daily whether a newer firmware version is available on the Internet configuration server. If so, the message **New firmware available** is displayed on the handset.

► Confirm prompt with **Yes** ... the firmware is downloaded to the telephone



If the telephone is not connected to the Internet at the time when the check for new firmware is due to be performed (e.g. because the router is deactivated), the check is performed as soon as the phone is reconnected to the Internet.

You can deactivate the automatic version check via the Web configurator.

Checking the base station's MAC address

Depending on the network configuration, you may require the MAC address of the base station, e.g. in order to enter it in the router's access control list.

Check the MAC address on the handset: ► ► * # 0 5 # 2 0 ... the MAC address is displayed

Return to idle status: ► **Back**

Changing the system PIN

Secure the telephone's system settings with a system PIN. You have to enter the system PIN when you register or de-register a handset, change local network settings, perform a firmware update or reset the phone to default settings.

Change the telephone's 4-digit system PIN (default setting: 0000):

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **System PIN** ▶ OK ▶ ... use  to enter the current PIN (if other than 0000) ▶ OK ▶ ... use  to enter new system PIN ▶ **Save**

Resetting system PIN

Resetting the base station to the original PIN 0000:

- ▶ Unplug the network cable from the base station ▶ Press and hold the Registration/Paging key on the base station ▶ At the same time reconnect the network cable to the base station ▶ Press and hold the key for at least 5 secs ... the base station is reset and the system PIN is set to 0000



All handsets are de-registered and must be re-registered. All settings are returned to default settings.

Restarting the base station

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Base Restart** ▶ OK ... the base station is restarted, the connection to the handset is briefly interrupted

Restoring the phone to default settings

When the settings are reset

- the date and time are retained,
- handsets are still registered,
- the system PIN is retained,
- **Maximum Range** is activated and **No Radiation** is deactivated.
- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Base Reset** ▶ OK ▶ ... use  to enter system PIN ▶ OK ▶ **Yes** ... the base station is restarted. The restart takes around 10 seconds.

Internet telephony (VoIP)

Setting up an IP account

To make calls over the Internet, you need an IP account from a provider. You can configure up to six IP accounts.

To set up an IP account, you will need access data from your provider.

Enter access data on the phone:

- Using the VoIP wizard for initial installation (→ see **Set-up**)

or

- Using the web configurator on a PC/tablet:
 - ▶ **Quick Start Wizard** (→ see **Web configurator**)

Setting up further IP accounts

- Using the web configurator on a PC/tablet:

Page ▶ **Settings** ▶ **Telephony** ▶ **Connections** (→ see **Web configurator**)

or

- Using the VoIP wizard on the handset:

▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **VoIP Wizard**

The process is the same as for the installation wizard (→ see **Set-up**).

Gigaset.net

Gigaset.net is a VoIP service offered by Gigaset Communications GmbH. All users of a Gigaset VoIP device can make calls over the Internet **directly** and **free of charge** to other Gigaset.net users – without setting up an account with a phone provider (provider) and without making any further settings. Connections to/from other networks are not possible.



Gigaset.net is a voluntary service provided by Gigaset Communications GmbH without guarantee or liability for the availability of the network and service provision.

If you do not use your Gigaset.net connection for six months, it is automatically disabled.

Re-activating your connection:

- ▶ Start search in Gigaset.net directory
- ▶ Make a call via Gigaset.net (dial a number with #9 at the end)
- ▶ Activate the connection via the web configurator.

Register with Gigaset.net

Every Gigaset IP device is assigned a Gigaset.net phone number by default. When you open the Gigaset.net directory for the first time, you are asked to enter a name for your connection.

- ▶  **Press and hold** ... the list of online directories is opened ▶  **Gigaset.net** ▶ **OK** ... the Gigaset.net directory is opened ▶ ... use  to enter **nickname** (max. 25 characters) ▶ **Save** ... the name is assigned to the phone number and recorded in the Gigaset.net directory



You can also enter/change the Gigaset.net name via the web configurator:

- ▶ **Settings** ▶ **Telephony** ▶ **Connections**

Own Details

Your Gigaset.net
nickname:
Gi

abc

< C
Save

Data protection notice

The nickname is saved on a central Gigaset server. The nickname appears in the Gigaset.net directory and other users of the Gigaset.net service can call you using this name.

By entering your information, you agree for this data to be saved.

If you do not wish this to happen, you can cancel the operation at this point:

- Cancel without leaving the Gigaset.net directory: ▶ Do not enter a name ▶ **Save** ... You can use the directory to search for other Gigaset.net participants and call them, but no nickname will be recorded.
- Leave Gigaset.net directory without search: ▶ Press and **hold** the End call key 

Further information about the data stored in relation to the Gigaset.net service can be found at

→ www.gigaset.net/privacy-policy

Assign send and receive connections

If multiple connections are configured for the phone (fixed line network, Gigaset.net and IP), you must specify

- Which connection is used for an outgoing call (send connection)
- To which internal participant a call is to be diverted from a certain connection (receive connection)

Internal participants are the registered handsets and the three base answer machines.

Each connection (number) of your phone can be both a send as well as a receive connection. Multiple internal participants can be assigned to each connection as send and/or receive connections. It may only be assigned to one answer machine as a receive connection.

Default assignment

- All configured connections are assigned to the handsets and answer machine 1 as receive connections on delivery.
- The fixed line network connection is assigned to the handsets as a send connection. If you have **no** fixed line network connection, no send connection is assigned.

Change default assignment

- Using the installation wizard for initial installation (→ see **Set-up**)
- or
- Using the web configurator on a PC: Page ► **Settings** ► **Telephony** ► **Number Assignment** (→ see **Web configurator**)

or

- Via the handset menu
 -  ► ... Use  to select  **Settings** ► **OK** ►  **Telephony** ► **OK** ►  **Send Connections/Rec. Connections** ► **OK**

The process is the same as for the installation wizard (→ see **Set-up**).

Internet call settings in web configurator



Register with web configurator (→ see **Web configurator**)

- When making fixed line network calls, you must always dial the area code, even for local calls (depending on your provider):
 - **Settings** ► **Management** ► **Local Settings** ► activate **Use Area Code Numbers for Calls via VoIP** option
- Establish a connection automatically via the fixed line network if a call attempt via an IP connection fails:
 - **Settings** ► **Telephony** ► **Number Assignment** ► ... in **Alternative Connection** activate the **Automatic fallback to fixed line** option if a fixed line connection is available
- Define a dialling plan:
 - **Settings** ► **Telephony** ► **Dialling Plans**

If a dialling plan has been defined for the dialled number, then the connection specified in the dialling plan will be used instead of the send connection. If the number is blocked by a dialling plan, **Not possible** is displayed.
- Further settings: DTMF signalling, call transfer, assignment of the Recall key, communication ports
 - **Settings** ► **Telephony** ► **Advanced VoIP Settings**

Web configurator

You can use the web configurator to make settings for the phone on a PC or tablet.

- You can make settings that can also be made on your phone handset, e.g. set date and time or perform a firmware update
- You can make additional settings that are not possible via the handset, meet particular prerequisites for connecting the phone to a company network or adjust the voice quality on IP connections
- You can save data on the base where this is required for access to certain Internet services, e.g. public online directories, the incoming e-mail server for your e-mail account and the synchronisation of the date/time with a time server
- You can connect the phone to the Gigaset cloud in order to receive call notifications on your smartphone
- You can save data for your phone (base and handsets) in files on the PC and, in the event of an error, you can download them onto your phone again.

See the online help for the web configurator for a detailed description of the web pages and the required entries (→ p. 104).

Start web configurator

Connecting to the web configurator



Your phone is connected to the local network.

In most cases, this connection is established automatically as soon as the device is connected to the network. If this is not the case, connect to the local network via the handset (→ p. 97).



You may not be able to change some settings in the web configurator, depending on the provider.

The web configurator cannot be accessed by more than one user at any one time.

You can still make phone calls while working on the web configurator.

Establishing a connection via the phone's IP address

- ▶ Finding out the current IP address of the phone: ▶ **Briefly** press the registration/paging key on the base ... the IP address is displayed on the handset



The IP address can sometimes change, depending on the settings of the DHCP server in your network.

- ▶ Start your web browser on the PC/tablet ▶ Enter IP-address of phone in the browser address field (example: 192.168.2.2) ... A connection is established to the phone's web configurator

Establishing a connection via the phone's domain name



PC/tablet and phone are connected to the Internet.

- ▶ Start your web browser on the PC/tablet ▶ In the web browser address field, enter www.gigaset-config.com

If you can contact multiple Gigaset devices via your Internet connection: ▶ Select device



The connection between the PC and the web configurator is a local connection (LAN connection). The Internet is only accessed to establish the connection.

Registering/de-registering with the web configurator

Registering, setting the interface language

Once you have successfully established the connection, the website **Welcome** is displayed in the web browser.

- ▶ Select the desired language ▶ Enter PIN (default setting: 0000) ▶ **OK**



For your security, you should change the default PIN (→ p. 115).

De-registering

- ▶ Click on **Log off** at the top right in the menu bar.



Always end the web configurator with the command **Log off**. If the web browser is closed without de-registering first, access to the web configurator may be blocked for a few minutes.

Help

- ▶ Click on the question mark  on the top right of a web page ... Online help opens in a separate window

Searching in help: ▶ Click inside the Help window ▶ Press **Ctrl** and **F**. A search dialog opens.



The help pages are downloaded directly from the configuration server.

You may need to change your browser settings to display the help pages correctly. Internet Explorer and Firefox require the following settings, for example:

- ▶ You must allow blocked active content for help (right-click the information bar at the top of the browser window).
- ▶ Allow the pages to use their own fonts or set Arial as the standard font (general option).

Carry out initial configuration

A wizard is available for initial configuration when no VoIP connection (IP account) has been set up. The wizard will help you configure an IP account.

The phone offers a range of provider profiles that make it easier to configure an IP account. Each profile contains the most important configuration settings for the provider concerned.

▶ **Home ▶ Quick Start Wizard ▶ Next**

▶ **Country** Select from list ▶ **Next**

If the phone is connected to a PABX that provides IP accounts, you can select the PABX here.

▶ **Provider** Select from list ▶ **Next**

If the provider does not appear in the list: ▶ Select Other provider ... You must now enter the provider data yourself

→ For help, see page **Settings ▶ Telephony ▶ Connections**

▶ Enter the provider's access data ▶ **Next** ... The phone is registered with the provider

▶ If the provider has a network mailbox: ▶ Enter the phone number ... The mailbox will be activated once you close the wizard

▶ If all outgoing calls from the registered handset are to be made via this VoIP connection as standard: ▶ Mark **Yes**

Default setting: **No** ... Outgoing calls are made via fixed line network connection

Detailed assignments for multiple handsets, multiple VoIP connections and incoming calls

→ **Number Assignment** (→ p. 108)

▶ **Finish** ... The connection is recorded in the phone connection list (→ p. 107)



Change settings for this connection and/or set up further VoIP connections:

▶ **Settings ▶ Telephony ▶ Connections** (→ p. 107).

Network

IP Configuration

Connect phone to local network (LAN)/router.

► Settings ► Network ► IP Configuration

In most cases, special settings are not required to connect the phone to the router/a local network. Your phone is preconfigured for dynamic assignment of the IP address by default (DHCP). In order for your router to "recognise" the phone, dynamic IP address assignment must also be activated on the router, i.e. the router's DHCP server must be activated.

If the DHCP server cannot or should not be activated, you must assign a fixed/static IP address to the phone. A fixed IP address is useful, for example, if port forwarding or a DMZ is set up on the router for the phone.

You can use the web configurator to make further settings that are required if you connect your phone to a large (company-wide or organisation-wide) network, or if you want to manage the phone remotely.

- **VLAN identifier / VLAN priority** Store for access to a tagged VLAN.
- Allow PCs outside your LAN to connect to the web configurator.



Authorising access from other networks increases the risk of unauthorised access. It is therefore recommended that you disable remote access if you no longer require it.

The web configurator can only be accessed from other networks if your router passes on the service requests from "outside" to port 80 (the default port) of the phone. Make sure you read the user guide for your router.

Security

The phone supports the establishment of secure data connections on the Internet with the TLS security protocol (Transport Layer Security). With TLS, the client (the phone) uses certificates to identify the server. These certificates must be stored on the base.

► Settings ► Network ► Security

On this page, you will find the **Server certificates / CA certificates** lists with the certificates saved on the base.

The **Invalid certificates** list contains the certificates received from servers that have not passed the certificate check when establishing a connection, and certificates from the **Server certificates / CA certificates** lists that have become invalid (e. g. because they have expired).

You can remove certificates and download new certificates to the base, and you can also accept or reject invalid certificates.

If the connection to a data server on the Internet is not made because the phone does not accept the certificate received from the server (e.g. when downloading your e-mail messages from the POP3 server), you will be prompted to open the **Security** settings web page.

The **Invalid certificates** list contains the certificate used to make the connection. Click on **[Details]** to display information about who issued the certificate (certification authority) and for whom, as well as its validity period.

If you accept the certificate, depending on its type, it is transferred to one of the **Server certificates / CA certificates** lists (even if it has already expired). If a server responds again with this certificate, this connection is accepted immediately.

If you decline the certificate, it is transferred to the **Server certificates** list with the label **(rejected)**. If a server responds again with this certificate, this connection is rejected immediately.

Telephony

Connections to base

Manage connections to base:

► **Settings** ► **Telephony** ► **Connections**

This web page displays a list with all possible connections and their status (e.g. **Connected**, **Registered**, **Not configured**):

Fixed line

You do not have to configure the fixed line network connection. You can make or receive calls on the fixed line network connection once your phone is connected to the fixed line network connection.

Making changes via **[Edit]**:

- Name of the fixed line network connection. The name entered is shown, e.g. for calls to your fixed line network connection, in the displays of the registered handsets and in the call list.
- Setting **Dialling Mode** and **Flash time**. The flash time is set by default for operating the phone on the main connection. You must change it if necessary if you connect the phone to a PABX (see the user guide for your PABX).

Gigaset.net

The Gigaset.net connection is preconfigured in your phone. Your phone is preassigned a Gigaset.net number. You can activate and deactivate the Gigaset.net connection. If the connection is deactivated, the phone will not register with the Gigaset.net service. You are then not available via the Gigaset.net connection.

Making changes via **[Edit]**:

- Name of Gigaset.net connection
- Deactivate STUN. The Gigaset.net connection uses a STUN server as standard. In the sent data packets, Gigaset.net replaces the private IP address of your phone with its public IP- address. If you operate your phone behind a router with symmetric NAT, STUN cannot be used. You must deactivate it. Otherwise, when making Gigaset.net calls you will not be able to hear the caller.

IP1 - IP6

You can assign up to six VoIP connections (VoIP phone numbers) to your phone. You need an IP account from a provider for each VoIP phone number. Save the access data in your phone.

Set up/change VoIP connections via **[Edit]**

Send and receive connections

For the number assignment, open the web page:

► **Settings** ► **Telephony** ► **Number Assignment**

Assign send and receive connections to the registered handsets and answer machine on the base :

- The fixed line network connection is assigned to each handset automatically when they are registered.
- You can assign each handset either a fixed phone number or a line selection. With line selection, you choose the connection to be used for each call.
- The Gigaset.net number is assigned as the fixed send connection for each registered handset. Numbers that end in #9 are automatically dialed via Gigaset.net.
- Once the new entry is made, each connection is assigned to integrated answer machine 1 as a connection.
- Answer machines 2 and 3 are only activated if you have assigned each one at least one connection. If an answer machine is not activated, it does not appear on the answer machine list and you cannot activate it.
- Each connection can only be assigned to one answer machine.



You can avoid having to assign connections to certain phone numbers by using a dialling plan for these phone numbers.

Activating a fixed line network connection as a fallback send connection

You can activate the fixed line network connection on your phone as a fallback connection. If a call attempt fails via VoIP (IP connection or Gigaset.net), an attempt is automatically made (without prompting) to establish a connection via the fixed line network.

► ... In **Alternative Connection**, activate the **Automatic fallback to fixed line** option

A fallback is used in the following situations:

- The IP connections are busy (you can make calls on a maximum of two IP lines at the same time)
- The SIP server for the VoIP connection cannot be accessed
- The VoIP connection has not yet been configured or has not been configured correctly (e.g. incorrect password)
- The phone does not have a connection to the Internet, e.g. because your router is deactivated or not connected to the Internet.

SMS messages that are to be sent via a VoIP connection are **not** sent via the fallback connection.



Deactivate option if you are not connected to a fixed line network (default setting).

Otherwise, you will be switched automatically to the fixed line network if no IP connection can be established temporarily, e. g. if the phone starts faster than the router. The phone would therefore not be functional.

Voice quality for VoIP connections

Functions to improve the voice quality on VoIP connections (IP or Gigaset.net) are available on the web page:

► Settings ► Telephony ► Audio

The voice quality for VoIP connections is mainly determined by the **voice codec** used for transferring the data and the available **bandwidth** of your DSL connection.

In the case of the voice codec, the voice data is digitised (coded/decoded) and compressed. A "better" codec (better voice quality) means more data needs to be transferred, i.e. it requires a DSL connection with a larger bandwidth. You can change the voice quality by selecting (bearing in mind the bandwidth of your DSL connection) the voice codecs your phone is to use, and specifying the order in which the codecs are to be suggested when a VoIP connection is established. Default settings for the codecs used are stored in your phone; one setting optimised for low bandwidths and one for high bandwidths. The following voice codecs are supported:

G.722

Excellent voice quality. The **broadband** voice codec **G.722** works at the same bit rate as G.711 (64 kbit/s per speech connection) but with a higher sampling rate. You can use this to play back higher frequencies. The speech tone is therefore clearer and better than with the other codecs (High Definition Sound Performance).

G.711 a law / G.711 μ law

Excellent voice quality (comparable with ISDN). The required bandwidth is 64 kbit/s per voice connection.

G.726

Good voice quality (inferior to that with G.711 but better than with G.729). Your phone supports G.726 with a transmission rate of 32 kbit/s per voice connection.

G.729

Average voice quality. The necessary bandwidth is less than or equal to 8 kbit/s per voice connection.

To save additional bandwidth and transmission capacity on VoIP connections that use the **G.729** codec you can suppress the transmission of voice packets in pauses ("silence suppression"). Instead of the background noises in your environment, your caller then hears a synthetic noise generated in the receiver (option: **Enable Annex B for codec G.729**).

Network mailbox

If the provider (fixed line network and/or Internet telephony) has a network mailbox, this is displayed on the following web page:

► Settings ► Telephony ► Network mailboxes

You can enter the phone numbers for the network mailbox here and switch the network mailbox for the configured VoIP connections on and off.

User-defined dialling plans

You can define your own dialling plans on the web page:

► **Settings** ► **Telephony** ► **Dialling Plans**

You can specify the following dialling plans:

- Specify a connection for phone numbers (**Fixed line**, **Gigaset.net** or **IP1 - IP6**), which should always be used to dial these phone numbers and therefore also for billing.
If you enter just a few digits (e.g. local area, national or mobile network code) any call to a number beginning with these digits will be made via the selected connection.
- If you block phone numbers, your phone will not establish a connection to these numbers (e.g. 0190 or 0900 numbers).

These dialling plans apply to all registered handsets. The send connection settings are inactive when you dial numbers that are governed by a dialling plan.

You can activate and deactivate the dialling plans as required.



Dialling plans, with the exception of a block, are not effective if you have assigned the line selection to a display key on the handset and you explicitly choose a send connection from the list of available connections before dialling.

Emergency numbers

Dialling plans for emergency numbers (e.g. the **local** police emergency number) are preset for certain countries. The fixed line network is set as the **Connection**.

You should only change these dialling plans if the phone is not connected to the fixed line network. If you choose an IP connection, please make sure the provider supports calls to emergency numbers. If the VoIP connection is deleted from the configuration, the emergency call can no longer be made.

Access codes – dialling plans when connecting to a PABX

If your phone is connected to a PABX, you may have to enter an access code for external calls (outside line code, e.g. "0").

Save one access code each for fixed line network and VoIP calls and specify when the phone numbers should be automatically prefixed with the digits.

These settings are available in the **Access Code** area on the web page:

► **Settings** ► **Telephony** ► **Dialling Plans**

Local area codes – dialling plans for local calls using VoIP

If you use VoIP to make a call to the fixed line network, you may also have to dial the area code for local calls (depending on the provider). You can avoid having to enter your own local area code by entering the full area code (with the international code) for the location where you are using the phone in the phone configuration and activating the **Predial area code for local calls via VoIP** option.

These settings are available in the **Area Codes** area on the web page:

► **Settings** ► **Management** ► **Local Settings**

Special settings for Internet telephony

Activating Call Forwarding for VoIP connections

The settings for Call Forwarding are on the web page:

► **Settings ► Telephony ► Call Divert**

You can divert calls to your VoIP connections and to your Gigaset.net number.

You can divert calls to your VoIP connections to any external number (VoIP, fixed line network or mobile number). Call Forwarding takes place via VoIP.

You can divert calls to your Gigaset.net number within the Gigaset.net, i.e. to another Gigaset.net number.

Setting DTMF signalling for VoIP

You can change the settings for DTMF signalling in the **DTMF over VoIP Connections** area on the web page:

► **Settings ► Telephony ► Advanced VoIP Settings**

DTMF signalling is required, for example, for querying and controlling certain network mailboxes via digit codes or for remote operation of a local answer machine.

To send DTMF signals via VoIP you must first define how key codes should be converted into and sent as DTMF signals: as audible information via the speech channel or as an "SIP Info" message. Ask your provider which type of DTMF transmission it supports.

You can configure your phone in such a way that it attempts with each call to set the most suitable DTMF signalling for the current codec (**Automatic**).

Or you can explicitly define the type of DTMF signalling:

- **Audio** or **RFC 2833**, if DTMF signals are to be transmitted acoustically (in voice packets).
- **SIP info**, if DTMF signals are to be transmitted as code.



DTMF signals cannot be transmitted in the audio path (**Audio**) on broadband connections (the G.722 codec is used).

Configuring call transfer via VoIP

You can change the settings for call transfer in the **Call Transfer** area on the web page:

► **Settings ► Telephony ► Advanced VoIP Settings**

You can transfer an external call to a VoIP connection to a second external participant by pressing the Recall key (depending on the provider).

Add/change settings for call transfer:

- Activate call transfer by ending the call. The two external participants will be connected when you press the End call key .
- Activate direct call transfer. The call can be transferred before the second participant has answered.
- Press the Recall key to deactivate call transfer if you want to assign a different feature to the Recall key (→ "Defining Recall key functions for VoIP (hook flash)").

Defining Recall key functions for VoIP (hook flash)

You can specify the function for the Recall key on the web page:

► **Settings ► Telephony ► Advanced VoIP Settings**

Your provider may support special performance features. To make use of these features, your phone needs to send a specific signal (data packet) to the SIP server. You can assign this "signal" as the Recall function to the Recall key on the handsets. **Prerequisite:** The Recall key is not used for call transfer (default setting).

If you press this key during a VoIP call, the signal is sent. This requires that DTMF signalling via SIP info messages is activated on the phone (see above).

Defining local communication ports for VoIP

The settings for the communication ports are on the web page:

► **Settings ► Telephony ► Advanced VoIP Settings**

The following communication ports are used for Internet telephony:

- **SIP port:** The communication port via which the phone receives (SIP) signalling data. The default standard port number is set to 5060 for SIP signalling.
- **RTP port:** Two consecutive RTP ports (consecutive port numbers) are required for each VoIP connection. Voice data is received via one port and control data via the other. The default standard port number is set to 5004 - 5020.

This setting only has to be changed if the port numbers are already being used by other participants in the LAN. You can then specify other fixed port numbers or port number ranges for the SIP and RTP port.

If several VoIP phones are operated on the same router with NAT, it makes sense to use randomly selected ports. The phones must then use different ports so that the router's NAT is only able to forward incoming calls and voice data to one (the intended) phone. Use the web configurator to specify a port number range for the SIP and RTP port that the ports are chosen from.

Messaging

E-mail notifications

Save the address of the incoming e-mail server and personal access data for your mailbox in the base. Specify the time interval at which the phone should check whether the incoming e-mail server has received new e-mail messages. Specify whether authentication on the incoming e-mail server should be carried out via a secure connection.

► **Settings ► Messaging ► Email**

Message Notification

The LED in the message key on the base connected with the handset indicates when a new message, e. g. a new e-mail, has been received. You can specify for each individual handset what kind of new message should be displayed.

► **Settings ► Messaging ► Message Notification**

Call notifications on mobile devices

To receive notifications about newly received calls/messages on your phone on a mobile device (e. g. your smartphone), you need to register the phone with Gigaset elements.



You have a mobile device with an iOS or Android operating system.

The **Gigaset elements** app has been installed on the mobile device.

The registration must be carried out on both the phone and the mobile device:

On the phone's web configurator:

- ▶ **Settings** ▶ **Messaging** ▶ **Call Notification** ▶ Click on **Register now** ... An activation code is displayed

On mobile device:

- ▶ Open **Gigaset elements** ▶ **System overview**  ▶ **Add +** ▶ Tap on **GO-Box** ▶ Enter activation code from the web configurator ▶ **Next** ... The mobile device is now ready to display incoming calls/messages on your phone

On the phone's web configurator:

If registration was successful, **Registered at Gigaset elements** will be displayed. The available phone connections are listed.

- ▶ Mark the connections for which you want to receive notifications on your mobile device
 - ▶ **Set**



If answer machines have been assigned to the connections (→ p. 108), you will also receive notifications for newly received messages on these answer machines to your smartphone.

Further information about Gigaset GO can be found at → www.gigaset.com/go

Info Services

Customise personal services on the Gigaset.net server for the Info Center and screensaver **Info Services**. Activate info services for handsets.

- ▶ **Settings** ▶ **Info Services**

On this page, you will be able to access the Gigaset.net server and view your personal access data.

Directories

Online Directory

Select provider for online directory. You can set the **Display of caller's name** option, depending on the provider selected. This means that the name of the caller is read from the online directory for incoming calls and shown on the display (where the handset's local directory does not contain an entry for the caller's number).

- ▶ **Settings** ▶ **Directories** ▶ **Online Directory**

Directory Transfer

Deleting handset directories and downloading to/from the PC.

► Settings ► Directory Transfer

- Save directories on a PC. Entries are stored in vCard format in a vcf file on the PC. You can download these files onto every registered handset. You can also copy directory entries to your PC address book.
- Copy contact details from your PC address book to handset directories. Export contacts in vcf files (vCards) and transfer to handset directories.
- Delete a directory on the handset. If you have edited the directory file (vcf file) on the PC and would like to load this modified directory to the handset, you can delete the current directory on the handset before the transfer.

Tip: Back up the current directory on your PC before deleting it. You can then reload it if the modified directory is affected by formatting errors and some, or all, of it cannot be loaded onto the handset.



If you wish to copy a directory (vcf file) with multiple entries stored on the PC to the Microsoft Outlook™ address book, please note the following:

Microsoft Outlook™ only ever transfers the first (directory) entry from the vcf file to its address book.

Transfer rules

The directory entries from a vcf file that are loaded onto the handset will be added to the directory. If an entry already exists for a name, it will either be supplemented or a new entry for the name will be created. The process will not overwrite or delete any phone numbers.



Depending on your device type, up to three entries with the same name are created in the directory for each vCard – one entry per entered number.

Contents of directory file (vcf-file)

The following data (if available) is written into the vcf file for entry into the directory or transferred from a vcf file into the handset directory:

- Name
- First name
- Number
- Number (office)
- Number (mobile)
- E-mail address
- Anniversary date (YYYY-MM-DD) and the time of the reminder call (HH:MM) separated by a "T" (example: 2008-12-24T11:00).

Other information that a vCard may contain is not entered into the handset directory.

Example of an entry in vCard format:

```
BEGIN:VCARD  
VERSION:2.1  
N:Smith;Anna  
TEL;HOME:1234567890  
TEL;WORK:0299123456  
TEL;CELL:0175987654321  
E-MAIL:anna@musterfrau.de  
BDAY:2008-12-24T11:00  
END:VCARD
```

Management

Date and Time

Managing the synchronisation of the base with a time server. By default, your phone is configured so that the date/time is transferred from a time server on the Internet. Changes to time server settings via web page:

► **Settings ► Management ► Date and Time**

Changing the base settings, registering handsets

- Switch the base to registration mode to register more handsets to the base. This setting corresponds to pressing and holding the registration/paging key on the front of the base.
- Activate or deactivate Eco Mode or Eco Mode+.
- Change the system PIN for your phone.
- Activate and deactivate the LED for the registration/paging key on the front of the base.
- Activate or deactivate the display of VoIP status messages on your handset.

The base settings are on the web page

► **Settings ► Management ► Miscellaneous**

Rebooting the device or restoring the factory settings

If your phone suddenly does not work as expected, you can reboot it. This frequently resolves problems.

You can also reset all of the settings on the phone to the default settings e.g. if you want to give your phone to a third participant. This deletes all settings, lists and directory entries!

► **Settings ► Management ► Reboot & Reset**

Saving and restoring system settings

Once you have configured your base and after each configuration change, you can save the current base settings in a file on the PC (suffix .cfg). You can reload the file onto the phone again when necessary.

► Settings ► Management ► Save and Restore

The contents of the .cfg file include:

- The settings for the local network (IP configuration)
- The data for the (VoIP) connections established
- The assignment of send and receive connections
- Your own local area code and access code
- The network mailbox number
- The Internet services settings
- The ECO DECT settings

Firmware Update - Base

Regular updates to the base firmware and the provider profile for VoIP connections (general provider data) are made available on an Internet configuration server. You can download these updates onto your base as required. The URL for this server is stored in the base.

► Settings ► Management ► Firmware Update - Base

Starting firmware update

If a **new** version of the firmware is available, this is downloaded to the base and the base is restarted. A firmware update lasts approx. six minutes. The duration also depends on the bandwidth of your DSL connection.

Enabling/disabling the automatic version check

When the version check is enabled, the phone checks on a daily basis whether the Gigaset configuration server has a new version of the phone firmware.

If the phone is not connected to the Internet at the time when the check is to be performed (e.g. because the router is disabled), the check is performed as soon as the phone is reconnected to the Internet.

If a new version is available, a message to this effect is shown on the display of the registered handsets. You can start the update of the firmware on one of the handsets.

Downgrading firmware

- You can reload the firmware version that was loaded before the last update on the base.

or

- You can reload the firmware version that was loaded by default onto the phone.

The selected firmware is reloaded onto the phone and the current firmware is overwritten.

Status of the phone

► Status ► Device

Information about the phone is displayed:

- IP and MAC address for the base
- Version of the firmware currently loaded, format: aa.bbb (aabbxxyyyzz)

aa Phone product variant

bbb Firmware version

xx Sub-version

yyzz only significant for the service

Example: 42.020 (420200000000 / V42.00) means that version 20 of the firmware is currently loaded on your base.

- A list of the registered handsets

► Status ► Connections

The page displays the currently available connections and their status.

Menu overview

Quick Start Wizard			→ p. 105
Settings	Network	IP Configuration	→ p. 106
		Security	→ p. 106
	Telephony	Connections	→ p. 107
		Audio	→ p. 109
		Number Assignment	→ p. 108
		Call Divert	→ p. 111
		Dialling Plans	→ p. 110
		Network mailboxes	→ p. 109
		Advanced VoIP Settings	→ p. 111
	Messaging	Email	→ p. 113
		Message Notification	→ p. 112
		Call Notification	→ p. 113
	Info Services		→ p. 113
	Directories	Online Directory	→ p. 113
		Directory Transfer	→ p. 114
	Management	Date and Time	→ p. 115
		Local Settings	→ p. 110
		Miscellaneous	→ p. 115
		Reboot & Reset	→ p. 115
		Save and Restore	→ p. 116
		Firmware Update - Base	→ p. 116
Status	Device		→ p. 117
	Connections		→ p. 117

Appendix

Questions and answers

Possible solutions are available online at ➔ www.gigaset.com/service

Troubleshooting

The phone is not ready for use after initial set-up.

- The one-off initialisation phase may take up to 10 minutes.

The display is blank.

- The handset is not activated. ➔ Press and hold 
- The battery is empty. ➔ Charge the battery or replace it (➔ p. 9)

"No Base" flashes on the display.

- The handset is outside the range of the base station. ➔ Move the handset closer to the base station
- The base is not activated. ➔ Check the base station power adapter
- The base station's range is reduced because **Maximum Range** is deactivated.
 - ➔ Activate **Maximum Range** (➔ p. 60) or reduce the distance between the handset and base station

"Please register handset" flashes on the display.

- The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than 6 DECT registrations). ➔ Re-register the handset (➔ p. 82)

Your settings are not accepted.

- The wrong profile has been set. ➔ Set **Profile Personal** ... then make changes to the device settings (➔ p. 68).

The handset does not ring.

- The ringtone is deactivated. ➔ Activate ringtone (➔ p. 69)
- Call forwarding is set. ➔ Deactivate call forwarding (➔ p. 33)
- The phone does not ring if the caller has withheld his number.
 - ➔ Activate the ringtone for anonymous calls (➔ p. 62).
- The phone does not ring during a specific period or for certain numbers.
 - ➔ Check the time control for external calls (➔ p. 61)

No ringtone/dial tone from the fixed line network.

- Incorrect phone cable. ➔ Please always use the phone cable supplied or ensure that the pin connections are correct when purchasing from a retailer (➔ p. 128).

The connection always terminates after approx. 30 seconds.

- A repeater (earlier than Version 2.0) has been activated or deactivated (➔ p. 85). ➔ Switch the handset off and back on again (➔ p. 19).

Error tone sounds after system PIN prompt.

- You have entered the wrong system PIN. ➔ Repeat the process, reset the system PIN to 0000 if required (➔ p. 99)

Forgotten system PIN.

- ➔ Reset the system PIN to 000 (➔ p. 99)

The other party cannot hear you.

- The handset is "muted". ➔ Activate the microphone again (➔ p. 27)

Some of the network services do not work as specified.

- Features are not enabled. ➔ Contact the network provider for details.

The caller's number is not displayed.

- **Calling Line Identification (CLI)** is not enabled for the caller. ► The **caller** should ask the network provider to enable Calling Line Identification (CLI).
- **Calling Line Identification Presentation (CLIP)** is not supported or enabled by the network provider. ► Ask the network provider to enable Caller Line Identification Presentation (CLIP).
- The telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.
 - Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
 - Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, telephone number identification, caller ID, ... in the system user guide or ask the system manufacturer.

You hear an error tone when keying in (descending tone sequence).

- Action has failed/invalid input. ► Repeat the process. Read the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

- Your PABX is set to pulse dialling. ► Set your PABX to tone dialling.

No time is specified for a message in the call list.

- Date/time are not set. ► Set the date/time.

Registration or connection problems with a Bluetooth headset.

- Reset the Bluetooth headset (see headset user guide).
- Delete the registration data on the handset by de-registering the device (⇒ p. 71).
- Repeat the registration procedure (⇒ p. 71).

Internet telephony not possible.

- No IP account has been set up: ► Register the phone with your provider for Internet telephony (⇒ p. 15)
- Display shows **Provider error registration failed**: Registration of the phone with your provider for Internet telephony has failed. ► Repeat the process (⇒ p. 15). Check registration status in web configurator if necessary (⇒ p. 107).
- Display shows **No IP connection**: No IP account configured or the IP connections have been deactivated

No connection to the Internet.

- Display shows **No LANconnection**: ► Check cable connection between router and base.
- Display shows **IP address not available**: ► Check IP configuration.

The phone is preconfigured for dynamic assignment of the IP address. In order for your router to "recognise" the phone, dynamic IP address assignment must also be activated on the router, i.e. the router's DHCP server must be activated.

If the router's DHCP server cannot be/is not activated: ► Assign a fixed IP address to the phone.
- Display shows **Check IP settings**: The telephone is not connected to the Internet.
 - Check the cable connections between the base station and router and between the router and the Internet.
 - Check the telephone's connection with the LAN, check whether the phone can be contacted at its IP address. Check the IP address on the handset.
- Display shows **Internet connection not available**:

Connection to the Internet has been interrupted: ► Please try again later

Otherwise: ► Check the plug connection between the router and modem or DSL connection and the router settings.

Firmware update or VoIP profile download is not carried out.

- Display shows **Currently not possible**: The VoIP connections may be busy or a download/update is already being carried out. ► Try again later.
- Display shows **Server not accessible**:
 - The download server is not available. ► Try again later.
 - The router is not available or has no connection to the Internet. ► Check the connection between the phone and the router and restart the router if necessary.
 - The pre-set server address has been changed. ► Change the address in the web configurator or reset the base station.
- Display shows **Transmissionerror XXX**: An error occurred while transferring the file. An HTTP error code is displayed in place of XXX. ► Repeat the process. If the error occurs again, consult the service department.

You cannot establish a connection to the phone with your PC's web browser.

- IP address is incorrect: ► Request the handset's IP address ► Try to re-establish the connection.
- Check connections between the PC and the base station. ► Open the command box on the PC ► send a ping command to the base station (ping <base station's local IP address>).
- You have tried to reach the phone via a secure http (https://...). ► Retry with http://...

GO functions**The smartphone display does not show the complete phone number and area code.**

- Country code and local area code are not set correctly. ► Configuring settings:
With handset: **Settings – Telephony – Area Codes**
With web configurator: **Settings – Management – Local Settings**

No events displayed on the smartphone (e. g. missed call).

- You have not selected a connection that can be used to transfer events to your smartphone.
 - Once you have registered the phone with Gigaset elements on the web configurator page **Settings – Messaging – Call Notification** select connection(s)

The name of the participant is not displayed in the events list on your smartphone.

- The contact is not available on your smartphone. ► Enter contact.
- The participant number is stored differently in the contact list, e. g. without the area code
 - Configure settings for country code and local area code:
With handset: **Settings – Telephony – Area Codes**
With web configurator: **Settings – Management – Local Settings**

Calling back a missed call from your smartphone.

- Tap the event entry **Missed call** ► tap on the **Call back** icon.

Answer machine (→ p. 47)**No time is specified for a message in the call list.**

- Date/time are not set. ► Set the date/time (→ p. 96)

The answer machine reports "Invalid PIN" during remote operation.

- You have entered the wrong system PIN. ► Repeat input of system PIN
- The system PIN is still set to 0000. ► Set the system PIN to something other than 0000 (→ p. 99).

The answer machine is not recording any messages/has switched to answer only mode.

- The memory is full. ► Delete old messages ► Listen to new messages and then delete

Operation behind routers with network address translation (NAT)

In general, no special telephone or router configuration is required when operating a Gigaset telephone with NAT router. The configuration settings described in this section are only necessary if you encounter one of the following problems.

- No incoming calls are possible via VoIP. Calls to your VoIP phone numbers are not put through.
- Outgoing calls via VoIP are not connected.
- A connection is established with the other participant, but you cannot hear them and/or they cannot hear you.

Changing the port numbers for SIP and RTP on your VoIP phone



The SIP and RTP port numbers may not be used by any other application or by any other host in the LAN and should be completely different to the SIP and port numbers that are usually used (and pre-set in the phone).

- ▶ Connect to the telephone's web configurator using the PC web browser ▶ Register ▶ Open website **Settings – Telephony – Advanced VoIP Settings** ▶ Change SIP and RTP port numbers ▶ Save settings
- Example: Select port numbers that are similar to the standard settings:

SIP port	49060	instead of	5060
RTP port	49004 to 49010	instead of	5004 to 5010

- ▶ Check new settings: ▶ Open website **Settings – Telephony – Connections** ... the **Status** of the VoIP settings is displayed
- ▶ Test to see whether the original problem persists. If the problem does persist, carry out the next step.

Setting port forwarding on the router

Details for enabling a port on the router (example):

	Protocol	Public port	Local port	Local host (IP)
for SIP	UDP	49060	49060	192.168.2.10
for RTP	UDP	49004 – 49010	49004 – 49010	192.168.2.10

Protocol	The protocol used must be UDP .
Public port	Port number/port number range on the WAN interface
Local port	The SIP and RTP port numbers set on the phone
Local host (IP)	Local IP address of your phone in the LAN

To enable the router to perform this port forwarding, the DHCP settings of the router must ensure that the phone is always assigned the same local IP address.

Service (Customer Care) - United Kingdom and Ireland

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... online:

via our contact form on the customer service page

... by telephone:

United Kingdom

Service Hotline: 020 36953111

(local call cost charge)

Ireland

Service Hotline: 0818 200 033

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Gigaset Communications.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: micro-wave, sauna etc.)
- Devices fitted with accessories not authorised by Gigaset Communications

Manufacturer's advice

- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by: Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Manufacturer's advice

Authorisation

This device is intended for analogue phone lines in the UK and on the Irish network.

Voice over IP telephony is possible via the LAN interface (IEEE 802.3).

Depending on your telecommunication network interface, an additional router/switch could be necessary.

For further information please contact your Internet provider.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset S850A GO is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Environment

Our environmental statement

We at Gigaset Communications GmbH are aware of our social responsibility. That is why we actively take steps to create a better world. In all areas of our business – from product planning and production to sales and waste of disposal – following our environmental conscience in everything we do is of utmost importance to us.

Learn more about our earth-friendly products and processes online at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	300/180 *
Talktime (hours)	12
Operating time with 1.5 hours of calls per day (hours)	120/90 *
Charging time in charging cradle (hours)	7

* No Radiation on/off, without display backlight in idle status
(Setting the display backlight ➔ p. 89)

Power consumption of the handset in the charging cradle

When charging:	approx. 1.5 W
To maintain the charge status:	approx. 0.5 W

Base station power consumption

In standby mode	approx. 1.3 W
During a call	approx. 1.4 W


General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 μ s
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)
Codec	G.711, G.726, G.729AB with VAD/CNG, G.722
Quality of Service	TOS, DiffServ
Protocols	SIP, RTP, DHCP, NAT Traversal (STUN), HTTP

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Pin connections on the telephone jack

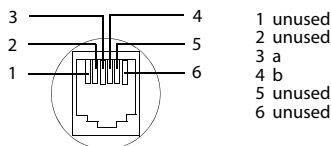

Character charts

Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0		¹⁾ .	,	?	!		²⁾ 0			

1) Space

2) Line break

Display icons

The following icons are displayed depending on the settings and the operating status of your telephone.

Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off)
	1% - 100% white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator flashes : Answer machine is recording a message or is being operated by another internal participant

Icon	Meaning
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated
	Keypad lock activated
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging
	(current charge status): 0% - 100%

Display key icons

Icon	Meaning
	Last number redial
	Delete text

Icon	Meaning
	Open the directory
	Copy number to the directory
	Divert a call to answer machine

Display icons

Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Answer machine is recording

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...

Menu overview



Not all functions described in the user guide are available in all countries or from all network providers.

Open the main menu: ► when handset is in idle status press



Messaging

SMS	New SMS	→ p. 63
	Incoming	→ p. 64
	Draft	→ p. 64
	Settings	→ p. 67
eMail	Service Centres	→ p. 66
	Notification	→ p. 75



Call Lists

All calls	→ p. 38
Outgoing calls	
Accepted calls	
Missed calls	



Answer Machine

Play Messages	Net AM: IP1 - IP6	→ p. 48
	Answer Mach. 1 to 3	→ p. 48
Activation	Answer Mach. 1 to 3	→ p. 47
Announcements	Record Announcem.	→ p. 51
	Play Announcement	→ p. 51
	Delete Announcem.	→ p. 51
	Rec. Advisory Msg.	→ p. 51
	Del. Advisory Msg.	→ p. 51
Recordings		→ p. 52
Call Screening		→ p. 49
Network Mailbox	Net AM: Fixed Line	→ p. 53
	Net AM: IP1 - IP6	
Set Key 1		→ p. 54



Select Services

Next Call Anonym.
Call Divert
Call Waiting
All Calls Anonym.
Transfer (ECT)
Ringback Off

Internal
Fixed Line
IP1

- p. 32
- p. 34
- p. 34
- p. 34
- p. 32
- p. 32
- p. 30
- p. 33



Additional Features

Info Centre
Calendar
Alarm Clock
Baby Monitor
One Touch Call
Missed Alarms

User-specific selection of info services

- p. 78
- p. 56
- p. 58
- p. 59
- p. 23
- p. 57



Settings

Date/Time
Audio Settings
Display
Language

Handset Volume
Earpiece Profiles
Advisory Tones
Ringtones (Handset)
Music on hold
Screensaver
Info Ticker
Colour Schemes
Backlight

Volume
Melodies
Time Control
Anon. Calls Silent

- p. 96
- p. 91
- p. 91
- p. 92
- p. 91
- p. 91
- p. 61
- p. 62
- p. 96
- p. 88
- p. 89
- p. 89
- p. 88
- p. 88

Registration	Register Handset	→ p. 82
	De-register Handset	→ p. 83
	Select Base	→ p. 83
Telephony	Auto Answer	→ p. 90
	Area Codes	→ p. 96
	IP Wizard	
	Send Connections	
	Rec. Connections	
	Dialling Mode	→ p. 86
	Recall	→ p. 86
	Access Code	→ p. 86
System	Handset Reset	→ p. 93
	Base Reset	→ p. 99
	Base Restart	→ p. 99
	Encryption	→ p. 85
	Repeater	→ p. 85
	Local Network	→ p. 97
	Update Firmware	→ p. 98
	System PIN	→ p. 99
ECO DECT	Maximum Range	→ p. 60
	No Radiation	

only when at least one
repeater has been registered

Index

-
- A**
- Access code (PABX) 86, 110
 - Activating/deactivating message LED 37
 - Activation code for elements 113
 - Advisory tones 92, 93
 - Alarm 58
 - Alarm clock 58
 - switch on/off 58
 - Alert tone (beep) 55
 - Anniversary, see Appointment
 - Announcement (answer machine) 51
 - deleting 51
 - Announcement mode (answer machine) 47
 - Anonymous calling 31
 - Answer machine 47
 - activating/deactivating 47
 - announcement mode 47
 - calling back a caller 38
 - deleting messages 48
 - playing back messages 48, 54
 - receive connection 18
 - recording a personal announcement/
 advisory message 51
 - remote operation 49
 - set fast access 54
 - skipping ahead 48
 - skipping back 48
 - Appointment 57
 - display missed 57
 - missed 57
 - notification 56
 - setting 56
 - Assigning key 1 54
 - Assigning number key 93
 - Authorisation 124
 - Automatic 90
 - answer 90
 - redial 24
 - Automatic versions check 116
-
- B**
- Baby monitor 59
 - activation 59
 - deactivation 60
 - Base 14
 - connect to fixed line network 14
 - connect to mains power supply 13
 - connect to the Internet 14
 - Base settings 115
 - change in web configurator 115
 - Base station 83
 - changing 83
 - changing the name 83
 - connecting to the PABX 86
 - overview 6
 - restarting 99
 - restoring to default settings 99
 - setting 96
 - system PIN 99
 - updating firmware 98
 - Battery 129
 - charging status 11
 - inserting 55
 - Beep (alert tone) 83
 - Best base station 62
 - Black list 71
 - Bluetooth 71
 - activate 71
 - changing the device name 42
 - copy directory (vCard) 72
 - de-registering devices 72
 - list of known devices 71
 - registering devices 72
 - Broadband voice codec 109
 - Broken display 9
-
- C**
- Calendar 56
 - Call 25
 - accepting 32
 - anonymous 23
 - external 25
 - internal 26
 - transferring internally (connecting) 49
 - two-way recording 33
 - Call back a caller 62
 - Call block 33
 - Call divert 34
 - Gigaset.net 111
 - Call Forwarding 111
 - for VoIP connections 111
 - Gigaset.net 111
 - Call list 38
 - copying a number to the directory 38
 - delete 38
 - delete an entry 24
 - dialling 38
 - entry 38
 - opening 38
 - Call lists 38
 - Call notifications 113
 - to mobile device 62
 - Call protection 49
 - Call screening during recording 35
 - Call swapping 32
 - two external calls 25, 26
 - Call waiting, external 26
 - accepting/rejecting 31, 32
 - Call waiting, internal 62
 - accept 31
 - Call, anonymous 62
 - protection from 31
 - Caller display 31

- Calling
 - entering IP address 29
 - external 23
 - from online directory 44
 - from Yellow Pages 44
 - Gigaset.net 46
 - internal 25
- Calling Line Identification 31
 - none 31
 - switching off temporarily 32
 - switching on/off 32
- Cancel the alarm (baby monitor) 60
- Care 125
- Care of the device 125
- Certificate error 75
- Changing
 - display language 88
 - earpiece volume 90
 - speaker volume 90
 - system PIN 99
- Changing the device name (Bluetooth) 72
- Changing the name of the handset 84
- Changing the PIN 99
- Changing the system PIN 99
- Character charts 128
- Charge status of the batteries 129
- Charging
 - the battery 12
- Charging the batteries 12
- Charging time of handset 126
- CLI, Calling Line Identification 31
- CLIP, CLI Presentation 31
- CLIP-picture
 - view in Resource Directory 70
- CLIP-picture, in directory 39
- CLIR, CLI Restriction 31
- Colour scheme 89
- Communication ports, local 102, 112
- Configuration wizard 105
- Connecting the charging cradle (handset) 11
- Connecting the headset 13
- Connecting the PC to the web configurator 103
- Connecting the USB data cable 13
- Connecting to the web configurator 103
- Connections
 - fixed line network 107
 - Gigaset.net 107
 - IP 107
 - manage 107
 - status 117
- Connections with the base station 83
- Consultation call
 - ending 35
 - external 35
 - internal 26
- Contact with liquid 125
- Contents of the package 10
- Control key 6, 20
- Correcting incorrect entries 22
- Customer Care 123
- Customising info services 78
- D**
 - Deactivating wireless module 60
- Deleting
 - messages 48
- De-registering (handset) 83
- De-registering (web configurator) 104
- De-registering devices (Bluetooth) 72
- Dialling
 - from the call list 24
 - from the directory 23
 - from the redial list 23
 - IP address 29
 - using quick dial 93
- Dialling mode 86
- Dialling pause 87
- Dialling plans
 - emergency numbers 110
- Directory 39
 - copy vCard (Bluetooth) 42
 - copying numbers 41
 - dialling numbers 23
 - entry 39
 - Gigaset.net 45
 - memory 40
 - opening 39, 43
 - order of entries 40
 - saving an entry 39
 - searching 40
 - searching for an entry 43
 - selecting an entry 40
 - sending entry/list to handset 41
 - sending to handset 41
 - transferring to/from PC 114
- Directory file
 - contents (vCard format) 114
- Directory transfer 114
- Display
 - activating/deactivating new message 37
 - anonymous 31
 - backlight 89
 - broken 9
 - changing display language 88
 - colour scheme 89
 - directory memory 40
 - external 31
 - IP address on handset 6
 - large font 89
 - missed appointment/anniversary 57
 - network mailbox message 36
 - screensaver 88
 - setting 88
 - unknown 31
- Display icons 129
- Display keys 6, 20
 - assigning 93
 - icons 129
- Disposal 125
- DNS server
 - preferred 97
- Draft message list (SMS) 64

Index

DTMF (tone dialling)	86, 87
DTMF signalling for VoIP	111

E

Earpiece profile	91
Earpiece volume	27
ECO DECT	60
ECT	30
E-mail	
delete	77
messages whilst making a connection	76
notification	75
settings	112
viewing the sender's address	77
E-mail address	64
E-mail list	75
Emergency number, dialling plans	110
Emergency numbers	
not possible	9
Enable Annex B for codec G.729	109
End call key	6, 23
Entering special characters	22
Entering text	22
Entering the number	
of the network mailbox	53
Entering umlauts	22
Environment	125
Exclusion of liability	124
External call	
forwarding to answer machine	49

F

Factory settings	115
Fast access	23, 54
Firmware	
automatic update	98, 116
downgrade	116
starting update	98
update	116
Firmware update	94
Firmware updates	73
Fixed line network connection	14, 107
Flash time	86

G

G.711 a law	109
G.711 μ law	109
G.722	109
G.722 broadband voice codec	109
G.726	109
G.729	109
Getting started	10
Gigaset elements	14, 113
activation code	113
register with	113
Gigaset GO	2, 14
features	2
settings in web configurator	113

Gigaset QuickSync	42, 73
Gigaset.net	100, 107
call divert	34
Call Forwarding	111
calling a participant	46
changing/deleting own name	46
directory	45
entering name	46
register	45, 101
searching for participants	45
Gigaset.net website	78
Gigaset-config	104
GO	14
settings in web configurator	113
GPL	141
Guarantee Certificate	123

H

Handset	
advisory tones	93
automatic keypad lock	90
changing the name	84
changing the number	84
changing the settings	88
changing to a different base station	83
changing to best reception	83
colour scheme	89
connecting the charging cradle	11
de-registering the handset	83
display backlight	89
display language	88
earpiece volume	90
handset volume	27
handsfree volume	27
idle status	21
keypad illumination	90
muting	27
overview	6
paging	84
registering	82
registering to another base station	83
restoring to default setting	93
searching for	84
setting up	11
speaker volume	90
switch on/off	19
update	94
use as a baby monitor	59
Handsfree key	27
Handsfree mode	27
Handsfree volume	27
Hash key	6
Headset (Bluetooth)	71
Headset connection	6
Headset socket	13
Hearing aids	9
Help	119

-
- I**
- Icons
 - alarm clock 58
 - displaying new messages 36
 - indications 130
 - new SMS 64
 - on display keys 129
 - status bar 129
 - Idle status
 - returning to 21
 - Illumination, keypad 90
 - Incoming message list (e-mail) 75
 - Indications, icons 130
 - Info Centre
 - operating 80
 - starting 79
 - Info services
 - activating/deactivating 78
 - selecting 79
 - using quick dial 81
 - Installation wizard 15
 - Internal
 - consultation 26
 - making calls 25
 - International code 96
 - Internet
 - security 106
 - Internet connection 14
 - Internet security 106
 - Internet telephony 28
 - IP address
 - assigning 97
 - dialling 29
 - display 84
 - obtaining automatically 97
 - IP configuration 97
 - IP connections 107
 - IP telephony provider 16
-
- K**
- Key 1 (fast access) 6
 - Key, assigning 93
 - Keypad illumination 90
 - Keypad lock, automatic 90
 - Keys
 - control key 6, 20
 - display keys 6, 20
 - End call key 23
 - end call key 6
 - fast access 6
 - handsfree 27
 - hash key 6
 - menu key 20
 - message key 6
 - on/off key 6
 - profile key 6, 55
 - recall key 6
 - star key 6
 - talk key 6
 - volume 20
 - volume keys 6
-
- L**
- Language
 - display 12, 88
 - Large font 89
 - LGPL 141
 - Linked, see SMS
 - Liquid 125
 - List
 - e-mail notifications 75
 - known devices (Bluetooth) 72
 - SMS draft message list 64
 - SMS message list 64
 - Local area code 96
 - for VoIP calls 110
 - Locking/unlocking the keypad 19
 - Lower/upper case 22
-
- M**
- MAC address
 - checking 98
 - Making calls
 - accepting a call 25
 - external 23
 - internal 25
 - over the Internet 28
 - Maximum Range 60
 - Medical equipment 9
 - Melody
 - ringtone for internal/external calls 91
 - Memory in the directory 40
 - Memory, resource directory 70
 - Menu
 - web configurator overview 118
 - Menu key 20
 - Message
 - delete (e-mail) 77
 - marking as "new" 48
 - Message display 112
 - Message key 6
 - opening list 64
 - Message list (SMS) 64
 - Message lists 36
 - Messages
 - copying number to the directory 48
 - Microphone 6
 - switch on/off 27
 - Missed anniversaries/appointments 57
 - Music on hold 96
 - Mute the first ringtone 68
 - Muting the handset 27

-
- N**
- Network mailbox 53
 - activate/deactivate 53
 - defining for fast access 54
 - enter phone number 109
 - entering number 53
 - Network MB, see Network mailbox
 - Network provider 31
 - Network services, provider-specific 31
 - Notification
 - about calls and messages 113
 - incoming e-mail 75
 - Number
 - copying to the directory 41
 - do not transfer 32
 - saving in the directory 39
 - withhold 32
 - Numbers
 - entering 22
-
- O**
- On/off key 6
 - One touch call 24
 - Online directory 43
 - Gigaset.net 45
 - select 113
 - Open Source Software 141
 - Opening the incoming e-mail list 75
 - Operating time of handset 126
 - Outside line code (PABX) 86
 - Overview
 - base station 6
 - handset 6
-
- P**
- PABX
 - connecting to the base station 86
 - pauses 87
 - saving access code 86
 - setting dialling mode 86
 - setting flash time 86
 - SMS 68
 - switching to tone dialling 87
 - Paging 84
 - Pause
 - after access code 87
 - after line seizure 87
 - after Recall key 87
 - PC address book entries to the directory
 - copying 114
 - PC Interface 73
 - PD (pulse dialling) 86
 - Phone
 - setting 96
 - Phone directory, see Directory 23
 - Phonebook, see Directory 23
 - Picking up
 - a call from answer machine 48
-
- Picture
 - as CLIP image 70
 - as screensaver 70
 - delete 70
 - formats 70
 - rename 70
 - Pin connections 127
 - Playing back
 - announcement (answer machine) 51
 - Playing back messages 48
 - Power adapter 9, 13
 - Power consumption 126
 - Preferred DNS server 97
 - Profile key 6, 55
 - Profiles 55
 - Protection from calls
 - anonymous 62
 - black list 62
 - switch off ringtone when in charging
 - cradle 62
 - time control 61
 - Pulse dialling 86
-
- Q**
- Questions and answers 119
 - Quick dial 23, 54
 - QuickSync 42, 73
-
- R**
- Radiation
 - reducing 60
 - Radiation-free 60
 - Rebooting 115
 - Recall key 6, 87
 - function for VoIP 112
 - Receive connection 17, 101
 - assigning 108
 - standard assignment 101
 - Reception booster, see Repeater
 - Recording
 - two-way recording 49
 - Recording quality (answer machine) 52
 - Recording time 52
 - Redial list 23, 38
 - Register
 - with Gigaset elements 113
 - Registering
 - with web configurator 104
 - Registering (handset) 82
 - Registering device (Bluetooth) 71
 - Remotely operating the answer machine 49
 - Repeater 85
 - Resetting the handset to the default
 - settings 95
 - Resource Directory 70, 93
 - memory 70
 - view CLIP picture 70
 - Restarting the base station 99
 - RFC 2833 (DTMF signalling) 111

Ring delay	90	SMS message list (SMS)	64
Ring delay (answer machine)	52	SMS notification	66
Ringback		SMS service centre	
cancelling	33	changing the number	67
initiate	33	setting	67
Ringtone		Snooze mode (alarm)	58
changing	91	Sound	
melody for internal/external calls	91	delete	70
muting	68	formats	70
muting first	68	playback	70
switch off when in charging cradle	62	rename	70
time control	61	Sound profiles	55
volume	91	Sounds for ringtones	70
Ringtones	91	Speaker	27
		Speech pauses, suppressing	109
S		Star key	6
Safety precautions	9	Status bar	6
Screensaver	88	icons	129
Searching		Status information	117
handset	84	Subnet mask defining	97
Searching for participants on Gigaset.net	45	SUOTA	94
Searching in directory	40	Symbols, see Icons	129
Send connection	17, 101	System PIN	
assigning	108	changing	99
standard assignment	101	resetting	99
Sender's address (e-mail)	77	System settings securing	99
Sending			
entire directory to handset	41	T	
SMS messages	63	Talk key	6
Service	123	Technical data	126
Service provider, see Network provider		Telephone	
Services		connecting	7
online directory	113	operating	19
Setting the date	96	Telephone jack, pin connections	127
Setting the system	96	Time control for external calls	61
Setting the time	96	Time server	115
Setting up the base	10	TLS (Transport Layer Security)	106
Setting up the charging cradle (handset)	10	Tone dialling (DTMF)	86, 87
Setting up the handset	11	Transferring, external call internally	26
Settings		Troubleshooting	
saving and restoring	116	e-mail	76
Show new messages	36	general	119
Signal strength	129	SMS	69
Signal tone, see Advisory tones			
Silence, suppressing	109	U	
SMS		Update	73
deleting	65	Upper/lower case	22
draft message list	64	USB data cable	13
incoming message list	64	Using	
linked	63	multiple handsets	82
message list	64		
reading	65	V	
receiving	64	vCard (SMS)	66
self help with error messages	69	vCard format	115
send centre	67	vcf file	114
sending to e-mail address	64	Version check, automatic	116
temporary storing	64	Viewing network mailbox message	36
to PABXs	68	VIP group, classify directory entry	39
troubleshooting	69	VIP ringtone	39
vCard	66	Voice quality for VoIP connections	109
writing/sending	63		

Index

VoIP account	100
provider	16
set up with web configurator	107
setting up	15, 100
setting up using the web configurator configuration wizard	105
user data	16
VoIP provider	107
Volume	
earpiece	90
handset speaker volume	90
handset speaker/earpiece volume	27
speaker	90
Volume keys	6, 20

W

Warning tone, see Advisory tones	
Weather forecast, display in idle status	81
Web configurator	14
configuration wizard	105
connecting with PC	103
de-registration	104
DTMF signalling for VoIP	111
menu	118
registration	104
set up VoIP connection	107
wizard	105
Withheld number	31
Wizard for quick initial configuration	105
Writing (SMS)	63

Y

Yellow Pages	43
------------------------	----

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software which is subject to the GNU General Public License (GPL) or the GNU Library/Lesser General Public License (LGPL). The corresponding licence conditions can be found below in their original version. You can download the corresponding source code from the Internet at www.gigaset.com/opensource. The appropriate source code can also be requested from Gigaset Communications GmbH at cost price within three years of purchasing the product. Please use the contact details provided at www.gigaset.com/service.

Licence texts

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages—typically libraries—of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

Open Source Software

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances. For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms.

A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

Open Source Software

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the library's name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990

Ty Coon, President of Vice

That's all there is to it!

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2018

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com

Apple, the Apple logo and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Google, Android, Google Play and other brands are trademarks of Google Inc.