

# SIEMENS



## Gigaset A180-A185

Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG

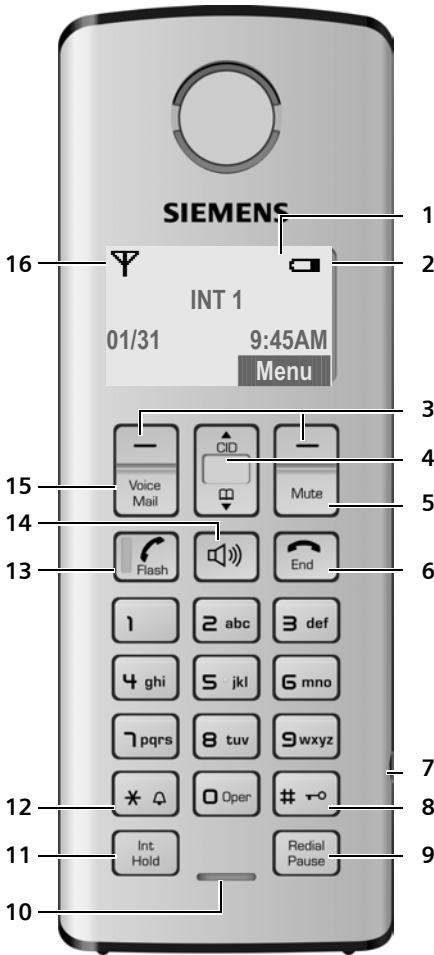
© Gigaset Communications GmbH 2009  
All rights reserved.  
Subject to availability. Rights of modifications reserved.

[www.gigaset.com](http://www.gigaset.com)

UCZZ01981AZ(0)

# Gigaset

# The handset at a glance



- 1 **Display** in idle status
- 2 **Charge status of the batteries** (page 2)
- 3 **Display key** (page 13)
- 4 **Control key**
  - Access to Calls list.
  - Access to directory.
- 5 **Mute key**  
Mute/unmute microphone.
- 6 **End Call key, On/Off key**  
End call, cancel function, go back to idle status, activate/deactivate handset (press and hold in idle status)
- 7 **2.5 mm socket** (mono) for headset
- 8 **Pound (#) key**  
Enter symbol #  
Keypad lock on/off (press and hold in idle status)  
Switch between uppercase/lowercase letters for text entry.
- 9 **Redial/Pause key**  
Open redial list (in idle status) or insert a dialing pause (when editing a number).
- 10 **Microphone**
- 11 **Intercom/Hold/Conference key**  
Set up an internal call (page 23).  
Switch between external call and internal handset (page 25), or transfer a call during external call (page 24).  
Set up a conference call with an external line and an internal handset (press and hold in hold-intercom mode, page 25).

**Note:**

When only one handset is registered to the base station, the key is redundant and therefore has no function.

**Note:**












Pictures in this user manual may differ from the actual product.

- 12 **Star (\*) key**  
Ring tone on/off (press and hold)  
Switch temporarily to tone dialing (DTMF).  
Switch between AM and PM during time setting.  
Switch Calls list display format.
- 13 **Talk/Flash key**  
Answer or start a call.  
Key flashes: incoming call.  
Add a flash (in the directory)  
Send FLASH (when off hook).
- 14 **Handsfree key**  
Answer or place a call in speaker mode.  
Switch between speaker on and speaker off (in off hook mode).
- 15 **Voice mail**  
Connect to your voice mailbox.
- 16 **Reception indicator** (page 2)



## Overview of handset's display icons

---

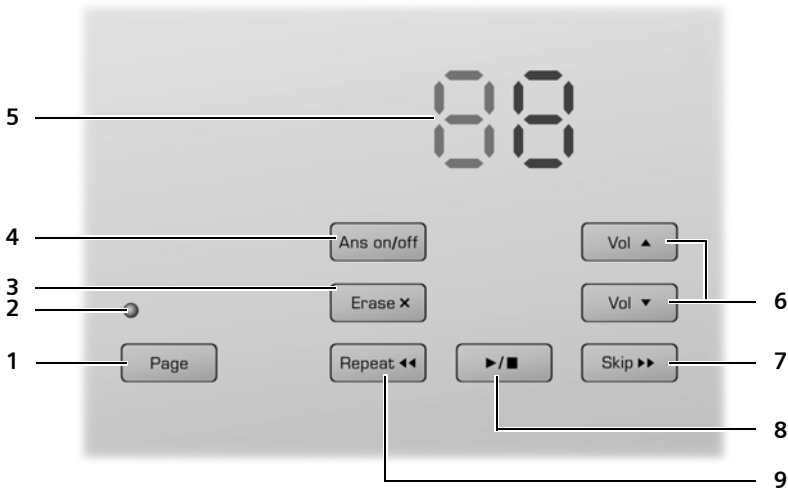
-  **Reception indicator**  
Handset is linked with the base station.  
Flashes: the handset is out of range or not registered
-  **Calls list icon**  
Entries stored in the Calls list.  
Flashes: New missed calls in the Calls list
-  **Voice mail envelope**  
At least one new message on voice mailbox
-  **Charge status of the batteries**  
 (empty to full)  
 flashes: batteries almost empty  
 flashes: batteries charging
-  **Ringer off icon**  
Ring tone volume of handset is turned off
-  **Handsfree icon**  
Handsfree mode activated
-  **Answering machine icon**  
Answering machine is switched on.  
Flashes: answering machine is recording or is being operated by another handset
-  **Off-Hook**  
Outgoing call initiated and during a call.  
Flashes: indicates incoming call

## The base station at a glance

---

### Base station with answering machine


---



You can use the keys on the base station to operate the integrated answering machine and register the handset to the base station.

- 1 Page key  
Paging handsets (press briefly)  
Start the registration procedure (press and hold in idle mode). You will hear a beep.
- 2 LED
  - Is off when the line is free
  - Is on when any handset links to the base
  - Flashes when paging handsets and during registration mode
- 3 Erase key  
Erase current message during playback  
Erase all old messages (press and hold in idle mode)
- 4 On/Off key  
Activate/deactivate answering machine.
- 5 Message counter (page 17)  
Status information for answering machine
- 6 Volume keys  
Change ring tone volume (in idle mode or during incoming calls)  
Change volume of message playback or call screening.

### During message playback:

- 7 Skip key  
Skip to next message.
- 8  key  
Start/stop playback.
- 9 Repeat key  
Skip back to beginning of the current message (press once) or to the previous message (press twice).

### Please remember:

If the answering machine is being operated from a handset, or if it is recording a message, you cannot operate the answering machine from the base station.

## Base station without answering machine

---



10 Registration/Paging key (see page 23)

# Contents

**The handset at a glance . . . . . 1**  
Overview of handset's display icons . . . 2

**The base station at a glance . . . . . 2**

**Safety precautions . . . . . 5**

**Notes on the operating instructions . . . . . 6**  
Symbols used . . . . . 6  
Example: menu input . . . . . 6

**Gigaset A180 and Gigaset A185 – more than just a telephone . . . 7**

**First Steps . . . . . 7**  
Package contents . . . . . 7  
Installing the base station . . . . . 7  
Setting up the handset for use . . . . . 8

**Making calls . . . . . 11**  
Making an external call . . . . . 11  
Putting an external call on hold . . . . . 11  
Ending a call . . . . . 11  
Answering a call . . . . . 11  
Caller ID . . . . . 11  
Handsfree operation . . . . . 12

**Operating the handset . . . . . 12**  
Control key . . . . . 12  
Display keys . . . . . 13  
Returning to idle status . . . . . 13  
Menu guidance . . . . . 13  
Correcting incorrect entries . . . . . 13

**Using the directory and lists . . . 14**  
Directory . . . . . 14  
Last number redial list . . . . . 15  
Calls list . . . . . 15

**Operating the answering machine . . . . . 17**  
Operation using the base station keys . 17  
Operation using the handset . . . . . 17  
Setting up the answering machine . . . 20  
Operating when on the move (remote operation) . . . . . 21

**Using the voice mailbox . . . . . 22**  
Configuring the voice mailbox for fast access . . . . . 22

**Using several handsets . . . . . 23**  
Registering handsets . . . . . 23  
De-registering handsets . . . . . 23  
Locating a handset ("paging") . . . . . 23  
Changing the base station . . . . . 23  
Making internal calls . . . . . 23  
Transferring a call to another handset . 24  
Accepting/rejecting call waiting . . . . . 24  
Linking internal callers to an external call . . . . . 25  
Internal conference call . . . . . 25

**Handset settings . . . . . 25**  
Changing the name of a handset . . . . . 25  
Changing the display language . . . . . 25  
Setting the display contrast . . . . . 26  
Activating/deactivating auto answer . . 26  
Adjusting the loudspeaker and earpiece volume . . . . . 26  
Changing ring tones . . . . . 26  
Activating/deactivating the key-touch tone . . . . . 26

**Base station settings . . . . . 27**  
Changing ring tones . . . . . 27

**System settings . . . . . 27**

**Restoring the default settings . . 28**

**Appendix . . . . . 29**  
Care . . . . . 29  
Contact with liquid . . . . . 29  
Questions and answers . . . . . 29  
Troubleshooting . . . . . 29  
Specifications . . . . . 30  
Industry Canada Certification . . . . . 31  
Safety precautions . . . . . 31  
Service (Customer Care) . . . . . 33  
End-user limited warranty . . . . . 33

**Menu of the handset . . . . . 37**

**Index . . . . . 39**

## Safety precautions\*



Only use the **power supply unit supplied** as indicated on the underside of the device.



Only insert **approved rechargeable batteries of the same type**.  
Never use ordinary (non-rechargeable) batteries as they may pose a health hazard or cause injury.

Do not charge the handset in charging cradle or base station while the headset is connected.



Make sure the rechargeable battery is inserted the right way round.



Use the battery specified in these operating instructions.



The phone may affect medical equipment so always switch your phone off before entering hospitals or doctors' practices.



**Notice to Hearing Aid Wearers:**  
This phone system is compatible with inductively coupled hearing aids.



Do not operate the phone in places where there is a risk of explosion (such as paint workshops).



Do not install the base station in bathrooms or shower rooms. The handset and base station are not splash-proof (see page 29).



Drivers must not use the phone while driving.



The phone must be switched off at all times in an aircraft. Make sure it cannot be switched on accidentally.



If you give your telephone to someone else you should also give them the operating instructions.



Dispose of batteries and the phone carefully. Do not pollute the environment.

**Emergency numbers cannot be dialed if the keypad lock is activated!**

\* also see page 31

## Notes on the operating instructions

This section explains the meaning of certain symbols and typographical conventions used in this user guide.

### Symbols used

On / Off (example)

Select one of the two menu functions specified.



Enter digits or letters.



The display keys' current functions are shown reverse highlighted in the bottom display line. Press the display key below to launch the function.



Press the top or the bottom of the control key: scroll up or down.



\* etc.

Press the corresponding key of the handset.

## Example: menu input

In the user guide, the steps you need to perform are shown in abbreviated form. This is illustrated below using "Changing the display language" as an example.

Please proceed as described in the box below.

**Menu** → **Settings** → **Handset** → **Language**  
→ **English / Español / Français**

- ▶ With the handset in idle status, press the right display key to open the main menu.
- ▶ Select **Settings** using the control key [↕] – press the control key at the top or bottom.
- ▶ Press the **OK** display key to confirm the function **Settings**.

The **Settings** submenu is displayed.

- ▶ Press the bottom of the control key [↕] repeatedly until **Handset** is selected.
- ▶ Press the **OK** display key to confirm the function.

The **Handset** submenu is displayed.

- ▶ Press the bottom of the control key [↕] repeatedly until **Language** is selected.
- ▶ Press the **OK** display key to confirm the function.

The **Language** submenu is displayed.

- ▶ Select the language you want using the control key [↕] – press the control key at the top or bottom.
- ▶ Press the **OK** display key to confirm the selected language.

The language is now changed for all text.

# Gigaset A180 and Gigaset A185

## – more than just a telephone

---

Your phone not only lets you store up to 70 phone numbers (page 14), it can do a whole lot more:

- ◆ View missed calls on your phone (page 15).
- ◆ Select the 12- or 24-hour format for displaying the time (page 9).
- ◆ ECO DECT uses a power supply with low power consumption. Your handset reduces the transmission power depending on its distance from the base station (close-up range).

### Note:

The transmission power of the base station is nearly turned off when the handset is placed in the base station and only one handset is registered on the base station.

## Headset socket

---

Which headsets are compatible?

Please call the Service number 1-866-247-8758 or contact us at [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care) for information.

### Caution:

Do not charge the handset in charging cradle or base station while the headset is connected.

**Have fun using your new phone!**

## First Steps

---

### Package contents

---

- ◆ One Gigaset A180 or Gigaset A185 base station
- ◆ One telephone line cord
- ◆ One AC adapter for base station (with yellow marked plug)
- ◆ One User Guide
- ◆ One Gigaset A18H handset with battery cover
- ◆ Two batteries
- ◆ One belt clip

Included with each additional handset:

- ◆ One Gigaset A18H handset with battery cover
- ◆ One Gigaset charging cradle
- ◆ One AC adapter for charging cradle (with black marked plug)
- ◆ Two batteries
- ◆ One belt clip

### Installing the base station

---

The base station is designed for use in dry rooms in a temperature range of +41°F to +113°F.

Set the base station at a central point in the building.

### Please note:

- ◆ Never expose the phone to heat sources, direct sunlight, or other electrical appliances.
- ◆ Protect your phone from moisture, dust, corrosive liquids, and vapors.

### Range and reception indicator

---

#### Range:

- ◆ Up to 984 feet in the open
- ◆ Up to 165 feet in buildings



## First Steps

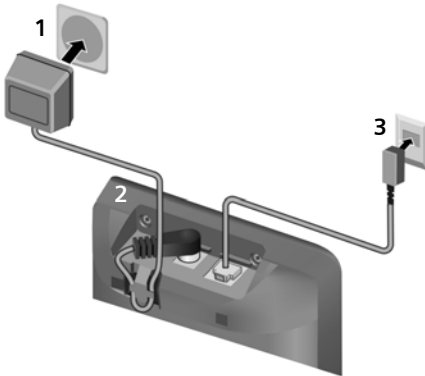
### Reception indicator:

The display shows if the handset is linked to the base station:

- ◆ **Y** is on: handset is linked to the base station.
- ◆ **Y** flashes: no reception, handset is out of range or not registered.

### Connecting the base station

- ▶ **First** connect the yellow marked plug pin to the base station's socket (yellow marked) and then the AC adapter to the AC outlet (see below).
- ▶ Afterwards connect the phone jack as shown below.



- 1 110-V power adapter
- 2 Back of the base station
- 3 Phone jack with phone cord

### Please note:

- ◆ The power adapter must be **always connected**, as the phone will not operate without an electrical supply.
- ◆ Your answering machine is set to give a standard announcement.

### Setting up the handset for use

All supplied handsets are already registered to the base station by factory settings.

Carry out the following steps for each handset.

### Inserting the batteries

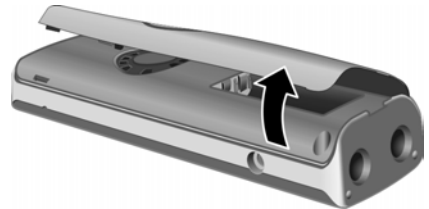
#### Caution:

Use only rechargeable Nickel-metal hydride (NiMH) UL-approved AAA batteries. Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

#### Note:

If attached, remove the belt clip before opening the battery cover.

- ▶ Open the battery cover.



- ▶ Insert the batteries according to the correct polarity (see diagram).



- ▶ Close the cover, and press the top so that it clicks into place.

## Attaching the belt clip

There are notches on the sides of the handset for attaching the belt clip, nearly at the same height as the handset ear-piece.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.

## For multiple handsets: Connecting charger



- ▶ **First** connect the black marked plug pin to the charger's socket (black marked) and then the AC adapter to the AC outlet.

## Placing the handset in the base station


- ▶ Place the handset in the base station or charger with the handset's **display facing outwards**.

## Charging the batteries for the first time

- ▶ To charge the batteries, leave the handset in the base station or charging cradle **continuously** for **ten** hours.

The alternately flashing battery icons   at the upper right of the display screen indicate that the batteries are being charged.

### Note:

- If the handset has turned itself off because its batteries are empty, and you then place the handset into the base station, it will turn on automatically.
- Only place the handset into the base station or charging cradle specifically intended for it.
- During handset operation, the battery icon  indicates the charge status of the batteries (page 1).
- The batteries may feel warm as they are charging. This is not dangerous.

For questions and troubleshooting, see page 29.


## Setting the date and time

You should set the date and time, for example, to ensure the correct time of incoming calls is recorded.








To change the time and date, open the input field using:

**Menu** →  → **Settings** → **Date/Time**  
→ **Set Date/Time**



Enter the time and date with 10 digits, for example, 

      for January 15, 2008, 07:15 am. If the **12-hour** time format is set, use the  key to switch between am and pm.

### OK

Press the display key to save changes.

You can change the date and time format:

**Menu** →  → **Settings** → **Date/Time**  
→ **Set Format**

- ▶ Choose between day/month and month/day date formats:

 → **Date Format** → **DD/MM / MM/DD**

- ▶ Choose between 12- and 24-hour time formats:

 → **Time Format** → **12 Hours/24 Hours**

### Note:

Date and time settings apply all registered handsets.

Date and time format settings apply only to your own handset. You must set date and time format at each device separately.

## First Steps

### Area code

---

To make a call using the incoming calls list (page 15), your phone's **area code** must be stored.

**Menu** →  → **Settings** → **System** → **Area Code**




Enter your area code and press **OK**.

#### Note:

Area code setting apply to base station and all registered handsets.

### Display in idle status

---

Once the phone is registered and the time set, the idle display looks as shown here (example). The symbol  shown in the display's header indicates that the answering machine is turned on.



**Your phone is now ready to use.**

## Making calls



---


### Making an external call

---

External calls are calls using the outside telephone network.



Enter the number and press the Talk key  or Handsfree key .

To cancel the dialing operation, press the End Call key .

You are shown the duration of the call while the call is in progress.

#### Note:

Dialing using the directory (page 14) or Calls list (page 15) saves time re-entering numbers.

### Putting an external call on hold

---





Press the Int/Hold key.

The external call is put on hold.



Press the display key to take the call back off hold.

#### Note:

If you have registered only **one** handset to your base station, the  has no function. Use  key, if you want to talk to somebody else without being heard by the external party.

### Ending a call


---





Press the End Call key.

## Answering a call

---

The handset indicates an incoming call in three ways: by ringing, by a display on the screen, and by the flashing Talk key .

You can accept the call by:

- ▶ Pressing the Talk key .
- ▶ Pressing the Handsfree key .

If the handset is in the base station or charger and the Auto Answer function is activated (page 26), the call will be answered automatically when you lift the handset from the base station or charger.

You can press the **Quiet** display key to mute the ring tone of your handset without answering the call. The other registered handsets and the base station keep ringing.

You can answer the call as long the call is shown on the display.

## Caller ID

---

Caller ID (CID) is an optional subscription service provided by your telephone service provider. This feature supplies incoming caller identification information that will be displayed on your handset.

### Call display with Caller ID/Name

---

If the number of the caller is stored in your directory, you will see the caller's name as stored in the directory.

The following is displayed in place of the number:

- ◆ External Call, if no number is transmitted or the caller has not subscribed Caller ID.
- ◆ Withheld, if the caller has withheld Caller ID.

## Handsfree operation



---

You can activate the speakerphone at any time to provide handsfree operation during a call.

### Activating/deactivating handsfree


---

#### Activating while dialing

  Enter the number and press the Handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that the caller knows someone else may be listening.

#### Switching between earpiece and handsfree mode

 Press the Handsfree key.

During a call and when listening to the answering machine, turn handsfree on or off.


To adjust the volume, see page 26.

## Operating the handset

---


### Activating/deactivating the handset

---

 Press and **hold** the End Call key to turn the handset on/off.

### Activating/deactivating the keypad lock

---

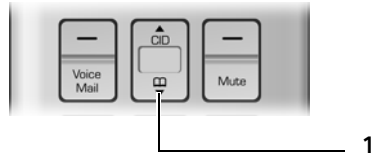
 Press and hold the pound key.

**Keypad Locked** appears in the display when the keypad lock is activated.


The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

## Control key

---





#### 1 Control key



In the description below, the top or bottom of the Control key (up, down), which you must press depending on the operating situation, is marked in black, for example,  for "press up on the Control key".

The Control key has different functions:



#### When the handset is in idle status

-  Open the directory
-  Open Calls list (page 15)

#### In input fields



You can use the Control key to move the cursor backwards  or  forwards.

#### In the main menu, lists and submenus

 /  Scroll up/down line by line.

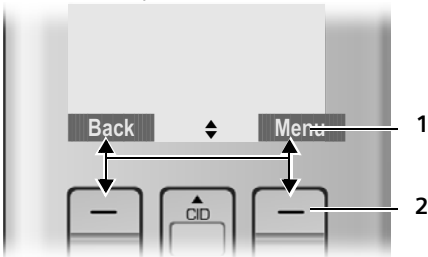
At the bottom/top of a menu or a list: A feedback tone signals that the menu/list has wrapped around automatically (the first/last entry is selected in the display).

#### When the handset is off the hook or when the answering machine plays

 /  Increase/decrease volume

## Display keys

The function of the display keys changes depending on the particular operating situation. Example:




- 1 The display keys' current functions are shown on the bottom display line.
- 2 Display keys

The most important display symbols are:

|              |   |
|--------------|---|
| <b>Menu</b>  | Open the main menu (in idle mode) or the context-dependent menu.  |
| <b>Back</b>  | Go back one menu level.   |
| <b>OK</b>    | Confirm your choice or save edited characters.  |
| <b>Clear</b> | Clear key: deletes one character at a time from right to left (press briefly) or all characters (hold). |

## Returning to idle status

You can return to idle status from anywhere in the menu as follows:

- ▶ Press the End Call key .

Or:

- ▶ Do not press any key: after 2 minutes, the display will **automatically** return to idle status.

Changes that you have not confirmed or saved by pressing **OK** will not be saved.

An example of the display in idle status is shown on page 10.

## Menu guidance


Your phone's functions are accessed using a menu that has a number of levels.

### Main menu (first menu level)

- ▶ Press the display key **Menu** with the handset in idle status to open the main menu.

The main menu functions are shown on the screen in a list.

To access a function, open the corresponding submenu (next menu level):


- ▶ Navigate to the function using the control key .
- ▶ Press the display key **OK**.

### Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

Pressing the display key **Back** returns you to the previous menu level.  cancels the operation.

## Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ Press **Clear** to delete the character to the left of the cursor.
- ◆ Insert characters to the left of the cursor.
- ◆ Overwrite the (flashing) character when entering the time and date, etc.

## Using the directory and lists

---

The options are:

- ◆ Directory
- ◆ Last Number Redial list
- ◆ Calls list


You can store a maximum of 150 entries in the directory. Each entry must consist of a name and a number.

The directory is stored in the base station and is shared by all registered handsets.

### Directory

---

In the **directory**, you can store phone numbers and the names associated with them.

- ▶ With the handset in idle status, open the directory by pressing the  key.

#### Length of entries


Number: max. 24 digits  
 Name: max. 16 characters



#### Storing a number in the directory

---

##### Quickly storing a number starting from the idle status



The handset is in the idle status:

 Enter the number and press **Save**.

 Enter the name and press **OK**.  
 Correct the number if necessary and press **OK**.

##### Storing a number starting from the directory




 → **Menu** → **New Entry**

 Enter the name and press **OK**.  
 Enter the number and press **OK**.



You can use the **Clear** key to delete one character at a time from right to left (press briefly) or all characters (press and hold).


### Entering and editing names


The following rules apply when creating an entry:

- ◆ To enter a letter press the corresponding numeric key as often as necessary.
- ◆ Use   to move the cursor to the left or right.
- ◆ Characters are inserted after the cursor.
- ◆ Press the pound key , before entering the letter, to switch between uppercase and lowercase.

### Entering special characters

You can enter the special characters using the key  or .

 . 0 , / : ; " ' ! ? \* + - % \ ^ ~ |



 SPACE 1 @ \_ # = < > ( ) & \$ [ ] { }

### Selecting a directory entry

---



 Open the directory.



You have the following options:

- ◆ Use  to scroll to the entry until the desired name is selected.
- ◆ Enter the first character of the name, or scroll to the entry with , if necessary.

### Dialing with the directory



---

 →  (select entry)

 /  Press the Talk key or the Handsfree key.  
The number is dialed.

### Managing entries in the directory

---

 →  (select entry)

#### Viewing an entry

**Menu** → **View**

The entry is displayed.  
Go back with **Back**.

## Editing entries

**Menu** → Edit Entry



Edit the name and press **OK**.



Edit the number and press **OK**.

You can use the **Clear** key to delete one character at a time from right to left (press briefly) or all characters (press and hold).

## Deleting entries

**Menu** → Delete

Delete the displayed entry.

Or:

**Menu** → Delete List

- ▶ Confirm question **Delete?** by pressing **OK**.

All entries in your directory will be deleted.

## Adding a displayed number to the directory

Numbers that appear in a list, such as the Calls list or the Last Number Redial list, can be added to the directory. If you have Caller ID and the name is transmitted, the first 16 characters of the transmitted name are copied to the name line.

A number is displayed:

**Menu** → Copy To Dir.

- ▶ Complete the entry as described in the paragraph "Storing a number in the directory" (see page 14).

## Last number redial list

The Last Number Redial list contains the 20 numbers last dialed with the handset (max. 32 digits).

### Last number redial



Press the key.



Select the entry.



Press the Talk key or the Handsfree key.  
The number is dialed.

## Managing entries in the Last Number Redial list



Press the key.



Select the entry.

**Menu**

Open menu.

The following functions can be selected with :

### View

In the list long numbers are shown abbreviated. Select **View** to show the whole number.

### Copy To Dir.

Copy an entry to the directory (page 15)

**Delete** (as in the directory, page 15)

**Delete List** (as in the directory, page 15)

## Calls list

**Requirement:** Caller ID Presentation (CID, page 11)

The numbers of the last 50 incoming calls are stored.

The icon is shown on the display of the idle status when incoming calls are stored in the Calls list. The icon flashes if new missed calls are in the Calls list.

- ▶ With the handset in the idle status, open the Calls list by pressing the (CID) key.

## Dialing with the calls list



→ (select entry)





Press the Talk key or the Handsfree key.  
The number is dialed.





### Viewing an entry and changing the number format



---

 →  (Select entry)

**Menu** → **View**

The entry is displayed.

 If necessary, press the  key to change the number format for dialing (see note below).


 /  Press the Talk key or the Handsfree key.  
The number is dialed.

Or:

**Back** Press display key to go back.

#### Note:

You may need to change a caller ID number before dialing if the number is not displayed in the correct format.

Caller ID numbers may be stored in the Calls list with an area code which may not be required for local calls, or without a 1 which must be dialed for long distance calls. Pressing the  key steps through the following options (example):

- 123-4567
- 123-123-4567
- 1-123-123-4567

### List entry

---

New messages are at the top. A list entry contains the following information:

- ◆ List type (in header)
- ◆ Status of entry (new entries are marked with a star (\*) in the header)
- ◆ Name of caller, if name is transmitted via CID or stored in directory.

Number of caller, if only the number is transmitted.

External Call, if no number is transmitted or the caller has not subscribed Caller ID.

Withheld, if the caller has withheld Caller ID.

You can add the number of the caller to the directory (page 15).

- ◆ Date and time of call

You can manage the entries as the entries of the Last Number Redial list (see page 15).

## Operating the answering machine

---

You can operate the base station's answering machine using the handset, using the keypad of the base station (page 1), or using remote operation (from another phone/cell phone).

### Announcement mode

You can use the answering machine in two different modes.

- ◆ In **Answer & Rec.** mode, the caller hears your announcement and can then leave a message.
- ◆ In **Answer Only** mode, the caller hears your announcement but cannot leave a message.

## Operation using the base station keys

---

You can use the base station keys for the most commonly used functions of your answering machine. For more information, see page 2.

### Status of message counter (see page 2)

Answering machine is off.

- ◆ Message counter is off.

Answering machine is on.

- ◆ "0": no new messages.
- ◆ Number above "0": number of old messages.
- ◆ Number flashes: number of new messages.
- ◆ "--" flashes: memory is full
- ◆ "AA": answering machine is being accessed remotely or is playing an announcement.
- ◆ Segments scrolling in circle: answering machine is recording a message or announcement.

## Operation using the handset


---

If you have enabled call screening on the base station (see page 20) you can automatically listen through the loudspeaker of the base station while a caller is recording a message.

Provided you have enabled call screening on your handset (see page 20) you also can listen through the loudspeaker of your handset:

- ▶ While a caller is recording a message press the **Screen** display key.

The loudspeaker of your handset is activated.


- ▶ To switch off the loudspeaker press the handsfree key .


## Switching the answering machine on/off

---

**Menu** → **Answer Machine** → **Ans On/Off**

**On / Off** Select and press **OK** to switch answering machine on/off.

**On the base station:** Press the  key.

The  icon is displayed on the screen.

The phone includes a prerecorded announcement for the answer and record mode and announce-only mode. If a personal announcement has not been recorded, the corresponding prerecorded announcement is used.

## Recording a personal announcement/announce only

---

(OGM = outgoing message)

**Menu** → **Answer Machine** → **Record OGM**

**Answer & Rec. / Answer Only**

Select the mode in which you want to record the personal announcement and press **OK**.

**Record** Select and press **OK** to start recording.

You will hear the ready tone (short tone).

## Operating the answering machine

- ▶ Now record your announcement (must be at least 3 seconds long).

### Note:

When recording your announcement, speak directly into handset's microphone, as if talking on the phone.

- ▶ Press **OK** to end the recording.

Playback of the recorded announcement will start automatically. You can record the announcement again by repeating these steps.

### Please note:

- ◆ Recording ends automatically if the maximum recording time of 60 seconds has been reached.
- ◆ If you cancel the recording, the prerecorded announcement will be used.
- ◆ The recording is canceled if the answering machine memory is full.
  - ▶ If necessary, delete old messages and repeat the recording.

## Playing back announcements

**Menu** → Answer Machine → Record OGM  
→ Answer & Rec. / Answer Only

**Play** Select and press **OK** to start playback.

If a personal announcement has not been recorded, the corresponding prerecorded announcement is used.

## Deleting personal announcements

**Menu** → Answer Machine → Record OGM  
→ Answer & Rec. / Answer Only

**Delete** Select and press **OK** to delete the announcement. If no personal announcement exists, you will hear an error tone.

After deleting the personal announcement, the corresponding prerecorded announcement will be used.

## Selecting an announcement mode

You can choose between **Answer & Rec.** and **Answer Only**.

**Menu** → Answer Machine → Answer Mode

**Answer & Rec. / Answer Only**

Select mode and press **OK**.

The selected mode is saved even after the answering machine is deactivated.

### Note:

If the message memory is full when in **Answer & Rec.** mode, the answering machine switches automatically to **Answer Only** mode. If there are no new messages on the answering machine and no new missed calls in the Calls List, **Memory Full!** is displayed on the handsets.

- ▶ Delete old messages.

The answering machine automatically switches back to the mode set once deletion is complete, or you can select another recording mode.

## Playing back messages

The date and time of each message is logged (provided this has been set, page 9) and displayed during playback.

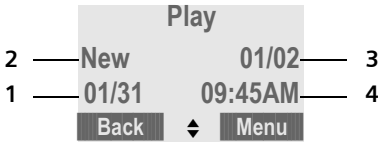
## Playing back new messages

New messages you have not yet listened to are indicated by the **Q** icon slowly flashing and by the number of new messages flashing in the message counter of the base station (page 3).

**Play** Press the display key to start playback.

**On the base station:** Press the **▶■** key.

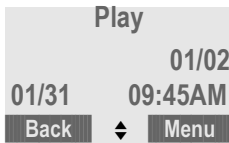
The following example shows a display of the handset when playing back new messages:



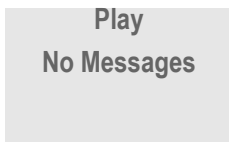
- 1 Date when message was recorded.
- 2 **New**: you have not yet listened to the message.
- 3 **01/02**: The first of two messages is played.
- 4 Time when message was recorded.

If you have...

- ◆ **New messages:**  
**New** (2) is displayed. The number of messages (3) indicates only the number of new messages:  
**01/02** means that the first of two new messages is being played.
- ◆ **Messages that you have already listened to:**  
**New** (2) is not displayed. The number of messages (3) indicates only the number of old messages:  
**01/02** means that the first of two old messages is displayed.



- ◆ **No messages:**  
**No Messages** appears on the display screen.



An announcement tells you if there are any new messages, just old messages, or no messages.

If there are new messages, playback begins with the first new message. After the last new message, you will be returned to the Play menu.

After a new message has been played in full, its status becomes "old".

If the recorded message has been saved with the date and time, you will hear the date and time announced before playback begins.

### Playing back old messages

You can listen to old messages if there are no more new messages.

**Menu** → **Answer Machine** → **Play**

**OK** Press the display key to start playback.

**On the base station:** Press the key.

### Controlling playback

During message playback:

**Menu** Press the display key to enter the Options menu.

- ◆ **Repeat**  
 Repeat playback of current message.

**On the base station:** Press the key.

- ◆ **Next/Previous**  
 Jump to playback of the following or previous message.

**On the base station:** Press to jump to the following message. Press twice to jump to the previous message.

- ◆ **Delete**  
 Delete current message.

**On the base station:** Press the key.

### Deleting messages


You can delete old messages all at once or individually.

#### Deleting all old messages

On the handset:

**Menu** → **Answer Machine** → **Delete Old Msgs**

- ▶ Confirm question **Delete?** by pressing **OK**.

**On the base station in idle status:** Press and hold the  key.


If you have no old messages, you will hear an error tone and **No Messages** will display on the screen.

### Deleting individual old messages

During playback:

**Menu** → **Delete**

▶ Press **OK** to delete the current message.

**On the base station:**  
Press the  key during playback.

### Picking up a call from the answering machine

You can pick up a call while the answering machine is recording a message or being operated remotely:

 Press the Talk key.

Recording stops and you can speak to the caller.

If two seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message.

You can accept the call on every handset.

### Recording a memo

You can record a memo on your answering machine, e.g. to leave a message to other members of your family. It will be signaled like a new message on your answering machine.

**Menu** → **Answer Machine** → **Record Memo**  
Select and press **OK** to start playback.

You will hear the ready tone (short tone).

- ▶ Now record your memo (must be at least 3 seconds long).
- ▶ Press **OK** to end the recording.

Recording ends automatically if the maximum recording time of 3 minutes has been exceeded.

## Setting up the answering machine

The answering machine is preconfigured at the factory. Make individual settings using the handset.

### Activating/deactivating call screening

While a caller is recording a message, you can listen through the loudspeakers of registered handsets and the base station.

**Menu** → **Answer Machine** → **Settings**  
→ **Call Screening**

If you use the handset for this setting:

**Base / Handset**

Select if you want to make the setting for the handset or the base station.

**On / Off** Press the display key **OK** to confirm your selection.

The default setting for the base station is **On**; the default setting for the handset is **Off**.

For call screening on the handset:

**Screen** Press the display key to start call screening.

### Toll-Saver Mode – Call acceptance/charge saving function for remote operation

You can set when you want the answering machine to respond to calls.

The options are: **2 Rings**, **4 Rings**, **6 Rings**, **8 Rings**, as well as the cost-saving setting **Toll Saver**.

#### Note:

The number of rings refers to the ring tones of the base station. If you have selected another ring tone, the number of rings you hear may differ from the selected number of ring tones.

When **Toll Saver** is set, the following determines when the answering machine accepts calls:

- ◆ If no new messages are present, the answering machine accepts calls after **4 Rings**.
- ◆ If new messages are present, the answering machine accepts calls after **2 Rings**.

When operating remotely, you know there are no new messages when you hear the third ring (otherwise the answering machine would have already accepted your call). There will be no call charges if you hang up now.

**Menu** → **Answer Machine** → **Settings**  
→ **Ring Delay**

**2 Rings / 4 Rings / 6 Rings / 8 Rings / Toll Saver**  
Select an option and press **OK**.

### Changing the language of voice prompts and prerecorded announcements

You can select English, Spanish, or French as the language of voice prompts and prerecorded announcements.

**Menu** → **Answer Machine** → **Settings**  
→ **Voice Language**

**English / Español / Français**  
Select a language and press **OK**.

### Operating when on the move (remote operation)

You can check or activate the answering machine from any other telephone (hotel, pay phone, etc.).

#### Requirements:

- ◆ The phone you are using for remote operation must have tone dialing (DTMF), such that you hear different tones when you press the keys.
- ◆ You must activate **Remote Access**.

### Activating Remote Access

**Menu** → **Answer Machine** → **Settings**  
→ **Remote Access**

**On / Off** Select and press **OK** to confirm your selection.

### Calling the answering machine and playing back messages



Dial your own number.



While listening to your announcement, press the **#** key and enter the system PIN (default setting: 0000, see page 27).

You will be informed whether any new messages have been recorded. The messages are then played back. You can now operate the answering machine using the keypad.

### Operating the answering machine using the keypad

The following keys are used:

- 0** Delete the playing message.
- 1** Repeat the previous message.
- 2** Play the message.
- 3** Skip to the next message.
- 7** Turn on the answering machine.
- 8** Stop message playback.
- 9** Turn off the answering machine.
- #** Enter the remote access code if the answering machine is on.

#### Note:

After message playback, if no key operation is detected for 10 seconds, the call will be terminated.

## Activating the answering machine



Dial your own number.

- ▶ Allow the phone to ring until the ring back tone stops and the phone answers with a beep.



Enter system PIN (default setting: 0000, see page 27).

- ◆ If messages are stored on the answering machine:

The answering machine starts playback.

- ▶ Press the key to stop playback.
- ▶ After the beep press the key to activate the answering machine.

Or

- ▶ Listen to the playback until you hear two beeps (=the end of message playback)
- ▶ Press the key to activate the answering machine.

- ◆ If no (new or old) messages are stored on the answering machine:

You will hear a beep. A status message is played back and informs that no messages are stored on the answering machine.

- ▶ Press the key to activate the answering machine.

You will hear a beep. Your answering machine is now activated and the activated announcement is played back.

## Deactivating the answering machine



Dial your own number.



While listening to your announcement, press the key and enter the system PIN (default setting: 0000, see page 27).



Press the key.

You will hear a beep. Your answering machine is now deactivated.

## Using the voice mailbox

The voice mailbox is your telephone network provider's answering machine within their telephone network. You cannot use the voice mailbox unless you have **requested it** from your network provider.

## Configuring the voice mailbox for fast access

### Entering the voice mailbox number

→ **Voice Mail** → **Settings**



Enter the number of the voice mailbox and press **OK**.

The setting for fast access applies to all Gigaset A18H handsets.

If your network voice mail requires a password for access, it is possible to add a password by entering pauses (press the key) immediately after entering the mailbox access number and before entering your password.

### Calling your voice mailbox



Press briefly.

You are connected directly to the voice mailbox.

If you have new messages on your voice mailbox:



Press the display key to call your voice mailbox.



Press Handsfree key , if required. You hear the voice mailbox announcement.

For further operating steps, please refer to the instructions provided by your mailbox operator.

## Using several handsets

### Registering handsets

You can register up to a total of six handsets with your base station.

A Gigaset A18H handset can be registered with up to four base stations.

#### Note:

The base station and supplied handsets are pre-registered at the factory.

### Registering Gigaset A18H handset

#### On the handset

**Menu** → **Settings** → **Registration**  
→ **Register HS**



Select the base you want to register your handset with and press **OK**. Bases that have been registered will be marked by .



Enter your PIN and press **OK** (default setting: 0000, see page 27).

The handset will be registered.

#### On the base station

Within 60 seconds press and **hold** the registration/page key **Page** (for about 5 seconds) on the base station (see page 2).

### De-registering handsets

You can de-register any registered handset from your Gigaset A180/Gigaset A185.

#### On a handset:

**Menu** → **Settings** → **Registration**  
→ **Unregister HS**



Enter your PIN and press **OK** (default setting: 0000, see page 27).



Select the handset you want to de-register and press **OK**.

#### OK

Press the display key to confirm deletion.

### Locating a handset ("paging")

You can locate your handset using the base station.

- ▶ Press the Registration/Paging key **Page** on the base station **briefly**.
- ▶ All handsets will ring at the same time ("paging"), even if the ring tones are switched off.

On individual handsets you can press the display key **Quiet** to mute the ring tone.

#### Ending paging

- ▶ **Briefly** press the Registration/Paging key on the base station **Page** or press any key on the handset.

### Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).

**Menu** → **Settings** → **Registration**  
→ **Select Base**



Select one of the registered base stations or **Best Base** and press **OK**.

### Making internal calls

Internal calls to other handsets registered with the same base station are free.



Initiate internal call.



Select the handset you want to call and press **OK**.

#### Note:

If only two handsets are registered to the base, the internal call will be established immediately after pressing **Int. Hold** key.



## Using several handsets

### Ending a call



Press the End Call key.

### Transferring a call to another handset

---

You can transfer an external call to another handset.

- ▶ Initiate an internal call as described in the section "Making internal calls" (see page 23).

#### Attended call transfer

When the internal party answers:

- ▶ If necessary, announce the external call.



Press the End Call key.

The external call is transferred to the other handset.

If the internal party does **not** answer or the line is busy, press the display key **End** to return to the external call.

#### Unattended call transfer



Press the End Call key.

The external call is directly transferred to the other handset.

Then, if the internal party does not answer, the call will automatically return to you (the display will show **External Call**).


### Hold while making internal call

---

When you are speaking to an **external** party, you can simultaneously call an **internal** party.

- ▶ Initiate an internal call as described in paragraph "Making internal calls" (see page 23).

The external party hears the hold melody.

Use  key to switch between internal and external party.

### Ending the internal call

- ▶ Ask the other internal party to end the call.

You are reconnected to the external caller.

### Accepting/rejecting call waiting

---

If you get an **external** call while conducting another external or an **internal** call, you will hear the call waiting tone (short tone). The caller's number or name will appear on the screen if caller ID is enabled.

#### Call waiting while conducting an internal call



Press the End Call key to end the internal call.

- ▶ Answer the external call as described in paragraph "Answering a call" (see page 11).



You are connected to the caller who waited.

#### Call waiting while conducting an external call



Press the display key to answer the incoming external call.

The active call is put on hold. You are connected to the caller who waited. You have got the following possibilities:

- Press talk key  to switch between the callers.
- Press end call key  to end the call with the online party.

#### Or:



Press the End Call key to end the existing external call.

- ▶ Answer the external call as described in paragraph "Answering a call" (see page 11).

You are connected to the caller who waited.

## Linking internal callers to an external call

**Important:** The internal conference function (called **Listening In**) must be activated.

You are conducting an external call. An internal caller can join this call and take part in the conversation. The other parties are made aware of additional listeners by a signal tone.


### Activating/deactivating internal conference

**Menu** → **Settings** → **System** → **Listening In**  
→ **On / Off**

Default setting is **On**.

### Internal conference call

There are two ways of starting an internal conference:



- ◆ another handset can join the call
- ◆ you can call another handset via  key and add it to a conference

#### Note:

A total of two handsets may be connected to an external call. If additional handsets attempt to join, they will see an error message.

### Joining the call

When the line is engaged with an external call and you want join the call:

 /  Press the Talk key or Handsfree key **briefly**.

You join the call. The other parties hear a signal tone. On both handsets, you will see **Conference** on the display.

### Calling another handset and adding it to the conference

You are conducting an external call.


- ▶ Initiate an internal call as described in paragraph "Making internal calls" (see page 23).

When the called handset has answered the call:


**Conf.** Press the display key to start the conference.

On both handsets, you will see **Conference** on the display.

### Ending conference call

 Press the End Call key.

The other parties hear a signal tone.

If the **first** internal party presses the End Call key , the handset that has entered the conference call remains connected to the external caller.

## Handset settings

Your handset is preconfigured, but you can change these settings to suit your individual needs.

### Changing the name of a handset

The names "INT 1", "INT 2", etc., are assigned automatically during registration. You can change these names. The number of the handset, however, never changes. The changed name is only displayed on this handset.

**Menu** → **Settings** → **Handset** → **Handset Name**



Enter the name and press **OK**.

The name must be no more than 12 characters.

### Changing the display language

You can view the display texts in different languages.

**Menu** → **Settings** → **Handset** → **Language**

**English / Español / Français**


Select a language and press **OK**.

## Setting the display contrast

---


You have a choice five different contrasts.

**Menu** → Settings → Handset  
→ Display Contr.

 Select your preferred level and press **OK**.

## Activating/deactivating auto answer

---

This function is active by default, so that when you get a call, you can simply lift the handset out of the base station without having to press the Talk key .

**Menu** → Settings → Handset → Auto Answer → On / Off


## Adjusting the loudspeaker and earpiece volume

---

You can set the loudspeaker volume and the earpiece volume to five different levels. You can only make these adjustments during a call.

The handsfree volume can only be adjusted when this function is in use.

You are conducting a call.


 Increase or decrease the volume.

## Changing ring tones


---

For how to set the ring tones of the base station, see page 27.

### Volume

You can choose between five volumes (1–5; for example, volume 3 = )


**Menu** → Settings → Audio Settings → HS Ring Volume

 Select the volume and press **OK**.

## Ring tone melodies

You can choose between 15 different melodies.

**Menu** → Settings → Audio Settings → HS Ring Tones


 Select your preferred melody and press **OK**.


## Activating/deactivating the ring tone

---


You can deactivate the ring tone on your handset before you answer a call or when the handset is in idle status; the ring tone can be deactivated permanently or just for the current call.

### Deactivating the ring tone permanently

 Press and hold the star key until you no longer hear the ring tone.

The  icon appears in the display.



### Reactivating the ring tone

 Press and **hold** the star key.

### Deactivating the ring tone for the current call

**Quiet** Press the display key.

### Adjusting the ring tone during an incoming call

▶ Press the  or  key until the ring tone volume reaches the desired level.

## Activating/deactivating the key-touch tone

---

Each key press is acknowledged by a beep. You can deactivate this function:



**Menu** → Settings → Audio Settings → Key Touch Tone → On / Off

## Base station settings

### Changing ring tones

#### Volume

You can adjust the ring tone on the base station before you answer a call or when the base station is in idle status.

- ▶ Use the volume keys  and  on the base station to adjust the volume of the base station ring tone.

#### Ring tones

You can use a registered Gigaset A18H handset to enter this setting.

You can choose between 5 different melodies.

**Menu** → **Settings** → **Audio Settings** → **Base Ring Tones**



Select your preferred melody and press **OK**.

## System settings

The system settings are carried out using a registered Gigaset A18H handset.

### Protecting against unauthorized access

Protect the system settings of the base station with a PIN known only to you. The system PIN must be entered when registering/de-registering a handset with/from the base station.

### Changing the system PIN

You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only to you.

#### Caution:

Do not forget the new system PIN! If you forget it, you must reset your phone to default settings (see "Restoring the default settings" on page 28).

**Menu** → **Settings** → **System** → **Change PIN**



Enter the old PIN and press **OK**.



Enter the new PIN and press **OK**.



To confirm, enter the new PIN again and press **OK**.

## Restoring the default settings

### Settings for connecting the base station to the PABX

---

The following settings are only needed when your PABX requires them. Please refer to the user guide of your PABX.

#### Changing the dialing mode

The following dialing modes can be selected:

- ◆ Tone dialing (DTMF)
- ◆ Pulse dialing (DP)

**Menu** → **Settings** → **System**  
→ **Dialing Mode**

Tone / Pulse

Select a dialing mode and press **OK**.

#### Setting the flash time

**Menu** → **Settings** → **System**  
→ **Flash Duration**

Short / Long

Select a flash time (**Short** = 80 ms, **Long** = 650 ms) and press **OK**.

#### Switching temporarily to tone dialing (DTMF)

If your PABX still operates with pulse dialing (DP), but you need tone dialing (DTMF) for a connection (for example to listen to the voice mailbox), you must switch to tone dialing for the call.

**Requirement:** You are conducting a call or have already dialed an external number.

Bild 1 **Menu** → **Tone Dialing**

**OK** Press display key to confirm.

Tone dialing is now activated **for this call only**.

## Restoring the default settings

---

You can restore the default values for most settings. When resetting, all handsets remain registered and the directory will not be deleted.

- ▶ Carry out the following on a registered Gigaset A18H handset!

**Menu** → **Settings** → **System** → **Reset**

**OK** Press the display key to confirm reset.

## Appendix

### Care

Wipe the base station and handset with a **damp** cloth (do not use solvents) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

If the handset has come into contact with liquid:

1. **Immediately switch the handset off and remove the batteries.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset, with the battery compartment open and the keypad facing down, in a dry, warm place **for at least 72 hours** (not in a microwave oven, convection oven, etc.).
4. **Do not switch on the handset again until it has completely dried.**

When it has fully dried, you should be able to use it again normally.

### Questions and answers


If you have any questions about the use of your telephone, you can contact us at any time at

[www.qiqaset.com/customercare](http://www.qiqaset.com/customercare)

The table below (page 29) contains a list of common problems and possible solutions.


## Troubleshooting

### The display is blank.

1. The handset is not switched on.
  - ▶ Press  and hold the End Call key.
2. The batteries are empty.
  - ▶ Charge or replace the batteries (page 8).

### The handset does not respond to a key press.

The keypad lock is activated.

- ▶ Press and **hold** the pound key  (page 12).

### Base Search and is flashing on the display screen.

1. The handset is outside the range of the base station.
  - ▶ Reduce the distance between handset/ base station.
2. The handset has been de-registered. **Please Register** is flashing on the display screen.
  - ▶ Register the handset (page 23).
3. The base station is not switched on.
  - ▶ Check the base station power cord (page 8).

### Handset does not ring.

The ring tone is switched off.

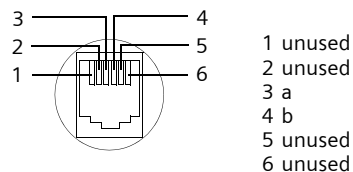
- ▶ Activate the ring tone (page 26).

### You cannot hear the ring tone/dialing tone.



Base station's phone cord has been replaced.


- ▶ When purchasing a new cord, make sure that it has the correct pin connections.

### ▶ Correct phone jack assignment



### The other party cannot hear you.

You have pressed the  or  key. The handset is on hold.

- ▶ Press the  key or the left display key to switch on the microphone again.

|   |
|---|
| <p><b>The incoming call number is not displayed through CID.</b></p> <p>Caller ID is not enabled.</p> <ul style="list-style-type: none"> <li>▶ You must ask the telephone network provider to activate Caller ID (CID).</li> </ul>                        |
| <p><b>You hear an error tone when keying an input.</b></p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"> <li>▶ Repeat the operation.<br/>Watch the display and refer to the operating instructions, if necessary.</li> </ul> |
| <p><b>You cannot listen to messages left on the voice mailbox.</b></p> <p>Your phone system is set for pulse dialing.</p> <ul style="list-style-type: none"> <li>▶ Set your phone system to tone dialing.</li> </ul>                                      |
| <p><b>You hear an error beep from the answering machine during remote operation.</b></p> <p>The system PIN entered is incorrect.</p> <ul style="list-style-type: none"> <li>▶ Enter the system PIN again (see page 27).</li> </ul>                        |
| <p><b>You cannot operate the answering machine via remote operation.</b></p> <p>Remote Access is not activated.</p> <ul style="list-style-type: none"> <li>▶ Activate Remote Access (see page 20)</li> </ul>  |
| <p><b>The answering machine does not record messages/has switched to "announce only".</b></p> <p>Its memory is full.</p> <ul style="list-style-type: none"> <li>▶ Delete old messages.</li> <li>▶ Play back new messages and delete.</li> </ul>           |

## Specifications

### Recommended batteries

Nickel-metal hydride (NiMH):

The handset is supplied with the authorized AAA batteries.

### Handset operating times/charging times

|              |                               |
|--------------|-------------------------------|
| Capacity     | 550 mAh                       |
| Standby time | Approx. 300 hours (12.5 days) |
| Talk time    | Approx. 10 hours              |
| Charge time  | Approx. 10 hours              |

The operating and charge times apply only when using the recommended batteries.

### Base station power consumption

In standby mode: approx. 1.5 watts

During a call: approx. 2 watts

### General specifications

|                                    |  |
|------------------------------------|--|
| DECT 6.0                           | is supported                                     |
| No. of channels                    | 30 duplex channels                               |
| Radio frequency range              | 1920–1930 MHz                                    |
| Duplex method                      | Time multiplex, 10 ms frame length               |
| Channel grid                       | 1728 kHz   |
| Bitrate                            | 1152 kbit/s                                      |
| Modulation                         | GFSK   |
| Language code                      | 32 kbit/s  |
| Transmission power                 | 10 mW, average power per channel                 |
| Range                              | up to 984 feet outdoors, up to 165 feet indoors  |
| Power supply input                 | 110 V ~/60 Hz                                    |
| Environmental operating conditions | +41°F to +113°F;<br>20% to 75% relative humidity |
| Dialing mode                       | DTMF (tone dialing)/DP (pulse dialing)           |

## Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**NOTICE:** The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.

This precaution may be particularly important in rural areas

**NOTE:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Industry Canada technical specifications.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: <http://www.gigaset.com/docs>.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.



## Appendix

12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a.) When the power cord is damaged or frayed.
- b.) If liquid has been spilled into the product.
- c.) If the product has been exposed to rain or water.
- d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
- e.) If the product has been dropped or physically has been damaged.
- f.) If the product exhibits a distinct change in performance.

13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrester.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

15. Emergency/911 numbers may not be dialed if the keypad is locked.

## BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.
2. DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
7. Periodically clean the charge contacts on both the charger and handset.

## Service (Customer Care)

---

**Customer Care Warranty for Cordless Products**  
**To obtain Customer Care Warranty service,**  
**product operation information, or for problem resolution, call:**  
**Toll Free: 1-866-247-8758**  
**[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)**

### **End-user limited warranty**

---

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866-247-8758.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

#### **1. WARRANTY PERIOD**

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

#### **2. EXCLUSIVE REMEDY**

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

#### **3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:**

- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
- Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.

## Appendix

- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
- Consumables (such as batteries and fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (*i.e.*, the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

## 4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

**1-866-247-8758**

## 5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

## 6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

## 7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT. Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

## 8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

## 9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

### 10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at <http://www.gigaset.com> or please call

**1-866-247-8758.**

Issued by

Gigaset Communications GmbH

Schlavenhorst 66, D-46395 Bocholt

Gigaset Communications GmbH is a licensee of the Siemens trademark.

© Gigaset Communications GmbH 2009

All rights reserved.

Subject to availability. Rights of modifications reserved.

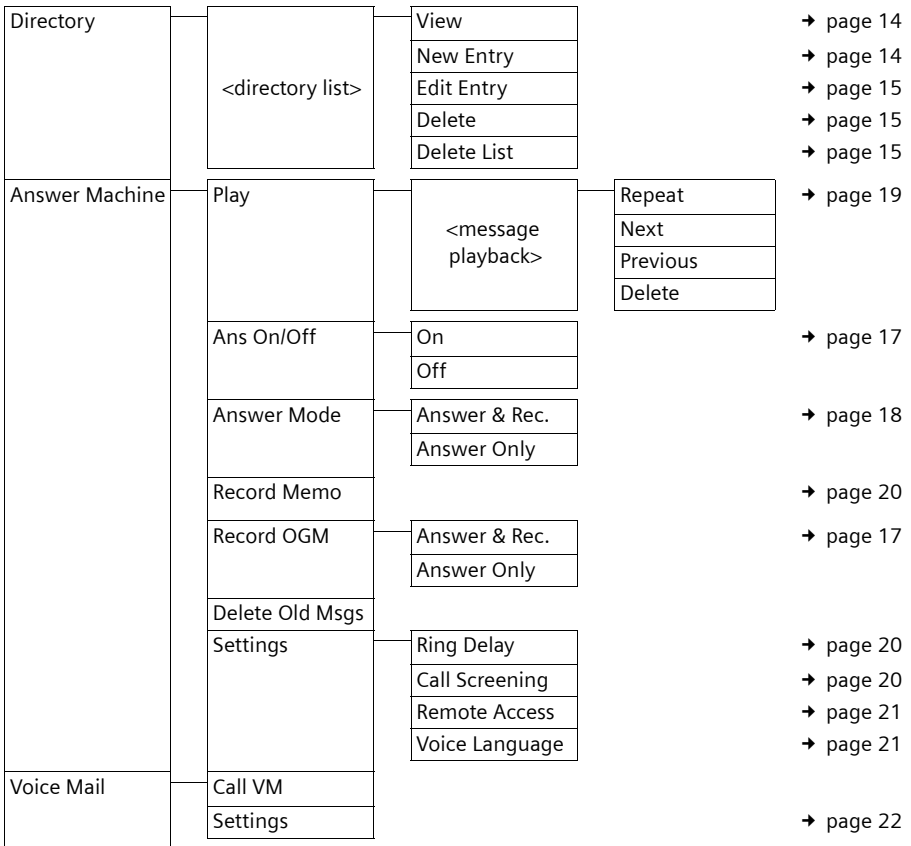
Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.

Part Number:A31008-M1970-R401-1-5819

© Copyright 2009.

# Menu of the handset



# Menu of the handset

|          |                |                 |           |
|----------|----------------|-----------------|-----------|
| Settings | Date/Time      | Set Date/Time   | → page 9  |
|          |                | Set Format      |           |
|          | Audio Settings | HS Ring Volume  | → page 26 |
|          |                | HS Ring Tones   |           |
|          |                | Base Ring Tones |           |
|          |                | Key Touch Tone  | → page 26 |
|          | Registration   | Register HS     | → page 23 |
|          |                | Unregister HS   | → page 23 |
|          |                | Select Base     | → page 23 |
|          | Handset        | Handset Name    | → page 25 |
|          |                | Language        | → page 25 |
|          |                | Display Contr.  | → page 26 |
|          |                | Auto Answer     | → page 26 |
|          | System         | Listening In    | → page 25 |
|          |                | Change PIN      | → page 27 |
|          |                | Area Code       | → page 10 |
|          |                | Dialing Mode    | → page 28 |
|          |                | Flash Duration  | → page 28 |
| Reset    |                | → page 28       |           |

# Index

---

## Symbols

- "External" (calls list) . . . . . 16
- "Withheld" (calls list) . . . . . 16

## A

- Access protection . . . . . 27
- Activating
  - answering machine . . . . . 17
  - answering machine
    - (remote operation) . . . . . 22
  - auto answer . . . . . 26
  - handset . . . . . 12
  - internal conference call . . . . . 25
  - keypad lock . . . . . 12
  - key-touch tone . . . . . 26
- Adjusting loudspeaker volume . . . . . 26
- Announcement mode
  - (answering machine) . . . . . 17, 18
- Announcement
  - (answering machine) . . . . . 18
- Answering machine . . . . . 17
  - activating/deactivating . . . . . 17
  - deleting messages . . . . . 19
  - playing back messages . . . . . 18, 19
  - recording an announcement/
    - announce only . . . . . 17, 22
  - remote operation . . . . . 21
- Area code . . . . . 10
- Attended call transfer . . . . . 24
- Auto answer . . . . . 11, 26

## B

- Base station
  - changing . . . . . 23
  - connecting and setting up . . . . . 7
  - connecting the device . . . . . 8
  - range . . . . . 7
  - restoring factory settings . . . . . 28
  - ring tone melody . . . . . 27
  - settings for connecting to PABX . . . . . 28
  - system PIN . . . . . 27
- Battery
  - fitting . . . . . 8
  - recommended batteries . . . . . 30
- Best base station . . . . . 23

## C

- Call
  - answering . . . . . 11
  - conference call . . . . . 25
  - ending . . . . . 11
  - external . . . . . 11
  - internal . . . . . 23
  - picking up from
    - answering machine . . . . . 20
    - transferring (connecting) . . . . . 24
- Call acceptance . . . . . 20
- Call duration . . . . . 11
- Call history . . . . . 15
- Call transfer . . . . . 24
  - attended . . . . . 24
  - unattended . . . . . 24
- Call waiting . . . . . 24
  - internal call . . . . . 24
- Caller ID . . . . . 11
- Calls list
  - "External" . . . . . 16
  - "Withheld" . . . . . 16
  - date and time . . . . . 16
  - dialing . . . . . 15
  - list type . . . . . 16
  - name of caller . . . . . 16
  - number of caller . . . . . 16
  - status of entry . . . . . 16
- Care of the telephone . . . . . 29
- Changing
  - dialing mode . . . . . 28
  - display language . . . . . 25
  - name of handset . . . . . 25
  - ring toner . . . . . 26
  - system PIN . . . . . 27
- Character set table . . . . . 14
- Charge saving function . . . . . 20
- Charge status display . . . . . 1
- Charge status of the batteries . . . . . 2
- Clear key . . . . . 13, 14, 15
- Conference call . . . . . 25
- Connecting base station to PABX . . . . . 28
- Control key . . . . . 12
- Controlling playback . . . . . 19
- Correcting incorrect input . . . . . 13
- Customer Care . . . . . 33



## Index

### D

- Date
  - calls list . . . . . 16
  - format . . . . . 9
- Deactivating
  - answering machine . . . . . 17
  - auto answer . . . . . 26
  - conference call . . . . . 25
  - handset . . . . . 12
  - keypad lock . . . . . 12
  - key-touch tone . . . . . 26
- Deleting
  - announcement
    - (answering machine) . . . . . 18
  - characters . . . . . 13
  - message . . . . . 19
- De-registering (handset) . . . . . 23
- Dialing
  - dialing mode . . . . . 28
  - from directory . . . . . 14
  - with Calls list . . . . . 15
- Directory . . . . . 14
  - managing entries . . . . . 14
  - opening . . . . . 12
  - storing entry . . . . . 14
- Display
  - changing display language . . . . . 25
  - contrast . . . . . 26
  - in idle status . . . . . 13
  - keys . . . . . 1, 13
  - number (CID) . . . . . 11
  - setting . . . . . 26
- DP (pulse dialing) . . . . . 28

### E

- Earpiece mode . . . . . 12
- End Call key . . . . . 1, 11
- Ending call . . . . . 11
- Ending, see Deactivate
- Entry
  - selecting (menu) . . . . . 6
  - selecting from directory . . . . . 14
  - status (calls list) . . . . . 16
- Example for menu input . . . . . 6

### F

- Fast access, voice mailbox . . . . . 22
- Flash time . . . . . 28
- Format of Date, Time . . . . . 9

### H

- Handset
  - activating/deactivating . . . . . 12
  - changing name . . . . . 25
  - changing the base station . . . . . 23
  - changing to best reception . . . . . 23
  - charge times . . . . . 30
  - contact with liquid . . . . . 29
  - de-registering . . . . . 23
  - display language . . . . . 25
  - idle status . . . . . 10, 13
  - key-touch tone . . . . . 26
  - loudspeaker volume . . . . . 26
  - operating time . . . . . 30
  - paging . . . . . 23
  - reception indicator . . . . . 7
  - registering . . . . . 23
  - registering with another
    - base station . . . . . 23
  - ring tone melodies . . . . . 26
  - ring tone volume . . . . . 26
  - settings . . . . . 25
  - setup . . . . . 8
  - transferring call . . . . . 24
  - turning on/off . . . . . 12
  - using several handsets . . . . . 23
- Handsfree talking . . . . . 12
- Hold with simultaneous internal call . . . . . 24

### I

- Icon
  - answering machine . . . . . 17
  - display . . . . . 13
  - keypad lock . . . . . 12
  - new message . . . . . 18
  - ring tone . . . . . 26
- Idle status
  - display . . . . . 10
  - returning to . . . . . 13
- Incorrect input (correction) . . . . . 13
- Internal
  - conference call . . . . . 25
  - making calls . . . . . 23
  - simultaneous internal call . . . . . 24
- Internal call . . . . . 23
  - call waiting . . . . . 24
- Internal conference . . . . . 25
- Internal conference call . . . . . 25

**K**

- Keypad lock . . . . . 12
- Keys
  - clear key . . . . . 13, 14, 15
  - control key . . . . . 12
  - display keys . . . . . 1, 13
  - End Call key . . . . . 1, 11
  - Last Number Redial key . . . . . 15
  - menu key . . . . . 13, 14
  - mute/unmute microphone . . . . . 1
  - On/Off key . . . . . 1, 12
  - pound key . . . . . 1, 12
  - star key . . . . . 1, 26
  - Talk key . . . . . 1
- Key-touch tone . . . . . 26

**L**

- Last number redial . . . . . 15
- Liquid . . . . . 29
- List
  - call history . . . . . 15
  - missed calls . . . . . 16
  - type (calls list) . . . . . 16
- Listening in during recording . . . . . 20
- Listening In function,
  - see internal conference
- Locating a handset . . . . . 23
- Lock keypad . . . . . 12
- Loudspeaker volume . . . . . 26

**M**

- Making calls
  - answering a call . . . . . 11
  - external . . . . . 11
  - internal . . . . . 23
- Medical equipment . . . . . 5
- Menu
  - key . . . . . 13, 14
  - menu guidance . . . . . 13
  - menu input . . . . . 6
- Messages . . . . . 17
  - deleting . . . . . 19
  - icon for new message . . . . . 18
  - playing back . . . . . 18
  - playing back old messages . . . . . 19
- Microphone . . . . . 1
  - mute/unmute . . . . . 1
- Missed call . . . . . 16
- Mute key . . . . . 1

**N**

- Name of a handset . . . . . 25
- Name of caller (calls list) . . . . . 16
- Network mailbox
  - see Voice mailbox
- Number
  - adding to directory . . . . . 15
  - display caller ID (CID) . . . . . 11
  - storing in directory . . . . . 14
- Number of caller (calls list) . . . . . 16

**O**

- On/Off key . . . . . 1, 12

**P**

- PABX
  - base station settings . . . . . 28
  - setting dialing mode . . . . . 28
  - setting flash time . . . . . 28
  - switching to touch tone dialing . . . . . 28
- Package contents . . . . . 7
- Paging . . . . . 23
- Playback (answering machine)
  - announcement . . . . . 18
  - controlling . . . . . 19
  - new messages . . . . . 18
  - old messages . . . . . 19
- Pound key . . . . . 1, 12
- Power consumption . . . . . 30
- Power supply unit . . . . . 5
- Protecting phone from access . . . . . 27
- Pulse dialing . . . . . 28

**Q**

- Questions and answers . . . . . 29

**R**

- Range . . . . . 7
- Reception indicator . . . . . 7
- Redial key . . . . . 15
- Registering (handset) . . . . . 23
- Remote control . . . . . 21
- Remote operation
  - (answering machine) . . . . . 21
- Ring tone
  - adjusting . . . . . 26
  - changing . . . . . 26
  - melodies (handset) . . . . . 26
  - setting melody (base station) . . . . . 27
  - setting volume . . . . . 26

## Index

### S

|                                      |       |
|--------------------------------------|-------|
| Safety precautions . . . . .         | 5     |
| Searching in the directory . . . . . | 14    |
| Setting                              |       |
| date . . . . .                       | 9     |
| time . . . . .                       | 9     |
| Setting up base station . . . . .    | 7     |
| Setup handset . . . . .              | 8     |
| Sound, see Ring tone                 |       |
| Special characters . . . . .         | 14    |
| Specifications . . . . .             | 30    |
| Star key . . . . .                   | 1, 26 |
| System settings . . . . .            | 27    |

### T

|                              |    |
|------------------------------|----|
| Talk key . . . . .           | 1  |
| Time                         |    |
| calls list . . . . .         | 16 |
| format . . . . .             | 9  |
| Touch tone dialing . . . . . | 28 |
| Troubleshooting . . . . .    | 29 |

### U

|                                    |    |
|------------------------------------|----|
| Unattended call transfer . . . . . | 24 |
| Unknown caller . . . . .           | 11 |

### V

|                               |    |
|-------------------------------|----|
| Voice mailbox . . . . .       | 22 |
| Volume                        |    |
| handset . . . . .             | 26 |
| handset loudspeaker . . . . . | 26 |
| ring tone . . . . .           | 26 |