

Gigaset

DX800 A all in one

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Gigaset DX800A all in one – your perfect companion

... impressive interior and exterior qualities. Go crazy for the vibrant 3.5" TFT display, first-class sound quality and elegant exterior. Your Gigaset can do a lot more than just make calls:

Bluetooth, Ethernet, DECT and FAX port

Connect your Gigaset to the Internet and your PC via Ethernet. Use your public and private directories on the Internet (→ page 34). Update the directory on your Gigaset, the directory on your Bluetooth mobile phone and your directory on the PC simultaneously.

Directory for up to 1000 vCards – calendar and appointments

Save phone numbers and other data to the local directory (→ page 33). Enter appointments and birthdays in the calendar and set reminders.

Use your Gigaset as a PABX

Register up to six handsets, connect a fax machine or a phone and a fax machine and use the three Gigaset answering machines. Assign each device its own phone number.

Go online with your Gigaset

Use your phone's info centre and have information specifically provided for the phone from the Internet shown on the display.

Do not disturb

Switch off the display backlight at night (→ page 42), use time control for calls (→ page 44) or reject unknown calls (→ page 44).

Other practical information

Transfer the directory from an existing Gigaset handset (→ page 33), use the programmable function keys (→ page 42) for quick dial or quick access to important functions, use the convenient headset (with cord or Bluetooth) to make calls, use your phone to read your e-mail (without a PC)

It's easy to configure your Gigaset DX800A all in one thanks to the wizards

These assist you with registering handsets and assigning send and receive connections to the base, handsets, fax machine and integrated answering machine (→ page 36).

Environment

Gigaset Green Home – be environmentally aware when using your phone. For details of our ECO DECT products, visit www.gigaset.com/service

User guide

This document only describes how to get started with your Gigaset phone and its key functions in condensed form.

There is a detailed description of the phone and its functions and a description of its Web configurator on the enclosed CD. You can make phone settings from the PC via the Web configurator (the phone's Web interface).

These instructions are in PDF format. You will need Adobe® Reader® to view these documents. You can also find Adobe® Reader® on the CD or on the Internet at www.adobe.com.

Further information about your phone can be found at:









www.gigaset.com/gigasetDX800A (Gigaset DX800A all in one)

After purchasing your Gigaset phone, please register it at www.gigaset.com/service – this will ensure any questions you may have or warranty services you request are dealt with even faster!

Have fun using your new phone!

Please note

To change the display language, proceed as follows:

- ▶ Press right on the control key .
- ▶ Press the following keys in sequence:      .
- ▶ Press the control key  to move up or down until the correct language is selected. Then press the right display key.




Base overview



- 1 **Adjust volume** = quieter; = louder
During a call/message playback: handsfree/receiver volume;
When an external call is being signalled: ringer volume
- 2 **Display**
- 3 **Display keys** (programmable; page 42)
In the menu: open a menu for further functions
- 4 **Message key** (page 32)
Access to call and message lists;
Flashes: new voice message
- 5 **End/back key** (red)
End, cancel function, go back one menu level (press briefly); back to idle status (press and hold)
- 6 **Function keys** (programmable; page 42)
- 7 **Redial**
Open redial list (page 32);
Start line selection
- 8 **Handsfree key**
Open redial list (page 32);
Start line selection in handsfree mode
- 9 **Mute key**
During a call: activate/deactivate microphone
- 10 *** key**
Activate/deactivate ringer (press and hold);
Text input: special characters table
- 11 **Back key** for answering machine
During playback: back to the start of the message/previous message
- 12 **Playing back messages**
Activate/deactivate message playback
- 13 **On/off key** for answering machine
Activate/deactivate assigned answering machine(s) (page 36)
- 14 **# key**
For text input: switch between upper/lower case letters and digits
- 15 **Control key**
- 16 **Microphone**

Display icons


Display in idle status (example)




Base status (two lines)	  	 6:30am
Current month/year	 02	Mo Tu We Th Fr Sa Su
Time	Mar 2011	01 02 03 04 05 06 07
Internal name	8:52am	08 09 10 11 12 13 14
	INT 1	15 16 17 18 19 20 21
		22 23 24 25 26 27 28
		29 30 31
	Calls	Calendar

Appointment entered in the calendar

Current date

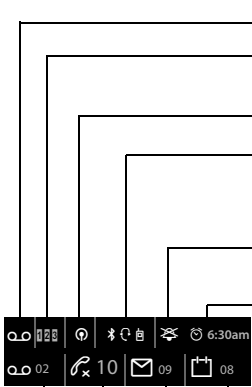Status display in the headers: The following icons are displayed dependent on the settings and the operating status of your base:




- Answering machine icon
- 1/2/3 numbers of the activated answering machines (orange = on)
- Eco mode activated (green)
- Bluetooth activated
additionally  if Bluetooth headset connected,
additionally  if Bluetooth GSM mobile connected
- Ringer deactivated (page 44)
Replaced by , when alert tone activated
- Alarm clock switched on and wake-up time set

Number of new messages:


- ◆ In the missed alarms list
- ◆ In e-mail list
- ◆ In the missed calls list (page 32)
- ◆ On the network mailbox

Signalling:

External call

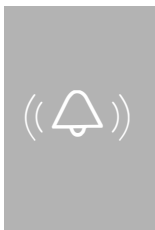


Internal call

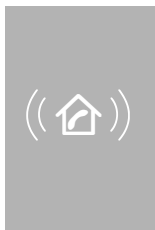

Answering machine is recording



Alarm

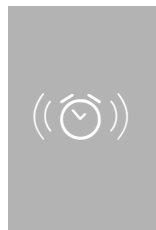

Appointment / anniversary



Contents

Gigaset DX800A all in one – your perfect companion	1
Base overview	3
Display icons	4
Safety precautions	7
First steps	8
Checking the package contents	8
Setting up the base	9
Connecting the base	10
Setting up the base – installation wizard	16
Date/time	28
Guide	29
Making calls	30
Making an external call	30
Making an internal call	30
Ending a call	30
Accepting a call	31
Activating/deactivating handsfree/open listening mode	31
Muting the base	31
Making calls using network services	31
Using lists	32
Redial list	32
Call lists	32
Opening lists with the message key	32
Using directories	33
Using the local base directory	33
Using online telephone directories	34
Using the private net directory	34
Using the Gigaset.net directory	35
Operating the base's answering machine	36
Operating via the base	36
Activating/deactivating call screening	38
Operating when on the move (remote operation)	38
Registering Bluetooth devices	40
Using a Bluetooth headset	40
Using GSM mobile phones – Link2mobile	41

Contents

Setting up the base	42
Accessing functions and numbers quickly	42
Setting the display	42
Changing the handsfree/receiver volume	43
Setting ringers	43
Activating/deactivating advisory tones	44
Changing the system PIN	44
Entering your own local area code	45
Industry Canada Certification	46
FCC / ACTA Information	46
Safety precautions	47
Service (Customer Care)	49
End-user limited warranty	49
Questions and answers	51
Menu tree	52
Index	56
Insert strip – labelling function keys	59

Safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone.

Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the underside of the base.

Use only the cables supplied for fixed line, LAN and receiver connection and connect these to the intended port only.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment e.g., doctor's surgery.



Do not install the phone in a bathroom or shower room. The phone is not splash-proof.



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your phone to a third party, make sure you also give them the user guide.



Remove faulty telephones from use or have them repaired by our Service team, as they could interfere with other wireless services.

Please note

- ◆ Please note that only terminals that are operated in-house (inside buildings) may be connected to the analogue TAE.
- ◆ Not all functions described in this user guide are available in all countries and with all providers.

First steps

Checking the package contents



- 1 One base
- 2 One receiver to be connected to the base
- 3 One (coiled) cable for connecting the handset to the base
- 4 One power cable for connecting the base to the mains power supply
- 5 Two cables (6 pin with 2 mini western jacks 6/6) for connecting the base to the analogue fixed line
- 6 One Ethernet (LAN) cable (Cat 5 with 2 RJ45 modular jacks) for connecting the base to a router (LAN/Internet) or PC
- 7 This quick guide
- 8 One CD

Firmware updates

This user guide describes the functions of your base from firmware version 56.00.

Whenever there are new or improved functions for your Gigaset, firmware updates are made available for you to download to your base. If this results in operational changes when using your base, a new version of this user guide or the necessary amendments will be published on the Internet at

www.gigaset.com.

Select the product to open the relevant product page for your base, where you will find a link to the user guide.

Setting up the base

The base is designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the base at a central point in the building.

Please note

If you wish to operate handsets from the base, consider the range of the base. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when **Eco mode** is activated.


The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Warning

- ◆ Never expose the telephone to any of the following: Heat sources, direct sunlight or other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the base


The following diagram is an overview of all connections for your base. The individual connections are described in detail below. In order for you to make calls on your phone via the fixed line and VoIP, you need to connect the base to the fixed line and Internet (see diagram below).

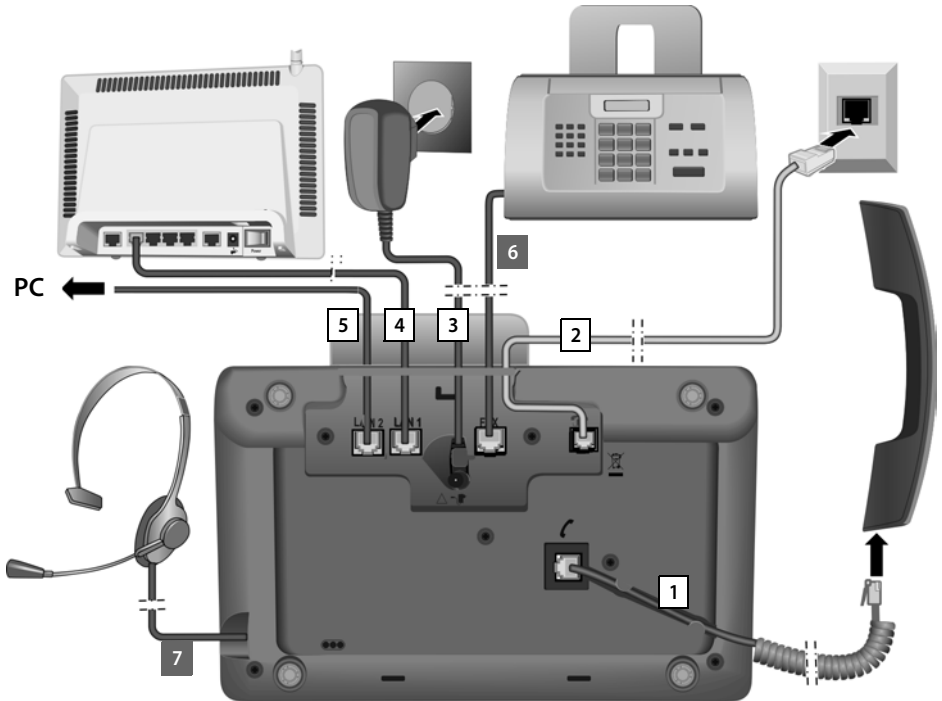


Follow the steps in the order given below:


- 1 Connect the receiver to the base.
- 2 Connect the base to the telephone network (analogue fixed line).
- 3 Connect the base to the mains power supply.
- 4 Connect the base to the router for accessing the Internet (connection via router and modem or via router with integrated modem) and for configuring the base via the Web configurator.
- 5 You can connect a PC to the base via the second LAN socket **LAN2** (optional) – e.g., for connecting the PC to the router. The base takes on the task of a switch.
- 6 Connect the base to a fax machine or phone.
- 7 Connect a wire-bound headset to the base.


1. Connecting the receiver to the base

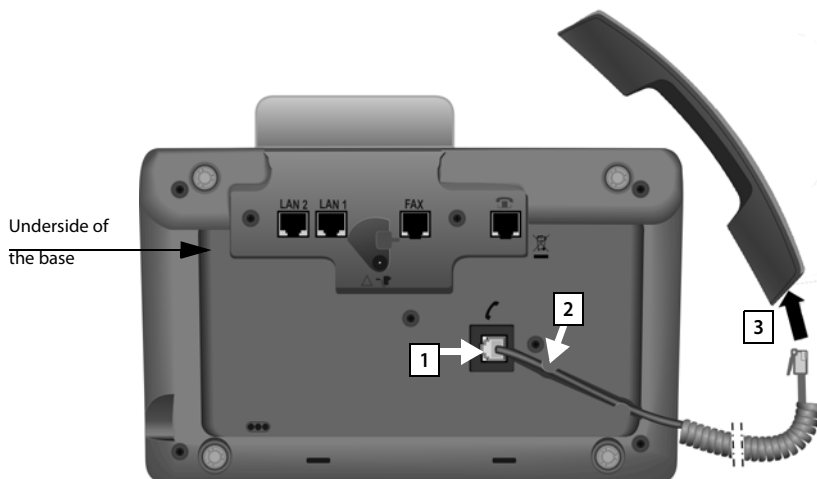


- 1 Insert the jack, which can be found on the longer straight end of the connection cable, into the connection port marked with the symbol  on the underside of the base.
- 2 Place the straight part of the cable in the cable recess provided.
- 3 Insert the other jack on the connection cable into the port on the receiver.


2. Connecting the base to the telephone network

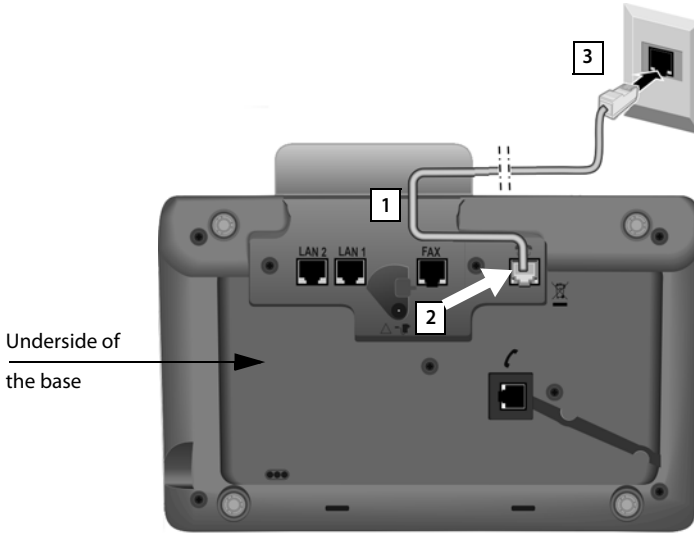

- 1 Pass one end of the phone cable from behind through the recess in the housing. Use the TAE connection cable with RJ11 plug to connect to the analogue fixed line (→ page 8, cable 5).
- 2 Plug the telephone cable into the port marked with the  icon on the underside of the base.
- 3 Then connect the telephone cable to the fixed line connection.

3. Connecting the base to the mains power supply

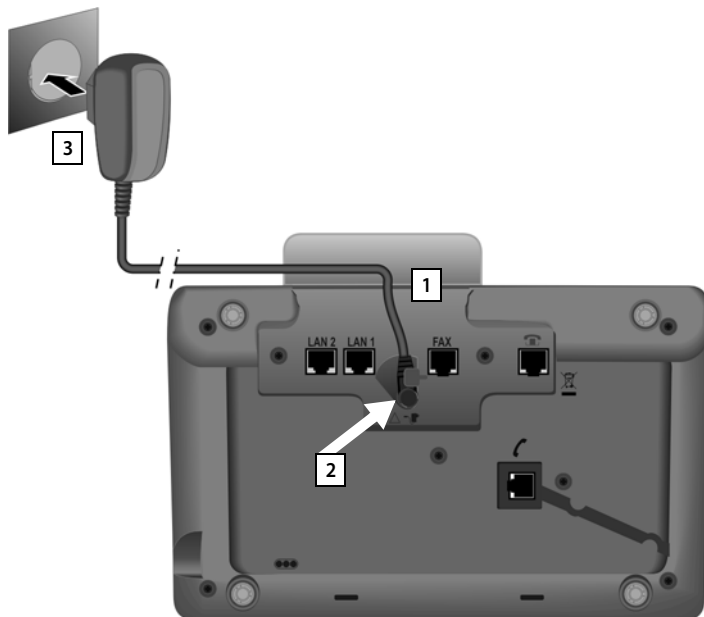

- 1 Insert the small jack on the power cable from the rear into the recess in the housing.
- 2 Plug the jack into the port marked with the  icon on the underside of the base.
- 3 **Then** connect the power cable to the mains power supply.

Warning

- ◆ Keep the power cable **plugged in at all times** for operation, as the base does not work without a mains connection.
 - ◆ Use only the power and telephone cables **supplied**.
- Pin connections on telephone cables can vary. The correct pin connections can be found in the long user guide on the enclosed CD.

Now you can make calls with your base via the fixed line, and can be reached via your fixed line number!

An answering machine on the base is set with a pre-recorded announcement in answer and record mode (→ page 36).

4. Connecting the base with a router (Internet) or PC

Your base features two LAN connections, via which you can connect the base to a router and/or PC.

Connection to a router is required for Internet telephony VoIP (Voice over Internet Protocol). You can set up and configure up to six accounts (VoIP phone numbers) from one or several VoIP provider(s) on the base.

Your base also needs to be connected to the router for the following features on your phone:

- ◆ You wish to be notified as soon as new software is available for your base on the Internet and load this onto your base.
- ◆ The date and time on your base should be updated by a time server on the Internet.
- ◆ You wish to go online with your base, i.e., use the **Info Center**, display info services or search for phone numbers in an online directory.


The base will have to be connected to a PC (via a router or directly) if you wish to use the following features of your base:

- ◆ You wish to set up the base using its Web configurator.
- ◆ You wish to use the additional PC software, "**Gigaset QuickSync over Ethernet**" to dial numbers via the PC (e.g., numbers from a PC directory) or to load images or melodies from the PC to your base.

For Internet access you need a router connected to the Internet via a modem (this may be integrated in the router).

Please note

- ◆ For telephony via the Internet, you need a broadband Internet connection (e.g., DSL) with flat rate (recommended) or volume rate and a router that connects your phone to the Internet. You can find a list of recommended routers on the Internet at:
www.gigaset.com/service
From here, go to the FAQ page and select your Gigaset IP telephone. Search for "Router", for example.
- ◆ **Data protection notice:** Further information about the Gigaset.net service data saved can be found at
www.gigaset.net/privacy-policy

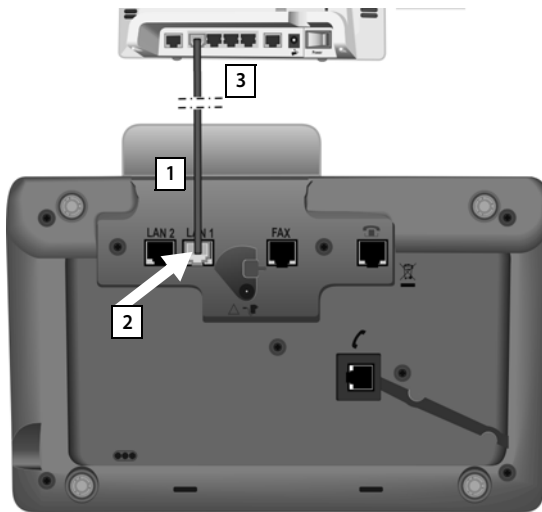

- 1 Guide the end of the Ethernet cable provided (Cat 5 with 2 RJ45 modular jacks) from the rear through the recess in the housing.
- 2 Plug the jack on the Ethernet cable into the LAN port on the underside of the base.
- 3 Then insert the second Ethernet cable plug into a LAN socket on the router or PC.

Data protection notice

When the device is connected to the router, it automatically contacts the Gigaset support server to make it easier for you to configure the devices and to enable communication with the Internet services.

For this purpose, every device sends the following device-specific information once every day:

- ◆ Serial number/item number
- ◆ MAC address
- ◆ Private IP address for the Gigaset in the LAN/its port numbers
- ◆ Device name
- ◆ Software version

On the support server, this information is linked to the existing device-specific information:

- ◆ Gigaset.net phone number
- ◆ System-related/device-specific passwords

Further information about the Gigaset.net service data saved can be found at www.gigaset.net/privacy-policy

You are now able to establish VoIP connections within Gigaset.net (→ page 35).

Setting up the base – installation wizard

As soon as the phone is connected to the mains power supply, the firmware is started. The telephone checks which telephone connections it is connected to.

If no connections have been generated on the base yet, the installation wizard starts. The wizard allows you to make all necessary settings for your phone.

The following message appears in the display.



▶ Press the display key **Yes** to start installation.



Please note

- ◆ The installation wizard only starts if no connection has been configured on the base yet. If connections have already been configured, you can start the IP wizard (individually) via the menu, if necessary.
- ◆ Use only the installation wizard on the base, but **not** on a registered handset.

Several individual wizards are combined to form the installation wizard.. The following individual wizards are included in the installation wizard:

1. IP wizard
2. Registration wizard
3. Connection wizard

Please note:

- ◆ If the installation wizard is activated, no other handset can access the **Settings** menu on the base.
- ◆ To quit the installation wizard before the process is complete, press and **hold** the red end key . All changes you have already saved using **OK** are retained.
- ◆ To skip a setting, press left on the control key  or the display key **No**.

1. IP wizard – making VoIP settings

You will see the following display:



Before you can use the Internet (VoIP) to phone any other numbers on the Internet, the fixed line or the mobile network, you need the services of a VoIP provider who supports the VoIP SIP standard.

Prerequisite: You have registered with a VoIP provider (e.g., via your PC) and set up at least one VoIP account (IP account).

To use VoIP, you now need to enter the access data for your VoIP account. You will receive all the necessary data from your VoIP provider. This will include:

Either:

- ◆ Your user name
(if required by the VoIP provider).
This is the user name of your IP account (caller ID), frequently identical to your phone number.
- ◆ Your authentication name or login ID
- ◆ The (login) password registered with the VoIP provider
- ◆ General settings for your VoIP provider (server addresses etc.)

Or:

- ◆ An auto configuration code
(activation code)


Your Gigaset phone's IP wizard can help you make these entries.

Please note

You can configure up to six VoIP connections. In the phone setup process (no VoIP connection has been configured yet), you configure one VoIP connection. You can configure additional VoIP connections later with the IP wizard or Web configurator.


Starting the IP wizard

Prerequisite: The base is connected to the router. Your router is connected to the Internet (→ page 14).


- ▶ Press on the centre of the  control key or on the right display key **Yes** to start the IP wizard.




Information about the IP wizard appears in the display.

- ▶ Press the bottom of the control key  to scroll down.


- ▶ Press the **OK** display key to continue.

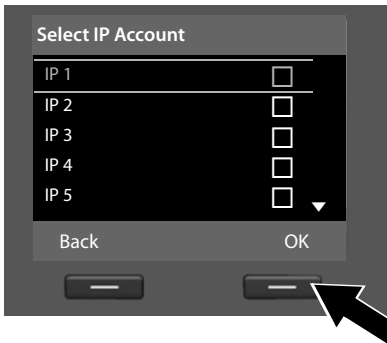

A list of all possible IP connections is shown in the display (**IP 1** to **IP 6**). VoIP connections that are already configured are marked with .

- ▶ If necessary, press down on the control key  to select a connection.
- ▶ Press the **OK** display key to continue.

You will see the following display:

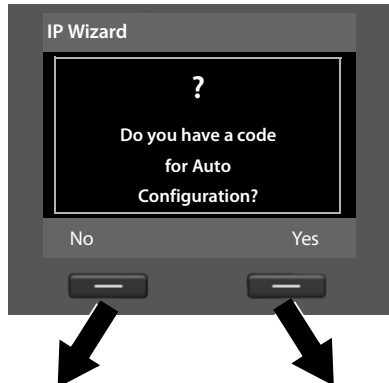

Your VoIP provider has supplied you with an **authentication name/password** and, where applicable, a user name:

- ▶ Press the key below **No** on the display screen.
- ▶ For further information, please see "Downloading VoIP provider data" on page 19.

You have received an **auto configuration code** (Activation Code) from your VoIP provider:

- ▶ Press the key below **Yes** on the display screen.
- ▶ For further information, please see "Entering the auto configuration code" on page 19.

Entering the auto configuration code



- ▶ Using the keypad, enter the auto configuration code you received from the provider (max. 32 characters).
- ▶ Press the key below **OK** on the display screen.

All data necessary for VoIP telephony is loaded directly from the Internet to your phone.

When all the data has been successfully loaded onto your phone, **Your IP account is registered at your provider** appears on the display.

- ▶ For further information, please see "2. Registration wizard" on page 23.

Downloading VoIP provider data

The connection wizard establishes a connection with the Gigaset configuration server on the Internet. Various profiles with general access data for different VoIP providers can be downloaded here.


After a brief period you will see the following display:



A list of countries is loaded.

- ▶ Press up or down on the control key repeatedly until the country in which you wish to use the phone is selected in the display.

- ▶ Press the key below **OK** on the display screen to confirm your selection.

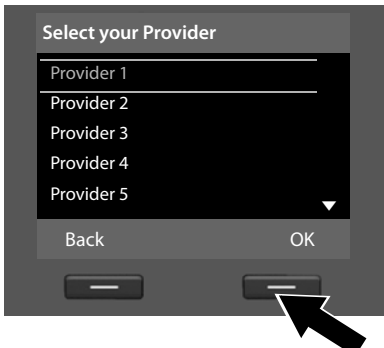

A list of the VoIP providers for which a profile with the general access data is available on the configuration server is displayed.

- ▶ Press up or down on the control key (↕) repeatedly until your VoIP provider is selected in the display.
- ▶ Press the key below **OK** on the display screen to confirm your selection.

The general access data for your VoIP provider will be downloaded and saved on the phone.

You have not been able to download your provider's data

If your VoIP provider does not appear in the list, i.e., its general data is not provided for download, you must cancel the IP wizard:

- ▶ Briefly press the red end key (—) repeatedly until **Start IP installation wizard?** appears in the display again, and then on the display key **No**.

You can perform the subsequent steps of the installation wizard.

You must then make the required VoIP provider and IP account settings using the Web configurator. You receive the general provider data from your VoIP provider.

You can change the assignment of the VoIP connection as send/receive connection at a later time via the telephone menu or the Web configurator.

Entering user data for your VoIP account

You will now be prompted to enter your personal access data for your VoIP account.

The following are provider-dependent:

- ◆ **User Name, Authentication Name, Authentication Password**


Please note ...

... when entering access data, it is case sensitive.

To switch between upper and lower case and digits, press the **#AA** key (several times if necessary). You can see briefly in the display whether upper case, lower case or digit input is selected.

Characters entered incorrectly can be deleted using the left display key below **< C**. The character to the left of the cursor is deleted.

You can navigate within the input field using the control key **↔** (left/right).

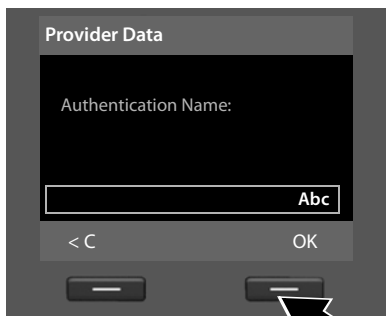

- ▶ Using the keypad, enter the authentication name that you received from your VoIP provider.
- ▶ Press the key under **OK** on the display screen.



- ▶ Use the keypad to enter your password.
- ▶ Press the key under **OK** on the display screen.

First steps



- ▶ Using the keypad, enter the user name that you received from your VoIP provider.
- ▶ Press the key under **OK** on the display screen.



Once you have made all the necessary entries, the VoIP wizard tries to register the base with the VoIP provider.


After successful registration, the message "**Your IP account is registered at your provider**" appears in the display.

The registration wizard starts.

Now you can make calls with your phone over the Internet as well as the fixed line! You can be reached via your VoIP number and your fixed line number!

2. Registration wizard

The registration wizard helps you register handsets to the base.

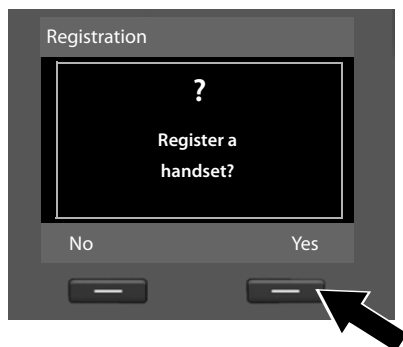

Please note

Press the left display key **No**, if you do not wish to register any handsets. This closes the registration wizard and the connection wizard is started (→ page 24).

- ▶ Press the display key **Yes**. The base changes to registration mode.




- ▶ Start the registration **on the handset** within approx. **60 seconds** according to the handset's user guide.

Info

Press the display key **Info** to display information about registering handsets.

If the handset has been successfully registered on the base, you will see the following display (for approx. three seconds):

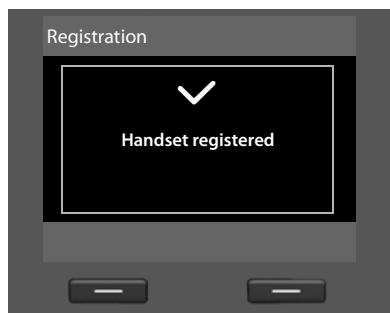

Once a Gigaset handset has been successfully registered, it will change to idle status. The handset's internal name is shown on the display (**INT 2**, **INT 3** to **INT 7**).

Then "**Register a handset?**" is shown in the display again (see page 23).

- ▶ Press the display key **Yes** if you wish to register another handset and perform the steps listed above with this additional handset.
Press **No** to close the registration wizard and start the connection wizard.

Please note

- ◆ By default, the base is assigned the internal name **INT 1** and the internal number 1.
- ◆ The base assigns the lowest free internal number to the handset (possible numbers: 2–7). The handset's internal name is shown in the display e.g., **INT 2**. This means that the handset has been assigned the internal number 2.
- ◆ The internal numbers and names can be changed.

3. Connection wizard

Using the connection wizard, you can assign the previously configured connections (fixed line connection, Gigaset.net and VoIP connections) to the internal parties as receive or, if applicable, as send connections. Internal parties are the base, the registered handset, the answering machine of the base and the connected FAX device, if applicable.

- ◆ **Receive connections** are numbers (connections) on which you can be called. Incoming calls are only diverted to those internal parties (end devices) for whom the associated connection is assigned as a receive connection.
- ◆ **Send connections** are the numbers that are sent to the called party. The network provider calculates charges based on the send connections. You can assign each internal party a number or the associated connection as a permanent send connection.
- ◆ Each connection (number) of your phone can be both a send as well as a receive connection. You can assign each connection to several internal parties as a send and/or receive connection. It may only be assigned to an answering machine as a receive connection.

Default assignment


All connections of the base are assigned as receive connections to the base, the registered handsets and the local answering machine 1 at registration/start-up.

If the phone is connected to the analogue fixed line, the fixed line number is assigned to the devices as a send connection.


Starting the connection wizard



- ▶ Press the display key **Yes**, if you wish to change the setting for the send and receive connection of the **base** (internal name **INT 1**).
- ▶ Press the display key **No**, if you do not wish to change the setting for the base.

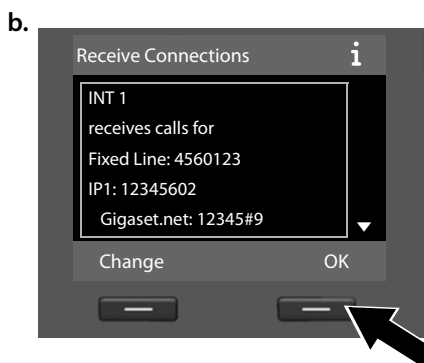

The list of receive connections currently assigned is displayed.


Press down on the control key  to scroll through the list if necessary.

- ▶ Press the display key **Change**, if you wish to change the receive connection setting for the base.
- ▶ Press the display key **OK**, if you do not wish to change the setting.


A Gigaset.net phone number is already assigned to the base on delivery. You can also assign the Gigaset.net number to all connected devices as a receive connection.

Press **OK** to skip the following steps. Continue from → e.

Press **Change** to display the following:

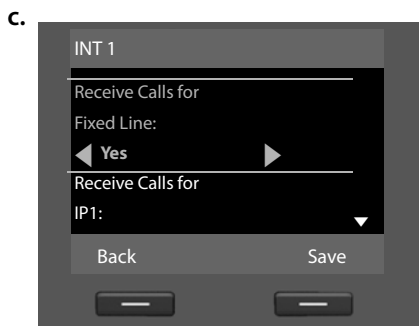


If you do not want calls to your fixed line number signalled on the base:

- ▶ Press **right** on the control key  to set to **No**.



d.




- ▶ Press **down** on the control key  to switch to the next number. Select either **Yes** or **No** as described above.
- ▶ Repeat the steps for each number.

- ▶ Press the display key **Save** once you have finished configuring the settings for the base.

The updated list of receive connections is displayed one more time for you to check.

Press the display key **OK** to confirm the assignment.

e.

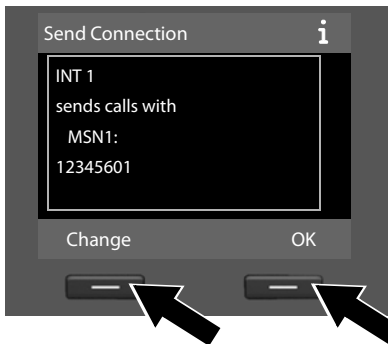


The send connection currently set for the base is displayed: **Fixed Line** for connection to the analogue fixed line.


- ▶ Press the display key **OK**, if you do not wish to change the setting. Skip the following step.
- ▶ To change the setting, press the display key **Change**.

f.



If the base is to make calls via a different connection/phone number:

- ▶ Press **right** on the control key  repeatedly, until the required connection is displayed.

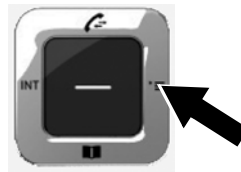

- ▶ Press the display key **Save** to save the settings.

If handsets are already registered to the base, you are requested to assign send and receive connections for the handsets. The following is shown in the display:

Assign connections to handset INT ...?


- ▶ Perform steps a. to f. for each registered handset.

Subsequently, you are requested to assign the receive connections to the three answering machines on the base. "Assign connections to answering machine ?" is shown in the display.

▶ Perform steps a. to d. for each answering machine.


Please note: Each connection may only be assigned to one of the three local answering machines as a receive connection. If you assign a receive connection to an answering machine and this connection is already assigned to another answering machine, the "old" assignment is deleted.

After successfully configuring the settings, you will briefly see the following display:

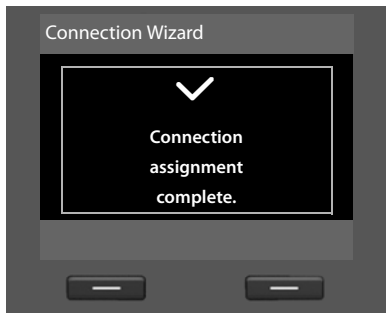

Completing the installation

This completes the installation. The following is shown in the display:

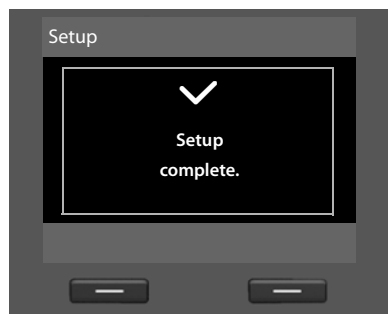

Afterwards, the base changes to idle status (for an example of the display in idle status → page 4).

The answering machines of the base to which you assigned a receive connection are activated and switched on in answer and record mode with a standard announcement (→ page 36).

Please note

To protect your phone and its system settings from unauthorised access, please define a 4-digit number code (system PIN) known only to yourself. This code must be entered before you can register/de-register handsets or alter your phone's VoIP or LAN settings.

The default system PIN is 0000 (4 x zero). For instructions on changing the PIN (→ page 44).

Date/time

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, the date and time must be set.

There are two methods of setting the date and time:

- ◆ You can configure your base so that once the base is connected to the Internet, the date and time is transferred from a time server.
You can activate/deactivate the synchronisation with a time server via the Web configurator. Detailed information can be found in the Web configurator's user guide on the enclosed CD.
- ◆ You can set the date and time manually via the base menu or one of the registered handsets.

Setting the date and time manually

If the date and time have not been set, the time will flash in the base's idle display (00:00) and **Time** is displayed above the right display key.



- ▶ Press the key under **Time** on the display screen.
Enter month, day and year as an 8-digit number via the keypad, e.g., **0** **7** **14** **0** **11** for 07/14/2011. The displayed date is overwritten.
- ▶ Press down on the control key **↓**, to scroll to the time entry line.
- ▶ Enter the hours and minutes in 4-digit format via the keypad, e.g., **0** **7** **15** for 07:15 am.
- ▶ If necessary, press the display key **am/pm** to switch between **am** and **pm**.
- ▶ Press the display key **Save** to save the settings.

Guide

Now you have successfully set up your base, you will certainly want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.

This user guide only briefly describes a few functions of your phone. You can find a detailed description of the entire range of functions of your phone in the **detailed user guide** on the enclosed CD. The presentation of procedures used in the following are also described here.

Users who are unfamiliar with menu-driven devices such as other Gigaset phones can read the detailed user guide to find out how to operate the base.

You will also find a user guide for the **Web configurator** of your telephone on the enclosed CD. You can use it to make settings for your phone on the PC.

Information on is located here.
Making external calls and accepting calls	▶ page 30
Setting the ringer and volume	▶ page 43
Setting the receiver volume	▶ page 43
Assigning function keys on the base	▶ page 42
Using the local directory and online directories on the Internet	▶ page 33
Transferring directory entries from existing Gigaset handsets to the base	▶ page 33
Registering Bluetooth devices, using "Link2mobile"	▶ page 40

If you have any questions about using your phone, please read the tips on troubleshooting in the phone's long user guide or contact our Customer Care team.

Making calls

If the display backlight is deactivated (→ page 42), it can be reactivated by pressing any key.

Making an external call

External calls are calls made via the public telephone network (fixed line, mobile phone network) or via the Internet (VoIP).

Please note

If you use VoIP to make a call to the fixed line, you may also have to dial the area code for local calls (depending on the provider). You can specify via the Web configurator that your own area code is dialed automatically

To make an external call, you need to define one of the base connections as a send connection. You have the following options:

- ◆ Assign a connection to the base/handset as a send connection permanently.
- ◆ Select a send connection on the base/handset each time you make a call.

Permanently assigned send connection

Prerequisite:

A specific connection is assigned to the base as a send connection.




Enter the number and pick up the receiver. The number is dialed.

Or:



Pick up the receiver and enter the number. The number is dialed after approximately 3.5 seconds.

Instead of picking up the receiver, you can also press the handsfree key  or the **Headset** (→ page 42) function key to make

a call using the handsfree function or headset.

The dialled number and the send connection used are shown in the display (e.g., via **IP2**). The connection name you have assigned is displayed where available. Otherwise, the standard name is used.

Connection selection at each call

Prerequisite: "Select at each call" is

assigned to the base instead of a send connection (→ page 24).



Enter the number and pick up the receiver. The list of all the base's connections is displayed.



Select a connection.



Press the display key or the middle of the control key.

Making an internal call

Internal calls using registered handsets are free of charge.

Calling a specific handset



Initiate internal call.



Select the internal party.



Lift the receiver.

If the internal party cannot be reached (e.g., outside of range), does not answer or if there are already three internal connections, the busy tone sounds.

Calling all internal parties ("group call")




Press and hold left on the control key.


All handsets are called.

Ending a call




Replace the receiver or press the red end key .

If you make a call with a headset:

- ▶ Press the **Headset** function key or red end key  on the base.


Accepting a call

An incoming call is indicated in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

Please note


Only calls to the receive connections assigned to the base are signalled.

Accept the call by:

- ▶ Picking up the receiver.
- ▶ Pressing the handsfree key .
- ▶ You can also divert the call to the answering machine (→ page 38).

To deactivate the ringer, press the **Silence** display key. You can accept the call as long as it is displayed on the screen.

Activating/deactivating handsfree/open listening mode

- ▶ Press the handsfree key  to activate/deactivate open listening in receiver mode.

Activating handsfree mode while dialling



Enter the number and press the handsfree key.

Ending the call:



Press red end key.

Switching from receiver to handsfree mode

Prerequisite: You are making a call via the receiver or via the receiver with open listening mode activated.



Press and hold the handsfree key until you have put the receiver down.





If the handsfree key does not light up, press the key again.

Switching from handsfree to receiver mode




Pick up receiver. The speaker on the base is deactivated.

Please note

In handsfree mode, you can adjust the handsfree volume with the  and  keys.

Muting the base

Using the mute key  you can switch the microphone of the receiver, the base (handsfree mode) and a connected headset off or on again during an external call (also during a conference call or call swapping). If the microphone is deactivated, **Microphone is off** is displayed.

Making calls using network services

Network services are functions that your network provider makes available to you, such as:

- ◆ Diverting calls to another telephone connection
- ◆ Anonymous calling
- ◆ Making consultation calls during a call
- ◆ Swapping between two callers
- ◆ Setting up a conference
- ◆ Transferring calls to another phone
- ◆ Initiating a ringback when busy/no reply
- ◆ CID 2.5 services

The long user guide on the enclosed CD describes in detail how to use these network services on your base.

Using lists




The options are:

- ◆ Redial list
- ◆ Call lists
- ◆ Missed alarms list
- ◆ Answering machine list



Redial list

The redial list contains the 20 numbers last dialed with the base (max. 32 digits).


Manual redial

-  Open the redial list.
-  Select an entry.
-  / **Dial** Lift the receiver or (a line is already in use) press the display key **Dial**.

Automatic redial

-  In idle status: press key.
-  Select an entry.
- Options** → **Automatic Redial**
Select and press **OK**.

The number is automatically dialed at fixed intervals. "Open listening" is activated, the microphone is deactivated.

- ▶ If the party answers:
Lift receiver .
- ▶ To cancel the redial:
Press any key.

Call lists

Prerequisite: Calling Line Identification Presentation (CLIP)


The options are:

- ◆ Accepted calls list
- ◆ Outgoing calls list
- ◆ Missed calls list
- ◆ List of all calls

Opening call lists:

- ▶ In idle status: Press  or  → .
- ▶ Select list using  and press **OK**.


To call a number from the list:

- ▶ Select an entry. Lift receiver .


To copy the number to the directory:


- ▶ Select an entry.
Options → Copy to Directory **OK**.

Opening lists with the message key

Use the message key  to open the following lists:

- ◆ Answering machine list or network mailbox, if your network provider supports this function and quick dial is set for the network mailbox
- ◆ Missed calls list
- ◆ Missed alarms list

An advisory tone sounds as soon as a **new entry** appears on a list. The message key  flashes, as soon as a new voice message is recorded. In **idle status**, icons are shown on the display to indicate new messages (→ page 4).

After pressing the message key , you can see all lists containing messages and the network mailbox list.

To open the list:

Press the  key. Select list.

Using directories


The options are:

- ◆ (Local) directory (→ page 33)
- ◆ Public online directory/classified directory on the Internet (→ page 34)
- ◆ (dependent on provider) Private online directory on the Internet
- ◆ Gigaset.net directory (→ page 35)

Using the local base directory

Not only can you create a personalised directory for your base, but you can send entries from it to handsets too (→ page 33).

Opening the directory

- ▶ In idle status or during an external call: press down on the control key .

 →  → **Directory**

Saving number(s)

 → **<New Entry>**

- ▶ You can enter data in the following fields:

First Name:/Last Name:

Enter first name and/or surname.

Phone (Home):/Phone (Office):/

Phone (Mobile):

Enter a number in at least one of the three fields.

E-Mail: (optional)

Enter e-mail address.

Anniversary: (optional)


Select **On** or **Off**.

With setting **On**:

Enter **Anniversary (Date)** and **Anniversary (Time)** and select reminder type: **Anniversary (Signal)**.

Caller Melody (VIP):/



Caller Picture: (optional)

Label the entry as . Recognize VIP calls by the ringer. Select a ringer and picture, if required. **Prerequisite:** Calling Line Identification

Save

Press the display key.

Editing entries



 →  (Select entry).

View Edit

Press the display keys one after the other.

- ▶ Perform changes and save.

Dialling with the directory

 →  (Select entry).



Pick up the receiver.

Or during a call:

Dial

Press the display key.

If the entry contains several numbers, the icons for the numbers stored are displayed:

 /  / .



Select a number.



Dial

Press the display key.

Exchanging directory/entries with handsets

Prerequisites: The handset is registered on the base and supports this function. The base is in idle status.

Sending

 →  (Select entry) → **Options**
→ **Copy Entry/Copy List** → **to Internal**



Select the handset from the internal list and press **OK**.

Receiving

- ▶ Start the transfer on the handset.

The transfer appears in the base display.

Please note

- ◆ Incoming external calls interrupt the transfer.
- ◆ Entries with identical numbers are not overwritten.
- ◆ Anniversary reminders, pictures and sounds are not transferred.

Using online telephone directories

You can use public online directories (= online directories and classified directories e.g., "Yellow Pages") depending on your provider. You can set the online telephone directory using the Web configurator.

When the base is in idle status:



Press and **hold**.




Select an online telephone directory and press **OK**.


Searching for an entry

- ▶ Enter name/business type **and** city or number. Start the search with **Search**.
- ▶ If several towns/cities are listed with the same name, select the town/city and continue the search.
- ▶ If the hit list is too long, start a detailed search using **Detail** or **Options** → **Refine search** and refine or expand the search criteria (e.g., with street name).
- ▶ If no party is found, you can start a new search using **New**.

Calling parties

- ▶ Select an entry in the hit list and pick up the receiver .

If the entry contains several phone numbers, these are displayed in a list.

- ▶ Using , select a number and press the display key **Dial**.

Using the private net directory

Some providers offer users the option of creating and managing a private net directory on the Internet.

- ▶ You can create your private net directory using your PC's Web browser.

In idle status:




Press and **hold**.




Select the private net directory and press **OK**.

Calling an entry

- ▶ Select an entry and pick up the receiver .

If the entry contains several phone numbers, these are displayed in a list.

- ▶ Using , select a number and press the display key **Dial**.

Using the Gigaset.net directory

Using **Gigaset.net** (a VoIP-Service of Gigaset Communications GmbH) you can **directly** (without an account or other settings) call other Gigaset.net users free of charge over the Internet. Every Gigaset VoIP device is therefore assigned a Gigaset.net phone number by default.

Opening the Gigaset.net directory

The base is in idle status.



Press and **hold**.



If necessary, select **Gigaset.net** and press **OK**.

Searching for subscribers

- ▶ Enter nickname or part of a nickname (max. 25 characters) and select **Options** → **Search** **OK**,
- ▶ If the hit list is too long, start a detailed search using **Detail**.
- ▶ If no subscriber is found, you can start a new search using **New**.

Calling subscribers



Select the subscriber from the hit list and pick up the receiver.

Data protection note

To create your own entry in the Gigaset.net directory select:

Options → **Own Details** **OK** → **Change**

When you enter your nickname, this is saved on a central Gigaset server. The nickname appears in the Gigaset.net directory, and other subscribers that use the Gigaset.net service can call you using this nickname.

By entering your data, you agree to having your data saved. If you do not want this, you can cancel the operation.

Further information about the Gigaset.net service data saved can be found at

www.gigaset.net/privacy-policy

Operating the base's answering machine

You can operate the answering machine that is integrated into the base using the keys on the base (→ page 3), the phone menu, via a registered Gigaset SL78H, SL400H or S79H handset or by remote operation (other phone/mobile phone). You can only record your own announcement message or advisory message via the base or a handset.

→ → **Announcements**

The base has three answering machines (AM1, AM2, AM3), which can be activated and used independently of each other.

Once the base has been set up, AM1 is activated and all base connections are assigned to it as receive connections. AM2 and AM3 are available once you have assigned at least one receive connection to them (→ page 24).

Each answering machine only receives calls that are directed to its receive connections. Each answering machine can only be operated via the end devices (base/handsets) to which at least one of the machine's receive connections is assigned.

Operating via the base


The speaker activates **automatically** if you receive an acoustic prompt or message while operating. You can deactivate the handsfree mode by picking up the receiver.

Operation via the menu on the base is the same as operation via a registered Gigaset SL78H, SL400H or S79H handset.

Activating/deactivating and setting answering machine mode

You can choose between **Answer & Record**, **Answer only** and **Alternating**. By using the **Alternating** setting, you can activate answer and record mode for a set period of time; outside this period the caller will only hear the announcement.

→ → **Activation**

 If necessary, select an answering machine.

Change Press the display key.

► You can enter data in the following fields:

Activation:

Select **On** or **Off** to activate/deactivate the answering machine.

Mode:

Select **Answer & Record**, **Answer only** or **Alternating**.

If **Answer & Record** or **Alternating** is selected and two personal announcements are available:

Answer & Record with:

Select **Announcement 1 /Announcement 2**.

For **Alternating:**


Record from:/Record until:

Enter the start and end of the period in 4-digit format (time **must** be set).



Enter hours/minutes for the end of the period in 4-digit format.

Save Press the display key.



Activating the answering machine via the key on the base


- ▶ Press the  key to activate or deactivate all answering machines that share a receive connection with the base.

If several answering machines are assigned to the base and these are not all deactivated, proceed as follows:



1. Press the  key: All answering machines assigned to the base are deactivated.
2. Press the  key: All answering machines are activated.

Playing back messages

New messages that have not yet been played back are indicated by the  icon in the second display line and by the  key flashing.

-  Press the message key.
- ▶ Select an answering machine and press **OK**.

Or:





-  Press the play key.
-  If necessary, select an answering machine and press **OK**.

If there are new messages, playback then begins with the first new message.



If there are no new messages, the old messages are played back.



Stopping and controlling playback



During message playback:

-  /  Stop playback. Press  /  again to resume **or**

- Options** Press the display key. To continue select **Continue** and press **OK**.

-  (press and hold) or  During time stamp playback: Skip to previous message. During message playback: Skip to the start of the current message.

-  (press briefly) or  During time stamp playback: Skip to previous message. During message playback: Repeat the last five seconds of the current message.

-  or  Go to the next message.

If playback is interrupted for over a minute, the answering machine returns to idle status.

Deleting messages

You can either delete all old messages together or individually. You can only delete new messages once the time stamp has been played back along with the first few seconds of the message.

Deleting all old messages

During playback or pause:



- Options** → **Delete Old List** **OK**
- Yes** Confirm prompt.

Deleting individual messages

During playback or pause:

- Delete** / 

Accepting a call from the answering machine

▶ While recording a call:  / **Accept** / 

Recording stops and you can speak to the caller.



Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine.

Prerequisites:

- ◆ The call comes in on a receive connection that is assigned to an answering machine.
- ◆ The answering machine is activated and not in use.

For calls to your analogue fixed line:

  Press the display key.

For calls to one of your VoIP connections:

The answering machine starts immediately in answer and record mode.

Activating/deactivating two-way record

You can record an **external** call with the answering machine.

Prerequisite:

You are conducting an external call:

- ▶ Inform the caller that the call is being recorded.



Options → **Two-way Record**
Select and press **OK**.

End End two-way record.

Activating/deactivating call screening

While recording a message, you can screen a call via the speaker on the base or on the registered handsets.

Permanently activating/deactivating call screening

 →  → **Call Screening**
→ **Desktop Phone / Handset** (= on)

Change Activate/deactivate call screening.



Deactivating call screening for the current recording

You can deactivate the function during the recording.

On the base:

Silence Press the display key.

Answering a call

 /  Press the handsfree key or pick up the receiver.

Operating when on the move (remote operation)

You can check and activate your answering machine from any other telephone (hotel, pay phone etc.).

Prerequisites:

- ◆ You have set a system PIN other than 0000 (→ page 44).
- ◆ The phone you are using for remote operation has tone dialling (DTMF) i.e., you hear different tones when you press the keys.
- ◆ The connection via which you call is assigned to the answering machine as a receive connection.

Calling the answering machine and playing messages



Dial your own number.



When you hear your announcement, press **9** and enter the system PIN.

The answering machine will tell you whether you have any new messages. The messages are now played back. You can now operate the answering machine with the keypad.

You use the following keys:

- 1** During time stamp playback: Skip to previous message.
During message playback: Skip to the start of the current message.
- 2** Stop playback. Press again to resume.
- 3** Go to the next message.
- 4** Repeat the last five seconds of the message.
- 0** During message playback: Delete current message.
- *** Change the status of a previously played back message to "new".

Cancelling remote operation

- ▶ Press the end call key or replace the receiver.



Activating the answering machine


- ▶ Phone home and let the phone ring until you hear: "Please enter PIN" (approx. 50 seconds).
- ▶ Enter the system PIN.

Your answering machine is activated. The messages are now played back.

Registering Bluetooth devices

Via Bluetooth™ your base can communicate with other Bluetooth devices wirelessly (range approx. 10 m). You must activate Bluetooth on the base and register the Bluetooth devices.

 →  **Bluetooth** → **Activation**
Select and press **Change**,
(= activated).



If Bluetooth is activated, the  icon appears in the idle display (→ page 4).

You can register the following devices via Bluetooth:


- ◆ A Bluetooth headset
- ◆ Up to five Bluetooth GSM mobile phones or data devices (PC, PDA)

Registering devices – recording them in the list of trusted devices

The activated Bluetooth device is in range.

 →  **Bluetooth** → **Search for Headset** / **Search for Cell Phone** / **Search for Data Device**

The Bluetooth names/addresses of the devices found are displayed in a list (if necessary, abbreviated). In the list:

 Select the device to be registered.


Options Press the display key.


Trust Device

Select and press **OK**.

If five data devices/mobile phones are already registered, the message **Select device to be replaced and trust again.** is displayed:

Yes Confirm.




 Select the registered device to be overwritten and press **OK**.

 If necessary, enter a PIN of your choice or the PIN of the Bluetooth device **to be registered** and press **OK**.

Generally you can enter a PIN of your choice for a data device/GSM mobile telephone. You must also enter this PIN in the data device/mobile phone (handshake).

For a headset, you only need to enter a PIN if the headset transmits a PIN not equal to 0000. A previously registered headset is automatically de-registered.

In addition to the device names, various icons with the following meaning are displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device
	Bluetooth mobile phone

Using a Bluetooth headset

Recommendation

We recommend to assign the **Headset** function to one of the function keys of the base (→ page 42) and use this to transfer/accept calls to/on the headset, even if your headset has a push-to-talk key.

Accepting/transferring calls on the headset

Prerequisite: Bluetooth is activated. The headset is registered and in range.

You are making a call on the base or a call is signalled on the base.

- ▶ Press the **Headset** function key on the base to accept the call on the headset.

Making calls

- ▶ Enter the phone number on the base and press the **Headset** function key on the base.



Using GSM mobile phones – Link2mobile


You can make a call on your base and/or a registered handset via the GSM connection of your Bluetooth GSM mobile phone.

Prerequisites:

- ◆ Bluetooth is activated on the base.
- ◆ The mobile phone is connected to the base ("activated"). Only one registered GSM mobile phone can be activated/connected at a time.
- ◆ The mobile phone is in range of the base (less than 10 m).
- ◆ The mobile phone network connection is assigned to the base as a send and receive connection.

Activating registered mobile phones

 →  Bluetooth → Known Devices

 Select a mobile phone.
(✓ = activated)

Options Press the display key.

Connect Cell Phone

Select and press **OK**.

When you register another mobile phone, it is automatically activated. The previously activated mobile phone is deactivated at the same time.

Establishing a connection

A connection is automatically established between the base and an activated mobile phone in range:

- ◆ If a call comes in on the GSM connection of the mobile phone
- ◆ If you try to make a call on the base via the GSM connection (select GSM connection as send connection)

Making calls via the GSM connection

If the prerequisites are fulfilled, you can make calls on your base via the GSM connection as described in the "Making calls" chapter on page 30.

Setting up the base

Your base is preconfigured but you can change the settings to suit your individual requirements.

Accessing functions and numbers quickly

You can program the six function keys on the right-hand side of the base and the display keys (in idle status). You can assign a phone number (quick dial) or a base function to each of these keys and change the assignment.

The number is then dialled or the function started by simply pressing a key.

Changing key assignments

In idle status:

- ▶ Press and **hold** the display/function key until a list of possible key assignments is displayed.
- ▶ Select a function or **More Functions...** (provides additional functions) and press **OK**.

Function key assignment: You can make a note of the key assignment on the insert strip next to the respective key (→ page 59).

To delete key assignment, press **Clear**.

Starting the function, dialling the number

When the base is in idle status:


- ▶ **Briefly** press the function or display key.

Setting the display

Setting the screensaver/slide show

You can display a screensaver when the base is in idle status. It will conceal the calendar, date, time and name.

If a screensaver is activated, the **Screensaver** menu option is marked with .

 →  **Settings** → **Display**
→ **Screensaver**


The current setting is displayed.

- ▶ You can enter data in the following fields:

Activation:

Select **On** or **Off**.


Selection:

Select screensaver with .

Save Press the display key.


The screensaver is activated approx.

10 seconds after the display has changed to idle status.

If the screensaver conceals the display, **briefly** press the red end key  to show the idle display.

Setting the brightness and time control for the display backlight

You can set the brightness of the display on your base and specify a timeframe during which the display on the base is completely deactivated e.g., at night (reactivates as soon as a key is pressed).

 →  **Settings** → **Display**
→ **Backlight**

The current setting is displayed.

- ▶ You can enter data in the following fields:

Time Control

Prerequisite: The date and time have already been set.

Select **On** or **Off**.

For **Time Control** = **On**:


Display off from:

Enter time in 4-digit format.

Display off until:

Enter time in 4-digit format.

Brightness:



Set the brightness of the display backlight with . You can select from five brightness levels.

- ▶ Press the display key **Save**.

Changing the handsfree/receiver volume


You can set the handsfree volume and the receiver volume, as well as the volume of a connected wire-bound headset to five different levels.


In idle status

 →  **Settings** → **Audio Settings**
→ **Call Volume**

You will hear a test tone.



 Set the receiver volume.

 Scroll to the Speaker line.

 Set the handsfree volume.

Save Press the display key to save the setting.

During a call



- ▶ Set the volume using the  and  keys.
- ▶ Press **Save** if necessary to permanently save the setting.


Setting ringers


Setting the volume


You can choose between five volumes and the "crescendo" ringer.

You can set different volumes for the following functions:

 →  **Settings** → **Audio Settings**
→ **Ringer Settings** → **Volume**

 If necessary, set the volume for internal calls and appointment notification.

 Scroll to the next line.



 If necessary, set the volume for external calls.


Save To save the setting.

Setting the ringer melody



You can select various ringers, melodies or any sound from the resource directory.

In idle status:

 →  **Settings** → **Audio Settings**
→ **Ringer Settings** → **Melodies**


 **For Internal Calls**, **For external calls** or select a receive connection.

 Select a melody.

  Where necessary, select the next connection and set a melody etc.

Save To save the settings.

Or:

 Select **All calls**.

 Select a melody.

Save Press the display key.

Yes To confirm the settings.



The setting for all calls will not work as soon as you change the setting for an individual connection.

Setting up the base

Setting time control for external calls

You can specify a time period when you do not want the base to signal external calls e.g., during the night.

Prerequisite: The date and time have already been set.

 →  → **Audio Settings**
→ **Ringer Settings** → **Time Control**

▶ You can enter data in the following fields:


For external calls:

Select **On** or **Off**.

Only if **For external calls** = **On**:

Suspend ring from:/Suspend ring until:



Enter the start and end of the period in 4-digit format.

 To save the setting.

Please note


During this period, you will continue to receive calls on the base from numbers to which you have assigned a personalised melody in the directory (VIP).

Silencing the ringer for anonymous calls

 →  **Settings** → **Audio Settings**
→ **Ringer Settings** → **Anon. Call Silencing**
(= on)


Activating/deactivating the ringer

Deactivating the ringer permanently


 Press and **hold** the star key.

The  icon appears in the display.

Reactivating the ringer



 Press and **hold** the star key.

Deactivating the ringer for the current call

 Press the display key.

Activating/deactivating advisory tones

In idle status:

 →  **Settings** → **Audio Settings**
→ **Advisory Tones**


▶ You can enter data in the following fields:

Key Tones:

Select **On** or **Off**.

Confirmation:

Select **On** or **Off**.

 Save setting.

Changing the system PIN

 →  **Settings** → **System**
→ **System PIN**





If necessary, enter the current system PIN of the base and press **OK**.



Enter your new system PIN and press **OK**.

Entering your own local area code

In order to be able to call a caller from the call list back, you have to save the local area code in the phone for the area your phone is in (**Local area code**). If your phone is in a "multiple area code" area, you also have to enter the other area codes for this area as **Extra Area Codes**.

 →  **Settings** → **Telephony**

Local area code

Select and press **OK**.




Enter your own area code (maximum three characters, digits and the characters "*", "#" are permitted).

Save

Press the display key.

Entering extra codes

 →  **Settings** → **Telephony**

Extra Area Codes

Select and press **OK**.



Select an entry ("----" = empty entry).

< C

Delete a previously entered extra code if necessary.



Enter the extra code (maximum 3 characters, digits and the characters "*", "#" are permitted).

Repeat the steps above until you have entered all the extra codes for your area. You can save a maximum of five extra codes.

Save

Press the display key.

Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate. This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC / ACTA Information

Warning: Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: www.gigaset.com/docs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network

until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866 247-8758. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Notice:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.

FCC / ACTA Information

5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.

6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.

7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.

8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.

9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.

11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used. Disconnect TNV circuit connector before removing cover.

12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a.) When the power cord is damaged or frayed.
- b.) If liquid has been spilled into the product.
- c.) If the product has been exposed to rain or water.
- d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
- e.) If the product has been dropped or physically has been damaged.
- f.) If the product exhibits a distinct change in performance.

13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrestor.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

15. Emergency/911 numbers may not be dialed if the keypad is locked.

16. Minimum No. 26 AWG telecommunication line cord must be used with this phone.



ETL LISTED
CONFORMS TO
ANSI/UL STD 60950-1
CERTIFIED TO
CAN/CSA C22.2 No.60950-1

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.
2. DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
7. Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products
To obtain Customer Care Warranty service,
product operation information, or for problem resolution, call:
Toll Free: 1-866 247-8758

End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866 247-8758.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
 - Cost of installation, removal or reinstallation.
 - Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
 - Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
 - Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
 - Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
 - Signal reception problems (unless caused by defect in material or workmanship in the Product).
 - Products operated outside published maximum ratings.
 - Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
 - Consumables (such as batteries and fuses).
- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.

Service (Customer Care)

- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (*i.e.*, the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

1-866 247-8758

5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT**

ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT.

Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN).

THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for support on your Gigaset phone, visit our web site at <http://www.gigaset.com> or please call 1-866 247-8758.

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011
All rights reserved.

Subject to availability. Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.
Part Number: A31008-N3101-R301-1-6043

© Copyright 2011.

Questions and answers

If you have any questions about the use of your base, visit our website at

www.gigaset.com/service

for assistance 24/7. You will find a list of common problems and possible solutions in the long user guide on the enclosed CD.

Menu tree

Please note

Functions that are only displayed if the telephone is connected with the analogue fixed line additionally say "only for fixed line connection".

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

Example: **9** **3** **2** **1** for "Set ringer melody volume."

To open the main menu: Press when the base is in **idle status**.

1 **Select Services**

- 2 Next Call
- 3 Call Divert
- 4 Call Waiting
- 5 Block No. All Calls
- 9 Unknown Call Reject.
- Transfer (ECT)
- Ringback Off

- 1 Withhold Number
- 3 Call Waiting
- Internal Line
- Fixed Line
- IP1
- IP2
- :
- IP6

Fixed line connection only

Fixed line connection only

2 **Bluetooth**

- 1 Activation
- 2 Search for Headset
- 3 Search for Cell Phone
- 4 Search for Data Device
- 5 Known Devices
- 6 Own Device

→ page 40

3 ☆ **Additional Features**

1	Info Center
2	Resource Directory

1	Screensavers
2	Caller Pictures
3	Sounds
4	Capacity

4 📞 **Call Lists**

→ page 32

1	All Calls
2	Outgoing Calls
3	Accepted Calls
4	Missed Calls

5 ✉ **Messaging**

2	E-mail
---	--------

6 📠 **Voice Mail**

→ page 36

1	Play Messages
2	Activation
3	Announcements
4	Recordings
5	Call Screening

1	Net AM: Fixed Line
3	Net AM: IP1
4	Net AM: IP2
	:
8	Net AM: IP6
9	Answer Machine 1
-	Answer Machine 2
-	Answer Machine 3

→ page 36

1	Answer Machine 1
2	Answer Machine 2
3	Answer Machine 3

→ page 36

1	Record Announcemnt.
2	Play Announcement
3	Delete Announcemnt.
4	Record Advisory Msg.
5	Play Advisory Message
6	Delete Advisory Msg.

Answer Machine 1 to 3

→ page 36

Answer Machine 1 to 3

Answer Machine 1 to 3

Answer Machine 1 to 3

Answer Machine 1 to 3

Answer Machine 1 to 3

→ page 38

1	Desktop Phone
---	---------------

→ page 38

Menu tree

		2 Handset
6	Network Mailboxes	1 Net AM: Fixed Line
		2 Net AM: IP1
		3 Net AM: IP2
		:
		7 Net AM: IP6
7	Set Key 1	1 Net AM: Fixed Line
		2 Net AM: IP1
		3 Net AM: IP2
		:
		7 Net AM: IP6
		8 Answering Machine

7 Organizer

1	Calendar
2	Alarm Clock
3	Missed Alarms

8 Contacts

1	Directory
2	Network Directory
2	

2	Gigaset.net
1	Online Directory
3	Yellow Pages
4	Prv.NetDir

→ page 33

The online directories available are displayed with provider-specific names

→ page 34

9 Settings

1	VoIP Wizard
2	Date/Time
3	Audio Settings

1	Call Volume
2	Ringer Settings
3	Advisory Tones
4	Music on Hold

1	Volume
2	Melodies
3	Time Control
4	Anon. Call Silencing

→ page 43

→ page 43

→ page 44

4	Display	1 Screensaver Info Ticker	2 Backlight	→ page 42
5	Language			→ page 2
6	Registration	1 Register Handset 2 De-register Handset		
7	Telephony	1 Area Codes 3 Send Connections 4 Receive Connections 6 Dialing Mode 7 Flash Duration 8 Access Code - Local Area Code - Extra Area Codes	INT 1 ... INT 8 INT 1 ... INT 8 Answer Machine 1 ... Answer Machine 3 1 Dialing Mode 2 Pulse	Fixed line connection only → page 45 → page 45
8	System	1 Reset 2 DECT Interface 3 FAX Port 5 Local Network 6 Update Firmware 7 System PIN		→ page 44
9	Eco mode	1 Eco mode		

Please note

This quick user guide only describes a small proportion of your base's functions. A detailed description of all functions in the menu tree can be found in the long user guide for your Gigaset DX800A all in one on the enclosed CD.

Index

A

- Activating
 - advisory tones 44
 - answering machine 36
 - answering machine
 - (remote operation)..... 39
 - two-way recording 38
- Answering machine 36
 - activating/deactivating 36
 - deleting messages 37
 - list 32
 - playing back messages 37
 - remote operation 38
 - skipping back 37
 - skipping forward 37
- Area codes
 - extra area codes 45
 - local area code 45
 - own area code 45
- Assigning
 - function keys 42
 - key 42
 - number key 42
- Auto configuration code 17
- Automatic redial 32

B

- Base
 - connecting with router 14
 - setting up 9, 10
 - system PIN 44
- Birthday, see Anniversary
- Bluetooth
 - registering devices 40
 - using GSM mobile phones 41
- Bluetooth headset
 - using 40
- Brightness
 - display backlight 42

C

- Call
 - accepting 31
 - ending 30
 - ending on headset 30
 - internal 30
 - picking up from answering machine.. 38
 - two-way recording 38

- Call lists 32
- Call screening during recording 38
- Calling
 - from classified directory 34
 - from online directory 34
 - Gigaset.net 35
 - internal 30
- Changing
 - handsfree volume 43
 - receiver volume 43
 - ringer 43
 - system PIN 44
- CLIP picture 33
- Connection wizard
 - starting (getting started) 18
- Customer Care 49

D

- Deactivating
 - advisory tones 44
 - answering machine 36
 - two-way recording 38
- Deleting messages 37
- Dialling
 - directory 33
 - from online directory 34
- Directory 33
 - Gigaset.net 35
 - saving entry 33
 - searching for an entry 34
 - sending entry/list to handset 33
- Display
 - backlight 42
 - screensaver 42
 - setting 42
- Display backlight
 - brightness of the display backlight ... 42
 - time control 42
- Display keys
 - assigning 42
- Documentation 2

E

- Ending a call 30
- Entering user data (VoIP)
 - with handset 20
- External call
 - diverting to answering machine 38
- Extra area codes 45

- F**
Firmware updates 8
- G**
General troubleshooting 51
Gigaset.net 35
 calling subscriber 35
 directory 35
 searching for subscribers 35
Group call 30
GSM connection
 using via Bluetooth 41
GSM mobile phones 41
- H**
Handsfree volume 43
Headset
 connecting (with cord) 10
 ending call 30
Help 51
- I**
Icon
 answering machine 36
 new message 37
 ringer 44
Idle status
 display in (example) 4
Industry Canada Certification 46
Installation wizard 16
Internal
 call 30
 making calls 30
- L**
Link2mobile 41
List
 answering machine 32
 call lists 32
 missed calls 32
 network mailbox 32
Local area code 45
- M**
Making calls
 accepting a call 31
 external 30
 internal 30
Manual redial 32
Medical equipment 7
Message key
 opening lists 32
Messages
 deleting 37
 new message icon 37
 playing back 37
Microphone
 muting 31
Missed call 32
Mobile phone
 connecting (Bluetooth) 41
Muting the phone 31
- N**
Number
 saving in the directory 33
- O**
Online directory
 Gigaset.net 35
Operating remotely 38
Operation (setting up the phone) 8
Own area code 45
- P**
Package contents 8
Phone, setting up 8
Picture
 caller 33
Playing back
 message (answering machine) 37
Power adapter 7
- Q**
Questions and answers 51

Index

R

Receiver volume	43
Recording	
two-way recording	38
Redial	32
Registration password	
VoIP account	20
Ringer	
changing	43
setting volume	43
time control	44
Router	
connecting base	14

S

Scope of delivery	8
Screensaver	42
Searching for subscribers on	
Gigaset.net	35
Sending	
directory entry to handset	33
Service (Customer Care)	49
Setting	
date	28
screensaver	42
time	28
Setting up the base	9, 10
Shortcut	52
Signal tone, see Advisory tones	
Sound, see Ringer	

T

Time control	42
display backlight	42
ringer	44

U

User guide	2
Using handsfree mode	31

V


VIP (directory entry)	33
VoIP	
configuring account (first)	20
loading provider data	19
starting connection wizard	17
VoIP provider	
downloading data	19
selecting	19
VoIP user data	
entering (connection wizard)	20
Volume	
handsfree	43
receiver	43
receiver/handsfree	43
ringer	43
setting	43

W

Warning tone, see Advisory tones


Insert strip – labelling function keys

On the telephone:

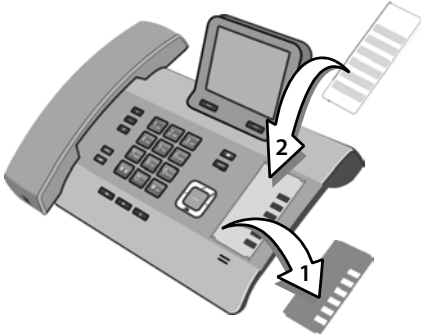

- ▶ Remove the protective film from the indented area next to the function keys (1).
- ▶ Place the insert strip into the indented area (2) next to the function keys. Slide it under the plastic tabs at the edge of the indented area.

Indented area on the housing including function keys

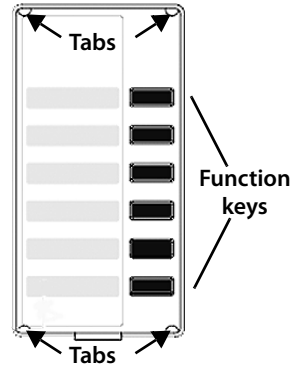

- ▶ Place the protective film back into the indented area so that the function keys fit into the recesses of the protective film. Then slide the protective film under the plastic tabs.

To find the insertstrips in original please see as well the back page of your cover.

A file containing additional insert strips that you can also directly edit on your PC is provided on the enclosed CD.

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com

Version: 06.09.2011



A31008- N3101- R301- 1- 6043