

# Gigaset

## E630 - E630 A

### Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability.  
This product's packaging is eco-friendly!

To learn more, visit [www.gigaset.com](http://www.gigaset.com).



GIGASET. INSPIRING CONVERSATION.  
**MADE IN GERMANY**



# Overview of handset



- 1 LED light / Visual call signal (→ page 43, → page 43)
- 2 Display in idle status
- 3 Status bar (→ page 49)  
Icons display current settings and operating status of the phone
- 4 Side keys (→ page 16)
- 5 Display keys (→ page 16)
- 6 End call key, on/off key  
End call;  
Cancel function;  
Go back one menu level (press **briefly**);  
Back to idle status (press and **hold**);  
Switch handset on/off (press and **hold** in idle status)
- 7 Message key (→ page 17)  
Access to the calls and message lists;  
**Flashing**: new message or new call
- 8 Profile key (→ page 43)
- 9 Hash key  
Keypad lock on/off (press and **hold** in idle status);  
Toggles between upper/lower case and digits
- 10 Connection socket for headset (→ page 9)
- 11 Microphone
- 12 Star key  
With an open connection: Switch from pulse dialling to tone dialling (press **briefly**);  
When inputting text: Open special characters table
- 13 Key 1  
Select answer machine (only Gigaset E630A → page 31)/network mailbox (press and **hold**)
- 14 Flash key  
- Consultation call (flash)  
- Insert a dialling pause (press and **hold**)
- 15 Answer call key / Handsfree key  
Dial number displayed;  
Accept call;  
Switch from earpiece to handsfree mode;  
Open the redial list (press **briefly**);  
Start dialling (press and **hold**);
- 16 Control key / Menu key (→ page 15)

## Overview of base station

---



### Registration/paging key

- ◆ Locate handsets ("Paging") (press **briefly**) → page 37.
- ◆ Register handsets and DECT devices (press and **hold**) → page 36.


If you want to check whether your device is equipped with an integrated answer machine, → page 31.










# Contents

---

|   |    |
|---|----|
| Overview of handset .....                                 | 1  |
| Overview of base station .....                            | 2  |
| Safety precautions .....                                  | 4  |
| Getting started .....                                     | 5  |
| Understanding the operating steps in the user guide ..... | 14 |
| Getting to know your phone .....                          | 15 |
| Making calls .....  | 19 |
| Adjusting the telephone settings .....                    | 24 |
| Changing the system PIN .....                             | 29 |
| Restoring phone to default setting .....                  | 29 |
| ECO DECT .....  | 30 |
| Answer machine (Gigaset E630A) .....                      | 31 |
| Network mailbox .....                                     | 35 |
| Multiple handsets .....                                   | 36 |
| Phonebook (Address book) .....                            | 39 |
| Call list .....   | 41 |
| Contactability .....                                      | 42 |
| Sound profiles .....                                      | 43 |
| Spot LED .....  | 43 |
| Calendar .....  | 44 |
| Alarm clock .....   | 45 |
| Baby monitor .....  | 46 |
| Operating the telephone on a router/PABX .....            | 48 |
| Display icons .....                                       | 49 |
| Menu tree .....   | 51 |
| Environment .....   | 55 |
| Appendix .....  | 56 |
| FCC / ACTA Information .....                              | 59 |
| Service (Customer Care) .....                             | 63 |
| Index .....   | 67 |

## Safety precautions

|  |   |
|--|---|
|  | <ul style="list-style-type: none"> <li>- Read the safety precautions and the user guide before use.</li> <li>- Explain their content and the potential hazards associated with using the device to your children.</li> <li>- The device cannot be used in the event of a power failure. It is also <b>not</b> possible to transmit <b>emergency calls</b>.</li> <li>- Emergency numbers <b>cannot</b> be dialled if the <b>keypad/display lock</b> is activated!</li> </ul> |
|--|---|

|   |   |
|---|---|
|   | Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).   |
|   | The base and charger are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.  |
|   | Use only the power adapter indicated on the device.   |
|   | Use only <b>rechargeable batteries</b> that correspond to the <b>specification</b> (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced. Do not charge the handset in charging unit or base station while the headset is connected.  |
|   | If you give your Gigaset to a third party, make sure you also give them the user guide.   |
|   | Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services. Disconnect the telephone network connector (TNV circuit connector).  |
|   | Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.  |
|   | <p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.</p> <p>Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.</p> <p>The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p> |
|  | <p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.</p> <p>If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").</p>  |

# Getting started

---

## Checking the contents of the package

- ◆ One **base station**,
- ◆ One power adapter for the base,
- ◆ One phone cord,
- ◆ One **handset**,
- ◆ One charging cradle incl. power adapter,
- ◆ One battery cover (rear cover for the handset),
- ◆ One locking disc for the battery cover,
- ◆ Two batteries,
- ◆ One belt clip,
- ◆ One rubber cover for the headset socket,
- ◆ One user guide.

If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover, a belt clip and a charging cradle with power adapter for each additional handset.

## Installing the base station and charging cradle

The base and charging cradle are designed for use in closed, dry rooms in a temperature range of +41°F to +113°F.


- ▶ Set up the base on a level, non-slip surface at a central point in the building or house, or mount the base on the wall (→ page 7).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

### Notes

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.
- ◆ Pay attention to the range of the base. This is up to 100 ft inside buildings and up to 700 ft in unobstructed outdoor areas. The range is reduced when **Maximum Range** is deactivated (→ page 30).

## Connecting the base station to the telephone network and the mains power supply

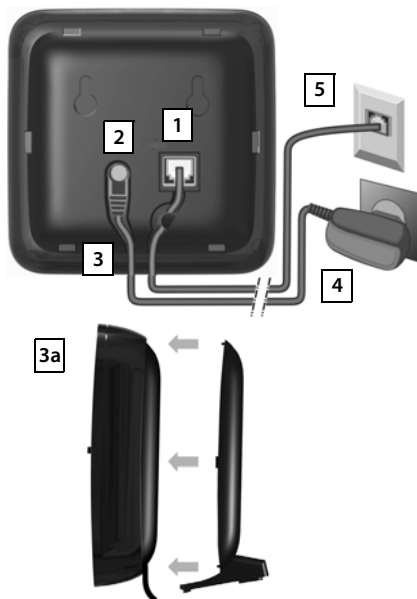


- ◆ Insert the phone cable into the right-hand/lower connection socket **1** at the rear of the base until it clicks into place.
- ◆ Insert the power cable of the power adapter into the left-hand/upper connection socket **2**.
- ◆ Push both cables into the appropriate cable channels **3**.
- ◆ Place the cover in the notches on the back of the base **3a** (not if mounting on the wall).
- ◆ Connect the power adapter **4**.
- ◆ Connect the phone jack **5**.

### Notes


- ◆ The power adapter must **always be connected**, as the phone will not operate without a power supply.
- ◆ Use only the **supplied** power adapter and phone cord. Pin connections on telephone cables can vary (pin connections, → page 57).



## Mounting the base station on the wall (optional)

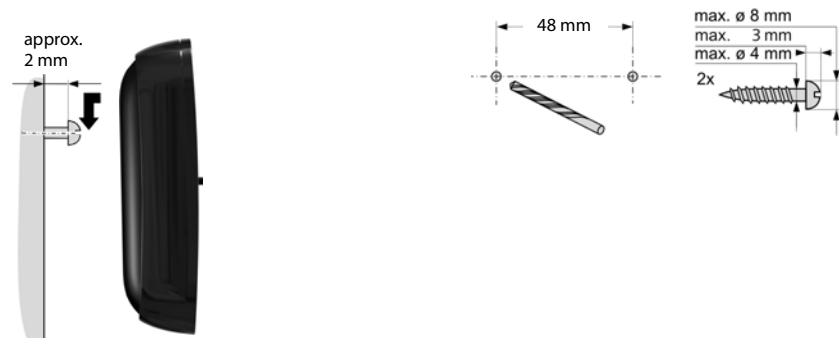

## Connecting the charging cradle

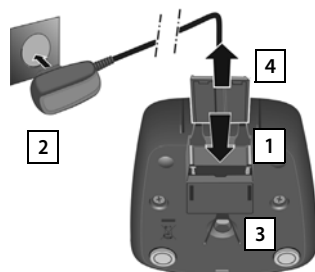

- ▶ Connect the flat plug to the charging cradle **1**.
- ▶ Plug the power adapter into the power socket **2**.

If you have to remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3** and disconnect the plug **4**.

## Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film!**


## Inserting the batteries and closing the battery cover

### Caution

Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 56), as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


## Getting started

- ▶ Insert the batteries with the polarity in the right direction (for correct +/- direction, see diagram).
- ▶ Hold the battery cover at a slight angle and insert the bottom into the casing first **1**.
- ▶ Then press the cover **2** until it clicks into place.
- ▶ Insert the locking disc as shown (at an angle of approx. 20°) **3**. Pay attention to the arrow markings.
- ▶ Turn locking disc clockwise to the end stop **4**. The locking disc is closed once the markings on the disc are aligned with those on the cover **5**.

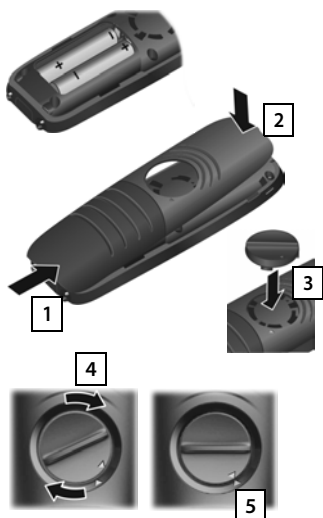

To **open the battery cover**, for example to change the batteries:

- ▶ Turn the locking disc anti-clockwise to the end stop **6** (approx. 20°) and remove **7**.
- ▶ Place your fingernail in the notch on the side between the cover and the casing **8** and remove the cover **9**.

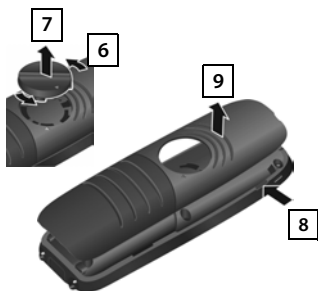

## Belt clip

The handset has notches on each side to attach the belt clip.

- ◆ **To attach** — press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- ◆ **To remove** — press the centre of the belt clip firmly with your right thumb, push the fingernail of your left thumb up between the clip and the casing and pull the clip in an upward direction.



## Connecting the headset



You can connect a headset to the underside of your telephone with the 2.5 mm jack connector **1**. For information on recommended headsets, see the relevant product page at [www.gigaset.com](http://www.gigaset.com).



If you **do not** wish to connect a headset, please insert the rubber cover supplied **2** to guarantee the unit is still splash proof.

### Attention

Do not charge the handset in charging unit while the headset is connected.

## Charging the batteries

The batteries are supplied partially charged. Please charge completely before use. (The batteries are fully charged when the power icon ⚡ disappears from the display.)



### Notes

- ◆ The handset may only be placed in the designated base/charging cradle.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.
- ◆ Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (display "**Please register handset**" or "**Place handset in base**"), please register it manually (→ page 36).

## Changing the display language


You can also change the display language via the menu:

▶ ▶ OK ▶ Language ▶ OK ▶ Select language ▶ Select

or, if you do not understand the language currently set, go to:



- ▶ Press right on the control key.



- ▶ Press keys and **slowly** one after the other.

### Example



The language selection display appears.  
The current language (e.g. English) is selected.



- ▶ Press the down control key ...


### Example



... until the language you wish to use is displayed e.g. French.

- ▶ Press the **right** key, directly under the display, to select the language.

### Example

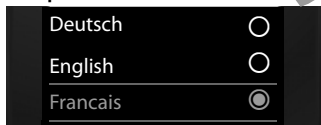


The selection is marked with .

- ▶ Press and **hold** the End call key to return to idle status.

## Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

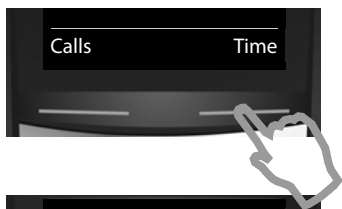

- ▶ Press the key **Time** below the display screen to open the input field.


(If you have already set the date/time, open the input field via the menu:

☰ ▶ ⚙ ▶ OK ▶ Date/Time ▶ OK)

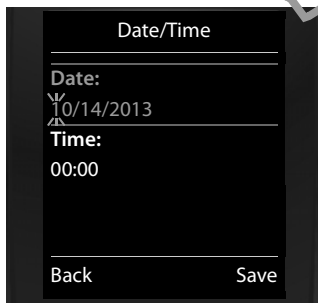

The submenu **Date/Time** is shown on the display.

- ▶ The active input position flashes.  
Enter the day, month and year as an 8-digit number via the keypad, e.g.         for 10/14/2013.

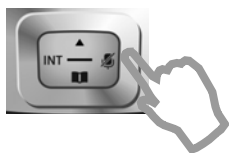


Press the **right** or **left** control key to change the input position, e.g. to correct an entry.



- ▶ Press the **down** control key to switch to the time input field.
- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g.,     for 07:15 am.  
Change the input position with the control key if necessary.
- ▶ Press the key **Save** below the display screen to save the entry.



Display shows: **Saved**. You will hear a confirmation tone.

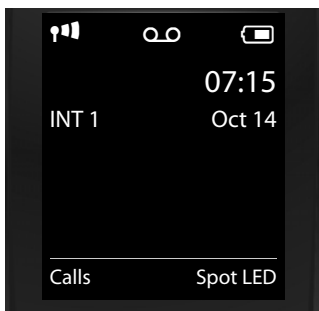

You will automatically return to idle status.

**Your phone is now ready for use.**

## What would you like to do next?

After successfully setting up the phone, you can make calls straight away, customise your Gigaset according to your requirements or firstly familiarise yourself with the operation.

---

### Setting ringtones

Assign specific tunes to internal and external calls, reminders ( → page 26), wake-up calls ( → page 45) and to certain callers ( → page 39).

---

### Protecting yourself against unwanted calls

Set your phone up so that it doesn't ring if there is an anonymous call or use the time control ( → page 27).

---

### Adjusting your phone to your surroundings

Use 3 sound profiles to adjust your phone to a quiet or loud background ( → page 43).

---

### Setting up the answer machine

Record your own message and set your recording parameters ( → page 31).

---

### Register an existing Gigaset handset and add it to the phonebook

Use available handsets to continue calling from your new base. Transfer directory entries from these handsets to your new handset ( → page 36, → page 40).

---

### Configuring ECO DECT settings




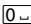
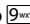
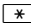
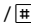



Reduce the transmission power (emissions) of your phone ( → page 30).

---

**If you have any questions about using your phone, please read the tips on troubleshooting ( → page 53) or contact our Customer Service team ( → page 53).**

## Understanding the operating steps in the user guide

The keys on your Gigaset handset are set out in these operating instructions as follows:

|  |   |
|--|---|
|  /  /  | Answer call key / Menu key / End call key |
|  to   | Number / Letter keys                      |
|  /    | Star key / Hash key                       |
|  /  /  | Message key / Flash key / Profile key     |




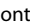





Overview of display icons ( → page 49).

### Example: Activating/deactivating Auto Answer

Illustration in the user guide:

 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** (☑ = activated)

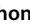
Follow this procedure:

- ▶ : With the handset in idle status, press the **right** control key to open the main menu.
- ▶ : Navigate to the  icon using the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Settings**.
- ▶  **Telephony**: Scroll to the entry **Telephony** with the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Telephony**.
- ▶ **Auto Answer**: The activate/deactivate auto answer function is selected.
- ▶ **Change** (☑ = activated): Press the display key **Change** or the middle of the control key  to alternate between activating or deactivating (☑ = activated, ☐ = deactivated).




# Getting to know your phone

## Switching the handset on/off

- ▶ Press and **hold** the End call key  in idle status to switch the handset on or off.


## Locking/unlocking the keypad

The keypad lock prevents any accidental use of the phone. If you press a key when the keypad is locked, a message is displayed.

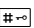- ▶ Press and hold the  key to lock or unlock the keypad.

If a call is signalled on the handset, the keypad automatically unlocks, and you can accept the call. It then locks again when the call is finished.





## Control key

In the description below, the side of the control key (up, down, right, left, middle) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".




The control key allows you to navigate within menus and entry fields. In idle status or during an external call, it has the following functions:



### When the handset is in idle status

-  Open the phonebook.
-  or  Open the main menu.
-  Open list of handsets.

### During an external call

-  Open the phonebook.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

### Functions when pressing the centre of the control key



The key has different functions, depending on the operating situation.

- ◆ **In idle status**, it opens the main menu.
- ◆ **In submenus, selection and entry fields**, the key takes on the function of the display keys **OK, Yes, Save, Select** or **Change**.

#### Note

These instructions demonstrate opening the main menu by pressing the right of the control key and confirming the functions by pressing the appropriate display key. However, if you prefer, you can also press the middle of the control key.

## Side keys

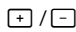
-  /  Press these keys on the right-hand side of the handset to set the volume for the **earpiece, ringtone, handsfree mode, alarm clock, appointments** and the **headset** depending on the situation.

## Display keys

The display keys have a function preset by default in idle status, but the keys can be re-assigned (→ page 28).

The functions of the display keys change depending on the operating situation.

Example

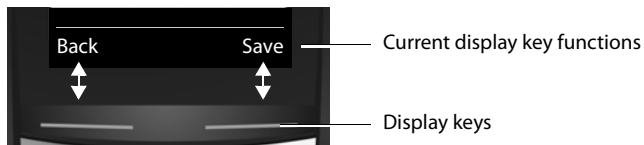

Some of the important display keys are:


- Options** Open a menu for further functions.  
**OK** Confirm selection.  
**Back** Skip back one menu level or cancel operation.  
**Save** Save entry.

Overview of icons on the display keys (→ page 50).

## Menu guidance


The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → page 51.


### Main menu (first menu level)

- ▶ When the handset is in idle status, press **right** on the control key  to open the main menu.


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Use the control key  to navigate to the required function and press the display key **OK**.

Returning to idle status: **Briefly** press the display key **Back** or End call key .

Example

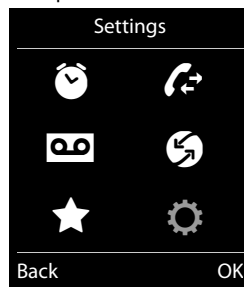

## Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function using the control key (⏪) and press **OK**.

Returning to the previous menu level: **Briefly** press the display key **Back** or End call key (⏪).

## Returning to idle status


From any menu:

- ▶ Press and **hold** the End call key (⏪).

Or:

- ▶ If you do not press a key, the display **automatically** returns to idle status after 2 minutes.

Example

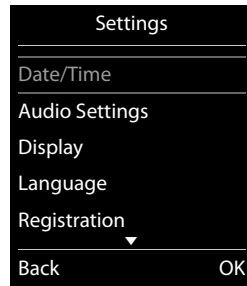

## Message lists

Any messages you receive are saved in the message lists. An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes (if activated, → page 25). Icons for message types and the number of new messages are shown on the idle display.

New messages available:

- ◆ On the answer machine (only Gigaset E630A)/network mailbox (→ page 32, → page 35)
- ◆ In the missed calls list
- ◆ In the missed alarms list (→ page 45)

Open the message list by pressing the Message key (ⓧ). You can access the following message lists:


- ◆ **Answer Mach.:** Answer machine list (only Gigaset E630A → page 31)
- ◆ **Mailbox:** Network mailbox (if your network provider supports this function and the number of the network mailbox has been stored.)
- ◆ **Missed Calls:** Missed call list (see "Call list" → page 41)
- ◆ **Missed Alarms:** Missed appointments list

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

**Opening the list:** (ⓧ) Select required list. ▶ **OK**

**Exception:** If you select the **network mailbox**, the number of the network mailbox will be selected (→ page 35). Lists are not opened on the display.

Example

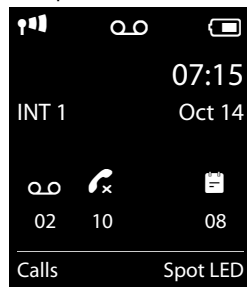


## Entering numbers and text

If several number and/or text fields are displayed (e.g. **First Name** and **Surname** in a phonebook entry), the field is automatically activated. The following fields must be activated by navigating with the control key (↩). A field is activated when a cursor is blinking inside it.

### Correcting incorrect entries

- ◆ Deleting **characters** before the cursor: press the display key **<C** briefly.
- ◆ Deleting **words** before the cursor: press and **hold** the display key **<C**.

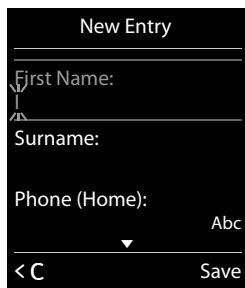


### Entering text

- ◆ **Letters/Characters:** Multiple letters and characters are assigned to each key between **0\_** and **9\_**. The characters are shown according to the key in a selection line at the bottom left of the display. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character.
- ◆ **Placing the cursor:** Letters/characters are inserted at the cursor position. You can insert the cursor by pressing the control key (↩), or (↩) in fields with multiple characters.
- ◆ **Typing lower case, upper case and numbers:** Press the hash key **#<->** to switch between lower case, upper case or numbers for the **following letters**.  
When editing a phonebook entry, the first letter and each letter following a space is automatically in upper case.
- ◆ **Special characters:** Press the star key **\*\_** to open the special characters table. Navigate to the character desired using the star key and press the display key **Insert** to select it.
- ◆ **Special letters:** Umlauts or other marked/diacritic characters can be selected by pressing the corresponding letter several times. See the character table → page 58.

# Making calls

## Making an external call

▶ Enter number, **briefly** press the Answer call key .

Or:



▶ Press and **hold** the Answer call key , enter number.

You can cancel the dialling process with the End call key .

## Dialling with the redial list


The redial list contains the 20 numbers last dialled with the handset. You can manage this similarly to your phone's message lists (→ page 17).

▶ Press the Answer call key  **briefly** to open the redial list.

▶  Select entry. ▶ Press the Answer call key . The number is dialled.

When a name and corresponding phone number are displayed: Press the display key **View**.

## Managing entries in the redial list:



▶ Open redial list. ▶  Select entry. ▶ **Options**

You can select the following functions:

◆ **Copy to Directory** ▶ **OK**

Copy an entry to the phonebook (→ page 39).

◆ **Display number** ▶ **OK**

Copy a number into the display and edit it or add to it, then select with  or save as a new entry in the phonebook with .

◆ **Delete entry** ▶ **OK**



Delete the selected entry.

◆ **Delete all** ▶ **OK**

Delete all entries.


## Dialling from the call list

 ▶  ▶ **OK** ▶  Select list. ▶ **OK**


▶  Select entry. ▶ 

▶ The number is dialled.

### Notes



- ◆ You can also bring up the call list using the display key **Calls**, but you must assign a display key accordingly (→ page 28).
- ◆ You can also open the list **Missed calls** using the Message key .
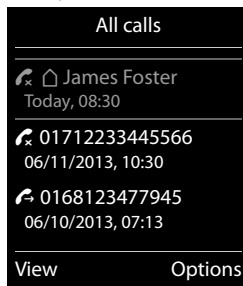
### Example



### Dialling with the phonebook

 ▶  Select entry. ▶ 


▶ If multiple numbers are entered: Select the number with  and press the Answer call key  or OK.

▶ The number is dialled.

### One touch call


You can set up your phone so that you can dial a specific number when you press a **key of your choice**. This allows children, who are unable to enter a number, to call a certain number, for example.

 ▶  ▶ OK ▶  One Touch Call ▶ OK

▶ **Activation:**  On / Off

▶ **Call to:** Enter or change the number that you wish to dial.

▶ **Save**

The activated One Touch Call appears on the idle display. The saved number is dialled by pressing any key. Press the End call key  to cancel dialling.

#### Ending one touch call:

▶ Press the display key OFF. ▶ Press and **hold** the  key.

Or:


▶ Press and **hold** the  key.

### Accepting a call

You have the following options:


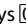



▶ Press .

▶ If **Auto Answer** is switched on (→ page 25), remove the handset from the charging cradle.

▶ Gigaset E630A (→ page 31): Press the display key  to forward the call to the answer machine (→ page 33).

**Accepting a call with the Gigaset L410 handsfree clip** (→ page 68): Press the Answer call key. To use your L410, you must register it to your base station. Proceed as described in the operating instructions for the Gigaset L410.

### Activate/deactivate Simple Auto Answer

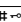In addition to using the Answer call key , you can also answer a call using the keys  ... ,  and .

 ▶  ▶ OK ▶  Telephony ▶ OK ▶  Easy Acceptance ▶ Change  = activated

**Please note:** Changes are only saved permanently in **Profile Personal** (→ page 43).

## Caller display

### Calling Line Identification

The caller's phone number is displayed. If the caller's number is stored in your phonebook, the number type and name are displayed.

### No Calling Line Identification

Instead of name and number, the following is displayed:

- ◆ **External:** No number has been transferred.
- ◆ **Withheld:** Caller has withheld Calling Line Identification ( → page 22).
- ◆ **Unavailable:** Caller has not requested Calling Line Identification.

### CNIP (Calling Name Identification Presentation)

In **addition** to the number, the registered name (and location) of the caller are displayed. The name of the phonebook entry appears if you have saved the number in the phonebook.

### Notes on phone number display for CLIP

By default, the number of the caller is shown on the handset of your telephone, → page 54 or  
 ▶ [www.gigaset.com/service](http://www.gigaset.com/service)


## Handsfree mode

If you are going to let someone listen in, you should tell the other party that this is happening.

Activating/deactivating handsfree mode during a call, when establishing the connection and when listening to the answer machine (only Gigaset E630A → page 31):

- ▶ Press .


Placing the handset in the charging cradle during a call:


- ▶ Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

## Adjusting the loudspeaker volume

- ◆ Accessing the settings **via the menu:**





 ▶  ▶ OK ▶  **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK

▶ **Earpiece:**  Volume can be set at 5 levels for the earpiece and headset.

▶ **Speaker:**  Set the volume at 5 levels.

▶ **Save**

- ◆ Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece, headset):

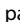▶ Press side keys  /  ( → page 1) or control key  ▶ .


▶ The setting is saved automatically after 2 seconds or press the display key **Save**. The screen reverts back to its previous display.

### Note

Changes are only saved permanently in **Profile Personal** ( → page 43).


### Switching the microphone on/off (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Press  to switch the microphone on/off.



### Using provider-specific functions (network services)

Network services depend on and must be requested from your network provider (which may incur additional charges). Network services fall into two distinct groups

- ◆ Network services that are activated for the following call or all subsequent calls when no call is being made (e.g. calling anonymously (without Calling Line Identification)). You can easily activate/deactivate these network services via the menu .
- ◆ Network services that are activated during an external call, e.g., "consultation call", "swapping between two callers" and "setting up conference calls". These services are provided to you during an external call in the option slider (e.g **Ext. Call, Conf.**).

You will find a general description of the features on your network provider's website or at one of their store branches.

#### Notes

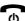- ◆ To activate/deactivate the following services, a code is generally sent to the telephone network.
  - ▶ After a confirmation tone from the telephone network, press .
- ◆ All functions that can be activated under menu item  are services made available by your network provider. If you require assistance, please contact your network provider.
- ◆ It is not possible to reprogram the network services.

### Setting network services

#### Withholding a phone number (CLIR - Calling Line Identification Restriction)

If you do not want to have your phone number displayed to the other caller, you can withhold the number (CLIR). Calling Line Identification is withheld until you deactivate the function again.

Activating/deactivating withheld number:

 ▶  ▶ **OK** ▶  **All Calls Anonym.** ▶ **Change**  = activated)

Cancelling Calling Line Identification for the next call only:

 ▶  ▶ **OK** ▶  **Next Call Anonym.** ▶ **OK** ▶ Dial the number ▶ **Dial**

Deactivating call waiting for the next call if the function is activated:

 ▶  ▶ **OK** ▶  **Next Call** ▶ **OK** ▶  **Call Waiting** ▶ **OK** ▶ Dial the number ▶ **Dial**

#### Unknown call rejection

Callers who restrict their caller ID (CLIR) are rejected.

 ▶  ▶ **OK** ▶  **Unknown Call Reject** ▶ **OK** ▶ Status:  **On / Off** ▶ **Send**




## Network services during an external call

### Callback

If you have dialled an external number and can hear the busy tone:

- ▶ **Options** ▶  **Ringback** ▶ **OK** ▶ 

As soon as the participant hangs up, your phone will ring.

- ▶ Press  to establish the connection to the participant.

**Cancel callback:**

-  ▶  ▶ **OK** ▶  **Ringback Off** ▶ **OK**

### Making a consultation call

Make another external call during an external call. The first call is placed on hold.

- ▶ **Ext. Call** ▶ Enter the second participant's number.


The previous call is placed on hold. The second participant is called.

- ▶ If the second participant does not answer: Press the display key **End**.

Or:


- ▶ If the second participant does answer: You will then be speaking to the participant.


**Ending a consultation call:**

- ▶ **Options** ▶  **End active call** ▶ **OK**

You will be reconnected to the first call participant.

Or:

Press . You will receive a callback from the first participant.

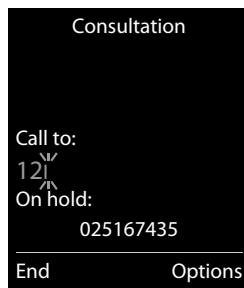

## Adjusting the telephone settings

The handset and base station are preconfigured, but you can change the settings to suit your individual requirements.

The settings can be changed via the menu **Settings** whilst on a call or in idle status.

### Changing the display language


☰ ▶ ⚙ ▶ OK ▶ 🗣 Language ▶ OK ▶ 🗣 Select languages ▶ Select (● = selected)

### Setting your country and local area codes

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards). Some of these numbers are already preset. Please ensure that the prefix is correctly separated from the rest of the area code.

☰ ▶ ⚙ ▶ OK ▶ 📞 Telephony ▶ OK  
▶ 🗣 Area Codes ▶ OK ▶ 🗣 Navigate to the entry field,  
delete the number using **<C** if needed ▶ Enter the number  
▶ Save

#### Example

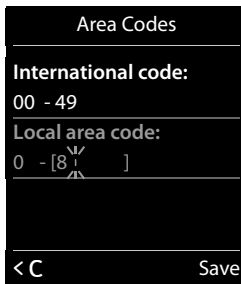

### Adjusting the handset display settings


#### Setting a screensaver

You can set a screensaver for the display when in idle status. You can choose from an analogue clock, a digital clock or an image

To show the display in idle status, **briefly** press 📞 .

☰ ▶ ⚙ ▶ OK ▶ 📺 Display ▶ OK  
▶ Screensaver (✓ = activated) ▶ Edit  
▶ Activation: 📺 On / Off  
▶ Selection:  
    📺 Digital Clock / Analog Clock / [Images]  
Or:  
▶ View (View screensaver)  
▶ 🗣 Select screensaver ▶ OK  
▶ Save

#### Example

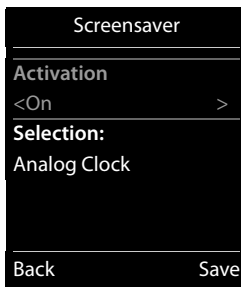

#### Setting the colour scheme

You can set the display to show a dark or a light background.

☰ ▶ ⚙ ▶ OK ▶ 📺 Display ▶ OK ▶ 🗣 Colour Schemes ▶ OK  
▶ 🗣 Colour Scheme 1 / Colour Scheme 2 ▶ Select (● = selected)

## Setting the display backlight

The display backlight is always lit when the handset is not in the base/charging cradle or when a key is pressed. Any **digit keys** pressed appear on the display for pre-dialling.

You can also activate/deactivate the display backlight for idle status:

▶ ▶ OK ▶ Display ▶ OK ▶ Backlight ▶ OK

In Charger: On / Off

Out of Charger: On / Off

▶ Save

### Note

The handset's standby time can be significantly reduced if the display backlight is activated.

## Activating/deactivating Message key flashing

Specify whether receipt of new messages should be displayed on the handset by the message LED.

▶ In idle status: ▶ \* ## 0 [0] 5 ##

The display shows the number 9.

▶ Press the following keys to select the type of message:

for messages on the network mailbox

for missed calls

for messages on the answer machine  
(only Gigaset E630A → page 31)

You will see the number 9 followed by your entry (e.g. 975); the current setting will be flashing in the entry field (e.g. 0).

▶ Press the key or to determine the setting for new messages:

The Message key flashes  
(stops when the key is pressed)

The Message key does not flash

▶ Confirm by pressing **OK** or go back to the idle display without saving by pressing **Back**.



## Activating/deactivating visual call

Incoming calls are signalled visually (e.g. in noisy environments).

▶ ▶ OK ▶ Telephony ▶ OK ▶ LED Call Signal ▶ Change (☑ = activated)

**Please note:** Changes are only saved permanently in **Profile Personal** (→ page 43).

## Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as you remove it from the charging cradle.

▶ ▶ OK ▶ Telephony ▶ OK ▶ Auto Answer ▶ Change (☑ = activated)

Regardless of the setting **Auto Answer**, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold for a further 2 seconds while placing the handset in the charging cradle.

### Setting earpiece profiles

You can set various profiles for the **earpiece** to optimally adapt your phone to your environment. Check which is the most comfortable for you.

☰ ▶ ⚙ ▶ OK ▶ 📞 Audio Settings ▶ OK ▶ 📞 Earpiece Profiles ▶ OK ▶ 📞 Select profile ▶ Select (● = selected)

**Earpiece Profiles: High and Low.** The default is **Low**.

### Setting the handset ringtones

#### Setting the ringtone volume

☰ ▶ ⚙ ▶ OK ▶ 📞 Audio Settings ▶ OK ▶ 📞 Ringtones (Handset) ▶ OK ▶ Volume ▶ OK

##### ▶ For internal calls and alarms:

📞 Volume can be set at 5 levels or crescendo (increasing volume) for internal calls and anniversaries.

##### ▶ External Calls:


📞 Volume can be set at 5 levels or crescendo (increasing volume) for external calls.

##### ▶ Save

**When the telephone rings**, you can permanently change the ringtone volume using the side keys  $\boxed{+}$  (louder) or  $\boxed{-}$  (quieter).

**Please note:** Changes are only saved permanently in **Profile Personal** (→ page 43).

#### Example

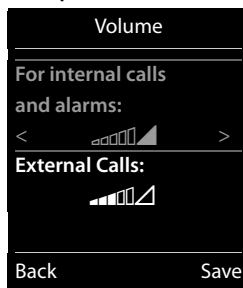

#### Setting the ring melody

☰ ▶ ⚙ ▶ OK ▶ 📞 Audio Settings ▶ OK ▶ 📞 Ringtones (Handset) ▶ OK ▶ 📞 Melodies ▶ OK

▶ **Internal Calls:** 📞 Setting the volume/melody for internal calls and anniversaries.

▶ **External Calls:** 📞 Setting volumes/melodies for external calls.

##### ▶ Save

### Activating/deactivating the ringtone

**Deactivating the ringtone permanently:** Using the Profile key  $\boxed{\triangle}$ , set the **Profile Silent** (→ page 43). 📞 appears in the status bar.

**Activating the ringtone permanently:** Using the Profile key,  $\boxed{\triangle}$  set the **Profile Loud** or **Profile Personal** (→ page 43).

Deactivating the ringtone for a **current call**: Press **Silence** or 📞.

### Silent alert

Incoming calls and other messages are indicated by a silent alert.


☰ ▶ ⚙ ▶ OK ▶ 📞 Audio Settings ▶ OK ▶ 📞 Silent Alert ▶ Change (☑ = activated)

**Please note:** Changes are only saved permanently in **Profile Personal** (→ page 43). This setting is saved in the **Profile Silent**.

## Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.


  **OK**  **Audio Settings** **OK**  **Advisory Tones** **OK**

▶ **Key Tones:**  **On / Off**

Tone when keys are pressed.

▶ **Confirmation:**  **On / Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received.

▶ **Battery:**  **On / Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds). There is no battery warning when the baby monitor is activated.

▶ **Save**

**Please note:** Changes are only saved permanently in **Profile Personal** (→ page 43).

## Activating/deactivating music on hold

You can activate/deactivate hold music for external calls during consultation and forwarding.

  **OK**  **Audio Settings** **OK**  **Music on hold** **Change**  = activated)

## Protection against unwanted calls

### Setting time control for external calls

You can specify a time period when you do not want the telephone to ring.

  **OK**  **Audio Settings** **OK**  
▶  **Ringtones (Handset)** **OK**  **Time Control** **OK**

▶ **For external calls:**  **On / Off**


If activated:

▶ **Suspend ring. from:** Enter the start of the period.

▶ **Suspend ring. until:** Enter the end of the period.

▶ **Save**

### Example

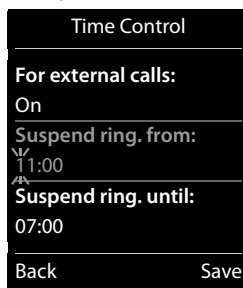

### Note

During this period, your phone will continue to ring for numbers to which you have assigned a VIP ringtone in the phonebook.

### Protection from anonymous callers

You can set your phone so that it doesn't ring for anonymous calls (→ page 21, callers who have withheld Calling Line Identification). The call is only signalled on the display. The setting only applies to handsets for which the setting is configured.

  **OK**  **Audio Settings** **OK**  **Ringtones (Handset)** **OK**  **Anon. Calls Silent** **Change**  = function activated)

### Quick access to numbers and functions

The **digit keys** **0** and **2** up to **9** can be assigned to a **number from the phonebook**.

The left and right **display keys** have a **function** preset by default, but the keys can be re-assigned (→ page 28).

You can then dial the number or start the function by simply pressing a key.


### Assigning digit keys

**Prerequisite:** You must assign a number to the digit key.

▶ Press and **hold** the digit key.

Or:

**Briefly** press the digit key. ▶ Press the display key **QuickDial**.

▶ The phonebook opens. ▶  Select entry. ▶ **OK**

The entry is saved to the corresponding digit key.

#### Note

If you delete or edit the entry in the phonebook at a later date, this will not affect the assignment to the number key.

### Selecting numbers/changing an assignment

**Prerequisite:** You must have assigned a number to the digit key.

When the handset is in idle status

▶ Press and **hold** the digit key: The number is dialled immediately.


Or:

▶ **Briefly** press the digit key: Press the left-hand display key with the number/name (abbreviated if necessary) to dial the number.

Or:

Press the display key **Change** to change the key assignment, or press the display key **Clear Key** to delete the assignment.

### Assigning display keys

▶ In idle status, press and **hold** the left or right-hand display key. ▶ The list of possible key assignments is opened. ▶  Select entry ▶ **OK**

Choose from the following functions:

**Baby Monitor** Set and activate the baby monitor (→ page 46).

**Alarm Clock** Set and activate the alarm clock (→ page 45).

**Calendar** Open calendar (→ page 44).

**One Touch Call** Set up one touch call (→ page 20).

**Redial** Show redial list (→ page 19).

**Spot LED:** LED light (torch function) on/off (→ page 43).

**More Functions...** You can also choose further functions:

**Call Lists** Show call list (→ page 41).

**Withhold Number** Withhold phone number identification for next call (→ page 22).

**Call Divert** Set up call forwarding (→ page 42).

## Changing the system PIN

---

 ▶  ▶ OK ▶  System ▶ OK ▶  System PIN ▶ OK

▶ If current PIN not 0000: enter current PIN ▶ OK

▶ Enter new system PIN (4 digits; 0 - 9) ▶ Save

### Resetting system PIN

If you have forgotten your system PIN, you can reset it to **0000**. If you do this, **all the base settings** will be reset and **all the handsets** will be de-registered!

▶ Remove the power cord from the base.

▶ Press and hold the Registration/Paging key (→ page 2) and at the same time reconnect the power cord to the base.

▶ Hold the Registration/paging key for at least 5 seconds.

## Restoring phone to default setting

---

You can reset individual modifications to base and handset settings separately.

The following are **not** affected by the reset:

- ◆ Date / time,
- ◆ Registration of handsets to the base and the current selection of the base,
- ◆ System PIN,
- ◆ Entries in the calendar and phonebook,
- ◆ Redial list.

When resetting the handset (**Handset Reset**), audio and display settings will be deleted.

When resetting the base (**Base Reset**), ECO DECT, answer machine, system settings and internal handset names, as well as call lists/answer machine lists, will be reset

### Resetting the handset/base station

 ▶  ▶ OK ▶  System ▶ OK ▶  Handset Reset / Base Reset ▶ For Base Reset:

Enter the system PIN ▶ OK ▶ Confirm security prompt with Yes



ECO DECT uses less energy and reduces transmission power.

## Reducing transmission power (radiation)

### In normal operation (default setting):

The device range is set to maximum as default. This guarantees optimum wireless management. In idle status, the handset will not function (as it is not transmitting). Only the base will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base and handset. A closer distance to the base means lower transmission power.

You can reduce the transmission power even further:

### Reducing the range and thereby lowering transmission power by up to 80%

In many spaces such as apartments, business rooms and offices, the maximum range is not necessary. If you deactivate the **Maximum Range** setting, you can reduce the transmission power during a call by up to 80%, using half of the range.

 ▶  ▶ OK ▶  ECO DECT ▶ OK ▶ **Maximum Range** ▶ **Change** (☑ = activated)

Display icon for reduced range → page 49.



## Answer machine (Gigaset E630A)

You can check whether your device is equipped with an integrated answer machine as follows:

 ▶  ▶ OK

Your device is equipped with an integrated answer machine if the submenu **Activation** is available.

### Activating/deactivating the answer machine


 ▶  ▶ OK ▶  **Activation** (✓ = activated) ▶ **Change**

▶ **Activation:**  **On / Off**


If activated:

▶ **Mode:**

 **Answer & record / Answer only / Alternating**



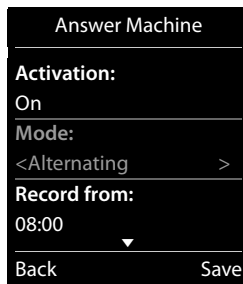

- **Answer & record:** The caller can leave a message;
- **Answer only:** The caller only hears an announcement and cannot leave a message;
- **Alternating:**  
If activated, **Record from:**  / **Record until:** Enter the length of time in which messages are recorded.


▶ **Save**



### Setting up the answer machine

#### Recording a personal announcement/advisory message

 ▶  ▶ OK ▶  **Announcements** ▶ OK ▶ **Record Announcem. /  Rec. Advisory Msg.** ▶ OK ▶ **To record, press "OK" and speak after the tone.** ▶ OK ▶ Record a message after the ready tone (min. 3 secs, max. 180 secs). ▶ **End** (Complete the recording and save.)

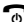**Cancelling the recording:** Briefly press the Answer/End call key  or **Back** during the recording.

After the recording, the announcement is played back for you to check.

**Repeating the recording:** Press **New** during playback.

#### Notes

- ◆ The recording ends if there is a pause lasting longer than 3 seconds.
- ◆ If you cancel the recording, the default announcement is used.
- ◆ If the answer machine's memory is full, it will switch to **Answer only** mode. After old messages have been deleted, it switches back into **Answer & record** mode.

## Listening to announcements/advisory messages

▶ ▶ OK ▶ Announcements ▶ OK ▶ Play Announcement / Play Advisory Msg. ▶ OK

If you have not recorded a personal announcement, the relevant default announcement is played.

**Recording a new announcement:** Press **New** during playback.

## Deleting announcements/advisory messages

▶ ▶ OK ▶ Announcements ▶ OK ▶ Delete Announcem. / Del. Advisory Msg. ▶ OK ▶ Yes (Confirm the prompt)

## Additional setting options

### ◆ Setting recording parameters:

▶ ▶ OK ▶ Recordings ▶ OK

- **Length:** 1 min. / 2 min. / 3 min. / **Maximum.**

- **Quality:** Long Play / **Excellent.**

- **Ring Delay:** Immediately / 10 sec. / 18 sec. / 30 sec. / **Automatic** (10 secs, if new messages are available, otherwise 18 secs).

▶ **Save**

### ◆ Deactivating/activating call screening on the handset:

▶ ▶ OK ▶ Call Screening ▶ **Change**  = on)

Deactivating call screening on the handset for the current playback: Press **Silence**.

## Playing back messages

▶ Press and **hold** the key.

**Prerequisite:** Key 1 is assigned to the answer machine.

▶ ▶ OK ▶ Set Key 1 ▶ OK ▶ Answer Machine ▶ **Select** (● = selected)

Or:

▶ Message playback via the message list:

Message key ▶ Answer Mach.: ▶ OK

Or:

▶ Message playback via the menu:

▶ ▶ OK ▶ **Play Messages** ▶ OK

If the network mailbox is set up (→ page 35): ▶ Answer Machine ▶ OK

The answer machine begins immediately with the message playback. New messages are played back first.

The following options are available **during playback**:

◆ Control the volume of the playback using the side keys,

◆ Stopping playback:


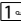

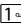




press , press again to continue.

Or:


Press **Options**. Playback is stopped, to continue: ▶ **Continue** ▶ OK

◆ Go to the next message: press or .


◆ Skip back 5 seconds (> 5 seconds) during message playback: press .



- ◆ Skip to the previous message:  
Press  or  during the time stamp playback.
- ◆ Go to the start of the current message:  
Press  or  during the message playback.
- ◆ Delete current message: **Delete**
- ◆ To delete all old messages:  
**Options** ▶  **Delete old list** ▶ **OK** ▶ **Yes** (Confirm prompt.)
- ◆ Calling back a caller: **Options** ▶  **Dial** ▶ **OK**
- ◆ To copy the number to the directory: **Options** ▶  **Copy to Directory** ▶ **OK**
- ◆ Marking an old message as "new": **Options** ▶  **Mark as new** ▶ **OK**

## More answer machine functions





- ◆ **Picking up the call during answer machine recording:**  
Press the Answer call key  or **Accept**.

### Note

If call screening has been activated on the handset and the call can already be heard on the handset, then pressing the Answer call key  only activates/deactivates the hands-free mode.

- ◆ **Diverting a call to answer machine:**  
The answer machine is activated and the handset indicates an external call:  the answer machine starts immediately in **Answer & record** mode.
- ◆ **Two-way recording of external call:** **Options** ▶  **Two-way Record** ▶ **OK**  
Ending two-way recording: **End**
- ◆ Tell the other party that the call is being recorded.

## Changing the language for the voice prompt and default announcement

 ▶  ▶ **OK** ▶  **Language** ▶ **OK** ▶  Select language (American English / Canadian French / Mexican Spain) ▶ **Select** (● = selected)

## Operating when on the move (remote operation)

Check or activate the answer machine from another telephone (e.g. hotel, mobile phone).

**Prerequisites:** The current system PIN is set to something other than 0000 (→ page 29) and the other telephone has tone dialling (DTMF). Alternatively, you can use a code transmitter (available from retailers).

## Activating the answer machine

**Prerequisite:** The answer machine is deactivated.

- ▶ Call your phone line and let it ring until you hear: "Please enter PIN".
- ▶ Enter the system PIN for your phone within 10 seconds.

## Calling your answer machine and playing messages

**Prerequisite:** The answer machine is activated.

- ▶ Call your phone line and press the **[9]** key when you hear your announcement. ▶ Enter your phone's system PIN.

You can operate the answer machine with the keypad.

The following keys are used:

- [1]** During the time stamp playback:  
Skip to previous message.  
During message playback:  
Go to the start of the current message.
- [2]** Stop playback. Press again to resume.  
After a pause of approx. 60 seconds, the connection is ended.
- [3]** Go to the next message.
- [4]** Skip back 5 seconds in the current message.
- [0]** Delete current message.
- [\*]** Change the status of a previously played back message to "new".

### Canceling remote operation

- ▶ Press the end call key or replace the earpiece.

#### Note


The answer machine will terminate the connection under the following circumstances:

- ◆ The incorrect system PIN has been entered.
- ◆ There are no messages on the answer machine.
- ◆ After the remaining memory has been specified.


# Network mailbox

---





You cannot use the network mailbox unless you have **requested** it from your provider and saved the network mailbox number in your phone.

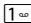 ▶  ▶ OK ▶  **Network Mailbox** ▶ OK ▶ **Network Mailbox**: Enter the phone number of the network mailbox ▶ OK

## Playing back network mailbox messages

▶ Press and **hold** the  key.

**Prerequisite:** Assign key 1 to the network mailbox (Gigaset E630A → page 31).

 ▶  ▶ OK ▶  **Set Key 1** ▶ OK ▶  **Network Mailbox**

▶ **Select** ( = selected)



Or:

▶ Message playback via the message list:

Message key  ▶  **Net Mailbox**: ▶ OK

Or:

▶ Message playback via the menu:

 ▶  ▶ OK ▶ **Play Messages** ▶ OK ▶ (Gigaset E630A → page 31): **Network Mailbox**

▶ OK

Your network mailbox is called directly. You can listen to the messages.

## Multiple handsets

### Registering handsets

You can register up to six handsets to your base. You must initiate handset registration on the handset **and** on the base station. Both must be carried out **within 60 secs**.

- ▶ **On the base station: hold** (min. 3 secs) the Registration/paging key (→ page 2).
- ▶ **On the handset E630** (for other handsets see "Notes"):
  - If the handset is not already registered to a base station: Press the display key **Register**.
  - If the handset is already registered to a base station:
    - ☰ ▶ ⚙ ▶ OK ▶ ⌂ ▶ **Registration** ▶ OK ▶ **Register Handset** ▶ OK
    - ▶ If the handset is already registered to four bases: ⌂ ▶ Select a base. ▶ OK

The connection to the base is established, this may take some time.

- ▶ Enter the system PIN if required (factory setting: **0000**). ▶ **OK**

Successful registration is shown on the display.

#### Notes

- ◆ If six handsets are already registered to the base (all internal numbers assigned), replace the handset with the internal number 6 with the new one. If this is not possible, because a conversation is being held for example, the message **No available internal number** is given. In this case, de-register another handset that is no longer required and repeat the registration procedure.
- ◆ For **other Gigaset handsets** and handsets for other devices with GAP functionality, start the registration of the handset according to the respective user guide.

### Using the handset on multiple bases

Your handset can be registered on up to four bases.

The active base is the base to which the handset was last registered. The other bases remain saved in the list of available bases.

You can change the assignment to the base **manually at any time**.





Alternatively, you can set the handset so that it selects the base with the best reception (**Best Base**), as soon as it loses connection to the current base.

- ☰ ▶ ⚙ ▶ OK ▶ ⌂ ▶ **Registration** ▶ OK ▶ **Select Base** ▶ OK ▶ ⌂ ▶ Select base or **Best Base**. ▶ **Select** (● = selected)

#### Changing name of a base station

- ☰ ▶ ⚙ ▶ OK ▶ ⌂ ▶ **Registration** ▶ OK ▶ **Select Base** ▶ OK ▶ ⌂ ▶ Select base. ▶ **Select** (● = selected) ▶ **Name** ▶ Change name. ▶ **Save**

## De-registering handsets

 ▶  ▶ OK ▶  Registration ▶ OK ▶  De-register Handset ▶ OK  
▶ The handset used is selected. ▶  Select another handset if required. ▶ OK ▶ If system PIN <> 0000: Enter the system PIN. ▶ OK ▶ Confirm de-registration with **Yes**.



If the handset is still registered to other bases, it switches to the base with the best reception (Best Base → page 36).

## Locating a handset ("Paging")

▶ Press **briefly** the Registration/paging key on the base (→ page 2).




All handsets will ring at the same time ("paging"), even if ringers are switched off. (Exception: handset on which the baby monitor is activated).

### Ending the search

- ▶ **On the base station:** Press the Registration/paging key again **briefly**, or
- ▶ **On the handset:** press  or  or press **Silence**, or
- ▶ **No action:** After approx. 3 minutes, the paging call will end **automatically**.

## Changing the handset name and internal number

When registering multiple handsets, they will automatically be assigned the names "INT 1", "INT 2" etc. Each handset will automatically be assigned the lowest unassigned number (1-6). To change:




 ▶ The list of handsets is opened. Your own handset is marked <. ▶  Select another handset if required. ▶ **Options**  
▶  **Rename** ▶ OK ▶ Enter names. ▶ OK

Or:

▶  **Edit Handset No.** ▶ OK ▶  Select number. ▶ OK  
▶ **Save**

## Making internal calls



Internal calls to other handsets registered to the same base are free of charge.


 (press **briefly**) ▶ The list of handsets is opened. Your own handset is marked <. ▶  Select the handset or **Call all** (group call) from the list if required. ▶ 

**Holding down**  immediately starts a call on **all** registered handsets.

### Internal consultation/internal transfer


You receive a call from an **external** participant and would like to transfer the call to an **internal** participant or wish to consult him/her.

 ▶ The list of handsets is opened. ▶ If more than two handsets are registered to the base, select one handset or **Call all**. ▶  or OK


**Holding a consultation call:** You are speaking to the internal participant and are returning to your external call: ▶ **Options** ▶  **End active call** ▶ OK

## Multiple handsets

**Transferring an external call:** You have two options to transfer the call:

- ▶ Wait until the participant called answers, then hang up:  
Press the End call key .



Or:


- ▶ Hang up before the participant calls: Press the End call key .

If the participant called does not answer or does not transfer the call, end the consultation with **End**.

## Establishing a conference call/call swapping


You are taking a call while a second call is being held. Both callers are indicated on the display.

- ▶ **Call swapping:** You can switch between both participants using .
- ▶ **Establishing a three-way conference call:** Press **Conf**.  
**Ending a conference call:** Press **End Conf**. You are reconnected with the external participant.  
You can switch again between both participants using .

Each of the callers can end their participation in the conference call by pressing the End call key .

## Accepting/rejecting call waiting

If you get an external call while conducting an internal call, you will hear the call waiting tone. If the number is transferred, you will see it or the name of the caller on the display.

- ▶ Rejecting a call: ▶ Press the display key **Reject**.
- ▶ Accepting a call: ▶ Press the display key **Accept**. You are now speaking to the new caller. The previous call is placed on hold.  
**Ending the current call and returning to the call on hold:**  
▶ **Options** ▶  **End active call** ▶ **OK**.

## Listening in to an external call

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference).


**Prerequisite:** The function **Listening In** is activated.

## Activating/deactivating internal listening in

 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Listening In** ▶ **Change** (☑ = on)

## Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You can listen in to the external call.

- ▶ **Hold down** . All participants hear a signal tone. Call waiting is not displayed.

## Ending listening in

- ▶ Press . All participants hear a signal tone.



## Phonebook (Address book)

In a **phonebook entry**, you can store first names and surnames, up to three numbers, an anniversary with a reminder, and caller melody.



You can create the directory (with up to 200 entries) individually for each of your handsets. You can also send lists/entries to other handsets (→ page 40).

### Length of the entries



3 numbers: Max. 32 digits each  
 First name and surname: Max. 16 characters each


## Managing directory entries

### Opening phonebook


Press the key  in idle status or, depending on the situation, the display key .

### Creating a new entry



- ▶ Open directory. ▶  <New Entry> ▶ OK
- ▶ Switch between the input fields using  and enter the relevant components of the entry (names, numbers, anniversary, ringtone).  
 Navigate downwards to display further components.
- ▶ Press the display key **Save**.

To create an entry, you must enter at least one number. If you have assigned a caller melody, the entry in the phonebook is supplemented with the symbol .

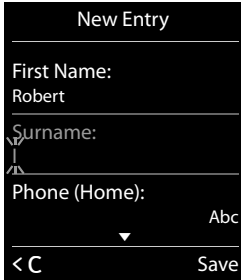


Example



### Displaying/changing an entry

- ▶ Open phonebook. ▶  Select the desired entry.
  - ▶ **View** ▶ Display all components of the entry. ▶ **Edit**
- Or:
- ▶ **Options** ▶  **Edit entry** ▶ OK

### Deleting an entry

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options** ▶  **Delete entry** ▶ OK
- Delete **all** entries in the directory:
- ▶ Open phonebook. ▶ **Options** ▶  **Delete List** ▶ OK

### Defining the order of the contacts entries

You can define whether the entries are to be sorted by first name or surname.

- ▶ Open phonebook. ▶ **Options** ▶ Press **Sort by Surname** or **Sort by First Name**.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.



The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetical) | Other characters


## Displaying the number of entries that are available in the directory

▶ Open phonebook. ▶ Options ▶  Available Memory ▶ OK

## Selecting a phonebook entry, searching in the phonebook

- ▶ Open phonebook.
- ▶ Scroll to the name you are searching for using . **Holding down**  scrolls continuously upwards or downwards through the phonebook.

Or:

- ▶ Enter the first few letters (max. 8 letters) using the keypad. The display jumps to the first name that begins with these letters. If necessary, scroll on to the desired entry using .

## Transferring an entry/phonebook to another handset

### Prerequisites:





- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

You can transfer the entire directory, an individual entry or several individual entries.

### Notes

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.
- ◆ When transferring an entry between two vCard handsets:  
If the recipient does not yet have an entry with that name, a new entry is created.  
If there is already an entry with that name, this entry is expanded with the new numbers.  
If the entry contains more numbers than the recipient permits, a further entry is created with the same name.
- ◆ If the recipient is not a vCard handset: A separate entry is created and sent for each number.
- ◆ Your handset receives entries from a non-vCard handset: Entries with numbers that are already stored are discarded, otherwise a new entry is created.





### Transferring individual entries

▶ Open phonebook. ▶  Select the desired entry. ▶ Options  
▶  Copy Entry ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

After a successful transfer:




- ▶ Press **Yes** if you want to send another entry. Otherwise press **No**.

### Transferring the entire directory



▶ Open phonebook. ▶  Select the desired entry. ▶ Options  
▶  Copy List ▶ OK ▶  to Internal ▶ OK ▶  Select the recipient handset. ▶ OK

## Transferring a displayed number to the phonebook

You can transfer numbers to the phonebook which are displayed in a list, e.g. the caller list, the redial list, as well as numbers that you have already selected or have entered for selection.





- ▶ The number is displayed or highlighted.
- ▶ Press display key  or **Options** ▶  **Copy to Directory**. ▶ **OK**
  - ▶ **<New Entry>** ▶ **OK** ▶  Select number type. ▶ **OK**
    - ▶ Complete the entry. ▶ **OK**

Or:

- ▶  Select entry. ▶ **OK** ▶  Select number type. ▶ **OK**
  - ▶ The number is entered or an existing number is overwritten (answer the prompt using **Yes/No**).
- ▶ **Save**






## Transferring a number from the phonebook

In some operating situations, you can transfer a number from the phonebook, e.g. by dialling (even after the entry of a prefix).

- ▶ Depending on the operating situation, open the phonebook using  or .
- ▶  Select the phonebook entry. ▶ **OK**
- ▶ If more than one number is entered:  Select number. ▶ **OK**

## Call list







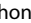

Your telephone stores calls in various lists. Opening the lists:

- ◆ **Missed calls list:** Message key  ▶  **Missed Calls**: ▶ **OK**
- ◆ **List selection:**  ▶  ▶ **OK** ▶  Select list. ▶ **OK**

The last 20 entries are displayed in the call list.

### List entry

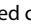The following information is displayed in the list entries:

- ◆ The list type (in the header row)
- ◆ Icon for the type of entry:
  -  (Missed calls),  (Accepted calls),  (Outgoing calls),
  -  (Call on the answer machine, only Gigaset E630A  
→ page 31)
- ◆ Caller's number. If the number is stored in the phonebook, name and number type are displayed instead ( Phone (Home),  Phone (Office),  Phone (Mobile)). For missed calls, the number of missed calls from this number is also shown in square brackets.
- ◆ Date and time of call (if set).
- ▶  Select entry. ▶ **Options**


▶ **View:** All available information is displayed, e.g. the corresponding number when a name is displayed.

▶ **Options:** You can delete the entry or transfer the number to the phonebook (→ page 41).

### Calling back a caller from the call list:

- ▶  Select entry. ▶ Press the Answer call key .

Example

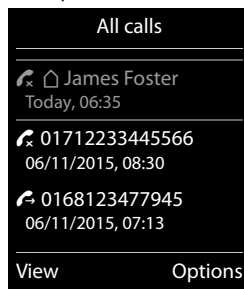


## Contactability

---

### Call forwarding (CF)

You can forward calls to another number. No call forwarding is activated yet or you want to change the current setting:




 ▶  ▶ OK ▶  Call Divert ▶ OK


▶ **Status:**  On / Off

**Unknown** is always displayed when calling up the menu.

▶ **To Phone Number:** Enter the number to which the call is to be forwarded.

▶ **When:**


-  **All Calls:** Calls are forwarded immediately. No more calls are signalled on your phone.
-  **No Answer:** Calls are forwarded if no one accepts the call within several rings.
-  **When Busy:** Calls are forwarded if your line is busy. Call is forwarded without a call waiting tone.

▶ **Send** ▶ Your provider is called and the corresponding code is sent. If the call forwarding has been changed, you will hear a confirmation on the phone line. ▶ 

#### Please note

**Forwarding calls** to your phone number can result in **additional costs**. Please consult your provider.


## Sound profiles


You can call up the 3 sound profiles that are adapted for your handset to your surroundings consecutively by using the  key. The profile is switched immediately without a prompt. By default, **Profile Personal** is activated.

 ▶ **Profile Loud** ▶  ▶ **Profile Silent** ▶  ▶ **Profile Personal**

The profiles are set as follows by default:

| Default setting                  |                   | Profile Loud | Profile Silent        | Profile Personal |
|----------------------------------|-------------------|--------------|-----------------------|------------------|
| Silent alert (→ page 26)         |                   | On           | like Profile Personal | Off              |
| Ringer (→ page 26)               |                   | On           | Off                   | On               |
| Ringtone volume (→ page 26)      | Internal          | 5            | Off                   | 3                |
|                                  | External          | 5            | Off                   | 3                |
| Handset volume (→ page 21)       | Handset           | 5            | 3                     | 3                |
|                                  | Handsfree         | 5            | 3                     | 3                |
| LED light for a call (→ page 25) |                   | Yes          | No                    | No               |
| Simple Auto Answer (→ page 20)   |                   | Yes          | No                    | No               |
| Advisory tones (→ page 27)       | Key click         | Yes          | No                    | Yes              |
|                                  | Confirmation tone | Yes          | No                    | Yes              |
|                                  | Battery tone      | Yes          | Yes                   | Yes              |

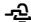When switching to **Profile Silent** you can activate an alert tone by pressing the **Beep** display key.  appears in the status bar.

Changes in **Profile Loud** and **Profile Silent** only apply provided that the profile is not changed (by pressing the  Profile key). Changes to **Profile Personal** are stored permanently for this profile.

The set profile remains set when switching the phone off and back on.

## Spot LED

You can use your telephone as a torch.

### Activating/deactivating the torch function

Press the **Spot LED** display key (→ page 28).

Or:

 ▶  ▶ OK ▶ **Spot LED** ▶ OK

After 2 minutes the function is automatically deactivated or press the **OFF** display key.

## Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be highlighted.



### Saving appointments to the calendar

**Prerequisite:** Date and time are set (→ page 11).

▶ ▶ OK ▶ Calendar ▶ OK

▶ Select the desired day. ▶ OK

- ◆ Appointments that have already been stored are shown.  
<New Entry> ▶ OK opens the window to enter an additional appointment.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

**Activation:** On/Off

The following information can be added:

- ◆ **Date:** The selected day is preset. Enter new data to change.
  - ◆ **Time:** Time (hour and minute) of the appointment.
  - ◆ **Text:** Appointment name (e.g. dinner, meeting).
  - ◆ **Signal:** Select the melody of the reminder signal or deactivate the acoustic signalling.
- ▶ Save

### Signalling of appointments/anniversaries

Anniversaries are transferred from the phonebook and displayed as an appointment. An appointment/anniversary is displayed in idle status and signalled for 60 seconds with the selected ringtone.

**You can deactivate the reminder call:**

- ▶ Press **OFF** to acknowledge and end the reminder call.


**When you are on the phone**, a reminder call is indicated on the handset with a **single** advisory tone.

**During the reminder call** you can turn the ringtone volume (up) or (down) continuously using the side keys.




## Displaying missed appointments/anniversaries


The following appointments and anniversaries are stored in the **Missed Alarms** list:

- ◆ The appointment/anniversary call was not acknowledged.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the head of the list.

To open the list: ▶ Message key  ▶  Missed Alarms ▶ OK

Or via the menu:  ▶  ▶ OK ▶  Missed Alarms ▶ OK

▶  scroll in the list if required

Information about the appointment/anniversary is displayed. You can:

- ▶ Delete an appointment/anniversary: **Delete**

## Displaying/changing/deleting stored appointments

 ▶  ▶ OK ▶  Calendar ▶ OK ▶  Select the desired day. ▶ OK ▶ The appointment list is displayed. ▶  Select the desired appointment.

- ▶ **View:** Display appointment settings, change, if required using **Edit**.

Or:

- ▶ **Options:** Change settings or delete appointments.
  - **Edit entry** ▶ OK
  - **Delete entry** ▶ OK
  - **Activate/Deactivate** ▶ OK
  - **Delete all Appoints.** ▶ OK ▶ Confirm prompt with **Yes**.  
All appointments for the **selected day** are deleted.




## Alarm clock

**Prerequisite:** Date and time are set (→ page 11).


You can activate/deactivate and set the alarm clock as follows:

 ▶  ▶ OK ▶ **Activation:**  On/Off

▶ Changing the settings:


- **Time:** Set the hour and minute for the wake-up time (time setting → page 11).
- **Occurrence:**  **Daily/Monday-Friday**
- **Volume:**  Volume can be set at 5 levels or crescendo (increasing volume).
- **Melody:**  Select a ringtone for the alarm call.

▶ Press the display key **Save**.

When the alarm clock is activated, the icon  and the alarm time is displayed in idle status.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

### Example

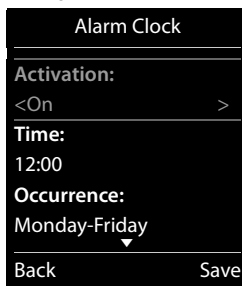

## Baby monitor

During the sounding of the alarm you can turn the volume  $\boxed{+}$  (up) or  $\boxed{-}$  (down) continuously using the side keys.

### Deactivating the alarm call/repeating after a pause (snooze mode)

**Prerequisite:** One alarm call sounds.

▶ **Deactivating until the next alarm call:** Press **OFF**.

Or:

▶ **Snooze mode:**

Press **Snooze** or any key. The wake-up call is deactivated and then repeated after 5 minutes.

Or:

Press nothing. The alarm call is deactivated after 60 seconds and then repeated after 5 minutes. After the fourth repetition, the alarm call is deactivated for 24 hours.

## Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The baby monitor alarm to an external number is cancelled after approximately 90 seconds.

In baby monitor mode, incoming calls are only signalled on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and pressing the middle of the control key.

You can answer the baby monitor alarm using the **Two Way Talk** function. Deactivate/activate the speaker of the handset with this function.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.

### Caution

Ensure the following points:

- ◆ The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- ◆ The baby monitor is activated 20 seconds after switching on.

Please always check the functionality when you switch on:

- ◆ Test the sensitivity.
- ◆ Check the connection if you are forwarding the baby monitor alarm to an external number.
- ◆ Make sure that the answer machine at the target number is switched off.








## Activating/deactivating and setting the baby monitor

 ▶  ▶ OK ▶  Baby Monitor ▶ OK

▶ **Activation:**  On/Off


▶ Setting the baby monitor:

- **Send alarm to:**  **Internal** (at least 2 handsets are registered)/ **External**  
If **Internal** is selected:
  - ▶ **Handset:** Press the **Change** display key. ▶  Select handset. ▶ OK
  - If **External** is selected:
    - ▶ **Number:** Enter the number directly or select from the phonebook (press the display key ).
- **Two Way Talk:**  On/Off
- **baby monitorSensitivity:**  High/Low

▶ **Save**



The target number is displayed in idle status when the baby monitor alarm is activated. The baby monitor is deactivated using the **OFF** display key.

## Cancelling the baby monitor alarm

**Cancelling during a baby monitor alarm:** Press .


## Deactivating the baby monitor remotely

**Prerequisites:** The baby monitor alarm is forwarded to an external destination number. The recipient's phone supports tone dialling.

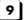▶ Accept the baby monitor alarm and press the   keys.

The call is ended. The baby monitor is deactivated and the handset is in idle status.

### Baby monitor activated

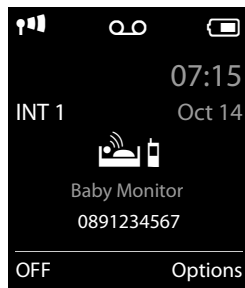

# Operating the telephone on a router/PABX

## Operation with a router

When operating on the analogue connection of a router, potentially occurring **echoes** can be reduced by switching on **XES mode 1**\*. If **XES mode 1** does not suppress the echoes sufficiently, you can activate **XES mode 2**.

If there are no problems with echoes, the normal mode (factory settings) should be activated.

▶ \* ##-> 0 [0] 5 [5] ##-> 7 [7] 0 [0]

▶ 0 [0] ▶ **OK** (for normal mode)

▶ 1 [1] ▶ **OK** (for XES mode 1)

▶ 2 [2] ▶ **OK** (for XES mode 2)

## Operation with a PABX

To find out which settings are required for your PABX, please refer to the PABX user guide.

## Dialling modes and flash time

### Changing the dialling mode

▶ ▶ **OK** ▶ Telephony ▶ **OK** ▶ Dialling Mode ▶ **OK** ▶ Select tone dialling (Tone)/ pulse dialling (Pulse) ▶ Select (● = selected)

### Setting flash time

▶ ▶ **OK** ▶ Telephony ▶ **OK** ▶ Recall ▶ **OK** ▶ Select flash time ▶ Select (● = selected)

## Setting pauses

**Menu key** ▶ \* ##-> 0 [0] 5 [5] ##-> ▶ Then enter one of the following function-specific codes:

### ◆ Pause after line seizure:

1 [1] 6 [6] MND ▶ 1 [1] ▶ **OK** (for 1 sec.)

1 [1] 6 [6] MND ▶ 2 [2] ABC ▶ **OK** (for 3 secs.)

1 [1] 6 [6] MND ▶ 3 [3] DEF ▶ **OK** (for 7 secs.)

### ◆ Pause after Flash key:

1 [1] 2 [2] ABC ▶ 1 [1] ▶ **OK** (for 800 ms)

1 [1] 2 [2] ABC ▶ 2 [2] ABC ▶ **OK** (for 1600 ms)

1 [1] 2 [2] ABC ▶ 3 [3] DEF ▶ **OK** (for 3200 ms)

## Switching temporarily to tone dialling (Tone)

After dialling the external number or after establishing the connection:

▶ Press the star key \* briefly.

Or:

▶ **Options** ▶ Tone Dialling ▶ **OK**

\* XES stands for "eXtended Echo Suppression".

## Display icons

### Icons in the status bar

The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

| Icon | Meaning  |
|------|--|
|      | Signal strength  |
|      | 76% - 100%   |
|      | 51% - 75%  |
|      | 26% - 50%  |
|      | 1% - 25%   |
|      | Red: no connection to the base   |
|      | Answer machine activated (only Gigaset E630A → page 31)<br>flashes: Answer machine is recording a message or is being operated by another internal party |
|      | Profile Silent activated (The ringtone is switched off)  |
|      | "Beep" ringtone activated  |
|      | Key lock   |

| Icon | Meaning  |
|------|--|
|      | Battery charge status:   |
|      | White: charged over 66%  |
|      | White: charged between 34 and 66%  |
|      | White: charged between 11 and 33%  |
|      | Red: charged below 11%   |
|      | Flashes red: battery almost empty (approx. 5 minutes talktime remaining) |
|      | Battery is charging (current charge status):                             |
|      | 0% - 10%   |
|      | 11% - 33%  |
|      | 34% - 66%  |
|      | 67% - 100%   |





### Menu icons


|  |                     |
|--|---------------------|
|  | Alarm Clock         |
|  | Call Lists          |
|  | Answer Machine      |
|  | Select Services     |
|  | Additional Features |
|  | Settings            |

## Display icons

### Display key icons

The following icons indicate the current function of the display keys according to the operating situation:

| Icon   | Action                       |
|--|------------------------------|
|  | Last number redial           |
|  | Deleting text                |
|  | Opening phonebook            |
|  | Copy number to the phonebook |

| Icon  | Action  |
|---|---|
|  | Forwarding a call to the answer machine (only Gigaset E630A<br>→ page 31) |

### Display icons for signalling of



Establishing a call  
(outgoing call)



Connection  
established



No connection  
established/connection  
terminated



External call



Internal call



Reminder call for  
anniversary



Reminder call for  
appointment



Alarm call



Answer machine  
recording  
(only Gigaset E630A  
→ page 31)

### Other display icons



Information



(Security) prompt



Please wait...



Action complete  
(green)



Action failed (red)

# Menu tree

Opening the main menu: Press  whilst the telephone is in idle status.

## Note

Not all functions described in this user guide are available in all countries or with all network providers.



## Alarm Clock

→ page 45



## Call Lists

|                |           |
|----------------|-----------|
| All calls      | → page 41 |
| Outgoing calls | → page 41 |
| Accepted calls | → page 41 |
| Missed calls   | → page 41 |



## Answer Machine

|                  |                      |           |
|------------------|----------------------|-----------|
| Play Messages    | Network Mailbox **   | → page 35 |
|                  | Answer Machine **    | → page 32 |
| Activation *     |                      | → page 31 |
| Announcements *  | Record Announcem. *  | → page 31 |
|                  | Play Announcement *  | → page 32 |
|                  | Delete Announcem. *  | → page 32 |
|                  | Rec. Advisory Msg. * | → page 31 |
|                  | Play Advisory Msg. * | → page 32 |
|                  | Del. Advisory Msg. * | → page 32 |
| Recordings *     |                      | → page 32 |
| Call Screening * |                      | → page 32 |
| Network Mailbox  |                      | → page 35 |
| Set Key 1 *      | Network Mailbox      | → page 35 |
|                  | Answer Machine       | → page 32 |
| Language *       |                      | → page 33 |

\* Base with answer machine only

\*\* Base with answer machine **and** number of the network mailbox entered only



## Select Services

|                     |              |           |
|---------------------|--------------|-----------|
| Next Call           | Call Waiting | → page 22 |
| Call Divert         |              | → page 42 |
| All Calls Anonym.   |              | → page 22 |
| Unknown Call Reject |              | → page 22 |
| Ringback Off        |              | → page 23 |

## ★ Additional Features

|                |           |
|----------------|-----------|
| Spot LED       | → page 43 |
| Calendar       | → page 44 |
| Baby Monitor   | → page 46 |
| One Touch Call | → page 20 |
| Missed Alarms  | → page 45 |



## Settings




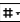
|                |                     |           |
|----------------|---------------------|-----------|
| Date/Time      | → page 11           |           |
| Audio Settings | Handset Volume      | → page 21 |
|                | Earpiece Profiles   | → page 26 |
|                | Advisory Tones      | → page 27 |
|                | Silent Alert        | → page 26 |
|                | Ringtones (Handset) | → page 26 |
|                | Music on hold       | → page 27 |
| Display        | Screensaver         | → page 24 |
|                | Colour Schemes      | → page 24 |
|                | Backlight           | → page 25 |
| Language       | → page 24           |           |
| Registration   | Register Handset    | → page 36 |
|                | De-register Handset | → page 37 |
|                | Select Base         | → page 36 |
| Telephony      | Auto Answer         | → page 25 |
|                | Easy Acceptance     | → page 20 |
|                | LED Call Signal     | → page 25 |
|                | Area Codes          | → page 24 |
|                | Listening In        | → page 38 |
|                | Dialling Mode       | → page 48 |
|                | Recall (Flash)      | → page 48 |
|                | Own Area Code       |           |
|                | Extra Area Codes    |           |
| System         | Reset Handset       | → page 29 |
|                | Base Reset          | → page 29 |
|                | System PIN          | → page 29 |
| ECO DECT       | Maximum Range       | → page 30 |

## Questions and answers

If you have any queries about the use of your telephone, suggested solutions are available on our web-site at

[www.gigaset.com/service](http://www.gigaset.com/service) ▶ FAQ ▶ First steps for troubleshooting.

The table below also lists steps for troubleshooting.

|  |
|--|
| <p><b>You are not sure whether your device is equipped with an integrated answer machine.</b></p> <ul style="list-style-type: none"><li>▶ Open the answer machine menu:  ▶  ▶ OK</li></ul> <p>Your device is equipped with an integrated answer machine if the submenu <b>Activation</b> is available.</p>   |
| <p><b>The display is blank.</b></p> <ol style="list-style-type: none"><li>1. The handset is not activated.<ul style="list-style-type: none"><li>▶ <b>Hold down</b> .</li></ul></li><li>2. The battery is empty.<ul style="list-style-type: none"><li>▶ Charge the battery or replace it ( → page 7).</li></ul></li><li>3. The key and display lock is activated.<ul style="list-style-type: none"><li>▶ <b>Hold down</b> the hash key .</li></ul></li></ol>  |
| <p><b>"No Base" flashes on the display.</b></p> <ol style="list-style-type: none"><li>1. The handset is outside the range of the base.<ul style="list-style-type: none"><li>▶ Move the handset closer to the base.</li></ul></li><li>2. The base is not activated.<ul style="list-style-type: none"><li>▶ Check the base power adapter.</li></ul></li><li>3. The base's range is reduced because <b>Maximum Range</b> is deactivated.<ul style="list-style-type: none"><li>▶ Activate <b>Maximum Range</b> ( → page 30) or reduce the distance between the handset and base.</li></ul></li></ol>   |
| <p><b>"Please register handset" or "Place handset in base" flashes on the display.</b></p> <p>The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than six DECT registrations).</p> <ul style="list-style-type: none"><li>▶ Register the handset again ( → page 36).</li></ul>   |
| <p><b>Your settings are not accepted.</b></p> <ul style="list-style-type: none"><li>▶ Ensure that you have set the <b>Profile Personal</b> before you make changes to the device settings ( → page 43).</li></ul>  |
| <p><b>The handset does not ring.</b></p> <ol style="list-style-type: none"><li>1. The ringtone is deactivated.<ul style="list-style-type: none"><li>▶ Activate ringtone ( → page 26).</li></ul></li><li>2. Call forwarding is set.<ul style="list-style-type: none"><li>▶ Deactivate call forwarding ( → page 42).</li></ul></li><li>3. The phone does not ring if the caller has withheld his number.<ul style="list-style-type: none"><li>▶ Activate the ringtone for unknown calls ( → page 27).</li></ul></li><li>4. The phone does not ring during a specific period or for certain numbers.<ul style="list-style-type: none"><li>▶ Check time control for external calls ( → page 27).</li></ul></li></ol> |
| <p><b>You cannot hear a ringtone/dialling tone from the fixed line network.</b></p> <p>The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.</p> <ul style="list-style-type: none"><li>▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer ( → page 57).</li></ul>   |
| <p><b>Error tone sounds after system PIN prompt.</b></p> <p>You have entered the wrong system PIN.</p> <ul style="list-style-type: none"><li>▶ Repeat the process, reset the system PIN to 0000 if required ( → page 29).</li></ul>  |

**Forgotten system PIN.**

- ▶ Reset the system PIN to 0000 ( → page 29).

**The other party cannot hear you.**

The handset is "muted".

- ▶ Activate the microphone again ( → page 22).

**The caller's number is not displayed.**

1. **Calling Line Identification (CLI)** is not approved for the caller.
  - ▶ The **caller** should ask the network provider to enable Calling Line Identification (CLI).
2. **Caller display (CLIP)** is not supported by the network provider or is not enabled for you.
  - ▶ Caller display (CLIP) is enabled by the network provider.
3. Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.
  - ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts.
  - ▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, phone number identification, caller ID, etc. in the system's user guide or ask the system manufacturer.

**You hear an error tone when keying an input.**

Action has failed/invalid input.

- ▶ Repeat the process.  
Read the display and refer to the user guide if necessary.

**You cannot listen to messages on the network mailbox.**

Your PABX is set to pulse dialling.

- ▶ Set your PABX to tone dialling.

**only Gigaset E630A ( → page 31):****No time is specified for a message in the call list.**

Date/time are not set.

- ▶ Set the date/time ( → page 11).

**The answer machine reports "Invalid PIN" during remote operation.**

1. You have entered the wrong system PIN.
  - ▶ Repeat input of system PIN.
2. The system PIN is still set to 0000.
  - ▶ Set the system PIN to something other than 0000 ( → page 29).

**The answer machine is not recording any messages/has switched to answer only mode.**

The memory is full.

- ▶ Delete old messages.
- ▶ Play back new messages and delete.



## Exclusion of liability

Your handset display has a resolution of 128 x 160 pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation.

**This is normal and no reason for a warranty claim.**

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

| Description                                  | Maximum number of permitted pixel errors |
|--|--|
| Colour illuminated sub-pixels                | 1  |
| Dark sub-pixels                              | 1  |
| Total number of coloured and dark sub-pixels | 1  |

### Note

Signs of wear on the display and housing are excluded from the warranty.

## Environment

### Our environmental statement

We at Gigaset Communications GmbH are aware of our social responsibility. That is why we actively take steps to create a better world. In all areas of our business – from product planning and production to sales and waste of disposal – following our environmental conscience in everything we do is of utmost importance to us.

Learn more about our earth-friendly products and processes online at [www.gigaset.com](http://www.gigaset.com).

### Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

# Appendix

---

## Care

Wipe the device with a **slightly moistened** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

## Contact with liquid

If the device comes into contact with liquid:

- 1 Disconnect the power supply.**
- 2 Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.**
- 4 Pat all parts dry,**
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).**
- 6 Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Technical data

### Batteries

Technology: 2 x AAA NiMH  
 Voltage: 1.2 V  
 Capacity: 800 mAh

### Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

|   |       |
|---|-------|
| Standby time (hours) *                                  | 310 * |
| Talktime (hours)  | 14    |
| Operating time for 1.5 hours of calls per day (hours) * | 125 * |
| Charging time in charging cradle (hours)                | 7.5   |

\* **without** display backlight in idle status

## Base power consumption


|                                   | Gigaset E630  | Gigaset E630A |
|-----------------------------------|---------------|---------------|
| In standby mode                   |               |               |
| – Handset in charging cradle      | approx. 0.3 W | approx. 0.3 W |
| – Handset outside charging cradle | approx. 0.5 W | approx. 0.5 W |
| During a call                     | approx. 0.6 W | approx. 0.6 W |

## General specifications

### DECT

|  |  |
|--|--|
| DECT standard                                  | DECT 6.0   |
| GAP standard                                   | Supported  |
| No. of channels                                | 30 duplex channels                                 |
| Radio frequency range                          | 1920MHz - 1930MHz                                  |
| Duplex method                                  | Time division multiplexing, 10 ms frame length     |
| Repetition frequency of the transmission pulse | 100 Hz   |
| Duration of the transmission pulse             | 370 $\mu$ s  |
| Channel grid                                   | 1728 kHz   |
| Bit rate                                       | 1152 kbit/s  |
| Modulation                                     | GFSK   |
| Language code                                  | 32 kbit/s  |
| Transmission power                             | 5 mW average power per channel, 120 mW pulse power |
| Range  | Up to 100 ft indoors, up to 700 ft outdoors        |
| Base power supply                              | 120 V ~/60 Hz                                      |
| Environmental conditions for operation         | +41°F to +113°F, 20% to 75% relative humidity      |
| Dialling mode                                  | DTMF (tone dialling)/PD (pulse dialling)           |

### Pin connections on the telephone jack

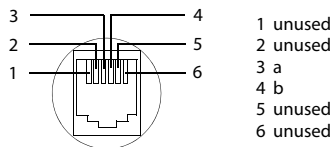

## Character charts

### Standard characters

Press the relevant key the number of times indicated.

|                       | 1x              | 2x | 3x | 4x | 5x | 6x              | 7x | 8x | 9x | 10x |
|-----------------------|-----------------|----|----|----|----|-----------------|----|----|----|-----|
| 1 <small>SP</small>   | 1               |    |    |    |    |                 |    |    |    |     |
| 2 <small>ABC</small>  | a               | b  | c  | 2  | ä  | á               | à  | â  | ã  | ç   |
| 3 <small>DEF</small>  | d               | e  | f  | 3  | ë  | é               | è  | ê  |    |     |
| 4 <small>GHI</small>  | g               | h  | i  | 4  | ï  | í               | ì  | î  |    |     |
| 5 <small>JKL</small>  | j               | k  | l  | 5  |    |                 |    |    |    |     |
| 6 <small>MNO</small>  | m               | n  | o  | 6  | ö  | ñ               | ó  | ò  | ô  | õ   |
| 7 <small>PNRS</small> | p               | q  | r  | s  | 7  | ß               |    |    |    |     |
| 8 <small>TUV</small>  | t               | u  | v  | 8  | ü  | ú               | ù  | û  |    |     |
| 9 <small>WXYZ</small> | w               | x  | y  | z  | 9  | ÿ               | ý  | æ  | ø  | å   |
| 0 <small>NUM</small>  | <sup>1)</sup> ␣ | .  | ,  | ?  | !  | <sup>2)</sup> ← | 0  |    |    |     |

- 1) Space
- 2) Line break

## Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.

This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## FCC / ACTA Information

---

**Warning:** Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA.

A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: [www.gigaset.com/docs](http://www.gigaset.com/docs).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at **1-866 247-8758** tollfree. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

### **Notice for Direct Inward Dialing ("DID")**

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

### **Notice to Hearing Aid Wearers:**

This phone system is compatible with inductively coupled hearing aids.

### **Power Outage:**

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

### **Notice:**

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

## Safety precautions

---

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used. Disconnect TNV circuit connector before removing cover.
12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a.) When the power cord is damaged or frayed.
  - b.) If liquid has been spilled into the product.
  - c.) If the product has been exposed to rain or water.
  - d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
  - e.) If the product has been dropped or physically has been damaged.
  - f.) If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrester.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.
15. Emergency/911 numbers may not be dialed if the keypad is locked.
16. Minimum No. 26 AWG telecommunication line cord must be used with this phone.



ETL LISTED  
CONFORMS TO  
ANSI/UL STD 60950-1  
CERTIFIED TO  
CAN/CSA C22.2 No.60950-1

### **BATTERY SAFETY PRECAUTIONS**

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.
2. DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
7. Periodically clean the charge contacts on both the charger and handset.



## Service (Customer Care)

---

### Customer Care Warranty for Cordless Products

To obtain Customer Care Warranty service, product operation information, or for problem resolution, call:

**Toll Free: 1-866 247-8758**

### End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to:

**1-866 247-8758** tollfree.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

#### 1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

#### 2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

#### 3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
- Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or

## Service (Customer Care)

repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.

- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
- Consumables (such as batteries and fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (*i.e.*, the United States of America or Canada respectively, but not both).

**USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.**

## 4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:  
**1-866 247-8758** tollfree

## 5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

## 6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

## 7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NONINFRINGEMENT WITH REGARD TO THE PRODUCT. Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

## 8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR

## Service (Customer Care)

ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

### 9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

### 10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at <http://www.gigaset.com> or please call **1-866 247-8758** tollfree.

Issued by

Gigaset Communications GmbH

Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2015

All rights reserved.

Subject to availability. Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.

Part Number: A31008-M2503-R301-1-3S19

© Copyright 2015.

# Index

---

- A**
- Activating
    - answer machine . . . . . 31
    - answer machine (remote operation) . . . 33
    - message LED . . . . . 25
    - two-way recording . . . . . 33
  - Address book, see Phonebook
  - Advisory tones . . . . . 27
  - Alarm clock . . . . . 45
  - Anniversary . . . . . 39
    - displaying missed . . . . . 45
  - Announcement . . . . . 31
  - Announcement (answer machine) . . . . 31, 32
  - Anonymous . . . . . 21
  - Anonymous calling . . . . . 22
  - Anonymous calls off . . . . . 27
  - Answer call key . . . . . 1
  - Answer machine . . . . . 31
    - activating/deactivating . . . . . 31
    - answer machine list . . . . . 17
    - deleting individual messages . . . . . 33
    - language for the voice prompt . . . . . 33
    - mode . . . . . 31
    - playing back messages . . . . . 32
    - recording a personal announcement/  
advisory message . . . . . 31
    - remote operation . . . . . 33
    - skip-back function . . . . . 34
    - time control . . . . . 31
    - two-way recording . . . . . 33
  - Appointment
    - displaying missed . . . . . 45
  - Area code
    - setting own area code . . . . . 24
  - Assigning number key . . . . . 28
  - Auto Answer . . . . . 25
    - simple . . . . . 20
- B**
- Baby monitor . . . . . 46
  - Backlight, display . . . . . 25
  - Base
    - changing . . . . . 36
    - changing name . . . . . 36
    - changing system PIN . . . . . 29
    - connecting to power/  
telephone network . . . . . 6
    - restoring to default setting . . . . . 29
    - setting up . . . . . 5
    - wall mounting . . . . . 7
  - Base station
    - changing the settings . . . . . 24
  - Battery
    - charging . . . . . 9
    - charging status . . . . . 49
    - display . . . . . 1
    - icon . . . . . 1
    - inserting . . . . . 7
  - Best base . . . . . 36
  - Birthday, see Anniversary
  - Broken display . . . . . 4
- C**
- Call
    - accepting . . . . . 20
    - accepting automatically . . . . . 25
    - calling anonymously . . . . . 22
    - diverting (ans. mach.) . . . . . 33
    - external . . . . . 19
    - forwarding (ans. mach.) . . . . . 33
    - internal . . . . . 37
    - participant listening in . . . . . 38
    - picking up from answer machine . . . . 33
    - rejecting unknown calls . . . . . 22
    - transferring (connecting) . . . . . 37
    - transferring internally (connecting) . . . 37
    - two-way recording . . . . . 33
  - Call forwarding (CF) . . . . . 42
  - Call lists . . . . . 41
    - deleting an entry . . . . . 41
  - Call protection . . . . . 27
  - Call redirection . . . . . 42
  - Call screening during
    - recording (ans. mach.) . . . . . 32
  - Call signal, visual . . . . . 25
  - Call waiting
    - external call . . . . . 22
    - external during an internal call . . . . . 38
    - internal during an external call . . . . . 38
  - Callback . . . . . 23
  - Calling
    - anonymous . . . . . 22
    - external . . . . . 19
    - internal . . . . . 37
  - Calling Line Identification . . . . . 21
    - withholding . . . . . 22
  - Cancel
    - callback . . . . . 23
  - Care . . . . . 56

- Care of the device ..... 56
  - CF, see Call forwarding
  - Changing
    - dialling mode..... 48
    - display language ..... 10
    - name of the handset ..... 37
    - phone settings..... 24
    - settings ..... 24
    - system PIN ..... 29
  - Character charts..... 58
  - Charge status indicator ..... 1
  - Charge status of the batteries..... 49
  - Charging cradle (handset)
    - connecting..... 7
    - setting up..... 5
  - Charging time of handset ..... 56
  - CLIP..... 21
  - CLIR..... 22
  - CNIP ..... 21
  - Colour scheme..... 24
  - Connecting the base station
    - to the PABX ..... 48
    - to the router..... 48
  - Connecting the headset ..... 9
  - Connecting the phone cable ..... 6
  - Connecting the power cable..... 6
  - Connections with the base ..... 36
  - Consultation call
    - ending ..... 23
    - external ..... 23
    - internal..... 37
  - Contact with liquid ..... 56
  - Contactability..... 42
  - Contents of the package..... 5
  - Control key..... 1, 15
  - Correcting incorrect entries ..... 18
  - Correction of incorrect entries ..... 18
  - Customer Care ..... 63
  - Customer care ..... 53
  - Customer service ..... 53
- D**
- Deactivating
    - answer machine ..... 31
    - baby monitor..... 47
    - internal listening in ..... 38
    - message LED ..... 25
    - two-way recording ..... 33
  - Default setting ..... 29
  - Deleting
    - announcement for answer machine ... 32
  - De-registering (handset) ..... 37
  - De-registering the handset ..... 37
  - Dialling
    - from the call list ..... 19
    - using speed dial ..... 28
    - using the redial list ..... 19
    - with directory ..... 20
  - Directory
    - saving entry ..... 39
  - Display
    - activating/deactivating new message . 25
    - backlight ..... 25
    - broken ..... 4
    - changing display language ..... 10
    - colour scheme ..... 24
    - network mailbox message ..... 17, 35
    - number (CLI/CLIP)..... 21
    - phonebook memory ..... 40
    - screensaver ..... 24
    - setting ..... 24
    - setting the backlight ..... 25
  - Display icons ..... 49
  - Display keys..... 1, 16
    - assigning ..... 28
    - icons ..... 50
  - Displays
    - missed appointments/anniversaries ... 45
  - Disposal..... 55
  - Diverting (ans. mach.)..... 33
  - Diverting a call
    - to answer machine..... 33
  - DTMF (tone dialling)..... 48
- E**
- Earpiece profile ..... 26
  - Earpiece volume ..... 21
  - Echo..... 48
  - ECO DECT ..... 30
  - Emergency numbers
    - not possible..... 4
  - End call key ..... 1
  - End call/End key ..... 19
  - Ending a conference call..... 38
  - Entering special characters..... 18
  - Entering special letters ..... 18
  - Entering text ..... 18
  - Entering umlauts..... 18
  - Environment ..... 55
  - Exclusion of liability ..... 55
  - External ..... 21

|  |        |
|--|--------|
| External call                                |        |
| call waiting . . . . .                       | 22     |
| transferring internally (connecting) . . . . | 37     |
| External calls                               |        |
| time control for ringtone . . . . .          | 27     |
| <b>F</b>                                     |        |
| Factory settings . . . . .                   | 29     |
| Field strength . . . . .                     | 49     |
| Flash key . . . . .                          | 1, 48  |
| Flash time . . . . .                         | 48     |
| <b>G</b>                                     |        |
| Getting started . . . . .                    | 5      |
| <b>H</b>                                     |        |
| Handset                                      |        |
| advisory tones . . . . .                     | 27     |
| changing name . . . . .                      | 37     |
| changing the settings . . . . .              | 24     |
| changing to a different base . . . . .       | 36     |
| changing to best reception . . . . .         | 36     |
| colour scheme . . . . .                      | 24     |
| connecting the charging cradle . . . . .     | 7      |
| display backlight . . . . .                  | 25     |
| display language . . . . .                   | 10, 24 |
| earpiece volume . . . . .                    | 21     |
| idle status . . . . .                        | 17     |
| list . . . . .                               | 15     |
| muting . . . . .                             | 22     |
| paging . . . . .                             | 37     |
| registering on another base . . . . .        | 36     |
| restoring to default setting . . . . .       | 29     |
| screensaver . . . . .                        | 24     |
| searching for . . . . .                      | 37     |
| setting . . . . .                            | 24     |
| setting up . . . . .                         | 7      |
| speaker volume . . . . .                     | 21     |
| switching on/off . . . . .                   | 15     |
| transferring a call . . . . .                | 37     |
| use as a baby monitor . . . . .              | 46     |
| using multiple . . . . .                     | 36     |
| Handsfree mode . . . . .                     | 21     |
| Handsfree volume . . . . .                   | 21     |
| Hash key . . . . .                           | 1      |
| Headset socket . . . . .                     | 9      |
| Hearing aids . . . . .                       | 4      |
| Help . . . . .                               | 53     |
| Hold music . . . . .                         | 27     |

|  |       |
|--|-------|
| <b>I</b>                                   |       |
| Icon                                       |       |
| alarm clock . . . . .                      | 45    |
| Icons                                      |       |
| displaying new messages . . . . .          | 17    |
| on display keys . . . . .                  | 50    |
| status bar . . . . .                       | 49    |
| Idle status, returning to . . . . .        | 17    |
| Internal                                   |       |
| listening in . . . . .                     | 38    |
| making calls . . . . .                     | 37    |
| Internal call . . . . .                    | 37    |
| call waiting . . . . .                     | 38    |
| Internal consultation call . . . . .       | 37    |
| <b>K</b>                                   |       |
| Key  |       |
| assigning to a function or number . . . .  | 28    |
| Profile key . . . . .                      | 1     |
| Key 1 (fast access) . . . . .              | 1     |
| Keys                                       |       |
| Answer call key . . . . .                  | 1     |
| control key . . . . .                      | 1, 15 |
| display keys . . . . .                     | 1, 16 |
| End call key . . . . .                     | 1     |
| End call/End key . . . . .                 | 19    |
| fast access . . . . .                      | 1     |
| Flash key . . . . .                        | 1     |
| Hash key . . . . .                         | 1     |
| Message key . . . . .                      | 1     |
| On/off key . . . . .                       | 1     |
| profiles . . . . .                         | 43    |
| side key . . . . .                         | 16    |
| Star key . . . . .                         | 1     |
| <b>L</b>                                   |       |
| Language                                   |       |
| display . . . . .                          | 10    |
| LED light . . . . .                        | 1, 43 |
| Liquid . . . . .                           | 56    |
| List                                       |       |
| accepted calls . . . . .                   | 41    |
| answer machine . . . . .                   | 17    |
| call lists . . . . .                       | 41    |
| handsets . . . . .                         | 15    |
| missed calls . . . . .                     | 41    |
| outgoing calls . . . . .                   | 41    |
| List entry . . . . .                       | 41    |
| Listening in to an external call . . . . . | 38    |
| Locking/unlocking the keypad . . . . .     | 15    |
| Lower/upper case . . . . .                 | 18    |

- M**
- Making calls
    - accepting a call . . . . . 20
    - external . . . . . 19
    - internal . . . . . 37
  - Managing the calendar . . . . . 44
  - Marked characters. . . . . 18
  - Medical equipment . . . . . 4
  - Melody
    - ringtone for internal/external calls. . . . . 26
  - Memory in the phonebook. . . . . 40
  - Menu
    - opening . . . . . 15
    - tree . . . . . 51
  - Message key. . . . . 1
  - Message length (ans. mach.). . . . . 32
  - Message lists . . . . . 17
    - opening . . . . . 17
  - Microphone . . . . . 1
  - Missed anniversaries/appointments . . . . . 45
  - Missed call . . . . . 41
  - Mounting the base on the wall. . . . . 7
  - Muting the handset. . . . . 22
- N**
- Network mailbox . . . . . 35
  - Network services
    - during an external call . . . . . 23
    - provider-specific . . . . . 22
    - setting . . . . . 22
  - Number
    - copying to the phonebook. . . . . 41
    - displaying caller's number (CLIP) . . . . . 21
    - entering with the phonebook . . . . . 41
  - Numbers
    - entering . . . . . 18
- O**
- On/off key . . . . . 1
  - One touch call . . . . . 20
  - Operating time of handset . . . . . 56
  - Order in the phonebook . . . . . 39
- P**
- PABX
    - connecting base . . . . . 48
    - pauses . . . . . 48
    - setting dialling mode . . . . . 48
    - setting flash time. . . . . 48
    - switching to tone dialling. . . . . 48
  - Paging . . . . . 37
  - Pause
    - after Flash key . . . . . 48
    - after line seizure . . . . . 48
  - PD (pulse dialling) . . . . . 48
  - Phone
    - restoring to default setting . . . . . 29
    - setting . . . . . 24
  - Phone number display, notes. . . . . 21
  - Phonebook . . . . . 39
    - copying number from text. . . . . 41
    - opening . . . . . 15
    - order of entries . . . . . 39
    - sending entry/list to handset. . . . . 40
    - sending to handset. . . . . 40
    - using to enter numbers . . . . . 41
  - Pin connections. . . . . 57
  - Playing back
    - announcement (answer machine). . . . . 32
    - message (answer machine) . . . . . 32
  - Playing back message (ans. mach.) . . . . . 32
  - Power adapter. . . . . 4
  - Power consumption . . . . . 57
  - Profile key . . . . . 1, 43
  - Profiles . . . . . 43
  - Protection against unwanted calls. . . . . 27
  - Protection from anonymous callers. . . . . 27
  - Pulse dialling . . . . . 48
- Q**
- Questions and answers. . . . . 53
- R**
- Range. . . . . 5
    - reducing . . . . . 30
  - Recording
    - announcement (answer machine). . . . . 31
    - two-way recording . . . . . 33
  - Recording quality (ans. mach.) . . . . . 32
  - Redial list . . . . . 19
  - Redirect, see Call forwarding
  - Reducing radiation . . . . . 30
  - Reducing transmission power . . . . . 30
  - Registering (handset) . . . . . 36
  - Registering other Gigaset handsets. . . . . 36
  - Registering the handset . . . . . 36
  - Remote operation . . . . . 33
  - Restoring to default setting . . . . . 29
  - Restoring to factory settings . . . . . 29
  - Ring delay . . . . . 32



- Ringtone
  - changing ..... 26
  - melody for internal/external calls. .... 26
  - silencing for anonymous calls. .... 27
  - time control for external calls. .... 27
- Ringtones ..... 26
- Router
  - connecting base station ..... 48
- S**
- Safety precautions ..... 4
- Saving a number in the directory ..... 39
- Screensaver ..... 24
- Searching
  - handset ..... 37
  - in directory. .... 40
- Selecting an entry from the phonebook .. 40
- Sending
  - phonebook entry to handset ..... 40
- Service (Customer Care) ..... 63
- Setting an appointment ..... 44
- Setting options
  - answer machine ..... 31
  - phone. .... 24
- Setting the date ..... 11, 52
- Setting the display language ..... 24
- Setting the time. .... 11, 52
- Setting up
  - handset ..... 7
- Setting up the answer machine ..... 31
- Side key ..... 16
- Signal tone, see Advisory tones
- Silent alert ..... 26
- Simple Auto Answer ..... 20
- Skip-back function (ans. mach.) ..... 34
- Snooze mode (alarm) ..... 46
- Sound profiles ..... 43
- Sound, see Ringtone
- Speaker. .... 21
- Speed dial ..... 28
- Star key. .... 1
- Status bar ..... 1
  - icons. .... 49
- Switching microphone (handset) on/off .. 22
- System PIN
  - changing ..... 29
  - resetting ..... 29
- T**
- Technical data ..... 56
- Telephone
  - operating. .... 15
- Telephone care ..... 56
- Telephone jack, pin connections ..... 57
- Three-way conference call
  - ending ..... 38
- Time control
  - ringtone for external calls ..... 27
- Time control (ans. mach.) ..... 31
- Tone dialling (DTMF). .... 48
- Torch function. .... 43
- Transferring an external call internally. ... 37
- Troubleshooting
  - general ..... 53
- Two-way recording ..... 33
- Two-way recording (ans. mach.). .... 33
- U**
- Unknown ..... 21
- Upper/lower case ..... 18
- V**
- Viewing network mailbox message. . . 17, 35
- VIP ringtone. .... 39
- Visual call signal ..... 1, 25
- Volume
  - handset handsfree/earpiece volume. . . 21
- W**
- Warning tone, see Advisory tones
- X**
- XES mode ..... 48

Issued by  
Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2015  
Subject to availability.  
All rights reserved. Rights of modification reserved.  
[www.gigaset.com](http://www.gigaset.com)